
JX60, JX70, JX80, JX90, JX95 REPAIR MANUAL COMPLETE CONTENTS

SECTION 00 - GENERAL	2
SECTION 10 - ENGINE	2
SECTION 18 - CLUTCH	7
SECTION 21 - FRONT TRANSMISSION	8
SECTION 23 - MFD TRANSFER BOX	10
SECTION 25 - MFD AXLE	11
SECTION 27 - REAR TRANSMISSION	12
SECTION 31 - POWER TAKE-OFF	13
SECTION 33 - BRAKES	14
SECTION 35 - HYDRAULIC SYSTEMS	15
SECTION 41 - STEERING	18
SECTION 44 - FRONT AXLE AND WHEELS (2WD)	19
SECTION 55 - ELECTRICAL SYSTEM	19
SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS	25

The following pages are the collation of the contents pages from each section and chapter of the JX Tractor Repair manual. Complete Repair part # 87649366.

The sections used through out all Case IH product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the JX Tractors.

SECTION 00 - GENERAL

BOOK 1 - 87649367

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 1 - Engine

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	10
	Tightening Torques	14
	Angular Torque Data	14
	Sectional Views	15
	Troubleshooting	19
	Overhaul	23
10 001 10	Engine	23
	Removal	23
10 001 54	Installation	34
	Disassembly	36
	Assembly	51

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 1 - Engine (Continued)

CONTENTS

Section	Description	Page
	Rotating Counterweight Dynamic Balancer	51
	Compression Test	61
	Checks, Dimensions, and Repairs	62
	Cylinder Block	62
	Crankshaft, Main Bearings, and Flywheel	64
	Connecting Rods	68
	Pistons	69
	Valves	72
	Tappets	72
	Camshaft	73
	Valve Timing Check	74
	Cylinder Head	75
10 102 70	Rotating Counterweight Dynamic Balancer	76
	Valve Guides	77
	Valve Seats in Cylinder Head	80
	Crankshaft Front Oil Seal	81
	Valve Clearance	87

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 2 - Cooling System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	5
	Cooling System	5
	Radiator	5
	Thermometer	5
	Thermostat	5
	Thermostatic Switch	5
	Overhaul	6
10 406 10	Water Pump	6
	Removal	6
	Disassembly	9
	Assembly	9
	Installation	10
10 402 30	Cooling System Thermostat	10
	Removal	10
	Installation	13
10 402 28	Radiator	14
	Removal	14
	Installation	17

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 3 - Lubrication System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	3
	Sectional Views	4
	Description and Operation	6
	Oil Filter	6
	Low Oil Indicator	6
10 001 10	Oil Pump	7

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 4 - Fuel System

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Tightening Torques	5
	Description and Operation	6
	Fuel Injection Pump (Bosch)	6
	Turbocharged Models	6
	All Models	8
	Overhaul	10
10 218 30	Fuel Injectors	10
	Removal	10
	Installation	11

SECTION 10 - ENGINE

BOOK 1 - 87649367

Chapter 4 - Fuel System (Continued)

CONTENTS

Section	Description	Page
	Fuel Injector Sleeves	12
	Checking Injector Protrusion	12
	Removal	12
	Installation	13
10 246 14	Injection Pump	14
	Removal	14
	Installation	18
	Checking the Fuel Injection Pump Timing with the Pump on the Tractor	19
	Lock-time the Fuel Injection Pump with the Pump Removed from the Tractor ...	23
	Fuel System Air Bleeding	28

SECTION 18 - CLUTCH

BOOK 1 - 87649367

Chapter 1 - Clutch

CONTENTS

Section	Description	Page
	Specifications	2
	Clutches	2
	Main Clutch (11 in./11 in.) (Models JX60, JX70, JX80 and JX90)	2
	Main Clutch (12 in./12 in.) (Model JX95)	3
	Tightening Torques	4
	Special Tools	4
	Sectional Views	5
	Valeo Clutches (11 in./11 in. and 12 in./12 in.)	5
	Longitudinal Section of Clutch - Luk Clutches (11 in./11 in. and 12 in./12 in.)	6
	Troubleshooting	7
	Overhaul	8
	11 in./11 in. and 12 in./12 in. Clutches	8
	Removal	8
	Installation	15
	Disassembly	16
	Assembly	19
	Checks, Measurements and Repairs	20
	Dimensions of the Valeo 11 in./11 in. Dual Clutch	20
	Dimensions of the Luk 11 in./11 in. Dual Clutch	20
	Dimensions of the Valeo 12 in./12 in. Dual Clutch	20
	Dimensions of the Luk 12 in./12 in. Dual Clutch	20
	Minimum Permissible Dimensions After Refacing 11 in./11 in. and 12 in./12 in. Dual Clutches	20
	Valeo 11 in. Flywheel	21
	Luk 11 in. Flywheel	21
	Valeo 12 in. Flywheel	21
	Luk 12 in. Flywheel	21
	Clutch Release Lever Coplanarity Adjustment	22
	Main Clutch Control Linkage Adjustment	23
	PTO Clutch Linkage Adjustment	23

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87649368

Chapter 1 - 12 x 12 Transmission with Synchronized Mechanical Shuttle

CONTENTS

Section	Description	Page
	Specifications	2
	Synchronizer Reverser	2
	Gearbox/Reduction Unit	2
	Torque Values	3
	Special Tools	4
	Sectional Views	4
	Description and Operation	6
	Synchronizer Reverser Troubleshooting	6
	Overhaul	7
	Clutch-Reverser Casing	7
	Disassembly	7
	Assembly	11

SECTION 21 - FRONT TRANSMISSION

BOOK 2 - 87649368

Chapter 2 - 20 x 12 Transmission with Synchronized Mechanical Shuttle and Creeper

CONTENTS

Section	Description	Page
	Specifications	2
	Synchronizer Reverser-Creeper Unit	2
	Creeper Unit	2
	Gearbox	2
	Torque Values	3
	Special Tools	4
	Sectional Views	5
	Description and Operation	7
	Troubleshooting	7
	Overhaul	8
	Clutch Casing-Synchronizer Reverser and Creeper Unit	8
	Disassembly	8
	Assembly	13

SECTION 23 - MFD TRANSFER BOX

BOOK 2 - 87649368

Chapter 1 - MFD Transfer Box

CONTENTS

Section	Description	Page
	Specifications	2
	Drive Shaft	2
	Tightening Torques	3
	Special Tools	3
	Description and Operation	4
	Sectional Views	4
	Overhaul	5
	Transmission Shafts and Guard	5
	Disassembly	5
	Assembly	5
	Drive Gear Housing Assembly	6
	Removal	6
	Installation	7
	Transfer Box, Unit Removed	8
	Disassembly	8
	Assembly	9

SECTION 25 - MFD AXLE

BOOK 2 - 87649368

Chapter 1 - Front Mechanical Axle

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	5
	Special Tools	7
	Description of Operation	8
	Sectional Views	8
	Overhaul	11
	Complete Front Axle Assembly	11
	Removal	11
	Installation	14
	Disassembly (JX60 and JX70)	15
	Assembly (JX60 and JX70)	15
	Disassembly (JX80, JX90 and JX95)	16
	Assembly (JX80, JX90 and JX95)	23
	Steering Knuckle Pins and Bearings	24
	Replacement	24
	Wheel Hub Seal Replacement	25
	Limited-Slip Differential	26
	Operation	26
	Removal	26
	Disassembly	27
	Assembly	27
	Adjustments	28
	Steering Knuckle	28
	Wheel Hub Bearing	30
	First Class Axle (Models JX60 and JX70)	30
	Second Class Axle (Models JX80, JX90 and JX95)	31
	Bevel Drive Adjustments	32
	Front Axle Differential	32
	Determining Pinion Shaft Pre-load Shim Thickness	33
	Determining Pinion Shaft Position Shim Thickness	34
	Pinion Shaft Installation	36
	Differential Installation and Backlash Adjustment	37
	Differential Bearing Pre-Load Adjustment	38
	Sealing Compound Application	39
	Toe-in Adjustment	40

SECTION 27 - REAR TRANSMISSION

BOOK 2 - 87649368

Chapter 1 - Rear Axle and Transmission

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	4
	Special Tools	6
	Description and Operation	8
	Sectional Views	9
	Troubleshooting	12
	Pinion and Differential	12
	Final Drives	12
	Overhaul	13
	Rear Axle Transmission - Gearbox Case	13
	Removal	13
	Installation	29
	Transmission-Gearbox Case	30
	Disassembly	30
	Assembly	35
	Adjustments	38
	Gearbox Driving Shaft Axial Clearance	38
	Differential Lock Engagement Sleeve Position Adjustment	39
	Pinion Shaft Positioning Adjustment Ring	40
	Pinion Shaft Pre-Load Adjustment	42
	Differential Bearings and Backlash of Ring and Pinion Teeth	43
	Differential Planetary and Side Gear Backlash	47
	Final Drive Removal	50
	Disassembly (Cover)	50
	Disassembly (Housing)	51
	Assembly	52

SECTION 31 - POWER TAKE-OFF

BOOK 2 - 87649368

Chapter 1 - Power Take-Off

CONTENTS

Section	Description	Page
	Specifications	2
	Special Tools	4
	Tightening Torques	5
	Sectional Views	6
	Description and Operation of Mechanical PTO	11
	Independent PTO	11
	Ground Speed PTO	12
	PTO Speed Selector Lever	12
	Single Lever PTO Operation	13
	Troubleshooting for Mechanical PTO	14
	Overhaul	15
	540/750 Mechanical PTO	15
	Removal	15
	Installation	18
	540/750 RPM PTO	19
	Disassembly	19
	Assembly	21
	540/1000 RPM PTO	22
	Disassembly	22
	Assembly	27

SECTION 33 - BRAKES

BOOK 3 - 87649369

Chapter 1 - Brakes

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	3
	Sectional Views	4
	Brakes	5
	Description and Operation	7
	Service Brakes	7
	Parking Brake	7
	Special Tools	7
	Troubleshooting	8
	Overhaul	9
	Right Hand or Left Hand Brake (Service Brakes)	9
	Removal	9
	Installation	12
	Hydraulic Brake Slave Cylinder	14
	Removal-Refitting	14
	Installation	14
	Service Brake Pedals	15
	Adjusting Height of Service Brake Pedals	15
	Hand Brake Control	17
	Adjustment Travel	17

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87649369

Chapter 1 - Hydraulic Systems

CONTENTS

Section	Description	Page
	Precautionary Statements	2
	Hydraulic System - Description and Operation	3
	Hydraulic System Diagrams	5
	Auxiliary (Rear) Control Valves	7
	Double-Acting Cylinder Lift Phase	7
	Double-Acting Cylinder Lower Phase	7
	Single-Acting Cylinder Lift Phase	7
	Single-Acting Cylinder Lower Phase	8
	Double-Acting Cylinder with Automatic Detent Release Lift Phase	8
	Double-Acting Cylinder with Automatic Detent Release Lower Phase	9
	Rear Remote Valve Control Levers	9
	Control Lever Positions	10
	Quick-Release Couplers	10
	Switching Between Single and Double Acting Cylinders	11
	Mechanically Controlled Hydraulic Lift	11
	Fast Raise/Lower Control Device	11
	Principles of Draft Control	12
	Principles of Position Control	12
	Principles of Float	13
	Principles of Draft and Position Control Combined	13
	Hydraulic Lift Oil Flow (Lift Phase)	14
	Hydraulic Lift Oil Flow (Neutral Phase)	15
	Hydraulic Lift Oil Flow (Lowering Phase)	16
	Three-Point Hitch (Category I and II)	17
	Adjustable Length Top Link	17
	Right-Hand Lift Rod	17
	Telescopic Lateral Stabilizer Struts	18
	Lower Links	18
	Left-Hand Lift Rod	19
	Conversion from Category I to Category II	19

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87649369

Chapter 2 - Hydraulic System Overhaul

CONTENTS

Section	Description	Page
	Specifications	3
	Tightening Torques	8
	Special Tools	9
	Sectional Views	10
	Troubleshooting	13
	Overhaul	15
	Mechanically Controlled Hydraulic Lift	15
	Removal	15
	Installation	21
	Disassembly	22
	Assembly	24
	Adjustments	27
	Adjusting the HPL on a Workbench	27
	HPL on the Workbench	27
	Installation	40
	Position Control Linkage	41
	Draft Control Linkage	41
	Fast Raise/Lower Control Device	42
	Lift Pressure Relief Valve	43
	Installation	43
	Calibration	43
	Lift Control Valve Block	45
	Disassembly	45
	Assembly	49
	High-Pressure (Lift) Pump	50
	Disassembly	50
	Inspection and Repair	50
	Assembly	51

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 87649369

Chapter 2 - Hydraulic System Overhaul (Continued)

CONTENTS

Section	Description	Page
	Convertible Single/Double Acting Auxiliary Control Valve	52
	Disassembly	52
	Assembly	52
	Convertible Single/Double-Acting Auxiliary Control Valve with Float Control and Detent Release	53
	Disassembly	53
	Assembly	59
	Spool Binding Test	60
	Spool Leakage Test	61
	Adjustment of the Auxiliary Control Valve Automatic Detent Release Pressure	62

SECTION 41 - STEERING

BOOK 3 - 87649369

Chapter 1 - Steering

CONTENTS

Section	Description	Page
	Specifications	2
	Hydraulic Pump C25	3
	Torque Settings	4
	Special Tools	4
	Components	5
	Troubleshooting	6
	Description and Operation	10
	Hydrostatic Power Steering (2WD)	10
	Hydrostatic Power Steering (MFD)	12
	Operation	14
	Steering Right	14
	Steering Left	14
	Manual Steering to Right	14
	Manual Steering to Left	14
	Hydrostatic Steering Control Valve	15
	Removal	15
	Installation	18
41 204 34	Disassembly	19
	Assembly	24
	Steering Control Valve Testing	33
	Checking the Hydrostatic Steering Pressure Relief Valve with Steering Control Valve Installed on Tractor	34
41 206 20	Hydrostatic Steering Pump	36
	Disassembly	36
	Assembly	36
	Steering Cylinder (2WD)	37
	Removal	37
	Installation	37
	Steering Cylinder (MFD)	38
	Removal	38

SECTION 44 - FRONT AXLE AND WHEELS (2WD)

BOOK 3 - 87649369

Chapter 1 - Axle and Wheels

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	5
	Special Tools	6
	Troubleshooting	6
	Overhaul	7
	Front Axle	7
	Removal	7
	Installation	9
	Axle Wheel Hub	10
	Removal	10
	Installation	13
	Stub Axle	17
	Removal	17
	Installation	19
	Adjustments	21
	Toe-In	21

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 1 - Instrument Cluster

CONTENTS

Section	Description	Page
	Instrument Cluster Description	2
	Analog Instrument Panel	2
	Warning and Indicator Lights	3
	Fuel Level Gauge	4
	Tachometer and Hourmeter	4
	Engine Coolant Temperature Gauge	4

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 2 - Components

CONTENTS

Section	Description	Page
	Electrical Components Description	2
	Instrument Console Controls	2
	Lights Control Lever	2
	Rear Hood Controls	2
	Starter Switch	2
	In-Cab Controls	3
	Fender Mounted Controls	3
	Heating and Air Conditioning Controls	4
	Radio (where applicable)	4
	Applicable Components, Sensors and Switches	5
	Description	5
	Transmitters and Switches	6

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 3 - Starting System

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Description and Operation	3
	Overhaul	5
	Starting System Test on Tractor	5
	Power Absorption in Starter Motor Circuit	5
	Resistance in Ignition System Circuit (Voltage Drop)	6

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 3 - Starting System (Continued)

CONTENTS

Section	Description	Page
	Battery Positive Cable Check	6
	Starter Motor Ground Lead Check	7
	Battery Ground Cable Check	7
55 201 50	Starter Motor	7
	Removal	7
	Installation	7
55 201 54	Disassembly	8
	Assembly	9
	Starter Motor Tests and Inspections	9
	Armature Shaft End-Play	9
	Starter Motor Test Without Load	10
	Armature	10
	Field Windings	11
	Bearing Bushings	11
	Driving Pinion	11

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 4 - Charging System

CONTENTS

Section	Description	Page
	Specifications	2
	Tightening Torques	2
	Description and Operation	3
	Troubleshooting	5
	Precautions	5
	Preliminary Checks	5
	Tests and Checks	6
	Alternator Wire Connections	7
	Charging Current and Regulated Voltage	8
	Charging Circuit Voltage Drop	9
	Alternator Maximum Output	10
	Alternator Component Tests	11
	Overhaul	12
	Alternator	12
	Removal	12
	Disassembly	13
	Alternator Component Testing	14
	Rotor	18
	Assembly	21
	Repair	21
	Installation	22

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 5 - Battery

CONTENTS

Section	Description	Page
	Specifications	2
	Troubleshooting	2
	Description and Operation	3
	Overhaul	4
	Battery	4
	Removal	4
	Installation	4
	Battery Maintenance	5
	Relative Density	5
	Precautions	5
	Dry-Charged Batteries	6
	Charging the Battery	6
	Normal Charging (Top Up)	6
	Charging Very Flat Batteries	6
	Testing	7

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87649370

Chapter 6 - Electrical Circuits

CONTENTS

Section	Description	Page
	Description and Operation	2
	Electrical Diagram Symbols	2
	Electrical Wire Color Coding	3
	Ground Locations	3
	Fuses and Relays Main Box	4
	Fuses and Relay Box (Inside Cab)	5
	Ground Locations	6
	General Diagram - Center (With Cab)	9
	General Diagram - Center without Cab (ROPS)	12
	Starter Circuit	14
	Connector Overview	16
	Direction Indicator and Hazard Warning Light Circuit	18
	Connector Overview	20
	Windscreen Washer/Wiper Circuit	24
	Connector Overview	26
	Brake Light Circuit	28
	Connector Overview	30
	Heating and Air Conditioning Circuit	33
	Connector Overview	35
	ROPS Work Light Circuit	36
	Connector Overview	38
	Work Lamp (with Cab) Circuit	40
	Connector Overview	42
	Parking/Headlights and Turn Signal Circuit	44
	Connector Overview	46
	Operator Presence Switch Circuit	50
	Analogue Instrument Circuit	52

SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS

BOOK 4 - 87649370

Chapter 1 - Cab

CONTENTS

Section	Description	Page
	Overhaul	2
	Control Levers, Seat, Electrical Controls	2
	Disassembly	2
	Assembly	9
	Rear Window, Handle and Lock	10
	Disassembly	10
	Assembly	10
	Lock and Exterior Handle	11
	Disassembly	11
	Assembly	11
	LH Door	12
	Disassembly	12
	Assembly	12
	Front Wiper Motor	13
	Disassembly	13
	Assembly	14
	Cab Windows	15
	Removal	15
	Installation	16

SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS

BOOK 4 - 87649370

Chapter 2 - Air Conditioning System

CONTENTS

Section	Description	Page
	Safety	3
	Specifications	4
	Special Tools	5
	Description of Operation	6
	Cab Heating and Ventilation Controls	8
	Ventilation	8
	Fan	8
	Air Filter	8
	Heating	9
	Temperature Control Knob	9
	Ignition Switch	9
	Switching on the Air Conditioning and Temperature Control	10
	Air Conditioning and Temperature Control Button	10
	Heating Control Knob	10
	3-Speed Fan Control Knob	10
	Use of the Air Conditioning System	11
	Switching On the Air Conditioning	11
	Adjustment	11
	Switching Off the Air Conditioning System	11
	Components of the Air Conditioning System	12
	Compressor	12
	Condenser	13
	Receiver/Dryer	14
	Thermostatic Expansion Valve	15
	Air Conditioner Temperature Cycling Control Switch	16
	Thermostatic Switch (ANTIFROST)	16
	Evaporator	17
	Low Pressure Cut-out Switch	18
	Combined High/Low Pressure Cut-out Switch	18

SECTION 90 - PLATFORM, CAB, BODYWORK AND DECALS

BOOK 4 - 87649370

Chapter 2 - Air Conditioning System (Continued)

CONTENTS

Section	Description	Page
	System Pressure Relief Valve	18
	Refrigerant Recovery-Recycling and Evacuation- Charging Stations	19
	Air Conditioning System	21
	Function Testing of Cab Air Conditioning System	26
	Summary of the Air Conditioning System Charging Operations	27
	Checking for Refrigerant Leaks Using an Electronic Leak Detector	29
	Maintenance of the Air Conditioning System	31
	Troubleshooting	32
	Overhaul	36
	Air Conditioning and Heating Pipes	36
	Removal	36
	Installation	39
	Receiver-Dryer	40
	Removal	40
	Installation	41
	Condenser	42
	Removal	42
	Installation	42
	Compressor	43
	Removal	43
	Installation	44
	Compressor Oil - Type and Quantity	44
	Adjustments	45
	Compressor Drive Belt	45
	Tension Adjustment	45
	Fitting the Compressor Drive Belt	45
	Checking Compressor Drive Belt Tension	45
	Periodic Checking of Drive Belt	45

SECTION 00 - GENERAL

Chapter 1 - General

CONTENTS

Section	Description	Page
	General Instructions	3
	Health and Safety	5
	Precautionary Statements	15
	Safety	16
	Ecology and the Environment	19
	Minimum Hardware Tightening Torques	20
	Federal Emissions Warranty	22
	California Emission Control Warranty Statement	23
	Consumables	25

⚠ WARNING ⚠

All maintenance and repair work described in this manual must be performed exclusively by CASE IH service technicians in strict accordance with the instructions given and using any specific tools necessary.

⚠ WARNING ⚠

Anyone who performs the operations described herein without strictly following the instructions is personally responsible for resulting injury or damage to property.

⚠ WARNING ⚠

The Manufacturer and all organizations belonging to the Manufacturer's distribution network, including but not restricted to national, regional or local distributors, will accept no responsibility for personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer, including those used for maintenance and/or repair of the product manufactured or marketed by the Manufacturer. In any case, the product manufactured or marketed by the Manufacturer is covered by no guarantee of any kind against personal injury or damage to property caused by abnormal function of parts and/or components not approved by the Manufacturer.

GENERAL INSTRUCTIONS

IMPORTANT NOTICE

All maintenance and repair operations described in this manual should be carried out exclusively by the authorized workshops. All instructions detailed should be carefully observed and special equipment indicated should be used if necessary.

Everyone who carries out service operations described without carefully observing these directives will be directly responsible for resulting consequences.

SHIMMING

At each adjustment, select adjusting shims, measure them individually using a micrometer and then sum up recorded values. Do not rely on measuring the whole shimming set, which may be incorrect, or on the rated value indicated for each shim.

ROTATING SHAFT SEALS

To correctly install rotating shaft seals, observe the following instructions:

- Let the seal soak into the same oil as it will seal for at least half an hour before mounting;
- Thoroughly clean the shaft and ensure that the shaft working surface is not damaged;
- Place the sealing lip towards the fluid. In case of a hydrodynamic lip, consider the shaft rotation direction and orient grooves in order that they deviate the fluid towards the inner side of the seal;
- Coat the sealing lip with a thin layer of lubricant (oil rather than grease) and fill the gap between the sealing lip and the dust lip of double lip seals with grease;
- Insert the seal into its seat and press it down using a flat punch. Do not tap the seal with a hammer or a drift;

- Take care to insert the seal perpendicular to its seat while you are pressing it. Once the seal is settled, ensure that it contacts the thrust element, if required;
- To prevent damaging the sealing lip against the shaft, place a suitable protection during installation.

O RINGS

Lubricate the O rings before inserting them into their seats. This will prevent the O rings from roll over and twisting during mounting, which will jeopardize sealing.

SEALERS

Apply silicone/gasket eliminator over the mating surfaces marked with an X. Before applying the sealer, prepare the surface as follows:

- remove possible scales using a metal brush;
- thoroughly degrease the surfaces using one of the following cleaning agents: trichlorethylene, diesel fuel or a water and soda solution.

BEARINGS

It is advisable to heat the bearings to 80° to 90°C (176° to 194°F) before mounting them on their shafts and cool them down before inserting them into their seats with external tapping.

SPRING PINS

When mounting split socket spring pins, ensure that the pin notch is oriented in the direction of the effort to stress the pin.

Spiral spring pins should not be oriented during installation.

GENERAL INSTRUCTIONS

PRECAUTIONARY NOTICE

Only authorized workshops should carry out maintenance and repair operations on the tractor, or tractor components. Carefully observe all instructions, safety precautions, and the use of equipment such as special tools, as detailed in this manual. Damage to the tractor, or injury to personnel is the direct responsibility of anyone who fails to observe these precautions.

EQUIPMENT NOTICE

The equipment proposed in this manual is:

- Designed and studied expressly for use on Case IH tractors
- Necessary for adequate and reliable repair of the tractor
- Strictly tested for the efficient and long lasting life cycle of the tractor

SPARE PARTS NOTICE

Genuine CASE IH spare parts guarantee the same quality, safety and life cycle as original components. These parts bear the logo.

GENERAL NOTICES

In this manual, the description 'FRONT', 'REAR', 'RIGHT-HAND' and 'LEFT-HAND' refer to the view seen by the operator while in the operator's seat, looking in the direction in which the tractor normally moves.

Wear limits detailed in this manual, although advised, are not binding.

HEALTH AND SAFETY**CONTENTS**

Description	Page
HEALTH AND SAFETY PRECAUTIONS	5
ACIDS AND ALKALIS	6
ADHESIVES AND SEALERS - see Fire	6
ANTIFREEZE - see Fire, Solvents e.g. Isopropanol, Ethylene Glycol, Methanol.	6
ARC WELDING - see Welding.	7
BATTERY ACIDS - see Acids and Alkalis.	7
BRAKE AND CLUTCH FLUIDS (Polyalkylene Glycols) - see Fire.	7
BRAZING - see Welding.	7
CHEMICAL MATERIALS - GENERAL - see Legal Aspects.	7
DO'S	7
DO NOTS	8
CORROSION PROTECTION MATERIALS - see Solvents, Fire.	8
DUSTS	8
ELECTRIC SHOCK	8
EXHAUST FUMES	9
FIBER INSULATION - see Dusts.	9
FIRE - see Welding, Foams, Legal Aspects.	9
FIRST AID	9
FOAMS - Polyurethane - see Fire.	9
FUELS - see Fire, Legal Aspects, Chemicals - General, Solvents.	10
GAS CYLINDERS - see Fire.	10
GENERAL WORKSHOP TOOLS AND EQUIPMENT	11
LEGAL ASPECTS	11
LUBRICANTS AND GREASES	11
PAINTS - see Solvents and Chemical Materials - General.	12
SOLDER - see Welding.	12
SOLVENTS - see Chemical Materials - General Fuels (Kerosene), Fire.	13
SUSPENDED LOADS	13
WELDING - see Fire, Electric Shock, Gas Cylinders.	13

HEALTH AND SAFETY PRECAUTIONS

Many of the procedures associated with vehicle maintenance and repair involve physical hazards or other risks to health. This section lists, alphabetically, some of these hazardous operations and the materials and equipment associated with them. The

precautions necessary to avoid these hazards are identified.

The list is not exhaustive and all operations and procedures and the handling of materials, should be carried out with health and safety in mind.

ACIDS AND ALKALIS - see Battery acids, e.g. caustic soda, sulfuric acid.

Used in batteries and cleaning materials.

Irritant to the skin, eyes, nose and throat. Causes burns.

Avoid splashes to the skin, eyes and clothing. Wear suitable protective gloves and goggles. Can destroy ordinary protective clothing. Do not breathe mists.

Ensure access to water and soap is readily available for splashing accidents.

ADHESIVES AND SEALERS - see Fire

Highly Flammable and combustible.

Generally should be stored in "No Smoking" areas; cleanliness and tidiness in use should be observed, e.g. disposable paper covering benches; should be dispensed from applicators where possible; containers, including secondary containers, should be labelled.

Solvent based Adhesives/Sealers - See Solvents.

Follow manufacturers instructions.

Water based Adhesives/Sealers

Those based on polymer emulsions and rubber lattices may contain small amounts of volatile toxic and harmful chemicals. Skin and eye contact should be avoided and adequate ventilation provided during use.

Follow manufacturers instructions.

Resin based Adhesives/Sealers - e.g. epoxide and formaldehyde resin based.

Mixing should only be carried out in well ventilated areas as harmful or toxic volatile chemicals may be released.

Skin contact with uncured resins and hardeners can result in irritation; dermatitis and absorption of toxic or harmful chemicals through the skin. Splashes can damage the eyes.

Provide adequate ventilation and avoid skin and eye contact. Follow manufacturers instructions.

Anaerobic, Cyanoacrylate and other Acrylic Adhesives

Many are irritant, sensitizing or harmful to the skin. Some are eye irritants.

Skin and eye contact should be avoided and the manufacturers instructions followed.

Cyanoacrylate adhesives (super-glues) must not contact the skin or eyes. If skin or eye tissue is bonded cover with a clean moist pad and get medical attention. do not attempt to pull tissue apart. Use in well ventilated areas as vapors can cause irritation of the nose and eyes.

For two-pack systems see Resin based adhesives/sealers.

Isocyanate (Polyurethane) Adhesives/Sealers - see Resin based Adhesives.

Individuals suffering from asthma or respiratory allergies should not work with or near these materials as sensitivity reactions can occur.

Any spraying should preferably be carried out in exhaust ventilated booths removing vapors and spray droplets from the breathing zone. Individuals working with spray applications should wear supplied air respirators.

ANTIFREEZE - see Fire, Solvents e.g. Isopropanol, Ethylene Glycol, Methanol.

Highly Flammable and Combustible.

Used in vehicle coolant systems, brake air pressure systems, screenwash solutions.

Vapors given off from coolant antifreeze (glycol) arise only when heated.

Antifreeze may be absorbed through the skin in toxic or harmful quantities. Antifreeze if swallowed is fatal and medical attention must be found immediately.

ARC WELDING - see Welding.

BATTERY ACIDS - see Acids and Alkalis.

Gases released during charging are explosive. Never use naked flames or allow sparks near charging or recently charged batteries.

BRAKE AND CLUTCH FLUIDS (Polyalkylene Glycols) - see Fire.

Combustible.

Splashes to the skin and eyes are slightly irritating. Avoid skin and eye contact as far as possible. Inhalation of vapor hazards do not arise at ambient temperatures because of the very low vapor pressure.

BRAZING - see Welding.

CHEMICAL MATERIALS - GENERAL - see Legal Aspects.

Chemical materials such as solvents, sealers, adhesives, paints, resin foams, battery acids, antifreeze, brake fluids, oils and grease should always be used with caution and stored and handled with care. They may be toxic, harmful, corrosive, irritant or highly flammable and give rise to hazardous fumes and dusts.

The effects of excessive exposure to chemicals may be immediate or delayed; briefly experienced or permanent; cumulative; superficial; life threatening; or may reduce life-expectancy.

DO'S

Do remove chemical materials from the skin and clothing as soon as practicable after soiling. Change heavily soiled clothing and have it cleaned.

Do carefully read and observe hazard and precaution warnings given on material containers (labels) and in any accompanying leaflets, poster or other instructions. Material health and safety data sheets can be obtained from Manufacturers.

Do organize work practices and protective clothing to avoid soiling of the skin and eyes; breathing vapors/aerosols/dusts/fumes; inadequate container labelling; fire and explosion hazards.

Do wash before job breaks; before eating, smoking, drinking or using toilet facilities when handling chemical materials.

Do keep work areas clean, uncluttered and free of spills.

Do store according to national and local regulations.

Do keep chemical materials out of reach of children.

DO NOTS

Do Not mix chemical materials except under the manufacturers instructions; some chemicals can form other toxic or harmful chemicals; give off toxic or harmful fumes; be explosive when mixed together.

Do Not spray chemical materials, particularly those based on solvents, in confined spaces e.g. when people are inside a vehicle.

Do Not apply heat or flame to chemical materials except under the manufacturers' instructions. Some are highly flammable and some may release toxic or harmful fumes.

Do Not leave containers open. Fumes given off can build up to toxic, harmful or explosive concentrations. Some fumes are heavier than air and will accumulate in confined areas, pits etc.

Do Not transfer chemical materials to unlabelled containers.

Do Not clean hands or clothing with chemical materials. Chemicals, particularly solvents and fuels will dry the skin and may cause irritation with dermatitis. Some can be absorbed through the skin in toxic or harmful quantities.

Do Not use emptied containers for other materials, except when they have been cleaned under supervised conditions.

Do Not sniff or smell chemical materials. Brief exposure to high concentrations of fumes can be toxic or harmful.

Clutch Fluids - see Brake and Clutch Fluids.

Clutch Linings and Pads - see Brake and Clutch Linings and Pads.

CORROSION PROTECTION MATERIALS - see Solvents, Fire.

Highly flammable, flammable.

These materials are varied and the manufacturers instructions should be followed. They may contain solvents, resins, petroleum products etc. Skin and eye contact should be avoided. They should only be sprayed in conditions of adequate ventilation and not in confined spaces.

Cutting - see Welding.

De-Waxing - see Solvents and Fuels (Kerosene).

DUSTS

Powder, dusts or clouds may be irritant, harmful or toxic. Avoid breathing dusts from powdery chemical materials or those arising from dry abrasion operations. Wear respiratory protection if ventilation is inadequate.

ELECTRIC SHOCK

Electric shocks can result from the use of faulty electrical equipment or from the misuse of equipment even in good condition.

Ensure that electrical equipment is maintained in good condition and frequently tested.

Ensure that flexes, cables, plugs and sockets are not frayed, kinked, cut, cracked or otherwise damaged.

Ensure that electric equipment is protected by the correct rated fuse.

Never misuse electrical equipment and never use equipment which is in any way faulty. The results could be fatal.

Use reduced voltage equipment (110 volt) for inspection and working lights where possible.

Ensure that the cables of mobile electrical equipment cannot get trapped and damaged, such as in a vehicle hoist.

Use air operated mobile equipment where possible in preference to electrical equipment.

In cases of electrocution:-

- switch off electricity before approaching victim
- if this is not possible, push or drag victim from source of electricity using dry non-conductive material
- commence resuscitation if trained to do so
- **SUMMON MEDICAL ASSISTANCE**

EXHAUST FUMES

These contain asphyxiating, harmful and toxic chemicals and particles such as carbon oxides, nitrogen oxides, aldehydes, lead and aromatic hydrocarbons. Engines should only be run under conditions of adequate extraction or general ventilation and not in confined spaces.

Gasoline (Petrol) Engine

There may not be adequate warning properties of odour or irritation before immediate and delayed toxic or harmful effects arise.

Diesel Engine

Soot, discomfort and irritation usually give adequate warning of hazardous fume concentrations.

FIBER INSULATION - see Dusts.

Used in noise and sound insulation.

The fibrous nature of surfaces and cut edges can cause skin irritation. This is usually a physical and not a chemical effect.

Precautions should be taken to avoid excessive skin contact through careful organisation of work practices and the use of gloves.

FIRE - see Welding, Foams, Legal Aspects.

Many of the materials found on or associated with the repair of vehicles are highly flammable. Some give off toxic or harmful fumes if burnt.

Observe strict fire safety when storing and handling flammable materials or solvents, particularly near electrical equipment or welding processes.

Ensure before using electrical or welding equipment but that there is no fire hazard present.

Have a suitable fire extinguisher available when using welding or heating equipment.

FIRST AID

Apart from meeting any legal requirements it is desirable for someone in the workshop to be trained in first aid procedures.

Splashes in the eye should be flushed with clean water for at least ten minutes.

Soiled skin should be washed with soap and water.

Inhalation affected individuals should be removed to fresh air immediately.

If swallowed or if effects persist consult a doctor with information (label) on material used.

Do not induce vomiting (unless indicated by manufacturer).

FOAMS - Polyurethane - see Fire.

Used in sound and noise insulation. Cured foams used in seat and trim cushioning.

Follow manufacturers instructions.

Unreacted components are irritating and may be harmful to the skin and eyes. Wear gloves and goggles.

Individuals with chronic respiratory diseases, asthma, bronchial medical problems or histories of allergic diseases should not work with or near uncured materials.

The components, vapors, spray mists can cause direct irritation, sensitivity reactions and may be toxic or harmful.

vapors and spray mists must not be breathed. These materials must be applied with adequate ventilation and respiratory protection. Do not remove respirator immediately after spraying, wait until vapor/ mists have cleared.

Burning of the uncured components and the cured foams can generate toxic and harmful fumes.

Smoking, open flames or the use of electrical equipment during foaming operations and until vapors/mists have cleared should not be allowed. Any heat cutting of cured foams or partially cured foams should be conducted with extraction ventilation.

FUELS - see Fire, Legal Aspects, Chemicals - General, Solvents.

Used as fuels and cleaning agents.

Gasoline (Petrol).

Highly flammable.

Swallowing can result in mouth and throat irritation and absorption from the stomach can result in drowsiness and unconsciousness. Small amounts can be fatal to children. Aspiration of liquid into the lungs, e.g. through vomiting, is a very serious hazard.

Gasoline dries the skin and can cause irritation and dermatitis on prolonged or repeated contact. Liquid in the eye causes severe smarting.

Motor gasoline may contain appreciable quantities of benzene, which is toxic upon inhalation and the concentrations of gasoline vapors must be kept very low. High concentrations will cause eye, nose and throat irritation, nausea, headache, depression and symptoms of drunkenness. Very high concentrations will result in rapid loss of consciousness.

Ensure there is adequate ventilation when handling and using gasoline. Great care must be taken to avoid the serious consequences of inhalation in the event of vapor build up arising from spillages in confined spaces.

Special precautions apply to cleaning and maintenance operations on gasoline storage tanks.

Gasoline should not be used as a cleaning agent. It must not be siphoned by mouth.

Kerosene (Paraffin)

Used also as heating fuel, solvent and cleaning agent.

Flammable.

Irritation of the mouth and throat may result from swallowing. The main hazard from swallowing arises

if liquid aspiration into the lungs occurs. Liquid contact dries the skin and can cause irritation or dermatitis. Splashes in the eye may be slightly irritating.

In normal circumstances the low volatility does not give rise to harmful vapors. Exposure to mists and vapors from kerosene at elevated temperatures should be avoided (mists may arise in de-waxing). Avoid skin and eye contact and ensure there is adequate ventilation.

Gas-Oil (Diesel Fuel) - see Fuels (Kerosene).

Combustible.

Gross or prolonged skin contact with high boiling gas oils may also cause serious skin disorders including skin cancer.

GAS CYLINDERS - see Fire.

Gases such as oxygen, acetylene, carbon dioxide, argon and propane are normally stored in cylinders at pressures of up to 138 bar (2000 psi) and great care should be taken in handling these cylinders to avoid mechanical damage to them or to the valve gear attached. The contents of each cylinder should be clearly identified by appropriate markings.

Cylinders should be stored in well ventilated enclosures, and protected from ice and snow, or direct sunlight. Fuel gases (e.g. acetylene and propane) should not be stored in close proximity to oxygen cylinders.

Care should be exercised to prevent leaks from gas cylinders and lines, and to avoid sources of ignition.

Only trained personnel should undertake work involving gas cylinders.

Gases - see Gas Cylinders.

Gas Shielded Welding - see Welding.

Gas Welding - see Welding.

GENERAL WORKSHOP TOOLS AND EQUIPMENT

It is essential that all tools and equipment are maintained in good condition and the correct safety equipment used where required.

Never use tools or equipment for any purpose other than that for which they were designed.

Never overload equipment such as hoists, jacks, axle and chassis stands or lifting slings. Damage caused by overloading is not always immediately apparent and may result in a fatal failure the next time that the equipment is used.

Do not use damaged or defective tools or equipment, particularly high speed equipment such as grinding wheels. A damaged grinding wheel can disintegrate without warning and cause serious injury.

Wear suitable eye protection when using grinding, chiselling or sand blasting equipment.

Wear a suitable breathing mask when using sand blasting equipment, working with asbestos based materials or using spraying equipment.

Glues - see Adhesives and Sealers.

High Pressure Air, Lubrication and Oil Test Equipment - see Lubricants and Greases.

Always keep high pressure equipment in good condition and regularly maintained, particularly at joints and unions.

Never direct a high pressure nozzle at the skin as the fluid may penetrate to the underlying tissue etc. and cause serious injury.

LEGAL ASPECTS

Many laws and regulations make requirements relating to health and safety in the use of materials and equipment in workshops.

Workshops should be familiar, in detail, with these and associated laws and regulations. Consult local factory inspectorate if in any doubt.

LUBRICANTS AND GREASES

Avoid all prolonged and repeated contact with mineral oils, especially used oils. Used oils contaminated during service (e.g. routine service change sump oils) are more irritating and more likely to cause serious effects including skin cancer in the event of gross and prolonged skin contact.

Wash skin thoroughly after work involving oil. Proprietary hand cleaners may be of value provided they can be removed from the skin with water. Do not use petrol, paraffin or other solvents to remove oil from the skin.

Lubricants and greases may be slightly irritating to the eyes.

Repeated or prolonged skin contact should be avoided by wearing protective clothing if necessary. Particular care should be taken with used oils and greases containing lead. Do not allow work clothing to be contaminated with oil. Dry clean or launder such clothing at regular intervals. Discard oil soaked shoes.

Do not employ used engine oils as lubricants or for any application where appreciable skin contact is likely to occur. Used oils may only be disposed of in accordance with local regulations.

Noise Insulation Materials - see Foams, Fiber Insulation.

PAINTS - see Solvents and Chemical Materials - General.

Highly Flammable.

One Pack. Can contain harmful or toxic pigments, driers and other components as well as solvents. Spraying should only be carried out with adequate ventilation.

Two Pack. Can also contain harmful and toxic unreacted resins and resin hardening agents. The manufacturers instructions should be followed and the section of page 00-6 on resin based adhesives, isocyanate containing Adhesives and Foams should be consulted.

Spraying should preferably be carried out in ventilated booths removing vapor and spray mists from the breathing zone. Individuals working in booths should wear respiratory protection. Those doing small scale repair work in the open shop should wear supplied air respirators.

Paint Thinners - see Solvents.

Petrol - see Fuels (Gasoline).

Pressurized Equipment - see High Pressure Air, Lubrication and Oil Test Equipment.

Resistance Welding - see Welding.

Sealers - see Adhesives and Sealers.

SOLDER - see Welding.

Solders are mixtures of metals such that the melting point of the mixture is below that of the constituent metals (normally lead and tin). Solder application does not normally give rise to toxic lead fumes, provided a gas/air flame is used. Oxy-acetylene flames should not be used, as they are much hotter and will cause lead fumes to be evolved.

Some fumes may be produced by the application of any flame to surfaces coated with grease etc. and inhalation of these should be avoided.

Removal of excess solder should be undertaken with care, to ensure that fine lead dust is not produced, which can give toxic effects if inhaled. Respiratory protection may be necessary.

Solder spillage and filing should be collected and removed promptly to prevent general air contamination by lead.

High standards of personal hygiene are necessary in order to avoid indigestion of lead or inhalation of solder dust from clothing.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com