

Tractors 6110M, 6120M, 6130M and 6145M

(Serial No. 4-Cylinder Engines 4045U -)

(Serial No. with Cab (MY16-17) -)

(Serial No. with Open Operator's Station (MY16-) -)



OPERATOR'S MANUAL

Tractors 6110M, 6120M, 6130M and 6145M

OMAL219620 ISSUE D0 (ENGLISCH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

Additional Proposition 65 Warnings can be found in this manual.

John Deere GmbH & Co. KG
John Deere Werk Mannheim

North American Edition
PRINTED IN U.S.A.



Introduction

Foreword

READ THIS OPERATOR'S MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or machine damage. This manual and the safety signs on your machine may also be available in other languages (see your John Deere dealer¹ to order).

THIS OPERATOR'S MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. units of measure. Use only correct replacement parts and mounting hardware. Metric and inch mounting hardware may require a specific metric or inch wrench.

The designations RIGHT and LEFT are relevant to the direction of forward travel of the tractor.

ENTER THE PRODUCT IDENTIFICATION NUMBERS (PIN) in the Specifications or Identification Numbers sections, at the corresponding point. Please note down all numbers exactly. In the event of a theft, they can be important for the police investigations. Your John Deere dealer also needs these numbers when you order spare parts. It is advisable to note down these numbers at a secure place away from the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed an inspection.

THIS TRACTOR WAS BUILT ONLY for normal agricultural applications or similar tasks ("INTENDED USE"). Use in any other way is considered as contrary to the intended

¹or your authorized dealer

use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Intended use also includes compliance with all operating, maintenance and servicing conditions specified by the manufacturer.

THIS TRACTOR MAY ONLY be used, serviced and repaired by persons who are familiar with it and who have been instructed in the corresponding safety provisions (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

REGISTER USED PRODUCTS. If you purchased used John Deere products from an authorized John Deere dealer, the warranty registration information was updated by the dealer and requires no further information on your part.

If you purchased used John Deere products at an auction, through a trader or from a farmer, please register it now. John Deere and John Deere dealers value their customer's safety and satisfaction. Your local John Deere dealer is best-equipped to provide you with excellent support for your machine. Please enter your product details and your address online, using the John Deere website corresponding to your country. Then select the dealer of your choice and you will receive a voucher for a discount for purchasing John Deere parts.

OULXA64.00031CE -19-03DEC15-1/1

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM -19-12JAN18-1/1

Contents

	Page		Page
Identification Views			
Identification Views	00-1	Prevent Machine Runaway	05-19
Trademarks	00-2	Park Machine Safely	05-20
Safety			
Recognize Safety Information	05-1	Transport Tractor Safely	05-20
Understand Signal Words	05-1	Service Cooling System Safely	05-20
Follow Safety Instructions	05-1	Service Accumulator Systems Safely	05-21
Prepare for Emergencies	05-2	Service Tires Safely	05-21
Wear Protective Clothing	05-2	Service Front-Wheel Drive Tractor Safely	05-21
Protect Against Noise	05-2	Tightening Wheel Retaining Bolts/Nuts	05-22
Handle Fuel Safely—Avoid Fires	05-3	Avoid High-Pressure Fluids	05-22
Handle Starting Fluid Safely	05-3	Do Not Open High-Pressure Fuel System	05-22
Fire Prevention	05-3	Store Attachments Safely	05-23
In Case of Fire	05-4	Decommissioning — Proper Recycling and Disposal of Fluids and Components	05-23
Avoid Static Electricity Risk When Refueling	05-4	Safety Decals	
Keep ROPS Installed Properly	05-5	Use the Seat Belt	10-1
Use Foldable ROPS and Seat Belt Properly	05-5	Operate the Tractor Safely	10-2
Stay Clear of Rotating Drivelines	05-6	Do Not Modify ROPS	10-3
Use Steps and Handholds Correctly	05-6	Use of Instructional Seat (If Equipped)	10-3
Read Operator's Manuals for ISOBUS Controllers	05-7	Tow Trailer Safely (not on Tractors up to 30 km/h)	10-4
Use Seat Belt Properly	05-7	Caution When Operating Front Loader (on Tractors with Mechanical Selective Control Valves)	10-5
Operating the Tractor Safely	05-8	Caution When Operating Front PTO	10-5
Avoid Backover Accidents	05-9	Caution When Operating Rear PTO	10-6
Limited Use in Forestry Operation	05-9	Pressure Accumulators (Front Hitch, for Tractors without Suspended Front-Wheel Drive Axle)	10-6
Operating the Loader Tractor Safely	05-9	Pressure Accumulators (Suspended Front-Wheel Drive Axle, if Equipped)	10-7
Keep Riders Off Machine	05-10	Accumulators (Suspended Front-Wheel Drive Axle, if Equipped)	10-7
Instructional Seat	05-10	Pressure Accumulator (Brake System)	10-8
Use Safety Lights and Devices	05-10	Starter Motor	10-9
Use a Safety Chain	05-11	Electrical Coolant Heater of Engine (if Equipped)	10-9
Transport Towed Equipment at Safe Speeds	05-11	Do Not Modify ROPS	10-10
Use Caution on Slopes, Uneven Terrain, and Rough Ground	05-12	Operate the Tractor Safely	10-11
Freeing a Mired Machine	05-12	Never Carry Riders	10-12
Avoid Contact with Agricultural Chemicals	05-13	Regular ROPS Position	10-12
Handle Agricultural Chemicals Safely	05-14	Caution When Operating Front Loader (on Tractors with Mechanical Selective Control Valves)	10-13
Handling Batteries Safely	05-15	Tow Trailer Safely (not on Tractors up to 30 km/h)	10-14
Avoid Heating Near Pressurized Fluid Lines	05-15		
Remove Paint Before Welding or Heating	05-16		
Handle Electronic Components and Brackets Safely	05-16		
Practice Safe Maintenance	05-17		
Avoid Hot Exhaust	05-17		
Clean Exhaust Filter Safely	05-18		
Work In Ventilated Area	05-19		
Support Machine Properly	05-19		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2020
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual

Page	Page
..... 10-15	Additional Headlights (Optional Equipment)..... 20-9
Controls and Instruments	Lighting System - Worklight Switches (Tractors with Cab)..... 20-10
Vehicle Controls with PowrQuad™	Lighting System – Worklight Switch (Tractors with Open Operator's Station)..... 20-10
Transmission..... 15-1	Lighting System - Front Loader Worklights (If Equipped)..... 20-11
Vehicle Controls with PowrQuad™ PLUS and AutoQuad™ PLUS	Lighting System - Worklights of ISOBUS Implement..... 20-12
Transmissions..... 15-2	Lighting System - Switch on Hazard Warning Lights..... 20-13
Vehicle Controls with Com- mandQuad™ PLUS Transmission..... 15-3	Beacon Light (Option)..... 20-13
Key Switch..... 15-4	Seven-Pin Trailer Connector..... 20-14
Come-Home Mode..... 15-5	Open Operator's Station and Cab
Immobilizer..... 15-5	Avoid Contact with Agricultural Chemicals..... 25-1
Front-Wheel Drive - Controls..... 15-6	Clean Vehicle of Hazardous Pesticides..... 25-1
Differential Lock - Controls..... 15-6	Emergency Exits..... 25-2
Creeper - Controls..... 15-7	Roll Over Protection System (ROPS)..... 25-2
PTO - Controls..... 15-7	Operate the Foldable ROPS..... 25-3
Mechanical Selective Control Valves (SCV) - Controls..... 15-8	Use the Seat Belt..... 25-4
Mechanical Multi-Function Lever with Dampening..... 15-9	Comfort Seat MSG83..... 25-5
Front Hitch (Economy) - Controls..... 15-10	Comfort Seat MSG85..... 25-6
Rear Hitch - Controls..... 15-10	Air Comfort Seat - MSG95G and MSG95GL..... 25-7
iTEC™ Basic — Intelligent Total	Air Comfort Seat MSG95AL..... 25-8
Equipment Control - Controls..... 15-11	Instructional Seat for Training Purposes..... 25-9
AutoTrac™ Controls (Optional Equipment)..... 15-11	Wiper and Washer System..... 25-10
Heating and Air Conditioning System - Controls..... 15-11	Fan and Air Louvers..... 25-11
Instrument Panel and Indicator	Heating System..... 25-11
Lights — PowrQuad™ PLUS and AutoQuad™ PLUS Transmissions..... 15-12	Air-Conditioning System..... 25-12
Instrument Panel and Indicator Lights	Tips On Using the Air-Conditioning System..... 25-13
— CommandQuad™ PLUS Transmission... 15-14	Storage Tray..... 25-13
Level Indicator — Fuel Tank and DEF Tank..... 15-15	Dome Lights..... 25-14
Coolant Temperature Gauge..... 15-15	Reverse Travel Alarm (Optional Equipment).... 25-14
Aftertreatment Indicators Overview..... 15-16	Controls for Hydraulic Quick Release and Worklights on Front Loader (if Equipped)..... 25-15
Digital Display - User Interface..... 15-17	Adjust the Steering Wheel..... 25-15
Digital Display - Display Properties (Basic Settings)..... 15-18	Beacon Light..... 25-15
Digital Display - Information Menu..... 15-19	Install Monitor..... 25-16
Digital Display - More Settings..... 15-20	Socket for GreenStar™ Display..... 25-16
Software Update..... 15-24	ISOBUS Socket in Cab..... 25-17
Lights	12-V Power Outlet Socket / Cigarette Lighter... 25-17
Overview of the Lights..... 20-1	3-Terminal Power Outlet Socket (12V, SAE) 25-18
Lighting System - Overview of the Lights (Tractors with Open Operator's Station)..... 20-4	Signal Socket According to ISO Standard 11786..... 25-19
Switches for Turn Signal and Horn (Tractors with Cab)..... 20-6	Service Socket (CAN BUS)..... 25-19
Lighting System – Switch for the Turn Signal and Horn (Tractors with Open Operator's Station)..... 20-7	ISOBUS Socket (ISB)..... 25-20
Lighting System - Light Switch (Tractors with Cab)..... 20-8	Opening Windows..... 25-20
Lighting System – Light Switch (Tractors with Open Operator's Station)..... 20-9	Routing Cables through the Window..... 25-21
	Roof Hatch..... 25-21
	Break-In Period
	After the First 4 and 8 Hours of Operation..... 30-1
	Within the First 100 Hours of Operation..... 30-8
	After the First 100 Operating Hours..... 30-8

Continued on next page

Page	Page
Prestarting Checks	
Prestarting Checks35-1	
Comply with Operator's Manuals of Implement Manufacturers35-3	
Operate the Engine	
US EPA Qualified Emergency Use — SCR Derate Override Option40-1	
Important Engine Information40-1	
Engines with Turbocharger.....40-2	
Engine Protection40-2	
Required Machine Stop Warning.....40-2	
Cold Start Aids.....40-3	
Coolant Heater40-4	
Ground Fault Circuit Interrupter (GFCI).....40-4	
Starting the Engine40-5	
Engine Start with a Slave Battery.....40-7	
Starting With a Slave Battery – On Tractors with Horizontal Exhaust System.....40-8	
Battery — Disconnect the Electrical Circuit.....40-9	
Battery — Disconnect Electrical Circuit - On Tractors with Horizontal Exhaust System40-10	
Stopping the Engine40-11	
Battery Disconnect System (If Equipped).....40-11	
Parking the Tractor40-12	
Tow the Tractor40-12	
Fill the Fuel Tank40-12	
Filling the DEF Tank40-14	
Exhaust Cleaning System	
Exhaust Filter Cleaning, General Information.....42-1	
Required Machine Stop Warning.....42-1	
Aftertreatment Indicators Overview42-3	
Access the Engine Menu on the Digital Display ..42-4	
Passive Exhaust Filter Cleaning42-4	
Automatic Exhaust Filter Cleaning42-5	
Exhaust Filter Cleaning with Tractor Parked42-6	
Exhaust Filter, Service Cleaning.....42-9	
Exhaust Cleaning System, Information for Operator42-10	
DEF (Diesel Exhaust Fluid) Level Gauge.....42-11	
Selective Catalytic Reduction (SCR) System Overview42-12	
Operate the Tractor — General	
Reduce Fuel Consumption45-1	
Selecting Correct Travel Speed.....45-3	
Notes on Changing to a Different Size of Tire45-3	
Ground Speed Tables and SRI Values45-3	
Ground Speeds, PowrQuad™ and PowrQuad™ PLUS Transmissions for 30 km/h (16/16) - Tires with SRI 700 and 72545-4	
Travel Speeds, PowrQuad™ and PowrQuad™ PLUS Transmissions for 30 km/h (16/16) - Tires with SRI 750 and 80045-5	
Travel Speeds, PowrQuad™ and PowrQuad™ PLUS Transmissions for 30 km/h (16/16) - Tires with SRI 825 and 87545-6	
Travel Speeds, PowrQuad™, PowrQuad™ PLUS and AutoQuad™ PLUS Transmissions for 40 km/h (24/24), Tires with SRI 700 and 72545-7	
Travel Speeds, PowrQuad™, PowrQuad™ PLUS and AutoQuad™ PLUS Transmissions for 40 km/h (24/24), Tires with SRI 750 and 77545-9	
Travel Speeds, PowrQuad™, PowrQuad™ PLUS and AutoQuad™ PLUS Transmissions for 40 km/h (24/24), Tires with SRI 800 and 82545-11	
Travel Speeds, PowrQuad™, PowrQuad™ PLUS and AutoQuad™ PLUS Transmissions for 40 km/h (24/24), Tires with SRI 875.....45-13	
Ground Speeds, CommandQuad™ PLUS Transmission for 40 km/h (24/24) - Tires with SRI 700, 725, 750 and 77545-15	
Ground Speeds, CommandQuad™ PLUS Transmission for 40 km/h (24/24) - Tires with SRI 800 and 82545-17	
Engage Front-Wheel Drive45-19	
Engage Differential Lock45-20	
Engage Creeper Transmission.....45-21	
Tractor Equipped With Front Suspension Option.....45-21	
Hydraulic Service Brakes45-22	
Single-Line Hydraulic Trailer Brake (If Equipped).....45-23	
Parking the Tractor45-24	
Operating the Tractor — PowrQuad™ and PowrQuad™ PLUS	
Shift the PowrQuad™ Transmission47-1	
Shift the PowrQuad™ PLUS Transmission47-2	
PowrQuad™ PLUS Transmission — Settings....47-4	
Operate the Tractor — AutoQuad™ PLUS	
Shift the AutoQuad™ PLUS Transmission.....48-1	
AutoQuad Plus Transmission — Settings48-4	
Operate the Tractor — CommandQuad™ PLUS	
CommandQuad™ PLUS — Controls49-1	

Continued on next page

Page	Page		
CommandQuad™ PLUS — Special Features when Maneuvering the Tractor	49-6	Attach Three-Point Hitch Mounted and Drawn Implements	50-22
CommandQuad™ PLUS – Set Maximum Travel Speed	49-7	Leveling the Implement	50-22
CommandQuad™ PLUS – Set Maximum Engine Speed	49-8	Center Link	50-23
CommandQuad™ PLUS - Select Start Gear	49-8	Center Link Positions.....	50-23
CommandQuad™ PLUS — Set Operating Mode	49-9	Hook-Type Center Link.....	50-24
CommandQuad™ PLUS – Set Engine Speed Reduction (Custom Setting).....	49-10	Adjust Lift Links	50-25
CommandQuad™ PLUS — Set Engine Droop (Custom Setting)	49-11	Lift Links - Adjust for Vertical Float	50-27
CommandQuad™ PLUS — SoftShift when Changing Gears	49-12	Sway Blocks, Category 2 (if Equipped)	50-28
CommandQuad™ PLUS — Set the Reverse/Forward Speed Ratio.....	49-12	Stabilizer (If Equipped).....	50-28
CommandQuad™ PLUS – Adjust AutoClutch Sensitivity	49-13	Stabilizing System (If Equipped).....	50-29
CommandQuad™ PLUS – Start Gears.....	49-14	Draft Links — Adjust Spreading Dimension	50-30
CommandQuad™ PLUS — Customizing Vehicle Behavior.....	49-15	iTEC™ Basic — Intelligent Total Equipment Control	
CommandQuad™ PLUS — Operating with Trailer on Hillside in Slippery Conditions	49-15	iTEC™ Basic - Operating the Intelligent Total Equipment Control.....	51-1
CommandQuad™ PLUS — Stopping and Parking the Tractor.....	49-16	Power Take-Offs	
CommandQuad™ PLUS — Come-Home Mode.....	49-17	Front PTO — PTO Shield	55-1
CommandQuad™ PLUS — Towing the Tractor	49-17	Rear PTO — PTO Shield	55-1
Hitches		Operating instructions.....	55-3
Hitch - Maximum Lifting Force.....	50-1	PTO Speeds	55-3
Rear Hitch - Operation.....	50-1	PTO Options.....	55-4
Rear Hitch - Remote Control	50-2	Front Power Take-Off	55-4
Rear Hitch - Raise Height Limit	50-2	Switching the Front PTO	55-5
Rear Hitch - Driving under Load with Mounted Implement	50-3	Engaging Rear PTO	55-6
Rear Hitch - Hitch Damping.....	50-4	Rear PTO — Select Standard Speed (Shiftable PTO)	55-7
Rear Hitch - Adjust the Rate of Drop	50-4	Rear PTO — Remote Control and Function.....	55-8
Rear Hitch - Adjust the Raise Rate.....	50-5	Rear PTO – PTO Automatic Shut-Off Function (If Available)	55-10
Rear Hitch - Set the Depth Control Stop	50-5	Rear PTO — Change the PTO Stub Shaft.....	55-11
Rear Hitch - Draft/Depth Control Adjustment	50-6	Rear PTO — Connect an Implement.....	55-12
Rear Hitch - Use Draft Control.....	50-8	Ballast	
Rear Hitch - Float Position.....	50-9	Ballasting Information and Guidelines for Tractors with Single Tires.....	60-1
Rear Hitch - Direct Actuation	50-9	General Guidelines for Tractor Weight Based on Engine Horsepower (according to EC Directive 97/68, using PS as Unit of Measurement)	60-2
Economy Front Hitch - Controls	50-10	Limits for Travel Speed Deviate Depending on the Model - for Tractors Without Front-Wheel Drive Axle (6145M).....	60-2
Economy Front Hitch	50-11	Selection of Weights.....	60-3
Front Hitch - Center Link	50-16	Load on Rear Wheels.....	60-3
Front Hitch - Center Link Positions.....	50-17	Measure Rear Wheel Slip.....	60-4
Front Hitch - Hook-Type Center Link.....	50-17	Fill Tires with Water	60-4
Three-point hitch.....	50-18	Draining Tires	60-5
Flat Steel Draft Links	50-18	Wheel Weights	60-5
Telescopic Draft Links.....	50-19	Change Wheel Weights Safely.....	60-6
Quick-Coupling (Hook-Type) Draft Links	50-19	Install Front Weights.....	60-7

Continued on next page

Page	Page
Wheels, Tires	
Tires and Wheels - Foreword	65-1
General Wheel, Tire, and Tread Guidelines	65-1
Prevent Front Wheel or Fender Contact with Tractor Components	65-2
Changing to a Different Tire Size	65-3
Use of Dual Wheels (Easy-to-Attach)	65-4
Service Tires Safely	65-4
Change Tires Safely	65-5
Wheel Exchange with Wheel Weights	65-5
Front Tires with Front-Wheel Drive	65-6
Check and Adjust Toe-In	65-6
Adjustable Front Axle - Check Toe-in	65-6
Adjustable Front Axle Type A - Adjust Toe-in	65-7
Adjustable Front Axle Type A - Tighten Axle Bolts and Wheel Bolts	65-8
Adjustable Front Axle Type A - Adjust the Wheel Treads	65-8
Adjustable Front Axle Type A - Tread Widths Without Axle Extensions	65-11
Adjustable Front Axle Type A - Tread Widths with Axle Extensions	65-12
Adjustable Front Axle Typ B - Adjust Toe-in	65-13
Adjustable Front Axle Type B - Tightening Axle Bolts and Wheels Bolts	65-14
Adjustable Front Axle Typ B - Adjusting the Wheel Treads	65-15
Adjustable Front Axle Type B - Wheel Treads	65-16
Front-Wheel Drive Axle — Check Toe-In	65-17
Front-Wheel Drive Axle — Adjust Toe-In	65-17
Instructions for Front Wheel Tread Adjustment with Rims for 2, 8, and 16 Positions	65-18
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 2 Positions - 6110M	65-21
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 2 Positions - 6110M	65-23
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 2 Positions - 6120M	65-24
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 2 Positions - 6130M	65-26
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 16 Positions - 6110M	65-28
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 16 Positions - 6120M	65-33
Two-Piece Front Axle — Tread Widths for Front Wheels with Rims for 16 Positions - 6130M	65-38
Two-Piece Front Axle - Distinction between Fender (Version 1) and (Version 2)	65-43
Two-Piece Front Axle — Adjust the Fixed Fenders (Version 1)	65-43
Two-Piece Front Axle — Adjust the Pivoting Fenders (Version 1)	65-45
Two-Piece Front Axle — Notes on Adjusting the Fenders (Version 1)	65-48
Two-Piece Front Axle — Notes on Adjusting the Steering Stop (Version 1)	65-50
Two-Piece Front Axle — Adjust the Pivoting Fenders and Steering Stop (Version 1) - Front Axle 730, 733 and 735	65-51
Two-Piece Front Axle — Adjust the Fenders (Version 2)	65-55
Two-Piece Front Axle — Notes on Adjusting the Fenders (Version 2)	65-57
Two-Piece Front Axle — Notes on Adjusting the Steering Stop (Version 2)	65-59
Two-Piece Front Axle — Adjust the Fixed Fenders and Steering Stop (Version 2) - 730, 733 and 735 (Part 1)	65-60
Two-Piece Front Axle — Adjust the Fixed Fenders and Steering Stop (Version 2) - 730, 733 and 735 (Part 2)	65-68
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 2 Positions - 6110M	65-76
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 2 Positions - 6120M	65-78
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 2 Positions - 6130M	65-80
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 2 Positions - 6145M	65-82
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 8 Positions - 6110M	65-84
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 8 Positions - 6120M	65-85
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 8 Positions - 6130M	65-86
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 8 Positions - 6145M	65-87
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 16 Positions - 6110M	65-89
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 16 Positions - 6120M	65-94

Continued on next page

Contents

Page	Page		
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 16 Positions - 6130M.....	65-99	Three-Piece Front Axle (Version 2) — Overview of Axle Category and Axle Type ..	65-170
Three-Piece Front Axle (Version 1) — Tread Widths for Front Wheels with Rims for 16 Positions - 6145M.....	65-104	Three-Piece Front Axle (Version 2) — Adjust the Fenders.....	65-171
Three-Piece Front Axle (Version 1) — Overview of Axle Category and Axle Type ..	65-107	Three-Piece Front Axle (Version 2) — Notes on Adjusting the Fenders.....	65-173
Three-Piece Front Axle (Version 1) — Adjust the Fenders.....	65-108	Three-Piece Front Axle (Version 2) — Notes on Adjusting the Steering Stop - 730, 733 and 735.....	65-175
Three-Piece Front Axle (Version 1) — Notes on Adjusting the Fenders.....	65-110	Three-Piece Front Axle (Version 2) — Notes on Adjusting the Steering Stop - 750 and 755.....	65-176
Three-Piece Front Axle (Version 1) — Notes on Adjusting the Steering Stop	65-112	Three-Piece Front Axle (Version 2) — Adjust the Fixed Fenders and Steering Stop - 730, 733 and 735	65-177
Three-Piece Front Axle (Version 1) — Adjust the Fixed Fenders and Steering Stop - 735 (M40LD), 740 (M40) and 745 (M40HD)	65-114	Three-Piece Front Axle (Version 2) — Adjust the Pivoting Fenders and Steering Stop - 730, 733 and 735	65-189
Three-Piece Front Axle (Version 1) — Adjust the Fixed Fenders and Steering Stop - 750 (M50LD, M50 und M50HD).....	65-120	Three-Piece Front Axle (Version 2) — Adjust the Fixed Fenders and Steering Stop - 750 (M50LD, M50 and M50HD) Part 1	65-201
Three-Piece Front Axle (Version 1) — Adjust the Pivoting Fenders and Steering Stop - 735 (M40LD), 740 (M40) and 745 (M40HD)	65-126	Three-Piece Front Axle (Version 2) — Adjust the Fixed Fenders and Steering Stop - 750 (M50LD, M50 und M50HD) Part 2	65-211
Three-Piece Front Axle (Version 1) — Adjust the Pivoting Fenders and Steering Stop - 750 (M50LD, M50 and M50HD).....	65-132	Three-Piece Front Axle (Version 2) — Adjust the Pivoting Fenders and Steering Stop - 750 (M50LD, M50 and M50HD) Part 1	65-221
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 2 Positions - 6110M	65-138	Three-Piece Front Axle (Version 2) — Adjust the Pivoting Fenders and Steering Stop - 750 (M50LD, M50 and M50HD) Part 2	65-231
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 2 Positions - 6120M	65-140	Instructions for Rear Wheel Tread Adjustment with Rims for 2, 8 and 16 Positions - Flanged Axle	65-241
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 2 Positions - 6130M	65-142	Tread Widths for Rear Wheels with Rims for 2 Positions - Flanged Axle (6110M)	65-242
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 2 Positions - 6145M	65-144	Tread Widths for Rear Wheels with Rims for 2 Positions - Flanged Axle (6120M).....	65-243
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 8 Positions - 6145M	65-146	Tread Widths for Rear Wheels with Rims for 2 Positions - Flanged Axle (6130M).....	65-244
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 16 Positions - 6110M	65-148	Tread Widths for Rear Wheels with Rims for 2 Positions - Flanged Axle (6145M).....	65-245
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 16 Positions - 6120M	65-154	Tread Widths for Rear Wheels with Rims for 2 Positions (Heavy-Duty Type) - Flanged Axle (6145M).....	65-246
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 16 Positions - 6130M.....	65-160	Tread Widths for Rear Wheels with Rims for 8 Positions - Flanged Axle (6145M).....	65-247
Three-Piece Front Axle (Version 2) — Tread Widths for Front Wheels with Rims for 16 Positions - 6145M	65-167		

Continued on next page

Page	Page		
Tread Widths for Rear Wheels with Rims for 16 Positions - Flanged Axle (6110M).....	65-248	Two-Piece Front Axle — Calculate Tire Combination - 6110M to 6130M	65-301
Tread Widths for Rear Wheels with Rims for 16 Positions - Flanged Axle (6120M).....	65-253	Three-Piece Front Axle — Calculate Tire Combination - 6145M.....	65-303
Tread Widths for Rear Wheels with Rims for 16 Positions - Flanged Axle (6130M).....	65-258	Tire Labeling, Ascertain the Load Capacity of Tires	65-305
Tread Widths for Rear Wheels with Rims for 16 Positions - Flanged Axle (6145M).....	65-263	Tire Pressures	65-306
Tread Widths for Rear Wheels with Rims for 16 Positions (Heavy-Duty Type) - Flanged Axle (6145M).....	65-267	Tire Inflation Pressure Guidelines	65-306
Steel Adjustable Wheels in Combination with Adjustable Rear Axles	65-268	Select Tire Inflation Pressure	65-307
Notes on Rear Wheels - Rack-and-Pinion Axles, Hub Diameter 79 mm.....	65-269	Additional Equipment — Hydraulic System	
Rack-and-Pinion Axles, Hub Diameter 79 mm - Adjust Tread Widths.....	65-271	Selective Control Valves, Mechanical - Control Levers.....	70-1
Tread Widths for Rear Wheels with Rims for 2 Positions - Rack-and-Pinion Axle, Hub Diameter 79 mm (6110M)	65-273	Mechanical Selective Control Valves - Transport Lock	70-2
Tread Widths for Rear Wheels with Rims for 2 Positions - Rack-and-Pinion Axle, Hub Diameter 79 mm (6120M).....	65-275	Selective Control Valves (SCV), Mechanical - Raise Rate	70-3
Tread Widths for Rear Wheels with Rims for 2 Positions - Rack-and-Pinion Axle, Hub Diameter 79 mm (6130M)	65-277	Selective Control Valves (SCV), Mechanical - Set Feature Mode	70-3
Notes on Rear Wheels - Rack-and-Pinion Axles, Hub Diameter 86 mm / 92 mm.....	65-279	Selective Control Valves (SCV), Mechanical - Pressure Settings for Series 450	70-4
Rack-and-Pinion Axles, Hub Diameter 86 mm / 92 mm - Adjust Tread Widths for Cast Rear Wheels.....	65-280	Operator Presence Sensor — For North America, Australia, and New Zealand Only.....	70-4
Rack-and-Pinion Axles, Hub Diameter 86 mm / 92 mm - Adjust Tread Widths for Steel Rear Wheels (with Adjusting Pinion).....	65-281	Selective Control Valves (SCV) - Fittings	70-4
Rack-and-Pinion Axles, Hub Diameter 86 mm / 92 mm - Adjust Tread Widths for Steel Rear Wheels (without Adjusting Pinion).....	65-282	Selective Control Valves - Connect Hydraulic Hoses	70-5
Tread Widths for Rear Wheels with Rims for 2 Positions - Rack-and-Pinion Axle, Hub Diameter 86 mm (6145M)	65-283	Selective Control Valves - Disconnect Hydraulic Hoses	70-6
Tire Combinations - 6110M.....	65-285	Selective Control Valves - Connect or Disconnect Hydraulic Hoses at Front Hitch (If Equipped).....	70-8
Tire Combinations - 6120M	65-289	Hydraulic Connections for Implements and Hydraulic Motors	70-10
Tire Combinations - 6130M	65-293	Connect Implements to Selective Control Valves (SCV)	70-11
Tire Combinations - 6145M	65-297	Selective Control Valves - Maximum Permissible Oil Withdrawal	70-13
Calculate Tire Combinations (Graphic)	65-300	Selective Control Valves (SCV) - Oil Withdrawal with Hydrostatic Drive (with PC Hydraulic System)	70-13
		Selective Control Valves (SCV) - Oil Withdrawal with Hydrostatic Drive (with PFC Hydraulic System)	70-14
		Mechanical Multi-Function Lever with Front-Loader Dampening	70-15
		Additional Equipment — Other	
		CAT II Drawbar	71-1
		Proper Use of Drawbar.....	71-1
		Locking the Hitch Pins	71-2
		Latch for telescopic draft links	71-2
		Front Loader - Hydraulic Quick Release (If Equipped).....	71-3
		Front Loader – Influence of Engine Speed on Lifting Function	71-3

Continued on next page

Page	Page		
Front Loader Mounting Frames for Loaders 620R/623R.....	71-4	Refilling Diesel Exhaust Fluid (DEF) Tank.....	80-20
Front Loader Mounting Frames for Loaders 640R/643R, 660R/663R and 680R/683R.....	71-5	Storing Diesel Exhaust Fluid (DEF).....	80-21
Front Jaw Hitch.....	71-5	Testing Diesel Exhaust Fluid (DEF).....	80-21
Lockable Tank Filler Cap.....	71-6	Disposal of Diesel Exhaust Fluid (DEF).....	80-22
Transport		Lubrication and Periodic Service	
Transporting tractor.....	75-1	Required Emission-Related Information.....	85-1
Lashing the tractor to transport trailers.....	75-1	Scope of This Manual.....	85-1
Wash Machine After Unloading.....	75-3	Safe Maintenance and Cleaning.....	85-1
Drive on Public Roads.....	75-4	Using High Pressure Washers.....	85-1
Loads, Towing.....	75-5	Lubricate All Lubricating Points.....	85-2
Use Safety Chain.....	75-6	Observe Service Intervals.....	85-2
Freeing a Mired Machine.....	75-7	Service Intervals.....	85-2
Tow the Tractor.....	75-7	General Instructions Regarding the Condition of the Tractor.....	85-2
Fuel, Lubricants, Hydraulic Oil and Coolant		Open the Hood.....	85-3
John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V.....	80-1	Open Service Doors.....	85-3
Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V.....	80-2	Access to the Battery.....	85-4
Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines.....	80-3	Access to the Battery - On Tractors with Horizontal Exhaust System.....	85-4
Transmission and Hydraulic Oil.....	80-4	Access to Fuses.....	85-5
Oil for Front-Wheel Drive Axle.....	80-5	Access to the Fuses - On Tractors with Horizontal Exhaust System.....	85-6
Wash Machine After Unloading.....	80-6	Jack Up the Tractor - Lifting Points.....	85-7
Multipurpose Extreme Pressure (EP) Grease.....	80-6	Greasing - General information.....	85-10
Grease for Automated Lubrication Systems.....	80-7	Lubricate Tractor - Lubrication Points.....	85-11
Multipurpose Grease.....	80-7	Important Instructions Regarding Alternator.....	85-14
Mixing of Lubricants.....	80-8	Service After the First 100 Hours.....	85-14
Lubricant Storage.....	80-8	Service As Required.....	85-14
Alternative and Synthetic Lubricants.....	80-8	Inspect/Replace Hydraulic Hoses.....	85-14
Diesel Engine Coolant (engine with wet sleeve cylinder liners).....	80-9	Other Service Jobs.....	85-15
Operating in Warm Temperature Climates.....	80-10	Note Regarding the Service Interval for Engine Coolant.....	85-15
John Deere COOL-GARD™ II Coolant Extender.....	80-10	Instructions for Starting up the Air-Conditioning System.....	85-15
Water Quality for Mixing with Coolant Concentrate.....	80-11	Periodic Service.....	85-16
Testing Coolant Freeze Point.....	80-12	All Service Tasks.....	85-17
Diesel Fuel.....	80-13	Service (As Required, Annually, Every 2 and 3 Years).....	85-20
Handling and Storing Diesel Fuel.....	80-14	Service / Daily or Every 10 Hours	
Lubricity of Diesel Fuel.....	80-14	Clean the Radiator, Condenser and Area Surrounding the Engine - 4-Cylinder Engines.....	90-1
Testing Diesel Fuel.....	80-14	Check Coolant Level - 4-Cylinder Engines.....	90-2
Biodiesel Fuel.....	80-15	Check the Fuel Filters - 4-Cylinder Engines.....	90-2
Minimizing the Effect of Cold Weather on Diesel Engines.....	80-17	Check Engine Oil Level - 4-Cylinder Engines.....	90-3
Supplemental Diesel Fuel Additives.....	80-18	Transmission/Hydraulic System - Check Oil Level.....	90-3
Oilscan™ and CoolScan™.....	80-18	Check leak-off oil containers (if equipped).....	90-4
Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines.....	80-19	Check Brakes.....	90-4
		Check the Lights.....	90-4
		Lubricate the Lubrication Points of the Tractor.....	90-4

Continued on next page

Page	Page
Service / After the First 100 Hours	
Front-Wheel Drive Axle - Instructions on Changing Oil (Axle Housing and Final Drives).....	95-1
Front-Wheel Drive Axle - Final Drives with Brake, Oil Change	95-1
Front-Wheel Drive Axle - Final Drives without Brake, Oil Change	95-2
Front-Wheel Drive Axle - Axle Housing, Oil Change	95-3
Transmission/Hydraulic Oil Filters, Replace	95-4
Check Air Intake Hoses	95-5
Front Hitch - Tighten the Screws	95-6
John Deere™ Front Loader - Mounting Frame - Maintenance	95-6
Open Operator's Station - Check Torques of Attaching Screws.....	95-6
CAT II Drawbar - Tighten the Screws	95-6
Lubricate the Lubrication Points of the Tractor.....	95-6
Service / After the First 500 Hours and Then Every 500 Hours	
Check the Movement Inhibitor – PowrQuad™ Transmission	100-1
Check the Movement Inhibitor — PowrQuad™ PLUS Transmission and AutoQuad™ PLUS Transmission.....	100-1
Check the Movement Inhibitor – CommandQuad™ Transmission	100-1
PTO Actuation - Check Safety Circuit	100-2
Cab — Check Closing Mechanisms and Rubber Seals of the Doors, Windows, and Roof Hatches	100-2
Cab — Change Activated Carbon Filter (If Equipped).....	100-2
Check Air Intake Hoses	100-3
Engine - Check Drive Belt for Wear.....	100-3
Check Engine Ground Connection - 4-Cylinder Engines	100-4
Bleed and Check the Brake System.....	100-4
Service the Fuel Tank	100-4
Change the Fuel Filters - 4-Cylinder Engines... ..	100-5
Front-Wheel Drive Axle - Axle Housing, Check Oil Level	100-6
Front-Wheel Drive Axle (730, 733 and 735) - Final Drives without Brakes, Check Oil Level	100-6
Front-Wheel Drive Axle - Final Drives with Brake, Oil Change	100-7
Front PTO - Change Oil Filter (If Equipped)	100-8
Change Engine Oil Filter	100-9
Change the Engine Oil - 4-Cylinder Engines ..	100-10
Transmission/Hydraulic Oil Filters, Replace... ..	100-11
Open Operator's Station - Check Torques of Attaching Screws.....	100-12
Tighten Axle Bolts - Adjustable Front Axle, Type A	100-12
Tighten axle bolts - adjustable front axle, type B	100-13
Tighten Wheel Bolts of Front Wheels, with Adjustable Front Axle Type A	100-13
Tighten Wheel Bolts of the Front Wheels, on Vehicles with Adjustable Front Axle Type B.....	100-13
Tighten Front-Wheel Bolts, on Vehicles with Front-Wheel Drive Axles - 6110M to 6130M	100-14
Tighten Front-Wheel Bolts, on Vehicles with Front-Wheel Drive Axles - 6145M.....	100-15
Tighten Wheel Bolts of the Rear Wheels, with Flanged Axles	100-16
Tighten Wheel Bolts of the Rear Wheels - Rack-and-Pinion Axles, Hub Diameter 79 mm	100-17
Tighten Wheel Bolts of the Rear Wheels - Rack-and-Pinion Axles, Hub Diameter 86 mm / 92 mm	100-19
Wheel Weights - Tighten Screws.....	100-19
Front Hitch - Check Hardware Torque	100-19
John Deere™ Front Loader - Mounting Frame - Maintenance	100-20
CAT II Drawbar - Tighten the Screws	100-20
Rear PTO - Lubricate PTO Stub Shaft Support.....	100-21
Lubricate Rear Axle Bearings.....	100-22
Adjustable Front Axle Type A - Lubricate the Grease Fittings	100-22
Adjustable Front Axle Type B - Lubricate the Grease Fittings	100-23
Lubricate the Lubrication Points of the Tractor	100-23
Check the Drawbar for Wear	100-24
Service / Once a Year	
Inspect Seat Belt	110-1
Use coolant test strips to check engine coolant - with 4-cylinder engines.....	110-1
Inspect Hydraulic Hoses	110-2
Other Annual Service Jobs.....	110-2
Service / Every 1500 Hours or 2 Years	
Change Cab Air Filters	115-1
Change the Engine Air Cleaner.....	115-2
Engine - Change Filter of Oil Separator in Crankcase Vent (If Equipped)	115-2
Front-Wheel Drive Axle - Instructions on Changing Oil (Axle Housing and Final Drives).....	115-2
Front-Wheel Drive Axle - Final Drives without Brake, Oil Change	115-3
Front-Wheel Drive Axle - Axle Housing, Oil Change	115-4

Continued on next page

Page	Page		
Change Transmission/Hydraulic Oil and Clean Intake Screen.....	115-5	Headlight in the Engine Hood, High-Beam Headlight - Exchange Lamps ..	125-18
Front PTO - Change Oil (If Equipped)	115-6	Worklight in the Engine Hood - Exchange Lamps	125-18
Front-Axle Suspension - Accumulator Check...	115-7	Worklights on Cab Frame, Cab Roof, or Rear Fender - Exchange Lamps.....	125-19
Service / Every 4500 Hours		Turn-Signal on Cab Roof, Change lamps.....	125-20
Engine Air Cleaner - Change Secondary Element.....	117-1	Headlights on Cab Frame - Change Lamp.....	125-21
Cleaning Diesel Exhaust Fluid (DEF) Tank	117-2	Tail Brake Light/Turn Signal on Fender - Change Lamp	125-22
Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter.....	117-3	Replace Bulb on Beacon Light	125-23
Replace Suction Screen on DEF Tank Header (Only for Tractors without In-Line DEF Filter).....	117-4	Cab Lighting - Replace Bulb.....	125-26
		Lighting of the Transmission Shift Unit - Replace Bulb.....	125-26
Service / Every 6000 Hours		Maintenance Records	
Note Regarding the Service Interval for Engine Coolant.....	120-1	Information on Engine Oil Change — Tractors with 4-Cylinder Engine	126-1
Change the Coolant - 4-Cylinder Engines	120-1	Engine Oil and Filter Change	126-2
In-Line DEF Filter (If Equipped) - Installation Position	120-2	Engine Oil and Filter Change	126-3
Change Diesel Exhaust Fluid (DEF) Dosing Unit In-Line Filter.....	120-3	Engine Oil and Filter Change	126-4
		Engine Oil and Filter Change	126-5
Service / As Required		Engine Air Cleaner and Cab Air Filters, Service	126-6
Clean Cab Air Filters	125-1	Engine Air Cleaner and Cab Air Filters, Service	126-7
Bleed Air from Fuel System - 4-Cylinder Engines	125-2	Servicing Cooling System.....	126-8
Front Loader Mounting Frame - Maintenance ..	125-2	Servicing Cooling System.....	126-9
Cooling System - Viscous Fan, Cleaning the Bimetallic Spring	125-2	Service the DEF System	126-10
Cooling System - Check the Viscous Fan	125-2	Service the DEF System	126-11
Lubricate All Lubricating Points	125-2	Yearly.....	126-12
Check the Mechanical Cab Suspension.....	125-3	Yearly.....	126-13
Starter Motor.....	125-3	100 Hours Service.....	126-14
DEF Tank - Clean Screen on Filler Neck.....	125-4	500 Hour Service.....	126-15
DEF Tank Vent - Check Filter	125-4	1000 Hour Service.....	126-16
Change Diesel Particulate Filter (DPF)	125-5	1500 Hour Service.....	126-17
Fuse and Relay of Electrical Starting Aid	125-5	2000 Hour Service.....	126-18
Fuses and Relays under the Right Access Step	125-6	25000 Hour Service.....	126-19
Fuses and Relays under the Horizontal Exhaust System	125-8	3000 Hour Service.....	126-20
Fuses and Relays (LCS) and (FRM), General Information - Tractors with Operator's Cab	125-11	3500 Hour Service.....	126-21
Fuses and Relays (LCS) and (FRM) - Tractors with Operator's Cab	125-12	4000 Hour Service.....	126-22
Fuses and Relays (LCS) and (FRM), General Information - Tractors with Open Operator's Station.....	125-15	4500 Hours Service.....	126-23
Fuses and Relays (LCS) and (FRM) - Tractors with Open Operator's Station	125-16	5000 Hour Service.....	126-24
Handling Halogen Lamps Safely	125-17	55000 Hour Service.....	126-25
Headlight in the Engine Hood, Low-Beam Headlight - Exchange Lamps...	125-17	6000 Hour Service.....	126-26
		6500 Hour Service.....	126-27
		7000 Hour Service.....	126-28
		7500 Hour Service.....	126-29
		8000 Hour Service.....	126-30
		85000 Hour Service.....	126-31
		9000 Hour Service.....	126-32
		9500 Hour Service.....	126-33
		10000 Hour Service.....	126-34
		Information About Further Services.....	126-35
		Record For Further Services	126-36

Continued on next page

	Page		Page
Troubleshooting			
Transmission	130-1	Loads and Weights - 6145M.....	145-31
Hydraulic System.....	130-2	Vibration	145-32
Selective Control Valves.....	130-3	Electrical System	145-32
Engine	130-4	Sound level.....	145-32
Electrical System	130-6	Permissible Front Axle Load in Relation to Tires (Normal Operation) - 6110M.....	145-33
Operator's Cab	130-7	Permissible Front Axle Load in Relation to Tires (Front Loader Operation) - 6110M ..	145-36
Diagnostic Trouble Codes and Settings			
STOP, Service Alert, and Information Indicators.....	135-1	Permissible Front Axle Load in Relation to Tires (Normal Operation) - 6120M	145-39
Operation and Entering the Diagnostic Addresses with Digital Display (Customer Level).....	135-2	Permissible Front Axle Load in Relation to Tires (Front Loader Operation) - 6120M	145-42
Storage			
Storage for a Long Period	140-1	Permissible Front Axle Load in Relation to Tires (Normal Operation) - 6130M	145-45
Removing Tractor from Storage	140-2	Permissible Front Axle Load in Relation to Tires (Front Loader Operation) - 6130M	145-48
Specifications			
Note on Specifications.....	145-1	Permissible Front Axle Load in Relation to Tires (Normal Operation) - 6145M	145-51
Dimensions - 6110M to 6130M with Open Operator's Station and Adjustable Front Axle	145-2	Permissible Front Axle Load in Relation to Tires (Front Loader Operation) - 6145M	145-54
Dimensions - 6110M to 6130M with Open Operator's Station and Front-Wheel Drive Axle	145-4	Permissible Rear Axle Load in Relation to Tires - 6110M	145-57
Dimensions - 6110M to 6130M with Operator's Cab, without Front-Wheel Drive Axle	145-6	Permissible Rear Axle Load in Relation to Tires - 6120M	145-59
Dimensions - 6110M to 6130M with Operator's Cab and Front-Wheel Drive Axle	145-8	Permissible Rear Axle Load in Relation to Tires - 6130M	145-61
Dimensions - 6145M with Open Operator's Station and Adjustable Front Axle.....	145-10	Permissible Rear Axle Load in Relation to Tires - 6145M	145-63
Dimensions - 6145M with Open Operator's Station and Front-Wheel Drive Axle.....	145-12	Unified Inch Bolt and Screw Torque Values....	145-65
Dimensions - 6145M with Operator's Cab, without Front-Wheel Drive Axle	145-14	Metric Bolt and Screw Torque Values	145-66
Dimensions - 6145M with Operator's Cab and Front-Wheel Drive Axle	145-16	Identification of Air-Conditioning Systems	145-67
Engine - 6110M to 6130M	145-18	Safety Note Regarding the Subsequent Installation of Electrical and Electronic Appliances and/or Components.....	145-67
Engine - 6145M	145-19	Carbon Dioxide Emissions (CO ₂)	145-68
PTO Power Output - 6110M to 6130M	145-20	Limited Battery Warranty	145-69
PTO Power Output - 6145M.....	145-20	Warranty on Tires	145-70
Transmission - 6110M to 6145M	145-21	Emissions Control System Certification Label	145-70
Hitch - 6110M to 6130M	145-22	EPA Non-road Emissions Control Warranty Statement—Compression Ignition.....	145-71
Hitch - 6145M	145-23	CARB Non-road Emissions Control Warranty Statement—Compression Ignition.....	145-73
Hydraulic System - 6110M to 6145M.....	145-24	Serial Numbers	
Capacities - 6110M to 6130M.....	145-25	Type Plates.....	150-1
Capacities - 6145M.....	145-27	Plate for Product Identification and Serial Numbers of Components	150-1
Oil Withdrawal - 6110M to 6145M	145-28	Plate for Product Identification Number	150-1
Loads and Weights - 6110M to 6130M.....	145-29	Engine serial number.....	150-2
		Transmission Serial Number	150-2

Continued on next page

	Page
Front Wheel Drive Serial Number.....	150-2
Open Operator's Station Serial Number.....	150-3
Operator's Cab Serial Number.....	150-3
Serial Number of Operator's Seat.....	150-3
Sub-Assembly Serial Numbers.....	150-4
Glossary	
Glossary.....	155-1
Change of Ownership	
Record of Changes of Ownership.....	160-1
Pre-delivery Inspection	
Service Procedure.....	165-1
Copy for owner.....	165-2
Copy for dealer.....	165-4
.....	165-6

Identification Views

Identification Views



LX234697

Tractor Shown with Operator's Cab and Additional Equipment

LX234697 — UN — 26JUN15



LX234698

Tractor Shown With Open Operator's Station and Additional Equipment

LX234698 — UN — 26JUN15

OULXA64.NA037A1 -19-08JUL15-1/1

Identification Views

Trademarks

Trademarks		Trademarks	
AutoPowr™	Trademark of Deere and Company	iTEC™ Basic	Trademark of Deere and Company
AutoPowr™/IVT™	Trademark of Deere and Company	iTEC™ Pro	Trademark of Deere and Company
AutoQuad™ II	Trademark of Deere and Company	IVT™	Trademark of Deere and Company
AutoQuad™ PLUS	Trademark of Deere and Company	IVT Selector™	Trademark of Deere and Company
AutoTrac™	Trademark of Deere and Company	JDLink™	Trademark of Deere and Company
Bio Hy-Gard™	Trademark of Deere and Company	JDOffice™	Trademark of Deere and Company
ClimaTrak™	Trademark of Deere and Company	John Deere	Trademark of Deere and Company
ComfortGard™	Trademark of Deere and Company	Oilscan™	Trademark of Deere and Company
ComfortGard Deluxe™	Trademark of Deere and Company	Parallel Tracking™	Trademark of Deere and Company
CommandARM™	Trademark of Deere and Company	Plus-50™	Trademark of Deere and Company
CommandCenter™	Trademark of Deere and Company	PowerTech™	Trademark of Deere and Company
CommandPRO™	Trademark of Deere and Company	PowerTech™ Plus	Trademark of Deere and Company
CommandQuad™	Trademark of Deere and Company	PowerZero™	Trademark of Deere and Company
COOL-GARD™	Trademark of Deere and Company	PowrQuad™	Trademark of Deere and Company
COOL-GARD II™	Trademark of Deere and Company	PowrQuad™ PLUS	Trademark of Deere and Company
CoolScan™	Trademark of Deere and Company	PowrReverser™	Trademark of Deere and Company
CoolScan PLUS™	Trademark of Deere and Company	Service ADVISOR™	Trademark of Deere and Company
Deere™	Trademark of Deere and Company	SERVICEGARD™	Trademark of Deere and Company
DieselScan™	Trademark of Deere and Company	StarFire™	Trademark of Deere and Company
FieldCruise™	Trademark of Deere and Company	StarFire™ iTC	Trademark of Deere and Company
Field Doc™	Trademark of Deere and Company	StellarSupport™	Trademark of Deere and Company
Field Office™	Trademark of Deere and Company	SyncroPlus™	Trademark of Deere and Company
GreenStar™	Trademark of Deere and Company	TLS™	Trademark of Deere and Company
Hy-Gard™	Trademark of Deere and Company	Tractor-Implement Automation™	Trademark of Deere and Company
ILS™	Trademark of Deere and Company	Triple Link Suspension™	Trademark of Deere and Company
iTEC™	Trademark of Deere and Company		


OULXA64,0003F82 -19-17OCT18-1/1

Safety

Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

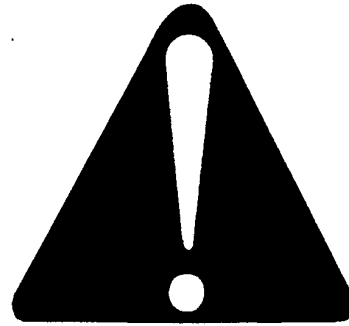

T81389 —UN—28JUN13

DX,ALERT -19-29SEP98-1/1

Understand Signal Words

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General



▲ WARNING

▲ CAUTION

precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

TS187 —19—30SEP88

DX,SIGNAL -19-05OCT16-1/1

Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

TS201 —UN—15APR13


DX,READ -19-16JUN09-1/1

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

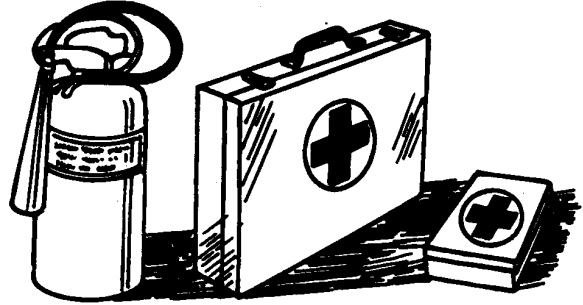


TS291 —UN—15APR13

DX,FIRE2 -19-03MAR93-1/1

Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

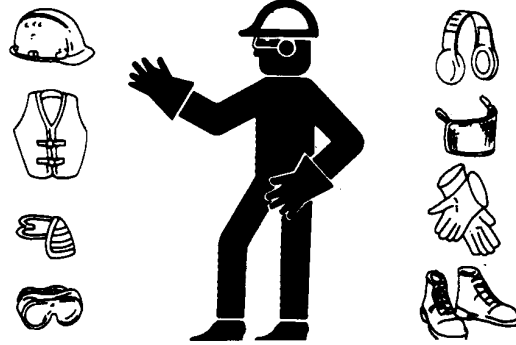

TS206 —UN—15APR13


DX,WEAR2 -19-03MAR93-1/1

Protect Against Noise

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

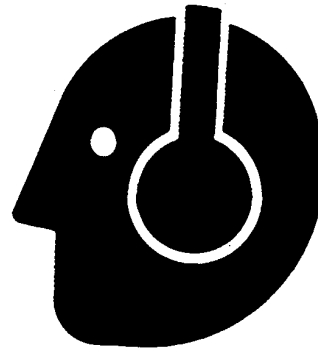

TS207 —UN—23AUG88

DX,NOISE -19-03OCT17-1/1

Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1 -19-12OCT11-1/1

TS202—UN—23AUG88

Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.



DX,FIRE3 -19-14MAR14-1/1

TS1356—UN—18MAR92

Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the

Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.

- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION -19-12OCT11-1/1

In Case of Fire

⚠ CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:



1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

TS227 —UN—15APR13

DX,FIRE4 -19-22AUG13-1/1


Avoid Static Electricity Risk When Refueling

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

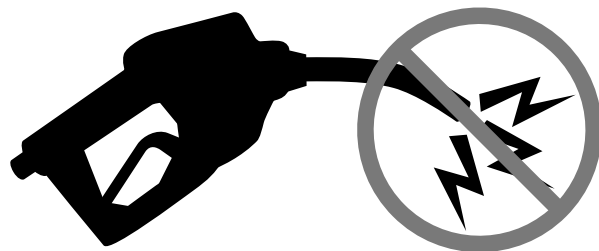

RG22142 —UN—17MAR14

RG21992 —UN—21AUG13

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1


Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

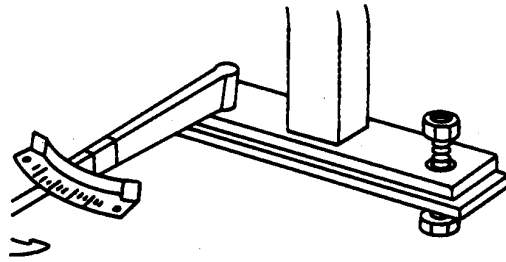


TS212 —JUN—23AUG88

DX,ROPS3 -19-12OCT11-1/1

Use Foldable ROPS and Seat Belt Properly

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. **USE** a seat belt when you operate with a ROPS in the fully extended position.
 - Hold the latch and pull the seat belt across the body.
 - Insert the latch into the buckle. Listen for a click.
 - Tug on the seat belt to make sure that the belt is securely fastened.
 - Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. **DO NOT USE** a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

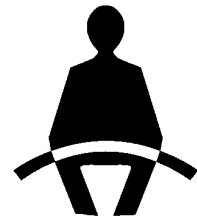

TS1729 —JUN—24MAY13

DX,FOLDROPS -19-22AUG13-1/1

Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.


Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.

Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

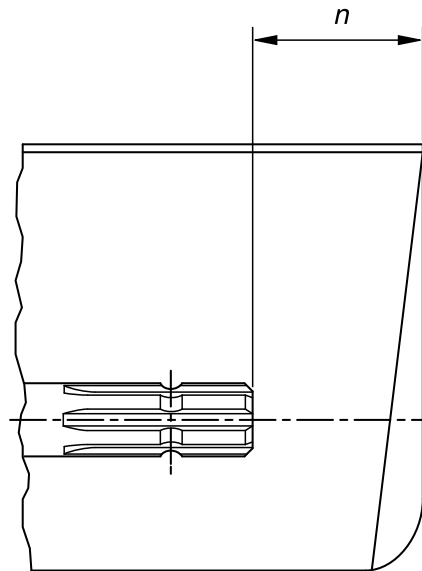

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO -19-28FEB17-1/1


TS 1644 —UN—22AUG95

H96219 —UN—29APR10

Use Steps and Handholds Correctly

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

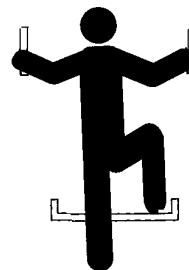

DX,WW,MOUNT -19-12OCT11-1/1

T 133468 —UN—15APR13

Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer.

GreenStar is a trademark of Deere & Company

Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

NOTE: ISOBUS refers to the ISO Standard 11783

DX,WW,ISOBUS -19-15JUL15-1/1

Use Seat Belt Properly


Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear,

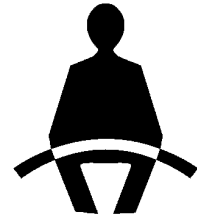

discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

TS1729 —UN—24MAY13

DX,ROPS1 -19-22AUG13-1/1

Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual brakes, or operating around hazards on rough ground or steep slopes.
- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.

- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor
- Crushing and pinching during hitching

DX,WWW,TRACTOR -19-08MAY19-1/1

Avoid Backover Accidents

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.



PC10857XW —JUN—15APR13

DX,AVOID,BACKOVER,ACCIDENTS -19-30AUG10-1/1

Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry

applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY -19-12OCT11-1/1

Operating the Loader Tractor Safely

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.


Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.

Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load

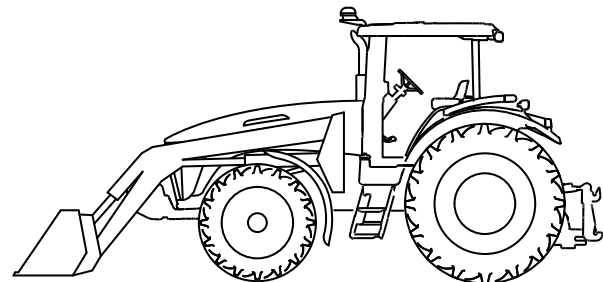

TS1692 —JUN—08NOV09

falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and clampers).


Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER -19-18SEP12-1/1

Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

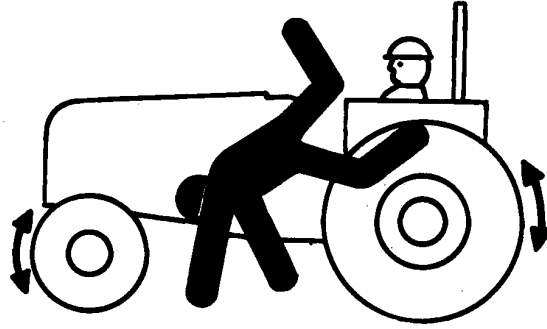


TS290 —UN—23AUG88

DX,RIDER -19-03MAR93-1/1

Instructional Seat

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

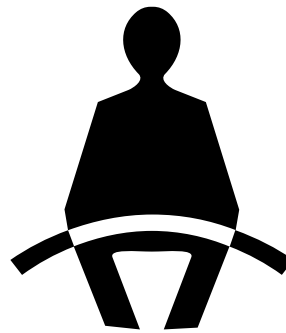


TS1730 —UN—24MAY13

DX,SEAT,NA -19-22AUG13-1/1

Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

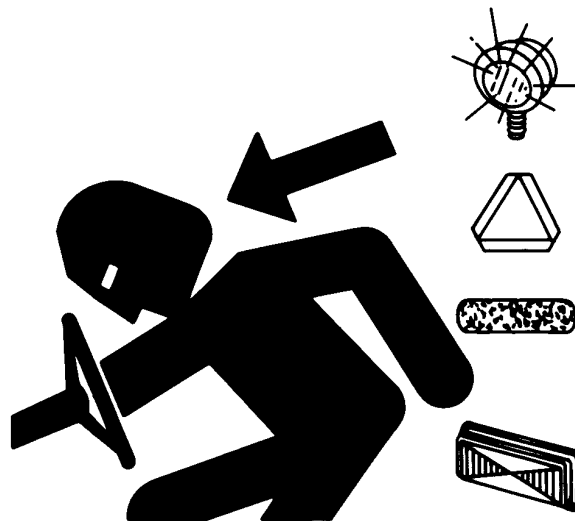

TS951 —UN—12APR90


DX,FLASH -19-07JUL99-1/1

Use a Safety Chain

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

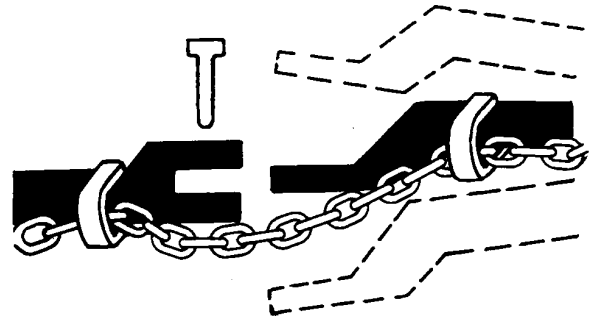

TS217—UN—23AUG88

DX,CHAIN -19-03MAR93-1/1

Transport Towed Equipment at Safe Speeds

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components


Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).

Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.

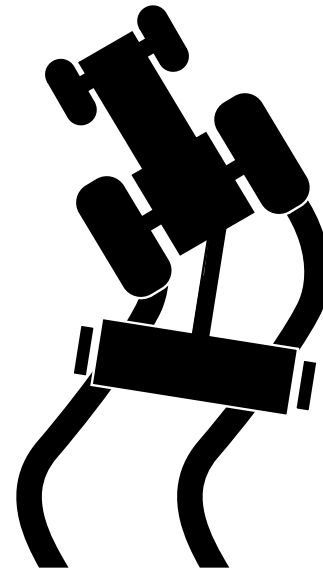

TS1686—UN—27SEP06

- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX,TOW1 -19-28FEB17-1/1

Use Caution on Slopes, Uneven Terrain, and Rough Ground

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.


Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in

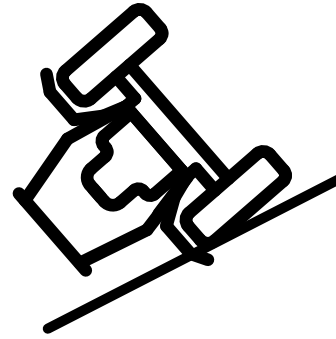

RXA0103437 —UN—01JUL09

Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE -19-28FEB17-1/1


Freeing a Mired Machine

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

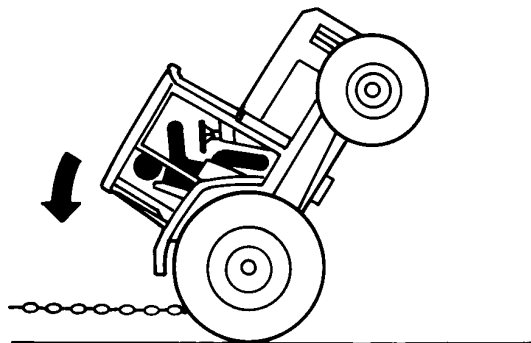

TS1645 —UN—15SEP95

TS263 —UN—23AUG88


DX,MIREDD -19-07JUL99-1/1

Avoid Contact with Agricultural Chemicals

This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

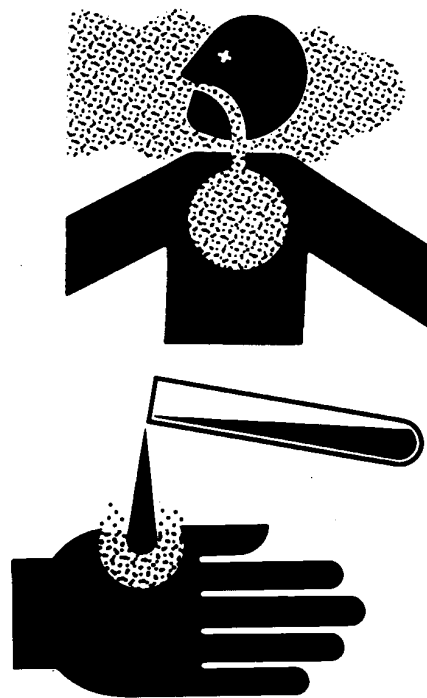

TS220—JUN—15APR13

TS272—JUN—23AUG88

DX,CABS -19-25MAR09-1/1


Handle Agricultural Chemicals Safely

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
 - Chemicals labeled **'Danger'**: Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
 - Chemicals labeled **'Warning'**: Less toxic. Generally require use of goggles, gloves, and skin protections.
 - Chemicals labeled **'Caution'**: Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.
- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.

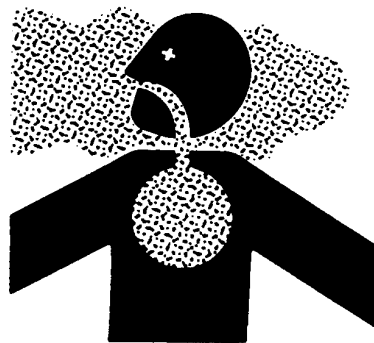

A34471

- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse empty containers and puncture or crush containers and dispose of properly.

DX,WW,CHEM01 -19-24AUG10-1/1

TS220 —UN—15APR13

A34471 —UN—11OCT88

Handling Batteries Safely

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.


If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**



TS204 —UN—15APR13

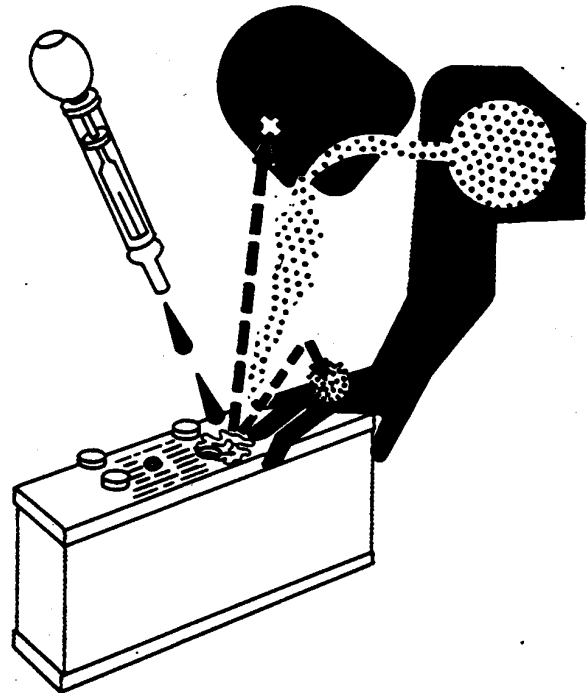

TS203 —UN—23AUG88

DX,WW,BATTERIES -19-02DEC10-1/1

Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.



TS953 —UN—15MAY90

DX,TORCH -19-10DEC04-1/1

Remove Paint Before Welding or Heating


Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

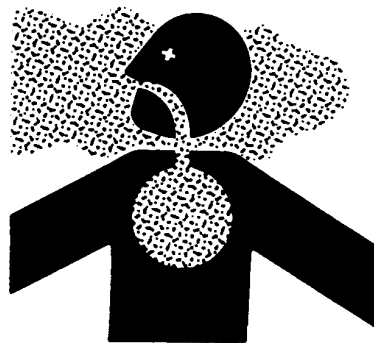

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220 —UN—15APR13

Handle Electronic Components and Brackets Safely

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.



DX,WW,RECEIVER -19-24AUG10-1/1

TS249 —UN—23AUG88

Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.




TS218 —UN—23AUG88

DX,SERV -19-28FEB17-1/1

Avoid Hot Exhaust

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

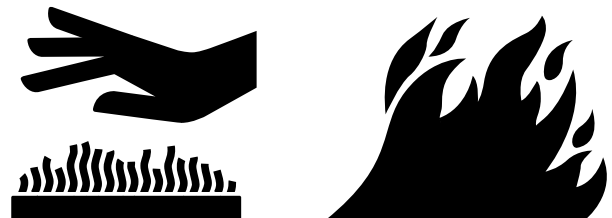

RG17488 —UN—21AUG09

DX,EXHAUST -19-20AUG09-1/1

Clean Exhaust Filter Safely

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.




If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine

Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

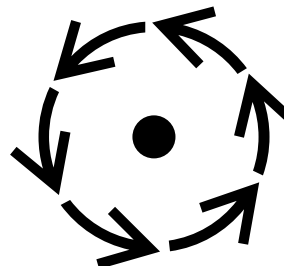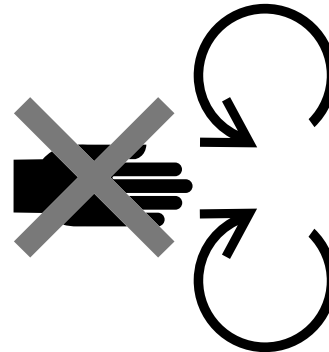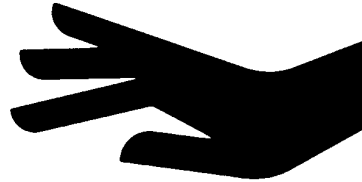

STOP

TS227 —UN—15APR13

TS271 —UN—23AUG88

TS1693 —UN—09DEC09


TS1695 —UN—07DEC09

DX,EXHAUST,FILTER -19-12JAN11-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

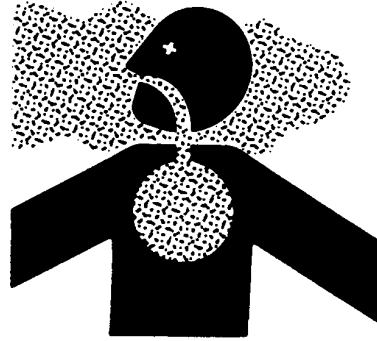

DX,AIR -19-17FEB99-1/1


TS220 —UN—15APR13

Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

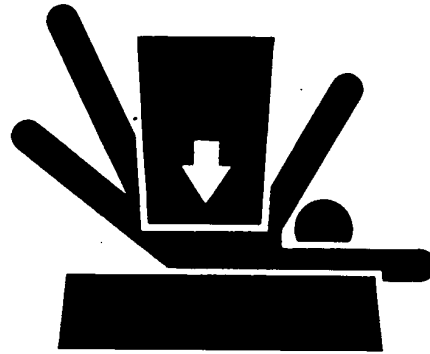

DX,LOWER -19-24FEB00-1/1


TS229 —UN—23AUG88

Prevent Machine Runaway

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

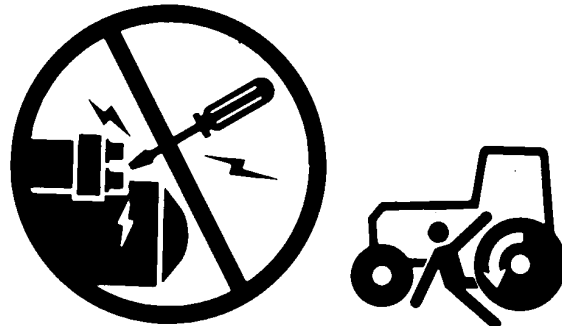


DX,BYPAS1 -19-29SEP98-1/1

TS177 —UN—11JAN89

Park Machine Safely

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

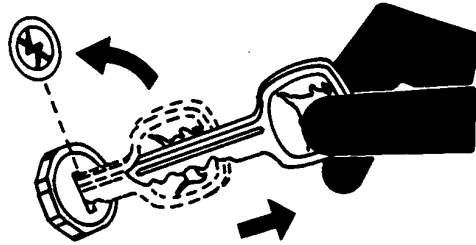

TS230 —UN—24MAY89


DX,PARK -19-04JUN90-1/1

Transport Tractor Safely

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

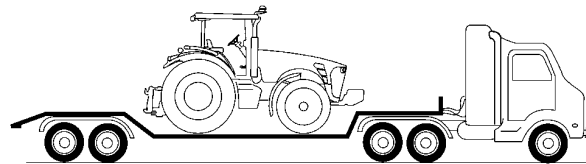

RXA0103709 —UN—01JUL09

DX,WW,TRANSPORT -19-19AUG09-1/1

Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.



TS281 —UN—15APR13

DX,WW,COOLING -19-19AUG09-1/1

Service Accumulator Systems Safely

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.



TS281 —UN—15APR13

DX,WW,ACCLA2 -19-22AUG03-1/1

Service Tires Safely

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.

When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.




RXA0103438 —UN—11JUN09

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS -19-28FEB17-1/1

Service Front-Wheel Drive Tractor Safely

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

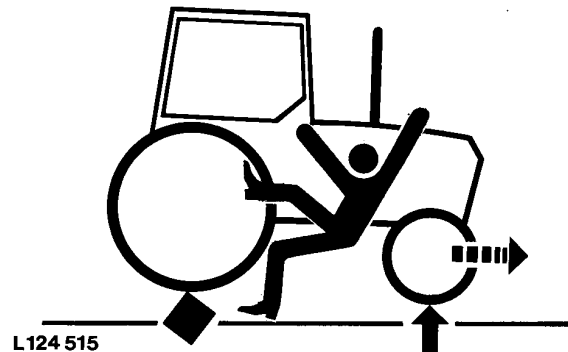


L124 515

L124515 —UN—06AUG94

DX,WW,MFWD -19-19AUG09-1/1

Tightening Wheel Retaining Bolts/Nuts

Torque wheel retaining bolts/nuts at the intervals specified in section Break-In Period and Service.

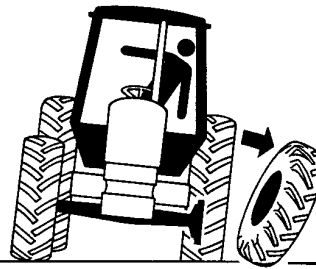

L124 516

L124516—UN—03JAN95

DX,WW,WHEEL -19-12OCT11-1/1

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.


Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

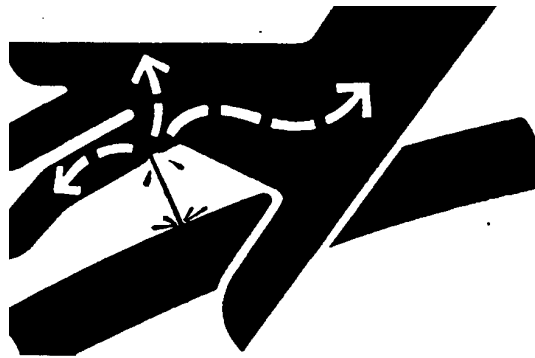

X9811—UN—23AUG88


with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID -19-12OCT11-1/1

Do Not Open High-Pressure Fuel System

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

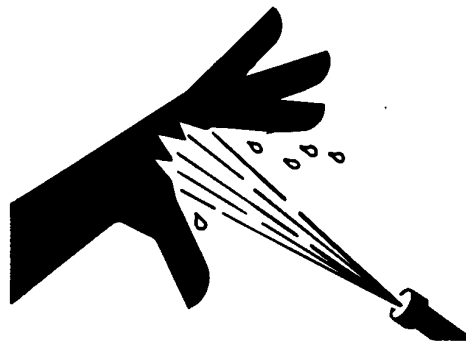

TS1343—UN—18MAR92

DX,WW,HPCR1 -19-07JAN03-1/1

Store Attachments Safely

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.




TS219—JUN—23AUG88

DX,STORE -19-03MAR93-1/1

Decommissioning — Proper Recycling and Disposal of Fluids and Components

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid);

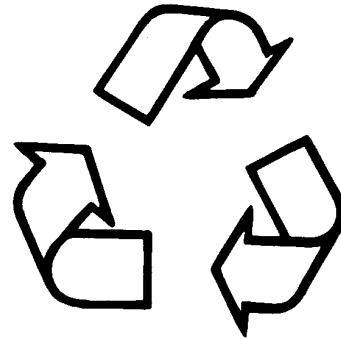


TS1133—JUN—15APR13

- filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
- Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
- Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN -19-01JUN15-1/1

Safety Decals

Use the Seat Belt

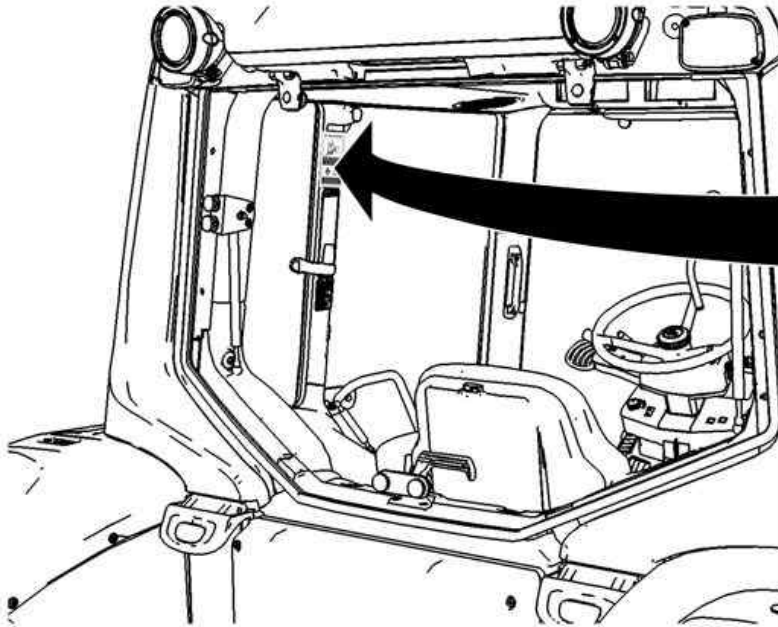

LX245289

⚠ WARNING



AVOID CRUSHING:

- Do not jump if machine tips.



USE SEAT BELT

- Pull belt fully from retractors and adjust for best protection.

LX245289 —19—17JUN15

OULXA64,00037B3 -19-17JUN15-1/1

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com