

**Carregadeira da Retroescavadeira 310K**

**PIN: 1T0310KX\_\_C219607—**

**PIN: 1T0310KX\_\_D219607—**



**JOHN DEERE**

## **CATÁLOGO DE PEÇAS**

**Carregadeira da Retroescavadeira 310K**

**(PIN: 1T0310KX\_\_C219607—)**

**(PIN: 1T0310KX\_\_D219607—)**

**PC11111P (Sep-12) Portugus**

**Worldwide Construction and Forestry Division**

Worldwide Edition  
Printed in U.S.A. (Revised)  
COPYRIGHT © 2012  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved



## Carregadeira da Retroescavadeira 310K

TX1105163 A.1



*Carregadeira da Retroescavadeira 310K*

*Motor 4045HT054, 4045TT096*

*(Fabricado em 2012- )*

*(Especificações e projeto estão sujeitos a alterações sem aviso prévio)*

## Ao Cliente

Os números de peça neste catálogo de peças estavam corretos quando o catálogo foi publicado. É nossa política melhorar constantemente nossas máquinas, portanto, os números de peça podem ser alterados. Ao fazer um pedido de peças, verifique os números de peça com seu concessionário.

## Unidades de Medida do SI

As dimensões métricas são fornecidas ao longo deste catálogo de peças, quando aplicável.

## Identificação de Resistência de Parafusos

Os parafusos necessários para se obter qualidade de alta-resistência equivalente a SAE grau 8 estão identificados neste catálogo pela descrição AR SAE 8 (10,9 para sistema métrico). Todos os parafusos padrão são SAE grau 5 (sistema métrico 8,8) ou inferior.

## Informações do Nº de Série do Motor

As informações sobre número de série são listadas para mostrar em quais máquinas cada peça pode ser utilizada, por exemplo:

	â	<b>Pode ser usada em todos os tipos de motor.</b>
<b>000000</b>	â	<b>A peça pode ser usada em produtos que começam com o número de série listado.</b>
	â <b>000000</b>	<b>A peça pode ser usada em produtos até (e incluindo) o número de série listado.</b>
<b>000000</b>	â <b>000000</b>	<b>A peça pode ser usada em produtos entre (e incluindo) os números de série listados.</b>

Quando XXXXXX é listado no lugar do número de série, uma alteração no número de série foi feita, porém o número de série exato não estava disponível quando o catálogo foi produzido.

Se os números de identificação dos produtos ou números de série forem necessários para requisições de garantia ou correspondência pertencentes a este produto, é extremamente importante informar todos os caracteres. Este ponto é crucial.

## Seta de Direção

As setas são utilizadas com as ilustrações para indicar a parte dianteira da unidade. As laterais “Direita” e “Esquerda” são determinadas olhando-se na direção do deslocamento de avanço da máquina.

Exceção: Para todas as peças da retroescavadeira, as laterais “Direita” e “Esquerda”, “Dianteira” e “Traseira” são determinadas quando sentado para operação da retroescavadeira.

## Ilustrações inclusas na caixa

Um número de legenda, mostrado na lista de peças, é atribuído a todas as peças inclusas nas caixas vendidas como conjunto de serviço. Uma caixa sem legenda inclui peças não atuais.

## Listas de Peças Completas

As Peças Completas estão listadas em negrito. Faça o pedido separadamente. Não inclua em pedidos de peças de reposição.

## Orientação do Motor

Os lados â Direitoâ e â Esquerdoâ são determinados com o usuário ao volante, voltado para o motor.

## Componentes John Deere Reman

As peças de serviço listadas neste catálogo se destinam ao reparo dos componentes originais do equipamento. Apesar de muitas peças de serviço poderem ser utilizadas no reparo de componentes remanufaturados, o processo de remanufatura pode alterar as peças de tal forma que as peças de serviço podem se tornar inadequadas ou inutilizáveis.

## Número de Identificação do Produto com 17 Dígitos

TX1105774 B.1



## TX1105774

 
Primeira Linha	Indica
1T0	Fabricante — John Deere Dubuque Works
310K	Modelo
X	Modelo da Máquina Base
0	Letra de Verificação (Uso Exclusivo da Fábrica Somente)
0	Código do Ano de Fabricação B: 2011 C: 2012 D: 2013 E: 2014
0	Nível de Emissões C: Estágio II D: Classe 3 / Estágio III A E: Interim Classe 4 / Estágio III B
123456	Número de Série (Exemplo)
Segunda Linha	Indica
CARREGADEIRA DA RETROESCAVADEIRA 310K	Tipo de Unidade

**Identificação do Nível de Emissões do Motor**

<b>Número do Modelo do Motor</b>	<b>PIN de 17 Dígitos (11º dígito)</b>	<b>Nível de Emissões</b>
4045HT063	xxxxxxxxxExxxxx	Interim Classe 4 / Estágio III B
4045HT054	xxxxxxxxxDxxxxx	Classe 3 / Estágio III A
4045TT096	xxxxxxxxxCxxxxx	Estágio II

## Identificação do Número de Série do Bloco Curto

RGP4460 A.1

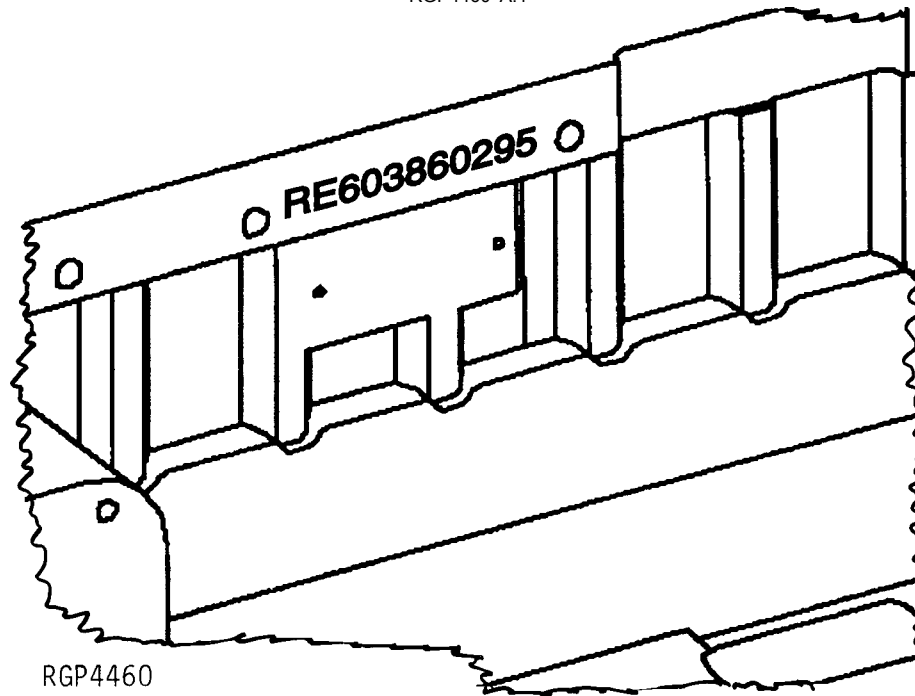


RGP4460

Número de série estampado na peça fundida do bloco perto da placa do número de série anterior.

- |            |                           |
|------------|---------------------------|
| 1. RE60386 | Número de Peça de Serviço |
| 2. 02      | Mês de Montagem           |
| 3. 95      | Ano de Montagem           |

## Placa do Número de Série do Motor — 4045 e 6068

 RGP11355 A.1

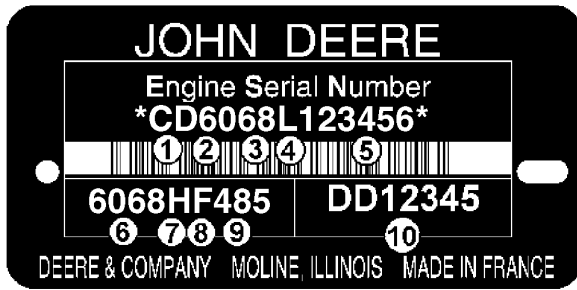

RGP11355

O Número de Série do Motor é Definido por 13 Caracteres	
Primeira Linha	Indica
1 — Duas letras para designação da fábrica do motor	PE: Torreón, México, CD: Saran, França, JX: Rosario, Argentina
2 — Um dígito para o número de cilindros.	4 Cilindros, 6 Cilindros
3 — Três dígitos para cilindradas em litros	045: 4.5 Litros, 068: 6.8 Litros
4 — Uma letra para o nível de emissão	B= Não Certificado C= Nível de emissão Classe 1/Estágio I G= Nível de emissão Classe 2/Estágio II L= Nível de emissão Classe 3/Estágio IIIA R= Nível de emissão Interim Classe 4/Estágio IIIB
5 — Seis dígitos	123456= Número sequencial de fabricação do motor. Os números sequenciais começam em 000001
O Tipo de Motor é Definido por 9 Caracteres Alfanuméricos	
6 — Quatro dígitos	Igual aos itens 2 e 3 acima
7 — Uma letra para o tipo de aspiração	A= Turbocomprimido com aftercooler ar-água D= Naturalmente Aspirado T= Turbocomprimido H= Turbocomprimido com aftercooler ar-ar S= Turbocomprimido com aftercooler ar-água marinha
8 — Uma ou duas letras para aplicação OEM	F: OEM, FM: Marítimo, FH: HazLoc, FN: Gás Natural Comprimido
8 — Uma ou duas letras para aplicação de Veículo John Deere	DW, KV: Construção, RW, LV, L, BM: Trator, TJ: Florestal, H, Z, CQ : Colheitadeira, N: Colhedora/Pulverizador, E: Enleiradeira
9 — Dois ou três dígitos para versão	485
10 — Duas Letras e 5 ou 6 dígitos para o Número de peça do motor	DD12345 (Motores Somente de Saran)



**Identificação do Nível de Emissões do Motor**

<b>Número do Modelo do Motor</b>	<b>PIN de 17 Dígitos (11º dígito)</b>	<b>Nível de Emissões</b>
4045HT063	xxxxxxxxxxExxxxxx	Interim Classe 4 / Estágio III B
4045HT054	xxxxxxxxxxDxxxxxx	Classe 3 / Estágio III A
4045TT096	xxxxxxxxxxCxxxxxx	Estágio II

## Placa do Número de Série do Eixo da TDM

TP19438 A.1

Zahnradfabrik Passau GmbH

Type 4 Serial No. 5

Parts List No. 3 Total Ratio/Version: 6 7

Oil 2 Ltri 9 List of Lubricants 8

TE-ML 8

TE-ML 8

TE-ML 8

Customer's Code No. 1

TP19438

1. Indica o número do código do cliente	Número de Peça da John Deere
2. Indica do tipo de lubrificante	M1L-L-2105B, SAE90
3. Indica o número na lista de peças ZF	4464 006 101
4. Indica o tipo de eixo	AP-11H
5. Indica o número de série do eixo	12345
6. Indica a relação total do eixo	20.28
7. Indica a versão	Sp. Diff. (com ou sem diferencial dotado de bloqueio automático)
8. Indica especificação do lubrificante	05
9. Indica capacidade	LTR (conjunto de transportador diferencial e engrenagens planetárias)

### Marcas comerciais

Ao longo deste catálogo de peças, você encontrará as seguintes marcas comerciais da Deere & Company:

Best Bid™	CounterParts™	DEERE™ (Deere™)
Dura-Trax™	Fanggs™	Guardian™
HTH™	Jagz™	JDLink™
MARKS™	MIC™ [Centro de Informações sobre a Máquina]	MTH™
Power Curve™	Powerllel™	PowerShift Plus™
Powerwize™	POWR SAVR™	PowrShift™
ProPath™	Quad-Cool™	Quik-Tatch™
SC-2™	Side-Tracker™	Stinger™
StructureALL™	Swamper™	TMC™ [Controle Total da Máquina]
ValueSelect™	Waratah™	Worksite Pro™
FlexBox™	Funk™	iTorque™
Phoenix™	Phoenix International™	PowerTech
PowerTech™ E	PowerTech™ M	PowerTech™ Plus
Precision Joint™	SHIFT-O-MATIC™	SWEDA™ (Eixo Duplo Extremo Super Largo)
TeamMate™	TeamMate™ II	TeamMate™ IV
TMII™	TMIII™	

### Observações e Abreviações

As seguintes observações e abreviações podem aparecer ao longo deste catálogo. Consulte a tabela a seguir para ver as traduções.

<b>Frase</b>	<b>Significado</b>	<b>Frase</b>	<b>Significado</b>
ALSO ORDER, ORD W/	Encomende Também	MFWD	Tração Dianteira Mecânica
AMP	Ampere	NA, NOT USED THIS APPL	Não Usado Nesta Aplicação
APPL, APPL ONLY	Somente nesta aplicação	NLA	Não está mais disponível
AR	Conforme necessário	NSEP	Não disponível separadamente
ASSY	Conjunto completo	OD	Diâmetro externo
BOAC	Borda de corte aparafusada	OPTIONAL	Opcional
CCW	Sentido anti-horário	OR	Ou
COMPLETE	Completo	ORD, ORDER	Encomendar
COMPLETE GOODS	Peças completas	OS	Tamanho Superior
CONVENIENCE ASSY, CA	Conjunto de conveniência	OUTER	Externo
CTL, CUT TO LENGTH	Cortar no comprimento correto	PKG, PACKG	Pacote, Pacote de
CW	Sentido Horário	PTO	Tomada de Potência
ENGINE	Motor	RATIO	Relação
FOR	Para	REAR	Traseira
FRONT	Dianteira	REMAN	Remanufaturado
GAS	Gasolina	REPL	Substitui
HFWD	Transmissão Dianteira Hidráulica	RH	Lado direito
HP	Cavalos de potência	SN	Número de série
HS, HEAD MARKED	Alta Resistência, cabeça marcada	STD	Padrão
ID	Diâmetro interno	SUB	Substituído por
INCH	Polegada	SUB COMPONENTS	Componentes substitutos (do kit ou conjunto)
INCL KEYS	Inclui chaves...	SUB FOR	Substituto para
INCL, INCLUDES	Inclui...	TEETH, Z	Número de dentes da engrenagem
INCLUDES PARTS/ ITEMS MARKED	Inclui peças/itens marcados...	TK	Espessura
INNER	Interno	UP, UPPER	Superior
KIT	Kit	US	Tamanho inferior
L	Número de elos	USE UNTIL EXHAUSTED	Use até esgotar
LF, LINE FILL	Enchimento da Linha	USE WITH	Usar com
LGP	Baixa Pressão no Solo	VEC	Controlador Eletrônico do Veículo
LGTH	Comprimento	VLC	Central de Carga do Veículo
LH	Esquerdo	W/	Com
LOW, LOWER	Inferior	W/O	Sem
LT	Esteira Longa	WHOLE GOODS	Pacotes de Produto
MAKE FROM, MF	Fabricação de	WT	Esteira Larga
MARKED	Marcado	XLT	Esteira Extra Longa
MATCHED SET	Conjunto correspondente		

## Conteúdo

01 Rodas e Pneus e Esteiras	
0110 Rodas Motorizadas, Pneus e Peças de Fixação .....	34
0120 Rodas Não Motorizadas, Pneus e Peças de Fixação .....	42
02 Eixos, Diferenciais e Sistemas de Suspensão	
0201 Carcaça e Suporte do Eixo de Acionamento .....	50
0210 Acionamento Cônico ou Diferencial .....	62
0225 Eixos e Juntas Universais do Acionamento de Entrada .....	64
0231 Eixo Fixo da Bitola .....	66
03 Transmissão	
0315 Controles .....	88
0325 Eixos e Juntas Universais do Acionamento de Entrada .....	92
0341 Carcaça, Tampas e Transmissões Completas .....	94
0342 Peças de Montagem da Transmissão .....	126
04A Motor	
0400A Motor 4045HT054 (RE545794) .....	128
04B Motor	
0400B Motor 4045TT096 .....	222
05 Sistema Auxiliar do Motor	
0505 Auxílios de Partida em Clima Frio .....	282
0510 Sistema de Arrefecimento do Motor .....	288
0512 Ventilador .....	300
0515 Controles de Rotação do Motor .....	310
0520 Sistema de Admissão .....	312
0530 Sistema de Escape Externo .....	316
0560 Sistemas Externos de Suprimento de Combustível .....	320
09 Sistema da Direção	
0962 Válvula e Controle da Direção .....	330
0963 Linhas, Mangueiras e Conexões da Direção .....	338
0965 Cilindros da Direção .....	342
10 Freios de Serviço	
1011 Elementos Ativos do Freio de Serviço .....	344
1062 Válvula do Freio de Serviço .....	346
1063 Ligações, Mangueiras e Conexões do Freio de Serviço .....	350
11 Freios de Estacionamento	
1111 Elementos Ativos do Freio de Estacionamento .....	356
1163 Articulação dos Controles .....	358
13 Diversos, Veículo	
1313 Ferramentas Manuais .....	360
1314 Suporte da Placa de Licença .....	362
1322 Etiquetas e Marcas Comerciais .....	366
1369 Graxas, Óleos, Combustíveis e Líquidos de Arrefecimento .....	382
16 Sistemas Elétricos do Veículo	
1671 Baterias, Suporte e Cabos .....	384
1672 Fiação do Alternador, Regulador e Sistema de Carga .....	402
1673 Sistema de Iluminação do Veículo .....	406
1674 Chicote Elétrico e Interruptores .....	412
1675 Controles do Sistema .....	452
1676 Instrumentos e Indicadores .....	492
17 Estrutura, Chassi ou Estrutura de Suporte	
1741 Motor ou Estrutura Principal .....	494
1746 Proteções Inferiores da Estrutura .....	496
1747 Amortecedores, Veículo .....	502

## Conteúdo - continuo

1749 Pesos do Chassi.....	506
<b>18 Estação do Operador</b>	
1807 Itens Especiais de Controle de Ruído .....	524
1810 Compartimento do Operador .....	528
1811 ROPS, FOPS, OPS ou Estrutura do Chassi.....	542
1812 Plataforma .....	560
1813 Laterais, Portas, Proteções e Envidraçamento do Corpo.....	568
1814 Para-brisas e Limpadores.....	570
1816 Instrumento e Estrutura de Montagem do Controle.....	580
1821 Assento e Cinto de Segurança .....	610
1830 Aquecimento e Ar Condicionado .....	616
1831 Aquecedor, Mangueiras e Controles .....	618
1832 Compressor e Acionamento do Sistema do Ar-condicionado .....	624
1833 Condensador, Evaporador e Linhas .....	632
<b>19 Chapa Metálica e Estilização</b>	
1910 Capô ou Compartimento do Motor .....	636
1913 Proteções Diversas.....	638
1921 Grade e Alojamento da Grade.....	640
1927 Para-lamas .....	650
<b>20 Segurança, Conveniência e Diversos</b>	
2001 Rádio .....	656
2002 Espelho.....	664
2003 Extintor de Incêndio.....	672
2004 Dispositivos de Advertência Incluindo Buzina e Alarme de Marcha de Ré .....	674
2007 Quebra Sol.....	678
2011 Manual Operacional de Armazenagem .....	682
2012 Kit do Cliente para Locação.....	684
<b>21 Sistema Hidráulico Principal do Veículo</b>	
2161 Bombas e Acionamentos Hidráulicos .....	686
2163 Linhas hidráulicas e Mangueiras .....	688
2164 Reservatório Hidráulico, Filtro e Resfriador.....	700
<b>26 Comunicação Global do Veículo</b>	
2601 Controlador de Comunicação .....	704
2602 Antenas e Cabos .....	708
2604 Peças de Fixação e Elementos de Fixação.....	712
<b>31 Carregadeira</b>	
3102 Caçamba (Incluindo Dentes) .....	714
3103 Garfos .....	732
3104 Acoplador do Acessório.....	736
3115 Articulação dos Controles .....	740
3143 Estrutura Móvel.....	744
3145 Articulação da Carregadeira de Caçamba.....	746
3162 Válvulas de Controle e de Retenção da Carga .....	748
3163 Linhas, Mangueiras e Conexões .....	774
3165 Cilindros Hidráulicos .....	790
3166 Função de Controle Automático .....	800
<b>33 Retroescavadeira e Escavadeira</b>	
3302 Caçamba com Dentes .....	802
3304 Escarificador .....	814
3315 Articulação dos Controles .....	820
3343 Estrutura Móvel.....	844
3344 Lança .....	854

---

**Conteúdo - contínuo**

3345	Ligação da Caçamba.....	858
3346	Braço da Caçamba.....	864
3348	Estabilizadores.....	872
3362	Válvulas de Controle e de Retenção da Carga.....	876
3363	Linhas, Mangueiras e Conexões.....	926
3365	Cilindros Hidráulicos.....	958
38	Garra	
3803	Mecanismo da Garra.....	970
3865	Cilindros Hidráulicos.....	976





## Índice alfabético

	Pgina		Pgina
1/4 Cab with Manual Controls	546	65B7 Turbocharger	270
1/4 Cab with Pilot Controls	548	65D1 Turbocharger	182
1118 Rocker Arm Cover	222	6698 Water Temperature Sensor - Plug	184, 272
114 kg (250 lbs.) Front Counterweight Kit	514	6710 Tachometer Switch and Wiring	274
1160 Rocker Arm Cover	128	6730 Sensors	186
120A Alternator	404	7699 Oil Pressure Switch - Plug	276
1229 Oil Filler Neck	130, 223	8702 Belt Tensioner	277
1302 Crankshaft Pulley	224	8727 Belt Tensioner	188
1328 Crankshaft Pulley	131	8822 Oil Filter	278
1428 Flywheel Housing	132, 225	8843 Engine Oil Filter	190
1502 Flywheel	133, 226	9801 Lift Straps	192, 279
16E3 Fuel Injection Pump	134	9901 Camshaft Kit	195, 200
16EY Fuel Injection Pump	228	9901 Connecting Rod Bearing Kit	211
1783 Air Inlet	136	9901 Connecting Rod Bearings, Undersized	212
17DZ Air Intake	230	9901 Crankshaft Bearing Kit	209, 210
18 in. and 30 in. Buckets, Backhoe Thumb Kit	972	9901 Cylinder Head Gasket Kit	204
18 in. Quick Coupler Bucket	810	9901 Engine Gasket Kit	202
18 in. Wide, 5.1 ft. <sup>3</sup> Heavy Duty Bucket	804	9901 Engine Overhaul Kit	206, 216
1903 Oil Pan	138, 232	9901 O-Ring Kit	193
2 Function Hydraulics, Loader, Right Side (204988 - )	776, 778	9901 Piston Liner Kit	198
2.18 m Long Auxiliary Cutting Edge, Loader	716	9901 Piston Ring Kit	196
2-Function Manual, Loader Controls	740, 742	9901 Rear Oil Seal	194
2-Lever Backhoe Console	602	9901 Replacement Engine	220, 280
2-Lever Backhoe Console with Extended Dipperstick and Auxiliary	604	9901 Service Kit Cylinder Head Bolts	205
2-Lever Fifth Function Pedal	826	9901 Service Kit, Injector Nozzle	208
2001 Water Pump Pulley	140, 234	9901 Short Block Assembly	218
204 kg (450 lbs.) Front Counterweight Kit	516	9901 Thrust Bearing	213, 214
2101 THERMOSTAT COVER	235		
2158 Thermostat Cover	141	A	
2201 Thermostat	236	A/C DIODE	88
2224 Thermostat	142	A/C SWITCH	88
24 in. Bucket, Backhoe Thumb Kit	970, 974	A/C WIRING HARNESS	88
24 in. Quick Coupler Bucket	812	ACCELERATOR ELECTRICAL	310
24 in. Wide 7.5 ft. <sup>3</sup> Heavy Duty Bucket	806	Accu-Swing Valve	924
24 in. Wide, 6.5 ft. <sup>3</sup> Standard Duty Bucket	802	ACCU-SWING VALVE KIT	924
2698 Engine Coolant Heater	143, 237	Accumulator Mounting Hardware, Ride Control	788
2816 Exhaust Manifold	238	Accumulator, Hydraulic, Ride Control	748
2893 Exhaust Manifold	144	Accumulator, Hydraulic, Ride Control Kit	750
2901 Ventilating System	239	Accumulator, Pilot Control Manifold (191461 - )	918
2915 Ventilation System	146	Activation Pin	382
2WD Front and Rear Rims, 11L-16 in. and 19.5L-24 in. Firestone	44	Actuator, Cab Console Covers with A/C	584
2WD Front and Rear Rims, 11L-16 in. and 19.5L-24 in. Goodyear	46	Adapter, Hydraulic Hammer Interface	862
2WD Front and Rear Rims, 11L-16 in. Goodyear and 16.9-28 in. Firestone	48	Adjustment Cable, Mechanical Suspension Seat, Cloth	610
2WD Transmission	94	Air Cleaner Element (Engine 4045HT054, 4045HT072)	312
30 in. Wide, 10 ft. <sup>3</sup> Heavy Duty Bucket	808	Air Cleaner Element (Engine 4045TT096)	314
30AT Starter Motor	148, 240	Air Conditioning And Heater Unit	634
310K Labels and Decals	366	Air Conditioning and Heating Ducts	632
340 kg (750 lbs.) Front Counterweight Kit	518	Air Conditioning Harness and Switch	616
35B9 Fuel Filter	150	Air Conditioning System	624, 628
35EQ FUEL FILTER	242	Air Conditioning Unit	626, 630
3612 Front Plate	152	Air Conditioning, Fan Package (Engine 4045HT054, 4045HT072)	306
3618 Front Plate	244	Air Duct, Cab Console Covers with A/C	584
3701 Fuel Transfer Pump	246	Air Duct, Heating and Air Conditioning	632
3799 Fuel Transfer Pump Cover	154	Air Filter (Engine 4045HT054, 4045HT072)	312
3924 Thermostat Housing	156	Air Filter Element (Engine 4045TT096)	314
3rd Function Lever	742	Air Filter, Heating and Air Conditioning Ducts	632
4-Function Backhoe Valve, Pilot with Flow Control	894	Air Filter, HVAC	634
4002 Engine Oil Dipstick	158, 247	Air Inlet-1783-4045HT054 (RE545794)	136
4429 Timing Gear Cover	248	Air Intake Gasket-17DZ-4045TT096	230
4446 Timing Gear Cover	160	Air Intake Hose-17DZ-4045TT096	230
4501 Balancer Shaft	162	Air Intake System (Engine 4045HT054, 4045HT072)	312
4502 Balancer Shaft	250	Air Intake System (Engine 4045TT096)	314
454 kg (1000 lbs.) Front Counterweight Kit	520	Air Intake-1783-4045HT054 (RE545794)	136
4614 Cylinder Block	252	Air Restriction Sensor (Engine 4045HT054, 4045HT072)	312
4643 Cylinder Block	164	Air Restriction Sensor (Engine 4045TT096)	314
4706 CRANKSHAFT / BEARINGS	254	AIR SUSPENSION SEAT SWITCH	88
4715 Crankshaft / Bearings	166	Air Temperature Sensor-6730-4045HT054 (RE545794)	186
48 in. Coupler Frame and Forks	732	ALARM, BACK-UP ALARM (S/N XXXXXX- ) (XXXXXX - )	676
4823 Connecting Rods and Pistons	256	ALARM, TRAVEL WARNING (S/N XXXXXX- ) (XXXXXX - )	676
4838 Connecting Rods and Pistons	168	ALTERNATE SWITCH PLACEMENT	88
4901 Rocker Arm / Rocker Arm Shaft / Push Rod	170, 258	Alternator 120A	404
5001 Oil Pump	172, 260	Alternator 90A	402
5102 CYLINDER HEAD AND VALVES	262	Alternator Fan 90A	402
5122 Cylinder Head	174	Alternator Mounting	266
567 kg (1250 lbs.) Front Counterweight Kit	522	Alternator Mounting Bracket-6282-4045HT054 (RE545794)	178
5738 Water Pump Inlet	176, 264	Alternator Pulley 90A	402
5954 Oil Cooler	177	AM/FM RADIO W/ WEATHERBAND (FACTORY)	656
5954 OIL COOLER	265	AM/FM RADIO W/ WEATHERBAND (FIELD KIT)	660
60 in. Coupler Frame and Forks	734	AM/FM Radio w/ Weatherband, Antenna and Speakers (Factory)	656
6282 Alternator Mounting	178	AM/FM Radio w/ Weatherband, Antenna and Speakers (Field Kit)	660
6282 ALTERNATOR MOUNTING	266	AM/FM/CD RADIO W/ WEATHERBAND (FACTORY)	658
63AA FUEL LINES	268	AM/FM/CD RADIO W/ WEATHERBAND (FIELD KIT)	662
63BC Low Pressure Fuel Lines	180		



## Índice alfabético - contínuo

	Pgina		Pgina
Bellcrank.....	758, 762	Brake Plumbing Clamps.....	352
Belt.....	304	Brake Valve.....	348
Belt Tensioner-8702-4045TT096.....	277	Brake Valve and Pedals.....	346
Belt, Fan (Engine 4045HT054, 4045HT072).....	306	Brake Valve Assembly.....	348
Belt, Fan (Engine 4045TT096).....	308	Brake Valve Boost Plumbing (ROPS).....	354
Belt, Seat.....	614	Brake Valve Housing.....	348
BEVEL GEAR, OPEN DIFFERENTIAL (MFWD).....	84	Brake Valve Kit.....	348
Block Heater, Engine.....	286	Brake Valve Push Rod.....	348
Block, Cylinder-4614-4045TT096.....	252	Brake, Parking, Plumbing.....	358
Block, Cylinder-4643-4045HT054 (RE545794).....	164	Brakes, Service.....	344
Block, Short, Assembly-9901-4045HT054 (RE545794).....	218	Breaker, Hydraulic Hammer Interface Adapter.....	862
BLOWER MOTOR PRESSURIZER.....	618	Breather.....	326
Blower Motor, HVAC.....	634	Bucket Coupler Bracket Kit.....	738
Blower Motor, HVAC Module (Heater Only).....	618	Bucket Cutting Edge 2.18 m.....	730
Bolts, Counterweight 204 kg (450 lbs).....	506	Bucket Cylinder (208446 - ).....	960
Bolts, Counterweight 340 kg (750 lbs).....	508	Bucket Cylinder Hydraulic Hoses, Lines and Fittings (Standard Dipperstick) (- 208445).....	938
Bolts, Counterweight 454 kg (1000 lbs).....	510	BUCKET CYLINDER HYDRAULICS, BACKHOE (- 208445).....	938
Bolts, Counterweight 567 kg (1250 lbs).....	512	BUCKET CYLINDER LINES, BACKHOE (- 208445).....	938
Boom Arm Lock, Loader.....	360	Bucket Cylinder, Backhoe (208446 - ).....	960
Boom Cylinder.....	958	Bucket Cylinder, Loader (202928 - ).....	790
BOOM CYLINDER HYDRAULIC HOSES.....	936	Bucket Hydraulics, Right Side, Loader, 2-Function (204988 - ).....	776
BOOM CYLINDER HYDRAULIC OIL LINES.....	936	Bucket Leveling Linkage.....	800
BOOM CYLINDER REPAIR KIT, BACKHOE.....	958	Bucket Linkage, Loader.....	746
Boom Cylinder Repair Kit, Loader.....	792	Bucket Links, Backhoe.....	858
BOOM CYLINDER, BACKHOE.....	958	BUCKET PIN.....	864
Boom Cylinder, Hydraulic Hoses and Fittings.....	936	BUCKET PINS, LOADER.....	714
Boom Lift Cylinder.....	792	Bucket Section.....	884
Boom Lift Cylinder Hardware.....	794	Bucket Section (Loader Valve).....	770
Boom Lock Handle, Backhoe.....	846	BUCKET SECTION ANTI-CAVITATION RELIEF.....	770
Boom Lock Lever and Linkage, Pilot Control.....	852	BUCKET SECTION RELIEF VALVE.....	770, 884
Boom Lock Lever and Linkage, Standard Control.....	850	BUCKET SECTION, BACKHOE VALVE.....	884
Boom lock Lever Boot, 1-Pedal.....	606	BUCKET SECTION, LOADER VALVE.....	770
Boom Lock Lever Boot, Pilot Control.....	608	Bucket Section, Pilot.....	900
Boom Lock Lever Console, 1-Pedal.....	606	BUCKET SPACER, SYNTHETIC.....	864
Boom Lock Lever Console, Pilot Controls.....	608	Bucket, Auxiliary Cutting Edge, Loader 2.18 m.....	716
Boom Lock Lever, Pilot Control.....	852	Bucket, Coupler, Multipurpose, 86 in.....	726
Boom Lock Lever, Standard Control.....	850	Bucket, Coupler, Multipurpose, 92 in.....	728
Boom Lock, Backhoe.....	846	Bucket, Heavy Duty, 24 in. Wide 7.5 ft <sup>3</sup> .....	806
Boom Protection Kit, Backhoe.....	856	Bucket, Loader 0.76 m <sup>3</sup> .....	718
Boom Protection Plate Kit.....	856	Bucket, Loader 0.96 m <sup>3</sup> .....	722
Boom Section.....	882	BUCKET, LOADER CONTROL VALVE.....	782
Boom Section (Loader / Stabilizer Valve).....	768	Bucket, MultiPurpose, Cylinder and Repair Kit.....	796
BOOM SECTION ANTI-CAVITATION RELIEF.....	768	BUCKET, PILOT SECTION RELIEF VALVE.....	900
BOOM SECTION RELIEF VALVE.....	768, 882	BUCKET, PILOT SECTION, BACKHOE VALVE.....	900
BOOM SECTION, BACKHOE VALVE.....	882	Bucket, Quick Coupler, 18 in.....	810
BOOM SECTION, LOADER VALVE.....	768	Bucket, Quick Coupler, 24 in.....	812
Boom Section, Pilot.....	898	Bucket, Standard Duty, 24 in. Wide, 6.5 ft <sup>3</sup> .....	802
BOOM STOP.....	936	BULB.....	528, 530
BOOM, BACKHOE.....	854	Bulb, Hazard Warning Lights (Cab Roof, Rear).....	532
BOOM, LOADER CONTROL VALVE.....	782	Bulkhead Guard, Engine.....	500
BOOM, PILOT SECTION RELIEF VALVE.....	898	Bumper Kit, Grille Frame.....	648
BOOM, PILOT SECTION, BACKHOE VALVE.....	898	Bumper, Front.....	504
Booster Kit.....	392	Bungy Strap, Fire Extinguisher Mounting Kit.....	672
Boot.....	384	Bushing.....	744
Boot, Backhoe Lock Lever, 1-Pedal.....	606	Bushing, Extendable Arm.....	868
Boot, Backhoe Lock Lever, Pilot Control.....	608	BUSHING, EXTENDIBLE ARM.....	870
Bottle, Windshield Washer.....	576	Bushing, Power Link Grease Kit.....	860
Bracket.....	352, 712	BUSHING, FRONT AXLE HOUSING (WITHOUT MFWD).....	68
Bracket Kit, Coupler Bucket.....	738	Bushings, Backhoe Bucket Links.....	858
BRACKET, ALTERNATOR.....	266	Bushings, Heavy Duty Bucket, 24 in. Wide, 7.5 ft <sup>3</sup> .....	806
Bracket, Alternator Mounting-6282-4045HT054 (RE545794).....	178	Bushings, Loader Bucket Linkage.....	746
Bracket, Exterior Rear View Mirror.....	668	Bushings, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Bracket, External Mirror.....	670	Bushings, Multipurpose Coupler Bucket, 86 in.....	726
BRACKET, FUEL FILTER (35EQ).....	242	Bushings, Multipurpose Coupler Bucket, 92 in.....	728
Bracket, Fuel Filter-35B9-4045HT054 (RE545794).....	150	Bushings, Standard Duty Bucket, 24 in. Wide, 6.5 ft <sup>3</sup> .....	802
Bracket, Hand Held Hydraulics.....	942	Button Plug.....	330
BRACKET, INTERIOR FRONT VIEW MIRROR.....	666	By Pass Tube-3924-4045HT054 (RE545794).....	156
BRACKET, INTERIOR REAR VIEW MIRROR (FRONT MOUNTED).....	664	Bypass Valve.....	688
BRACKET, LICENCE PLATE.....	362		
Bracket, License Plate.....	364	C	
Bracket, Oil Cooler (Engine 4045HT054).....	292	Cab (Manual Controls).....	542
Bracket, Oil Cooler (Engine 4045TT096).....	296	Cab (Pilot Controls).....	544
Bracket, Steering Hydraulic Lines, without MFWD.....	338	Cab Console Covers with A/C.....	584
Brackets, Front Fenders, W/ 16.5 in. Tire.....	650	Cab Console Covers, RH.....	590
Brackets, Front Fenders, W/ 19.5 in. Tire.....	652	Cab Floor Covers and Mats.....	560
Brackets, Left Hand Pilot Controller Arm.....	916	Cab Floor Covers and Mats, Pilot Controls.....	562
Brackets, Right Hand Pilot Controller Arm.....	914	Cab Fuse Box.....	418
Brackets, Steering Hydraulic Lines, with MFWD.....	340	Cab Glass.....	550
Brake Clutch.....	344	Cab Headliner With Radio.....	528
Brake Disc.....	344	Cab Headliner without Radio.....	530
Brake Pedals.....	346		
Brake Plumbing.....	350		

## Índice alfabético - continuado

<i>Página</i>	<i>Página</i>
Cab Heater .....	618
Cab Labels And Decals .....	368
Cab Mount .....	534
Cab RH Console Covers .....	590
Cab Right-hand Console Covers .....	590
Cab Roof .....	532
Cab Seals .....	536
Cab Seals, Manual Controls .....	540
Cab Seals, Pilot Controls .....	538
Cab Wiring Harness .....	414
Cab Wiring Harness Hardware .....	416
Cab, Rear Window .....	568
Cable, Operators Manual .....	684
Cable, Stabilizer Control .....	842
Camshaft Kit-9901-4045HT054 (RE545794) .....	195, 200
Camshaft-4643-4045HT054 (RE545794) .....	164
Canopy (Manual Controls) .....	556
Canopy (Pilot Controls) .....	558
Canopy Console Covers .....	588
Canopy Console Covers, RH .....	592
Canopy Floor Covers .....	564
Canopy Floor Covers and Mats, Pilot Controls .....	566
Canopy Fuse Box .....	424
Canopy Instrument Panel Console .....	582
Canopy Labels and Decals .....	370
Canopy Wiring Harness Connectors .....	420
Canopy Wiring Harness Hardware .....	422
Cap, Hub .....	450
Cap, Main Bearing-4614-4045TT096 .....	252
Cap, Radiator (Engine 4045HT054) .....	294
Cap, Radiator (Engine 4045TT096) .....	298
Cap, Windshield Washer Reservoir .....	576
Carling Switch .....	282
Carrier, Disc Brake .....	344
Carrier, Park Brake Clutch Disc .....	356
Case, Differential .....	60
CASE, OPEN DIFFERENTIAL (MFWD) .....	84
Center Cab Cover .....	594, 596
Center Panel .....	562, 564, 566
CHARGE PUMP, TRANSMISSION .....	120
Check Valve .....	756
Check Valve Assembly .....	756
Clamp .....	384, 388
Clamps, Brake Plumbing .....	352
Clutch Assembly, First Gear .....	110
Clutch Assembly, First Speed .....	110
Clutch Assembly, High Range Forward .....	108
Clutch Assembly, Low Range Forward .....	106
Clutch Assembly, Second Gear .....	112
Clutch Assembly, Second Speed .....	112
CLUTCH ASSEMBLY, MFWD .....	114
Clutch Disc, Park Brake .....	356
CLUTCH DISC, LIMITED SLIP DIFFERENTIAL (MFWD) .....	82
CLUTCH DISC, MFWD .....	114
Clutch Disk, High Range Forward .....	108
Clutch Disk, Low Range Forward .....	106
Clutch Disk, Transmission Input Shaft .....	104
Clutch, Disc Brake .....	344
CODE 35EQ FUEL FILTER .....	242
CODE 5954 OIL COOLER .....	265
CODE 63AA FUEL FILTER LINES .....	268
Cold Start Aid (Engines DT060/TT094) .....	284
COLD WEATHER STARTING AID (ENGINES DT060 /TT094) .....	284
COLD WEATHER STARTING AID SOLENOID (ENGINES DT060/TT094) .....	284
Column Cover .....	600
Column, Steering .....	330
Column, Tilt Steering .....	332
Complete Auxiliary Section, Backhoe .....	922
Complete Rear Axle and Differential Assembly .....	50
COMPLETE REAR AXLE ASSEMBLY .....	50
CONNECTING ROD AND PISTON-4823-4045TT096 .....	256
Connecting Rod Bearing Kit (Standard)-9901-4045HT054 (RE545794) .....	211
Connecting Rod Bearing-9901-4045HT054 (RE545794) .....	212
CONNECTING ROD-4823-4045TT096 .....	256
Connecting Rods And Pistons-4838-4045HT054 (RE545794) .....	168
Connecting Rods-4838-4045HT054 (RE545794) .....	168
Connector .....	282, 472
Connector Bracket without JDLINK™ .....	712
Connectors .....	414
Connectors, Canopy Wiring Harness .....	420
Console .....	590, 594, 596
Console Assembly, LH .....	586
Console Cover, Canopy .....	588, 592
Console Covers with A/C, Cab .....	584
Console Seal, Front .....	524
Console, 2-Lever, Backhoe .....	602
Console, Backhoe 2-Lever with Extended Dipperstick and Auxiliary .....	604
Console, Backhoe, 1-Pedal .....	606
Console, Backhoe, Pilot Control .....	608
Console, Front .....	526
Console, Instrument Panel, Canopy .....	582
Console, LH .....	586
Console, Right, Canopy .....	592
Control Harness .....	434
Control Kit, Selective Flow .....	906
Control Lever, Boom Lock, Pilot Control .....	852
Control Lever, Boom Lock, Standard Control .....	850
Control Lever, Transmission .....	90
Control Support .....	740, 742
Control Switch, Differential Lock .....	458
CONTROL VALVE LINKAGE, THREE LEVER, BACKHOE .....	822
CONTROL VALVE LINKAGE, BACKHOE, TWO LEVER .....	820
CONTROL VALVE, BACKHOE .....	876
Control Valve, Fourth Function, Backhoe .....	892
Control Valve, Fuel Injection Pump-16E3-4045HT054 (RE545794) .....	134
CONTROL VALVE, LOADER .....	782
CONTROL VALVE, PILOT, LEFT (S/N 172423- ) (172423 - ) .....	910
CONTROL VALVE, PILOT, RIGHT (S/N 172423- ) (172423 - ) .....	912
Control Valve, Thermostatic (Engine 4045HT054) .....	292
Control Valve, Thermostatic (Engine 4045TT096) .....	296
Control, Ride .....	748
Control, Ride Kit .....	750
Control, Stabilizer .....	842
Controller Arm, Pilot, Left Side .....	916
Controller Arm, Pilot, Right Side .....	914
Controller, Engine Tier 2 .....	454
Controller, JDLINK™ Modular Telematics Gateway .....	704
Controller, JDLINK™ Satellite Module .....	704
CONTROLLER, LEFT HAND VALVE (S/N 172423- ) (172423 - ) .....	910
CONTROLLER, RIGHT HAND VALVE (S/N 172423- ) (172423 - ) .....	912
Controller, Tier 3 Engine .....	452
CONTROLS, FOUR-LEVER STANDARD BACKHOE .....	824
CONVERSION, BACKHOE CONTROL LEVER LINKAGE (SAE PATTERN) .....	840
CONVERTER, TORQUE .....	102
Coolant Heater, Diesel Fired .....	328
Coolant Heater, Engine .....	286
Coolant Heater-2698-4045HT054 (RE545794) .....	143
Coolant Heater-2698-4045TT096 .....	237
Coolant Recovery Tank (Engine 4045HT054) .....	294
Coolant Recovery Tank (Engine 4045TT096) .....	298
Cooler Hydraulic Lines (Engine 4045HT054) .....	292
Cooler Hydraulic Lines (Engine 4045TT096) .....	296
Cooler Lines, Fuel (Engine 4045HT054, 4045HT072) .....	322
Cooler Lines, Hydraulic Oil (Engine 4045HT054) .....	292
Cooler Lines, Hydraulic Oil (Engine 4045TT096) .....	296
Cooler, Engine Oil (Engine 4045HT054) .....	292
Cooler, Engine Oil (Engine 4045TT096) .....	296
Cooler, Hydraulic Oil (Engine 4045HT054) .....	292
Cooler, Hydraulic Oil (Engine 4045TT096) .....	296
COOLER, OIL (5954) .....	265
Cooler, Oil (Engine 4045HT054) .....	292
Cooler, Oil (Engine 4045TT096) .....	296
Cooler, Oil-5954-4045HT054 (RE545794) .....	177
Cooling Package .....	626, 630
Cooling Package (Engine 4045HT054, 4045HT063, 4045HT072, 4045HT073) .....	288
Cooling Package (Engine 4045TT096) .....	290
Cord Assembly, Engine Coolant Heater .....	286
Core, Heater .....	618
Core, Heater, HVAC Module .....	618
Core, HVAC .....	634
Counterweight Bolts 340 kg (750 lbs.) .....	508
Counterweight Bolts, 204 kg (450 lbs.) .....	506
Counterweight Bolts, 454 kg (1000 lbs.) .....	510
Counterweight Bolts, 567 kg (1250 lbs.) .....	512
Counterweight Kit, Front, 114 kg (250 lbs.) .....	514
Counterweight Kit, Front, 204 kg (450 lbs.) .....	516
Counterweight Kit, Front, 340 kg (750 lbs.) .....	518
Counterweight Kit, Front, 454 kg (1000 lbs.) .....	520
Counterweight Kit, Front, 567 kg (1250 lbs.) .....	522
Coupler Bucket Bracket Kit .....	738
Coupler Cylinder, Front Loader .....	798
Coupler Kit, Hydraulic, Loader .....	736

## Índice alfabético - contínuo

Pgina	Pgina
Coupler Valve Components.....	756
Coupler, Auxiliary Plumbing, Loader.....	784
Coupler, Loader Hydraulics.....	752
COUPLER, LOADER, ELECTRICAL.....	468, 470
COUPLER, QUICK (STANDARD).....	814
COUPLER, QUICK (TOP LOCK).....	816
COUPLER, QUICK (UNIVERSAL).....	818
COUPLERS, AUGER.....	930
COUPLERS, AUGER (STANDARD DIPPERSTICK).....	928
Cover.....	560, 562, 564, 566, 590, 594, 740, 742
Cover, Front.....	502
Cover, Front Wheel Hub without MFWD.....	70
COVER, OIL FILL NECK-1229-4045HT054 (RE545794).....	130
COVER, OIL FILL NECK-1229-4045TT096.....	223
Cover, Rocker Arm-1118-4045TT096.....	222
Cover, Rocker Arm-1160-4045HT054 (RE545794).....	128
Cover, Starter Motor-30AT-4045HT054 (RE545794).....	148
Cover, Starter Motor-30AT-4045TT096.....	240
COVER, THERMOSTAT (2101) (TYC52).....	235
Cover, Thermostat-2158-4045HT054 (RE545794).....	141
Cover, Timing Gear-4429-4045TT096.....	248
Cover, Timing Gear-4446-4045HT054 (RE545794).....	160
Cover, Transmission Torque Converter.....	100
Cover, Valve-1160-4045HT054 (RE545794).....	128
Cover, Without Fuel Pump-3799-4045HT054 (RE545794).....	154
COVER, OPEN DIFFERENTIAL (MFWD).....	84
Covers, Canopy Interior.....	588, 592
Covers, Seat Belt.....	614
Covers, Tilt Steering Column.....	598, 600
CRANKSHAFT.....	254
Crankshaft Bearing Kit (Standard)-9901-4045HT054 (RE545794).....	209
Crankshaft Bearing Kit-9901-4045HT054 (RE545794).....	210
Crankshaft Bearings-4715-4045HT054 (RE545794).....	166
CRANKSHAFT GEAR.....	254
Crankshaft Position Sensor-6730-4045HT054 (RE545794).....	186
CRANKSHAFT PULLEY-1302-4045TT096.....	224
Crankshaft Pulley-1328-4045HT054 (RE545794).....	131
Crankshaft-4715-4045HT054 (RE545794).....	166
CROSS AND BEARING REAR DRIVESHAFT.....	92
CROWD CYLINDER.....	966
Crowd Cylinder and Repair Kit.....	966
CROWD CYLINDER REPAIR KIT.....	966
CROWD PIN.....	864
Crowd Section.....	886
CROWD SECTION RELIEF VALVE.....	886
CROWD SECTION, BACKHOE VALVE.....	886
CROWD SPACER, SYNTHETIC.....	864
CROWD, PILOT SECTION RELIEF VALVE.....	902
CROWD, PILOT SECTION, BACKHOE VALVE.....	902
Cup Hold, Cab Console Covers with A/C.....	584
Cup Holder, Rubber.....	586, 588
Cushions, Cloth Mechanical Suspension Seat.....	610
Cushions, Mechanical Suspension Seat, Vinyl.....	612
Cutting Edge, Auxiliary 2.18 m.....	716, 730
Cutting Edge, Heavy Duty Bucket, 24 in. Wide, 7.5 ft <sup>3</sup> .....	806
Cutting Edge, Loader Bucket 0.76 m <sup>3</sup> .....	718
Cutting Edge, Loader Bucket 0.86 m <sup>3</sup> (1.125 yd <sup>3</sup> ).....	720
Cutting Edge, Loader Bucket 0.96 m <sup>3</sup> .....	722
Cutting Edge, Loader Bucket 2.18 m.....	730
Cutting Edge, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Cutting Edge, Multipurpose Coupler Bucket, 86 in.....	726
Cutting Edge, Multipurpose Coupler Bucket, 92 in.....	728
Cutting Edge, Quick Coupler Bucket, 18 in.....	810
Cutting Edge, Quick Coupler Bucket, 24 in.....	812
Cutting Edge, Standard Duty Bucket, 24 in. Wide, 6.5 ft <sup>3</sup> .....	802
Cylinder.....	754
Cylinder Assembly, Thumb (207436 - ).....	976
Cylinder Block-4614-4045TT096.....	252
CYLINDER HEAD.....	262
Cylinder Head Bolts-9901-4045HT054 (RE545794).....	205
CYLINDER HEAD GASKET.....	262
Cylinder Head-5122-4045HT054 (RE545794).....	174
Cylinder Hydraulics, Stabilizer (208446 - ).....	952
Cylinder Pins, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Cylinder Pins, Multipurpose Coupler Bucket, 86 in.....	726
Cylinder Pins, Multipurpose Coupler Bucket, 92 in.....	728
Cylinder Pins, Stabilizer.....	964
Cylinder Pins, Thumb (207436 - ).....	976
Cylinder Plumbing, Standard Dipperstick Thumb (208446 - ).....	956
CYLINDER REPAIR KIT, BACKHOE BOOM.....	958
Cylinder Repair Kit, Backhoe Bucket (208446 - ).....	960
Cylinder Repair Kits, Stabilizer (208446 - ).....	962
Cylinder Seal Kit, Backhoe Bucket (208446 - ).....	960
Cylinder Seal Kit, Backhoe Hydraulic Thumb (207436 - ).....	978
Cylinder Seal Kit, Backhoe Thumb (207436 - ).....	978
CYLINDER, BACKHOE BOOM.....	958
Cylinder, Backhoe Bucket (208446 - ).....	960
CYLINDER, BACKHOE BUCKET HYDRAULICS ( - 208445).....	938
Cylinder, Backhoe Stabilizer Hydraulics (208446 - ).....	952
Cylinder, Backhoe Thumb (207436 - ).....	978
Cylinder, Backhoe Thumb Kit, 18 in. and 30 in. Buckets.....	972
Cylinder, Backhoe Thumb Kit, 24 in. Bucket.....	970, 974
Cylinder, Boom Lift.....	792
CYLINDER, CROWD.....	966
Cylinder, Extendable Dipperstick.....	868
CYLINDER, EXTENDIBLE DIPPERSTICK.....	870
CYLINDER, EXTENSION, HYDRAULICS, EXTENDIBLE DIPPERSTICK.....	940
Cylinder, Front Coupler.....	798
Cylinder, Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Cylinder, Loader Bucket (202928 - ).....	790
Cylinder, Multipurpose Bucket and Repair Kit.....	796
Cylinder, Stabilizer (208446 - ).....	962
Cylinder, Steering with MFWD - Repair Kit.....	342
Cylinder, Swing (203194 - ).....	968
CYLINDER, FRONT AXLE STEERING (WITHOUT MFWD).....	69
D	
Decal.....	326, 336, 382, 414, 424, 426, 430, 446, 530, 562, 566, 590, 594, 596, 638, 754, 758, 762
Decal, Gray Circle.....	586
Decal, Label.....	542, 544
Decals and Labels, 310K.....	366
Decals and Labels, 310K, Portuguese.....	376
Decals and Labels, Cab.....	368
Decals and Labels, Cab Only.....	378
Decals and Labels, Canopy.....	370
Decals and Labels, Canopy Only.....	380
Decals and Labels, French.....	372
Decals and Labels, Spanish.....	374
Deflector, Grille.....	642
Defrost.....	616
Defrost Control Switch.....	622
Delete Plug, Washer Switch.....	480
Deluxe Lights and Roof Harness.....	532
Diesel Fired Engine Coolant Heater.....	328
Differential and Rear Axle Housings.....	52, 54
Differential Case.....	60
Differential Case and Gears.....	60
DIFFERENTIAL CASE, LIMITED SLIP (MFWD).....	82
DIFFERENTIAL GEAR, LIMITED SLIP (MFWD).....	82
Differential Gears.....	60
Differential Housing, Rear.....	52
Differential Lock.....	462
Differential Lock Control Switch.....	458
Differential Lock Hoses.....	62
Differential Lock Plumbing.....	62
Differential Pinion Seal.....	356
Differential Pinion Seal, Rear.....	356
Differential Pinion Shaft.....	60
Differential Pressure Switch, Hydraulic Oil Filter.....	702
DIFFERENTIAL W/REAR AXLE ASSEMBLY.....	50
DIFFERENTIAL, LIMITED SLIP (MFWD).....	82
DIFFERENTIAL, OPEN (MFWD).....	84
Diode.....	420, 426
DIODE, A/C.....	88
DIPPERSTICK.....	864
Dipperstick Bucket Links.....	858
DIPPERSTICK EXTENDIBLE.....	870
DIPPERSTICK PIN.....	864
Dipperstick, Extendable.....	868
Dipperstick, Standard, Thumb Ready.....	866
Dipstick.....	94
Dipstick Tube.....	94
Dipstick, Oil-4002-4045HT054 (RE545794).....	158
Dipstick, Oil-4002-4045TT096.....	247
Disc Brake.....	344
Disc Brake Carrier.....	344
Disc Brake Clutch.....	344
Disc Brake Piston.....	344
Disconnect Hardware.....	394
Disconnect, Single Battery.....	396
Display, Fuel-Fired Coolant Heater.....	328

## Índice alfabético - contínuo

Pgina

Pgina

Door Assembly	552, 554
Door Cable, LH Console	586
Door Handle	552, 554
Door Latch	552, 554
Door Latch, LH Console	586
Door LH (Cab)	552
Door RH (Cab)	554
Double Positive Terminal	388
Drain Plug, Transmission	96
Drain Valve	382
Drain, Environmental	382
Drive Assembly, Fan (Engine 4045HT054)	302
Drive Assembly, Fan (Engine 4045TT096)	300
Drive Gear, Planetary	80
DRIVE SHAFT YOKE (MFWD)	72
DRIVE SHAFT, UNIVERSAL (MFWD)	72
Driveshaft (Mechanical Front Wheel Drive)	64
DRIVESHAFT (MFWD)	64
DRIVESHAFT, REAR	92
Dual Battery	388
Dual Battery Disconnect	398
Dual Battery Disconnect Kit	400
Dual Battery Negative Cable	390
Dual Battery Power Off Switch	398, 400
Dual Battery Power On Switch	398, 400
Dual Battery Switch Mounting Plate	398, 400
Dual Pressure Switch, HVAC	634
Ducts, Heater And Air Conditioning	632

## E

Elbow Fitting, Ventilation-2915-4045HT054 (RE545794)	146
Electrical Accelerator	310
ELECTRICAL ACCELERATOR	310
Electrical Load Center	426
ELECTRICAL LOADER COUPLER	468, 470
ELECTRONIC ETHER STARTING AID (ENGINES D T060/TT094)	284
Element, Fuel Filter-35B9-4045HT054 (RE545794)	150
Element, Hydraulic Oil Filter	702
ELEMENT TRANSMISSION OIL FILTER	122
EMU, Operator Interface	492
Enable Switch, Rear Wiper	578
Engine Air Inlet Restriction Sensor (Engine 4045HT054, 4045HT072)	312
Engine Air Inlet Restriction Sensor (Engine 4045TT096)	314
Engine Balancer Shaft-4501-4045HT054 (RE545794)	162
Engine Block Heater	286
Engine Bulkhead Guard	500
Engine Controller	452, 454
Engine Controller with Mounting, Tier2	454
Engine Coolant Heater	286
Engine Coolant Heater, Diesel Fired	328
Engine coolant heater-2698-4045TT096	237
Engine Gasket Kit-9901-4045HT054 (RE545794)	202
Engine Guard	496
Engine Harness	426
ENGINE MOUNT	126
Engine Mounting Supports	126
Engine Oil Cooler (Engine 4045HT054)	292
Engine Oil Cooler (Engine 4045TT096)	296
Engine Oil Cooler Lines (Engine 4045HT054)	292
Engine Oil Cooler Lines (Engine 4045TT096)	296
Engine Oil Filter Head-8822-4045TT096	278
Engine Oil Filter-8822-4045TT096	278
Engine Overhaul Kit-9901-4045HT054 (RE545794)	206, 216
Engine Sensors-6710-4045TT096	274
Engine Speed, Sensor-6730-4045HT054 (RE545794)	186
ENGINE SUPPORT	126
ENGINE SUPPORT ISOLATOR	126
Engine Wiring Harness	426, 430
Engine Wiring Harness Hardware	428, 432
Engine, Replacement-9901-4045HT054 (RE545794)	220
Engine, Service-9901-4045HT054 (RE545794)	220
Environmental Drain Kit	382
Euro Style Plug	448, 476, 478
Evaporator, HVAC	634
Exhaust Clamp (Engine 4045HT054, 4045HT072)	316
Exhaust Clamp (Engine 4045TT096)	318
Exhaust Manifold-2816-4045TT096	238
Exhaust Manifold-2893-4045HT054 (RE545794)	144
Exhaust Pipe (Engine 4045HT054, 4045HT072)	316
Exhaust Pipe (Engine 4045TT096)	318

Exhaust Pressure Sensor-2816-4045TT096	238
Exhaust Stack (Engine 4045HT054, 4045HT072)	316
Exhaust Stack (Engine 4045TT096)	318
Exhaust System with Black Stack (Engine 4045TT096)	318
Exhaust System, Black Stack, (Engine 4045HT054, 4045HT072)	316
EXHAUST VALVE	262
Exhaust Valve-5122-4045HT054 (RE545794)	174
Extendable Arm and Locking Pin	868, 870
Extendable Arm Locking Pin	868
Extendable Arm Pad	868
Extendable Arm Wearstrips	868
Extendable Dipper Pedal	826
Extendable Dipperstick	868
Extended Dipperstick and Auxiliary 2-Lever Backhoe Console	604
EXTENDIBLE ARM LOCKING PIN	870
EXTENDIBLE ARM PAD	870
EXTENDIBLE ARM WEARSTRIPS	870
EXTENDIBLE DIPPER PEDAL (PILOT CONTROL)	828
EXTENDIBLE DIPPERSTICK	870
EXTENDIBLE DIPPERSTICK AUXILIARY HYDRAULICS	934
EXTENDIBLE DIPPERSTICK EXTENSION CYLINDER HYDRAULICS	940
Extension Cylinder Hydraulics (Extendable Dipperstick) (Boom)	940
EXTENSION CYLINDER HYDRAULICS, EXTENDIBLE DIPPERSTICK	940
Exterior Mirror	668
Exterior Mirror Hardware	668
Exterior Mirror Kit	670
External Mirror	670
External Mirrors, Manual	668

## F

Fan Drive Assembly (Engine 4045HT054)	302
Fan Drive Assembly (Engine 4045TT096)	300
Fan Guard	392, 642
Fan Guard and Grille Support with Air Conditioning	644
Fan Guard and Grille Support without Air Conditioning	646
Fan Guard without Battery Disconnect	640
Fan Guard, Radiator (Engine 4045HT054)	294
Fan Guard, Radiator (Engine 4045TT096)	298
Fan Hub	304
Fan Hub (Engine 4045HT054, 4045HT072)	306
Fan Hub (Engine 4045TT096)	308
Fan Package with Air Conditioning (Engine 4045HT054, 4045HT072)	306
Fan Package with Air Conditioning (Engine 4045TT096)	308
Fan Package without Air Conditioning	304
Fan Pulley	304
Fan Pulley (Engine 4045HT054, 4045HT072)	306
Fan Pulley (Engine 4045TT096)	308
Fan Shroud and Hoses (Engine 4045HT054)	294
Fan Shroud and Hoses (Engine 4045TT096)	298
Fan Shroud, Radiator (Engine 4045HT054)	294
Fan Shroud, Radiator (Engine 4045TT096)	298
Fan, Alternator 90A	402
Fender Kit, Front, For 16.5 Tire	650
Fender Kit, Front, for 19.5 Tire	652
Fenders, Operator Station	654
FIFTH FN LEVER FOR THREE LEVER CONTROLS	832
FIFTH FUNCTION FOOT CONTROL	826, 830
Fifth Function Lever For Three Lever Controls Conversion Kit	832
Fifth Function Loader Valve	760, 764
Fifth Function Manual Valve Kit	908
Fifth Function Pedal	830
Fifth Function Pedal (Pilot Control)	828
Fifth Function Pedal, 2-Lever	826
Fifth Function Pedal, Manual Auxiliary	834
Fifth Function Pedal, Pilot Auxiliary	836
Fifth Function, Loader Valve Linkage	758, 762
Fifth Section Port Plugs	948
Fill Tube, Transmission Oil	96
FILLER CAP-1229-4045HT054 (RE545794)	130
FILLER CAP-1229-4045TT096	223
Filler Plug, Washer Switch	480
FILLER, OIL NECK-1229-4045HT054 (RE545794)	130
FILLER, OIL NECK-1229-4045TT096	223
Filter Element, Pilot Control (191461 - )	944
Filter, Air, HVAC	634
Filter, Engine Air Cleaner (Engine 4045HT054, 4045HT072)	312
Filter, Engine Air Cleaner (Engine 4045TT096)	314
Filter, Engine Oil-8822-4045TT096	278

## Índice alfabético - contínuo

Pgina	Pgina
FILTER, FUEL (35EQ).....	242
Filter, Fuel (Engine 4045HT054, 4045HT072).....	322
Filter, Fuel-35B9-4045HT054 (RE545794).....	150
Filter, Hydraulic Oil.....	702
Filter, Oil-8843-4045HT054 (RE545794).....	190
Final Fuel Filter (Engine 4045HT054, 4045HT072).....	322
Final Fuel Filter (Engine 4045TT096).....	320
Final Fuel Filter, Severe Duty (Engine 4045HT054).....	324
Fire Extinguisher Mount.....	672
Fire Extinguisher Mounting Kit.....	672
First Gear, Clutch Assembly.....	110
First Speed Clutch Assembly.....	110
Fittings and Hoses, Steering Hydraulics with MFWD.....	340
Fittings and Hoses, Steering Hydraulics without MFWD.....	338
Fittings, Brake Valve.....	348
FITTINGS, SWING CYLINDER.....	954
FLEXPLATE, TORQUE CONVERTOR.....	102
Floor Covers.....	560, 562, 564, 566
Floorplate.....	562, 566
Flow Adjustment, Backhoe Selective Flow Valve Section.....	890
Flow Control Kit, Selective.....	906
Flow Control Valve (191461 - ).....	944
FLUID, STARTING (ENGINES DT060/TT094).....	284
Flywheel-1502-4045HT054 (RE545794).....	133
Flywheel-1502-4045TT096.....	226
Foam, Front Console.....	526
Foam, Noise Reduction.....	526
FOOT CONTROL, FIFTH FUNCTION.....	826, 830
FOOT CONTROL, SIXTH FUNCTION.....	838
Foot, Stabilizer.....	874
Fork Carriage and Forks 48 in.....	732
Fork Carriage and Forks 60 in.....	734
Forks and Frame 48 in.....	732
Forks and Frame 60 in.....	734
Forks, Pallet 48 in.....	732
Forks, Pallet 60 in.....	734
Forward Clutch Assembly, High Range.....	108
Forward Clutch Assembly, Low Range.....	106
Four Lever Control Valve Linkage.....	824
Fourth Function Pilot, Backhoe Control valve.....	892
Frame and Forks 48 in.....	732
Frame and Forks 60 in.....	734
Frame guard.....	496, 498
Frame Guard, Transmission.....	498
Frame, Swing.....	844
French Labels And Decals.....	372
Front Axle.....	66
Front Axle (w/ MFWD).....	72
Front Axle Housing (MFWD).....	76
FRONT AXLE HOUSING (WITHOUT MFWD).....	68
Front Axle Housing and Tie Rods (w/ MFWD).....	76
Front Axle Housing Hubs, Shafts and Universal Joints (w/ MFWD).....	78
FRONT AXLE HUB (MFWD).....	78
FRONT AXLE INPUT PINION GEAR YOKE (W/MFWD).....	86
FRONT AXLE KING PIN (MFWD).....	78
FRONT AXLE LUBE HOSE(W/MFWD).....	72
Front Axle Pin.....	66
FRONT AXLE PIVOT PIN(W/MFWD).....	72
Front Axle Planetary Drive.....	80
FRONT AXLE RING GEAR AND PINION (W/MFWD).....	86
FRONT AXLE RING GEAR(W/MFWD).....	86
FRONT AXLE SPIRAL BEVEL INPUT PINION GEAR(W/MFWD).....	86
FRONT AXLE SWIVEL HOUSING (WITHOUT MFWD).....	69
Front Axle Tie Rod Assembly (MFWD).....	76
FRONT AXLE UNIVERSAL DRIVE SHAFT (MFWD).....	78
Front Axle with MFWD and Limited Slip.....	74
Front Axle without MFWD.....	66
Front Bumper.....	504
Front Console.....	336, 526
Front Console Foam.....	526
Front Console Gasket.....	524
Front Console Seal.....	524
Front Counterweight Kit, 114 kg (250 lbs.).....	514
Front Counterweight Kit, 204 kg (450 lbs.).....	516
Front Counterweight Kit, 340 kg (750 lbs.).....	518
Front Counterweight Kit, 454 kg (1000 lbs.).....	520
Front Counterweight Kit, 567 kg (1250 lbs.).....	522
Front Coupler Cylinder.....	798
Front Cover.....	502, 560, 562, 564, 566
Front Cover, Console, Canopy.....	588
Front Fender Kit W/ 16.5 in. Tire.....	650
Front Fender Kit W/ 19.5 in. Tire.....	652
Front Fenders W/ 16.5 in. Tire.....	650
Front Fenders W/ 19.5 in. Tire.....	652
Front Floor Mat.....	560, 562, 566
Front Horn.....	674
FRONT MOUNTED, REAR VIEW MIRROR.....	664
Front Plate-3612-4045HT054 (RE545794).....	152
Front Plate-3618-4045TT096.....	244
Front Rim 11L-16 in. and Rear Rim 19.5L-24 in. Firestone 2WD.....	44
Front Rim 11L-16 in. and Rear Rim 19.5L-24 in. Goodyear 2WD.....	46
Front Rim 11L-16 in. Goodyear and Rear Rim 16.9-28 in. Firestone 2WD.....	48
Front Rim 12-16.5 in. and Rear Rim 19.5L-24 in. Goodyear MFWD.....	34
Front Rim 12.5 X 80-18 in. and Rear Rim 19.5L-24 in. Firestone MFWD.....	38
Front Rim 12.5 X 80-18 in. and Rear Rim 21L-24 in. Firestone MFWD.....	40
Front Rim 305 X 70D16.5 in. and Rear Rim 19.5L-24 in. Firestone MFWD.....	36
Front Spiral Bevel Input Pinion and Ring Gear (w/ MFWD).....	86
Front Transmission Housing.....	100
FRONT VIEW MIRROR (REAR MOUNTED).....	666
FRONT VIEW MIRROR, INTERIOR.....	666
Front Wheel Bearings, without MFWD.....	70
Front Wheel Hub without MFWD.....	70
Front Windshield Wiper System.....	570
FRONT WIPER MOTOR.....	570
Fuel Cooler (Engine 4045HT054, 4045HT063, 4045HT072, 4045HT073).....	288
Fuel Cooler Hoses, Severe Duty Fuel Filter (Engine 4045HT054).....	324
Fuel Cooler Lines (Engine 4045HT054, 4045HT072).....	322
FUEL FILTER (35EQ).....	242
Fuel Filter (Engine 4045HT054, 4045HT072).....	322
Fuel Filter (Engine 4045TT096).....	320
Fuel Filter and Lines (Engine 4045HT054, 4045HT072).....	322
Fuel Filter and Lines (Engine 4045TT096).....	320
Fuel Filter and Lines, Severe Duty (Engine 4045HT054).....	324
FUEL FILTER BRACKET (35EQ).....	242
FUEL FILTER LINES (63AA).....	268
Fuel Hose (Engine 4045HT054, 4045HT072).....	322
Fuel Hose (Engine 4045TT096).....	320
Fuel Lift Pump Control Harness.....	434
Fuel Lift Pump Control Relay.....	434
Fuel Line, Diesel Fired Coolant Heater.....	328
Fuel Line-16EY-4045TT096.....	228
Fuel Lines and Filters (Engine 4045HT054, 4045HT072).....	322
Fuel Lines and Filters, Severe Duty (Engine 4045HT054).....	324
Fuel Lines, Low Pressure-63BC-4045HT054 (RE545794).....	180
Fuel Sender.....	326
Fuel System.....	326
Fuel Tank.....	326
Fuel Transfer Pump-3701-4045TT096.....	246
Fuel Tube (Engine 4045HT054, 4045HT072).....	322
Fuel Tube (Engine 4045TT096).....	320
Fuel Tube, Severe Duty (Engine 4045HT054).....	324
Full Coverage Front Fenders W/ 16.5 in. Tire.....	650
Full Coverage Front Fenders W/ 19.5 in. Tire.....	652
Fuse.....	418, 424, 426, 428, 430, 706
Fuse Box.....	414, 426, 446
Fuse Box, Cab.....	418
Fuse Box, Canopy.....	424
Fuse Panel Cover, Canopy.....	588
Fuse Panel, Cab Console Covers with A/C.....	584

## G

GAS PEDAL.....	310
Gasket Kit, Cylinder Head-9901-4045HT054 (RE545794).....	204
Gasket Kit, Engine-9901-4045HT054 (RE545794).....	202
Gasket, Air Intake-1783-4045HT054 (RE545794).....	136
Gasket, Air Intake-17DZ-4045TT096.....	230
Gasket, Front Console.....	524
Gasket, Oil Cooler-5954-4045HT054 (RE545794).....	177
GASKET, OIL FILLER NECK-1229-4045HT054 (RE545794).....	130
GASKET, OIL FILLER NECK-1229-4045TT096.....	223
Gasket, Oil Filter-8822-4045TT096.....	278
Gasket, Oil Pan-9901-4045HT054 (RE545794).....	204
Gasket, Rocker Arm Cover-1118-4045TT096.....	222
Gasket, Rocker Arm Cover-1160-4045HT054 (RE545794).....	128
GASKET, THERMOSTAT COVER (2101) (TYC52).....	235
Gasket, Turbocharger-65D1-4045HT054 (RE545794).....	182
Gaskets, Cab.....	536
Gaskets, Cab, Manual Controls.....	540
Gaskets, Cab, Pilot Controls.....	538

## Índice alfabético - contínuo

<i>Página</i>	<i>Página</i>
Gauge.....	492
Gear Timing Cover-4429-4045TT096.....	248
GEAR, CRANKSHAFT.....	254
Gear, Flywheel-1502-4045HT054 (RE545794).....	133
Gear, Flywheel-1502-4045TT096.....	226
Gear, Front Plate-3618-4045TT096.....	244
Gear, Fuel Injection Pump-16EY-4045TT096.....	228
Gear, Oil Pump-5001-4045HT054 (RE545794).....	172
Gear, Oil Pump-5001-4045TT096.....	260
GEAR, REAR AXLE PLANET.....	56
GEAR, SPIRAL BEVEL INPUT PINION FRONT AXLE(W/MFWD).....	86
Gears, Differential.....	60
Glass, Cab.....	550
Grease Kit, Power Link.....	860
Grille Frame.....	642
Grille Frame Bumper Kit.....	648
Grille Support and Fan Guard with Air Conditioning.....	644
Grille Support and Fan Guard without Air Conditioning.....	646
Grille, HVAC.....	634
Grommet, 1-Pedal Backhoe Console.....	606
GUARD.....	326, 496
Guard, Engine.....	496
Guard, Engine Bulkhead.....	500
Guard, Fan, without Battery Disconnect.....	640
Guard, Frame.....	498
Guard, Grille Frame.....	642
Guard, Oil Pan.....	496
Guard, Radiator Fan (Engine 4045HT054).....	294
Guard, Radiator Fan (Engine 4045TT096).....	298
Guard, Transmission.....	118, 498
H	
Half Clamp.....	352
Hammer Interface Adapter, Hydraulic.....	862
Hand Held Hydraulics.....	942
Handle, Backhoe Boom Lock.....	846
Handle, Seat Swivel.....	612
Handles, Rear Cab Window.....	568
Hardware, 120A Alternator.....	404
Hardware, 90A Alternator.....	402
Hardware, Cab Wiring Harness.....	416
Hardware, Canopy Wiring Harness.....	422
Hardware, Engine Wiring Harness.....	428, 432
Hardware, Exterior Mirrors.....	668
Hardware, Rear Window.....	568
Hardware, Ride Control Accumulator Mounting.....	788
Hardware, Transmission Wiring Harness.....	438
Harness with Deluxe Lights and Roof Wiring.....	532
Harness, Engine Wiring.....	430
Harness, Pattern Selector (191461 - ).....	918
HARNESS, PILOT ENABLE.....	456
Harness, Ride Control Wiring.....	442, 472
Harness, Selective Flow Wiring.....	444
Harness, Start Aid.....	282
HARNESS, WIRING, A/C.....	88
Hazard Light Switch.....	416, 422
Hazard Lights.....	532
HEAD, CYLINDER.....	262
Head, Cylinder-5122-4045HT054 (RE545794).....	174
Head, Engine Oil Filter-8822-4045TT096.....	278
Head, Oil Filter-8843-4045HT054 (RE545794).....	190
HEADER, TRANSMISSION OIL FILTER.....	122
Headliner.....	528, 530
Headliner without Radio, Cab.....	530
Heat Shield, Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Heater.....	618
Heater and Air Conditioning w/ Pressurizer.....	634
Heater Components And Pressurizer.....	618
Heater Core.....	618
Heater Core, Heater/Defroster.....	618
Heater Core, HVAC.....	618
Heater Element, Engine Coolant.....	286
Heater Plumbing.....	620
Heater, Coolant-2698-4045HT054 (RE545794).....	143
Heater, Engine Coolant.....	286
Heater, Engine Coolant-2698-4045TT096.....	237
Heating and Air Conditioning Ducts.....	632
Heavy Duty Bucket, 24 in. Wide, 7.5 ft <sup>3</sup> .....	806
Heavy Duty Bucket, 30 in. Wide, 10 ft <sup>3</sup> .....	808
Heavy Duty Bucket, 457 mm (18 in.) Wide, 0.14 m <sup>3</sup> (5.1 ft. <sup>3</sup> ).....	804
High Range Forward Clutch Assembly.....	108
Hinge.....	552, 554
Hinge, Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Hold-Down.....	384
Holder, Operator's Manual.....	682
Holder, Operators Manual.....	682
Holder, Swing Lock Pin.....	848
Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Hood Assembly (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Hood Guide (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Horn.....	674
Hose.....	692, 694, 696, 698
Hose Assembly.....	382
Hose Guide.....	336
Hose, Air Intake-17DZ-4045TT096.....	230
Hose, Service Brake.....	350
Hose, Turbocharger-65D1-4045HT054 (RE545794).....	182
Hose, Ventilation-2915-4045HT054 (RE545794).....	146
HOSES, ATTACHMENT KIT.....	926
Hoses, Differential Lock.....	62
HOSES, EXTENSION CYLINDER, EXTENDIBLE DIPPERSTICK.....	940
Hoses, Fuel Filter (Engine 4045HT054, 4045HT072).....	322
Hoses, Fuel Filter (Engine 4045TT096).....	320
Hoses, Heater.....	620
Hoses, Heater and Air Conditioning.....	634
Hoses, Hydraulic Loader Coupler Cylinder.....	736
Hoses, Loader 2 Function Hydraulics, Right Side (204988 - ).....	776
Hoses, Main Hydraulic Plumbing.....	688
Hoses, Radiator (Engine 4045HT054).....	294
Hoses, Radiator (Engine 4045TT096).....	298
Hoses, Severe Duty Fuel Filter (Engine 4045HT054).....	324
Hoses, Steering Hydraulic Lines, with MFWD.....	340
Hoses, Steering Hydraulic Lines, without MFWD.....	338
Housing.....	596
Housing, Brake Valve.....	348
Housing, Flywheel-1428-4045HT054 (RE545794).....	132
Housing, Flywheel-1428-4045TT096.....	225
Housing, Front Axle (MFWD).....	76
Housing, Heater and Air Conditioning.....	634
HOUSING, ORIFICE TRANSMISSION REAR.....	98
Housing, Park Brake.....	356
Housing, Rear Axle.....	52
Housing, Rear Transmission.....	96
HOUSING, SWIVEL, FRONT AXLE (WITHOUT MFWD).....	69
Housing, Transmission Front.....	100
Housing, Transmission Torque Converter.....	100
HOUSING, FRONT AXLE (WITHOUT MFWD).....	68
HOUSING, REAR AXLE.....	54
HOUSING, REAR DIFFERENTIAL.....	54
Housing-Thermostat-3924-4045HT054 (RE545794).....	156
Hub Cap.....	450
Hub, Front Wheel, without MFWD.....	70
HUB, FRONT AXLE (MFWD).....	78
HUB, REAR AXLE PLANETARY DRIVE.....	56
HVAC Cab Cover.....	590
HVAC Mode Door Switch.....	622
Hybrid Battery.....	384, 388
Hydraulic Accumulator, Ride Control.....	748
Hydraulic Accumulator, Ride Control Kit.....	750
Hydraulic Cylinder Seal Kit, Backhoe Thumb (207436 - ).....	978
Hydraulic Cylinder, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Hydraulic Cylinder, Multipurpose Coupler Bucket, 86 in.....	726
Hydraulic Cylinder, Multipurpose Coupler Bucket, 92 in.....	728
Hydraulic Front Coupler Cylinder, Loader.....	798
Hydraulic Hammer Interface Adapter.....	862
Hydraulic Hose.....	336, 688, 690, 692, 694, 696, 698, 754
Hydraulic Hose, 3-Function Loader, Right Side (204988 - ).....	778
Hydraulic Hose, Hand Held Hydraulics.....	942
Hydraulic Hose, Service Brake.....	350
HYDRAULIC HOSE, BOOM CYLINDER.....	936
HYDRAULIC HOSES FOR ATTACHMENT KIT.....	926
Hydraulic Hoses, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Hydraulic Hoses, Multipurpose Coupler Bucket, 86 in.....	726
Hydraulic Hoses, Multipurpose Coupler Bucket, 92 in.....	728
Hydraulic Hoses, Thumb Cylinder, Standard Dipperstick (208446 - ).....	956
Hydraulic Lines, Steering System with MFWD.....	340
Hydraulic Lines, Steering System without MFWD.....	338
Hydraulic Loader Coupler Field Kit.....	754



## Índice alfabético - contínuo

Pgina	Pgina
Hydraulic Loader Coupler Kit.....	736
Hydraulic Loader Solenoid Valve.....	752
Hydraulic Oil Cooler (Engine 4045HT054).....	292
Hydraulic Oil Cooler (Engine 4045TT096).....	296
Hydraulic Oil Cooler Lines (Engine 4045HT054).....	292
Hydraulic Oil Cooler Lines (Engine 4045TT096).....	296
Hydraulic Oil Filter.....	702
HYDRAULIC OIL LINE,BOOM CYLINDER.....	936
Hydraulic Oil Lines, Multipurpose Bucket 2.18 m (86.00 in.).....	724
Hydraulic Oil lines, Multipurpose Coupler Bucket, 86 in.....	726
Hydraulic Oil lines, Multipurpose Coupler Bucket, 92 in.....	728
Hydraulic Plumbing.....	688
Hydraulic Pump.....	686
Hydraulic Pump, Main.....	686
Hydraulic Reservoir.....	700
Hydraulic Thumb Cylinder (207436 - ).....	978
Hydraulic Thumb Cylinder Seal Kit (207436 - ).....	978
HYDRAULICS HOSE,SWING CYLINDER.....	954
HYDRAULICS, AUGER.....	930
HYDRAULICS, AUXILIARY EQUIPMENT, EXTENDI BLE DIPPERSTICK.....	934
HYDRAULICS, AUXILIARY EQUIPMENT,STD.....	932
HYDRAULICS, BACKHOE BUCKET CYLINDER ( - 208445).....	938
Hydraulics, Backhoe Stabilizer Cylinder (208446 - ).....	952
Hydraulics, Backhoe Swing Cylinder (203194 - ).....	968
HYDRAULICS, EXTENSION CYLINDER, EXTENDI BLE DIPPERSTICK.....	940
Hydraulics, Hand Held.....	942
Hydraulics, Loader Coupler.....	752
Hydraulics, Parking Brake.....	358
Hydraulics, Pilot Control (191461 - ).....	944
Hydraulics, Pilot Selector Valve (191461 - ).....	944
Hydraulics, Stabilizer Cylinder (208446 - ).....	952
Hydraulics, Steering.....	690
Hydraulics, Steering Hoses and Fittings with MFWD.....	340
Hydraulics, Steering Hoses and Fittings without MFWD.....	338
HYDRAULICS, STEERING VALVE.....	934
HYDRAULICS,AUGER (STANDARD DIPPERSTICK).....	328
HYDRAULICS,BRAKE VALVE BOOST (ROPS).....	354
I	
Idler Gears-3612-4045HT054 (RE545794).....	152
Idler Pulley.....	304
Idler Pulley (Engine 4045HT054, 4045HT072).....	306
Idler Pulley (Engine 4045TT096).....	308
Indicators.....	492
Injection Nozzle Kit-9901-4045HT054 (RE545794).....	208
Injection Nozzle-16E3-4045HT054 (RE545794).....	134
Injector Nozzle-16EY-4045TT096.....	228
Inlet Air-1783-4045HT054 (RE545794).....	136
Inlet Restriction Sensor, Engine Air (Engine 4045HT054, 4045HT072).....	312
Inlet Restriction Sensor, Engine Air (Engine 4045TT096).....	314
Inlet Section, Priority.....	880
Inlet, Water Pump-5738-4045HT054 (RE545794).....	176
Inlet, Water Pump-5738-4045TT096.....	264
Input Pinion Spiral Bevel, Rear.....	58
Input Shaft, Transmission.....	104
Input, Pinion Seal.....	356
INSIDE MIRROR (FRONT MOUNTED).....	664
Instrument Panel.....	416
Instrument Panel Console, Cab.....	580
Instrument Panel Console, Canopy.....	582
Instrument Panel, Canopy.....	422
Instruments.....	492
Intake System, Air (Engine 4045HT054, 4045HT072).....	312
Intake System, Air (Engine 4045TT096).....	314
INTAKE VALVE.....	262
Intake Valve-5122-4045HT054 (RE545794).....	174
Intake, Air-17DZ-4045TT096.....	230
Intercooler (Engine 4045HT054, 4045HT063, 4045HT072, 4045HT073).....	288
Interface Adapter, Hydraulic Hammer.....	862
Interior Covers, Canopy.....	588, 592
INTERIOR FRONT VIEW MIRROR.....	666
Interior Front View Mirror (Rear Mounted).....	666
Interior Light.....	528, 530
INTERIOR REAR VIEW MIRROR (FRONT MOUNTED ).....	664
Interior Rear View Mirror (Front Mounted).....	664
Isolator.....	534
ISOLATOR,ENGINE SUPPORT.....	126
Isolators, Operator Enclosure.....	534
J	
JDLink™ Modular Telematics Gateway.....	704
JDLink™ Modular Telematics Gateway (MTG) Antenna.....	708
JDLink™ Modular Telematics Gateway (MTG) Assembly.....	706
JDLink™ Modular Telematics Gateway and Satellite Module Controller.....	704
JDLink™ Satellite Module.....	704
JDLink™ Satellite Module (SAT) Antenna.....	710
John Deere Construction & Forestry Dealer Net.....	34
JOY STICK, CONTROL VALVE, LEFT (S/N 172423- ) (172423 - ).....	910
JOY STICK, CONTROL VALVE, RIGHT (S/N 172423- ) (172423 - ).....	912
Jump Start Cable.....	392
Jump Start Kit.....	392
K	
KING PIN, FRONT AXLE (MFWD).....	78
KINGPIN, FRONT AXLE (WITHOUT MFWD).....	69
Kit Camshaft-9901-4045HT054 (RE545794).....	200
KIT, ACCU-SWING VALVE.....	924
KIT, ATTACHMENT PLUMBING KIT.....	926
KIT, BACKHOE BOOM CYLINDER REPAIR.....	958
Kit, Backhoe Boom Protection.....	856
Kit, Backhoe Bucket Cylinder Repair (208446 - ).....	960
Kit, Backhoe Thumb, 18 in. and 30 in. Buckets.....	972
Kit, Backhoe Thumb, 24 in. Bucket.....	970, 974
Kit, Beacon Wiring.....	408
kit, Brake Valve.....	348
Kit, Connecting Rod Bearing (Standard)-9901-4045HT054 (RE545794).....	211
Kit, Coupler Bucket Brackets.....	738
Kit, Crankshaft Bearing (Standard)-9901-4045HT054 (RE545794).....	209
Kit, Crankshaft Bearing-9901-4045HT054 (RE545794).....	210
Kit, Cylinder Head Bolts-9901-4045HT054 (RE545794).....	205
KIT, FIFTH FUNCTION MANUAL VALVE.....	908
Kit, Front Coupler Cylinder Repair.....	798
Kit, Front Fender, For 16.5 Tire.....	650
Kit, Front Fender, For 19.5 Tire.....	652
Kit, Fuel-Fired Coolant Heater.....	328
Kit, Hand Held Hydraulics.....	942
Kit, Injector Nozzle-9901-4045HT054 (RE545794).....	208
Kit, Loader Bucket Repair (202928 - ).....	790
Kit, Loader Hydraulic Coupler.....	736
Kit, O-Ring-9901-4045HT054 (RE545794).....	193
Kit, Operators Manual Tether.....	684
Kit, Overhaul, Engine-9901-4045HT054 (RE545794).....	216
Kit, Pattern Selector Valve (191461 - ).....	918
Kit, Piston Ring-9901-4045HT054 (RE545794).....	196
Kit, Power Link Grease.....	860
Kit, Rotating Beacon.....	410
Kit, Seal, Multipurpose Bucket Cylinder.....	796
Kit, Selective Flow Control.....	906
KIT, SIXTH FUNCTION MANUAL VALVE.....	909
Kit, Steering Cylinder with MFWD.....	342
Kit, Strobe Beacon.....	406
Kit, Sun Visor.....	680
KIT, THIRD FUNCTION LOADER CONTROL.....	780
KIT, UNIVERSAL DRIVE SHAFT (MFWD).....	72
Kit, Wheel Spacer.....	42
Kit, Windshield Washer.....	576
KIT,BACKHOE THREE LEVER CONTROL VALVE CONVERSION KIT.....	822
KIT,BACKHOE TWO LEVER CONVERSION.....	820
KIT,CROWD CYLINDER REPAIR.....	966
KIT,SAE BACKHOE CONTROL LINKAGE PATTERN.....	840
Kits, Boom Lift Cylinder.....	792
Kits, Stabilizer Cylinder Repair (208446 - ).....	962
Knob.....	742
KNOB, TEMPERATURE CONTROL.....	88
L	
Label.....	326, 336, 382, 414, 424, 426, 430, 446, 530, 562, 566, 590, 594, 596, 638, 754, 758, 762
Label, Boom Lock with Pilot Control.....	852
Label, Decal.....	542, 544

## Índice alfabético - contínuo

	<i>Página</i>		<i>Página</i>
Label, Fifth Function Pedal.....	826	Linkage, Fifth Function Pedal.....	826
Label, Gray Circle.....	556, 558, 586	Linkage, Fifth Function Pedal, Manual Auxiliary.....	834
Label, ROPS.....	556, 558	Linkage, Fifth Function Pedal, Pilot Auxiliary.....	836
Label, Worksite Pro.....	810, 812	LINKAGE, FOUR-LEVER CONTROL VALVE, STANDARD BACKHOE.....	824
Labels and Decals.....	366	Linkage, Loader Bucket.....	746
Labels and Decals, Cab.....	368	LINKAGE, TWO LEVER BACKHOE CONTROL VALVE.....	820
Labels and Decals, Canopy.....	370	LINKAGE, THIRD FUNCTION LOADER CONTROL VALVE.....	780
Labels and Decals, French.....	372	Links, Backhoe Bucket.....	858
Labels and Decals, Portuguese.....	376	Load Coupler Chassis Harness.....	754
Labels and Decals, Portuguese, Cab.....	378	LOAD SENSE RELIEF VALVE.....	766
Labels and Decals, Portuguese, Canopy.....	380	Loader Arm Service Lock.....	360
Labels and Decals, Spanish.....	374	Loader Auxiliary Plugs.....	786
LABELS, ANTI-THEFT.....	468, 470	Loader Boom Cylinder Repair Kit.....	792
Lamp.....	530	Loader Bucket 0.76 m <sup>3</sup> .....	718
Latch, Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636	Loader Bucket 0.86 m <sup>3</sup> (1.125 yd <sup>3</sup> ).....	720
Left Hand Pilot Controller Arm.....	916	Loader Bucket 0.96 m <sup>3</sup> .....	722
Left Operator Station Fender.....	654	Loader Bucket Auxiliary Cutting Edge 2.18 m.....	716
Leveling Linkage, Bucket.....	800	Loader Bucket Cutting Edge 2.18 m.....	730
Lever Base Insert.....	740, 742	Loader Bucket Cylinder (202928 - ).....	790
Lever Boot, Boom Lock, 1-Pedal.....	606	LOADER BUCKET CYLINDER PINS.....	714
LEVER CONVERSION LINKAGE, BACKHOE (SAE PATTERN).....	840	Loader Bucket Cylinder Repair Kit (202928 - ).....	790
Lever, Boom Lock, Pilot Control.....	852	Loader Bucket Cylinder, Seal Kit (202928 - ).....	790
Lever, Boom Lock, Standard Control.....	850	LOADER BUCKET LINK PINS.....	714
LEVER, FIFTH FN FOR THREE LEVER CONTROLS.....	832	Loader Bucket Linkage.....	746
LEVER, FOUR-LEVER CONTROLS, STANDARD BACKHOE.....	824	Loader Bucket Pins.....	714
Lever, Stabilizer Control.....	842	Loader Bucket, Hydraulic Cylinder (202928 - ).....	790
LEVER, THIRD FUNCTION LOADER CONTROL.....	780	Loader Bucket, Multipurpose 2.18 m (86.00 in.).....	724
LEVER, THREE, BACKHOE CONTROL VALVE.....	822	Loader Control Cover, Canopy.....	588
Lever, Transmission Control.....	90	Loader Control Knob.....	740, 742
LH Console Cup Holder.....	586	Loader Control Sphere.....	740, 742
LH Console Door Cable.....	586	Loader Control Valve.....	782
LH Console Door Latch.....	586	Loader Controls, 2-Function Manual.....	740
LH Pilot Controller.....	916	Loader Controls, 3-Function Manual.....	742
LICENCE PLATE BRACKET.....	362	Loader Coupler Auxiliary Plumbing.....	784
LICENCE PLATE LIGHT.....	362	Loader Coupler Cylinder.....	736
License Plate Bracket.....	364	LOADER COUPLER ELECTRICAL.....	468, 470
License Plate Lamp and Bracket.....	362	Loader Coupler Electrical and Anti-Theft.....	468, 470
Lift Arm Assembly.....	744	Loader Coupler Hydraulics.....	752
Lift Arm Cylinder, Loader Boom.....	792	Loader Coupler Kit, Hydraulic.....	736
Lift Arm, Loader.....	744	Loader Coupler Solenoid Valve.....	752
Lift Straps-9801-4045HT054 (RE545794).....	192	Loader Coupler Switch Plug.....	490
Lift Straps-9801-4045TT096.....	279	Loader Coupler Wiring Harness.....	440, 464
Light Switch.....	416, 422	Loader Coupler, Hydraulic, Field Kit.....	754
LIGHT, LICENCE PLATE.....	362	Loader Hoses, 2-Function, Right (204988 - ).....	778
Lights, Deluxe, and Roof Harness.....	532	Loader Lever.....	740, 742
LIMITED SLIP DIFFERENTIAL (MFWD).....	82	Loader Lift Arm.....	744
Limited Slip Differential (w/ MFWD).....	82	Loader Lift Arm Cylinder.....	792
LIMITED SLIP DIFFERENTIAL CASE (MFWD).....	82	LOADER LIFT ARM CYLINDER HARDWARE.....	794
LIMITED SLIP DIFFERENTIAL CLUTCH DISC (MFWD).....	82	Loader Linkage.....	758, 762
LIMITED SLIP DIFFERENTIAL SHAFT (MFWD).....	82	Loader Plumbing, 2-Function Right Side (204988 - ).....	776
Limited Slip Front Axle with MFWD.....	74	Loader Plumbing, 3-Function Right Side (204988 - ).....	778
Line, Fuel Injection-16E3-4045HT054 (RE545794).....	134	Loader Plumbing, Second and Third Function, Left.....	774
Line, Fuel-16EY-4045TT096.....	228	LOADER VALVE BOOM SECTION.....	768
LINE, POWER BEYOND, HYDRAULIC.....	876	LOADER VALVE BUCKET SECTION.....	770
LINE, STABILIZER HYDRAULIC.....	876	Loader Valve Linkage, Fifth Function.....	762
Line, Turbocharger-65B7-4045TT096.....	270	Loader Valve Linkage, Fourth Function.....	758
Liner-9901-4045HT054 (RE545794).....	198	LOADER VALVE RELIEF.....	766
LINES, AUXILIARY EQUIPMENT, EXTENDIBLE DIPPERSTICK.....	934	Loader Valve, Fifth Function.....	764
LINES, AUXILIARY EQUIPMENT, STANDARD.....	932	Loader Valve, Fourth Function.....	760
LINES, BUCKET CYLINDER, BACKHOE ( - 208445).....	938	Loader/Stabilizer Auxiliary Section Relief Valves.....	772
LINES, FUEL FILTER (63AA).....	268	Lock Control Switch, Differential.....	458
Lines, Fuel Filter (Engine 4045HT054, 4045HT072).....	322	Lock Handle, Backhoe Boom.....	846
Lines, Fuel Filter (Engine 4045TT096).....	320	Lock, Backhoe Boom.....	846
Lines, Fuel Filter, Severe Duty (Engine 4045HT054).....	324	Lock, Boom Lever Pilot Control.....	852
Lines, Fuel-63BC-4045HT054 (RE545794).....	180	Lock, Boom Lever, Standard Control.....	850
Lines, Heater.....	620	Locking Pin, Extendable Arm.....	868
Lines, Heater and Air Conditioning.....	634	LOCKING PIN, EXTENDIBLE ARM.....	870
Lines, Loader 2 Function Hydraulics, Right Side (204988 - ).....	776	LOCKOUT VALVE, STABILIZER.....	766
LINES, OIL, EXTENSION CYLINDER, EXTENDIBLE DIPPERSTICK.....	940	Louver, Heating and Air Conditioning Ducts.....	632
Lines, Parking Brake Hydraulics.....	358	Louver, Hood and Side Panels (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
Lines, Steering Hydraulics, with MFWD.....	340	Louvers, Cab Console Covers with A/C.....	584
Lines, Steering Hydraulics, without MFWD.....	338	Low Pressure Fuel Lines-63BC-4045HT054 (RE545794).....	180
Lines, Transmission Oil Cooler (Engine 4045HT054).....	292	Low Range Forward Clutch Assembly.....	106
Lines, Transmission Oil Cooler (Engine 4045TT096).....	296	LUBE HOSE, FRONT AXLE (W/MFWD).....	72
Lines, Turbocharger Oil-65B7-4045TT096.....	270	Lubrication Fitting.....	744
LINKAGE BACKHOE, FIFTH FN LEVER FOR THREE LEVER CONTROLS.....	832	Lumbar Knob Kit, Cloth Mechanical Suspension Seat.....	610
Linkage Cover.....	560, 562, 564, 566	Lumbar Knob Kit, Vinyl Mechanical Suspension Seat.....	612
LINKAGE THREE LEVER BACKHOE CONTROL VALVE.....	822		
LINKAGE, BACKHOE CONTROL (SAE PATTERN).....	840		
Linkage, Bucket Leveling.....	800		

## Índice alfabético - contínuo

	Pgina		Pgina
M		N	
MAGNET, RETURN-TO-DIG .....	770	Negative Cable, Single Battery .....	386, 390
Magnetic Pick-Up Sensor-6730-4045HT054 (RE545794) .....	186	Nipple Assembly .....	688
Magnetic Pickup Sensor-6710-4045TT096 .....	274	Noise Reduction Foam .....	526
Main Bearing Cap-4614-4045TT096 .....	252	Non-Powered Axle .....	66
MAIN BEARINGS .....	254	Nozzle, Fuel Injection-16E3-4045HT054 (RE545794) .....	134
Main Bearings, Crankshaft-4715-4045HT054 (RE545794) .....	166	Nozzle, Washer, Windshield .....	572
Main Frame Guard .....	496		
Main Hydraulic Hoses .....	688	O	
Main Hydraulic Plumbing .....	688	O-Ring Kit-9901-4045HT054 (RE545794) .....	193
Main Hydraulic Pump .....	686	O-Rings, Power Link Grease Kit .....	860
Mainframe .....	494	O-Rings, Shift Control Solenoids .....	124
Manifold Air Pressure Sensor-6730-4045HT054 (RE545794) .....	186	Oil By Pass Valve-4614-4045TT096 .....	252
Manifold, Exhaust-2816-4045TT096 .....	238	OIL COOLER (5954) .....	265
Manifold, Exhaust-2893-4045HT054 (RE545794) .....	144	Oil Cooler (Engine 4045HT054) .....	292
MANIFOLD, PILOT ACTIVATING (191461 - ) .....	944	Oil Cooler (Engine 4045TT096) .....	296
Manifold, Pilot Control (191461 - ) .....	918	Oil Cooler Bracket (Engine 4045HT054) .....	292
Manual Auxiliary, Fifth Function Pedal .....	834	Oil Cooler Bracket (Engine 4045TT096) .....	296
Manual Controls, Canopy .....	556	Oil Cooler, Hydraulic (Engine 4045HT054) .....	292
Manual Mirrors .....	668	Oil Cooler, Hydraulic (Engine 4045TT096) .....	296
Mat .....	560, 562, 564, 566	Oil Cooler, Transmission (Engine 4045HT054) .....	292
Mechanical Front Wheel Drive Clutch Assembly .....	114	Oil Cooler, Transmission (Engine 4045TT096) .....	296
Mechanical Suspension Seat, Cloth .....	610	Oil Coolers and Plumbing (Engine 4045HT054) .....	292
Mechanical Suspension Seat, Vinyl .....	612	Oil Coolers and Plumbing (Engine 4045TT096) .....	296
MFWD Axle with Limited Slip .....	74	Oil Dipstick-4002-4045HT054 (RE545794) .....	158
MFWD CLUTCH ASSEMBLY .....	114	Oil Dipstick-4002-4045TT096 .....	247
MFWD CLUTCH DISC .....	114	Oil Draining Valve .....	382
MFWD CLUTCH DRIVE SOLENOID .....	114	OIL FILLER NECK-1229-4045HT054 (RE545794) .....	130
MFWD Front and Rear Rims, 12-16.5 in. and 19.5L-24 in. Goodyear .....	34	OIL FILLER NECK-1229-4045TT096 .....	223
MFWD Front and Rear Rims, 12.5 X 80-18 in. and 19.5L-24 in. Firestone .....	38	Oil Filter Gasket-8822-4045TT096 .....	278
MFWD Front and Rear Rims, 12.5 X 80-18 in. and 21L-24 in. Firestone .....	40	Oil Filter Head-8843-4045HT054 (RE545794) .....	190
MFWD Front and Rear Rims, 305 X 70D16.5 in. and 19.5L-24 in. Firestone .....	36	Oil Filter, Engine-8822-4045TT096 .....	278
MFWD Planetary Drive .....	80	Oil Filter, Hydraulic .....	702
MFWD Steering Cylinder and Repair Kit .....	342	OIL FILTER, TRANSMISSION .....	122
MFWD SWITCH .....	88	Oil Line .....	754
Middle Cover .....	560, 564	Oil Line, Steering Hydraulics, with MFWD .....	340
Miniature Blade .....	418	Oil Line, Steering Hydraulics, without MFWD .....	338
MIRROR BRACKET, INTERIOR FRONT VIEW .....	666	Oil Line, Turbocharger-65D1-4045HT054 (RE545794) .....	182
MIRROR BRACKET, INTERIOR REAR VIEW (FRONT T MOUNTED) .....	664	Oil Pan Gasket-9901-4045HT054 (RE545794) .....	204
Mirror, Exterior .....	668	Oil Pan Guard .....	496
Mirror, Exterior Rear View .....	668	Oil Pan-1903-4045TT096 .....	232
Mirror, External .....	668, 670	Oil Pressure Regulating Valve-4614-4045TT096 .....	252
MIRROR, INTERIOR FRONT VIEW .....	666	Oil Pressure Switch - Plug-7699-4045TT096 .....	276
MIRROR, INTERIOR REAR VIEW (FRONT MOUNTED) .....	664	Oil Pump Intake-1903-4045HT054 (RE545794) .....	138
Modular Telematics Gateway .....	706	Oil Pump Intake-1903-4045TT096 .....	232
Module, HVAC (Heater Only) .....	618	Oil Pump-5001-4045HT054 (RE545794) .....	172
Momentary Switch .....	740, 742	Oil Pump-5001-4045TT096 .....	260
Monitor .....	492	OIL PUMP, TRANSMISSION CHARGE .....	120
Monitor Warning Alarm .....	464	Oil Seal, Rear-9901-4045HT054 (RE545794) .....	194
Motion Control Switch, Transmission .....	90	OPEN DIFFERENTIAL (MFWD) .....	84
Motor Starter-30AT-4045HT054 (RE545794) .....	148	Open Differential (w/ MFWD) .....	84
Motor Starter-30AT-4045TT096 .....	240	OPEN DIFFERENTIAL BEVEL GEAR (MFWD) .....	84
Motor, Blower .....	618	OPEN DIFFERENTIAL CASE (MFWD) .....	84
Motor, Blower; Heater/Defroster .....	618	OPEN DIFFERENTIAL COVER (MFWD) .....	84
Motor, Blower, HVAC .....	618	Operator Enclosure Isolators .....	534
Motor, Rear Windshield Wiper .....	578	Operator Interface EMU .....	492
MOUNT, ENGINE .....	126	Operator Station Fenders .....	654
Mounting Hardware, Ride Control Accumulator .....	788	Operator Station Harness .....	414, 420
Mounting Kit, Fire Extinguisher .....	672	Operators Manual Holder .....	682
Mounting Parts, Mirror Mounting Bar .....	668	Operators Manual Tether Kit .....	684
Mounting Plate, Backhoe Control Valve .....	892	Operators Station Wiring, Routing Hardware .....	412
Mounting Plate, Dual Battery Disconnect Switch .....	398, 400	ORIFICE, TRANSMISSION REAR HOUSING .....	98
MOUNTING, ALTERNATOR .....	266	Output Gear Bearing .....	742
Mounting, Rear Axle .....	52	OUTPUT SHAFT, TRANSMISSION .....	116
MTG Harness .....	706	Outside Mirror .....	668
Muffler (Engine 4045HT054, 4045HT072) .....	316	Overhaul Kit, Engine-9901-4045HT054 (RE545794) .....	206, 216
Muffler (Engine 4045TT096) .....	318		
Muffler Clamp (Engine 4045HT054, 4045HT072) .....	316	P	
Muffler Clamp (Engine 4045TT096) .....	318	Pad, Extendable Arm .....	868
Multipurpose Bucket 2.18 m (86.00 in.) .....	724	PAD, EXTENDIBLE ARM .....	870
Multipurpose Bucket Cylinder and Repair Kit .....	796	Pads, Stabilizer Feet .....	874
Multipurpose Coupler Bucket, 86 in. .....	726	Pallet Forks 48 in. .....	732
Multipurpose Coupler Bucket, 92 in. .....	728	Pallet Forks 60 in. .....	734
		Pan, Oil-1903-4045HT054 (RE545794) .....	138
		Pan, Oil-1903-4045TT096 .....	232
		Panel .....	562, 564, 566
		Park Brake clutch Disc .....	356
		Park Brake Clutch Disk Carrier .....	356

## Índice alfabético - contínuo

	<i>Página</i>		<i>Página</i>
Park Brake Housing.....	356	Pins, Thumb Cylinder (207436 - ).....	976
Park Brake Piston.....	356	PINS,LOADER BUCKET.....	714
Park Brake Switch.....	416	PISTON AND O RING-4823-4045TT096.....	256
Parking Brake Housing and Clutch Disc.....	356	Piston Liner Kit-9901-4045HT054 (RE545794).....	198
Parking Brake Hydraulics.....	358	Piston Ring Kit-9901-4045HT054 (RE545794).....	196
Pattern Select Switch Plug.....	488	Piston, Brake Valve.....	348
Pattern Selector Harness (191461 - ).....	918	Piston, Disc Brake.....	344
Pattern Selector Valve (191461 - ).....	918	Piston, Park Brake.....	356
PEDAL FIELD KIT, FIFTH FUNCTION (PILOT CONTROL).....	828	PISTON-4823-4045TT096.....	256
PEDAL GAS.....	310	Piston-9901-4045HT054 (RE545794).....	198
Pedal Grommet, Backhoe Console.....	606	Pistons-4838-4045HT054 (RE545794).....	198
Pedal, Extendable Dipper.....	826	Pivot Assembly, Hood (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054).....	636
PEDAL, EXTENDIBLE DIPPER (PILOT CONTROL).....	828	Pivot Pin.....	744
Pedal, Fifth Function.....	826	Pivot Pin, Backhoe Extended Stabilizer Arm.....	872
PEDAL, FIFTH FUNCTION.....	830	Pivot Pin, Backhoe Stabilizer Arm.....	872
PEDAL, FIFTH FUNCTION (PILOT CONTROL).....	828	PIVOT PIN,FRONT AXLE(W/MFWD).....	72
Pedal, Fifth Function, Manual Auxiliary.....	834	PLACEMENT, SWITCHES, ALTERNATE.....	88
Pedal, Fifth Function, Pilot Auxiliary.....	836	PLANET CARRIER,REAR AXLE.....	56
PEDAL, SIXTH FUNCTION.....	838	Planetary Drive Ring Gear.....	80
Pedals And Brake Valve.....	346	Planetary Drive, Front Axle.....	80
Pedestal, Mechanical Suspension Seat, Cloth.....	610	PLANETARY DRIVE,REAR AXLE.....	56
Pedestal, Mechanical Suspension Seat, Vinyl.....	612	PLATE.....	560, 562, 564, 566
PILOT ACTIVATING MANIFOLD (191461 - ).....	944	Plate, Backhoe Boom Protection.....	856
Pilot Auxiliary, Fifth Function Pedal.....	836	Plate, Front-3618-4045TT096.....	244
PILOT BACKHOE BOOM SECTION VALVE.....	898	Plate, Rear Axle Mounting.....	52
PILOT BACKHOE BUCKET SECTION VALVE.....	900	PLATE,REAR AXLE HOUSING MOUNTING.....	54
PILOT BACKHOE CROWD SECTION VALVE.....	902	Plug.....	472
PILOT BACKHOE SWING SECTION VALVE.....	904	Plug without Mechanical Front Wheel Drive, Switch.....	476
Pilot Backhoe Valve, 4-Function with Flow Control.....	894	Plug without Start Aid, Switch.....	478
Pilot Control Backhoe Console.....	608	Plug, Beacon.....	482
Pilot Control Hydraulics (191461 - ).....	944	Plug, Euro Style.....	448, 476, 478
PILOT CONTROL VALVE, BACKHOE.....	876	Plug, Loader Coupler.....	490
PILOT CONTROL VALVE, LEFT (S/N 172423- ) (172423 - ).....	910	Plug, Oil Pressure Switch-7699-4045TT096.....	276
PILOT CONTROL VALVE, RIGHT (S/N 172423- ) (172423 - ).....	912	Plug, Pattern Select.....	488
Pilot Control, Boom Lock Lever and Linkage.....	852	Plug, Ride Control.....	486
Pilot Controller Arm, LH.....	916	Plug, Rubber (For Use without Ride Control).....	450
Pilot Controller Arm, RH.....	914	Plug, Selective Flow.....	484
Pilot Controller Components.....	914	Plug, Switch.....	448, 476, 478
Pilot Controller Valve (Left Hand) (172423 - ).....	910	Plug, Temperature Switch-6698-4045TT096.....	272
Pilot Controller Valve (Right Hand) (172423 - ).....	912	Plug, Washer.....	480
Pilot Controls, Cab.....	544	Plug, Water Pump Inlet-5738-4045HT054 (RE545794).....	176
Pilot Controls, Canopy.....	558	Plug, Water Pump Inlet-5738-4045TT096.....	264
Pilot Enable / Pattern Select (191461 - ).....	918	Plug, Windshield Washer.....	480
Pilot Enable Control.....	456	Plugs, Loader Auxiliary.....	786
PILOT ENABLE SWITCH.....	456	Plugs, Port, Fifth Section.....	948
PILOT ENABLE WIRING HARNESS.....	456	Plugs, Port, Sixth Section.....	950
Pilot Selector Valve Hydraulics (191461 - ).....	944	PLUMBING KIT, ATTACHMENT.....	926
Pilot Valve Plumbing (191461 - ).....	946	Plumbing, Auxiliary Loader Coupler.....	784
Pilot, Backhoe Control Valve, Fourth Function.....	892	PLUMBING, BRAKE VALVE BOOST (ROPS).....	354
Pilot, Selective Flow, Ride Control.....	446	Plumbing, Differential Lock.....	62
Pin, Backhoe Bucket Links.....	858	Plumbing, Main Hydraulic.....	688
PIN, BUCKET.....	864	Plumbing, Oil Coolers (Engine 4045HT054).....	292
PIN, CROWD.....	864	Plumbing, Oil Coolers (Engine 4045TT096).....	296
PIN, DIPPERSTICK.....	864	Plumbing, Parking Brake.....	358
PIN, KING, FRONT AXLE (MFWD).....	78	Plumbing, Pilot Valve (191461 - ).....	946
Pin, MFWD Front Axle with Limited Slip.....	74	Plumbing, Service Brake.....	350
Pin, Stabilizer Foot.....	874	Plumbing, Standard Dipperstick Thumb Cylinder (208446 - ).....	956
Pin, Swing Lock.....	848	Port Plugs, Fifth Section.....	948
Pin-On Loader Bucket 0.76 m <sup>3</sup> .....	718	Port Plugs, Sixth Section.....	950
Pin-On Loader Bucket 0.86 m <sup>3</sup> (1.125 yd <sup>3</sup> ).....	720	Portuguese Labels and Decals, 310K.....	376
Pin-On Loader Bucket 0.96 m <sup>3</sup> .....	722	Power Beyond Hose.....	692, 694
Pinion Input Seal.....	356	Power Beyond Hose For Manual Controls.....	692
Pinion Input Seal, Rear.....	356	Power Beyond Hose For Pilot Controls.....	694
Pinion Seal, Differential.....	356	POWER BEYOND HYDRAULIC LINE.....	876
Pinion Seal, Rear Differential.....	356	Power Link Grease Kit.....	860
Pinion Shaft Seal.....	356	Pressure Reducing Valve, Manifold, Pilot Control (191461 - ).....	918
Pinion Shaft, Differential.....	60	Pressure Reducing Valve, Pilot Control Manifold (191461 - ).....	918
Pinion, Rear Bearings.....	58	Pressure Regulating Valve, Oil-4614-4045TT096.....	252
Pinion, Rear Shim.....	58	Pressure Regulator, Transmission.....	100
PINS, BACKHOE BOOM.....	854	Pressure Sensor, Exhaust-2816-4045TT096.....	238
Pins, Backhoe Swing Frame.....	844	Pressure Switch, HVAC.....	634
PINS, LOADER BUCKET CYLINDER.....	714	Pressure Switch, Hydraulic Oil Filter.....	702
PINS, LOADER BUCKET LINK.....	714	Pressurizer Blower.....	618
Pins, Loader Bucket Linkage.....	746	Priority Inlet Section.....	880
PINS, LOADER LIFT ARM CYLINDER.....	794	Protection Kit, Backhoe Boom.....	856
Pins, Multipurpose Bucket 2.18 m (86.00 in.).....	724	Protective Cover, Hand Held Hydraulics.....	942
Pins, Multipurpose Coupler Bucket, 86 in.....	726	Pulley Assembly.....	304
Pins, Multipurpose Coupler Bucket, 92 in.....	728	Pulley Assembly (Engine 4045TT096).....	308
PINS, QUICK COUPLER (STANDARD).....	814	Pulley Assembly, Fan, (Engine 4045HT054, 4045HT072).....	306
PINS, QUICK COUPLER (UNIVERSAL).....	818	Pulley Crankshaft-1328-4045HT054 (RE545794).....	131
Pins, Stabilizer Arm.....	872	Pulley, Alternator 90A.....	402
Pins, Stabilizer Cylinder.....	964	PULLEY, CRANKSHAFT-1302-4045TT096.....	224
Pins, Swing Frame.....	844		

## Índice alfabético - contínuo

<i>Página</i>	<i>Página</i>
Pulley, Fan.....	304
Pulley, Fan (Engine 4045HT054, 4045HT072).....	306
Pulley, Fan (Engine 4045TT096).....	308
Pulley, Water Pump-2001-4045HT054 (RE545794).....	140
Pulley, Water Pump-2001-4045TT096.....	234
Pump Inlet, Water-5738-4045HT054 (RE545794).....	176
Pump Inlet, Water-5738-4045TT096.....	264
Pump, Fuel Injection-16E3-4045HT054 (RE545794).....	134
Pump, Fuel Injection-16EY-4045TT096.....	228
Pump, Fuel Transfer-3701-4045TT096.....	246
Pump, Hydraulic.....	686
Pump, Oil-5001-4045HT054 (RE545794).....	172
Pump, Oil-5001-4045TT096.....	260
Pump, Water-4446-4045HT054 (RE545794).....	160
Pump, Windshield Washer.....	576
Push Rod, Brake Valve.....	348
Push Rods-4901-4045HT054 (RE545794).....	170
Push Rods-4901-4045TT096.....	258
<b>Q</b>	
Quick Coupler (Standard).....	814
QUICK COUPLER (TOP LOCK).....	816
Quick Coupler (Universal).....	816, 818
Quick Coupler Bucket Bracket Kit.....	738
Quick Coupler Bucket, 18 in.....	810
Quick Coupler Bucket, 24 in.....	812
Quick Coupler Carriage and Forks 48 in.....	732
Quick Coupler Carriage and Forks 60 in.....	734
<b>R</b>	
Radiator (Engine 4045HT054, 4045HT063, 4045HT072, 4045HT073).....	288
Radiator (Engine 4045TT096).....	290
Radiator Hoses (Engine 4045HT054).....	294
Radiator Hoses (Engine 4045TT096).....	298
Radio.....	528, 530
RADIO AM/FM/CD/WB (FIELD KIT).....	662
RADIO AM/FM/WB (FIELD KIT).....	660
RADIO ANTENNA HD (FACTORY).....	656, 658
RADIO ANTENNA HD (FIELD KIT).....	660, 662
RADIO BRACKET (FACTORY).....	656, 658
RADIO BRACKET (FIELD KIT).....	660, 662
RADIO HARNESS (FACTORY).....	656, 658
RADIO HARNESS (FIELD KIT).....	660, 662
RADIO INSTALLATION (FACTORY).....	656, 658
RADIO SPEAKER 5 1/4 (FACTORY).....	656, 658
RADIO SPEAKER 5 1/4 (FIELD KIT).....	660, 662
RADIO W/ CD (FACTORY).....	658
RADIO W/ CD (FIELD KIT).....	662
RADIO W/O CD (FACTORY).....	656
RADIO W/O CD (FIELD KIT).....	660
REAR AXLE ASSEMBLY W/DIFFERENTIAL.....	50
REAR AXLE ASSEMBLY, COMPLETE.....	50
Rear Axle Housing.....	52
REAR AXLE HOUSING.....	54
REAR AXLE HOUSING MOUNTING PLATE.....	54
Rear Axle Mounting.....	52
REAR AXLE PLANET CARRIER.....	56
REAR AXLE PLANET GEAR.....	56
REAR AXLE PLANETARY DRIVE.....	56
REAR AXLE PLANETARY DRIVE HUB.....	56
Rear Axle Planetary Drive Pinion Carrier.....	56
REAR AXLE PLANETARY DRIVE SHAFT.....	56
Rear Axle Ring Gear and Pinion.....	58
Rear Axle Spiral Bevel Input Pinion.....	58
Rear Axle Yoke.....	58
Rear Cab Windows.....	588
Rear Console Cover Boot, Backhoe Lock Lever, 1-Pedal.....	606
Rear Console Cover Boot, Backhoe Lock Lever, Pilot Control.....	608
Rear Cover.....	560, 562, 564, 566
Rear Differential Housing.....	52
REAR DIFFERENTIAL HOUSING.....	54
Rear Differential Pinion Seal.....	356
Rear Driveshaft.....	92
REAR DRIVESHAFT CROSS AND BEARING.....	92
Rear Floor Mat.....	560, 562, 566
Rear Input, Pinion Seal.....	356
REAR MOUNTED, FRONT VIEW MIRROR (REAR MOUNTED).....	666
Rear Oil Seal-9901-4045HT054 (RE545794).....	194
Rear Pinion Bearings.....	58
Rear Pinion Shaft Seal.....	356
Rear Pinion Shim.....	58
Rear Rim 16.9-28 in. Firestone and Front Rim 11L-16 in. Goodyear 2WD.....	48
Rear Rim 19.5L-24 in. and Front Rim 11L-16 in. Firestone 2WD.....	44
Rear Rim 19.5L-24 in. and Front Rim 11L-16 in. Goodyear 2WD.....	46
Rear Rim 19.5L-24 in. and Front Rim 12-16.5 in. Goodyear MFWD.....	34
Rear Rim 19.5L-24 in. and Front Rim 12.5 X 80-18 in. Firestone MFWD.....	38
Rear Rim 19.5L-24 in. and Front Rim 305 X 70D16.5 in. Firestone MFWD.....	36
Rear Rim 21L-24 in. and Front Rim 12.5 X 80-18 in. Firestone MFWD.....	40
Rear Seal, Pinion Shaft.....	356
Rear Shaft Seal, Pinion.....	356
Rear Transmission Housing.....	96
Rear View Mirror.....	670
Rear View Mirror, Exterior.....	668
REAR VIEW MIRROR, INTERIOR (FRONT MOUNTED).....	664
Rear Window Hardware.....	568
Rear Window, Seal.....	536, 538, 540
Rear Windshield Wiper Motor.....	578
Rear Windshield Wiper System.....	578
Rear Wiper Enable Switch.....	578
REAR WIPER SWITCH.....	88
REAR WORKING LIGHTS SWITCH.....	88
REAR, TRANSMISSION HOUSING ORIFICE.....	98
Recliner Knob Kit, Cloth Mechanical Suspension Seat.....	610
Recliner Knob Kit, Vinyl Mechanical Suspension Seat.....	612
Reflector.....	638
Relay.....	418, 424, 426, 428
RELIEF VALVE, ATTACHMENT PLUMBING KIT.....	926
Relief Valve, Auxiliary Section.....	772
Relief Valve, Auxiliary Section, Loader/Stabilizer.....	772
Relief Valve, Backhoe Auxiliary Section.....	922
RELIEF VALVE, BOOM PILOT SECTION.....	898
RELIEF VALVE, BOOM SECTION.....	768, 882
RELIEF VALVE, BUCKET PILOT SECTION.....	900
RELIEF VALVE, BUCKET SECTION.....	770, 884
RELIEF VALVE, CROWD PILOT SECTION.....	902
RELIEF VALVE, CROWD SECTION.....	886
RELIEF VALVE, LOADER.....	766
Relief Valve, Priority Inlet Section.....	886
Relief Valve, Selective Flow Section.....	890
RELIEF VALVE, SWING PILOT SECTION.....	904
RELIEF VALVE, SWING SECTION.....	888
Reman Alternator.....	402
Reman Camshaft-4614-4045TT096.....	252
Reman Camshaft-4643-4045HT054 (RE545794).....	164
Reman Camshaft-9901-4045HT054 (RE545794).....	195, 200
REMAN CONNECTING ROD-4823-4045TT096.....	256
Reman Crankshaft.....	254
Reman Crankshaft-4715-4045HT054 (RE545794).....	166
REMAN CYLINDER HEAD.....	262
Reman Cylinder Head-5122-4045HT054 (RE545794).....	174
Reman Fuel Injection Nozzle-16E3-4045HT054 (RE545794).....	134
Reman Fuel Injection Pump-16E3-4045HT054 (RE545794).....	134
Reman Injection Nozzle-9901-4045HT054 (RE545794).....	208
Reman Oil Pump-5001-4045HT054 (RE545794).....	172
Reman Oil Pump-5001-4045TT096.....	260
REMAN REAR AXLE ASSEMBLY COMPLETE.....	50
REMAN TORQUE CONVERTER.....	102
Reman Water Pump-4429-4045TT096.....	248
Reman Water Pump-4446-4045HT054 (RE545794).....	160
Reman, Fuel Injection Pump-16EY-4045TT096.....	228
Reman, Injection Nozzle-16EY-4045TT096.....	228
Remanufactured Camshaft-9901-4045HT054 (RE545794).....	195
Repair Kit And Swing Cylinder (203194 - ).....	968
REPAIR KIT, BACKHOE BOOM CYLINDER.....	958
Repair Kit, Backhoe Bucket Cylinder (208446 - ).....	960
Repair Kit, Loader Bucket Cylinder (202928 - ).....	790
Repair Kit, Loader Lift Cylinder.....	792
Repair Kit, MultiPurpose Bucket Cylinder.....	796
Repair Kit, Steering Cylinder - MFWD.....	342
REPAIR KIT,CROWD CYLINDER.....	966
Repair Kits, Stabilizer Cylinder (208446 - ).....	962
Replacement Engine-9901-4045TT096.....	280
Reservoir, Hydraulic.....	700
Reservoir, Washer, Front Windshield.....	574
Reservoir, Windshield Washer.....	574, 576
Return Hose with Manual Controls.....	696
Return Hose with Pilot Controls.....	698

## Índice alfabético - contínuo

	Pgina		Pgina
Return To Tank Hose .....	696, 698	Seat Position Switch Kit, Mechanical Suspension.....	612
Return Valve .....	696, 698	Seat Swivel Switch, Vinyl Mechanical Suspension .....	612
RETURN-TO-DIG MAGNET .....	770	Seat, Mechanical Suspension, Cloth .....	610
Return-to-Dig Wiring .....	460	Seat, Mechanical Suspension, Vinyl .....	612
REVERSE ALARM (S/N XXXXXX- ) (XXXXXX - ) .....	676	Second and Third Function Loader Plumbing, Left .....	774
Reversible Stabilizer Foot .....	874	Second Gear Clutch Assembly .....	112
Reversible Stabilizer Street Pads .....	874	Second Gear Transmission Assembly .....	112
RH Pilot Controller .....	914	Second Speed Clutch Assembly .....	112
RH, Side Console .....	592	Second Speed Transmission Assembly .....	112
Ride Control .....	748	Selective Flow Control Kit .....	906
Ride Control Accumulator Mounting Hardware .....	788	Selective Flow Section .....	890
Ride Control Kit .....	750	Selective Flow Section, Relief Valve .....	890
Ride Control Switch .....	474	Selective Flow Switch Plug .....	484
Ride Control Switch Plug .....	486	Selective Flow Switches .....	462
Ride Control Valve Harness .....	442, 472	Selective Flow Valve Kit, Auxiliary .....	920
Ride Control Wiring Harness .....	442, 472	Selective Flow Wiring Harness .....	444
Ride Control, Pilot, Selective Flow .....	446	Selective Flow, Ride Control, Pilot .....	446
Right Operator Station Fender .....	654	Selector Valve Hydraulics (191461 - ) .....	944
Right Side, Loader 2 Function Hydraulics (204988 - ) .....	776, 778	Selector Valve, Pattern (191461 - ) .....	918
Rim Spacer Kit .....	42	Sender, Torque Converter Temperature .....	438
Rim, 16.9-28 in. Firestone and 11L-16 in. Goodyear .....	48	Sensor, Air Restriction (Engine 4045HT054, 4045HT072) .....	312
Rim, 19.5L-24 in. and 11L-16 in. Firestone .....	44	Sensor, Air Restriction (Engine 4045TT096) .....	314
Rim, 19.5L-24 in. and 11L-16 in. Goodyear .....	46	Sensor, Air Temperature-6730-4045HT054 (RE545794) .....	186
Rim, 19.5L-24 in. and 12-16.5 in. Goodyear MFWD .....	34	Sensor, Crankshaft Position-6730-4045HT054 (RE545794) .....	186
Rim, 19.5L-24 in. and 12.5 X 80-18 in. Firestone MFWD .....	38	Sensor, Engine Speed-6730-4045HT054 (RE545794) .....	186
Rim, 19.5L-24 in. and 305 X 70D16.5 in. Firestone MFWD .....	36	Sensor, Magnetic Pick-Up-6730-4045HT054 (RE545794) .....	186
Rim, 21L-24 in. and 12.5 X 80-18 in. Firestone MFWD .....	40	Sensor, Magnetic Pickup-6710-4045TT096 .....	274
Ring Gear and Pinion, Rear Axle .....	58	Sensor, Manifold Air Pressure-6730-4045HT054 (RE545794) .....	186
RING GEAR AND PINION,FRONT AXLE (W/MFWD) .....	86	Sensor, Swivel, Mechanical Suspension Seat, Cloth .....	610
Ring Gear, Planetary Drive .....	80	Sensor, Swivel, Mechanical Suspension Seat, Vinyl .....	612
RING GEAR,FRONT AXLE(W/MFWD) .....	86	Sensor, Temperature-6698-4045HT054 (RE545794) .....	184
Rocker Arm Cover-1118-4045TT096 .....	222	Sensor, Temperature-6710-4045TT096 .....	274
Rocker Arm Shaft-4901-4045HT054 (RE545794) .....	170	Sensors, Engine-6710-4045TT096 .....	274
Rocker Arm Shaft-4901-4045TT096 .....	258	Sensors-6710-4045TT096 .....	274
Rocker Arms-4901-4045HT054 (RE545794) .....	170	Service Brake Clutch Disc and Disc Carrier .....	344
Rocker Arms-4901-4045TT096 .....	258	Service Brake Plumbing .....	350
Rocker Switch .....	282, 616	Service Camshaft-9901-4045HT054 (RE545794) .....	195
Rod, Boom Lock, Pilot Control .....	852	Service Engine-9901-4045HT054 (RE545794) .....	220
Rod, Boom Lock, Standard Control .....	850	Service Engine-9901-4045TT096 .....	280
Rods, Push-4901-4045HT054 (RE545794) .....	170	Service Kit For Injector Nozzle-9901-4045HT054 (RE545794) .....	208
Rods, Push-4901-4045TT096 .....	258	Service Kit, Cylinder Head Bolts-9901-4045HT054 (RE545794) .....	205
Roof with Wiring Harness and Deluxe Lights .....	532	Service Kit, Engine-9901-4045HT054 (RE545794) .....	206
ROPS .....	546, 548	Service Lock, Loader Arm .....	360
Rotating Beacon .....	410	Severe Duty Fuel Filter and Lines (Engine 4045HT054) .....	324
Routing Hardware, Operators Station Wiring .....	412	Shaft Seal, Pinion .....	356
RTD Wiring .....	460	Shaft, Balancer-4501-4045HT054 (RE545794) .....	162
Rubber Cup Holder .....	586, 588	Shaft, Balancer-4502-4045TT096 .....	250
Rubber Plug (For Use without Ride Control) .....	450	Shaft, Front Plate-3618-4045TT096 .....	244
Rubber Storage Cup .....	586	Shaft, Planetary Drive Sun Gear .....	80
<b>S</b>			
SAE Backhoe Control Linkage Pattern Kit .....	840	Shaft, Rocker Arm-4901-4045HT054 (RE545794) .....	170
SAE PATTERN, BACKHOE CONTROL LEVER .....	840	Shaft, Rocker Arm-4901-4045TT096 .....	258
Safety Lock, Loader Boom Arm .....	360	Shaft, Transmission Input .....	104
Satellite Antenna .....	710	SHAFT, UNIVERSAL DRIVE (MFWD) .....	72
Satellite Module Antenna .....	710	SHAFT,LIMITED SLIP DIFFERENTIAL (MFWD) .....	82
Screen, Grille .....	642	SHAFT,REAR AXLE PLANETARY DRIVE .....	56
Seal Kit .....	336	SHAFT,TRANSMISSION OUTPUT .....	116
Seal Kit, Auxiliary Section Loader/Stabilizer Valve .....	772	Shield, Loader 2 Function Hydraulics, Right Side (204988 - ) .....	776
Seal Kit, Auxiliary Section Spool Valve, Backhoe .....	922	Shield, Transmission Solenoid .....	118
Seal Kit, Backhoe Bucket Cylinder (208446 - ) .....	960	Shift Control Solenoid O-Rings .....	124
Seal Kit, Backhoe Thumb Cylinder (207436 - ) .....	978	Shift Control Solenoids, Transmission .....	124
Seal Kit, Loader Boom Cylinder .....	792	Shim, Rear Pinion .....	58
Seal Kit, Loader Bucket Cylinder (202928 - ) .....	790	Shims, Loader Bucket Linkage .....	746
Seal Kit, Multitpurpose Bucket Cylinder .....	796	Short Block Assembly-9901-4045HT054 (RE545794) .....	218
Seal Kit, Priority Inlet Section .....	880	Shroud, Radiator Fan (Engine 4045HT054) .....	294
Seal Kit, Relief Valve Priority Inlet Section .....	880	Shroud, Radiator Fan (Engine 4045TT096) .....	298
Seal Kit, Stabilizer Cylinder (208446 - ) .....	962	Side Console Switches .....	88
Seal, Flywheel Housing-1428-4045HT054 (RE545794) .....	132	Side Panels and Hood (Engine 4045HT072, 4045HT073, 4045HT063, 4045HT054) .....	636
Seal, Flywheel Housing-1428-4045TT096 .....	225	SIDE WORKING LIGHTS SWITCH .....	88
Seal, Front Console .....	524	Single Battery .....	384
Seal, Pinion Shaft .....	356	Single Battery Disconnect .....	396
Seal, Rear Cab Window .....	568	Single Battery Negative Cable .....	386
Seal, Rear Oil-9901-4045HT054 (RE545794) .....	194	Sixth Function Backhoe Valve .....	878
SEAL, TRANSMISSION OUTPUT SHAFT .....	116	Sixth Function Backhoe Valve, Pilot, Flow Control .....	896
SEAL,SLIDING YOKE (MFWD) .....	72	Sixth Function Manual and Pilot Control Kit .....	909
Seals, Cab .....	536	SIXTH FUNCTION MANUAL VALVE KIT .....	909
Seals, Cab, Manual Controls .....	540	Sixth Function Pedal .....	838
Seals, Cab, Pilot Controls .....	538	SIXTH FUNTION FOOT CONTROL .....	838
Seals, Front Wheel Hub without MFWD .....	70	Sixth Section Port Plugs .....	950
Seat Belt .....	614	Slide Control Kit, Mechanical Suspension Seat, Cloth .....	610
		Slide Control Lever Kit, Mechanical Suspension Seat, Vinyl .....	612
		SLIDING YOKE, SEAL (MFWD) .....	72
		Software .....	492

## Índice alfabético - contínuo

Pgina	Pgina		
Solenoid Coil .....	756	Steering Pressure .....	690
Solenoid Valve .....	754, 756	Steering System, Hydraulic Lines with MFWD .....	340
Solenoid Valve, Loader Coupler .....	752	Steering System, Hydraulic Lines without MFWD .....	338
Solenoid Valve, Pilot Control Manifold (191461 - ) .....	918	Steering Valve .....	336
Solenoid Valve, Selective Flow Section .....	890	Steering Wheel .....	330, 332
SOLENOID, RETURN-TO-DIG .....	770	Step .....	564
Solenoid-30AT-4045HT054 (RE545794) .....	148	STOP BOOM .....	936
Solenoid-30AT-4045TT096 .....	240	Stop Light .....	532
SOLENOID,COLD WEATHER STARTING AID (ENGINES DT060/TT094) .....	284	Storage Cup, Rubber .....	586
SOLENOID,MFDW CLUTCH DRIVE .....	114	Straps, Lift-9801-4045HT054 (RE545794) .....	192
Solenoids, Transmission Shift Control .....	124	Straps, Lift-9801-4045TT096 .....	279
Spacer Kit, Wheel .....	42	Street Pads, Stabilizer Foot .....	874
Spacer Washers, Backhoe Bucket Links .....	858	Striker .....	552, 554
SPACER, SYNTHETIC BUCKET .....	864	Strobe Beacon Kit .....	406
SPACER, SYNTHETIC CROWD .....	864	Stud, Wheel Spacer .....	42
Spacers, Stabilizer Cylinder .....	964	STUDS, WHEEL (MFWD) .....	78
Spanish Labels And Decals .....	374	Suction Hose .....	688
SPEAKER BRACKET (FACTORY) .....	656, 658	Suction Tube .....	100
SPEAKER BRACKET (FIELD KIT) .....	660, 662	Sun Gear Shaft, Planetary Drive .....	80
Speed Sensor-6710-4045TT096 .....	274	Sun Visor .....	678
Spiral Bevel Input Pinion and Ring Gear Set .....	58	Sun Visor Kit .....	680
Spiral Bevel Input Pinion, Rear .....	58	Support Strap .....	352
Spool Valve .....	760	SUPPORT,ENGINE .....	126
Spool Valve, Backhoe Auxiliary Section .....	922	Supports, Grille .....	642
Stabilizer / Loader Valve .....	766	Surge Tank (Engine 4045HT054) .....	294
Stabilizer Arm Pins .....	872	Surge Tank (Engine 4045TT096) .....	298
Stabilizer Arms .....	872	Suspension Seat, Mechanical, Cloth .....	610
Stabilizer Assembly Cover .....	590	Suspension Seat, Mechanical, Vinyl .....	612
Stabilizer Control .....	842	Swing Cylinder (203194 - ) .....	968
Stabilizer Control Cover .....	590	Swing Cylinder and Repair Kit (203194 - ) .....	968
Stabilizer Cover .....	594, 596	Swing Cylinder And Repair Kit (203194 - ) .....	968
Stabilizer Cover Assembly .....	594, 596	SWING CYLINDER FITTINGS .....	954
Stabilizer Cover with Pilot Control (For Use with Cab) .....	594	SWING CYLINDER HYDRAULIC HOSE .....	954
Stabilizer Cover with Pilot Controls (For Use with Canopy) .....	596	Swing Cylinder Hydraulic Hoses and Fittings .....	954
Stabilizer Cylinder (208446 - ) .....	962	Swing Frame and Pins .....	844
Stabilizer Cylinder Hydraulics (208446 - ) .....	952	Swing Frame Pins .....	844
Stabilizer Cylinder Hydraulics, Backhoe (208446 - ) .....	952	Swing Frame, Backhoe .....	844
Stabilizer Cylinder Pins .....	964	Swing Lock Pin .....	848
Stabilizer Cylinder Pins and Spacers .....	964	Swing Section .....	888
Stabilizer Cylinder Repair Kit (208446 - ) .....	962	SWING SECTION RELIEF VALVE .....	888
Stabilizer Cylinder Seal Kit (208446 - ) .....	962	SWING SECTION, BACKHOE VALVE .....	888
Stabilizer Cylinder Spacers .....	964	Swing Section, Pilot .....	904
Stabilizer Feet and Street Pad .....	874	SWING VALVE ACCU-SWING KIT .....	924
Stabilizer Foot .....	874	SWING, PILOT SECTION RELIEF VALVE .....	904
Stabilizer Foot Street Pads .....	874	SWING, PILOT SECTION, BACKHOE VALVE .....	904
STABILIZER HYDRAULIC LINE .....	876	Switch .....	462, 740, 742
STABILIZER LOCKOUT VALVE .....	766	Switch Plug .....	478
Stabilizer Relief Valve, Loader .....	772	Switch Plug without Auxiliary Third Function .....	448
Stabilizer Seal Kit (208446 - ) .....	962	Switch Plug without Mechanical Front Wheel Drive .....	476
STABILIZER VALVE RELIEF .....	766	Switch Plug without MFWD .....	476
STABILIZER, LOADER CONTROL VALVE .....	782	Switch Plug without Start Aid .....	478
Stabilizer/Loader Relief Valve .....	772	Switch Plug, Beacon .....	482
STANDARD ARM .....	864	Switch Plug, Loader Coupler .....	490
Standard Dipperstick .....	864	Switch Plug, Pattern Select .....	488
STANDARD DIPPERSTICK AUXILIARY HYDRAULIC .....	932	Switch Plug, Ride Control .....	486
Standard Dipperstick Cylinder Plumbing, Thumb (208446 - ) .....	956	Switch Plug, Selective Flow .....	484
Standard Dipperstick, Thumb Ready .....	866	SWITCH REAR WIPER .....	88
Standard Duty Bucket, 24 in. Wide, 6.5 ft <sup>3</sup> .....	802	SWITCH, A/C .....	88
Standard Front Axle Housing (w/o MFWD) .....	68	Switch, Air Conditioning Harness .....	616
Standard, Boom Lock Lever and Linkage .....	850	SWITCH, AIR SUSPENSION SEAT .....	88
Start Aid .....	478	Switch, Beacon Wiring Kit .....	408
Start Aid Harness .....	282	Switch, Defrost Control .....	622
START AID SWITCH .....	88	Switch, Differential Lock Control .....	458
Starter Motor-30AT-4045HT054 (RE545794) .....	148	Switch, Differential Pressure, Hydraulic Oil Filter .....	702
Starter Motor-30AT-4045TT096 .....	240	Switch, Dual Battery Disconnect .....	398
Starting Aid Switch .....	282	Switch, Dual Battery Disconnect Kit .....	400
STARTING AID, COLD WEATHER (ENGINES DT060/TT094) .....	284	Switch, Dual Pressure, HVAC .....	634
STARTING FLUID (ENGINES DT060/TT094) .....	284	Switch, HVAC Mode Door .....	622
Station, Operator, Fenders .....	654	SWITCH, MFWD .....	88
Steering Column .....	330	Switch, Motion Control, Transmission .....	90
Steering Column Covers .....	598	SWITCH, PILOT ENABLE .....	456
Steering Column Covers, Tilt .....	600	Switch, Plug .....	448, 476
Steering Cylinder and Repair Kit with MFWD .....	342	Switch, Power Off, Dual Battery .....	398, 400
STEERING CYLINDER, FRONT AXLE (WITHOUT MFWD) .....	69	Switch, Power Off, Single Battery .....	396
Steering Hoses and Fittings, Hydraulics with MFWD .....	340	Switch, Power On, Dual Battery .....	398, 400
Steering Hoses and Fittings, Hydraulics without MFWD .....	338	Switch, Power On, Single Battery .....	396
Steering Hoses, Hydraulic Fittings without MFWD .....	338	Switch, Rear Wiper Enable .....	578
Steering Hydraulics .....	690	SWITCH, REAR WORKING LIGHTS .....	88
Steering Hydraulics (With Mechanical Front Wheel Drive) .....	340	Switch, Ride Control .....	474
Steering Hydraulics (Without Mechanical Front Wheel Drive) .....	338	Switch, Rotating Beacon .....	410
Steering Hydraulics Valve .....	334	Switch, Seat Position - Mechanical Suspension .....	612
Steering Load Sense .....	690	Switch, Seat Swivel, Vinyl Mechanical Suspension .....	612
		SWITCH, SIDE WORKING LIGHTS .....	88

## Índice alfabético - contínuo

Pgina

Pgina

Switch, Start Aid	282
SWITCH, START AID	88
Switch, Strobe Beacon	406
Switch, Without Auxiliary Third Function, Plug	448
Switches, Selective Flow	462
SWITCHES, SIDE CONSOLE	88
Swivel Assembly, Mechanical Suspension Seat, Vinyl	612
Swivel Handle, Seat	612
Swivel Housing and Steering Cylinder (Without MFWD)	69
SWIVEL HOUSING, FRONT AXLE (WITHOUT MFWD)	69
Swivel Sensor Kit, Mechanical Suspension Seat, Cloth	610
Swivel Sensor Kit, Mechanical Suspension Seat, Vinyl	612
Swivel Sensor Wiring Harness, Mechanical Suspension Seat, Cloth	610
Swivel Sensor Wiring Harness, Mechanical Suspension Seat, Vinyl	612
SYNTHETIC BUCKET SPACER	864
SYNTHETIC CROWD SPACER	864
System, Air Conditioning	624, 628
System, Ventilation-2915-4045HT054 (RE545794)	146

## T

Tachometer Drive Sensors-6710-4045TT096	274	Timing Gear Cover-4446-4045HT054 (RE545794)	160
Tachometer Switch and Wiring-6710-4045TT096	274	Toggle Switch	282
Tank, Coolant Recovery (Engine 4045HT054)	294	Tool Box	638
Tank, Coolant Recovery (Engine 4045TT096)	298	Tool Box and Battery Enclosure	638
Tank, Surge (Engine 4045HT054)	294	Tooth Adapter, Heavy Duty Bucket, 24 in. Wide, 7.5 ft <sup>3</sup>	806
Tank, Surge (Engine 4045TT096)	298	Tooth Adapter, Quick Coupler Bucket, 18 in.	810
Teeth, Heavy Duty Bucket, 24 in. Wide, 7.5 ft <sup>3</sup>	806	Tooth Adapter, Quick Coupler Bucket, 24 in.	812
Teeth, Quick Coupler Bucket, 18 in.	810	Tooth Adapter, Standard Duty Bucket, 24 in. Wide, 6.5 ft <sup>3</sup>	802
Teeth, Quick Coupler Bucket, 24 in.	812	Torque Converter	102
Teeth, Standard Duty Bucket, 24 in. Wide, 6.5 ft <sup>3</sup>	802	Torque Converter Temperature Sensor	438
TEMPERATURE CONTROL KNOB	88	TORQUE CONVERTOR FLEXPLATE	102
Temperature Sensor	436	TRANSMISSION CHARGE OIL PUMP	120
Temperature Sensor, Torque Converter	438	Transmission Charge Pump	120
Temperature Sensor-6698-4045HT054 (RE545794)	184	Transmission Control Lever	90
Temperature Sensor-6710-4045TT096	274	Transmission Dipstick	94
Temperature Switch Plug-6698-4045TT096	272	Transmission Dipstick and Tube	94
Tensioner, Belt-8702-4045TT096	277	Transmission Drain Plug	96
Tensioner, Belt-8727-4045HT054 (RE545794)	188	Transmission Frame Guard	498
Tether Cable, Operators Manual	684	Transmission Front Housing	100
Tether Kit, Operators Manual	684	Transmission Front Housing and Torque Converter Cover	100
Thermal Bypass	688	Transmission Guard	118, 498
Thermocouple-6730-4045HT054 (RE545794)	186	Transmission Housing, Rear	96
THERMOSTAT COVER (2101) (TYC52)	235	Transmission Input Shaft	104
Thermostat Housing-3924-4045HT054 (RE545794)	156	Transmission Input Shaft and Clutch Disk	104
Thermostat, HVAC	634	Transmission Oil Cooler (Engine 4045HT054)	292
Thermostat-2201-4045TT096	236	Transmission Oil Cooler (Engine 4045TT096)	296
Thermostat-2224-4045HT054 (RE545794)	142	Transmission Oil Fill Tube	96
Thermostatic Control Valve (Engine 4045HT054)	292	Transmission Oil Filter	122
Thermostatic Control Valve (Engine 4045TT096)	296	TRANSMISSION OIL FILTER ELEMENT	122
Third Function Loader Control Valve Linkage	780	TRANSMISSION OIL FILTER HEADER	122
THREE FUNCTION VALVE, LOADER VALVE	782	TRANSMISSION OUTPUT SHAFT	116
THREE LEVER BACKHOE CONTROL VALVE LINKAGE	822	Transmission Output Shaft (Rear)	116
Three Lever Control Valve Linkage and Conversion Kit	822	Transmission Pressure Regulator	100
Thrust Bearing-4715-4045HT054 (RE545794)	166	Transmission Rear Housing and Oil Fill Tube	96
Thrust Bearing-9901-4045HT054 (RE545794)	214	Transmission Rear Housing Orifice	98
Thumb Cylinder Assembly (207436 - )	976	Transmission Shift Control Solenoid O-Rings	124
Thumb Cylinder Pins (207436 - )	976	Transmission Shift Control Solenoids	124
Thumb Cylinder Plumbing, Standard Dipperstick (208446 - )	956	Transmission Solenoid Shield	118
Thumb Cylinder Seal Kit (207436 - )	978	Transmission Torque Converter Cover	100
Thumb Cylinder, 18 in. and 30 in. Buckets	972	Transmission Torque Converter Housing	100
Thumb Cylinder, 24 in. Bucket	970, 974	Transmission Wiring Harness	436
Thumb Cylinder, Backhoe (207436 - )	978	Transmission Wiring Harness Hardware	438
Thumb Cylinder, Hydraulic (207436 - )	978	Transmission, Second Gear Assembly	112
Thumb Cylinder, Hydraulic Hoses, Standard Dipperstick (208446 - )	956	Transmission, Second Speed Assembly	112
Thumb Kit, Backhoe, 18 in. and 30 in. Buckets	972	TRAVEL WARNING ALARM (S/N XXXXXX- ) (XXXXXX - )	676
Thumb Kit, Backhoe, 24 in. Bucket	970, 974	Tube By Pass-3924-4045HT054 (RE545794)	156
Thumb Plumbing, Standard Dipperstick (208446 - )	956	Tube, Oil Pump-5001-4045HT054 (RE545794)	172
Thumb Ready Standard Dipperstick	866	Tube, Oil Pump-5001-4045TT096	260
TIE BOLTS BACKHOE CONTROL VALVE	876	Tube, Power Link Grease Kit	860
Tie Down	384, 388	Tube, Suction	100
Tie Rod Assembly, Front Axle (MFWD)	76	Tube, Transmission Oil Fill	96
Tier 2 Engine Controller	454	Tube, Water Pump Bypass-2158-4045HT054 (RE545794)	141
Tier 3 Engine Controller	452	Turbocharger Oil Lines-65B7-4045TT096	270
Tilt Column	332	Turn Signal Switch	598, 600
Tilt Steering Column	332	TWO FUNCTION VALVE, LOADER CONTROL VALVE	782
Tilt Steering Column Covers	600	Two Lever Backhoe Control Lever Valve Conversion Kit	820
Time Delay	464	TWO LEVER BACKHOE CONTROL VALVE LINKAGE	820
Timing Gear Cover-4429-4045TT096	248		

## U

Unit, Air Conditioning	626, 630
UNIVERSAL DRIVE SHAFT (MFWD)	72
UNIVERSAL DRIVE SHAFT KIT (MFWD)	72
UNIVERSAL DRIVE SHAFT, FRONT AXLE (MFWD)	78
Universal Joint, Rear Driveshaft	92

## V

Valve Cover-1118-4045TT096	222
Valve Cover-1160-4045HT054 (RE545794)	128
Valve Plumbing, Pilot (191461 - )	946
Valve Section, Backhoe Priority Inlet	880
VALVE SPRING	262
VALVE TIE BOLTS, BACKHOE CONTROL	876
Valve, 4-Function Backhoe - Pilot with Flow Control	894
VALVE, ACCU-SWING KIT	924
Valve, Backhoe Auxiliary Section	922
VALVE, BACKHOE BOOM SECTION	882
VALVE, BACKHOE BOOM, PILOT SECTION	898
VALVE, BACKHOE BUCKET SECTION	884
VALVE, BACKHOE BUCKET, PILOT SECTION	900

 


## Índice alfabético - contínuo

Pgina	Pgina		
VALVE, BACKHOE CONTROL .....	876	Windshield Wiper System, Front .....	570
VALVE, BACKHOE CROWD SECTION .....	886	Wiper Assembly, Windshield .....	570
VALVE, BACKHOE CROWD, PILOT SECTION .....	902	Wiper Blade, Rear .....	578
Valve, Backhoe Selective Flow Section .....	890	Wiper Motor .....	570
VALVE, BACKHOE SWING SECTION .....	888	Wiper Motor, Front .....	570
VALVE, BACKHOE SWING, PILOT SECTION .....	904	Wiper Motor, Rear Windshield .....	578
Valve, Brake .....	348	Wiper Switch .....	416
VALVE, EXHAUST .....	262	Wire Harness, Cab Console Covers with A/C .....	584
VALVE, FIFTH FUNCTION MANUAL KIT .....	908	Wiring Harness .....	428, 432, 434, 446, 460, 462, 464, 616, 706
VALVE, FLOW CONTROL (191461 - ) .....	944	Wiring Harness Connectors, Canopy .....	420
VALVE, INTAKE .....	262	Wiring Harness Hardware, Cab .....	416
VALVE, LOADER BOOM SECTION .....	768	Wiring Harness Hardware, Canopy .....	422
VALVE, LOADER BUCKET SECTION .....	770	Wiring Harness Hardware, Engine .....	428, 432
Valve, Loader Coupler Solenoid .....	752	Wiring Harness Hardware, Transmission .....	438
Valve, Loader, Fifth Function .....	764	WIRING HARNESS, A/C .....	88
Valve, Oil By Pass And Pressure Regulating-4614-4045TT096 .....	252	Wiring Harness, Cab .....	414
Valve, Pattern Selector (191461 - ) .....	918	Wiring Harness, Diesel Fired Coolant Heater .....	328
VALVE, PILOT CONTROLLER, LEFT (S/N 172423- ) (172423 - ) .....	910	Wiring Harness, Engine .....	426, 430
VALVE, PILOT CONTROLLER, RIGHT (S/N 172423- ) (172423 - ) .....	912	Wiring Harness, Fuel Injector-16E3-4045HT054 (RE545794) .....	134
Valve, Return .....	696, 698	Wiring Harness, Loader Coupler .....	440, 464
Valve, Selective Flow, Auxillary, Kit .....	920	WIRING HARNESS, PILOT ENABLE .....	456
VALVE, SIXTH FUNCTION MANUAL KIT .....	909	Wiring Harness, Ride Control .....	442, 472
VALVE, STABILIZER LOCKOUT .....	766	Wiring Harness, Roof and Deluxe Lights .....	532
VALVE, STABILIZER/LOADER .....	766	Wiring Harness, Selective Flow .....	444
Valve, Steering .....	336	Wiring Harness, Swivel Sensor, Mechanical Suspension Seat, Cloth .....	610
VALVE, STEERING HYDRAULICS .....	334	Wiring Harness, Swivel Sensor, Mechanical Suspension Seat, Vinyl .....	612
Valve, Thermostatic Expansion, HVAC .....	634	Wiring Harness, Transmission .....	436
Valve, Water, HVAC .....	634	Wiring, Beacon .....	408
VALVE, BRAKE VALVE BOOST HYDRAULICS (ROPS) .....	354	Without Fuel Pump, Cover-3799-4045HT054 (RE545794) .....	154
Vent .....	326	Without MFWD, Front Wheel Hub .....	70
Vent System-2901-4045TT096 .....	239		
Ventilation system-2901-4045TT096 .....	239	Y	
Ventilation system-2915-4045HT054 (RE545794) .....	146	Yoke .....	758, 760, 762
Visor Kit, Sun .....	680	YOKE, DRIVE SHAFT (MFWD) .....	72
VISOR, SUN .....	678	Yoke, Rear Axle .....	58
		YOKE, FRONT AXLE INPUT PINION GEAR (W/MFWD) .....	86
W		YOKE, SEAL, SLIDING (MFWD) .....	72
WARNING ALARM, TRAVEL (S/N XXXXXX- ) (XXXXXX - ) .....	676		
Warning lamp .....	532		
Warning Light Switch .....	416, 422		
Washer Kit, Windshield .....	576		
Washer Nozzle, Windshield .....	572		
Washer Plug .....	480		
Washer Reservoir, Front Windshield .....	574		
Washer Switch .....	466		
Washer Switch Delete Plug .....	480		
Washer Switch Filler Plug .....	480		
Water Pump Bypass Tube-2158-4045HT054 (RE545794) .....	141		
Water Pump Connection-5738-4045HT054 (RE545794) .....	176		
Water Pump Connection-5738-4045TT096 .....	264		
Water Pump Pulley-2001-4045HT054 (RE545794) .....	140		
Water Pump Pulley-2001-4045TT096 .....	234		
Water Pump-4446-4045HT054 (RE545794) .....	160		
Wearstrips, Extendable Arm .....	868		
WEARSTRIPS, EXTENDIBLE ARM .....	870		
Wet Charged Battery .....	384, 388		
Wheel Bearings, Front, without MFWD .....	70		
Wheel Hub, Front, without MFWD .....	70		
Wheel Spacer Kit .....	42		
WHEEL STUDS (MFWD) .....	78		
Wheel, 11L-16 in. Front and 19.5L-24 in. Rear Firestone 2WD .....	44		
Wheel, 11L-16 in. Front and 19.5L-24 in. Rear Goodyear 2WD .....	46		
Wheel, 11L-16 in. Goodyear Front and 16.9-28 in. Rear Firestone 2WD .....	48		
Wheel, 12.5 X 80-18 in. Front and 19.5L-24 in. Rear Firestone MFWD .....	38		
Wheel, 12.5 X 80-18 in. Front and 21L-24 in. Rear Firestone MFWD .....	40		
Wheel, 305 X 70D16.5 in. Front and 19.5L-24 in. Rear Firestone MFWD .....	36		
WHEEL, CRANKSHAFT TIMING .....	254		
Window .....	550, 552, 554		
Window Washer Control .....	466		
Window, Rear Cab .....	568		
Windshield .....	550		
Windshield Washer Kit .....	576		
Windshield Washer Nozzle .....	572		
Windshield Washer Plug .....	480		
Windshield Washer Reservoir .....	574		
Windshield Wiper Assembly .....	570		
Windshield Wiper Blade, Rear .....	578		
Windshield Wiper Motor, Rear .....	578		

Rim, 19.5L-24 in. and 12-16.5 in. Goodyear MFWD  
Jante, pont avant Goodyear 19.5L-24 in. et 12-16.5 in.  
Aro, 19,5L-24 Pol e 12-16,5 Pol Goodyear MFWD  
Aro, 19.5L-24 in. y 12-16.5 in. Goodyear MFWD

AT312585\_TX1112385 A.1

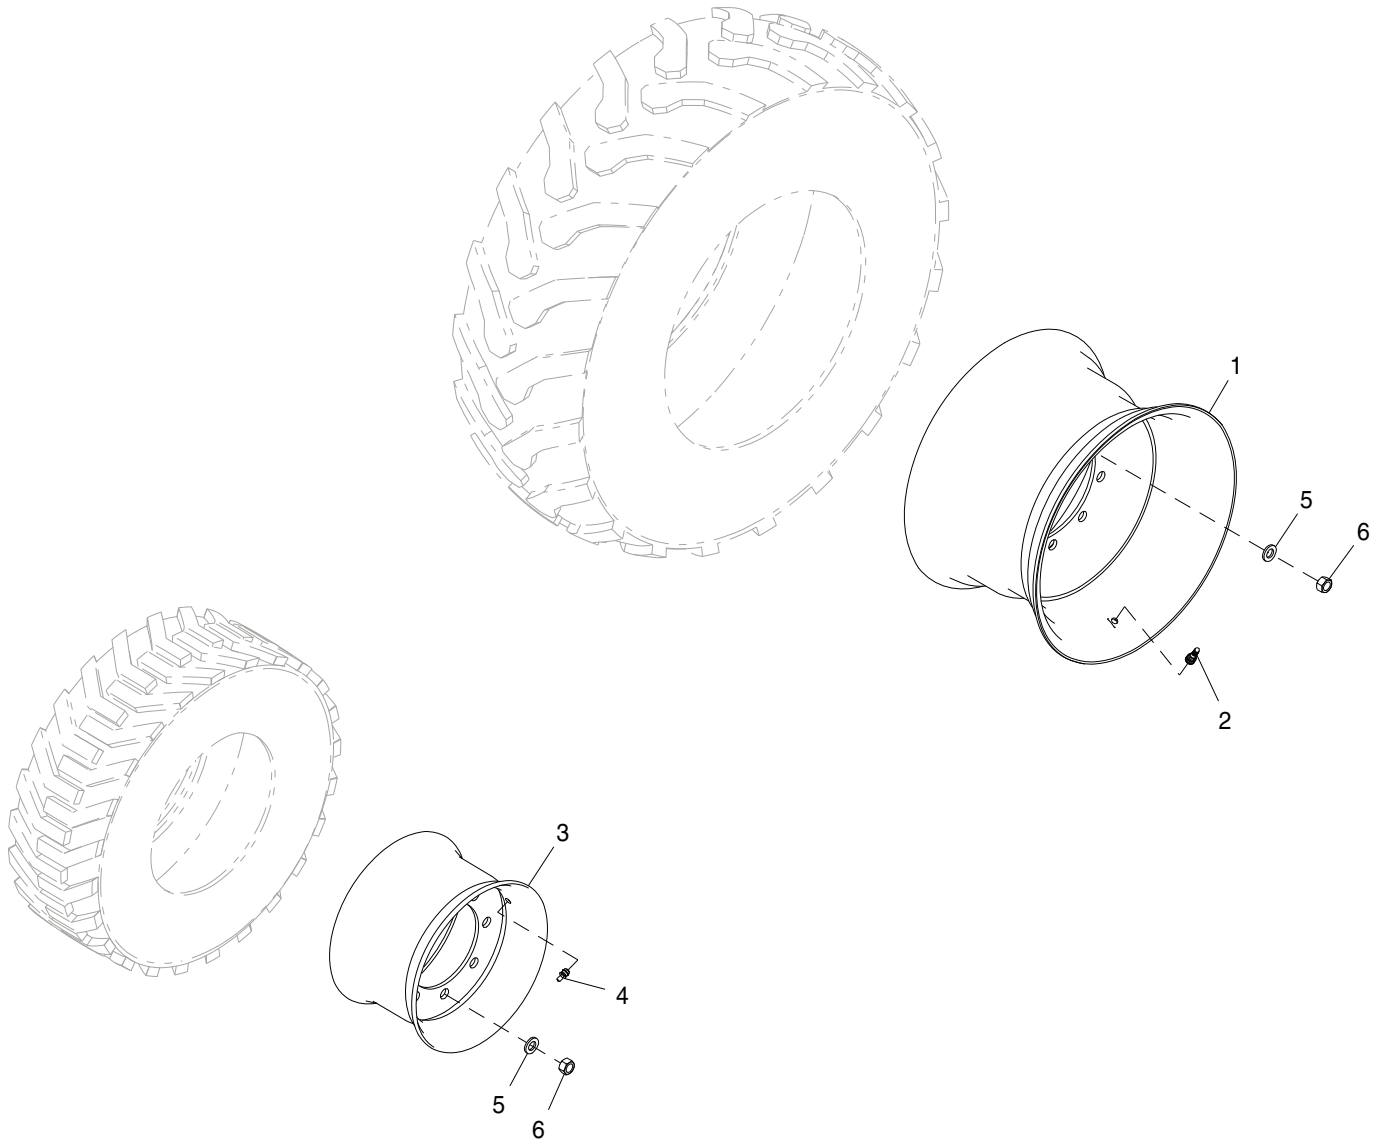


AT312585\_TX1112385

01 Rodas e Pneus e Esteiras  
0110 Rodas Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrío	Qtde	N srie	Notas
1	AT392682	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT314907	Roda	1		419.100 mm (16-1/2")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R52006	Arruela	18		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
6	R94102	Porca	18		M22

Rim, 19.5L-24 in. and 305 X 70D16.5 in. Firestone MFWD  
Jante, pont avant Firestone 19.5L-24 in. et 305 X 70D16.5 in.  
Aro, 19,5L-24 Pol e 305 X 70D16,5 Pol Firestone MFWD  
Aro, 19.5L-24 in. y 305 X 70D16.5 in. Goodyear MFWD

 AT312576\_TX1112382 A.1

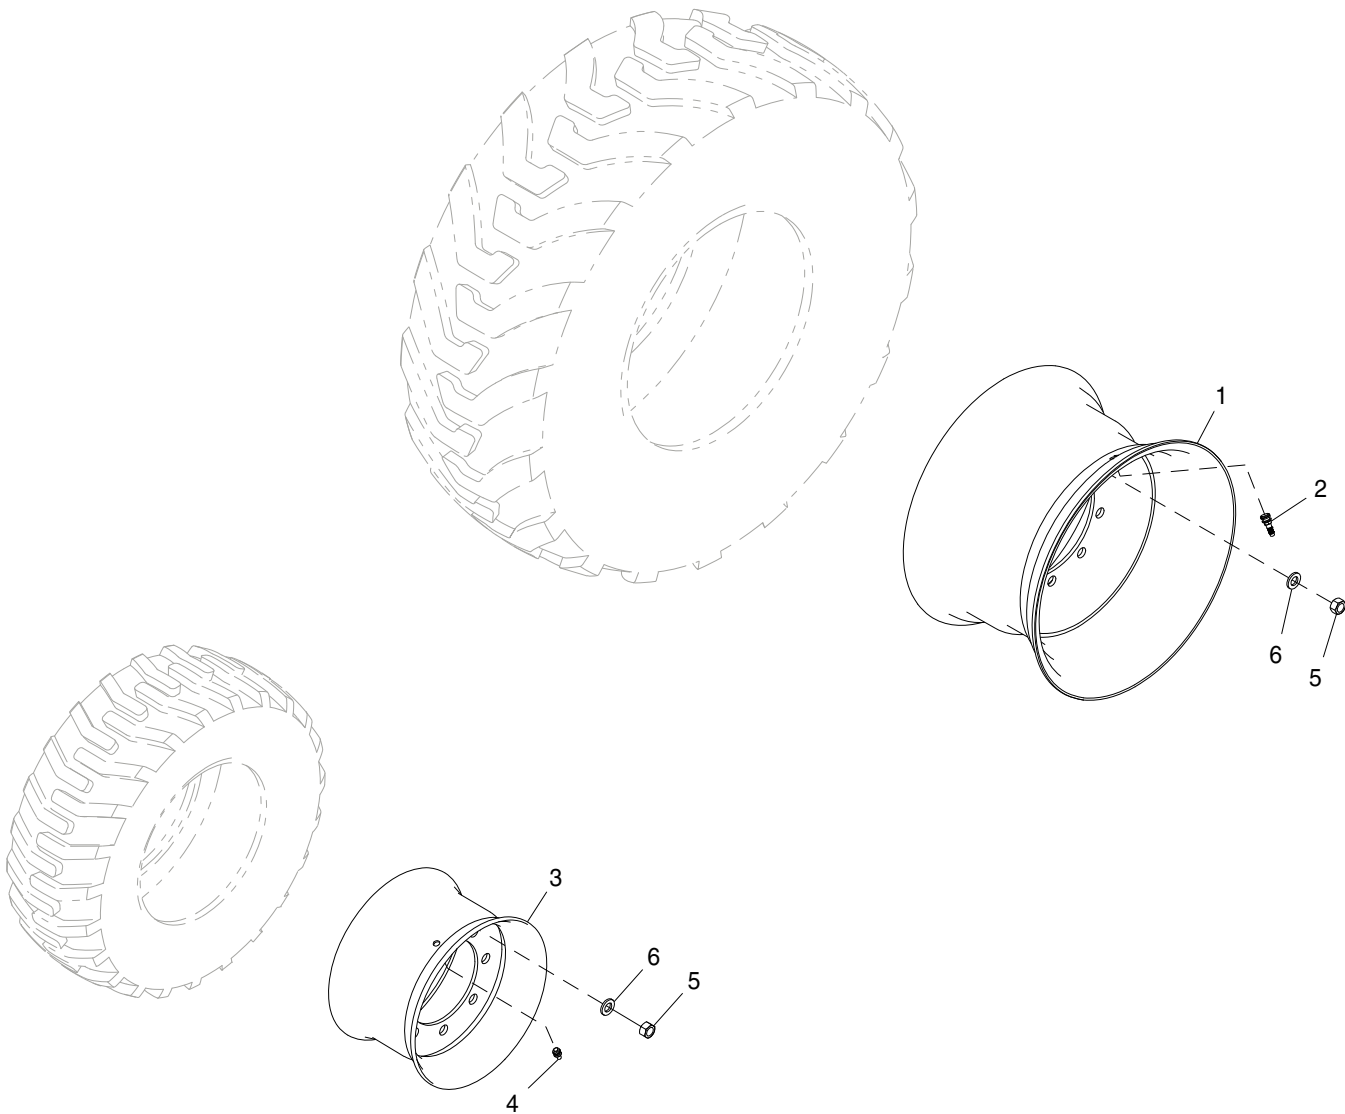


AT312576\_TX1112382

01 Rodas e Pneus e Esteiras  
0110 Rodas Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrto	Qtde	N srie	Notas
1	AT392682	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT314907	Roda	1		419.100 mm (16-1/2")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R94102	Porca	18		M22
6	R52006	Arruela	18		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")

Rim, 19.5L-24 in. and 12.5 X 80-18 in. Firestone MFWD  
Jante, pont avant Firestone 19.5L-24 in. et 12.5 X 80-18 in.  
Aro, 19,5L-24 Pol e 12,5 X 80-18 Pol Firestone MFWD  
Aro, 19.5L-24 in. y 12.5 X 80-18 in. Firestone MFWD

 AT312575\_TX1112379 A.1

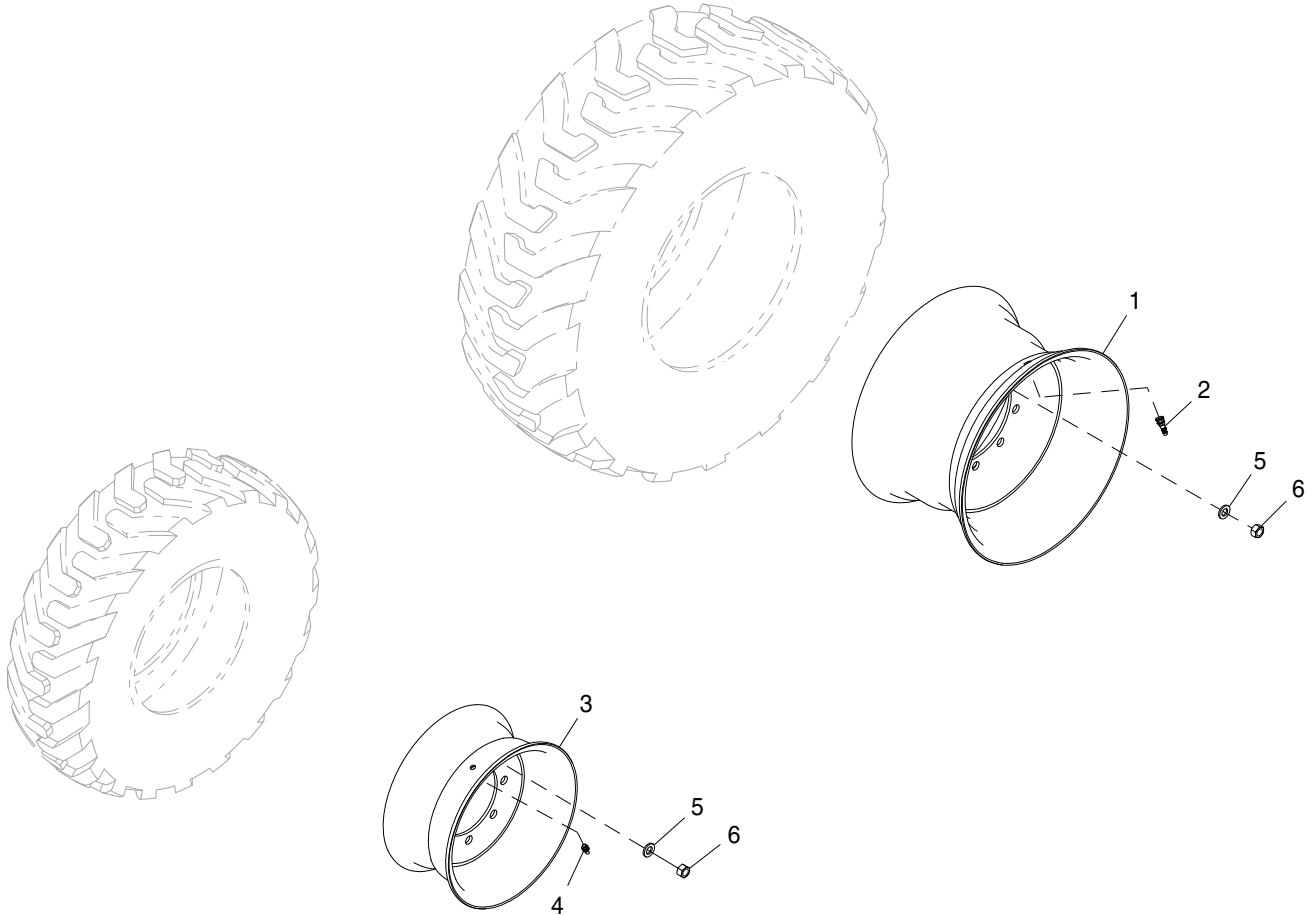


AT312575\_TX1112379

01 Rodas e Pneus e Esteiras  
0110 Rodas Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrío	Qtde	N srie	Notas
1	AT392682	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT317854	Roda	1		457.200 mm (18")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R52006	Arruela	18		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
6	R94102	Porca	18		M22

Rim, 21L-24 in. and 12.5 X 80-18 in. Firestone MFWD  
Jante, pont avant Firestone 21L-24 in. et 12.5 X 80-18 in.  
Aro, 21L-24 Pol e 12,5 X 80-18 Pol Firestone MFWD  
Aro, 21L-24 in. y 12.5 X 80-18 in. Firestone MFWD

 AT312587\_TX1112386 A.1

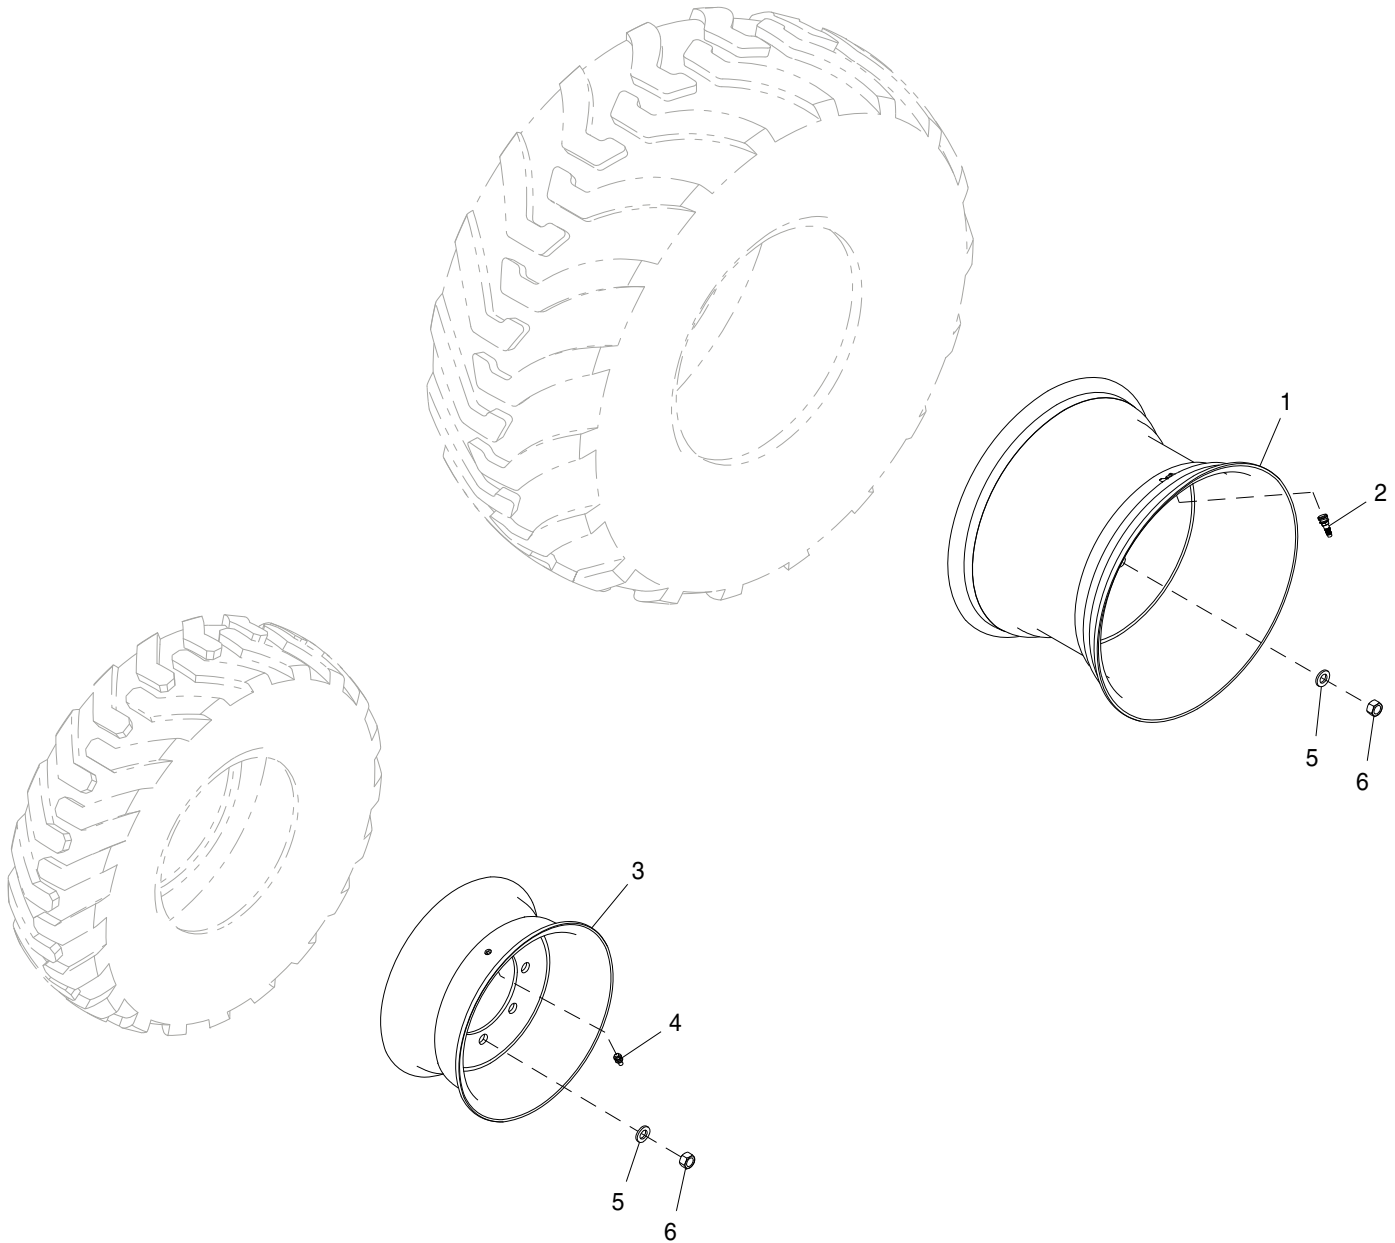


AT312587\_TX1112386



**01 Rodas e Pneus e Esteiras**  
**0110 Rodas Motorizadas, Pneus e Peças de Fixação**

<i>Item</i>	<i>N pea</i>	<i>Descrío</i>	<i>Qtde</i>	<i>N srie</i>	<i>Notas</i>
1	AT314911	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT317854	Roda	1		457.200 mm (18")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R52006	Arruela	18		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
6	R94102	Porca	18		M22

 Wheel Spacer Kit  
Kit d'écarteur de roue  
Kit de Espaçador da Roda  
Juego de espaciadores de rueda  
AT347522\_TX1112391 A.1

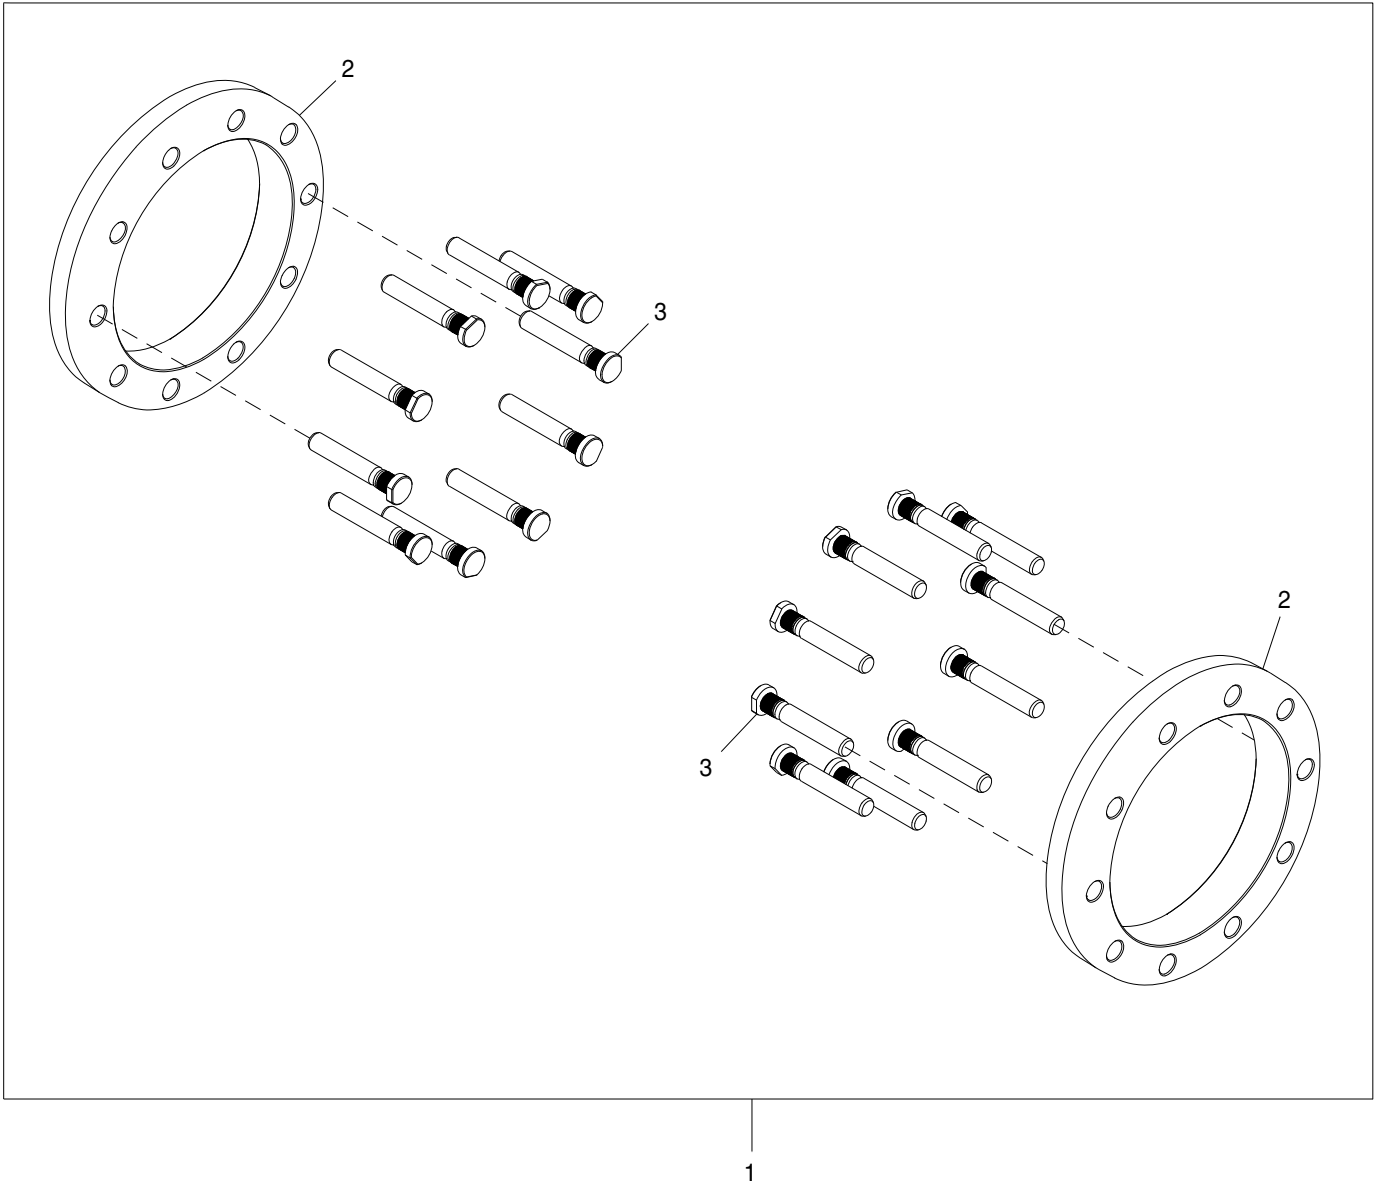


AT347522\_TX1112391

---

<i>Item</i>	<i>N pea</i>	<i>Descrto</i>	<i>Qtde</i>	<i>N srie</i>	<i>Notas</i>
1	AT347522	Conjunto da roda	1		WHOLE GOODS
2	T236775	Espaçador	2		55 mm (2.16 in)
3	T236841	Paraf. de roda	20		M22 X 130

---

 Rim, 19.5L-24 in. and 11L-16 in. Firestone  
Jante, Firestone 19.5L-24 in. et 11L-16 in.  
Aro, 19,5L-24 Pol e 11L-16 Pol Firestone  
Aro, 19.5L-24 in. y 11L-16 in. Firestone  
AT383921\_TX1112392 A.1

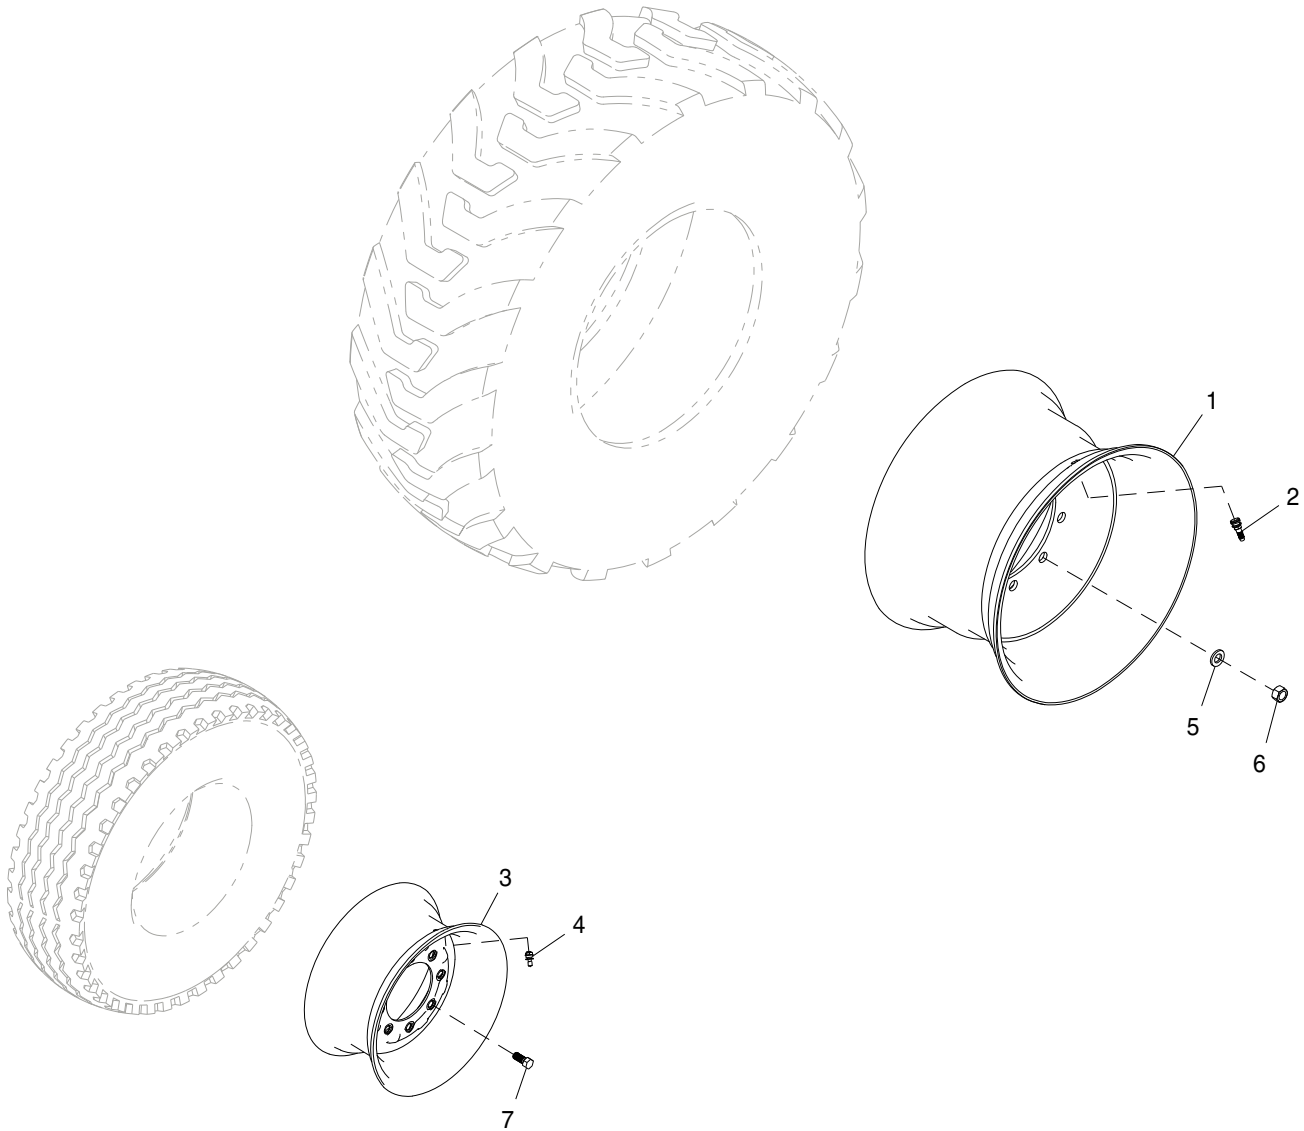


AT383921\_TX1112392

01 Rodas e Pneus e Esteiras  
0120 Rodas Não Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrto	Qtde	N srie	Notas
1	AT392682	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT310291	Roda	1		406.400 mm (16")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R52006	Arruela	10		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
6	R94102	Porca	10		M22
7	JD27	Parafuso	8		

 Rim, 19.5L-24 in. and 11L-16 in. Goodyear  
Jante, Goodyear 19.5L-24 in. et 11L-16 in.  
Aro, 19,5L-24 Pol e 11L-16 Pol Goodyear  
Aro, 19.5L-24 in. y 11L-16 in. Goodyear  
AT312584\_TX1112393 A.1

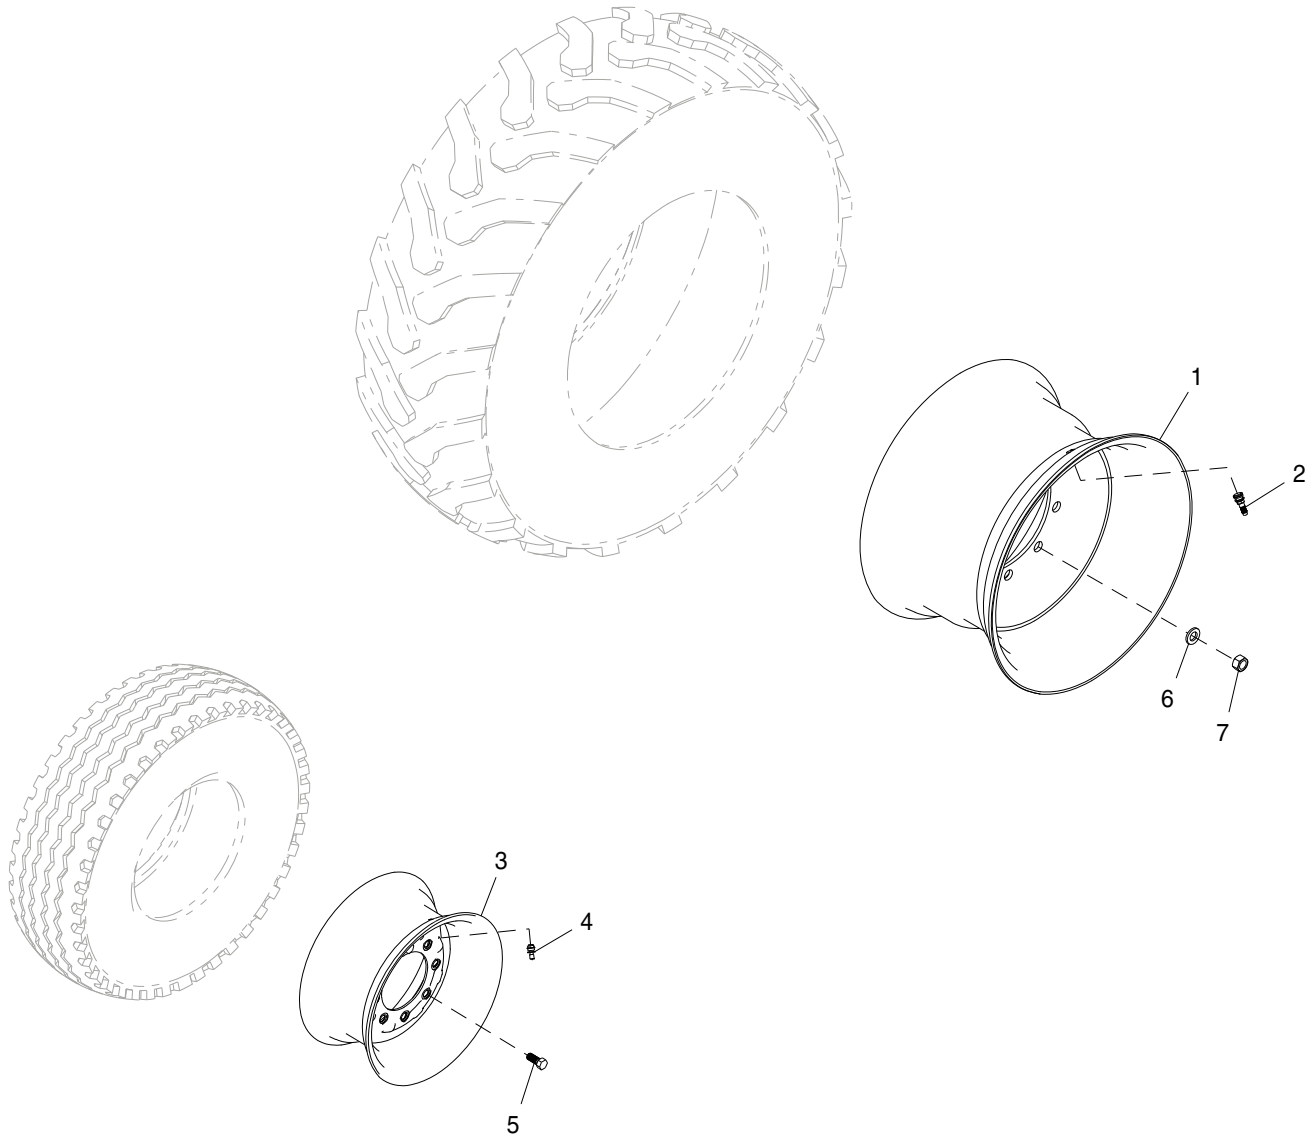


AT312584\_TX1112393

01 Rodas e Pneus e Esteiras  
0120 Rodas Não Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrto	Qtde	N srie	Notas
1	AT392682	Roda	1		609.600 mm (24")
2	AT25226	VálVula do pneu	1		
3	AT310291	Roda	1		406.400 mm (16")
4	AN132749	VálVula do pneu	1		Sem Câmera
5	JD27	Parafuso	8		
6	R52006	Arruela	10		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
7	R94102	Porca	10		M22

Rim, 16.9-28 in. Firestone and 11L-16 in. Goodyear  
Jante, pont avant Firestone 16.9-28 in. et Goodyear 11L-16 in.  
Aro, 16,9-28 Pol Firestone e 11L-16 Pol Goodyear  
Aro, 16.9-28 in. Firestone y 11L-16 in. Goodyear

 AT386096\_TX1112394 A.1

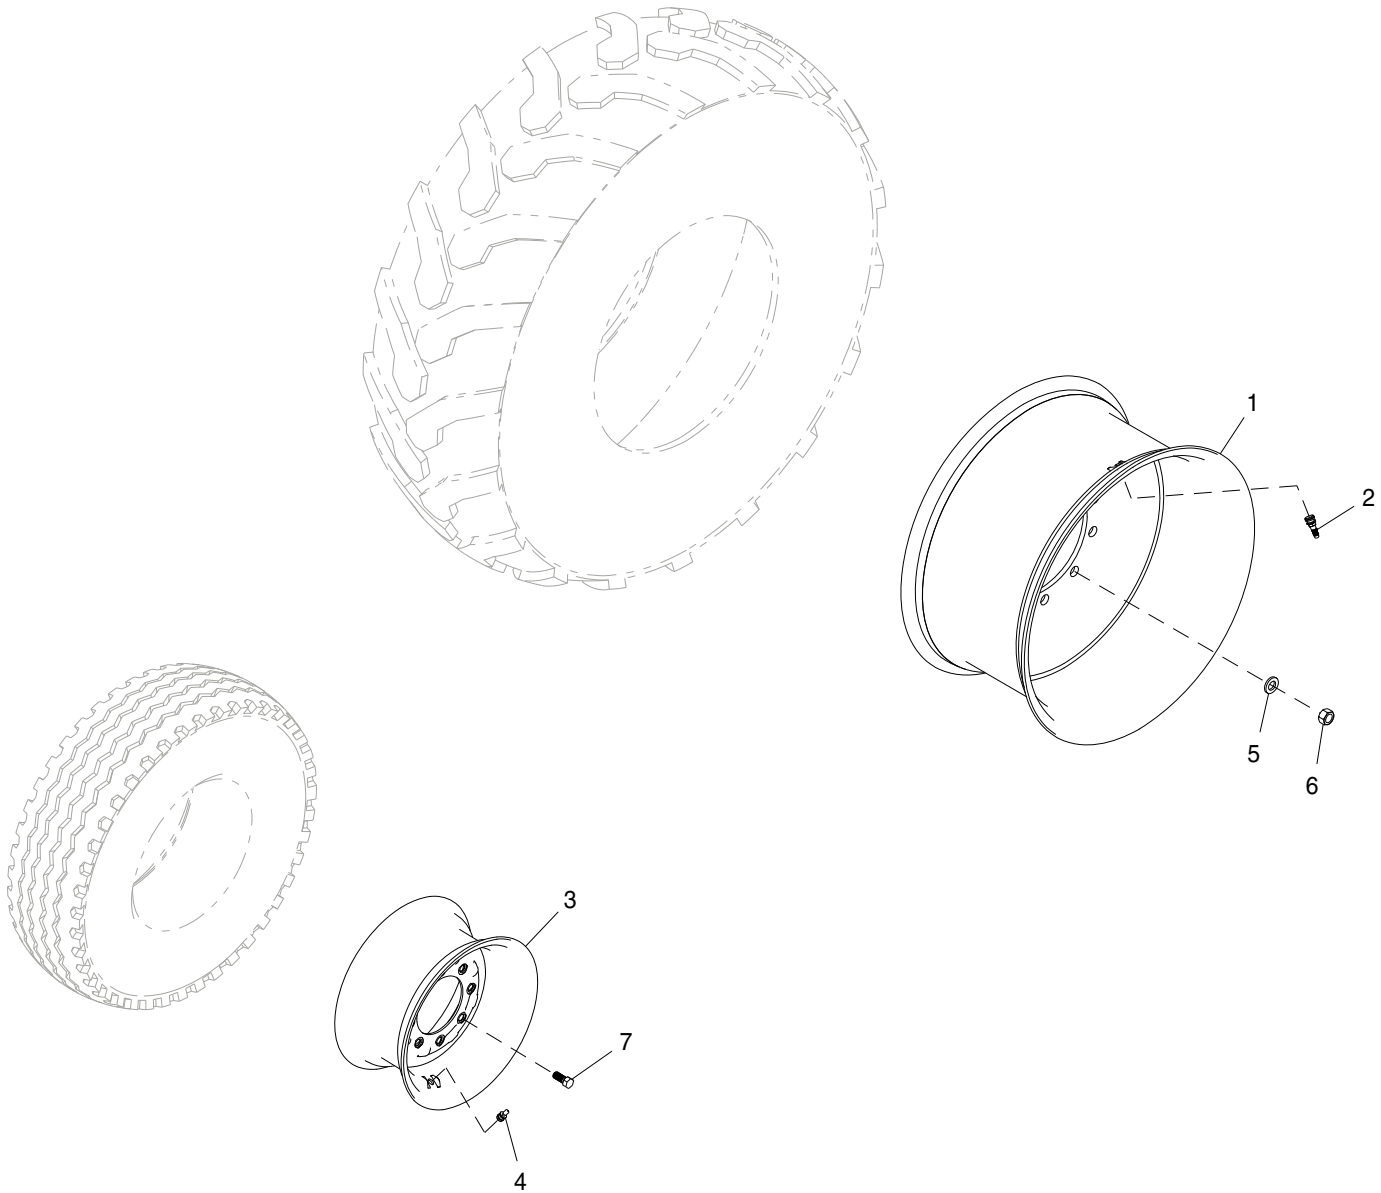

AT386096\_TX1112394




01 Rodas e Pneus e Esteiras  
0120 Rodas Não Motorizadas, Pneus e Peças de Fixação

Item	N pea	Descrto	Qtde	N srie	Notas
1	AT314892	Roda	1		711.200 mm (28")
2	AT25226	VálVula do pneu	1		
3	AT310291	Roda	1		406.400 mm (16")
4	AN132749	VálVula do pneu	1		Sem Câmara
5	R52006	Arruela	10		23.012 X 40.894 X 4.775 mm (29/32" X 1.610" X 3/16")
6	R94102	Porca	10		M22
7	JD27	Parafuso	8		

Complete Rear Axle and Differential Assembly  
Essieu arrière avec différentiel  
Conjunto Completo de Eixo Traseiro e Diferencial  
Diferencial y frenos de disco secos

 TX1016834 A.1

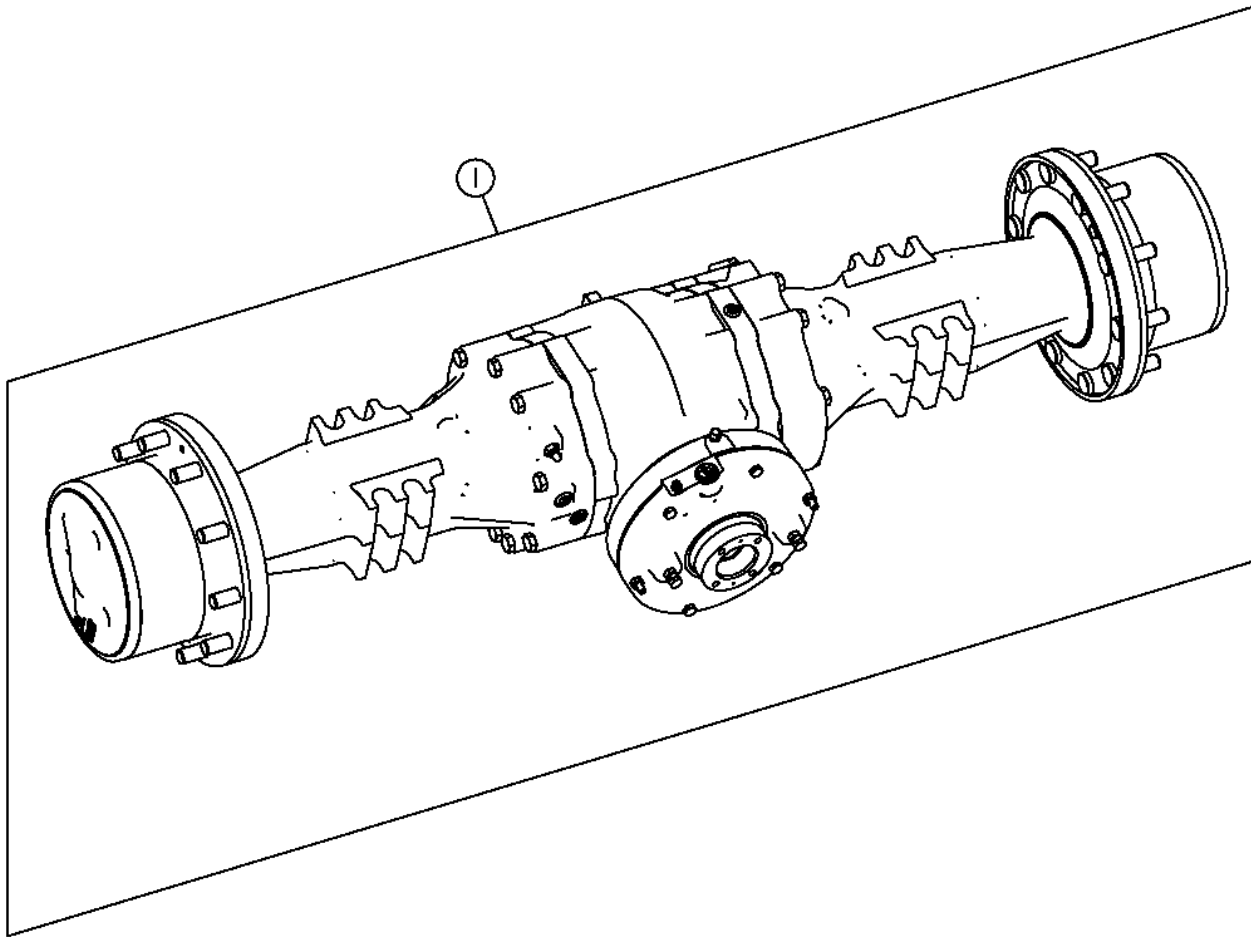

TX1016834

This as a preview PDF file from [best-manuals.com](https://best-manuals.com)



Download full PDF manual at [best-manuals.com](https://best-manuals.com)