

en

Service manual

Wheel loader

Document ID

Order number: 12227516
Issued: 2021-01-26
Version: 11
Author: LBH / Technical Documentation Department

Product ID

Manufacturer: Liebherr-Werk Bischofshofen GmbH
Valid for: L 586-1815

Contact

Liebherr-Werk Bischofshofen GmbH
Dr. Hans Liebherr-Straße 4
A – 5500 Bischofshofen

LBH/122275/16/11/211-20210127_101721/en

Preface

Notes for users

This service manual is designed for trained specialist staff of the Liebherr organisation and their dealers.

This service manual contains specialist knowledge for repairing Liebherr construction machines. Basic specialist knowledge on electronics, hydraulics, mechanics and engine technology is not contained in this service manual. Therefore specialized training and qualifications are necessary. Liebherr recommends participating in the Liebherr training program for construction machines.

In this service manual you will find information on:

- Special tools
- Technical data
- Maintenance intervals and maintenance tasks
- Adjustment procedures
- Structure and function descriptions
- Removal and installation tasks
- Circuit diagrams, hydraulic plans and technical drawings







You will find information on controls and operation in the operator's manual. Information on spare parts are in the spare parts catalogue. Please observe the local accident prevention laws.











You can find information on repairs of machine parts in the service documentation under "Wheel loader - repair instructions".

This document may not be duplicated, even in part, without the permission of Liebherr.

Technical changes are reserved.

Colour legend of hydraulic diagrams

Colour	Line thickness	Designation
 	Thick or thin	High pressure
 	Thick	Tank line
 	Thin	Leak oil line

Colour	Line thick-ness	Designation
 	Thin	Replenishing pressure or pilot pressure to pilot control unit
 	Thin	Control pressure or pilot pressure from pilot control unit
 	Thick	Enclosed oil
 	Thick	Working pressure
 	Thin	Load sensing pressure

Colour legend of hydraulic diagrams

Contents

010	Introduction	010-1
010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14
010.1.6.1	Intoxicants	010-14

	010.1.6.2	Dangerous fuels and operating fluids	010-14
	010.1.6.3	Transporting machine	010-15
	010.1.6.4	Access to machine	010-15
	010.1.6.5	Machine danger zone	010-16
	010.1.6.6	Visibility	010-16
	010.1.6.7	Protection against vibration	010-17
	010.1.6.8	Operation of machine	010-18
010.1.7		Safe maintenance	010-21
	010.1.7.1	Spare parts	010-21
	010.1.7.2	Heavy parts	010-21
	010.1.7.3	Regular checks	010-22
010.1.8		Modifications to the machine	010-22
	010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2		Special tools for maintenance and repair work	010-23
	010.2.1	Special tools, general	010-23
	010.2.2	Special tools for the diesel engine	010-25
	010.2.3	Special tools for lift cylinders with Z kinematics	010-29
	010.2.4	Special tools for tilt cylinders with Z kinematics	010-29
	010.2.5	Special tools for steering wheel	010-30
	010.2.6	Special tools for steering cylinders	010-30
	010.2.7	Special tools for brake system	010-30
	010.2.8	Special tools for the electrical system	010-31
	010.2.9	Special tools for the transmission	010-32
	010.2.10	Special tools for front axle	010-33
	010.2.11	Special tools for rear axle	010-33
	010.2.12	Special tools for air conditioning system	010-33
	010.2.13	Special tools for Grammer driver's seat	010-35
	010.2.14	Special tools for cab glazing	010-35
	010.2.15	Special tools for the central lubrication system (Liebherr)	010-35
010.3		Standards and regulations	010-37
	010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-37
	010.3.1.1	Range of application and purpose	010-37
	010.3.1.2	Other applicable documents	010-37
	010.3.1.3	Modifications and descriptions	010-38

	010.3.1.4	Tightening torques	010-38
	010.3.2	Liebherr standards for assembly instructions and tightening torques	010-44
010.4		Preservation guidelines	010-45
	010.4.1	General information	010-45
	010.4.2	Machine out of service for an unknown period of time	010-45
	010.4.3	Putting the machine out of service	010-46
	010.4.3.1	Out of service for up to 2 months	010-46
	010.4.3.2	Out of service for up to 12 months	010-47
	010.4.3.3	Out of service for longer than 12 months	010-48
	010.4.4	Putting back into service	010-48
	010.4.4.1	After being out of service for 2 months	010-48
	010.4.4.2	After being out of service for 12 months	010-49
	010.4.4.3	After being out of service for longer than 12 months	010-49
020		Technical data	020-1
	020.1	Overall machine	020-5
	020.1.1	Complete machine with bucket (Z lift arms) <i>L586-1815;</i>	020-5
	020.1.2	Working attachment: light material bucket <i>L586-1815;</i>	020-7
	020.1.3	Working attachment: high dump bucket <i>L586-1815;</i>	020-8
	020.2	Drive group	020-10
	020.2.1	Diesel engine <i>L586-1815;</i>	020-10
	020.2.2	Fuel tank <i>L586-1815;</i>	020-11
	020.2.3	Fuel level sensor <i>L586-1815;</i>	020-11
	020.2.4	Fuel pre-filter (separator filter) <i>L586-1815;</i>	020-11
	020.3	Cooling system	020-12
	020.3.1	Fan pump <i>L586-1815;</i>	020-12
	020.3.2	Fan motor <i>L586-1815;</i>	020-12
	020.3.3	Hydraulic oil temperature sensor B8 <i>L586-1815;</i>	020-12
	020.4	Working hydraulics	020-13

020.4.1	Working pump <i>L586-1815;</i>	020-13
020.4.2	Control block for Z-bar kinematics <i>L586-1815;</i>	020-13
020.4.3	Pilot control valve block <i>L586-1815;</i>	020-14
020.4.4	Pilot control hydro accumulator <i>L586-1815;</i>	020-14
020.4.5	Stabilisation module <i>L586-1815;</i>	020-14
020.4.6	Ride control hydro accumulator <i>L586-1815;</i>	020-14
020.4.7	Z kinematics lift cylinder <i>L586-1815;</i>	020-14
020.4.8	Z kinematics tilt cylinder <i>L586-1815;</i>	020-15
020.4.9	Pressure sensors for lift cylinders and tilt cylinders B90, B91, B92, B93 <i>L586-1815/54472-;</i>	020-15
020.5	Hydraulic components	020-16
020.5.1	Return filter <i>L586-1815;</i>	020-16
020.5.2	Breather filter <i>L586-1815;</i>	020-16
020.6	Steering system	020-17
020.6.1	Steering pump <i>L586-1815;</i>	020-17
020.6.2	Servostat <i>L586-1815;</i>	020-17
020.6.3	Steering cylinder <i>L586-1815;</i>	020-17
020.6.4	Steering damper hydro accumulator <i>L586-1815;</i>	020-18
020.6.5	Emergency steering pump <i>L586-1815;</i>	020-18
020.6.6	Emergency steering pressure switch B3 <i>L586-1815;</i>	020-18
020.6.7	Emergency steering check pressure switch B3a <i>L586-1815;</i>	020-18
020.6.8	Joystick steering control valve block <i>L586-1815/0-51486;</i>	020-19
020.6.9	Joystick steering control valve block <i>L586-1815/51487-;</i>	020-19
020.7	Brake system	020-20

020.7.1	Brake pump <i>L586-1815;</i>	020-20
020.7.2	Compact brake valve <i>L586-1815;</i>	020-20
020.7.3	Service brake hydro accumulator <i>L586-1815;</i>	020-20
020.7.4	Brake light pressure switch B12 <i>L586-1815;</i>	020-20
020.7.5	Brake accumulator pressure sensor B19 <i>L586-1815;</i>	020-21
020.7.6	Parking brake hydro accumulator <i>L586-1815;</i>	020-21
020.8	Electrical system	020-22
020.8.1	Central control unit (Master 4) <i>L586-1815;</i>	020-22
020.8.2	Input module <i>L586-1815;</i>	020-22
020.8.3	Output module <i>L586-1815;</i>	020-22
020.8.4	Battery <i>L586-1815;</i>	020-23
020.8.5	Voltage transformer <i>L586-1815;</i>	020-23
020.8.6	Reversing camera <i>L586-1815;</i>	020-23
020.9	Gearbox	020-25
020.9.1	Transmission <i>L586-1815;</i>	020-25
020.9.2	Filter bypass switch B85 <i>L586-1815;</i>	020-25
020.9.3	Proportional solenoid for gear shifting Y1, Y2, Y3, Y4, Y5, Y6 <i>L586-1815;</i>	020-25
020.9.4	Pressure sensor for hydrostat B80, B81 <i>L586-1815;</i>	020-26
020.9.5	Speed sensor B82, B83, B84 <i>L586-1815;</i>	020-26
020.9.6	Transmission oil temperature sensor B86 <i>L586-1815;</i>	020-26
020.9.7	Proportional solenoid for position control Y7 <i>L586-1815;</i>	020-27
020.10	Axles and drive shafts	020-28
020.10.1	Front axle <i>L586-1815;</i>	020-28

020.10.2	Rear axle <i>L586-1815;</i>	020-28
020.10.3	Drive shaft between diesel engine and transmission <i>L586-1815;</i>	020-28
020.10.4	Drive shaft between transmission and front axle <i>L586-1815;</i>	020-29
020.10.5	Cardan shaft between transmission and rear axle <i>L586-1815;</i>	020-29
020.10.6	Tyres <i>L586-1815;</i>	020-29
	020.10.6.2 Special tyres	020-30
020.11	Steel parts of the basic machine	020-31
020.11.1	Ballast weights <i>L586-1815;</i>	020-31
	020.11.1.1 Standard (Z kinematics)	020-31
	020.11.1.2 Foam-filled tyres or tracks	020-31
020.12	Working attachment	020-32
020.12.1	Quick coupler locking hydraulic cylinder <i>L586-1815;</i>	020-32
020.13	Operator's cab, heating and air conditioning	020-33
	020.13.1.1 Air conditioning compressor	020-33
020.13.2	Air conditioning pressure switch <i>L586-1815;</i>	020-33
020.14	Lubrication system	020-34
020.14.1	Central lubrication system (Liebherr) <i>L586-1815;</i>	020-34
	020.14.1.1 Central lubrication pump	020-34
	020.14.1.2 Progressive distributor	020-34
020.14.2	Progressive distributor <i>L586-1815;</i>	020-35
	020.14.2.1 MX-F	020-35
	020.14.2.2 MX-F 25	020-35
	020.14.2.3 MX-F 45	020-36
	020.14.2.4 MX-F 75	020-36
	020.14.2.5 MX-F105	020-36
020.14.3	Progressive distributor SXE-2 <i>L586-1815;</i>	020-36
	020.14.3.1 SXE-2 / MX-F	020-36
	020.14.3.2 SXE-2 100	020-36
	020.14.3.3 SXE-2 150	020-37

	020.14.3.4	SXE-2 220	020-37
	020.14.3.5	SXE-2 400	020-37
	020.14.3.6	SXE-2 760	020-37
030	Maintenance		030-1
030.1	Maintenance and inspection schedule		030-10
030.2	Filling quantities and lubrication chart		030-15
030.2.1	Recommended lubricants <i>L586-1815;</i>		030-15
030.2.2	Recommended operating fluids <i>L586-1815;</i>		030-16
030.3	Lubricants and fuels		030-17
030.3.1	General information on lubricants and fuels		030-17
	030.3.1.1	General questions	030-17
	030.3.1.2	Safety data sheets	030-17
	030.3.1.3	Technical data sheets	030-17
	030.3.1.4	Specific Liebherr standards	030-17
030.3.2	General information on changing lubricants and fuels		030-17
030.3.3	Converting hydraulic system from mineral oils to biodegradable hydraulic fluids		030-18
030.3.4	Diesel fuels for diesel engines without emission-type approval <i>L586-1815;</i>		030-18
	030.3.4.1	Minimum quality requirement	030-18
	030.3.4.2	Operating temperatures of diesel fuels	030-18
	030.3.4.3	Minimum quality requirement	030-19
030.3.5	Engine oils for diesel engines without emission-type approval <i>L586-1815;</i>		030-19
	030.3.5.1	Liebherr recommendation	030-19
	030.3.5.2	Other approved engine oils	030-19
	030.3.5.3	Minimum quality requirement	030-19
	030.3.5.4	Changing intervals	030-20
	030.3.5.5	Complicating factors	030-20
030.3.6	Refrigerant <i>L586-1815;</i>		030-20
030.3.7	Coolant <i>L586-1815;</i>		030-20
	030.3.7.1	Requirements for the water used	030-20
	030.3.7.2	Antifreeze and corrosion inhibitor	030-20

	030.3.7.3	Minimum quality requirement	030-21
030.3.8	Hydraulic oil <i>L586-1815;</i>		030-21
	030.3.8.1	Liebherr recommendation	030-21
	030.3.8.2	Minimum quality requirement	030-21
	030.3.8.3	Oil analysis	030-22
	030.3.8.4	Oil change	030-22
030.3.9	Splitter box oil <i>L586-1815;</i>		030-22
	030.3.9.1	Liebherr recommendation	030-22
	030.3.9.2	Minimum quality requirements	030-22
030.3.10	Gear oil <i>L586-1815;</i>		030-23
	030.3.10.1	Liebherr recommendation	030-23
	030.3.10.2	Minimum quality requirement	030-23
030.3.11	Axle oil <i>L586-1815;</i>		030-23
	030.3.11.1	Liebherr recommendation	030-23
	030.3.11.2	Minimum quality requirement	030-23
030.3.12	Lubrication grease <i>L586-1815;</i>		030-24
	030.3.12.1	Liebherr recommendation	030-24
	030.3.12.2	Minimum quality requirement	030-24
030.4	Maintenance tasks		030-25
030.4.1	Safety precautions <i>L586-1815;</i>		030-25
030.4.2	Preparatory tasks for maintenance		030-25
	030.4.2.1	Maintenance positions <i>L586-1815;</i>	030-26
	030.4.2.2	Opening the service hatches <i>L586-1815;</i>	030-27
	030.4.2.3	Turning off the battery main switch <i>L586-1815/0-54471;</i>	030-31
	030.4.2.4	Turning off the battery main switch <i>L586-1815/54472-;</i>	030-32
030.4.3	Overall machine		030-33
	030.4.3.1	Checking machine is in proper condition <i>L586-1815;</i>	030-33
	030.4.3.2	Removing loose parts, dirt, ice and snow from machine <i>L586-1815;</i>	030-35

030.4.3.3	Cleaning machine <i>L586-1815;</i>	030-35
030.4.3.4	Changing the VCI-capsules <i>L586-1815;</i>	030-38
030.4.3.5	Operating fluid analysis: General specifications <i>L586-1815;</i>	030-41
030.4.3.6	Operating fluid analysis: filling out sample information form <i>L586-1815;</i>	030-44
030.4.3.7	Fuel and operating fluid analysis: scope of analysis <i>L586-1815;</i>	030-50
030.4.3.8	Analysis of lubricants and fuels <i>L586-1815;</i>	030-54
030.4.4	Drive group	030-61
030.4.4.1	Checking diesel engine oil level <i>L586-1815;</i>	030-61
030.4.4.2	Diesel engine: changing the diesel engine oil <i>L586-1815;</i>	030-64
030.4.4.3	Diesel engine: Changing the oil filter <i>L586-1815;</i>	030-67
030.4.4.4	Checking diesel engine belt drive <i>L586-1815;</i>	030-68
030.4.4.5	Changing diesel engine belt drive <i>L586-1815;</i>	030-69
030.4.4.6	Engine: Checking the fastening of the engine control units ad the sensor cable connections <i>L586-1815;</i>	030-70
030.4.4.7	Diesel engine: checking valve clearance <i>L586-1815;</i>	030-71
030.4.4.8	Diesel engine: Changing the oil separator filter insert <i>L586-1815;</i>	030-73
030.4.4.9	Diesel engine: Changing the heating flange <i>L586-1815;</i>	030-73
030.4.4.10	Fuel tank: Draining off condensate and sediment <i>L586-1815;</i>	030-74
030.4.4.11	Fuel pre-filter: Draining off condensate <i>L586-1815;</i>	030-75
030.4.4.12	Changing fuel pre-filter cartridge <i>L586-1815;</i>	030-76
030.4.4.13	Changing fuel fine filter element <i>L586-1815;</i>	030-79
030.4.4.14	Air filter system: Cleaning the service cover and dust discharge valve <i>L586-1815;</i>	030-82

030.4.4.15	Cleaning or changing the main element of the air filter system <i>L586-1815;</i>	030-83
030.4.4.16	Air filter system: Changing the safety element <i>L586-1815;</i>	030-86
030.4.4.17	Splitter box: Checking the oil level <i>L586-1815;</i>	030-87
030.4.4.18	Splitter box: Changing the oil <i>L586-1815;</i>	030-89
030.4.4.19	Diesel engine: checking that the intake system is in good condition and not loose or leaking <i>L586-1815;</i>	030-91
030.4.4.20	Checking the diesel engine for leaks, contamination and damage <i>L586-1815;</i>	030-92
030.4.5	Cooling system	030-93
030.4.5.1	Cooling system: Checking the coolant level <i>L586-1815;</i>	030-93
030.4.5.2	Coolant: checking anti-freeze and corrosion protection agent concentration <i>L586-1815;</i>	030-95
030.4.5.3	Cleaning the cooling system <i>L586-1815;</i>	030-101
030.4.5.4	Changing coolant in cooling system <i>L586-1815;</i>	030-102
030.4.6	Hydraulic components	030-105
030.4.6.1	Hydraulic tank: checking oil level <i>L586-1815;</i>	030-105
030.4.6.2	Draining off condensate and sediment from the hydraulic tank <i>L586-1815;</i>	030-107
030.4.6.3	Change the return filter insert in the hydraulic tank. <i>L586-1815;</i>	030-108
030.4.6.4	Changing the hydraulic tank breather filter <i>L586-1815;</i>	030-109
030.4.6.5	Changing the oil in the hydraulic tank <i>L586-1815;</i>	030-110
030.4.7	Steering system	030-113
030.4.7.1	Test steering. <i>L586-1815;</i>	030-113
030.4.8	Brake system	030-114
030.4.8.1	Service brake: checking function and effectiveness <i>L586-1815;</i>	030-114
030.4.8.2	Checking service brake discs for wear <i>L586-1815;</i>	030-115

030.4.8.3	Checking the gap and wear on the parking brake linings <i>L586-1815;</i>	030-117
030.4.8.4	Emergency actuation of parking brake: checking the seal <i>L586-1815;</i>	030-123
030.4.8.5	Checking emergency parking brake actuation <i>L586-1815;</i>	030-123
030.4.9	Electrical system	030-124
030.4.9.1	Checking function of the lighting and horn <i>L586-1815;</i>	030-124
030.4.9.2	Batteries: Checking the acid level and terminals <i>L586-1815;</i>	030-125
030.4.9.3	Use the control lever to change the travel direction switch rocker and cap. <i>L586-1815;</i>	030-127
030.4.9.4	Personnel detection: cleaning sensor <i>L586-1815;</i>	030-130
030.4.10	Gearbox	030-130
030.4.10.1	Transmission: checking the oil level <i>L586-1815;</i>	030-130
030.4.10.2	Changing gear oil and gear oil filter <i>L586-1815;</i>	030-133
030.4.10.3	Change the transmission hydrostat oil filter. <i>L586-1815;</i>	030-137
030.4.11	Axles and drive shafts	030-138
030.4.11.1	Axles Changing the oil <i>L586-1815;</i>	030-138
030.4.11.2	Checking drive shafts <i>L586-1815;</i>	030-140
030.4.11.3	Checking the tyre pressure <i>L586-1815;</i>	030-142
030.4.11.4	Checking the wheel tightness <i>L586-1815;</i>	030-143
030.4.12	Steel parts of the basic machine	030-144
030.4.12.1	Cooler hood: Lubricating moving parts with penetrating oil <i>L586-1815;</i>	030-144
030.4.12.2	Engine hood: Lubricating moving parts with penetrating oil <i>L586-1815;</i>	030-144
030.4.12.3	Right cab access: Lubricating moving parts with penetrating oil <i>L586-1815;</i>	030-145

030.4.12.4	Service hatches: cleaning and maintaining seals <i>L586-1815;</i>	030-146
030.4.13	Working attachment	030-146
030.4.13.1	Lift arms: Checking the bucket bearing seals <i>L586-1815;</i>	030-146
030.4.13.2	Lift arms: checking bucket bearing bushings <i>L586-1815;</i>	030-147
030.4.13.3	Checking the lift arm bucket stops <i>L586-1815;</i>	030-148
030.4.13.4	Bucket: Check the teeth or undercut blade for wear and replace if necessary <i>L586-1815;</i>	030-150
030.4.13.5	Lubricate and test the bearings on the quick coupler. <i>L586-1815;</i>	030-153
030.4.13.6	High dump bucket: Lubricating the bearing <i>L586-1815;</i>	030-154
030.4.14	Operator's cab, heating and air conditioning	030-154
030.4.14.1	Operator's cab: cleaning the fresh and recirculated air filters <i>L586-1815;</i>	030-154
030.4.14.2	Operator's cab: changing fresh air filter and recircu- lated air filters <i>L586-1815;</i>	030-155
030.4.14.3	Safety belt: Checking the condition and function <i>L586-1815;</i>	030-157
030.4.14.4	Testing the windscreen washer system <i>L586-1815;</i>	030-158
030.4.14.5	Windscreen washer system: filling windscreen washer fluid <i>L586-1815;</i>	030-158
030.4.14.6	Cab: Lubricating the lock and cylinder with pene- trating oil <i>L586-1815;</i>	030-159
030.4.14.7	Operator's cab: cleaning and maintaining seals <i>L586-1815;</i>	030-159
030.4.14.8	Heating and air conditioning: Checking the function <i>L586-1815;</i>	030-160
030.4.15	Lubrication system	030-161
030.4.15.1	Checking the level in the grease reservoir of the central lubrication system <i>L586-1815;</i>	030-161
030.4.15.2	Central lubrication system: Checking the pipes, hoses and lubrication points for leaks and damage <i>L586-1815;</i>	030-162

	030.4.15.3	Central lubrication system: Checking the lubrication of the bearings <i>L586-1815;</i>	030-163
030.5		Testing and adjustment checklist <i>L586-1815;</i>	030-164
030.6		Testing and adjustment tasks	030-169
	030.6.1	Safety precautions <i>L586-1815;</i>	030-169
	030.6.2	Overall machine	030-169
	030.6.2.1	Preparing for adjustment procedures <i>L586-1815;</i>	030-169
	030.6.2.2	Hydraulic oil: operating temperature <i>L586-1815;</i>	030-171
	030.6.2.3	Gear oil operating temperature <i>L586-1815;</i>	030-172
	030.6.2.4	Service management <i>L586-1815;</i>	030-172
	030.6.3	Drive group	030-173
	030.6.3.1	Pedals: calibration <i>L586-1815;</i>	030-173
	030.6.3.2	Reading the diesel engine service files <i>L586-1815;</i>	030-174
	030.6.4	Cooling system	030-176
	030.6.4.1	Fan speed proportional solenoid valve <i>L586-1815;</i>	030-176
	030.6.5	Working hydraulics	030-178
	030.6.5.1	Multi-lever control (option): calibration <i>L586-1815;</i>	030-178
	030.6.5.2	Calibrating working hydraulics angle sensors <i>L586-1815;</i>	030-180
	030.6.5.3	Calibrating proportional solenoids in control valve block <i>L586-1815;</i>	030-183
	030.6.5.4	Pilot control valve block: pressure reducing valve <i>L586-1815;</i>	030-186
	030.6.5.5	Working pump: adjusting screw for Qmin (standby pressure) <i>L586-1815;</i>	030-187
	030.6.5.6	Working pump flow regulator (differential pressure) <i>L586-1815;</i>	030-189
	030.6.5.7	Working pump: power regulator <i>L586-1815;</i>	030-190
	030.6.5.8	Control valve block: secondary pressure relief valves <i>L586-1815;</i>	030-192

030.6.5.9	Control valve block: primary pressure relief valve <i>L586-1815;</i>	030-195
030.6.5.10	Control valve block: LS pressure cut-off valve <i>L586-1815;</i>	030-196
030.6.5.11	Stabilisation module: Cut-off function <i>L586-1815;</i>	030-198
030.6.5.12	Ride control hydro accumulator nitrogen filling <i>L586-1815;</i>	030-199
030.6.6	Hydraulic components	030-200
030.6.6.1	Hydro accumulator: checking and topping up nitrogen filling <i>L586-1815;</i>	030-200
030.6.6.2	Checking the hydraulic lines for damage <i>L586-1815;</i>	030-201
030.6.7	Steering system	030-206
030.6.7.1	Joystick for joystick steering (option): calibration <i>L586-1815/55878-;</i>	030-206
030.6.7.2	Angle sensor for articulation angle (option): calibration <i>L586-1815;</i>	030-206
030.6.7.3	Control block for joystick steering (option): calibration <i>L586-1815;</i>	030-208
030.6.7.4	Steering pump: LS pressure cut-off valve <i>L586-1815;</i>	030-209
030.6.7.5	Steering pump flow regulator (standby pressure) <i>L586-1815;</i>	030-211
030.6.7.6	Steering pump: flow regulator (differential pressure) (up to software version 020) <i>L586-1815;</i>	030-212
030.6.7.7	Steering pump: flow regulator (differential pressure) (from software version 024) <i>L586-1815;</i>	030-214
030.6.7.8	Steering damper hydro accumulator nitrogen filling <i>L586-1815;</i>	030-216
030.6.7.9	Control block for joystick steering: determining installation position of position sensors <i>L586-1815;</i>	030-217
030.6.8	Brake system	030-218
030.6.8.1	Brake accumulator pressure sensor B19: deviation <i>L586-1815;</i>	030-218
030.6.8.2	Compact brake valve hydro accumulator charging function <i>L586-1815;</i>	030-219
030.6.8.3	Service brake pressure <i>L586-1815;</i>	030-220

030.6.8.4	Service brake hydro accumulator capacity <i>L586-1815;</i>	030-221
030.6.9	Electrical system	030-223
030.6.9.1	Central control unit (Master4) Creating a Servicefile <i>L586-1815;</i>	030-223
030.6.9.2	Central control unit (Master4): software update <i>L586-1815;</i>	030-226
030.6.9.3	Setting the IP addresses of the central control unit (Master4) <i>L586-1815;</i>	030-229
030.6.9.4	Resetting the central control unit (Master4) <i>L586-1815;</i>	030-232
030.6.9.5	Testing CAN line <i>L586-1815;</i>	030-233
030.6.9.6	Addressing CAN module and checking system information <i>L586-1815;</i>	030-236
030.6.10	Gearbox	030-240
030.6.10.1	Gearbox: basic calibration <i>L586-1815;</i>	030-240
030.6.10.2	Gearbox: service calibration <i>L586-1815;</i>	030-242
030.6.10.3	Travel gearbox: Check power output <i>L586-1815;</i>	030-245
030.6.10.4	Transmission: Reversing test <i>L586-1815;</i>	030-248
030.6.10.5	Transmission control unit (TCU): Software update <i>L586-1815;</i>	030-250
030.6.11	Axles and drive shafts	030-253
030.6.11.1	Tyres: setting radius <i>L586-1815;</i>	030-253
030.6.12	Working attachment	030-254
030.6.12.1	Valve block for quick coupler (option): Pressure reducing valve <i>L586-1815;</i>	030-254
030.6.12.2	Parameters for lift arm geometry <i>L586-1815;</i>	030-255
030.6.12.3	Working attachment: automatic return of 1st additional function <i>L586-1815;</i>	030-256
030.6.13	Operator's cab, heating and air conditioning	030-257
030.6.13.1	Checking pressure and temperature conditions of air conditioning unit <i>L586-1815;</i>	030-257

	030.6.13.2	Calibrating the display (Display4) <i>L586-1815;</i>	030-258
	030.6.13.3	Formatting the display and reinstalling the software (Display4) <i>L586-1815;</i>	030-260
	030.6.14	Options	030-261
	030.6.14.1	Checking the LiDAT connection status <i>L586-1815;</i>	030-261
	030.6.14.2	LiDAT: activating data transmission manually <i>L586-1815;</i>	030-263
	030.6.14.3	Liebherr weighing device with Truck Payload Assist: calibration <i>L586-1815/54472-;</i>	030-265
	030.6.14.4	Skyview 360°: calibration <i>L586-1815;</i>	030-265
	030.6.14.5	Personnel detection: transmitting configuration files <i>L586-1815;</i>	030-272
040	Drive group		040-1
	040.1	Engine	040-2
	040.1.2	Electrical components of diesel engine <i>L586-1815;</i>	040-6
	040.1.3	Sensors on diesel engine <i>L586-1815;</i>	040-10
	040.1.4	Fuel system	040-21
	040.1.4.2	Fuel level sensor <i>L586-1815;</i>	040-25
	040.1.4.3	Separ fuel pre-filter <i>L586-1815;</i>	040-27
	040.1.5	Air filter system	040-27
	040.1.5.1	Air filter <i>L586-1815;</i>	040-28
	040.1.5.2	Air mass sensor <i>L586-1815;</i>	040-29
	040.1.6	Exhaust system	040-30
	040.1.6.1	Exhaust system <i>L586-1815;</i>	040-30
	040.2	Clutch <i>L586-1815;</i>	040-31
	040.3	Splitter box <i>L586-1815;</i>	040-33

050	Cooling system	050-1
050.1	Cooling system: General overview <i>L586-1815;</i>	050-2
050.2	Cooling system hydraulics	050-3
050.2.1	Overview of cooling system hydraulics <i>L586-1815;</i>	050-4
050.2.2	Fan pump <i>L586-1815;</i>	050-8
050.2.3	Fan motor <i>L586-1815;</i>	050-9
050.3	Cooling system electronics	050-13
050.3.1	Overview of electrical control system of cooling system <i>L586-1815;</i>	050-13
050.3.2	Hydraulic oil temperature sensor <i>L586-1815;</i>	050-16
050.4	Cooler	050-18
050.4.1	Cooler unit <i>L586-1815;</i>	050-18
050.5	Reversible fan drive	050-19
050.5.1	Overview of reversible fan drive <i>L586-1815;</i>	050-19
050.5.2	Fan reversal valve block <i>L586-1815;</i>	050-21
060	Working hydraulics	060-1
060.1	Overview of Z-bar kinematics working hydraulics <i>L586-1815;</i>	060-2
060.2	Working pump <i>L586-1815;</i>	060-7
060.3	Control block for Z-bar kinematics <i>L586-1815;</i>	060-15
060.4	Pilot control	060-24
060.4.1	Pilot control valve block <i>L586-1815;</i>	060-24
060.5	Ride control	060-26
060.5.1	Overview of ride control system <i>L586-1815;</i>	060-26
060.5.2	Stabilisation module <i>L586-1815;</i>	060-29
060.5.3	Electric ride control unit <i>L586-1815;</i>	060-31
060.6	Electronics of the working hydraulics	060-33

060.6.1	Overview of electrical controls the working hydraulics <i>L586-1815;</i>	060-33
060.6.2	Working hydraulics angle sensors <i>L586-1815;</i>	060-35
060.6.3	Pressure sensors for lift cylinders and tilt cylinders <i>L586-1815/54472-;</i>	060-37
060.7	Pipe break protection	060-39
060.7.1	Pipe break protection: overview <i>L586-1815;</i>	060-39
060.7.2	Pipe break protection valve block (lift cylinder) <i>L586-1815;</i>	060-42
060.7.3	Pipe break protection valve block (tilt cylinder) <i>L586-1815;</i>	060-44
060.7.4	Ride control release solenoid valve <i>L586-1815;</i>	060-45
080	Hydraulic components	080-1
080.1	Hydraulic system: overview <i>L586-1815/0-50692;</i>	080-2
080.2	Hydraulic system: overview <i>L586-1815/50693-;</i>	080-6
080.3	Hydraulic tank	080-10
080.3.1	Overview of hydraulic tank <i>L586-1815;</i>	080-10
080.3.2	Steel tank <i>L586-1815;</i>	080-12
080.3.3	Return filter <i>L586-1815;</i>	080-14
080.3.4	Leak oil strainer <i>L586-1815;</i>	080-15
080.3.5	Breather filter <i>L586-1815;</i>	080-15
090	Steering system	090-1
090.1	Steering system overview <i>L586-1815/0-50692;</i>	090-3
090.2	Steering system overview <i>L586-1815/50693-;</i>	090-7
090.3	Steering pump <i>L586-1815;</i>	090-11
090.4	Servostat <i>L586-1815;</i>	090-17
090.5	Steering cylinder	090-20

090.5.1	Steering cylinder <i>L586-1815;</i>	090-20
090.5.2	Steering stabilisation valve block <i>L586-1815/0-50692;</i>	090-21
090.5.3	Steering stabilisation valve block <i>L586-1815/50693-;</i>	090-23
090.6	Emergency steering	090-25
090.6.1	Emergency steering overview <i>L586-1815;</i>	090-25
090.6.2	Emergency steering pump <i>L586-1815;</i>	090-27
090.6.3	Emergency steering electronics	090-28
090.6.3.1	Overview of electrical controls of emergency steering system <i>L586-1815;</i>	090-29
090.6.3.2	Emergency steering pressure switch <i>L586-1815;</i>	090-33
090.6.3.3	Emergency steering check pressure switch <i>L586-1815;</i>	090-34
090.7	Joystick steering	090-36
090.7.1	Overview of joystick steering <i>L586-1815/0-50692;</i>	090-36
090.7.2	Overview of joystick steering <i>L586-1815/50693-51486;</i>	090-40
090.7.3	Overview of joystick steering <i>L586-1815/51487-;</i>	090-43
090.7.4	Joystick steering control valve block <i>L586-1815/0-51486;</i>	090-46
090.7.5	Joystick steering control valve block <i>L586-1815/51487-;</i>	090-52
090.7.6	Joystick steering electrical system	090-58
090.7.6.1	Electronic control unit for joystick steering: overview <i>L586-1815/0-51486;</i>	090-58
090.7.6.2	Electronic control unit for joystick steering: overview <i>L586-1815/51487-55877;</i>	090-64
090.7.6.3	Electronic control unit for joystick steering: overview <i>L586-1815/55878-;</i>	090-71
090.7.6.4	Joystick with position tracking <i>L586-1815/55878-;</i>	090-79
090.8	2in1 steering	090-81
090.8.1	2in1 steering: total overview <i>L586-1815/0-50692;</i>	090-81
090.8.2	2in1 steering: total overview <i>L586-1815/50693-;</i>	090-83

090.8.3	Servostat for 2in1 steering <i>L586-1815;</i>	090-86
100	Brake system	100-1
100.1	Overview of brake system <i>L586-1815;</i>	100-2
100.2	Service brake and parking brake	100-7
100.2.1	Brake pump <i>L586-1815;</i>	100-7
100.2.2	Compact brake valve <i>L586-1815;</i>	100-8
100.3	Parking brake	100-16
100.3.1	Parking brake <i>L586-1815;</i>	100-16
110	Electrical system	110-1
110.1	Overview of electrical system <i>L586-1815;</i>	110-3
110.2	Overview of electrical system <i>L586-1815;</i>	110-7
110.3	Lighting <i>L586-1815;</i>	110-11
110.4	Circuit diagrams <i>L586-1815;</i>	110-12
110.5	Electronic control unit	110-14
110.5.1	General overview of electronic control system <i>L586-1815;</i>	110-14
110.5.2	Central control unit (Master4) <i>L586-1815;</i>	110-16
110.5.3	Modules	110-20
110.5.3.1	Overview of the input and output modules <i>L586-1815;</i>	110-21
110.5.3.2	Input modules <i>L586-1815;</i>	110-23
110.5.3.3	Output modules <i>L586-1815;</i>	110-25
110.6	Electrical components of the driver's cab	110-28
110.6.1	Electrical components of the cab General overview <i>L586-1815;</i>	110-28
110.6.2	Fuse and relay boards <i>L586-1815;</i>	110-29
110.6.3	Door contact switch (inductive sensor) <i>L586-1815;</i>	110-34

110.7	Electrical components in the rear section	110-35
110.7.1	Battery installation <i>L586-1815;</i>	110-35
110.7.2	Electric battery main switch <i>L586-1815/54472-;</i>	110-37
110.8	Rear area monitoring with camera	110-41
110.8.1	Rear area monitoring with camera: General overview <i>L586-1815;</i>	110-41
110.8.2	Camera <i>L586-1815;</i>	110-42
120	Gearbox	120-1
120.1	Overview of transmission <i>L586-1815;</i>	120-2
120.2	Transmission hydraulics	120-16
120.2.1	Overview of transmission hydraulics <i>L586-1815;</i>	120-16
120.2.2	Gear pump <i>L586-1815;</i>	120-20
120.2.3	Transmission control valve block <i>L586-1815;</i>	120-21
120.2.4	Hydrostat module <i>L586-1815;</i>	120-24
120.3	Transmission electronics	120-29
120.3.1	Overview of the electrical control system of the transmission <i>L586-1815;</i>	120-29
120.3.2	Filter bypass switch <i>L586-1815;</i>	120-30
120.3.3	Gear shifting proportional solenoid <i>L586-1815;</i>	120-31
120.3.4	Pressure sensor for hydrostat <i>L586-1815;</i>	120-32
120.3.5	Engine speed sensor <i>L586-1815;</i>	120-33
120.3.6	Temperature sensor <i>L586-1815;</i>	120-34
120.3.7	Proportional solenoid for position control <i>L586-1815;</i>	120-34
130	Axles and drive shafts	130-1
130.1	Axles	130-2
130.1.1	Front axle <i>L586-1815;</i>	130-2

130.1.2	Rear axle <i>L586-1815;</i>	130-7
130.2	Cardan shafts	130-9
130.2.1	Drive shaft between diesel engine and transmission <i>L586-1815;</i>	130-9
130.2.2	Drive shaft between transmission and front axle <i>L586-1815;</i>	130-10
130.2.3	Drive shaft between transmission and rear axle <i>L586-1815;</i>	130-11
140	Steel parts of the basic machine	140-1
140.1	Vehicle frame	140-2
140.1.1	Articulation bearing <i>L586-1815;</i>	140-2
140.1.2	Articulation lock <i>L586-1815;</i>	140-3
140.2	Covering	140-4
140.2.1	Linear motor for opening the engine hood <i>L586-1815;</i>	140-4
150	Working attachment	150-1
150.1	Lift arms for Z kinematics	150-2
150.1.1	Z kinematics <i>L586-1815;</i>	150-2
150.2	Quick coupler	150-4
150.2.1	Quick coupler <i>L586-1815;</i>	150-4
150.2.2	Quick coupler hydraulics	150-5
150.2.2.1	Overview of the quick coupler hydraulics <i>L586-1815/0-45466;</i>	150-5
150.2.2.2	Overview of quick coupler hydraulics <i>L586-1815/45467-51252;</i>	150-7
150.2.2.3	Overview of quick coupler hydraulics <i>L586-1815/51253-;</i>	150-9
150.2.2.4	Valve block for quick coupler <i>L586-1815;</i>	150-11
150.2.3	Quick coupler electrics	150-13
150.2.3.1	Quick coupler electric control unit <i>L586-1815;</i>	150-13

160	Operator's cab, heating and air conditioning	160-1
160.1	Overview of operator's cab, heating and air conditioning unit <i>L586-1815;</i>	160-3
160.2	Display and control elements	160-5
160.2.1	Electrical components in the control panel	160-5
	160.2.1.1 Control unit <i>L586-1815;</i>	160-5
160.2.2	Touch screen display <i>L586-1815;</i>	160-7
160.2.3	Control lever <i>L586-1815;</i>	160-8
160.2.4	Accelerator pedal <i>L586-1815;</i>	160-10
160.3	Heating, ventilation, air conditioning	160-12
160.3.1	Heating, ventilation, air conditioning: General overview <i>L586-1815;</i>	160-12
160.3.2	Heating and air conditioning unit	160-17
	160.3.2.1 Heating and air conditioning unit <i>L586-1815;</i>	160-18
	160.3.2.2 Blower <i>L586-1815;</i>	160-22
160.3.3	Air conditioning controller <i>L586-1815;</i>	160-23
160.4	Air conditioning	160-26
160.4.1	Basic function of the air conditioning unit <i>L586-1815;</i>	160-26
160.4.2	Air conditioning compressor <i>L586-1815;</i>	160-27
160.4.3	Condenser <i>L586-1815;</i>	160-29
160.4.4	Dryer <i>L586-1815;</i>	160-30
160.4.5	Air conditioning pressure switch <i>L586-1815;</i>	160-31
170	Lubrication system	170-1
170.1	Liebherr automatic central lubrication system	170-2
170.1.1	Liebherr automatic central lubrication system: General overview <i>L586-1815;</i>	170-2
170.1.2	Liebherr central lubrication pump <i>L586-1815;</i>	170-6
170.1.3	Progressive distributor MX-F <i>L586-1815;</i>	170-10

170.1.4	Progressive distributor SXE-2 <i>L586-1815;</i>	170-12
190	Options	190-1
190.1	LiDAT	190-2
190.1.1	Overview of LiDAT <i>L586-1815;</i>	190-2
190.1.2	LiDAT on machine <i>L586-1815;</i>	190-4
190.1.3	LiDAT module (LiTU2) <i>L586-1815/0-50943;</i>	190-5
190.1.4	LiDAT module (LiTU3) <i>L586-1815/50944-;</i>	190-7
190.2	Weighing device (Liebherr) <i>L586-1815/0-54471;</i>	190-12
190.3	Liebherr weighing device with Truck Payload Assist <i>L586-1815/54472-;</i>	190-18
190.4	Skyview 360°	190-20
190.4.1	Skyview 360°: complete overview <i>L586-1815;</i>	190-20
190.4.2	Skyview 360° on machine <i>L586-1815;</i>	190-24
190.5	Remote control for door lock <i>L586-1815;</i>	190-25
190.6	Adaptive lighting <i>L586-1815;</i>	190-28
190.7	Personnel detection <i>L586-1815;</i>	190-30
200	Diagnosis	200-1
200.1	Malfunctions	200-2
200.1.1	Warning symbols	200-2
200.1.2	Service code indicator in display	200-3
200.2	Troubleshooting	200-5
200.2.1	Replacing fuses	200-5
200.2.1.1	Fuses on fuse board A4 in the operator's cab	200-5
200.2.1.2	Fuses on fuse board A4a in the left ballast weight	200-8
200.2.1.3	Fuses on fuse board A4b in the operator's cab	200-10

010 Introduction

Contents

010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14

	010.1.6.1	Intoxicants	010-14
	010.1.6.2	Dangerous fuels and operating fluids	010-14
	010.1.6.3	Transporting machine	010-15
	010.1.6.4	Access to machine	010-15
	010.1.6.5	Machine danger zone	010-16
	010.1.6.6	Visibility	010-16
	010.1.6.7	Protection against vibration	010-17
	010.1.6.8	Operation of machine	010-18
010.1.7		Safe maintenance	010-21
	010.1.7.1	Spare parts	010-21
	010.1.7.2	Heavy parts	010-21
	010.1.7.3	Regular checks	010-22
010.1.8		Modifications to the machine	010-22
	010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2		Special tools for maintenance and repair work	010-23
	010.2.1	Special tools, general	010-23
	010.2.2	Special tools for the diesel engine	010-25
	010.2.3	Special tools for lift cylinders with Z kinematics	010-29
	010.2.4	Special tools for tilt cylinders with Z kinematics	010-29
	010.2.5	Special tools for steering wheel	010-30
	010.2.6	Special tools for steering cylinders	010-30
	010.2.7	Special tools for brake system	010-30
	010.2.8	Special tools for the electrical system	010-31
	010.2.9	Special tools for the transmission	010-32
	010.2.10	Special tools for front axle	010-33
	010.2.11	Special tools for rear axle	010-33
	010.2.12	Special tools for air conditioning system	010-33
	010.2.13	Special tools for Grammer driver's seat	010-35
	010.2.14	Special tools for cab glazing	010-35
	010.2.15	Special tools for the central lubrication system (Liebherr)	010-35
010.3		Standards and regulations	010-37
	010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-37
	010.3.1.1	Range of application and purpose	010-37
	010.3.1.2	Other applicable documents	010-37


010.3.1.3	Modifications and descriptions	010-38
010.3.1.4	Tightening torques	010-38
010.3.2	Liebherr standards for assembly instructions and tightening torques	010-44
010.4	Preservation guidelines	010-45
010.4.1	General information	010-45
010.4.2	Machine out of service for an unknown period of time	010-45
010.4.3	Putting the machine out of service	010-46
010.4.3.1	Out of service for up to 2 months	010-46
010.4.3.2	Out of service for up to 12 months	010-47
010.4.3.3	Out of service for longer than 12 months	010-48
010.4.4	Putting back into service	010-48
010.4.4.1	After being out of service for 2 months	010-48
010.4.4.2	After being out of service for 12 months	010-49
010.4.4.3	After being out of service for longer than 12 months	010-49

010.1 Safety instructions

010.1.1 Information on these instructions

010.1.1.1 Representation of warning messages

Warning symbol

	Warning symbol warns of potential dangers. Obey all measures marked with this symbol to avoid injury or death.
---	--




Tab. 1: Warning symbol

Grading of warning messages

Grading of warning messages is defined by following signal words:





DANGER
WARNING
CAUTION
NOTICE

Definition of warning levels

	DANGER	Indicates an immediately hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	NOTICE	Indicates a hazardous situation which, if not avoided, could result in property damage.

Tab. 2: Warning levels

010.1.1.2 Graphic symbols in these instructions

Symbol	Meaning
	Note Identifies useful information and tips.
	Precondition Identifies conditions for subsequent action steps.
	Action request Identifies action steps.
	Result Identifies results of one or more action steps.

LBH12227516/11/211-20210127_101721en

Symbol	Meaning
—	List Identifies individual items of a list.

Tab. 3: Symbols

010.1.2 Intended use

010.1.2.1 Laws, rules, guidelines and safety regulations

To ensure safe operation:

- Ask work site manager for safety regulations at place of use.
- Adhere to safety regulations at place of use.
- Adhere to traffic regulations.
- Adhere to valid guidelines from insurers (for example employers' professional liability insurance companies, accident insurance et cetera).
- Avoid working methods that can endanger safety.
- Adhere to all intervals specified for recurrent checks and inspections in this operator's manual.

010.1.2.2 Intended use

Wheel loader is used to pick up, move and dump following materials:

- Soil
- Stones
- Broken rocks
- Bulk materials

This applies to a standard machine in normal operating conditions. Special applications are described in a separate options operator's manual.

To ensure intended use:

- Adhere to operator's manual.
- Adhere to maintenance intervals.
- Observe inspection and maintenance tasks.
- Adhere to specifications in the technical data.
- When using machine on public roads, make sure it complies with applicable national regulations.
- Only lift loads with intended working attachments (fork prongs, crane boom), which must be fitted and functioning.
- Make sure that machines used underground (mining and tunnel construction) are fitted with systems to reduce exhaust emissions (such as diesel particulate filters).
- Adhere to individual country's requirements for underground operation.
- For special uses use special working attachments and if necessary special safety equipment.
- Exclusively mount and use special working attachments with approval and as per stipulations of manufacturer of basic machine.
- Only use approved tyres.
- A suitably equipped workshop is absolutely essential for performing repair work.



Note

- ▶ Any other use or use beyond the stated use is improper use.

010.1.2.3 Foreseeable misuse

Do not use machine in following cases:

- Transport of persons without mounted and functioning safety equipment
- Lifting of persons without mounted and functioning safety equipment
- Driving with attached load
- Working in explosion hazard zones
- Working in contaminated environment without corresponding and necessary equipment
- Lifting of loads without suitable working attachment
- Pulling of loads (for example, containers, wagons, trailers) without suitable towing device
- Breaking rocks
- Hammering in posts



Note

- ▶ The manufacturer accepts no liability for damage caused by improper use.

010.1.2.4 Operating conditions

- Outdoors
- Fording depth is same as maximum obstacle height.
- Operate machine in an ambient temperature of -25 °C to 45 °C.
- In case of divergent ambient temperatures, contact Liebherr customer service.

Danger to life

Operation during thunderstorms or storms

- If possible stop operation before a thunderstorm or storm.
- Put working attachment on the ground in flattest position possible.
- Secure machine correctly.
- Close window.
- Shut off diesel engine.
- Set ignition key to **0**.
- Make sure there are no persons in area around machine.

Lightning strike

- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.

Contact with high voltage cable

- Do not move machine and working attachment.
- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.
- Make sure that all persons stay away from the machine and the high voltage cable.
- Have voltage switched off.

010.1.2.5 Disposal

Danger to life

Unapproved disposal of gas containers and pressure vessels

- Before disposal, completely depressurise pressure vessel.
- Before disposal, professionally empty pressure vessel.
- Adhere to safety instructions of pressure vessel manufacturer.

Unapproved disposal of refrigerant

- Have refrigerant disposed of by refrigerant recycling point.
- Adhere to safety data sheet of refrigerant during disposal.

Environmental pollution

Unapproved disposal of machine

- Make sure that the individual elements of the machine are disposed of correctly after the service life.
- Dispose of elements of machine in line with valid country-specific waste disposal guidelines and relevant valid laws.
- Remove fuels, operating fluids and lubricants from all components before disposal.
- Collect and store fuels, operating fluids and lubricants in suitable containers before disposal.
- Adhere to instructions of relevant manufacturer when disposing of fuels, operating fluids and lubricants.
- Have fuels, operating fluids and lubricants disposed of by old oil recycling point.

010.1.3 Description of staff

010.1.3.1 Personal protective equipment

Operators, assistants and maintenance staff are responsible for the following:

- Wearing personal protective equipment
- Regular cleaning and care of protective equipment
- Immediate replacement of damaged parts of protective equipment

The protective equipment consists of following elements:

- Protective helmet
- Safety glasses
- Hearing protection
- Breathing equipment
- Protective gloves
- Warning clothing (reflective, in signal colour)
- Safety boots
- Special protective clothing
 - To prevent burns
 - To prevent freezing
 - To prevent acid burns
 - To prevent stabbing and cutting injuries

010.1.3.2 Requirements for staff

Staff meet the following requirements:

- The machine is operated, maintained and repaired exclusively by authorised and trained persons.
- All persons operating, maintaining or repairing the machine have the required minimum age.
- Staff training involves theoretical information (technology and safety) and practical training on the machine.
- Staff have read and understood the operator's manual and supplied documentation.
- Experienced staff continuously supervise following staff.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Staff agree to work in safety-aware and risk-aware manner.

010.1.3.3 Operating company

Responsibility

The operator is responsible for the following:

- The operator of the machine must ensure that no persons are in the operating area of the machine on the basis of a risk assessment conducted in respect of the operating site.
- If working attachments are used that deviate from the standard and result in limitations to the field of view, the operator must repeat the visual inspection.
- Make sure that exclusively trained staff operate the machine.
- Make sure that exclusively trained staff maintain the machine.
- If an electric motor is used, ensure that only a qualified and competent person connects the machine to the mains supply.
- If a machine with an “emergency actuation of parking brake” option is used, make sure that only qualified and authorised persons operate the machine.
- Check qualification of persons using the machine.
- Authorise activities of persons in handling the machine.
- Define competences and responsibilities for all persons involved in handling the machine.
- Have following staff continuously supervised by an experienced person.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Provide all persons tasked with handling the machine with the necessary protective equipment.
- Check safety-aware work of staff at regular intervals.
- Check danger-aware work of staff at regular intervals.
- Make sure that machine is operated in flawless, safe condition.
- If flaws affecting safety occur: Immediately decommission machine.
- Perform inspections of machine prescribed by Liebherr punctually.
- Perform nationally mandated inspections of machine punctually.
- Adhere to national legal specifications on provision of machines and tools by the employer (hazard assessment and risk assessment conducted by the operator).
- Make sure that no retrofitting is performed on machine without consultation of the manufacturer.
- Use original Liebherr spare parts wherever possible.

010.1.3.4 Operator

Responsibility

Operator is responsible for following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Wear personal protective equipment.
- Operate machine as intended.
- Avoid working methods that can endanger safety.
- Adhere to safety regulations at place of use.
- Maintain visual contact or voice contact with spotter.
- During operation, do not allow any other persons on machine.
- Report all changes to machine that affect safety to operating company.
- If it is no longer possible to work safely, stop operating the machine immediately.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The operator has following qualification and skills:

- Has completed the legally specified minimum age.
- Is physically and mentally capable of operating the machine safely.
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- Has the necessary authorisation for operation of machine.
- The operator has the necessary education (theoretical and practical) for the following:
 - Handling the machine type
 - Attaching
 - Spotting
 - Handling fire extinguishing equipment
- Knows all means of escape in an emergency.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.5 Maintenance staff

Responsibility

The maintenance staff are responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain machine for safe and reliable function.
- Execute all maintenance tasks specified for maintenance staff in the maintenance and inspection schedule.

- Wear personal protective equipment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The maintenance staff have the following qualifications and skills:

- Are of the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Are able to estimate distance, height and gaps.
- Have the necessary authorisation for maintenance of the machine.
- Know the machine and the hazards.
- Know all procedures and precautions for maintenance.
- Have knowledge of handling special tools for maintenance and repair.
- Have special knowledge and experience handling hydraulic installations when working with hydraulic systems.
- Are not under any physical or mental impairment that limits one of the prescribed requirements.
- Are not under the influence of alcohol.
- Are not under the influence of drugs.

010.1.3.6 Refrigeration technician

Responsibility

The refrigeration technician is responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals of options
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain and repair machine for safe and reliable function.
- Execute all maintenance tasks and repair tasks specified for the refrigeration technician in the maintenance and inspection schedule.
- Isolate battery main switch of power supply system and secure it against switching on again.
- Clearly define and label working position.
- Wear personal protective equipment.
- Use tools suitable for the work deployment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The refrigeration technician has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions

- Is able to estimate distance, height and gaps.
- The refrigeration technician has completed training that complies with the country-specific laws, standards and guidelines.
- The refrigeration technician has following skills:
 - Is able to assess work correctly.
 - Is able to recognise dangers.
 - Is able to take safety measures.
- Has knowledge and experience of the relevant field of activity.
- Knows the relevant national standards.
- Has the necessary authorisation for maintenance and repair of machine.
- Knows the machine and the hazards.
- Knows all procedures and precautions for maintenance.
- Has knowledge of handling special tools for maintenance and repair.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.7 Slinger

Responsibility

Slinger is responsible for following:

- Wear personal protective equipment.
- Choose correct and undamaged slinging gear.
- Correctly attach slinging gear to load or lifting accessory.
- Correctly remove slinging gear from load or lifting accessory.
- Grant approval for movement or accompaniment.

Requirement

The slinger has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of slinging loads:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The slinger has following skills:
 - Is able to estimate mass distribution and load distribution.
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
- Has the necessary authorisation for attaching loads.
- The slinger has the necessary education (theoretical and practical) for the following:
 - Selecting the suitable slinging gear
 - Attaching slinging gear
 - Securing to prevent unintended disengaging of slinging gear
 - Avoiding damage to slinging gear
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.8 Spotter

Responsibility

The spotter is responsible for the following:

- Wear personal protective equipment.
- Forward signals from slinger to operator.
- If the spotter is the only person for this purpose: Give instructions to operator.
- The spotter must be in the field of view of operator or have voice contact with the operator.

Requirement

The spotter has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of spotting and providing signals:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The spotter has following skills:
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
 - Is able to ensure safe movement of load and machine.
- Has the necessary authorisation for giving signal signs.
- The spotter has the necessary education (theoretical and practical) for the following:
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.4 Protective devices on the machine

010.1.4.1 Operator's cab

Danger to life

Unapproved working method

- Put on safety belt before starting work.
- Make sure that changes in the operator's cab (for example installation of accessories) do not restrict the operator's workspace.

Injuries

Objects in the operator's cab

- Remove objects that are not necessary for the work from the operator's cab.
- Stow and fasten objects that are necessary for the work before starting.
- Make sure that objects carried do not protrude into the operator's workspace.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com