

SERVICE MANUAL

Wheel Loaders LW80.B



NEW HOLLAND
CONSTRUCTION

01 General

02 Service Data

03 Engine

04 Travel drive

05 Axles

06 Steering

07 Brakes

08 Working hydraulic

09 Electrical system

10 Frame

11 Fittings, pipes and hoses

12 Sealing, protective, checking and cleaning agents

FOREWORD	1
Using the Technical Handbook	1
Servicing and repair	1
Warnings and symbols	2
Danger in the event of non-observance of the safety instructions	2
Organizational measures	3
Selection and qualification of personnel - basic responsibilities	4
Safety instructions governing specific operational phases	
Standard operation.....	4
Special work in conjunction with utilization of the machine - maintenance and repairs during operation - disposal of parts and consumables	5
Warning of special dangers	
Electric energy	6
Gas, dust, steam and smoke	6
Hydraulic and pneumatic equipment	7
Noise	7
Oil, grease and other chemical substances	7
Transporting and towing - recommissioning	7
Repair work - safety instructions	8
ACCUMULATORS	9
Safety instructions.....	9
ENGINE	10
Engine - repair instructions	10
Assisted starting (with jumper cables) - safety instructions	10
WELDING OPERATIONS	
Welding operations - safety instructions.....	11

FOREWORD

2801062

This **Technical Handbook (THB)** has been written with the **servicing mechanic** in mind and contains important information required to carry out repair and servicing procedures.

Read through the **Technical Handbook**, but also the **Operating Instructions** for the **NEW HOLLAND CONSTRUCTION Wheel Loader** before commencing any servicing or repair work. The **Technical Handbook**, as well as the **Operating Instructions** and **Spare Parts List** should be used as a source of reference and assistance - even when the user is well acquainted with the range of NEW HOLLAND CONSTRUCTION Wheel Loaders.

Using the Technical Handbook allows the experienced mechanic to carry out repair work in a correct manner.

Using the Technical Handbook

The Technical Handbook is divided into main and sub-groups that deal with the machine as actually delivered. Any auxiliary attachments or optional upgrading introduced later are not described.

The main table of contents allows to find the required information quickly.

For the sake of clarity, the illustrations have been simplified and can therefore differ slightly from the actual appearance of the machine.

Servicing and repair

Servicing and repair work should be carried out as soon as possible. This keeps overall servicing & repair costs to a minimum and increases the availability of the NEW HOLLAND CONSTRUCTION Wheel Loader.

During servicing and repair work, always follow the instructions contained in the Technical Handbook and Operating instructions.

The **NEW HOLLAND CONSTRUCTION After Sales Service** is always available for assistance and advice.

□

FUNDAMENTAL SAFETY INSTRUCTIONS

Warnings and symbols

2732729

The following signs are used in the manual to designate instructions of particular importance:

**DANGER**

Imminent danger involving the risk of death or of severe injuries.

**WARNING**

Precautionary rules and measures designed to protect the machine operator and other persons from life-threatening danger or injuries and to prevent extensive damage.

**CAUTION**

Information and precautionary measures designed to prevent damage to the machine or other property.

□

Danger in the event of non-observance of the safety instructions⁹⁶⁸⁴³

**WARNING**

This wheel loader has been built in accordance with state-of-the-art standards and the recognized safety rules.

However, operating the machine if a fault is suspected or has occurred, or carrying out repair work inexpertly may

- endanger the lives of persons in contact with it
- damage the machine and other property.

The wheel loader must be stopped immediately on any damage being suspected or occurring to ensure that the safety of the operator, of other persons at the place of use or of other material property is not compromised.

All components are carefully co-ordinated. Trouble-free operation and a long service life can only be achieved with original spare parts.

□

FUNDAMENTAL SAFETY INSTRUCTIONS

Organizational measures

2800456

The operating instructions must always be at hand at the place of use of the machine, e.g. by stowing them in the tool compartment or tool-box provided for such purpose.

In addition to the operating instructions, observe and instruct the user in all other generally applicable legal and other mandatory regulations relevant to accident prevention and environmental protection.

These compulsory regulations may also deal with the handling of hazardous substances, issuing and/or wearing of personal protective equipment or traffic regulations.

The operating instructions must be supplemented by instructions covering the duties involved in supervising and notifying special organizational features, such as job organization, working sequences or the personnel entrusted with the work.

Personnel entrusted with work on the machine must have read the operating instructions and in particular the chapter on safety before beginning work. Reading the instructions after work has begun is too late. This applies especially to persons working only occasionally on the machine, e.g. during setting up or maintenance.

Check - at least from time to time - whether the personnel is carrying out the work in compliance with the operating instructions and paying attention to risks and safety factors.

For reasons of security, long hair must be tied back or otherwise secured, garments must be close-fitting and no jewellery, such as rings, may be worn. Injury may result from being caught up in the machinery or from rings catching on moving parts.

Use protective equipment wherever required by the circumstances or by law.

Observe all safety instructions and warnings attached to the machine.

See to it that safety instructions and warnings attached to the machine are always complete and perfectly legible.

In the event of safety-relevant modifications or changes in the behaviour of the machine during operation, stop the machine immediately and report the malfunction to the competent authority/person.

Never make any modifications, additions or conversions which might affect safety without the supplier's approval. This also applies to the installation and adjustment of safety devices and valves as well as to welding work on load-bearing elements.

Spare parts must comply with the technical requirements specified by the manufacturer. Spare parts from original equipment manufacturers can be relied to do so.

Replace hydraulic hoses within stipulated and appropriate intervals, even if no safety-relevant defects have been detected.

Adhere to prescribed intervals or those specified in the operating instructions for routine checks and inspections.

For the execution of maintenance work, tools and workshop equipment adapted to the task on hand are absolutely indispensable.

The personnel must be familiar with the location and operation of fire extinguishers.

Observe all fire-warning and fire-fighting procedures.

FUNDAMENTAL SAFETY INSTRUCTIONS

Selection and qualification of personnel - basic responsibilities

Any work on and with the machine must be executed by reliable personnel only. Statutory minimum age limits must be observed.

Employ only trained or instructed staff and set out clearly the individual responsibilities of the personnel for operation, set-up, maintenance and repair.

Make sure that only authorized personnel works on or with the machine.

Define the machine operator's responsibilities - also with regard to observing traffic regulations - giving the operator the authority to refuse instructions by third parties that are contrary to safety.

Do not allow persons to be trained or instructed or persons taking part in a general training course to work on or with the machine without being permanently supervised by an experienced person.

Work on the electrical system and equipment of the machine must be carried out only by a skilled electrician or by instructed persons under the supervision and guidance of a skilled electrician and in accordance with electrical engineering rules and regulations.

Work on chassis, brake and steering systems must be performed by skilled personnel only, which has been specially trained for such work.

Work on the hydraulic system must be carried out only by personnel with special knowledge and experience of hydraulic equipment.

Safety instructions governing specific operational phases

Standard operation

Avoid any operational mode that might be prejudicial to safety.

Before beginning work, familiarize yourself with the surroundings and circumstances of the site, such as obstacles in the working and travelling area, the soil bearing capacity and any barriers separating the construction site from public roads.

Take the necessary precautions to ensure that the machine is used only when in a safe and reliable state.

Operate the machine only if all protective and safety-oriented devices, such as removable safety devices, emergency shut-off equipment, sound-proofing elements and exhausters, are in place and fully functional.

Check the machine at least once per working shift for obvious damage and defects. Report any changes (incl. changes in the machine's working behaviour) to the competent organization/person immediately. If necessary, stop the machine immediately and lock it.

In the event of malfunctions, stop the machine immediately and lock it. Have any defects rectified immediately.

Start the machine from the driver's seat only.

During start-up and shut-down procedures always watch the indicators in accordance with the operating instructions.

Before setting the machine in motion, make sure that nobody is at risk.

Before starting work or travelling with the machine, check that the braking, steering, signalling and lighting systems are fully functional.

Before setting the machine in motion always check that the accessories have been safely stowed away.

When travelling on public roads, ways and places always observe the valid traffic regulations and, if necessary, make sure beforehand that the machine is in a condition compatible with these regulations.

FUNDAMENTAL SAFETY INSTRUCTIONS

In conditions of poor visibility and after dark always switch on the lighting system.

Persons accompanying the driver must be seated on the passenger seats provided for this purpose.

When crossing underpasses, bridges and tunnels or when passing under overhead lines always make sure that there is sufficient clearance.

Always keep at a distance from the edges of building pits and slopes.

Avoid any operation that might be a risk to machine stability.

Never travel across slopes; always keep the working equipment and the load close to the ground, especially when travelling downhill.

On sloping terrain always adapt your travelling speed to the prevailing ground conditions. Never change to a lower gear on a slope but always before reaching it.

Before leaving the driver's seat always secure the machine against inadvertent movement and unauthorized use.

Special work in conjunction with utilization of the machine - maintenance and repairs during operation - disposal of parts and consumables

Observe the adjusting, maintenance and inspection activities and intervals set out in the operating instructions, including information on the replacement of parts and equipment. These activities may be executed by skilled personnel only.

Brief operating personnel before beginning special operations and maintenance work, and appoint a person to supervise the activities.

In any work concerning the operation, conversion or adjustment of the machine and its safety-oriented devices or any work related to maintenance, inspection and repair, always observe the start-up and shut-down procedures set out in the operating instructions and the information on maintenance work.

Ensure that the maintenance area is adequately secured.

If the machine is completely shut down for maintenance and repair work, it must be secured against inadvertent starting by:

- removing the ignition key and
- attaching a warning sign.

Carry out maintenance and repair work only if the machine is positioned on stable and level ground and has been secured against inadvertent movement and buckling.

To avoid the risk of accidents, individual parts and large assemblies being moved for replacement purposes should be carefully attached to lifting tackle and secured. Use only suitable and technically perfect lifting gear and suspension systems with adequate lifting capacity. Never work or stand under suspended loads.

The fastening of loads and the instructing of crane operators should be entrusted to experienced persons only. The marshaller giving the instructions must be within sight or sound of the operator.

FUNDAMENTAL SAFETY INSTRUCTIONS

For carrying out overhead assembly work always use specially designed or otherwise safety-oriented ladders and working platforms. Never use machine parts as a climbing aid.

Wear a safety harness when carrying out maintenance work at greater heights.

Keep all handles, steps, handrails, platforms, landings and ladders free from dirt, snow and ice.

Clean the machine, especially connections and threaded unions, of any traces of oil, fuel or preservatives before carrying out maintenance/repair. Never use aggressive detergents. Use lint-free cleaning rags.

Before cleaning the machine with water, steam jet (high-pressure cleaning) or detergents, cover or tape up all openings which - for safety and functional reasons - must be protected against water, steam or detergent penetration. Special care must be taken with electric motors and switchgear cabinets.

Ensure during cleaning of the machine that the temperature sensors of the fire-warning and fire-fighting systems do not come into contact with hot cleaning agents as this might activate the fire-fighting system.

After cleaning, remove all covers and tapes applied for that purpose.

After cleaning, examine all fuel, lubricant, and hydraulic fluid lines for leaks, loose connections, chafe marks and damage. Any defects found must be rectified without delay.

Always tighten any screwed connections that have been loosened during maintenance and repair.

Any safety devices removed for set-up, maintenance or repair purposes must be refitted and checked immediately upon completion of the maintenance and repair work.

Ensure that all consumables and replaced parts are disposed of safely and with minimum environmental impact.

Warning of special dangers

Electric energy

Use only original fuses with the specified current rating. Switch off the machine immediately if trouble occurs in the electrical system.

When working with the machine, maintain a safe distance from overhead electric lines. If work is to be carried out close to overhead lines, the working equipment must be kept well away from them. Caution, danger! Check out the prescribed safety distances.

If your machine comes into contact with a live wire

- do not leave the machine
- drive the machine out of the hazard zone
- warn others against approaching and touching the machine
- have the live wire de-energized
- do not leave the machine until the damaged line has been safely de-energized.

The electrical equipment of machines is to be inspected and checked at regular intervals. Defects such as loose connections or scorched cables must be rectified immediately.

Gas, dust, steam and smoke

Operate internal combustion engines and fuel-operated heating systems only on adequately ventilated premises. Before starting the machine on enclosed premises, make sure that there is sufficient ventilation.

Observe the regulations in force at the respective site.

Carry out welding, flame-cutting and grinding work on the machine only if this has been expressly authorized, as there may be a risk of explosion and fire.

Before carrying out welding, flame-cutting and grinding operations, clean the machine and its surroundings from dust and other inflammable substances and make sure that the premises are adequately ventilated (risk of explosion).

FUNDAMENTAL SAFETY INSTRUCTIONS

Hydraulic and pneumatic equipment

Check all lines, hoses and screwed connections regularly for leaks and obvious damage. Repair damage immediately. Splashed oil may cause injury and fire.

Depressurize all system sections and pressure pipes (hydraulic system, compressed-air system) to be removed in accordance with the specific instructions for the unit concerned before carrying out any repair work.

Hydraulic and compressed-air lines must be laid and fitted properly. Ensure that no connections are interchanged. The fittings, lengths and quality of the hoses must comply with the technical requirements.

Noise

During operation, all sound baffles of the machine must be closed.

Always wear the prescribed ear protectors.

Oil, grease and other chemical substances

When handling oil, grease and other chemical substances, observe the product-related safety regulations.

Be careful when handling hot consumables (risk of burning or scalding).

Transporting and towing - recommissioning

The machine must be towed, loaded and transported only in accordance with the operating instructions.

For towing the machine observe the prescribed transport position, admissible speed and itinerary.

Use only appropriate means of transport and lifting gear of adequate capacity.

The recommissioning procedure must be strictly in accordance with the operating instructions. □

Repair work - safety instructions

2801063



DANGER

Operating instructions

Never carry out repair work without having read and understood the operating instructions.

Pay special attention to:

"Fundamental Safety Instructions",
"Inspection and servicing - safety instructions" and all warnings and safety instructions attached to the machine.

The descriptions of job sequences provide only experienced personnel with the necessary instructions.

The operating manual must be kept with the machine at all times.

Repair personnel

Repair personnel must have know-how and experience relevant to repairing this or comparable machines.

Working at greater heights

Always wear safety harnesses when working at greater heights.

Wear an approved safety harness; it must be equipped with stabilizers and safety cables.



DANGER

Pressurized or spring loaded units

Never open defective pressurized or spring loaded units but replace them as an entirety.

In exceptional cases, open only when the system and the operating sequence are precisely known and any special tools required are available.

The technical handbook contains no information on this point.

Never remove lead seals

Never change rated pressure of pressure relief valves without the explicit authorization of NEW HOLLAND CONSTRUCTION.

Never remove lead seals from pressure relief valves and accumulators.

ACCUMULATORS

Safety instructions

2800629



WARNING

Dismantling components

Never dismantle while the machine is at operating temperature.

Oils, greases, brake fluid or coolants may have a high temperature and result in burning or scalding.

Leave time for the machine to cool down.

Before starting work, depressurize piping and hoses, cylinders, radiator, hydraulic tank, air-brake reservoir and other systems or units.

Replace defective components in good time to prevent major damage.

Clean the defective component carefully before dismantling it.

Mark the dismantled parts in the correct sequence to facilitate assembly.

When dismantling the component, close off exposed hose and piping connections, exposed drill holes and housing carefully to prevent any dust from penetrating.

After the repair work

To prevent corrosion, coat all bright metal machine parts with a grease film.

On completing the work, reassemble all protective devices, covers, and sound and vibration-insulation material.

Never start up the driving motor while work is being done on the machine.

Check the repaired components and all machine functions with a trial run.

Never release the machine for recommissioning until it is fully functioning.

□



DANGER

Accumulators are installed in the hydraulic system. These accumulators contain nitrogen under high initial pressure.

Even when the hydraulic pressure in the system is reduced, the nitrogen remains in the accumulator.

The accumulators are completely safe in operation. If incorrectly handled, however, there is a risk of explosion.

So:

- Never handle accumulator mechanically, never weld or solder it.
- Testing and servicing work must be carried out by experts only.
- Prior to any testing and servicing work, depressurize the hydraulic part of the system.
- To dismantle the accumulator, always wear goggles and working gloves.
- Fill accumulator with nitrogen only, never with compressed air or oxygen.
- Report any defects or damage to the machine owner without delay.
- Prior to recommissioning, an inspection by a specialist or expert is essential if the accumulator was damaged or if the admissible operating temperature or operating pressure was exceeded.

Never remove or paint over warning and information plates, rating plates or type identification markings. Replace illegible or damaged plates immediately.

□

ENGINE

2801064

Engine - repair instructions



DANGER

Read and observe: "Repair, safety instructions" and operating instructions for engine before working on the engine.

Risk of injury from rotating or hot engine parts!

Switch off engine and leave to cool down.

Do repair work only if machine is secured as described in section "Securing the machine" of these operating instructions.

Check and change V-belts only when engine is stationary.

Repair work on the engine demands extensive know-how and special tools.

In cases of doubt, have the repair work carried out by your Dealer.



Assisted starting (with jumper cables) - safety instructions

2800620



WARNING

Keep any potential ignition sources such as unshielded lights or burning cigarettes away from the batteries. The battery vapours are highly flammable. Explosion hazard.

Never use assisted starting when the batteries are defective or frozen.

Never connect batteries (battery assemblies) unless they have the same voltage.

Use only tested jumper cables with insulated terminal clips and an adequate lead diameter.

Ensure that the bodies of the supplying and receiving machines are not in contact. Otherwise a current flow could result from connecting the positive poles. Risk of short-circuiting.

Never use welding generators or welding transformers as a source of current.

Position the jumper cables in such a way that they cannot be caught by rotating engine components.

Read and observe: "Inspection and servicing, safety instructions", paying particular attention to the section "Handling batteries".



WELDING OPERATIONS

Welding operations - safety instructions

2801065



WARNING

Never perform welding operations unless you are qualified to do so.

Observe the accident prevention regulations.

Any work on receptacles that contain or have contained substances which are

- combustible or which encourage combustion, which
- are susceptible to explosion, or which
- may develop health-hazardous gases, vapours, mist or dust during welding operations

must be carried out only under expert supervision and only by experienced persons authorized to do such work.



WARNING

Prior to any welding operations on the machine:

- Disconnect the battery, first the negative terminal and then at the positive terminal.
- Disconnect the positive terminal at the alternator.

Protect the disconnected terminals and plugs from short-circuiting and soiling by covering them with foil or adhesive tape.

Apply the welding current terminals very close to the welding point.

The welding current must not flow through gearboxes, bolted or articulated joints or hydraulic cylinders.

On completion of the welding operation, restore all electrical connections.

When connecting the battery, first connect the positive terminal and then the negative terminal.

□

Notes 2800145

2800145

This image shows a full page of blank graph paper. The grid consists of small, equal-sized squares formed by thin black lines. There are no margins, text, or other markings on the page.

02 Service Data

Service Data General

Service Data LW 80.B

SERVICE DATEN

SERVICE DATA

Allgemein
General

FOREWORD	1
-----------------------	----------

SI - AND ADDITIONAL UNITS

Quantities of space and mass	3
Time-related quantities.....	4
Quantities of force, energy and power	5

CONVERSIONS TABLES

Conversion for units of length.....	6
Conversion for units of area	7
Conversion from foot (Fuss) and inch (Zoll) to metric measures	8
Conversion from newtonmeter "Nm" into foot pounds "ft.lb."	9
Conversion table for units of pressure in gases, steam and fluids	17
Conversion table for units of power, ernal energy and heat quantity	18
Conversion table for units of mechanical stress (strength).....	19
Practically equivalent units for pressure and mechanical stress (strength)	20
Units of temperature and conversion formulas.....	21
Power, energy and heat flow	22
Speed.....	23
Units of mass (weight)	24
Units of volume, flow rates	25
Fuel consumption	26

CALCULATION EXAMPLES

Angles of slope	27
Travel speeds	27
Hydraulic outputs (pumps/motors)	28
Stroking times of cylinders	28
Speeds of hydraulic motors	28

TIGHTENING TORQUES

General information	30
Bolts with standard thread DIN 13 - 13.....	31
Bolts with metric fine thread DIN 13 - 13	32
Tightening torques for SAE flange-system.....	33
Tightening angles	33

VORWORT

2801092

FOREWORD



WARNUNG

Jede Person, die mit der Inbetriebnahme, Bedienung, Inspektion und Wartung dieser Baumaschine befaßt ist, muß - bevor sie die ersten Handgriffe ausführt - die "BETRIEB-SANLEITUNG" und besonders das Kapitel "GRUNDLEGENDE SICHERHEITSHINWEISE" gelesen und verstanden haben.

Die "Service Daten" enthalten Angaben, die für Kundendienstmitarbeiter wichtig sind. Maschinendaten, die an anderer Stelle der Dokumentation aufgeführt sind, werden hier nicht wiederholt. Zur Dokumentation dieser Baumaschine gehören:

- Betriebsanleitung
- Ersatzteilliste

Zur Dokumentation im weiteren Sinne gehören auch "Technische Handbücher" (THB) und "Service Informationen" (si).

In dieser Broschüre sind die Daten der Hilfsaggregate zum Betrieb von Zusatz- oder Sonderausrüstungen sowie Daten von Einzelgeräten nicht aufgeführt.

Die aufgeführten Füllmengen der Betriebsmittel sind ca.-Angaben, die Dispositionshilfe sein sollen. Jedes Aggregat besitzt geeignete Kontrolleinrichtungen, z. B. Peilstab oder Kontrollschrauben, mit denen die exakte Befüllung geprüft wird.



VORSICHT

Die in den Kapiteln aufgeführten Sach-Nrn. nicht zum Bestellen von Ersatzteilen verwenden. Sie sollen nur dokumentieren, auf welches Bauteil sich die nachstehenden Daten beziehen. Zur Ersatzteilbestellung die zur Maschine gehörende Ersatzteilliste verwenden.



WARNING

Anyone involved with commissioning, operating, inspecting and servicing for this construction machine must read through and acquaint himself with the "OPERATING MANUAL" - and especially the Section "FUNDAMENTAL SAFETY INSTRUCTIONS" - before starting work.

The "Service Data" contains details which are important to the service staff. Data included in other parts of the general documentation have been left aside. The set of documents for this construction machine includes:

- Operating manual
- Spare parts list

"Technical Handbooks" (THB) and "Service Information" bulletins (si) are, furthermore, to be considered as supplements to the general documentation.

Data regarding auxiliary units for operating ancillary or special systems, as well as data on machines produced only in small numbers, have not been included.

Filling quantities are only approximate figures intended to help in stockholding the various fluids and agents. Each unit has appropriate checking systems, e.g. dipstick or checking screws, with which the exact filling level can be checked.



CAUTION

The Part Nos. given in the sections are not to be used when ordering spare parts. They are only intended to identify the component being referred to. When ordering spare parts, use only the Part Nos. given in the spare parts lists.

□

SI - UND WEITERE GRÖSSEN

SI - AND ADDITIONAL UNITS

2801093

Raum - und Massegrößen

Quantities of space and mass

Größe	Formel zeichen	Einheit Unit			Umrechnung Conversion		Erläuterungen und Bemerkungen	
Quantity	Symbol	alt	old	neu new		Für genaue Rechnungen for exact calculation	für über- schlägige Rechnungen (2 % Unge- nauigkeit) for rough calculation appr. 2 % inexact	Explanations and Remarks
				SI-Einheit SI-Units	Auswahl weitere Einheiten Selection of additional units			
Länge Length	l	m, mm, cm dm, m, km	m	m, mm, km				
Fläche Area	A	mm ² , cm ² , dm ² , m ²	m ²	mm ² , cm ²				
Volumen Volume	V, Vn	mm ³ , cm ³ , dm ³ , m ³ , l	m ³	mm ³ , cm ³ , dm ³ , l				
Masse Mass	m	g, mg, g, kg, Mg=t, (kp s ² /m)	kg	g, mg, g Mg, t				
Dichte Density	ρ	g/cm ³ , kg/dm ³ , kg/m ³ , (kp s ² /m ⁴)	kg/m ³	g/cm ³ , kg/dm ³				
Massenträgheitsmoment Inertia moment	J	kp m ² , (kp m s ²)	kg m ²	Mg m ²	1 kp m s ² = 9,81 kg m ²	1 kp m s ² = 10 kg m ²		
Spezifisches Volumen Specific volume	v	m ³ /kg, m ³ /t	m ³ /kg	m ³ /Mg				

Zeitgrößen
Time-related quantities

Größe	Formel zeichen	Einheit Unit			Umrechnung Conversion		Erläuterungen und Bemerkungen
Quantity	Symbol	alt old	neu new		Für genaue Rechnungen for exact calculation	für über- schlägige Rechnungen (2 % Unge- naugigkeit) for rough calculation appr. 2 % inexact	Explanations and Remarks
			SI-Einheit SI-Units	Auswahl weitere Einheiten Selection of additional units			
Zeitdauer Time	t	s, min, h, d = day	s	ms, min, h, d			
Frequenz Frequency	f	Hz	Hz				1 Hz 1/s
Drehzahl Rate of revolutions	n	U/min	1/s	1/min			s = min/60
Geschwindigkeit Speed	v	m/s, km/h	m/s	km/h			
Beschleunigung Acceleration	a	m/s ²	m/s ²				
Volumenstrom Volume flow	V	m ³ /s, m ³ /min, m ³ /h	m ³ /s	m ³ /min, l/h			
Massenstrom Mass flow	m	kg/s, kg/min, kg/h	kg/s				
Wärmestrom Heat flow	φ	(kcal/h)	W	kW, MW	1 kcal/h = 1,163 W	1 kcal/h = 1,2 W	1 W = 1 J/s = 1 Nm/s
Spez. Kraftstoff- oder spez. Ölver- brauch Specific fuel and oil consumption	b, b _s	kg/PS h g/PS h	kg/J	g/(kW h)	1 g/(PS h) = 1,359 g/(kW h)	1 g/(PS h) = 1,36 g/(kW h)	

Kraft-, Energie- und Leistungsgrößen
Quantities of force, energy and power

Größe	Formel zeichen	Einheit Unit			Umrechnung Conversion		Erläuterungen und Bemerkungen
Quantity	Symbol	alt old	neu new		Für genaue Rechnungen for exact calculation	für über- schlägige Rechnungen (2 % Unge- nauigkeit) for rough calculation appr. 2 % inexact	Explanations and Remarks
			SI-Einheit SI-Units	Auswahl weitere Einheiten Selection of additional units			
Kraft Force	F	(dyn, p)	N (Newton) (njuten)	MN, kN, mN	1 kp = 1 kg x 9,81m/s² = 9,81 N	1 kp = 10 N	1 N = 1 kg x 1 m/s² = 1 kg m/s²
Druck (von Fluiden) Pressure (of fluids)	P, Pi, P _e , P _ü , P _u	(kp/cm²,at,atm,) (mWS, Torr,) (mmHg)	N/m², Pa (Pascal)	bar, mbar	1 kp/cm² = 0,981 bar 1 atm = 1,013 bar 1 mWS = 0,098 bar	1 kp/cm²=1 bar 1 mWS = 0,1 bar	1 N/m²=1 Pa 1Pa = 10 ⁻⁵ bar 1 bar = 10 ⁵ N/m²
Mechanische Spannung Mechanical stress	σ,τ	(kp/cm², kp/mm²)	N/m², pa	N/mm²	1 kp/mm² = 9,81 N/mm² 1 kp/cm² = 9,81 N/mm²	1 kp/mm² = 10 N/mm² 1 kp/cm² = 10 N/cm²	1 N/m² = 1 Pa
Energie, Arbeit Energy	W	(kpm)	J (Joule) (dschul)	MJ, kJ, kW h	1 kpm = 9,81 J	1 kpm = 10 J	3,6 MJ = 1 kWh 1 J = 1 NM = 1 Ws
Wärmemenge Heat capacity	Q	(cal, erg)	J (Joule) (dschul)	MJ, kJ, kW h	1 kcal = 4,19 kJ		3,6 MJ = 1 kW h 1 J = 1 Nm = 1 Ws
Leistung Power	P	(PS), W	W	kW, MW	1 PS = 0,735499 kW 1 kW = 1,359622 PS	1 PS = 0,74 kW 1 kW = 1,36 PS	1 W =1 J/s = 1 Nm/s
Dreh-Biegemoment Torque, bending moment	M	(kp m)	Nm	N cm	1 kp m = 9,81 N m	1 kp m = 10 N m	

 
SERVICE DATEN / SERVICE DATA

UMRECHNUNGSTABELLEN CONVERSIONS TABLES

Umrechnung von Längen-Maßen Conversion for units of length

Länge Length	in	ft	yd	mile	UK n mile	cm	m
1 inch (Zoll)	1	0,0833	0,0278			2,54	0,0254
1 foot (Fuß)	12	1	0,3333	0,00019	0,00016	30,48	0,3048
1 yard	36	3	1	0,00057	0,00049	91,44	0,9144
1 statute mile (Landmeile)	63 360	5 280	1 760	1	0,86842		1609,3
1 UK nautical mile (engl. Seemeile)	72 960	6 080	2 026,7	1,15151	1		1 853,2
1 cm	0,3937	0,0328	0,0109			1	0,01
1 m	39,370	3,2808	1,0936	0,00062	0,00054	100	1

Länge Length




25,4 mm = 1 in

600030

Umrechnung von Flächenmaßen
Conversion for units of area

Fläche Area	in ²	ft ²	yd ²	sqmile	acre	cm ²	m ²
1 square inch (Quadratzoll)	1	0,0069				6,4516	
1 square foot (Quadratfuß)	144	1	0,111			929,03	0,0929
1 square yard (Quadratyard)	1 296	9	1		0,00021	8361,3	0,8361
1 square mile (Quadratmeile)				1	640		
1 acre		43 560	4 840	0,00156	1		4 046,9
1 cm ²	0,1550					1	0,0001
1 m ²	1 550,0	10,764	1,1960			10 000	1

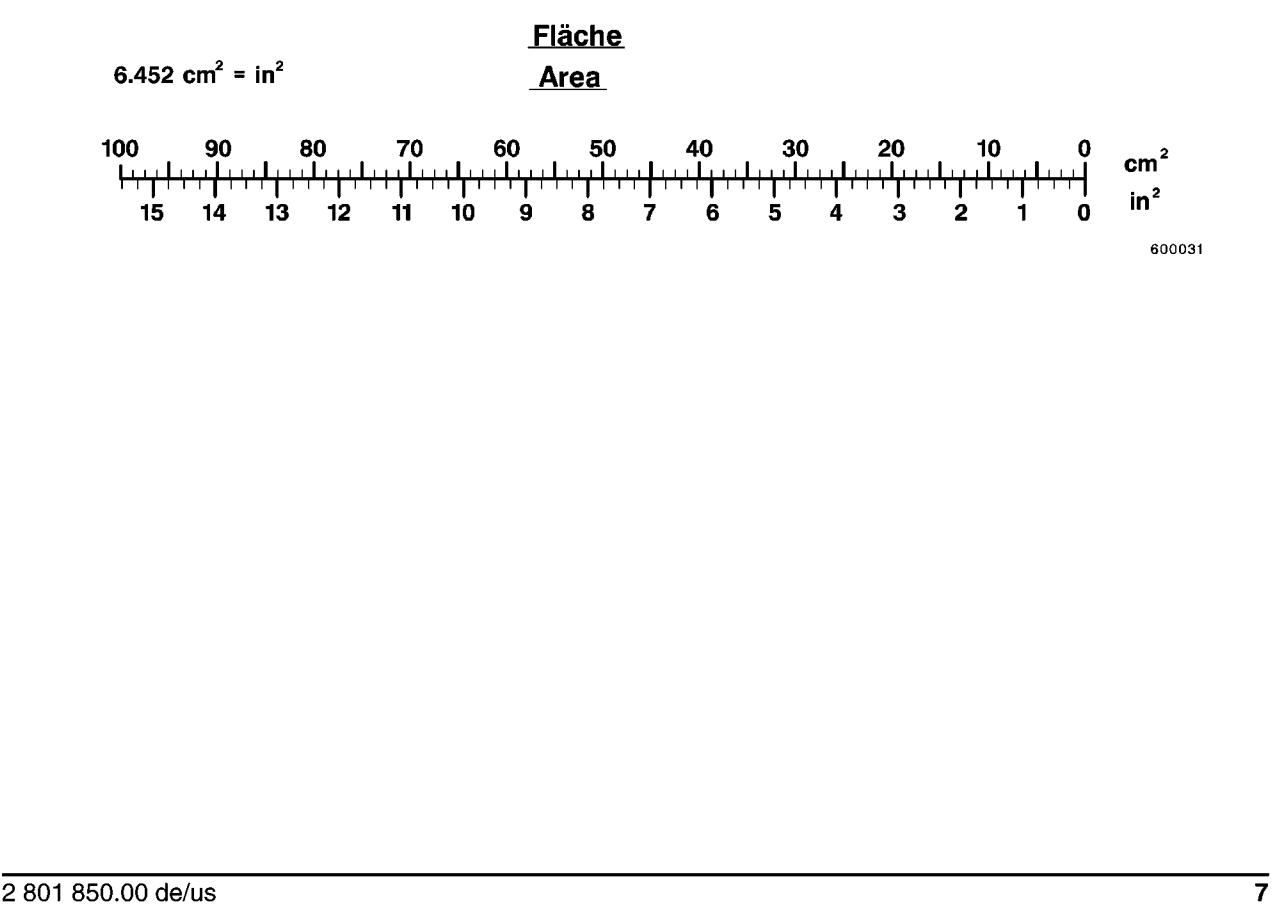

SERVICE DATEN / SERVICE DATA

Umrechnung von foot (Fuss) und inch (Zoll) in Meter Conversion from foot (Fuss) and inch (Zoll) to metric measures

1 in (inch) = 25,4 mm (genau)

1 ft (foot) = 12 in = 304,8 mm

Beispiel: 4 ft 2 in = 1,27 m

1 in (inch) = 25,4 mm (exact)

Example: 4 ft 2 in = 1,27 m

ft	in											
	+0	+1	+2	+3	+4	+5	+6	+7	+8	+9	+10	+11
	m	m	m	m	m	m	m	m	m	m	m	m
0		0,0254	0,0508	0,0762	0,1016	0,1270	0,1524	0,1778	0,2032	0,2286	0,2540	0,2794
1	0,3048	0,3302	0,3556	0,3810	0,4064	0,4318	0,4572	0,4826	0,5080	0,5334	0,5588	0,5842
2	0,6096	0,6350	0,6604	0,6858	0,7112	0,7366	0,7620	0,7874	0,8128	0,8382	0,8636	0,8890
3	0,9144	0,9398	0,9652	0,9906	1,0160	1,0414	1,0668	1,0922	1,1176	1,1430	1,1684	1,1938
4	1,2192	1,2446	1,2700	1,2954	1,3208	1,3462	1,3716	1,3970	1,4224	1,4478	1,4732	1,4986
5	1,5240	1,5494	1,5748	1,6002	1,6256	1,6510	1,6764	1,7018	1,7272	1,7526	1,7780	1,8034
6	1,8288	1,8542	1,8796	1,9050	1,9304	1,9558	1,9812	2,0066	2,0320	2,0574	2,0828	2,1082
7	2,1336	2,1590	2,1844	2,2098	2,2352	2,2606	2,2860	2,3114	2,3368	2,3622	2,3876	2,4130
8	2,4384	2,4638	2,4892	2,5146	2,5400	2,5654	2,5908	2,6162	2,6416	2,6670	2,6924	2,7178
9	2,7432	2,7686	2,7940	2,8194	2,8448	2,8702	2,8956	2,9210	2,9464	2,9718	2,9972	3,0226
10	3,0480	3,0734	3,0988	3,1242	3,1496	3,1750	3,2004	3,2258	3,2512	3,2766	3,3020	3,3274
11	3,3528	3,3782	3,4036	3,4290	3,4544	3,4798	3,5052	3,5306	3,5560	3,5814	3,6068	3,6322
12	3,6576	3,6830	3,70	3,7338	3,7592	3,7846	3,8100	3,8354	3,8608	3,8862	3,9116	3,9370

SERVICE DATEN / SERVICE DATA

Umrechnung von Newtonmeter "Nm" in Foot Pounds "ft.lb." Conversion from newtonmeter "Nm" into foot pounds "ft.lb."

Nm	0	1	2	3	4	5	6	7	8	9
10	7.376	8.113	8.851	9.588	10.326	11.063	11.801	12.539	13.276	14.014
20	14.751	15.489	16.226	16.964	17.701	18.439	19.177	19.914	20.652	21.389
30	22.127	22.864	23.602	24.339	25.077	25.815	26.552	27.290	28.027	28.765
40	29.502	30.240	30.978	31.715	32.453	33.190	33.928	34.665	35.403	36.140
50	36.878	37.616	38.353	39.091	39.828	40.566	41.303	42.041	42.778	43.516
60	44.254	44.991	45.729	46.466	47.204	47.941	48.679	49.417	50.154	50.892
70	51.629	52.367	53.104	53.842	54.579	55.317	56.055	56.792	57.530	58.267
80	59.005	59.742	60.480	61.217	61.955	62.693	63.430	64.168	64.905	65.643
90	66.380	67.118	67.856	68.593	69.331	70.068	70.806	71.543	72.281	73.018
100	73.756	74.494	75.231	75.969	76.706	77.444	78.181	78.919	79.656	80.394
110	81.132	81.869	82.607	83.344	84.082	84.819	85.557	86.295	87.032	87.770
120	88.507	89.245	89.982	90.720	91.457	92.195	92.933	93.670	94.408	95.145
130	95.883	96.620	97.358	98.095	98.833	99.571	100.308	101.046	101.783	102.521
140	103.258	103.996	104.734	105.471	106.209	106.946	107.684	108.421	109.159	109.896
150	110.634	111.372	112.109	112.847	113.584	114.322	115.059	115.797	116.534	117.272
160	118.010	118.747	119.485	120.222	120.960	121.697	122.435	123.173	123.910	124.648
170	125.385	126.123	126.860	127.598	128.335	129.073	129.811	130.548	131.286	132.023
180	132.761	133.498	134.236	134.973	135.711	136.449	137.186	137.924	138.661	139.399
190	140.136	140.874	141.612	142.349	143.087	143.824	144.562	145.299	146.037	146.774
200	147.512	148.250	148.987	149.725	150.462	151.200	151.937	152.675	153.412	154.150
210	154.888	155.625	156.363	157.100	157.838	158.575	159.313	160.051	160.788	161.526
220	162.263	163.001	163.738	164.476	165.213	165.951	166.689	167.426	168.164	168.901
230	169.639	170.376	171.114	171.851	172.589	173.327	174.064	174.802	175.539	176.277
240	177.014	177.752	178.490	179.227	179.965	180.702	181.440	182.177	182.915	183.652
250	184.390	185.128	185.865	186.603	187.340	188.078	188.815	189.553	190.290	191.028
260	191.766	192.503	193.241	193.978	194.716	195.453	196.191	196.929	197.666	198.404
270	199.141	199.879	200.616	201.354	202.091	202.829	203.567	204.304	205.042	205.779
280	206.517	207.254	207.992	208.729	209.467	210.205	210.942	211.680	212.417	213.155
290	213.892	214.630	215.368	216.105	216.843	217.580	218.318	219.055	219.793	220.530
300	221.268	222.006	222.743	223.481	224.218	224.956	225.693	226.431	227.168	227.906
310	228.644	229.381	230.119	230.856	231.594	232.331	233.069	233.807	234.544	235.282
320	236.019	236.757	237.494	238.232	238.969	239.707	240.445	241.182	241.920	242.657
330	243.395	244.132	244.870	245.607	246.345	247.083	247.820	248.558	249.295	250.033
340	250.770	251.508	252.245	252.983	253.721	254.458	255.196	255.933	256.671	257.408
350	258.146	258.884	259.621	260.359	261.096	261.834	262.571	263.309	264.046	264.784
360	265.521	266.259	266.997	267.734	268.472	269.209	269.947	270.684	271.422	272.159
370	272.897	273.635	274.372	275.110	275.847	276.585	277.323	278.060	278.798	279.535
380	280.273	281.010	281.748	282.485	283.223	283.960	284.698	285.436	286.173	286.911
390	287.648	288.386	289.123	289.861	290.598	291.336	292.074	292.811	293.549	294.286
400	295.024	295.761	296.499	297.237	297.974	298.712	299.449	300.187	300.924	301.662
410	302.399	303.137	303.875	304.612	305.350	306.087	306.825	307.562	308.300	309.038
420	309.775	310.513	311.250	311.988	312.725	313.463	314.200	314.938	315.676	316.413
430	317.151	317.888	318.626	319.363	320.101	320.838	321.576	322.313	323.051	323.789
440	324.526	325.264	326.001	326.739	327.477	328.214	328.952	329.689	330.427	331.164
450	331.902	332.639	333.377	334.115	334.852	335.590	336.327	337.065	337.802	338.540
460	339.278	340.015	340.753	341.490	342.228	342.965	343.703	344.440	345.178	345.916
470	346.653	347.391	348.128	348.866	349.603	350.341	351.078	351.816	352.553	353.291
480	354.029	354.766	355.504	356.241	356.979	357.717	358.454	359.192	359.929	360.667
490	361.404	362.142	362.879	363.617	364.354	365.092	365.830	366.567	367.305	368.042
500	368.780	369.517	370.255	370.992	371.730	372.468	373.205	373.943	374.680	375.418
510	376.156	376.893	377.631	378.368	379.106	379.843	380.581	381.318	382.056	382.793
520	383.531	384.269	385.006	385.744	386.481	387.219	387.957	388.694	389.432	390.169
530	390.907	391.644	392.382	393.119	393.857	394.594	395.332	396.070	396.807	397.545
540	398.282	399.020	399.757	400.495	401.232	401.970	402.708	403.445	404.183	404.920
550	405.658	406.396	407.133	407.871	408.608	409.346	410.083	410.821	411.558	412.296
560	413.033	413.771	414.509	415.246	415.984	416.721	417.459	418.196	418.934	419.671
570	420.409	421.147	421.884	422.622	423.359	424.097	424.834	425.572	426.310	427.047
580	427.785	428.522	429.260	429.997	430.735	431.472	432.210	432.948	433.685	434.423
590	435.160	435.898	436.635	437.373	438.111	438.848	439.586	440.323	441.061	441.798
600	442.536	443.273	444.011	444.749	445.486	446.224	446.961	447.699	448.436	449.174
610	449.911	450.649	451.386	452.124	452.862	453.599	454.337	455.074	455.812	456.550
620	457.287	458.025	458.762	459.500	460.237	460.975	461.712	462.450	463.187	463.925
630	464.663	465.400	466.138	466.875	467.613	468.350	469.088	469.826	470.563	471.301
640	472.038	472.776	473.513	474.251	474.989	475.726	476.464	477.201	477.939	478.676
650	479.414	480.151	480.889	481.626	482.364	483.102	483.839	484.577	485.314	486.052
660	486.790	487.527	488.265	489.002	489.740	490.477	491.215	491.952	492.690	493.427
670	494.165	494.903	495.640	496.378	497.115	497.853	498.590	499.328	500.065	500.803
680	501.541	502.278	503.016	503.753	504.491	505.229	505.966	506.704	507.441	508.179
690	508.916	509.654	510.391	511.129	511.866	512.604	513.342	514.079	514.817	515.554
700	516.292	517.030	517.767	518.505	519.242	519.980	520.717	521.455	522.192	522.930

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
710	523.667	524.405	525.143	525.880	526.618	527.355	528.093	528.830	529.568	530.305
720	531.043	531.781	532.518	533.256	533.993	534.731	535.469	536.206	536.944	537.681
730	538.419	539.156	539.894	540.631	541.369	542.106	542.844	543.582	544.319	545.057
740	545.794	546.532	547.269	548.007	548.744	549.482	550.220	550.957	551.695	552.432
750	553.170	553.907	554.645	555.383	556.120	556.858	557.595	558.333	559.070	559.808
760	560.545	561.283	562.021	562.758	563.496	564.233	564.971	565.708	566.446	567.184
770	567.921	568.659	569.396	570.134	570.871	571.609	572.346	573.084	573.822	574.559
780	575.297	576.034	576.772	577.509	578.247	578.984	579.722	580.459	581.197	581.935
790	582.672	583.410	584.147	584.885	585.623	586.360	587.098	587.835	588.573	589.310
800	590.048	590.785	591.523	592.260	592.998	593.736	594.473	595.211	595.948	596.686
810	597.423	598.161	598.899	599.636	600.374	601.111	601.849	602.586	603.324	604.062
820	604.799	605.537	606.274	607.012	607.749	608.487	609.224	609.962	610.699	611.437
830	612.175	612.912	613.650	614.387	615.125	615.863	616.600	617.338	618.075	618.813
840	619.550	620.288	621.025	621.763	622.500	623.238	623.976	624.713	625.451	626.188
850	626.926	627.663	628.401	629.138	629.876	630.614	631.351	632.089	632.826	633.564
860	634.302	635.039	635.777	636.514	637.252	637.989	638.727	639.464	640.202	640.939
870	641.677	642.415	643.152	643.890	644.627	645.365	646.102	646.840	647.578	648.315
880	649.053	649.790	650.528	651.265	652.003	652.740	653.478	654.216	654.953	655.691
890	656.428	657.166	657.903	658.641	659.378	660.116	660.854	661.591	662.329	663.066
900	663.804	664.542	665.279	666.017	666.754	667.492	668.229	668.967	669.704	670.442
910	671.179	671.917	672.655	673.392	674.130	674.867	675.605	676.342	677.080	677.817
920	678.555	679.293	680.030	680.768	681.505	682.243	682.980	683.718	684.456	685.193
930	685.931	686.668	687.406	688.143	688.881	689.618	690.356	691.094	691.831	692.569
940	693.306	694.044	694.781	695.519	696.257	696.994	697.732	698.469	699.207	699.944
950	700.682	701.419	702.157	702.895	703.632	704.370	705.107	705.845	706.582	707.320
960	708.057	708.795	709.532	710.270	711.008	711.745	712.483	713.220	713.958	714.696
970	715.433	716.171	716.908	717.646	718.383	719.121	719.858	720.596	721.333	722.071
980	722.809	723.546	724.284	725.021	725.759	726.496	727.234	727.972	728.709	729.447
990	730.184	730.922	731.659	732.397	733.135	733.872	734.610	735.347	736.085	736.822
1000	737.560	738.297	739.035	739.772	740.510	741.248	741.985	742.723	743.460	744.198
1010	744.936	745.673	746.411	747.148	747.886	748.623	749.361	750.098	750.836	751.573
1020	752.311	753.049	753.786	754.524	755.261	755.999	756.736	757.474	758.211	758.949
1030	759.687	760.424	761.162	761.899	762.637	763.375	764.112	764.850	765.587	766.325
1040	767.062	767.800	768.537	769.275	770.012	770.750	771.488	772.225	772.963	773.700
1050	774.438	775.175	775.913	776.651	777.388	778.126	778.863	779.601	780.338	781.076
1060	781.813	782.551	783.289	784.026	784.764	785.501	786.239	786.976	787.714	788.451
1070	789.189	789.927	790.664	791.402	792.139	792.877	793.615	794.352	795.090	795.827
1080	796.565	797.302	798.040	798.777	799.515	800.252	800.990	801.728	802.465	803.203
1090	803.940	804.678	805.415	806.153	806.890	807.628	808.366	809.103	809.841	810.578
1100	811.316	812.053	812.791	813.529	814.266	815.004	815.741	816.479	817.216	817.954
1110	818.691	819.429	820.167	820.904	821.642	822.379	823.117	823.854	824.592	825.330
1120	826.067	826.805	827.542	828.280	829.017	829.755	830.492	831.230	831.968	832.705
1130	833.443	834.180	834.918	835.655	836.393	837.130	837.868	838.605	839.343	840.081
1140	840.818	841.556	842.293	843.031	843.769	844.506	845.244	845.981	846.719	847.456
1150	848.194	848.931	849.669	850.406	851.144	851.882	852.619	853.357	854.094	854.832
1160	855.569	856.307	857.045	857.782	858.520	859.257	859.995	860.732	861.470	862.208
1170	862.945	863.683	864.420	865.158	865.895	866.633	867.370	868.108	868.845	869.583
1180	870.321	871.058	871.796	872.533	873.271	874.009	874.746	875.484	876.221	876.959
1190	877.696	878.434	879.171	879.909	880.646	881.384	882.122	882.859	883.597	884.334
1200	885.072	885.809	886.547	887.284	888.022	888.760	889.497	890.235	890.972	891.710
1210	892.448	893.185	893.923	894.660	895.398	896.135	896.873	897.610	898.348	899.085
1220	899.823	900.561	901.298	902.036	902.773	903.511	904.248	904.986	905.724	906.461
1230	907.199	907.936	908.674	909.411	910.149	910.886	911.624	912.362	913.099	913.837
1240	914.574	915.312	916.049	916.787	917.524	918.262	919.000	919.737	920.475	921.212
1250	921.950	922.687	923.425	924.163	924.900	925.638	926.375	927.113	927.850	928.588
1260	929.325	930.063	930.801	931.538	932.276	933.013	933.751	934.488	935.226	935.963
1270	936.701	937.439	938.176	938.914	939.651	940.389	941.126	941.864	942.602	943.339
1280	944.077	944.814	945.552	946.289	947.027	947.764	948.502	949.240	949.977	950.715
1290	951.452	952.190	952.927	953.665	954.403	955.140	955.878	956.615	957.353	958.090
1300	958.828	959.565	960.303	961.041	961.778	962.516	963.253	963.991	964.728	965.466
1310	966.203	966.941	967.678	968.416	969.154	969.891	970.629	971.366	972.104	972.842
1320	973.579	974.317	975.054	975.792	976.529	977.267	978.004	978.742	979.479	980.217
1330	980.955	981.692	982.430	983.167	983.905	984.642	985.380	986.118	986.855	987.593
1340	988.330	989.068	989.805	990.543	991.281	992.018	992.756	993.493	994.231	994.968
1350	995.706	996.443	997.181	997.918	998.656	999.394	1000.131	1000.869	1001.606	1002.344
1360	1003.082	1003.819	1004.557	1005.294	1006.032	1006.769	1007.507	1008.244	1008.982	1009.719
1370	1010.457	1011.195	1011.932	1012.670	1013.407	1014.145	1014.882	1015.620	1016.357	1017.095
1380	1017.833	1018.570	1019.308	1020.045	1020.783	1021.521	1022.258	1022.996	1023.733	1024.471
1390	1025.208	1025.946	1026.683	1027.421	1028.158	1028.896	1029.634	1030.371	1031.109	1031.846
1400	1032.584	1033.321	1034.059	1034.797	1035.534	1036.272	1037.009	1037.747	1038.484	1039.222

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
1410	1039.959	1040.697	1041.435	1042.172	1042.910	1043.647	1044.385	1045.122	1045.860	1046.597
1420	1047.335	1048.073	1048.810	1049.548	1050.285	1051.023	1051.760	1052.498	1053.236	1053.973
1430	1054.711	1055.448	1056.186	1056.923	1057.661	1058.398	1059.136	1059.874	1060.611	1061.349
1440	1062.086	1062.824	1063.561	1064.299	1065.036	1065.774	1066.512	1067.249	1067.987	1068.724
1450	1069.462	1070.199	1070.937	1071.675	1072.412	1073.150	1073.887	1074.625	1075.362	1076.100
1460	1076.837	1077.575	1078.312	1079.050	1079.788	1080.525	1081.263	1082.000	1082.738	1083.476
1470	1084.213	1084.951	1085.688	1086.426	1087.163	1087.901	1088.638	1089.376	1090.114	1090.851
1480	1091.589	1092.326	1093.064	1093.801	1094.539	1095.276	1096.014	1096.751	1097.489	1098.227
1490	1098.964	1099.702	1100.439	1101.177	1101.915	1102.652	1103.390	1104.127	1104.865	1105.602
1500	1106.340	1107.077	1107.815	1108.552	1109.290	1110.028	1110.765	1111.503	1112.240	1112.978
1510	1113.715	1114.453	1115.191	1115.928	1116.666	1117.403	1118.141	1118.878	1119.616	1120.354
1520	1121.091	1121.829	1122.566	1123.304	1124.041	1124.779	1125.516	1126.254	1126.991	1127.729
1530	1128.467	1129.204	1129.942	1130.679	1131.417	1132.155	1132.892	1133.630	1134.367	1135.105
1540	1135.842	1136.580	1137.317	1138.055	1138.792	1139.530	1140.268	1141.005	1141.743	1142.480
1550	1143.218	1143.955	1144.693	1145.430	1146.168	1146.906	1147.643	1148.381	1149.118	1149.856
1560	1150.594	1151.331	1152.069	1152.806	1153.544	1154.281	1155.019	1155.756	1156.494	1157.231
1570	1157.969	1158.707	1159.444	1160.182	1160.919	1161.657	1162.394	1163.132	1163.870	1164.607
1580	1165.345	1166.082	1166.820	1167.557	1168.295	1169.032	1169.770	1170.508	1171.245	1171.983
1590	1172.720	1173.458	1174.195	1174.933	1175.670	1176.408	1177.146	1177.883	1178.621	1179.358
1600	1180.096	1180.833	1181.571	1182.309	1183.046	1183.784	1184.521	1185.259	1185.996	1186.734
1610	1187.471	1188.209	1188.947	1189.684	1190.422	1191.159	1191.897	1192.634	1193.372	1194.109
1620	1194.847	1195.585	1196.322	1197.060	1197.797	1198.535	1199.272	1200.010	1200.748	1201.485
1630	1202.223	1202.960	1203.698	1204.435	1205.173	1205.910	1206.648	1207.385	1208.123	1208.861
1640	1209.598	1210.336	1211.073	1211.811	1212.549	1213.286	1214.024	1214.761	1215.499	1216.236
1650	1216.974	1217.711	1218.449	1219.187	1219.924	1220.662	1221.399	1222.137	1222.874	1223.612
1660	1224.349	1225.087	1225.824	1226.562	1227.300	1228.037	1228.775	1229.512	1230.250	1230.988
1670	1231.725	1232.463	1233.200	1233.938	1234.675	1235.413	1236.150	1236.888	1237.625	1238.363
1680	1239.101	1239.838	1240.576	1241.313	1242.051	1242.788	1243.526	1244.264	1245.001	1245.739
1690	1246.476	1247.214	1247.951	1248.689	1249.427	1250.164	1250.902	1251.639	1252.377	1253.114
1700	1253.852	1254.589	1255.327	1256.064	1256.802	1257.540	1258.277	1259.015	1259.752	1260.490
1710	1261.228	1261.965	1262.703	1263.440	1264.178	1264.915	1265.653	1266.390	1267.128	1267.865
1720	1268.603	1269.341	1270.078	1270.816	1271.553	1272.291	1273.028	1273.766	1274.503	1275.241
1730	1275.979	1276.716	1277.454	1278.191	1278.929	1279.667	1280.404	1281.142	1281.879	1282.617
1740	1283.354	1284.092	1284.829	1285.567	1286.304	1287.042	1287.780	1288.517	1289.255	1289.992
1750	1290.730	1291.467	1292.205	1292.943	1293.680	1294.418	1295.155	1295.893	1296.630	1297.368
1760	1298.105	1298.843	1299.581	1300.318	1301.056	1301.793	1302.531	1303.268	1304.006	1304.743
1770	1305.481	1306.219	1306.956	1307.694	1308.431	1309.169	1309.906	1310.644	1311.382	1312.119
1780	1312.857	1313.594	1314.332	1315.069	1315.807	1316.544	1317.282	1318.020	1318.757	1319.495
1790	1320.232	1320.970	1321.707	1322.445	1323.182	1323.920	1324.657	1325.395	1326.133	1326.870
1800	1327.608	1328.345	1329.083	1329.821	1330.558	1331.296	1332.033	1332.771	1333.508	1334.246
1810	1334.983	1335.721	1336.458	1337.196	1337.934	1338.671	1339.409	1340.146	1340.884	1341.622
1820	1342.359	1343.097	1343.834	1344.572	1345.309	1346.047	1346.784	1347.522	1348.260	1348.997
1830	1349.735	1350.472	1351.210	1351.947	1352.685	1353.422	1354.160	1354.897	1355.635	1356.373
1840	1357.110	1357.848	1358.585	1359.323	1360.061	1360.798	1361.536	1362.273	1363.011	1363.748
1850	1364.486	1365.223	1365.961	1366.698	1367.436	1368.174	1368.911	1369.649	1370.386	1371.124
1860	1371.861	1372.599	1373.337	1374.074	1374.812	1375.549	1376.287	1377.024	1377.762	1378.500
1870	1379.237	1379.975	1380.712	1381.450	1382.187	1382.925	1383.662	1384.400	1385.137	1385.875
1880	1386.613	1387.350	1388.088	1388.825	1389.563	1390.301	1391.038	1391.776	1392.513	1393.251
1890	1393.988	1394.726	1395.463	1396.201	1396.938	1397.676	1398.414	1399.151	1399.889	1400.626
1900	1401.364	1402.101	1402.839	1403.576	1404.314	1405.052	1405.789	1406.527	1407.264	1408.002
1910	1408.740	1409.477	1410.215	1410.952	1411.690	1412.427	1413.165	1413.902	1414.640	1415.377
1920	1416.115	1416.853	1417.590	1418.328	1419.065	1419.803	1420.540	1421.278	1422.016	1422.753
1930	1423.491	1424.228	1424.966	1425.703	1426.441	1427.178	1427.916	1428.654	1429.391	1430.129
1940	1430.866	1431.604	1432.341	1433.079	1433.816	1434.554	1435.292	1436.029	1436.767	1437.504
1950	1438.242	1438.979	1439.717	1440.455	1441.192	1441.930	1442.667	1443.405	1444.142	1444.880
1960	1445.617	1446.355	1447.093	1447.830	1448.568	1449.305	1450.043	1450.780	1451.518	1452.255
1970	1452.993	1453.730	1454.468	1455.206	1455.943	1456.681	1457.418	1458.156	1458.894	1459.631
1980	1460.369	1461.106	1461.844	1462.581	1463.319	1464.056	1464.794	1465.531	1466.269	1467.007
1990	1467.744	1468.482	1469.219	1469.957	1470.695	1471.432	1472.170	1472.907	1473.645	1474.382
2000	1475.120	1475.857	1476.595	1477.333	1478.070	1478.808	1479.545	1480.283	1481.020	1481.758
2010	1482.495	1483.233	1483.970	1484.708	1485.446	1486.183	1486.921	1487.658	1488.396	1489.134
2020	1489.871	1490.609	1491.346	1492.084	1492.821	1493.559	1494.296	1495.034	1495.771	1496.509
2030	1497.247	1497.984	1498.722	1499.459	1500.197	1500.934	1501.672	1502.409	1503.147	1503.885
2040	1504.622	1505.360	1506.097	1506.835	1507.573	1508.310	1509.048	1509.785	1510.523	1511.260
2050	1511.998	1512.735	1513.473	1514.210	1514.948	1515.686	1516.423	1517.161	1517.898	1518.636
2060	1519.374	1520.111	1520.849	1521.586	1522.324	1523.061	1523.799	1524.536	1525.274	1526.011
2070	1526.749	1527.487	1528.224	1528.962	1529.699	1530.437	1531.174	1531.912	1532.649	1533.387
2080	1534.125	1534.862	1535.600	1536.337	1537.075	1537.812	1538.550	1539.288	1540.025	1540.763
2090	1541.500	1542.238	1542.975	1543.713	1544.450	1545.188	1545.926	1546.663	1547.401	1548.138
2100	1548.876	1549.613	1550.351	1551.089	1551.826	1552.564	1553.301	1554.039	1554.776	1555.514

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
2110	1556.251	1556.989	1557.727	1558.464	1559.202	1559.939	1560.677	1561.414	1562.152	1562.889
2120	1563.627	1564.365	1565.102	1565.840	1566.577	1567.315	1568.052	1568.790	1569.528	1570.265
2130	1571.003	1571.740	1572.478	1573.215	1573.953	1574.690	1575.428	1576.166	1576.903	1577.641
2140	1578.378	1579.116	1579.853	1580.591	1581.328	1582.066	1582.803	1583.541	1584.279	1585.016
2150	1585.754	1586.491	1587.229	1587.967	1588.704	1589.442	1590.179	1590.917	1591.654	1592.392
2160	1593.129	1593.867	1594.604	1595.342	1596.080	1596.817	1597.555	1598.292	1599.030	1599.768
2170	1600.505	1601.243	1601.980	1602.718	1603.455	1604.193	1604.930	1605.668	1606.406	1607.143
2180	1607.881	1608.618	1609.356	1610.093	1610.831	1611.568	1612.306	1613.043	1613.781	1614.519
2190	1615.256	1615.994	1616.731	1617.469	1618.207	1618.944	1619.682	1620.419	1621.157	1621.894
2200	1622.632	1623.369	1624.107	1624.844	1625.582	1626.320	1627.057	1627.795	1628.532	1629.270
2210	1630.007	1630.745	1631.482	1632.220	1632.958	1633.695	1634.433	1635.170	1635.908	1636.646
2220	1637.383	1638.121	1638.858	1639.596	1640.333	1641.071	1641.808	1642.546	1643.283	1644.021
2230	1644.759	1645.496	1646.234	1646.971	1647.709	1648.447	1649.184	1649.922	1650.659	1651.397
2240	1652.134	1652.872	1653.609	1654.347	1655.084	1655.822	1656.560	1657.297	1658.035	1658.772
2250	1659.510	1660.247	1660.985	1661.722	1662.460	1663.198	1663.935	1664.673	1665.410	1666.148
2260	1666.885	1667.623	1668.361	1669.098	1669.836	1670.573	1671.311	1672.048	1672.786	1673.523
2270	1674.261	1674.999	1675.736	1676.474	1677.211	1677.949	1678.686	1679.424	1680.162	1680.899
2280	1681.637	1682.374	1683.112	1683.849	1684.587	1685.324	1686.062	1686.800	1687.537	1688.275
2290	1689.012	1689.750	1690.487	1691.225	1691.962	1692.700	1693.437	1694.175	1694.913	1695.650
2300	1696.388	1697.125	1697.863	1698.601	1699.338	1700.076	1700.813	1701.551	1702.288	1703.026
2310	1703.763	1704.501	1705.239	1705.976	1706.714	1707.451	1708.189	1708.926	1709.664	1710.401
2320	1711.139	1711.876	1712.614	1713.352	1714.089	1714.827	1715.564	1716.302	1717.040	1717.777
2330	1718.515	1719.252	1719.990	1720.727	1721.465	1722.202	1722.940	1723.677	1724.415	1725.153
2340	1725.890	1726.628	1727.365	1728.103	1728.841	1729.578	1730.316	1731.053	1731.791	1732.528
2350	1733.266	1734.003	1734.741	1735.479	1736.216	1736.954	1737.691	1738.429	1739.166	1739.904
2360	1740.641	1741.379	1742.116	1742.854	1743.592	1744.329	1745.067	1745.804	1746.542	1747.280
2370	1748.017	1748.755	1749.492	1750.230	1750.967	1751.705	1752.442	1753.180	1753.917	1754.655
2380	1755.393	1756.130	1756.868	1757.605	1758.343	1759.080	1759.818	1760.555	1761.293	1762.031
2390	1762.768	1763.506	1764.243	1764.981	1765.719	1766.456	1767.194	1767.931	1768.669	1769.406
2400	1770.144	1770.881	1771.619	1772.356	1773.094	1773.832	1774.569	1775.307	1776.044	1776.782
2410	1777.520	1778.257	1778.995	1779.732	1780.470	1781.207	1781.945	1782.682	1783.420	1784.157
2420	1784.895	1785.633	1786.370	1787.108	1787.845	1788.583	1789.320	1790.058	1790.795	1791.533
2430	1792.271	1793.008	1793.746	1794.483	1795.221	1795.958	1796.696	1797.434	1798.171	1798.909
2440	1799.646	1800.384	1801.121	1801.859	1802.596	1803.334	1804.072	1804.809	1805.547	1806.284
2450	1807.022	1807.759	1808.497	1809.234	1809.972	1810.710	1811.447	1812.185	1812.922	1813.660
2460	1814.397	1815.135	1815.873	1816.610	1817.348	1818.085	1818.823	1819.560	1820.298	1821.035
2470	1821.773	1822.510	1823.248	1823.986	1824.723	1825.461	1826.198	1826.936	1827.674	1828.411
2480	1829.149	1829.886	1830.624	1831.361	1832.099	1832.836	1833.574	1834.312	1835.049	1835.787
2490	1836.524	1837.262	1837.999	1838.737	1839.474	1840.212	1840.949	1841.687	1842.425	1843.162
2500	1843.900	1844.637	1845.375	1846.113	1846.850	1847.588	1848.325	1849.063	1849.800	1850.538
2510	1851.275	1852.013	1852.750	1853.488	1854.226	1854.963	1855.701	1856.438	1857.176	1857.914
2520	1858.651	1859.389	1860.126	1860.864	1861.601	1862.339	1863.076	1863.814	1864.552	1865.289
2530	1866.027	1866.764	1867.502	1868.239	1868.977	1869.714	1870.452	1871.189	1871.927	1872.665
2540	1873.402	1874.140	1874.877	1875.615	1876.353	1877.090	1877.828	1878.565	1879.303	1880.040
2550	1880.778	1881.515	1882.253	1882.990	1883.728	1884.466	1885.203	1885.941	1886.678	1887.416
2560	1888.153	1888.891	1889.628	1890.366	1891.104	1891.841	1892.579	1893.316	1894.054	1894.792
2570	1895.529	1896.267	1897.004	1897.742	1898.479	1899.217	1899.954	1900.692	1901.429	1902.167
2580	1902.905	1903.642	1904.380	1905.117	1905.855	1906.593	1907.330	1908.068	1908.805	1909.543
2590	1910.280	1911.018	1911.755	1912.493	1913.230	1913.968	1914.706	1915.443	1916.181	1916.918
2600	1917.656	1918.393	1919.131	1919.868	1920.606	1921.344	1922.081	1922.819	1923.556	1924.294
2610	1925.031	1925.769	1926.507	1927.244	1927.982	1928.719	1929.457	1930.194	1930.932	1931.669
2620	1932.407	1933.145	1933.882	1934.620	1935.357	1936.095	1936.832	1937.570	1938.307	1939.045
2630	1939.783	1940.520	1941.258	1941.995	1942.733	1943.470	1944.208	1944.946	1945.683	1946.421
2640	1947.158	1947.896	1948.633	1949.371	1950.108	1950.846	1951.583	1952.321	1953.059	1953.796
2650	1954.534	1955.271	1956.009	1956.747	1957.484	1958.222	1958.959	1959.697	1960.434	1961.172
2660	1961.909	1962.647	1963.385	1964.122	1964.860	1965.597	1966.335	1967.072	1967.810	1968.547
2670	1969.285	1970.022	1970.760	1971.498	1972.235	1972.973	1973.710	1974.448	1975.186	1975.923
2680	1976.661	1977.398	1978.136	1978.873	1979.611	1980.348	1981.086	1981.823	1982.561	1983.299
2690	1984.036	1984.774	1985.511	1986.249	1986.986	1987.724	1988.462	1989.199	1989.937	1990.674
2700	1991.412	1992.149	1992.887	1993.625	1994.362	1995.100	1995.837	1996.575	1997.312	1998.050
2710	1998.787	1999.525	2000.262	2001.000	2001.738	2002.475	2003.213	2003.950	2004.688	2005.426
2720	2006.163	2006.901	2007.638	2008.376	2009.113	2009.851	2010.588	2011.326	2012.063	2012.801
2730	2013.539	2014.276	2015.014	2015.751	2016.489	2017.226	2017.964	2018.701	2019.439	2020.177
2740	2020.914	2021.652	2022.389	2023.127	2023.865	2024.602	2025.340	2026.077	2026.815	2027.552
2750	2028.290	2029.027	2029.765	2030.502	2031.240	2031.978	2032.715	2033.453	2034.190	2034.928
2760	2035.666	2036.403	2037.141	2037.878	2038.616	2039.353	2040.091	2040.828	2041.566	2042.303
2770	2043.041	2043.779	2044.516	2045.254	2045.991	2046.729	2047.466	2048.204	2048.941	2049.679
2780	2050.417	2051.154	2051.892	2052.629	2053.367	2054.104	2054.842	2055.580	2056.317	2057.055
2790	2057.792	2058.530	2059.267	2060.005	2060.742	2061.480	2062.218	2062.955	2063.693	2064.430
2800	2065.168	2065.905	2066.643	2067.380	2068.118	2068.856	2069.593	2070.331	2071.068	2071.806

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
2810	2072.543	2073.281	2074.019	2074.756	2075.494	2076.231	2076.969	2077.706	2078.444	2079.181
2820	2079.919	2080.656	2081.394	2082.132	2082.869	2083.607	2084.344	2085.082	2085.820	2086.557
2830	2087.295	2088.032	2088.770	2089.507	2090.245	2090.982	2091.720	2092.458	2093.195	2093.933
2840	2094.670	2095.408	2096.145	2096.883	2097.620	2098.358	2099.095	2099.833	2100.571	2101.308
2850	2102.046	2102.783	2103.521	2104.259	2104.996	2105.734	2106.471	2107.209	2107.946	2108.684
2860	2109.421	2110.159	2110.896	2111.634	2112.372	2113.109	2113.847	2114.584	2115.322	2116.059
2870	2116.797	2117.535	2118.272	2119.010	2119.747	2120.485	2121.222	2121.960	2122.698	2123.435
2880	2124.173	2124.910	2125.648	2126.385	2127.123	2127.860	2128.598	2129.335	2130.073	2130.811
2890	2131.548	2132.286	2133.023	2133.761	2134.499	2135.236	2135.974	2136.711	2137.449	2138.186
2900	2138.924	2139.661	2140.399	2141.136	2141.874	2142.612	2143.349	2144.087	2144.824	2145.562
2910	2146.299	2147.037	2147.774	2148.512	2149.250	2149.987	2150.725	2151.462	2152.200	2152.937
2920	2153.675	2154.413	2155.150	2155.888	2156.625	2157.363	2158.100	2158.838	2159.575	2160.313
2930	2161.051	2161.788	2162.526	2163.263	2164.001	2164.738	2165.476	2166.214	2166.951	2167.689
2940	2168.426	2169.164	2169.901	2170.639	2171.376	2172.114	2172.852	2173.589	2174.327	2175.064
2950	2175.802	2176.539	2177.277	2178.014	2178.752	2179.490	2180.227	2180.965	2181.702	2182.440
2960	2183.177	2183.915	2184.653	2185.390	2186.128	2186.865	2187.603	2188.340	2189.078	2189.815
2970	2190.553	2191.291	2192.028	2192.766	2193.503	2194.241	2194.978	2195.716	2196.453	2197.191
2980	2197.929	2198.666	2199.404	2200.141	2200.879	2201.616	2202.354	2203.092	2203.829	2204.567
2990	2205.304	2206.042	2206.779	2207.517	2208.254	2208.992	2209.729	2210.467	2211.205	2211.942
3000	2212.680	2213.417	2214.155	2214.893	2215.630	2216.368	2217.105	2217.843	2218.580	2219.318
3010	2220.055	2220.793	2221.531	2222.268	2223.006	2223.743	2224.481	2225.218	2225.956	2226.693
3020	2227.431	2228.168	2228.906	2229.644	2230.381	2231.119	2231.856	2232.594	2233.332	2234.069
3030	2234.807	2235.544	2236.282	2237.019	2237.757	2238.494	2239.232	2239.969	2240.707	2241.445
3040	2242.182	2242.920	2243.657	2244.395	2245.132	2245.870	2246.608	2247.345	2248.083	2248.820
3050	2249.558	2250.295	2251.033	2251.771	2252.508	2253.246	2253.983	2254.721	2255.458	2256.196
3060	2256.933	2257.671	2258.408	2259.146	2259.884	2260.621	2261.359	2262.096	2262.834	2263.572
3070	2264.309	2265.047	2265.784	2266.522	2267.259	2267.997	2268.734	2269.472	2270.209	2270.947
3080	2271.685	2272.422	2273.160	2273.897	2274.635	2275.372	2276.110	2276.847	2277.585	2278.323
3090	2279.060	2279.798	2280.535	2281.273	2282.010	2282.748	2283.486	2284.223	2284.961	2285.698
3100	2286.436	2287.173	2287.911	2288.648	2289.386	2290.124	2290.861	2291.599	2292.336	2293.074
3110	2293.811	2294.549	2295.287	2296.024	2296.762	2297.499	2298.237	2298.974	2299.712	2300.449
3120	2301.187	2301.925	2302.662	2303.400	2304.137	2304.875	2305.612	2306.350	2307.087	2307.825
3130	2308.562	2309.300	2310.038	2310.775	2311.513	2312.250	2312.988	2313.726	2314.463	2315.201
3140	2315.938	2316.676	2317.413	2318.151	2318.888	2319.626	2320.364	2321.101	2321.839	2322.576
3150	2323.314	2324.051	2324.789	2325.526	2326.264	2327.002	2327.739	2328.477	2329.214	2329.952
3160	2330.689	2331.427	2332.165	2332.902	2333.640	2334.377	2335.115	2335.852	2336.590	2337.327
3170	2338.065	2338.802	2339.540	2340.278	2341.015	2341.753	2342.490	2343.228	2343.966	2344.703
3180	2345.441	2346.178	2346.916	2347.653	2348.391	2349.128	2349.866	2350.604	2351.341	2352.079
3190	2352.816	2353.554	2354.291	2355.029	2355.766	2356.504	2357.241	2357.979	2358.717	2359.454
3200	2360.192	2360.929	2361.667	2362.405	2363.142	2363.880	2364.617	2365.355	2366.092	2366.830
3210	2367.567	2368.305	2369.042	2369.780	2370.518	2371.255	2371.993	2372.730	2373.468	2374.205
3220	2374.943	2375.681	2376.418	2377.156	2377.893	2378.631	2379.368	2380.106	2380.844	2381.581
3230	2382.319	2383.056	2383.794	2384.531	2385.269	2386.006	2386.744	2387.481	2388.219	2388.957
3240	2389.694	2390.432	2391.169	2391.907	2392.645	2393.382	2394.120	2394.857	2395.595	2396.332
3250	2397.070	2397.807	2398.545	2399.282	2400.020	2400.758	2401.495	2402.233	2402.970	2403.708
3260	2404.445	2405.183	2405.920	2406.658	2407.396	2408.133	2408.871	2409.608	2410.346	2411.083
3270	2411.821	2412.559	2413.296	2414.034	2414.771	2415.509	2416.246	2416.984	2417.721	2418.459
3280	2419.197	2419.934	2420.672	2421.409	2422.147	2422.884	2423.622	2424.360	2425.097	2425.835
3290	2426.572	2427.310	2428.047	2428.785	2429.522	2430.260	2430.998	2431.735	2432.473	2433.210
3300	2433.948	2434.685	2435.423	2436.160	2436.898	2437.635	2438.373	2439.111	2439.848	2440.586
3310	2441.323	2442.061	2442.799	2443.536	2444.274	2445.011	2445.749	2446.486	2447.224	2447.961
3320	2448.699	2449.437	2450.174	2450.912	2451.649	2452.387	2453.124	2453.862	2454.599	2455.337
3330	2456.075	2456.812	2457.550	2458.287	2459.025	2459.762	2460.500	2461.238	2461.975	2462.713
3340	2463.450	2464.188	2464.925	2465.663	2466.400	2467.138	2467.875	2468.613	2469.351	2470.088
3350	2470.826	2471.563	2472.301	2473.039	2473.776	2474.514	2475.251	2475.989	2476.726	2477.464
3360	2478.201	2478.939	2479.677	2480.414	2481.152	2481.889	2482.627	2483.364	2484.102	2484.839
3370	2485.577	2486.314	2487.052	2487.790	2488.527	2489.265	2490.002	2490.740	2491.478	2492.215
3380	2492.953	2493.690	2494.428	2495.165	2495.903	2496.640	2497.378	2498.115	2498.853	2499.591
3390	2500.328	2501.066	2501.803	2502.541	2503.278	2504.016	2504.754	2505.491	2506.229	2506.966
3400	2507.704	2508.441	2509.179	2509.917	2510.654	2511.392	2512.129	2512.867	2513.604	2514.342
3410	2515.079	2515.817	2516.554	2517.292	2518.030	2518.767	2519.505	2520.242	2520.980	2521.718
3420	2522.455	2523.193	2523.930	2524.668	2525.405	2526.143	2526.880	2527.618	2528.355	2529.093
3430	2529.831	2530.568	2531.306	2532.043	2532.781	2533.518	2534.256	2534.993	2535.731	2536.469
3440	2537.206	2537.944	2538.681	2539.419	2540.156	2540.894	2541.632	2542.369	2543.107	2543.844
3450	2544.582	2545.319	2546.057	2546.794	2547.532	2548.270	2549.007	2549.745	2550.482	2551.220
3460	2551.957	2552.695	2553.433	2554.170	2554.908	2555.645	2556.383	2557.120	2557.858	2558.595
3470	2559.333	2560.071	2560.808	2561.546	2562.283	2563.021	2563.758	2564.496	2565.233	2565.971
3480	2566.708	2567.446	2568.184	2568.921	2569.659	2570.396	2571.134	2571.872	2572.609	2573.347
3490	2574.084	2574.822	2575.559	2576.297	2577.034	2577.772	2578.510	2579.247	2579.985	2580.722
3500	2581.460	2582.197	2582.935	2583.672	2584.410	2585.148	2585.885	2586.623	2587.360	2588.098

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
3510	2588.835	2589.573	2590.311	2591.048	2591.786	2592.523	2593.261	2593.998	2594.736	2595.473
3520	2596.211	2596.948	2597.686	2598.424	2599.161	2599.899	2600.636	2601.374	2602.112	2602.849
3530	2603.587	2604.324	2605.062	2605.799	2606.537	2607.274	2608.012	2608.750	2609.487	2610.225
3540	2610.962	2611.700	2612.437	2613.175	2613.912	2614.650	2615.387	2616.125	2616.863	2617.600
3550	2618.338	2619.075	2619.813	2620.551	2621.288	2622.026	2622.763	2623.501	2624.238	2624.976
3560	2625.713	2626.451	2627.188	2627.926	2628.664	2629.401	2630.139	2630.876	2631.614	2632.351
3570	2633.089	2633.827	2634.564	2635.302	2636.039	2636.777	2637.514	2638.252	2638.990	2639.727
3580	2640.465	2641.202	2641.940	2642.677	2643.415	2644.152	2644.890	2645.627	2646.365	2647.103
3590	2647.840	2648.578	2649.315	2650.053	2650.791	2651.528	2652.266	2653.003	2653.741	2654.478
3600	2655.216	2655.953	2656.691	2657.428	2658.166	2658.904	2659.641	2660.379	2661.116	2661.854
3610	2662.591	2663.329	2664.066	2664.804	2665.542	2666.279	2667.017	2667.754	2668.492	2669.229
3620	2669.967	2670.705	2671.442	2672.180	2672.917	2673.655	2674.392	2675.130	2675.867	2676.605
3630	2677.343	2678.080	2678.818	2679.555	2680.293	2681.030	2681.768	2682.506	2683.243	2683.981
3640	2684.718	2685.456	2686.193	2686.931	2687.668	2688.406	2689.144	2689.881	2690.619	2691.356
3650	2692.094	2692.831	2693.569	2694.306	2695.044	2695.781	2696.519	2697.257	2697.994	2698.732
3660	2699.469	2700.207	2700.945	2701.682	2702.420	2703.157	2703.895	2704.632	2705.370	2706.107
3670	2706.845	2707.583	2708.320	2709.058	2709.795	2710.533	2711.270	2712.008	2712.745	2713.483
3680	2714.221	2714.958	2715.696	2716.433	2717.171	2717.908	2718.646	2719.384	2720.121	2720.859
3690	2721.596	2722.334	2723.071	2723.809	2724.546	2725.284	2726.021	2726.759	2727.497	2728.234
3700	2728.972	2729.709	2730.447	2731.185	2731.922	2732.660	2733.397	2734.135	2734.872	2735.610
3710	2736.347	2737.085	2737.823	2738.560	2739.298	2740.035	2740.773	2741.510	2742.248	2742.985
3720	2743.723	2744.460	2745.198	2745.936	2746.673	2747.411	2748.148	2748.886	2749.624	2750.361
3730	2751.099	2751.836	2752.574	2753.311	2754.049	2754.786	2755.524	2756.261	2756.999	2757.737
3740	2758.474	2759.212	2759.949	2760.687	2761.424	2762.162	2762.900	2763.637	2764.375	2765.112
3750	2765.850	2766.587	2767.325	2768.062	2768.800	2769.538	2770.275	2771.013	2771.750	2772.488
3760	2773.225	2773.963	2774.700	2775.438	2776.176	2776.913	2777.651	2778.388	2779.126	2779.864
3770	2780.601	2781.339	2782.076	2782.814	2783.551	2784.289	2785.026	2785.764	2786.501	2787.239
3780	2787.977	2788.714	2789.452	2790.189	2790.927	2791.664	2792.402	2793.139	2793.877	2794.615
3790	2795.352	2796.090	2796.827	2797.565	2798.302	2799.040	2799.778	2800.515	2801.253	2801.990
3800	2802.728	2803.465	2804.203	2804.940	2805.678	2806.416	2807.153	2807.891	2808.628	2809.366
3810	2810.103	2810.841	2811.579	2812.316	2813.054	2813.791	2814.529	2815.266	2816.004	2816.741
3820	2817.479	2818.217	2818.954	2819.692	2820.429	2821.167	2821.904	2822.642	2823.379	2824.117
3830	2824.854	2825.592	2826.330	2827.067	2827.805	2828.542	2829.280	2830.018	2830.755	2831.493
3840	2832.230	2832.968	2833.705	2834.443	2835.180	2835.918	2836.656	2837.393	2838.131	2838.868
3850	2839.606	2840.343	2841.081	2841.818	2842.556	2843.293	2844.031	2844.769	2845.506	2846.244
3860	2846.981	2847.719	2848.457	2849.194	2849.932	2850.669	2851.407	2852.144	2852.882	2853.619
3870	2854.357	2855.094	2855.832	2856.570	2857.307	2858.045	2858.782	2859.520	2860.258	2860.995
3880	2861.733	2862.470	2863.208	2863.945	2864.683	2865.420	2866.158	2866.896	2867.633	2868.371
3890	2869.108	2869.846	2870.583	2871.321	2872.058	2872.796	2873.533	2874.271	2875.009	2875.746
3900	2876.484	2877.221	2877.959	2878.697	2879.434	2880.172	2880.909	2881.647	2882.384	2883.122
3910	2883.859	2884.597	2885.334	2886.072	2886.810	2887.547	2888.285	2889.022	2889.760	2890.497
3920	2891.235	2891.973	2892.710	2893.448	2894.185	2894.923	2895.660	2896.398	2897.135	2897.873
3930	2898.611	2899.348	2900.086	2900.823	2901.561	2902.298	2903.036	2903.773	2904.511	2905.249
3940	2905.986	2906.724	2907.461	2908.199	2908.937	2909.674	2910.412	2911.149	2911.887	2912.624
3950	2913.362	2914.099	2914.837	2915.574	2916.312	2917.050	2917.787	2918.525	2919.262	2920.000
3960	2920.737	2921.475	2922.212	2922.950	2923.687	2924.425	2925.163	2925.900	2926.638	2927.375
3970	2928.113	2928.851	2929.588	2930.326	2931.063	2931.801	2932.538	2933.276	2934.013	2934.751
3980	2935.489	2936.226	2936.964	2937.701	2938.439	2939.176	2939.914	2940.652	2941.389	2942.127
3990	2942.864	2943.602	2944.339	2945.077	2945.814	2946.552	2947.290	2948.027	2948.765	2949.502
4000	2950.240	2950.977	2951.715	2952.452	2953.190	2953.927	2954.665	2955.403	2956.140	2956.878
4010	2957.615	2958.353	2959.091	2959.828	2960.566	2961.303	2962.041	2962.778	2963.516	2964.253
4020	2964.991	2965.729	2966.466	2967.204	2967.941	2968.679	2969.416	2970.154	2970.891	2971.629
4030	2972.366	2973.104	2973.842	2974.579	2975.317	2976.054	2976.792	2977.530	2978.267	2979.005
4040	2979.742	2980.480	2981.217	2981.955	2982.692	2983.430	2984.167	2984.905	2985.643	2986.380
4050	2987.118	2987.855	2988.593	2989.331	2990.068	2990.806	2991.543	2992.281	2993.018	2993.756
4060	2994.493	2995.231	2995.969	2996.706	2997.444	2998.181	2998.919	2999.656	3000.394	3001.131
4070	3001.869	3002.606	3003.344	3004.082	3004.819	3005.557	3006.294	3007.032	3007.770	3008.507
4080	3009.245	3009.982	3010.720	3011.457	3012.195	3012.932	3013.670	3014.407	3015.145	3015.883
4090	3016.620	3017.358	3018.095	3018.833	3019.570	3020.308	3021.046	3021.783	3022.521	3023.258
4100	3023.996	3024.733	3025.471	3026.208	3026.946	3027.684	3028.421	3029.159	3029.896	3030.634
4110	3031.371	3032.109	3032.846	3033.584	3034.322	3035.059	3035.797	3036.534	3037.272	3038.010
4120	3038.747	3039.485	3040.222	3040.960	3041.697	3042.435	3043.172	3043.910	3044.647	3045.385
4130	3046.123	3046.860	3047.598	3048.335	3049.073	3049.810	3050.548	3051.285	3052.023	3052.760
4140	3053.498	3054.236	3054.973	3055.711	3056.448	3057.186	3057.924	3058.661	3059.399	3060.136
4150	3060.874	3061.611	3062.349	3063.086	3063.824	3064.562	3065.299	3066.037	3066.774	3067.512
4160	3068.249	3068.987	3069.725	3070.462	3071.200	3071.937	3072.675	3073.412	3074.150	3074.887
4170	3075.625	3076.363	3077.100	3077.838	3078.575	3079.313	3080.050	3080.788	3081.525	3082.263
4180	3083.000	3083.738	3084.476	3085.213	3085.951	3086.688	3087.426	3088.164	3088.901	3089.639
4190	3090.376	3091.114	3091.851	3092.589	3093.326	3094.064	3094.802	3095.539	3096.277	3097.014
4200	3097.752	3098.489	3099.227	3099.964	3100.702	3101.439	3102.177	3102.915	3103.652	3104.390

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
4210	3105.127	3105.865	3106.603	3107.340	3108.078	3108.815	3109.553	3110.290	3111.028	3111.765
4220	3112.503	3113.240	3113.978	3114.716	3115.453	3116.191	3116.928	3117.666	3118.404	3119.141
4230	3119.879	3120.616	3121.354	3122.091	3122.829	3123.566	3124.304	3125.042	3125.779	3126.517
4240	3127.254	3127.992	3128.729	3129.467	3130.204	3130.942	3131.679	3132.417	3133.155	3133.892
4250	3134.630	3135.367	3136.105	3136.843	3137.580	3138.318	3139.055	3139.793	3140.530	3141.268
4260	3142.005	3142.743	3143.480	3144.218	3144.956	3145.693	3146.431	3147.168	3147.906	3148.643
4270	3149.381	3150.118	3150.856	3151.594	3152.331	3153.069	3153.806	3154.544	3155.281	3156.019
4280	3156.757	3157.494	3158.232	3158.969	3159.707	3160.444	3161.182	3161.919	3162.657	3163.395
4290	3164.132	3164.870	3165.607	3166.345	3167.083	3167.820	3168.558	3169.295	3170.033	3170.770
4300	3171.508	3172.245	3172.983	3173.720	3174.458	3175.196	3175.933	3176.671	3177.408	3178.146
4310	3178.883	3179.621	3180.358	3181.096	3181.833	3182.571	3183.309	3184.046	3184.784	3185.521
4320	3186.259	3186.997	3187.734	3188.472	3189.209	3189.947	3190.684	3191.422	3192.159	3192.897
4330	3193.635	3194.372	3195.110	3195.847	3196.585	3197.322	3198.060	3198.798	3199.535	3200.273
4340	3201.010	3201.748	3202.485	3203.223	3203.960	3204.698	3205.436	3206.173	3206.911	3207.648
4350	3208.386	3209.123	3209.861	3210.598	3211.336	3212.073	3212.811	3213.549	3214.286	3215.024
4360	3215.761	3216.499	3217.237	3217.974	3218.712	3219.449	3220.187	3220.924	3221.662	3222.399
4370	3223.137	3223.875	3224.612	3225.350	3226.087	3226.825	3227.562	3228.300	3229.037	3229.775
4380	3230.512	3231.250	3231.988	3232.725	3233.463	3234.200	3234.938	3235.676	3236.413	3237.151
4390	3237.888	3238.626	3239.363	3240.101	3240.838	3241.576	3242.313	3243.051	3243.789	3244.526
4400	3245.264	3246.001	3246.739	3247.477	3248.214	3248.952	3249.689	3250.427	3251.164	3251.902
4410	3252.639	3253.377	3254.115	3254.852	3255.590	3256.327	3257.065	3257.802	3258.540	3259.277
4420	3260.015	3260.752	3261.490	3262.228	3262.965	3263.703	3264.440	3265.178	3265.916	3266.653
4430	3267.391	3268.128	3268.866	3269.603	3270.341	3271.078	3271.816	3272.553	3273.291	3274.029
4440	3274.766	3275.504	3276.241	3276.979	3277.716	3278.454	3279.191	3279.929	3280.667	3281.404
4450	3282.142	3282.879	3283.617	3284.354	3285.092	3285.830	3286.567	3287.305	3288.042	3288.780
4460	3289.517	3290.255	3290.992	3291.730	3292.468	3293.205	3293.943	3294.680	3295.418	3296.156
4470	3296.893	3297.631	3298.368	3299.106	3299.843	3300.581	3301.318	3302.056	3302.793	3303.531
4480	3304.269	3305.006	3305.744	3306.481	3307.219	3307.956	3308.694	3309.431	3310.169	3310.906
4490	3311.644	3312.382	3313.119	3313.857	3314.594	3315.332	3316.070	3316.807	3317.545	3318.282
4500	3319.020	3319.757	3320.495	3321.232	3321.970	3322.708	3323.445	3324.183	3324.920	3325.658
4510	3326.395	3327.133	3327.870	3328.608	3329.346	3330.083	3330.821	3331.558	3332.296	3333.033
4520	3333.771	3334.509	3335.246	3335.984	3336.721	3337.459	3338.196	3338.934	3339.671	3340.409
4530	3341.146	3341.884	3342.622	3343.359	3344.097	3344.834	3345.572	3346.310	3347.047	3347.785
4540	3348.522	3349.260	3349.997	3350.735	3351.472	3352.210	3352.948	3353.685	3354.423	3355.160
4550	3355.898	3356.635	3357.373	3358.110	3358.848	3359.585	3360.323	3361.061	3361.798	3362.536
4560	3363.273	3364.011	3364.749	3365.486	3366.224	3366.961	3367.699	3368.436	3369.174	3369.911
4570	3370.649	3371.386	3372.124	3372.862	3373.599	3374.337	3375.074	3375.812	3376.550	3377.287
4580	3378.025	3378.762	3379.500	3380.237	3380.975	3381.712	3382.450	3383.187	3383.925	3384.663
4590	3385.400	3386.138	3386.875	3387.613	3388.350	3389.088	3389.825	3390.563	3391.301	3392.038
4600	3392.776	3393.513	3394.251	3394.989	3395.726	3396.464	3397.201	3397.939	3398.676	3399.414
4610	3400.151	3400.889	3401.626	3402.364	3403.102	3403.839	3404.577	3405.314	3406.052	3406.789
4620	3407.527	3408.264	3409.002	3409.740	3410.477	3411.215	3411.952	3412.690	3413.427	3414.165
4630	3414.903	3415.640	3416.378	3417.115	3417.853	3418.590	3419.328	3420.065	3420.803	3421.541
4640	3422.278	3423.016	3423.753	3424.491	3425.229	3425.966	3426.704	3427.441	3428.179	3428.916
4650	3429.654	3430.391	3431.129	3431.866	3432.604	3433.342	3434.079	3434.817	3435.554	3436.292
4660	3437.029	3437.767	3438.504	3439.242	3439.979	3440.717	3441.455	3442.192	3442.930	3443.667
4670	3444.405	3445.143	3445.880	3446.618	3447.355	3448.093	3448.830	3449.568	3450.305	3451.043
4680	3451.781	3452.518	3453.256	3453.993	3454.731	3455.468	3456.206	3456.943	3457.681	3458.419
4690	3459.156	3459.894	3460.631	3461.369	3462.106	3462.844	3463.582	3464.319	3465.057	3465.794
4700	3466.532	3467.269	3468.007	3468.744	3469.482	3470.219	3470.957	3471.695	3472.432	3473.170
4710	3473.907	3474.645	3475.383	3476.120	3476.858	3477.595	3478.333	3479.070	3479.808	3480.545
4720	3481.283	3482.021	3482.758	3483.496	3484.233	3484.971	3485.708	3486.446	3487.183	3487.921
4730	3488.658	3489.396	3490.134	3490.871	3491.609	3492.346	3493.084	3493.822	3494.559	3495.297
4740	3496.034	3496.772	3497.509	3498.247	3498.984	3499.722	3500.459	3501.197	3501.935	3502.672
4750	3503.410	3504.147	3504.885	3505.622	3506.360	3507.098	3507.835	3508.573	3509.310	3510.048
4760	3510.785	3511.523	3512.260	3512.998	3513.736	3514.473	3515.211	3515.948	3516.686	3517.423
4770	3518.161	3518.898	3519.636	3520.374	3521.111	3521.849	3522.586	3523.324	3524.062	3524.799
4780	3525.537	3526.274	3527.012	3527.749	3528.487	3529.224	3529.962	3530.699	3531.437	3532.175
4790	3532.912	3533.650	3534.387	3535.125	3535.862	3536.600	3537.337	3538.075	3538.813	3539.550
4800	3540.288	3541.025	3541.763	3542.500	3543.238	3543.976	3544.713	3545.451	3546.188	3546.926
4810	3547.663	3548.401	3549.138	3549.876	3550.614	3551.351	3552.089	3552.826	3553.564	3554.302
4820	3555.039	3555.777	3556.514	3557.252	3557.989	3558.727	3559.464	3560.202	3560.939	3561.677
4830	3562.415	3563.152	3563.890	3564.627	3565.365	3566.102	3566.840	3567.577	3568.315	3569.052
4840	3569.790	3570.528	3571.265	3572.003	3572.740	3573.478	3574.216	3574.953	3575.691	3576.428
4850	3577.166	3577.903	3578.641	3579.378	3580.116	3580.854	3581.591	3582.329	3583.066	3583.804
4860	3584.541	3585.279	3586.016	3586.754	3587.492	3588.229	3588.967	3589.704	3590.442	3591.179
4870	3591.917	3592.655	3593.392	3594.130	3594.867	3595.605	3596.342	3597.080	3597.817	3598.555
4880	3599.292	3600.030	3600.768	3601.505	3602.243	3602.980	3603.718	3604.456	3605.193	3605.931
4890	3606.668	3607.406	3608.143	3608.881	3609.618	3610.356	3611.094	3611.831	3612.569	3613.306
4900	3614.044	3614.781	3615.519	3616.256	3616.994	3617.731	3618.469	3619.207	3619.944	3620.682

SERVICE DATEN / SERVICE DATA

Nm	0	1	2	3	4	5	6	7	8	9
4910	3621.419	3622.157	3622.895	3623.632	3624.370	3625.107	3625.845	3626.582	3627.320	3628.057
4920	3628.795	3629.532	3630.270	3631.008	3631.745	3632.483	3633.220	3633.958	3634.695	3635.433
4930	3636.171	3636.908	3637.646	3638.383	3639.121	3639.858	3640.596	3641.333	3642.071	3642.809
4940	3643.546	3644.284	3645.021	3645.759	3646.496	3647.234	3647.971	3648.709	3649.447	3650.184
4950	3650.922	3651.659	3652.397	3653.135	3653.872	3654.610	3655.347	3656.085	3656.822	3657.560
4960	3658.297	3659.035	3659.772	3660.510	3661.248	3661.985	3662.723	3663.460	3664.198	3664.935
4970	3665.673	3666.410	3667.148	3667.886	3668.623	3669.361	3670.098	3670.836	3671.573	3672.311
4980	3673.049	3673.786	3674.524	3675.261	3675.999	3676.736	3677.474	3678.211	3678.949	3679.687
4990	3680.424	3681.162	3681.899	3682.637	3683.374	3684.112	3684.850	3685.587	3686.325	3687.062
5000	3687.800	3688.537	3689.275	3690.012	3690.750	3691.488	3692.225	3692.963	3693.700	3694.438

□

Umrechnungstabelle für Druckeinheiten von Gasen, Dämpfen und Flüssigkeiten
Conversion table for units of pressure in gases, steam and fluids

2801094

mit $1 \text{ Pa} = 1 \text{ N/m}^2 = \frac{1}{9,81} \text{ kp/m}^2 = 0,102 \text{ kp/m}^2$

	Pa	bar	kp/m²	at	atm	Torr
1 Pa (= 1 N/m ²) =	1	10 ⁻⁵	0,102	0,102 x 10 ⁻⁴	0,987 x 10 ⁻⁵	0,0075
1 bar (= 0,1 MPa) =	100 000 = 10 ⁵	¹ (= 1000 mbar)	10 200	1,02	0,987	750
1 kp/m ² =	9,81	9,81 x 10 ⁻⁵	1	10 ⁻⁴	0,968 x 10 ⁻⁴	0,0736
1 at (= 1 kp/cm ²) =	98 100	0,981	10 000	1	0,968	736
1 atm (= 760 Torr) =	101 325	^{1,013} (= 1013 mbar)	10 330	1,033	1	760
1 Torr (= $\frac{1}{760}$ atm) =	133	0,00133	13,6	0,00136	0,00132	1

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**