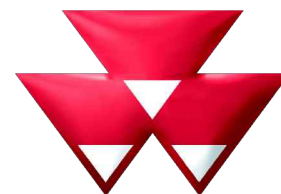 


Operator's Manual



MASSEY FERGUSON

Beauvais
AGCO S.A.S. - 41 avenue Blaise Pascal - 60000
Beauvais - France - RC B562 104 539
© AGCO 2015
Original Operator's Manual

November 2015
ACT0016280
English

Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This Operator's Manual complies with Directive 2010/52 EC.

Massey Ferguson

1 Tractor identification	11
1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14
2 Safety instructions and safety points - Warranty	15
2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	27
2.5 Special instructions	28
2.5.1 Specific recommendations for agricultural and forestry tractors	28
2.6 Special safety instructions for preparing the tractor for use	30
2.6.1 Protective clothing	30
2.6.2 Safety devices and items	30
2.6.3 Checking the tractor	30
2.7 Specific safety instructions for starting the tractor	32
2.7.1 Protection of persons other than the operator	32
2.7.2 Safety start	32
2.7.3 Checks to be carried out after start-up	33
2.8 Specific safety instructions for using the tractor	34
2.8.1 General instructions	34
2.8.2 Protection of persons other than the operator	35
2.8.3 Overturning	35
2.8.4 Tractor towing	38
2.8.5 Regulatory data on maximum permitted trailed weights	38
2.8.6 Road use	39
2.8.7 Parking brake	40
2.8.8 Power take-off	40
2.8.9 Implements	41
2.8.10 Front-end loader	43
2.9 Specific safety instructions for servicing the tractor	45
2.9.1 Pollution warning to observe when servicing the tractor	45
2.9.2 General instructions	45
2.9.3 Handling instructions	46
2.9.4 Special instructions for cleaning the tractor	47
2.10 Protective structures	48
2.10.1 Protective structures: use and accreditation	48
2.10.2 ROPS (Roll Over Protective Structure)	48
2.10.3 Seat belt	48

2.10.4	Instructor seat	48
2.10.5	Level of vibration of the operator's seat	48
2.11	Warranty	49
2.11.1	General	49
2.11.2	Pre-delivery inspection and commissioning on the user's premises	49
2.11.3	Warranty procedure	49
2.11.4	Procedure to follow if changing region	49
2.11.5	Servicing during and after the warranty period	50
3	Operation	51
3.1	Operator environment	53
3.1.1	Standard steering console, Platform tractor	53
3.1.2	Essential steering console, Platform tractor	54
3.1.3	Instrument panel, Standard option	54
3.1.4	Instrument panel Essential option	58
3.1.5	Control unit	66
3.1.6	Start switch	66
3.1.7	Pedals	67
3.1.8	Steering wheel	68
3.1.9	Seat	68
3.1.10	Tool box	71
3.2	Body	72
3.2.1	Opening the bonnet	72
3.3	Engine	73
3.3.1	Running-in	73
3.3.2	Start-up	73
3.3.2.1	Starting the engine with preheating on the neutral start switch	73
3.3.3	Stopping the engine	73
3.3.4	Engine speed	74
3.4	Transmission	76
3.4.1	Clutch function	76
3.4.2	12X12 SMS gearbox	76
3.4.3	12X12 SPS gearbox	78
3.4.4	Super creeper gears	81
3.4.5	Tractor towing	81
3.5	Brakes	84
3.5.1	Brake pedals	84
3.5.2	Hydraulic trailer brake	84
3.5.3	Parking brake	85
3.6	Steering	86
3.6.1	Steering	86
3.7	Front axle	87
3.7.1	Four-wheel drive front axle	87
3.7.2	Permissible load on the front axle	88
3.8	Differential lock	89
3.8.1	Differential lock	89
3.9	Power take-off	90
3.9.1	Rear power take-off (PTO)	90
3.9.2	Power take-off speed selection	91
3.9.3	Interchangeable 540 and 1000 rpm PTO	94
3.9.4	Economy PTO	94
3.9.5	Power take-off protection	95
3.9.6	Coupling to the PTO shaft	96
3.10	Linkage	98
3.10.1	Control locations	98
3.10.2	Operation	98

3.11 Linkage	102
3.11.1 General	102
3.11.2 Three-point linkage	102
3.11.3 Bottom links	102
3.11.4 Three-point linkage: top link	103
3.11.5 Stabilizers	105
3.11.5.1 Stabilizers with manual telescopic adjustment	106
3.11.6 Lift rods	108
3.11.7 Multi-hole drawbar	109
3.11.8 Swinging drawbar	110
3.11.8.1 Settings	110
3.11.8.2 Hitching an attachment	110
3.11.8.3 Drawbars, ISO standard	111
3.11.8.4 Drawbars, SAE standard	112
3.11.9 Maximum authorised load according to the type of hitch	112
3.12 Auxiliary hydraulics	119
3.12.1 Types of spool valve	119
3.12.2 Hydraulic spool-valve controls	120
3.12.3 Checking and draining the hydraulic system	122
3.13 Wheels and tires	124
3.13.1 Wheel studs	124
3.13.2 Installation points of the axle stands	124
3.13.3 Adjustment of the front track width, 2-wheel drive	124
3.13.3.1 Adjustment of position 1 of the axle	125
3.13.3.2 Adjustment of position 2 of the axle	126
3.13.3.3 Adjustment of position 3 of the axle	127
3.13.3.4 Adjustment of position 4 of the axle	128
3.13.3.5 Adjustment of position 5 of the axle	129
3.13.4 Adjustment of the front track width, 4-wheel drive	130
3.13.5 Adjusting the rear wheel track width	131
3.13.6 Adjusting the 4WD front axle stops	133
3.13.7 Tires	133
3.13.8 Tire pressures	134
3.13.9 Radial loads and standard inflation pressures	135
3.13.10 Ballasting the tractor	137
3.13.11 Liquid ballasting	138
3.14 Additional weight	140
3.14.1 Additional weight	140
4 Maintenance	141
4.1 Service guide	143
4.1.1 Service guide	143
4.2 ROPS (Roll Over Protective Structure)	146
4.2.1 Attaching the ROPS	146
4.2.2 Reducing the height of the ROPS	146
4.3 Engine	147
4.3.1 Recommended products	147
4.3.2 3-cylinder AGCO Power Tier 3 engine	148
4.3.3 Engine oil level check	148
4.3.4 Draining the engine oil	149
4.3.5 Replacing the engine oil filter	149
4.3.6 Breather system	150
4.3.7 Fuel system: The fuel filter	150
4.3.8 Fuel system: bleeding	151
4.3.9 Fuel system: injection pump, regulator and injectors	151
4.3.10 Fuel system: Water separator prefilter	151
4.3.10.1 Water drain (for AGCO Power engine)	151

4.3.10.2	Replacing the filter element	152
4.3.11	Air filter	152
4.3.12	Cooling system, engine with expansion tank	153
4.3.12.1	Checking the level and quality of the coolant	153
4.3.12.2	Filling to top up the coolant level	154
4.3.12.3	Draining the cooling system	154
4.3.13	Check and replace the main fan/alternator belt	155
4.3.13.1	Procedure for tensioning the Poly-V main belt for the AGCO Power engine	155
4.3.14	Fuel	156
4.3.15	Biodiesel fuel	158
4.4	Transmission	159
4.4.1	Recommended products	159
4.4.2	Checking the hydraulic system level	159
4.4.3	Draining the hydraulic system	160
4.4.4	Replacing the filter and strainer	160
4.4.4.1	Replacing the strainer	160
4.4.4.2	Replacing the filter	161
4.4.5	Transmission oil cooler	162
4.4.6	Lubricating the rear axle shaft bearings	162
4.4.7	Tires	163
4.4.7.1	Tires compatible with MF 4700 tractors	163
4.4.7.2	Information about the tires	166
4.5	Brakes	172
4.5.1	Hydraulically controlled brakes	172
4.6	Front axle and steering	174
4.6.1	Recommended products	174
4.6.2	Two-wheel drive front axle: lubrication	174
4.6.3	Four-wheel drive front axle: checking the oil level in the final drives	175
4.6.4	Four-wheel drive front axle: draining the oil in the final drives	176
4.6.5	Four-wheel drive front axle: Checking the front axle beam oil level	176
4.6.6	Four-wheel drive front axle: draining the oil from the front axle beam	177
4.6.7	Four-wheel drive front axle: lubrication	178
4.7	Linkage	180
4.7.1	Recommended products	180
4.7.2	Three-point linkage: lubrication	180
4.8	Electrical equipment	182
4.8.1	Batteries	182
4.8.2	Alternator	182
4.8.3	Power socket (ISO)	183
4.8.4	Power socket (ASAE)	184
4.8.5	Accessories sockets (ISO)	184
4.8.6	Accessories sockets (ASAE)	185
4.8.7	Adjusting the headlights	185
4.8.8	Main fuse boxes	186
4.8.8.1	Main fuse box: Tier 3 engine with mechanical reverse shuttle	186
4.8.8.2	Main fuse box: Tier 3 engine with PowerShuttle	188
4.8.9	Additional fuse boxes	191
4.8.9.1	Additional fuse box: Tier 3 engine with mechanical reverse shuttle	191
4.8.9.2	Additional fuse box: Tier 3 engine with PowerShuttle	192
4.8.10	Fuse boxes on the side of the battery	193
4.8.10.1	Fuse boxes on the side of the battery: Tier 3 engine	193
4.8.11	Battery isolator	196
4.9	Pressure washing	198
4.9.1	Pressure washing	198
4.10	Storing your tractor	199
4.10.1	Storing your tractor	199

4.11 Faults and solutions	200
4.11.1 General table of faults	200
4.11.2 Indicator light panel	202
4.11.3 Error codes	205
5 Technical specifications	209
5.1 General specifications	211
5.1.1 Model MF 4707	211
5.1.2 Model MF 4708	212
5.1.3 Model MF 4709	213
5.2 Operator environment	215
5.2.1 Noise levels (dBA) at operator's ears - Tier 3 engine	215
5.3 Engine	216
5.3.1 TIER 3 engine specifications	216
5.3.2 Fuel system and air filter	216
5.3.3 Cooling	217
5.3.4 Tightening torques	217
5.4 Transmission	218
5.4.1 Forward speed at 2200 rpm for models MF 4707, MF 4708, MF 4709, , with 12x12 gearbox and 16.9x34 tires. 30 kph option	218
5.4.2 Forward speed at 2200 rpm for models MF 4707, MF 4708, MF 4709, , with 12x12 gearbox and 16.9x34 tires. 40 kph option	218
5.4.3 Gearbox	219
5.4.4 Final drives	219
5.4.5 Rear differential lock	219
5.5 Brakes	220
5.5.1 Brake technical specifications	220
5.6 Front axle and steering	221
5.6.1 Four-wheel drive front axle	221
5.6.2 Two-wheel drive front axle	221
5.6.3 Steering	221
5.6.4 Tightening torques	221
5.7 Power take-off	222
5.7.1 Specifications	222
5.7.2 Tightening torques	222
5.8 Hydraulic linkage	223
5.9 Auxiliary hydraulics (according to specification or country)	224
5.9.1 Open Center 65 l/min	224
5.10 Electrical equipment	225
5.10.1 Electrical equipment technical specifications	225
5.11 Wheels and tires	226
5.11.1 Wheels	226
5.11.2 Tires	226
5.11.3 Tightening torques	231
5.12 Capacities and dimensions	232
5.12.1 Capacities	232
5.12.2 MF 4700/Dimensions and weights	233
5.12.3 Attachment points for 3-cylinder engines	235

1. Tractor identification

1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14

1.1 Locating serial numbers

1.1.1 Locating serial numbers

IMPORTANT: Tell your dealer or agent the tractor serial number.

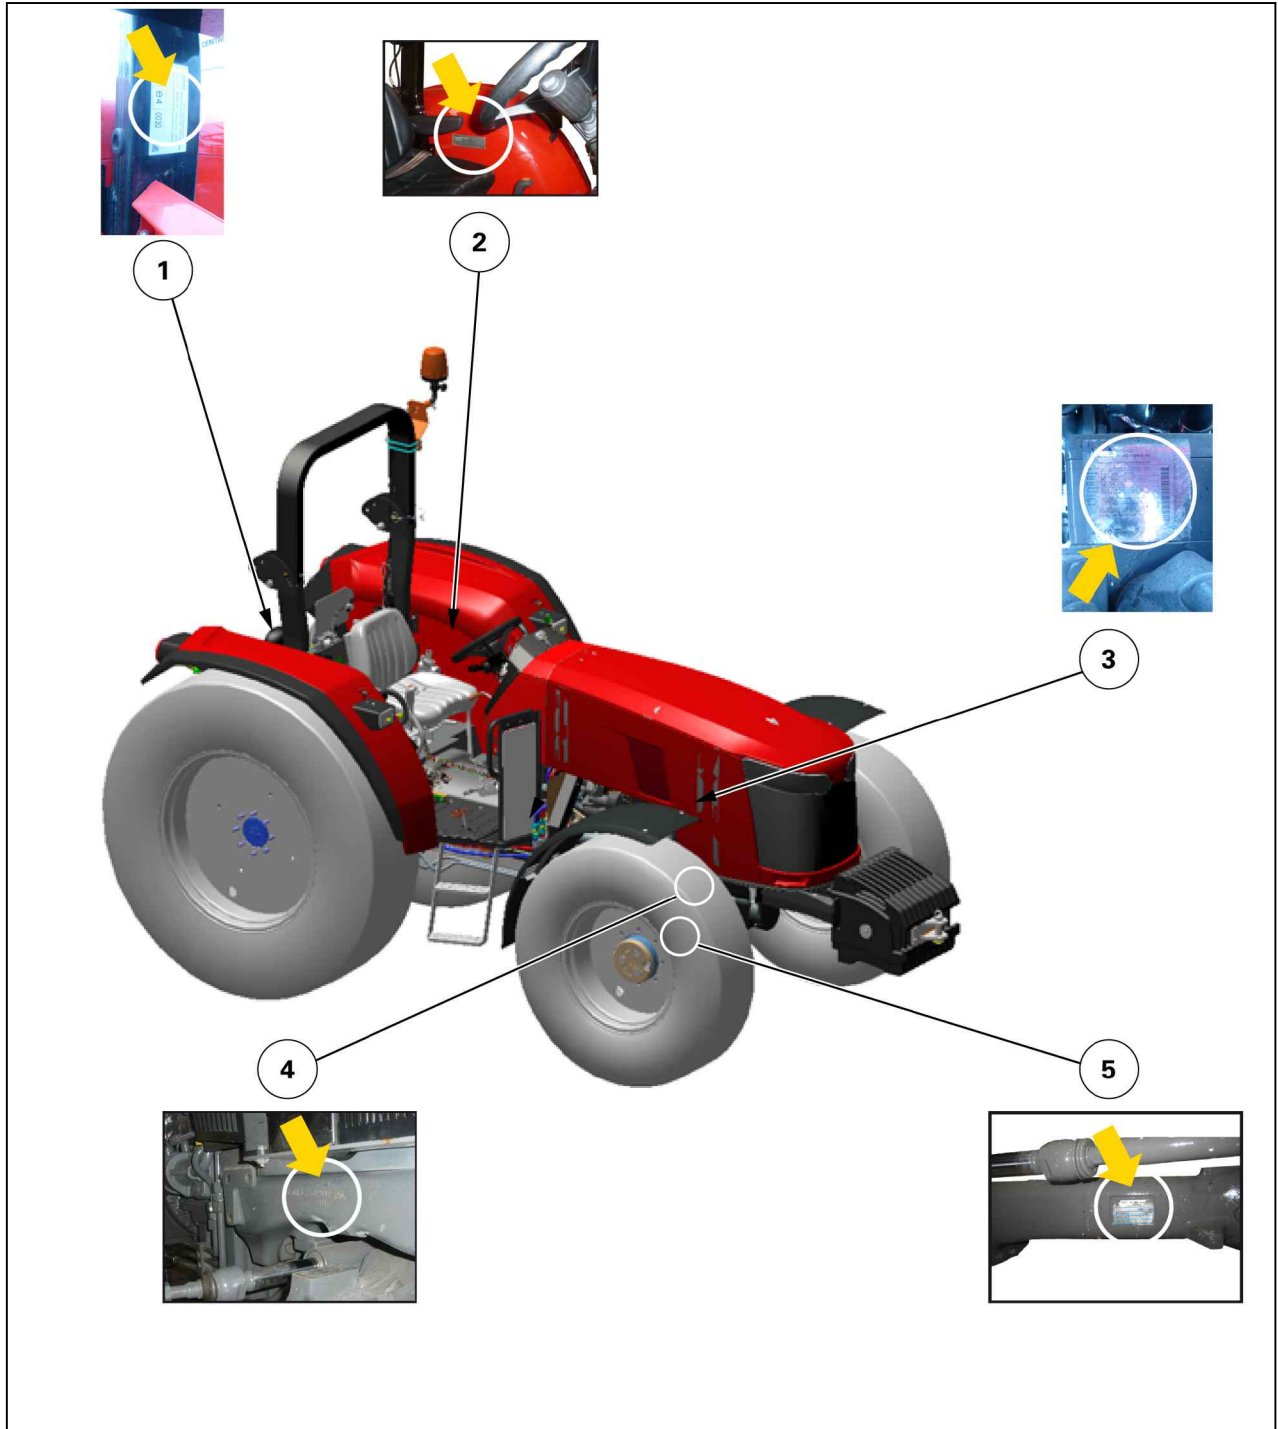 


Fig. 1

- (1) ROPS serial number
- (2) Name plate
- (3) Engine serial number

- (4) Chassis serial number
- (5) Front axle serial number

1.2 Tractor identification

1.2.1 Your tractor identification details

Model: _____

Serial number: _____

Engine serial number: _____

Owner's name: _____

Street: _____

Postcode: _____

Town: _____

County: _____

Country: _____

Dealer code: _____

Tractor received from (tick one of the following):

- Factory Other dealer (transfer)

Notes: _____

2. Safety instructions and safety points - Warranty

2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	26
2.4.1 Awareness of the safety instructions and symbols	26
2.4.2 Operator familiarity in the use of the tractor	26
2.4.3 Filling the fuel tank	27
2.4.4 Mounting and dismounting the operator's seat	27
2.4.5 Mandatory procedure before dismounting the tractor	27
2.5 Special instructions	28
2.5.1 Specific recommendations for agricultural and forestry tractors	28
2.6 Special safety instructions for preparing the tractor for use	30
2.6.1 Protective clothing	30
2.6.2 Safety devices and items	30
2.6.3 Checking the tractor	30
2.7 Specific safety instructions for starting the tractor	32
2.7.1 Protection of persons other than the operator	32
2.7.2 Safety start	32
2.7.3 Checks to be carried out after start-up	33
2.8 Specific safety instructions for using the tractor	34
2.8.1 General instructions	34
2.8.2 Protection of persons other than the operator	35
2.8.3 Overturning	35
2.8.4 Tractor towing	38
2.8.5 Regulatory data on maximum permitted trailed weights	38
2.8.6 Road use	39
2.8.7 Parking brake	40
2.8.8 Power take-off	40
2.8.9 Implements	41
2.8.10 Front-end loader	43
2.9 Specific safety instructions for servicing the tractor	45
2.9.1 Pollution warning to observe when servicing the tractor	45
2.9.2 General instructions	45
2.9.3 Handling instructions	46
2.9.4 Special instructions for cleaning the tractor	47
2.10 Protective structures	48
2.10.1 Protective structures: use and accreditation	48
2.10.2 ROPS (Roll Over Protective Structure)	48
2.10.3 Seat belt	48
2.10.4 Instructor seat	48
2.10.5 Level of vibration of the operator's seat	48
2.11 Warranty	49
2.11.1 General	49

2.11.2 Pre-delivery inspection and commissioning on the user's premises	49
2.11.3 Warranty procedure	49
2.11.4 Procedure to follow if changing region	49
2.11.5 Servicing during and after the warranty period	50

2.1 Introduction

2.1.1 Introduction - Safety instructions

Operator's Manual

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

NOTE: *This manual is for all users of Massey Ferguson tractors. The availability of the attachments indicated, on the basic tractor or as accessories, may vary according to the region in which the tractor is used. To find out which attachments are available in a region, contact a Massey Ferguson dealer.*

This manual enables the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

During commissioning of the equipment by the Massey Ferguson dealer on the user's premises, the user must ensure that the operating and servicing instructions are properly understood. If the user has any doubt regarding the operation or servicing of the tractor, the Massey Ferguson dealer should always be contacted. It is essential that these instructions are understood and followed.

This manual covers all operating and safety instructions relevant to the Massey Ferguson tractor. For implements and accessories that may be installed at the time of the tractor's delivery or later, the user must refer to the Operator's Manuals relating to these implements and accessories.

This chapter supplements any safety instructions given in other chapters of this manual. It lists safety-related situations that may be encountered during the normal operating and servicing of the tractor with the purpose of enabling the user to work in complete safety.

Depending on the implements and accessories used, and the working conditions on-site or in the servicing area, additional precautions should be followed. Massey Ferguson cannot exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. Consequently, Massey Ferguson cannot be held responsible if the user fails to take appropriate safety precautions for the implements and accessories used, or for the working conditions on-site or in the servicing area.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must be followed by the user.

Servicing, spare parts, accessories and conditions of use

The user must perform daily servicing on the tractor and keep a logbook of operating hours.

Only genuine Massey Ferguson replacement parts should be used when the need arises. Massey Ferguson dealers supply these genuine parts. Contact your dealer if you require any advice on their installation and use. Massey Ferguson cannot be held responsible if the owner uses parts other than the genuine parts sold by Massey Ferguson dealers. Similarly, only accessories specifically adapted to the tractor should be used.

This tractor is designed for normal farming activities only. Use of the tractor for any other activity, particularly forestry work, is considered to be contrary to normal use of the tractor.

If the tractor is to be used in abnormal conditions that could cause damage to it, such as in deep water or in paddy fields, consult a Massey Ferguson dealer to obtain special instructions.

IMPORTANT: *Massey Ferguson under no circumstances covers damage caused by the failure to observe the conditions of use, servicing and repair for its tractors. There is thus no justification for a warranty claim if the user fails to observe the recommendations for use, servicing and repair in this manual.*

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from the failure to observe the conditions of use, servicing and repair for its tractors.*

Always consult a Massey Ferguson dealer:

- For any advice regarding the conditions of use, servicing and repair for the tractor
- If there is any doubt regarding the safety instructions to be observed when using the tractor
- For any adjustments that may be necessary
- To order genuine spare parts
- In the event of after-sales problems
- If you have any questions relating to the tractor, genuine parts or implements and accessories that can be adapted for the tractor.

2.2 Safety – Symbols and terms

2.2.1 Safety – Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

2.3 Safety decals and instructions

2.3.1 Checking and replacing the safety decals and instructions



WARNING:

Never remove or obscure the safety decals and instructions.

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all safety and instruction decals are correct, legible and in the correct location: To do this, refer to the section on the presentation and location of decals.

2.3.2 Presentation and location of the safety decals and instructions

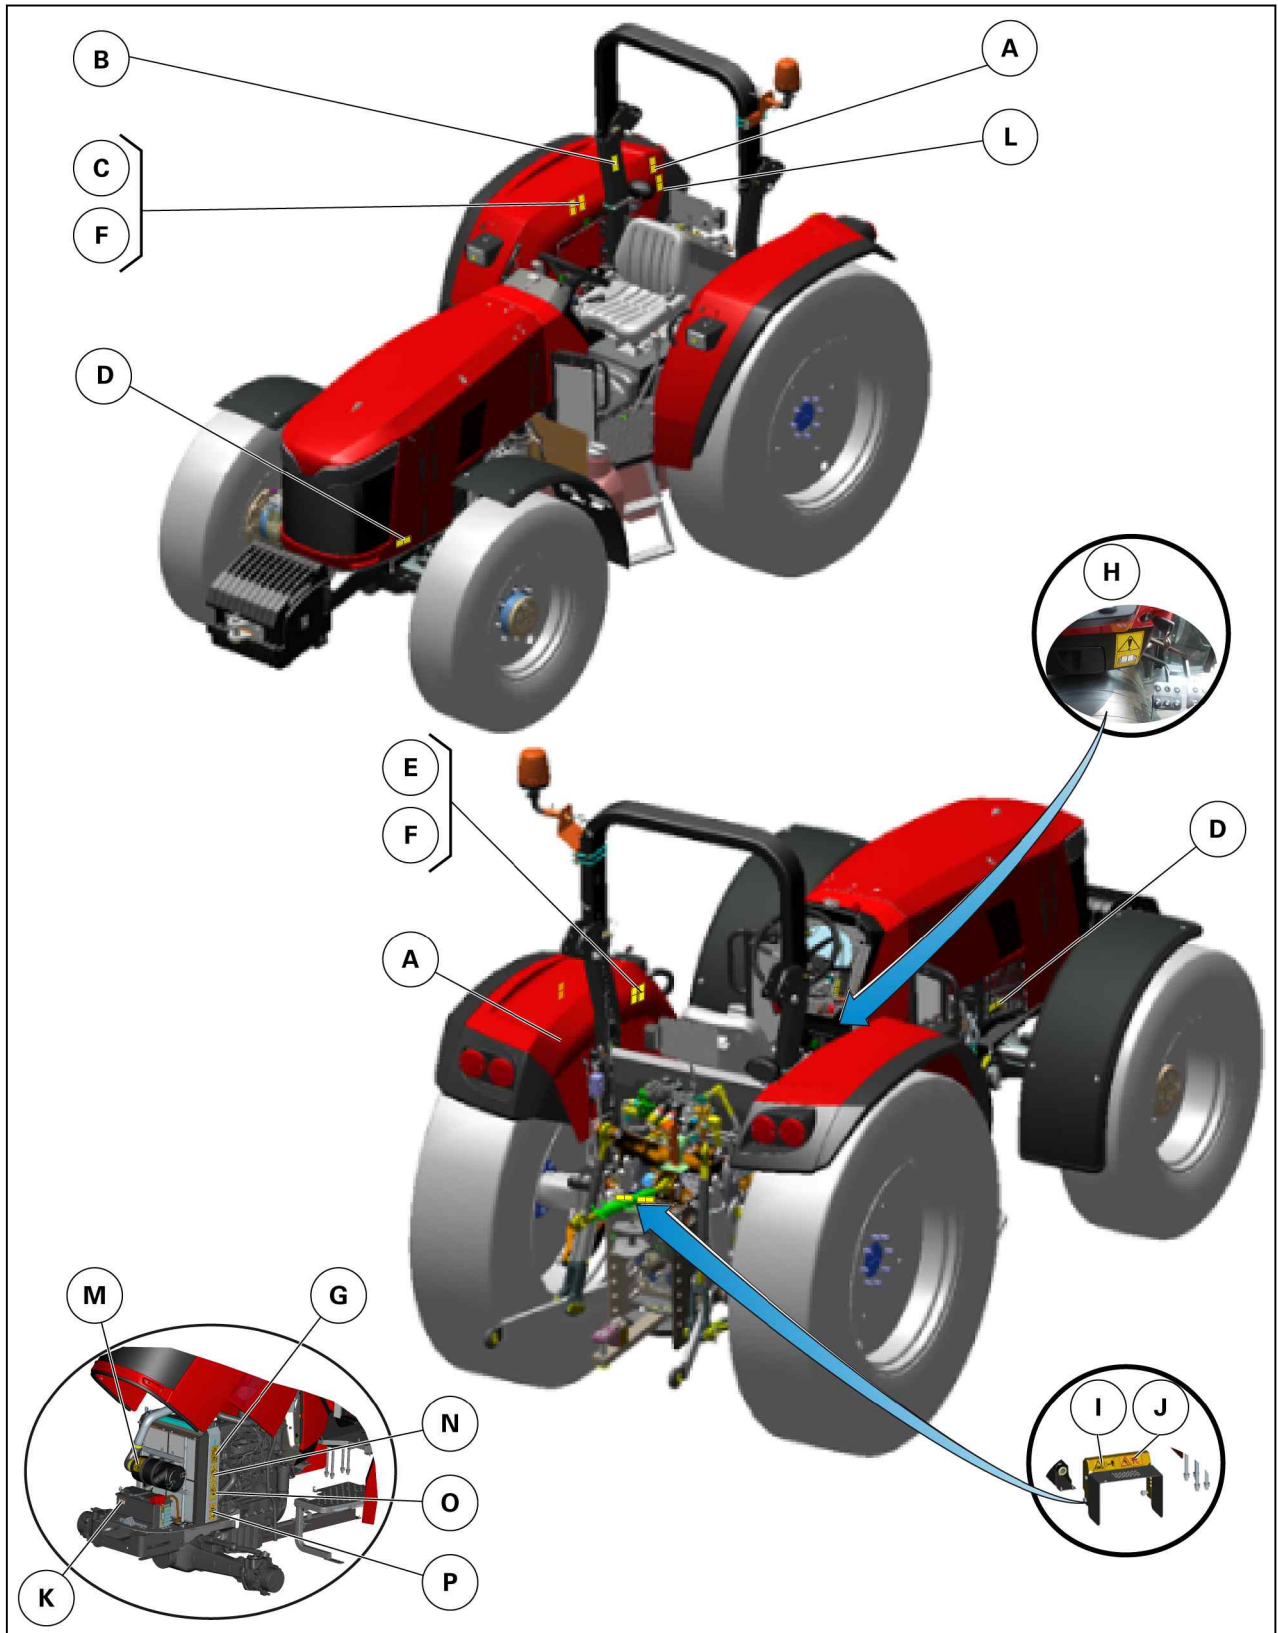 


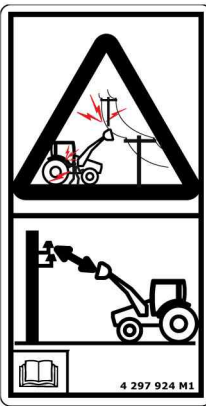 
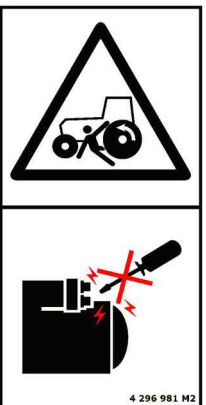 
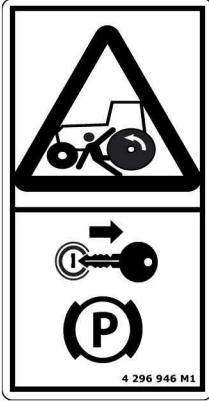 


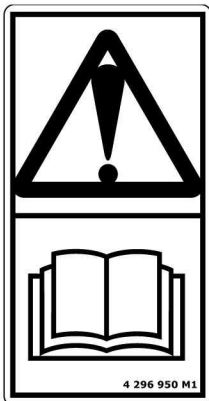 
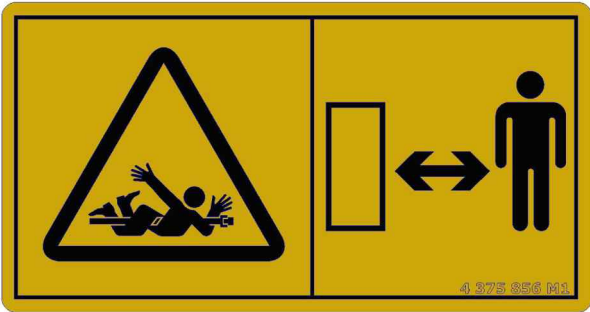 

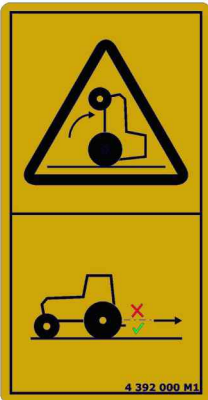 
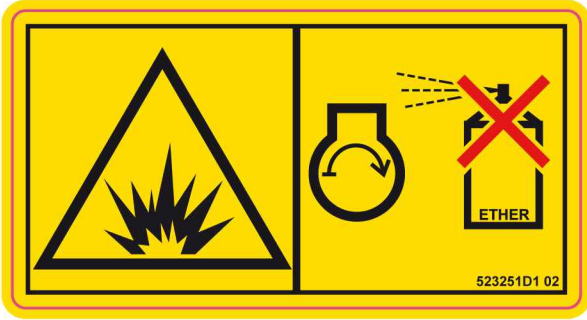 
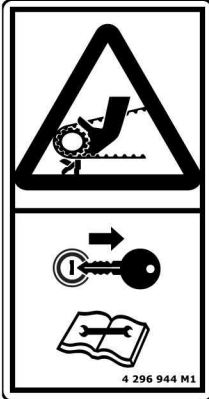 
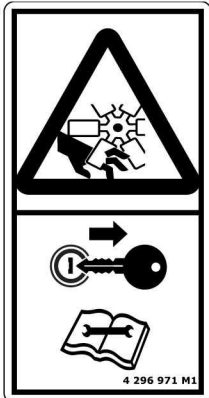 



Fig. 1

	<ul style="list-style-type: none"> • 4392020M1 ((A)) • WARNING: Crushing hazard between tractor and implement. <p>Stand outside of tractor tire when using external controls for 3-point linkage.</p> <p>Do not stand between tractor and implement.</p>
	<ul style="list-style-type: none"> • 4296960M1 ((B)) • WARNING: Falling or crushing hazard if the tractor overturns <p>Keep seat belt fastened snugly when operating, do not jump if tractor starts to tip.</p>
	<ul style="list-style-type: none"> • 4297924M1 ((C)) • DANGER: Electrocution hazard <p>Tractors fitted with a front loader: Exercise extreme caution to avoid coming into contact with power lines.</p>
	<ul style="list-style-type: none"> • 4296981M2 ((D)) • DANGER: Runaway machine and runover hazards <p>Only start the engine when seated in the seat with the PTO disengaged and the transmission in the neutral position.</p> <p>DO NOT short across starter terminals to start engine.</p>

 <p>4 296 946 M1</p>	<ul style="list-style-type: none"> • 4296946M1 ((E)) • WARNING: Runaway machine and runover hazards <p>Switch off the ignition, remove the ignition key and engage the ParkLock before leaving the tractor.</p>
 <p>4 296 962 M1</p>	<ul style="list-style-type: none"> • 4296962M1 ((F)) • DANGER: Falling and crushing hazard. <p>Do not sit on the tractor fenders.</p>
 <p>4 375 885 M1</p>	<ul style="list-style-type: none"> • 4375885M1 ((G)) • WARNING: Risk of burning <p>Keep away from hot engine components when engine has been running. Shut off engine, remove key and wait for system to cool before performing maintenance or repair work.</p>
 <p>4 296 950 M1</p>	<ul style="list-style-type: none"> • 4296950M1 ((H) see Fig. 1) • WARNING: <p>To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.</p>

	<ul style="list-style-type: none"> • 4375856M1 ((I)) • DANGER: Entanglement hazard <p>PTO shaft. Stand clear of rotating shafts. Keep all driveline, tractor and equipment guards in place during operation.</p>
	<ul style="list-style-type: none"> • 4297148M1 ((J)) • WARNING: Falling hazard <p>Do not step on PTO shield.</p>
	<p>((K)) Not used</p>
	<ul style="list-style-type: none"> • 4392000M1 ((L)) • DANGER: Rear overturn hazard, which may result in personal injury or death <p>Pull only from approved drawbar or bottom links of 3-point linkage at horizontal position or below. Never pull from above the rear axle centerline.</p>

	<ul style="list-style-type: none"> • 523551D1 ((M)) • WARNING: Explosion hazard. Never use starter fluid or aerosol sprays.
	<ul style="list-style-type: none"> • 4296944M1 ((N)) • WARNING: Entanglement hazard in belt drives Keep hands clear of rotating parts and belts while engine is running. Switch off the ignition and remove the key before working on the tractor.
	<ul style="list-style-type: none"> • 4296971M1 ((O)) • WARNING: Shearing hazard – engine fan. Keep your hands away from the fan and the belts when the engine is running. Shut off engine and remove key before performing maintenance or repair work.
	<ul style="list-style-type: none"> • 4296967M1 ((P)) • WARNING: Burn hazard – hot surfaces. Keep away from hot engine components when engine has been running. Shut off engine, remove key and wait for system to cool before performing maintenance or repair work.

2.4 General safety instructions

2.4.1 Awareness of the safety instructions and symbols

The operator must observe the safety instructions in order to ensure his/her own safety and the safety of other persons. Before using the tractor, familiarize yourself with:

- The instructions in this manual
- All of the safety decals and instructions on the tractor
- All the usual protective measures that should be taken when working



WARNING:

In some of the illustrations in this manual, the safety panels and guards are removed for reasons of clarity. Never use the tractor if these parts are not in place. If some of these parts have been removed for repair purposes, they must be refitted before use.

2.4.2 Operator familiarity in the use of the tractor



WARNING:

The operator must not drink alcohol or take any medication that leads to a loss of concentration or coordination. If taking medication, whether prescribed or not, always seek medical advice with regard to your ability to operate machinery safely.

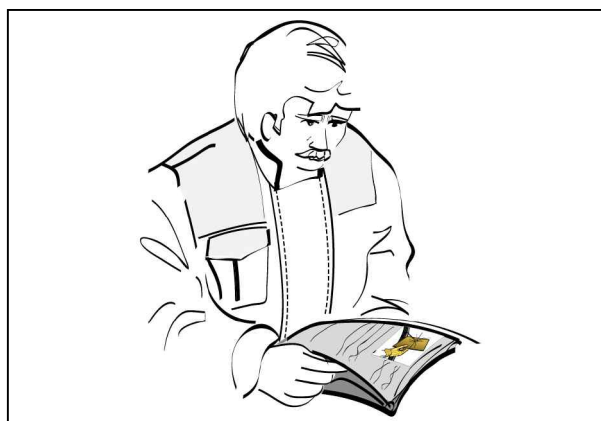 


Fig. 2

- Conditions for use of the tractor:
 - to be familiar with operating an agricultural tractor
 - to be trained in the operation of the tractor
 - to have read and understood this entire manual. Always consult the dealer if there is any doubt or lack of understanding
 - find out about the rules and safety regulations applicable to the work you are doing. Some regulations specify that no one under the age of 16 may operate power machinery, for example. This includes tractors. It is your responsibility to know what these regulations are and to observe them in the operating area or situation. These rules include, but are not limited to, the safety instructions relating to the correct operation of the tractor as described in this manual.
- Do not allow children or unqualified persons to operate the tractor.
- Do not allow children to use the instructor seat.
- The instructor seat is only intended for short periods of use.



WARNING:

In poor conditions, slow down and be extra careful, and engage 4-wheel drive if fitted.

It is important to have good knowledge of the operation of the tractor as well as all of its accessories and attached implements.

Remember that rain, snow, ice, loose gravel or soft ground can change the performance of the tractor.

2.4.3 Filling the fuel tank



WARNING:

- Always switch off the engine before filling up.
- Do not smoke while refueling the tractor. Keep away from naked flames .
- Proceed with care to prevent any splashes.

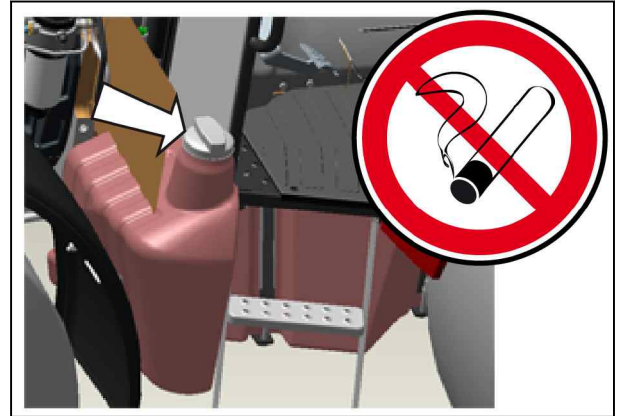 


Fig. 3

2.4.4 Mounting and dismounting the operator's seat

- Always use three-point contact with the tractor and face the tractor when mounting and dismounting the operator's seat. (Three-point contact means that both hands and one foot or one hand and both feet are in contact with the tractor at all times when getting on and off).
- Clean your shoes and wipe your hands before getting in the tractor.
- Use handrails, grab handles, ladders or steps (if fitted) when getting on and off.
- Do not use the control levers as a handhold.
- Do not step on pedals when getting in and out.
- Never attempt to mount or dismount a moving tractor.
- Never jump off a tractor when it is running except in an emergency.

2.4.5 Mandatory procedure before dismounting the tractor

Before getting out of the operator's seat, observe this procedure:

Procedure

1. Immobilize the tractor by applying the parking brake.
2. Disengage the front and rear PTO.
3. Lower the implements to the ground.
4. Stop the engine (see the Operation section, Engine: Stopping the engine). Make sure that the engine is not running at idling speed and that it has stopped.
5. Remove the ignition key.

2.5 Special instructions

2.5.1 Specific recommendations for agricultural and forestry tractors

Hot surfaces

Be careful of surfaces which may be hot, in particular engine and hydraulics components, during operation and services.

FOPS (Falling Object Protection Structure)

- Alternative 1 (no FOPS available): Protection against falling objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional FOPS fitted): Protection against falling objects is provided under OECD-code 10 (Energy level 1365 J). If a higher protection level is necessary, additional safety equipment must be installed on the tractor (no original equipment available).

OPS (Operator Protection Structure)

- Alternative 1 (no OPS available): Protection against penetrating objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional OPS fitted): Protection against penetrating objects is provided under ISO 8084 (Machinery for forestry). Before operating, check if protection is adapted to your work conditions.

Dangerous substances for tractors with ROPS

NOTE:

A mark indicating the ROPS' level of protection against hazardous substances is located on the ROPS.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Tractor without cab: Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. These tractors are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Dangerous substances for tractors with a cab

NOTE:

A mark indicating the cab's level of protection against hazardous substances is located on the front left-hand pillar inside the cab. For platform tractors, this mark is displayed on the arch.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Alternative 1 (less cab or cab under category 1): Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. Tractors equipped with a cab are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

- Alternative 2 (cab under category 2): Protection against hazardous substances (agricultural chemicals etc.) in the form of aerosols and fumes is not provided. Tractors equipped with a cab are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Protection against dust (category 2 of standard EN15695-1:2009) is provided under the following conditions:

- all roof hatch, cab doors and cab windows are closed
 - cab ventilation is running
 - air filter is clean and is serviced under maintenance interval (refer to service guide). When replacing the filter, only a filter certified for at least category 2 cabs is permitted. Activated carbon filters do not improve the cab's level of protection. Always refer to the user instructions provided with the filter.
- Alternative 3 (cab under category 4): The cab is equipped with protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes. For pesticide spraying, tractors equipped with a cab must also have a specially designed filter for category 4 cabs.

This protection (category 4 of standard EN 15695-1:2009) is provided under the following conditions:

- all roof hatch, cab doors and cab windows are closed
- cab ventilation is running
- air filter is clean and is serviced under maintenance interval (refer to service guide).

Given the risk associated with contaminants entering the cab when opening the door to enter or exit the vehicle, this protection is designed to supplement, but not replace, the use of personal protective equipment when working in an environment with aerosols and/or fumes, such as pesticides. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

When replacing the filter, only a filter certified for at least category 4 cabs is permitted.

Always refer to the user instructions provided with the filter. Once spraying operations are complete, return the special filter to its case and replace it with a standard anti-dust filter.

2.6 Special safety instructions for preparing the tractor for use

2.6.1 Protective clothing

Wear all the protective clothing and equipment with which you are provided or which is appropriate for certain working conditions.

For example, you may need:

- A safety helmet
- Safety glasses
- A protective mask
- Ear protection
- A respirator or filter mask
- Inclement weather clothing
- Reflective clothing
- Gloves suitable for the work to be carried out
- Safety footwear



Fig. 4



DANGER:

Do not wear loose clothing, jewelry or other items and tie up long hair which could catch on controls or other parts of the tractor.

2.6.2 Safety devices and items

Ensure that all safety devices and items are in good condition and are installed in accordance with the specifications.



WARNING:

The location of all these safety devices and items must be known and their use mastered. Never take off, remove or disconnect these safety devices and items.

Standard safety devices and items according to country regulations

- ROPS (Roll Over Protective Structure)
- Seat belt
- Power take-off guard
- SMV warning triangle
- Signaling lights
- Safety signs
- Fire extinguisher
- First aid kit



WARNING:

Also make sure you know the emergency numbers.



Fig. 5

Additional devices and items

Depending on the work to be carried out, other safety devices and items may be required; for example, guards or additional lights and signs.

2.6.3 Checking the tractor

Check the tractor and ensure that all systems are in good operational condition before beginning the working day. Pay particular attention to the points mentioned below.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com