

814, 816, 818 and 820 Cutting Platforms

(Serial No. 014557-)



**OPERATOR'S MANUAL
814, 816, 818 and 820
Cutting Platforms
(Serial No. 014557-)
OMZ92510 Issue K6 (ENGLISCH)**

John Deere Werke Zweibrücken

European Version

Printed in U.S.A.



Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and the safety decals on the machine are possibly available in other languages (if so, your John Deere dealer can order these for you).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen.

Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection to ensure the machine gives its best performance.

THIS CUTTING PLATFORM IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE").

Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS CUTTING PLATFORM SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention).

The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times.

Any arbitrary modifications carried out on this CUTTING PLATFORM will relieve the manufacturer of all liability for any resulting damage or injury.

Contents

	Page		Page
Identification View	00-1	Forward or rearward adjustment	25-16
Safety	05-1	Adjusting auger height	25-19
Safety Decals	10-1	Auger flight extension	25-19
Attaching and Detaching		Adjusting auger feeder fingers	25-20
Attaching cutting platform	15-1	Auger anti-wrap guards	25-21
Feeder house shims	15-1	Periodic Service	
Locking the cutting platform	15-2	After the first 50 hours of operation	30-1
Adjusting the locking bolts	15-3	As required	30-1
Cutting platform drive shaft	15-3	At end of harvesting season	30-1
Hydraulic and electrical connections	15-4	Lubricants, Oil and Capacities	
Transport		Gear oil	35-1
Road safety switch	20-1	Grease	35-2
Supports on cutting platform trailer	20-2	Alternative and synthetic lubricants	35-2
Adjusting the supports	20-2	Mixing of lubricants	35-3
Field Adjustments		Lubricant storage	35-3
Cutting platform controls	25-1	Use only genuine John Deere parts	35-3
Securing header lift cylinders	25-1	Lubrication	
Sending unit, reel height resume	25-2	Lubrication symbols	40-1
Sending unit, reel fore-and-aft resume	25-2	Chains	40-1
Sending unit, reel speed	25-2	Cutterbar	40-1
Skid plates	25-3	Daily	40-2
Wear plates	25-3	Other lubricating points	40-3
Spare knife	25-4	Troubleshooting	
Stone deflector	25-5	Cutterbar	45-1
Reel fore-and-aft adjustment	25-6	Down and tangled crops	45-2
Reel tine adjustment	25-6	Feeder house	45-2
Crop dividers — general	25-7	Auger	45-3
Installing crop divider	25-8	Poor cutting action	45-3
Adjusting crop divider	25-8	Reel	45-4
Inner deflector	25-9	Service	
Outer deflector, long crop divider	25-10	Securing header lift cylinder	50-1
Using lifting guards	25-11	Replacing knife	50-2
Knife guard	25-12	Replacing knife head retainer	50-3
Adjusting reel height	25-13	Replacing individual knife sections	50-3
Cutterbar/skid plate tilt adjustment	25-13	Changing reel speed	50-4
Cutterbar positions	25-16		

Continued on next page

All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

OMZ92510 K6-19-01NOV96

COPYRIGHT© 1996
DEERE & COMPANY
European Office Mannheim
All rights reserved
A John Deere ILLUSTRATION® Manual

Page

Feeder fingers and safety strap	50-5
Auger slip clutch	50-6
Adjusting knife drive belt	50-6
Adjusting variable reel drive	50-7
Adjusting reel drive belt	50-7
Bleeding reel lift cylinders	50-8

Storage

End of season service	55-1
Beginning of season service	55-2

Fundamentals of Combine Harvesting

Choice of harvesting time	60-1
Cutting platform operation	60-1
Reel speed	60-1
Reel position in standing crops	60-2
Reel position in down/tangled crops	60-2
Feeding of crop	60-3


Specifications	65-1
---------------------------------	------

Serial Number

Serial number plate	70-1
-------------------------------	------

Index

Identification View

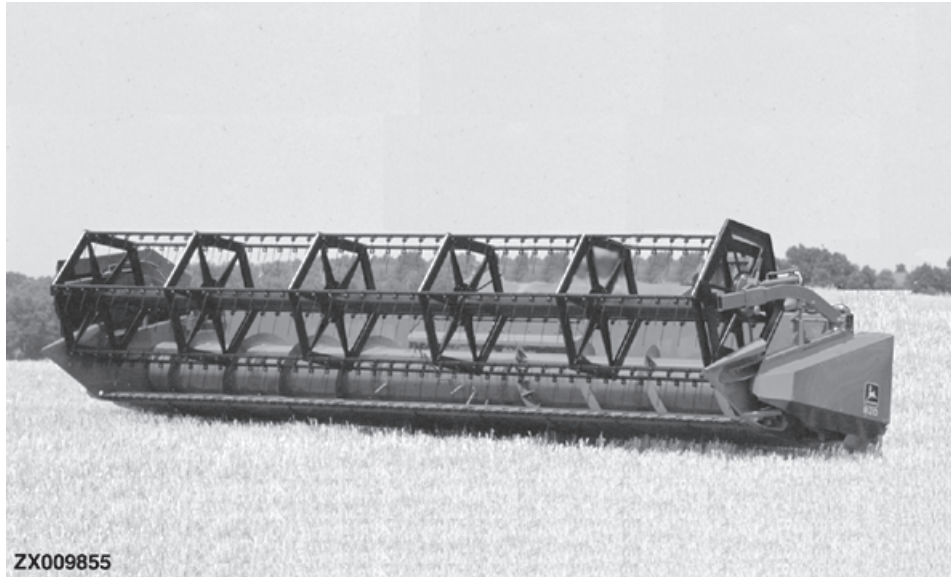

ZX,OMCUP006984-19-01OCT96

Safety

RECOGNIZE SAFETY INFORMATION

This is the safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.



DX,ALERT

-19-03MAR93

T81389 -UN-07DEC88

FOLLOW SAFETY INSTRUCTIONS

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.



TS201 -UN-23AUG88

DX,READ

-19-03MAR93

UNDERSTAND SIGNAL WORDS

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL

-19-03MAR93

TS187 -19-30SEP88



OBSERVE ROAD TRAFFIC REGULATIONS

Always observe local road traffic regulations when using public roads.



H28930 -UN-30JUN89


FX,ROAD -19-01MAY91

USE SAFETY LIGHTS AND DEVICES

Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

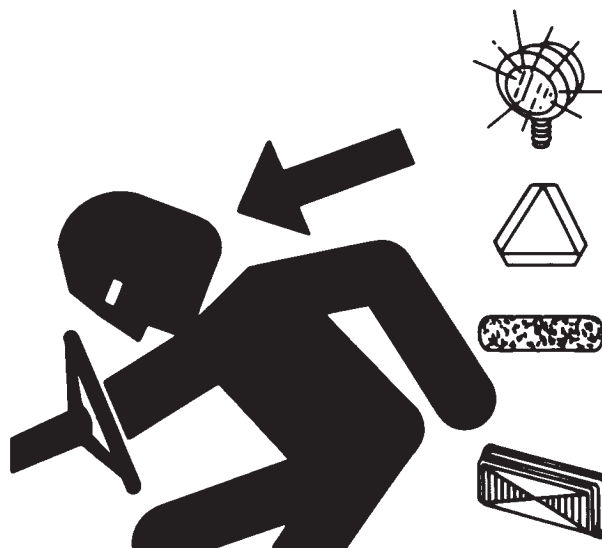

TS951 -UN-12APR90

ZX,FLASH -19-01OCT91




PREPARE FOR EMERGENCIES

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

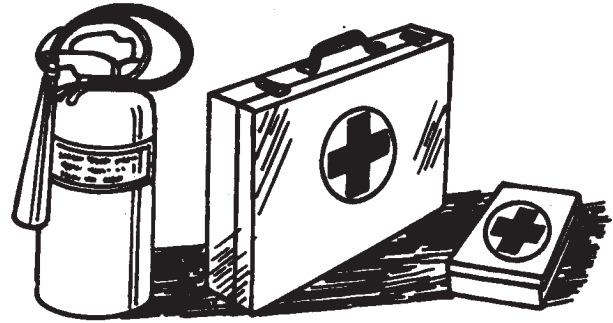

DX,FIRE2 -19-03MAR93

TS291 -UN-23AUG88


WEAR PROTECTIVE CLOTHING

Wear close fitting clothing and safety equipment appropriate to the job.

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

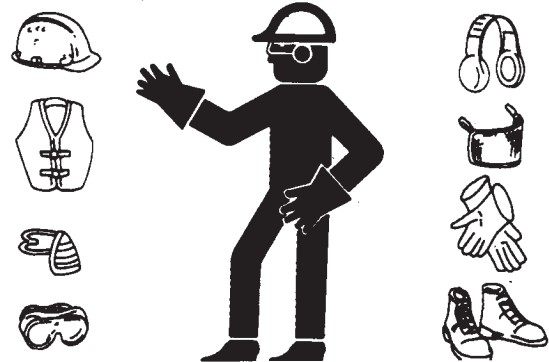

DX,WEAR -19-10SEP90

TS206 -UN-23AUG88

STORE ATTACHMENTS SAFELY

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.



DX,STORE -19-03MAR93

TS219 -UN-23AUG88




ROAD SAFETY SWITCH

IMPORTANT: Before driving combine on public roads, make sure that road safety switch is in road position. Also move harvesting unit and unloading auger to transport position.

This ensures that all hydraulic functions — with exception of the steering system — are not working.

ZX 002418

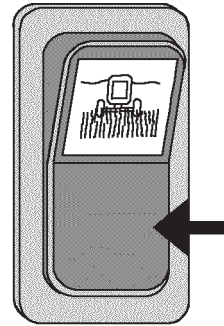

ZX, SWITCHXZCO -19-01MAR95

ZX002418 -UN-16JUN95

DRIVING THE COMBINE

Operate machine only when all guards are correctly installed.

Before moving away, always check immediate vicinity of machine (e.g. for children). Ensure adequate visibility. Use the horn as a warning immediately before moving away.

Always adapt ground speed to road or field conditions. Avoid making sharp turns when driving up or down slopes or when driving across a slope. Be especially careful when turning on slopes with full grain tank.


Attach harvesting units and other implements to combine with extreme care.

When making turns, always take into consideration the width of the attachment and the fact that the rear end of the combine swings out. Attachments and ground conditions affect the driving characteristics of the combine.

Reduce ground speed when driving on slopes or over uneven ground and before making sharp turns. Before descending a steep hill, shift to a lower gear.

Avoid holes, ditches and obstructions which may cause the combine to tip, particularly on hillsides.

ZX002461

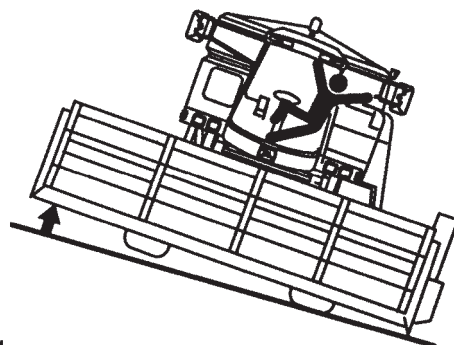

ZX, DRIVEXZCO -19-27JAN92

ZX002461 -UN-16JUN95




GUARDS AND SHIELDS

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

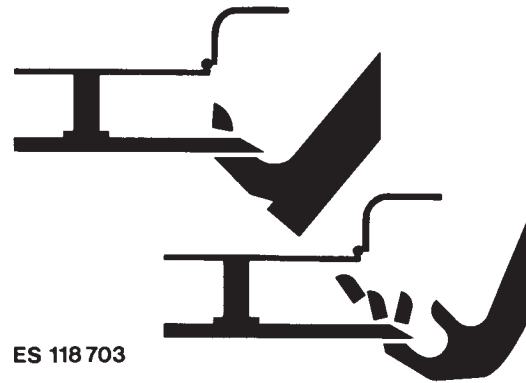

FX,DEVICE -19-04DEC90

ES118703 -UN-21MAR95

STAY CLEAR OF HARVESTING UNITS

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.



FX,CUT -19-21DEC90

ES118704 -UN-21MAR95

KEEP HANDS AWAY FROM KNIVES

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the machine before starting the engine.



FX,KNIFE1 -19-15FEB93

TS254 -UN-23AUG88

STAY CLEAR OF ROTATING DRIVELINES

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.



DX,PTO -19-12SEP95

TS1644 -UN-22AUG95

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**