



# 722X, 725X, 730X, 735X, and 740X Cutting Platforms

(Serial No. 065000 - )



**JOHN DEERE**



## OPERATOR'S MANUAL

**722X, 725X, 730X, 735X, and 740X  
Cutting Platforms (From S.N. 065000)**

**OMDXE11042 ISSUE E1 (ENGLISH)**

CALIFORNIA  
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

**⚠ WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.  
Additional Proposition 65 Warnings can be found in this manual.


**John Deere GmbH & Co. KG**  
**John Deere Werke Zweibrücken**  
Worldwide Edition  
PRINTED IN U.S.A.



# Introduction

---

## Foreword

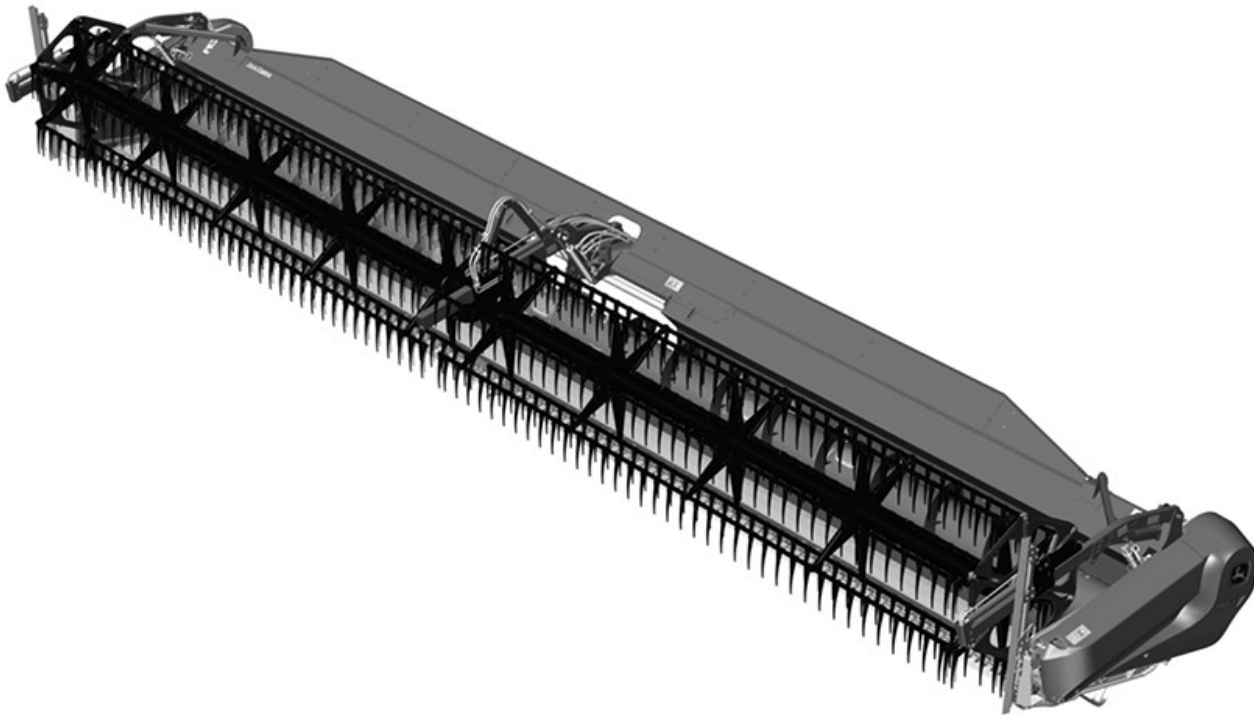

### ZX372776

**INTENDED USE:** This cutting platform is designed solely for use in customary agriculture or similar operations. Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service, and repair as specified by the manufacturer also constitute essential elements for the intended use.

**READ THIS MANUAL** carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and the safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

**THIS MANUAL SHOULD BE CONSIDERED** a permanent part of your machine and should remain with the machine when you sell it.

**MEASUREMENTS IN THIS MANUAL** are given in metric. The U.S. equivalents are still quoted, however. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

**RIGHT-HAND AND LEFT-HAND** sides are determined by facing in the direction of forward travel.

**WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.**

ZX372776—UN—15APR19

**N.)** in the Specification or Identification Numbers section. Note all numbers exactly. In the event of theft, these numbers may prove vital in tracing your property. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

**BEFORE DELIVERING THIS MACHINE,** your dealer performed a predelivery inspection. After operating for the first 20 to 50 hours, schedule an after-sale inspection with your dealer to ensure best performance.

**THIS CUTTING PLATFORM SHOULD BE OPERATED,** serviced, and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine, and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this combine will relieve the manufacturer of all liability for any resulting damage or injury.

OUC002.0006025-19-02APR19

## Trademarks

List of trademarks used throughout this Operator's Manual.

Trademarks	
Deere™	Trademark of Deere & Company
Dial-A-Speed™	Trademark of Deere & Company
HillMaster™	Trademark of Deere & Company
Quik-Tatch™	Trademark of Deere & Company
TORX®	Trademark of Camcar/Textron


OUCC002,0005309-19-28MAR19

## A Message to Our Customers

We appreciate the confidence placed in us by the purchase of this machine. To ensure that the machine performs at the highest level, countless hours were spent designing and testing, before this machine was produced. To achieve the maximum performance, it is imperative that this machine is operated in accordance with the procedures outlined in this manual.


Information in this manual is divided into sections. The section names are identified in the table of contents and at the top of each page. Each section has a unique number and page count. Specific information within each section is organized into topics identified with bold headings.

The topic headings are listed in the table of contents with the section number and page number where the topic begins. Topics and information related to each topic are also referenced in the index along with the section and page number.

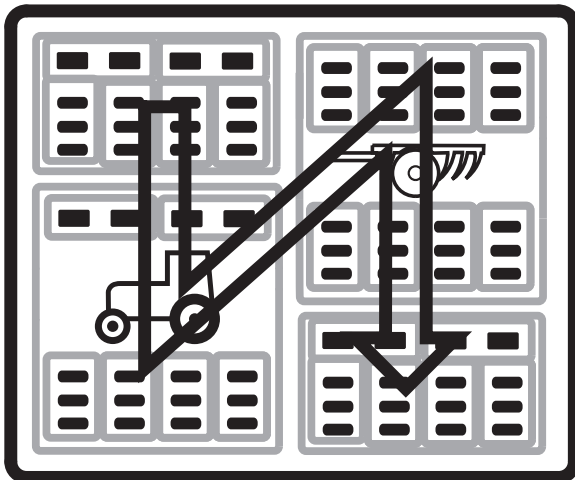

A100767—UN—07JUN18

 The topic content flows down the left-hand side, then over and down the right-hand side, and repeats on the next page. Images precede the related text in the flow.

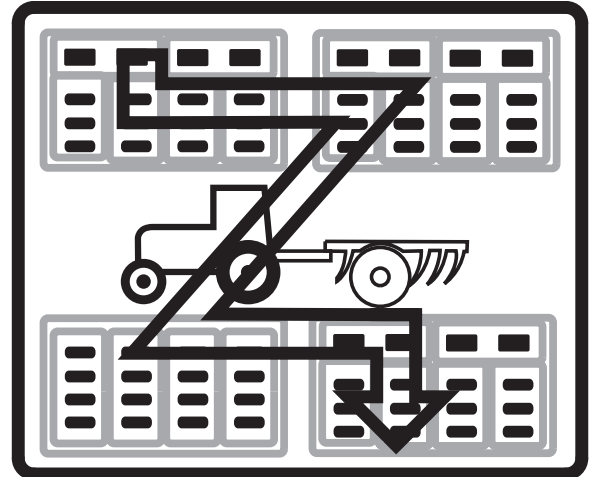

A100768—UN—07JUN18

The flow can divide both before and after the images and tables that span the width of a page.

Review this manual often to learn where to look for information.

Thanks again for purchasing this machine.

OUCC002,0005D27-19-03JUL18

## John Deere Technical Information Bookstore

Product functionality may not be fully represented in this document due to product changes occurring after time of printing. Read the latest Operator's Manual prior to operation. To obtain a copy, see your dealer or visit [techpubs.deere.com](http://techpubs.deere.com).

CZ76372,000071F-19-08OCT19

# Contents

	Page		Page
<b>Safety</b>			
Recognize Safety Information .....	01-1	Crop Lifters (Option) .....	02-24
Follow Safety Instructions .....	01-1	Knife Protection Guard (If Equipped) .....	02-26
Observe Road Traffic Regulations .....	01-1	Troubleshooting .....	02-26
Use Safety Lights and Devices .....	01-1	Safety Lock for Feeder House Lift Cylinder (X9 Series Combines Only) .....	02-29
Prepare for Emergencies .....	01-2	Safety Stop for Feeder House Lift Cylinder (W-T and S Series Combines Only) .....	02-29
Wear Protective Clothing .....	01-2	Set Safety Stop for Reel Lift Cylinder .....	02-30
Store Attachments Safely .....	01-2	Clean Cutterbar Table .....	02-30
Guards and Shields .....	01-2	Adjust Cutterbar Position .....	02-31
Stay Clear of Harvesting Units .....	01-3	Adjust Reel Tine Pitch .....	02-33
Keep Hands Away From Knives .....	01-3	Adjust Reel Support Position .....	02-34
Stay Clear of Rotating Drivelines .....	01-3	Adjust Auger Height .....	02-34
Stay Clear of Cutterbar When Rotating Auger .....	01-3	Adjust Auger Fore/Aft .....	02-36
Ballasting for Safe Ground Contact .....	01-4	Adjust Auger Finger Timing .....	02-39
Practice Safe Maintenance .....	01-4	Adjust Rear Stripper .....	02-40
Service Machines Safely .....	01-4	Adjust Floor Stripper .....	02-40
Service Drive Belts Safely .....	01-5	<b>Lubrication and Maintenance</b>	
Support Machine Properly .....	01-5	Required Emission-Related Information .....	03-1
Protect Against Noise .....	01-5	Safety Lock for Feeder House Lift Cylinder (X9 Series Combines Only) .....	03-1
Avoid Heating Near Pressurized Fluid Lines .....	01-5	Safety Stop for Feeder House Lift Cylinder (W, T, and S Series Combines Only) .....	03-1
Avoid High-Pressure Fluids .....	01-6	Set Safety Stop for Reel Lift Cylinder .....	03-2
Decommissioning — Proper Recycling and Disposal of Fluids and Components .....	01-6	Side Shields .....	03-2
Road Transport Disconnect Switch .....	01-6	Tool Box (Option) .....	03-3
Replace Safety Signs .....	01-7	Gear Oil .....	03-4
Safety Signs .....	01-7	Grease .....	03-4
<b>Field Operation</b>			
Cutting Platform-to-Combine Adaptation .....	02-1	Alternative and Synthetic Lubricants .....	03-4
Rework the W-T or S Series Combine (If Necessary) .....	02-3	Mixing of Lubricants .....	03-5
Attach Cutting Platform .....	02-5	Lubricant Storage .....	03-5
Adjust Cutting Platform Tilt Angle .....	02-8	Maintenance Interval Chart .....	03-5
Header Height Control Feeler Sensors .....	02-8	Lubrication Chart .....	03-6
Detach Cutting Platform .....	02-9	Main Drive Gear Case .....	03-7
Transport Cutting Platform on a Trailer .....	02-11	Knife Drive Gear Case .....	03-7
Cutting Platform Emergency Mode .....	02-12	Auger Drive Slip Clutch .....	03-7
Calibrate Cutting Platform .....	02-12	Cutterbar Table Sheet and Sealing Bridge .....	03-8
Cutterbar and Reel Safety Feature .....	02-13	Header Height Control Sensors—Once a Year .....	03-8
Cutterbar and Reel Safety Feature—Self Test .....	02-13	Check Reel Zero Setting .....	03-9
Engage Cutting Platform Drive .....	02-14	Hydraulic Valve Blocks .....	03-11
Operate the Cutting Platform—General .....	02-14	Rephase Reel Fore/Aft Cylinders .....	03-12
Operate the Cutting Platform—Crop Condition Adaptation .....	02-16	Rephase Reel Lift Cylinders .....	03-12
Composite Reel Tines (Option) .....	02-18	Adjust Reel Speed Sensor .....	03-12
Knife Speed Increase Kit .....	02-18	Adjust Knife Drive Belt Tension .....	03-13
Fine Knife (Option) .....	02-18	Replace Feeler Sensor Skid Plate .....	03-13
Crop Dividers (Option) .....	02-19	Replace Knife Drive Belts .....	03-14
Long Outer Deflector Kit .....	02-21	Replace Cutterbar Knife .....	03-16
Rapeseed Knife (Option) .....	02-22	Replace Cutterbar Wear Plates .....	03-18
Rapeseed Knife Lower Protection (Option) .....	02-24	Set Knife Timing (735X and 740X Only) .....	03-19
		Align Knife Head and Knife Drive .....	03-21
		Replace Knife Sections .....	03-24

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

	Page
Adjust Auger Drive Chain Tension .....	03-26
Replace Auger Fingers and Retainers .....	03-27
Replace Stubble Light Bulb (Non-Light Emitting Diode (LED) Lights—If Equipped) ....	03-28
Replace Stubble Light (Light Emitting Diode (LED) Lights—If Equipped) .....	03-28
End of Season .....	03-28
Beginning of Season Service .....	03-29

**Specifications**

722X—740X Cutting Platforms .....	04-1
Type Plates .....	04-1
Cutting Platform (Product Identification) Type Plate .....	04-1
Product Identification Number .....	04-2
Machine Component Serial Numbers .....	04-2
Metric Bolt and Screw Torque Values .....	04-3
Unified Inch Bolt and Screw Torque Values .....	04-4
Keep Machines Secure .....	04-5
Keep Proof of Ownership .....	04-5
UKCA Declaration of Conformity (United Kingdom Only) .....	04-6
EU Declaration of Conformity .....	04-7
Eurasian Economic Union .....	04-8
Machine Design Life .....	04-8

**John Deere Service Literature Available**

Technical Information .....	JDsla-1
-----------------------------	---------

# Safety

## Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

## Observe Road Traffic Regulations



H28930—UN—30JUN89

Always observe local road traffic regulations when using public roads.

FX,ROAD-19-01MAY91

## Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

## Use Safety Lights and Devices

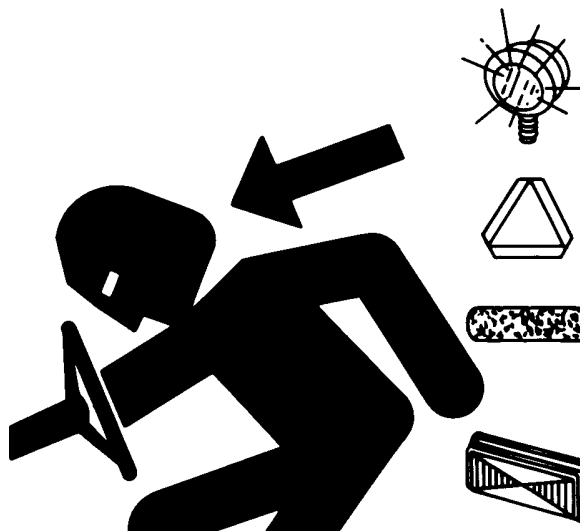

TS951—UN—12APR90


Slow moving tractors, self-propelled equipment and towed implements or attachments can create a hazard when driving on public roads. They are difficult to see, especially at night. Avoid personal injury or death resulting from collision with a vehicle.

If legally permitted, use flashing warning lights or rotary beacons whenever driving on public roads. To increase visibility, use the lights and devices provided with your machine. For some equipment, install additional flashing warning lights.

Keep safety items in good condition. Replace missing or damaged items. An implement safety lighting kit is available from your John Deere dealer.

ZX,FLASH-19-01OCT91

## Prepare for Emergencies

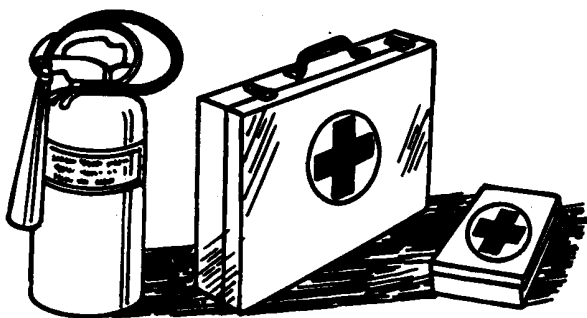

TS291—UN—15APR13

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

## Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

## Wear Protective Clothing

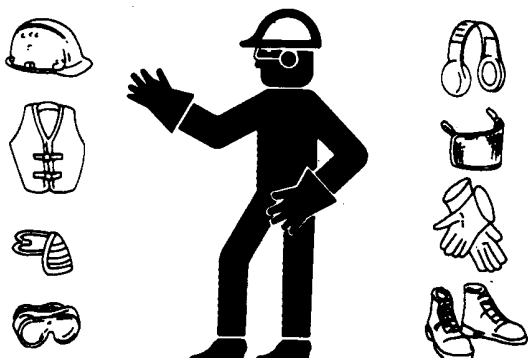

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.


Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR-19-10SEP90

## Guards and Shields

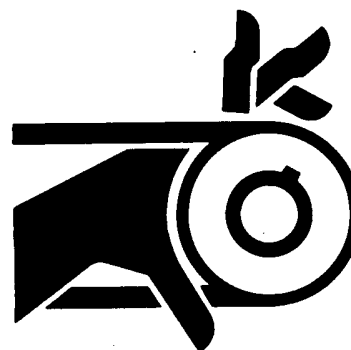

TS285—UN—23AUG88

Keep guards and shields in place at all times. Ensure that they are serviceable and installed correctly.

Always disengage main clutch, shut off engine and remove key before removing any guards or shields.

Keep hands, feet and clothing away from moving parts.

JK22594,00000E5-19-15AUG06

### Stay Clear of Harvesting Units



ES118704—UN—21MAR95

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine and remove key before servicing or unclogging machine.

FX,CUT-19-21DEC90

### Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

Entanglement in backshaft rotating driveline can cause serious injury or death.

Keep driveline shields in place at all times.

Wear close-fitting clothing. Stop the combine engine and be sure driveline is stopped before making adjustments, connections, or cleaning out header or its drive components.

OUC6035.000146A-19-30JUL01

### Keep Hands Away From Knives



TS254—UN—23AUG88

Never attempt to clear obstructions in front of or on harvesting unit unless main clutch is disengaged, engine shut off and key removed.

Everyone must be clear of the machine before starting the engine.

FX,KNIFE1-19-15FEB93

### Stay Clear of Cutterbar When Rotating Auger




TS268—UN—23AUG88

The cutterbar knife and cross auger use a common belt drive. Whenever the auger is rotated by hand the cutterbar will move. Use extreme caution to keep hands, feet and clothing clear of the cutterbar and its knives when attempting to rotate cross auger for service, adjustment, inspection or unplugging.

OUC6035.000146B-19-30JUL01



## Ballasting for Safe Ground Contact

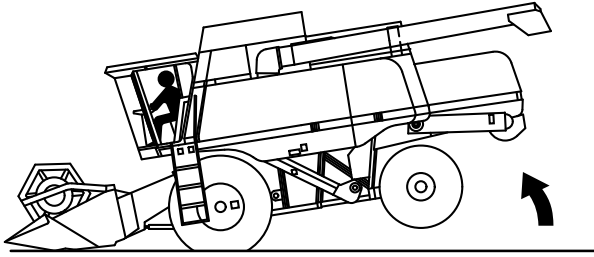

H68497—UN—04JUN01

Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine. To maintain the necessary ground contact, ballast the combine at the rear end as necessary. Observe the maximum permissible axle loads and total weights.

OOU6035,000142E-19-01JUN01

power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

## Practice Safe Maintenance




TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from

## Service Machines Safely

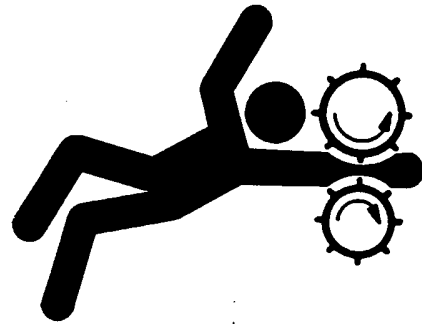


TS228—UN—23AUG88

Tie long hair behind your head. Do not wear a necktie, scarf, loose clothing, or necklace when you work near machine tools or moving parts. If these items were to get caught, severe injury could result.

Remove rings and other jewelry to prevent electrical shorts and entanglement in moving parts.

DX,LOOSE-19-04JUN90

## Service Drive Belts Safely

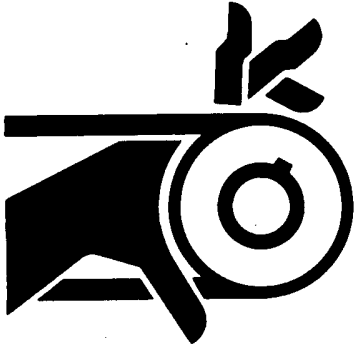


TS285—UN—23AUG88

When servicing drive belts, always observe these precautions:

- Avoid serious injury from hand or arm entanglement. Never attempt to clean, check or adjust belts while the machine is running. Always shut off engine, set park brake and remove key.
- Do not attempt to clean belts with flammable cleaning solvents.

CP00596,000136D-19-17APR18

## Protect Against Noise

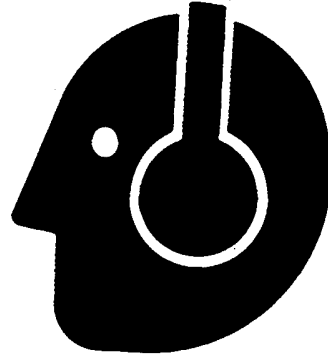

TS207—UN—23AUG88


There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

**Always wear hearing protection.** Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX.NOISE-19-03OCT17

## Support Machine Properly

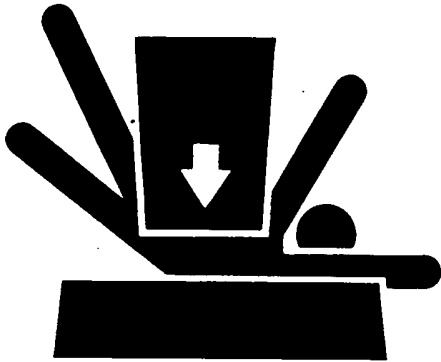

TS229—UN—23AUG88

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

## Avoid Heating Near Pressurized Fluid Lines



TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)