



Bobcat®

Operation & Maintenance Manual



E45

Compact Excavator

S/N AG3G14000 & Above



6990446enUS (07-18) (F)

Printed in U.S.A.



© 2018 Bobcat Company.
All rights reserved.
NA IT4-K


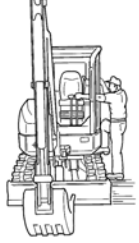
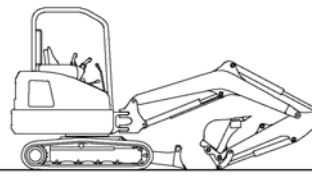
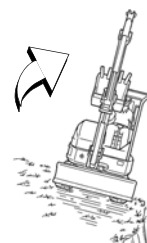




















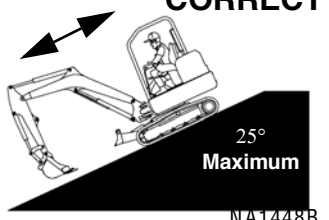
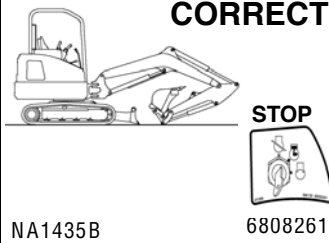




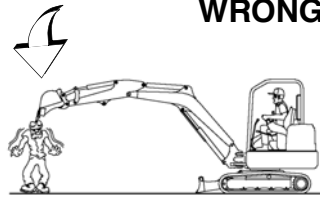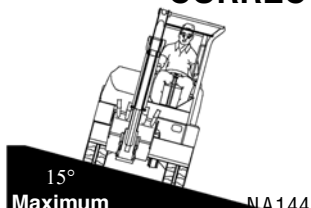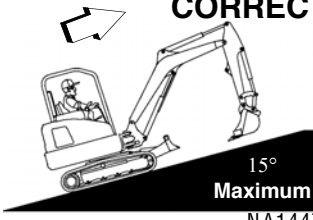



OPERATOR SAFETY WARNING

WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

 **Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

<p>CORRECT</p>  <p>P-90216</p>	<p>WRONG</p>  <p>NA1418</p>	<p>CORRECT</p>  <p>NA1435B</p>	<p>WRONG</p>  <p>NA1419</p>
<p> Never operate without instructions.</p> <p> Read machine signs, and Operation & Maintenance Manual, and Operator's Handbook.</p>	<p> Do not grasp control handles when entering cab / canopy.</p> <p> Be sure controls are in neutral before starting.</p> <p> Sound horn and check behind machine before starting.</p>	<p> Never operate without approved cab / canopy.</p> <p> Never modify equipment.</p> <p> Never use attachments not approved by Bobcat Company.</p>	<p> Avoid steep areas or banks that could break away.</p>
<p>WRONG</p>  <p>NA1439A</p>	<p>WRONG</p>  <p>NA1445A</p>	<p>CORRECT</p>  <p>15° Maximum NA1449B</p>	<p>CORRECT</p>  <p>15° Maximum NA1447B</p>
<p> Use caution to avoid tipping - do not swing heavy load over side of track.</p> <p> Operate on flat, level ground.</p>	<p> Keep bystanders out of maximum reach area.</p> <p> Do not travel or turn with bucket extended.</p> <p> Never carry riders.</p>	<p> Never exceed a 15° slope to the side.</p>	<p> Never travel up a slope that exceeds 15°.</p>
<p>CORRECT</p>  <p>25° Maximum NA1448B</p>	<p>CORRECT</p>  <p>NA1435B 6808261</p>	<p>CORRECT</p>  <p>B-21928</p>	<p>CORRECT</p>  <p>NA1421A</p>
<p> Never exceed 25° when going down or backing up a slope.</p>	<p> To leave excavator, lower the work equipment and the blade to the ground.</p> <p> Stop the engine.</p>	<p> Fasten seat belt securely.</p> <p> Operate controls only from operator's seat.</p>	<p> Look in the direction of rotation and make sure no bystanders are in the work area.</p>

SAFETY EQUIPMENT

The Bobcat® excavator must be equipped with safety items necessary for each job. Ask your Bobcat dealer for information on the availability and safe use of attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. OPERATOR CAB / CANOPY (ROPS and TOPS): Check condition and mounting hardware.
3. OPERATOR'S HANDBOOK: Must be in the cab / canopy.
4. LEFT HAND CONSOLE: When raised must deactivate the travel and hydraulic functions.
5. SAFETY SIGNS (DECALS): Replace if damaged.
6. GRAB HANDLES: Replace if damaged.
7. INTEGRATED SLEW LOCK BRAKE.
8. SAFETY TREAD.: Replace if damaged.

OSW66-0117

CONTENTS

CONTENTS	3
FOREWORD	4
SAFETY AND TRAINING RESOURCES	10
OPERATING INSTRUCTIONS	19
PREVENTIVE MAINTENANCE	133
SYSTEM SETUP AND ANALYSIS	184
MACHINE SIGN TRANSLATIONS	200
SPECIFICATIONS	235
WARRANTY	246
ALPHABETICAL INDEX	249

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat excavator in the spaces below. Always use these numbers when referring to your Bobcat excavator.

Excavator Serial Number _____
Engine Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Bobcat EMEA s.r.o.
U Kodetky 1810
263 12 Dobris
CZECH REPUBLIC

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat excavator. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT EXCAVATOR. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your excavator.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	5
REGULAR MAINTENANCE ITEMS	5
SERIAL NUMBER LOCATIONS	6
Excavator Serial Number	6
Engine Serial Number	6
DELIVERY REPORT	6
EXCAVATOR IDENTIFICATION	7
FEATURES, ACCESSORIES AND ATTACHMENTS	8
Standard Items	8
Options And Accessories	8
Attachments	8
Buckets Available	8
Falling-Object Guards (FOGS)	9
Special Applications Kit	9
Special Applications Kit Inspection And Maintenance	9

BOBCAT COMPANY IS ISO 9001 CERTIFIED



ISO 9001 is an international standard that specifies requirements for a quality management system that controls the processes and procedures which we use to design, develop, manufacture, and distribute Bobcat products.


 







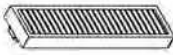

British Standards Institute (**BSI**) is the Certified Registrar Bobcat Company chose to assess the company's compliance with the ISO 9001 at Bobcat's manufacturing facilities in Gwinner, North Dakota (U.S.A.), Pontchâteau (France), and the Bobcat corporate offices (Gwinner, Bismarck, and West Fargo) in North Dakota. **TÜV Rheinland** is the Certified Registrar Bobcat Company chose to assess the company's compliance with the ISO 9001 at Bobcat's manufacturing facility in Dobris (Czech Republic). Only certified assessors, like BSI and TÜV Rheinland, can grant registrations.

ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

REGULAR MAINTENANCE ITEMS

	ENGINE OIL FILTER (6 Pack) 6675517		BATTERY 6670251
	FUEL FILTER 6667352		HYDRAULIC FILL / BREATHER CAP 6692836
	AIR FILTER, Outer 6666375		FLUID, Hydraulic / Hydrostatic 6903117 - (2.5 U.S. gal) 6903118 - (5 U.S. gal) 6903119 - (55 U.S. gal)
	AIR FILTER, Inner 6666376		
	PRIMARY HYDRAULIC FILTER 6668819 CASE DRAIN HYDRAULIC FILTER 6516722		ANTI-FREEZE, Propylene Glycol 6983128 - Premixed 6983129 - Concentrate
	HVAC AIR FILTER (IF EQUIPPED) Fresh Air 7176099 Recirculation 7222791		RADIATOR CAP 6646678
ENGINE OIL 6903105 SAE 15W40 CE/SG (12 qt) 6903107 SAE 10W30 CE/SG (12 qt) 6903109 SAE 30W CE/SG (12 qt) 6903113 SAE 15W40 CE/SG (2.5 U.S. gal) 6903112 SAE 10W30 CE/SG (2.5 U.S. gal) 6903111 SAE 30W CE/SG (2.5 U.S. gal)		GEAR LUBE 6903121 - HD 80W90 (12 qt)	
		ENGINE OIL 6903106 SAE 15W40 CE/SG (1 U.S. gal) 6903108 SAE 10W30 CE/SG (1 U.S. gal) 6903110 SAE 30W CE/SG (1 U.S. gal)	


NOTE: Always verify Part Numbers with your Bobcat dealer.

SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Excavator Serial Number


Figure 1

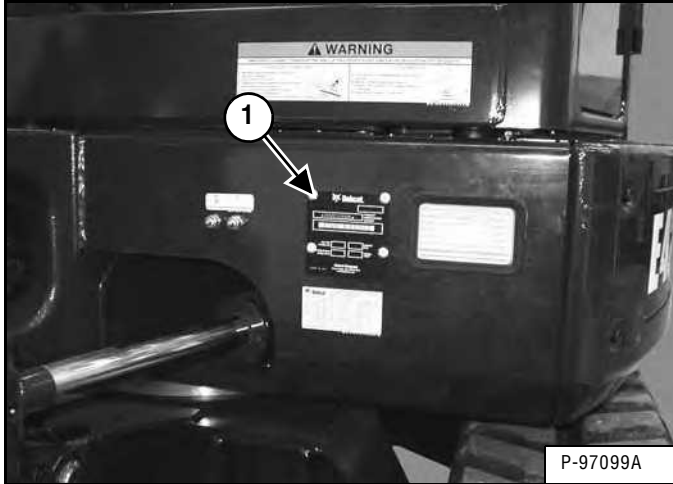

The excavator serial number plate (Item 1) [Figure 1] is located on the frame of the machine in the location shown.

Engine Serial Number


Figure 2

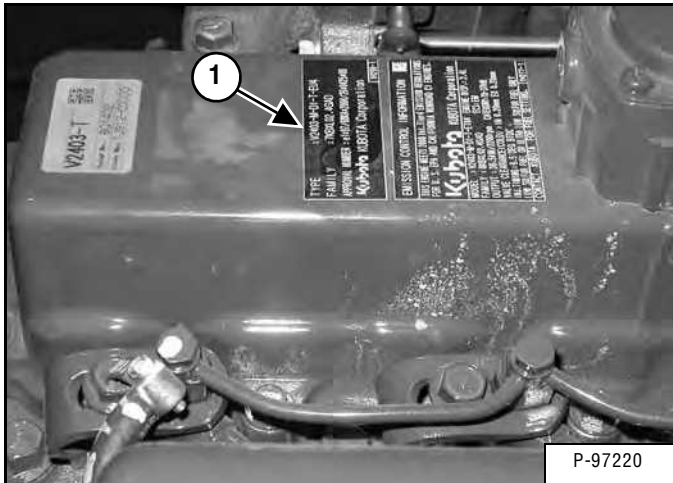

The engine serial number (Item 1) [Figure 2] is located on the top cover.

DELIVERY REPORT


Figure 3

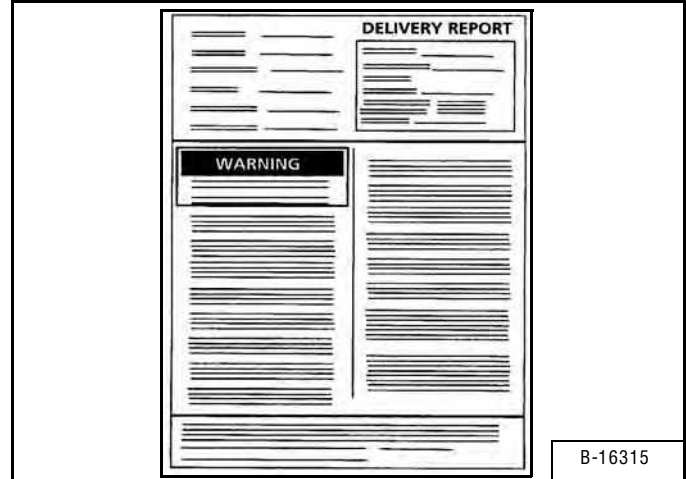

The delivery report [Figure 3] contains a list of items that must be explained or shown to the owner or operator by the dealer when the Bobcat excavator is delivered.

The delivery report must be reviewed and signed by the owner or operator and the dealer.

EXCAVATOR IDENTIFICATION

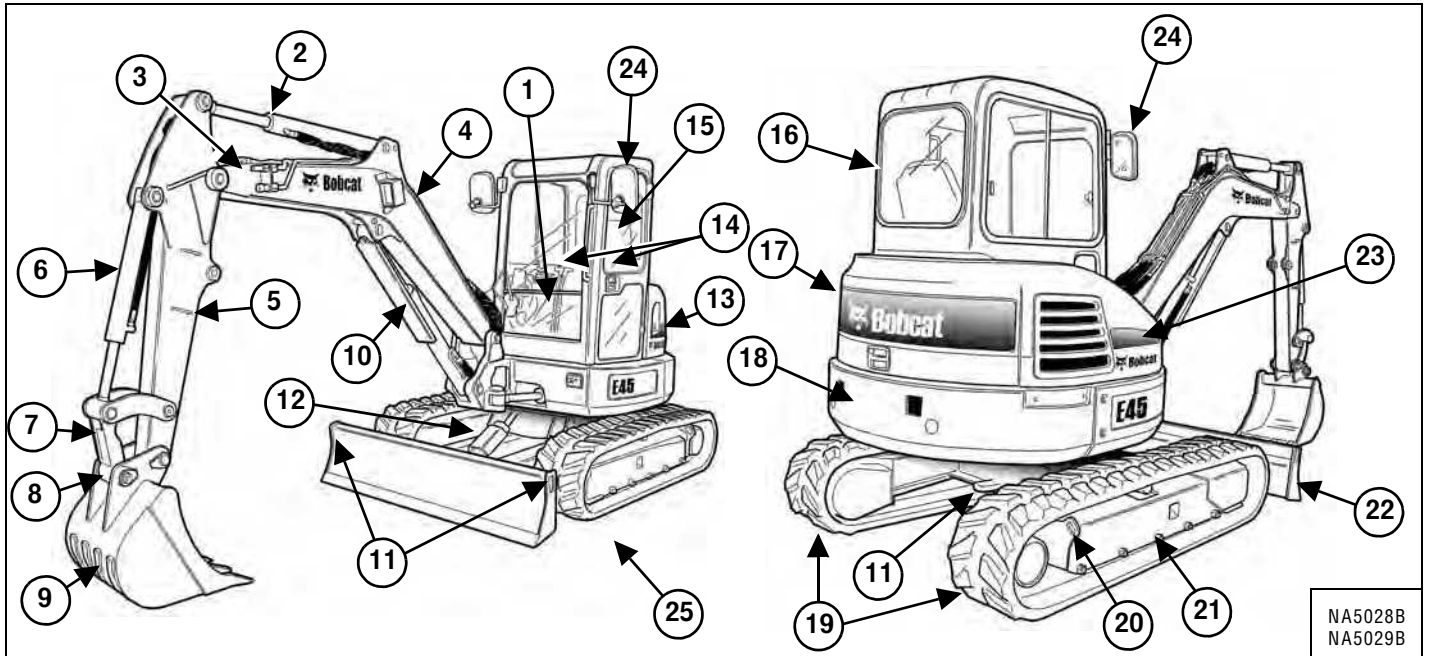

NA5028B
NA5029B

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Operation & Maintenance Manual and Operator's Handbook	16	CAB (ROPS / TOPS AND FOPS) [2]
2	Arm Cylinder	17	Rear Cover
3	Auxiliary Quick Couplers	18	Counterweight
4	Boom	19	Tracks
5	Arm	20	Tie Downs / Lift Points (Both Sides)
6	Bucket Cylinder	21	Track Frame
7	Bucket Link	22	Blade
8	X-Change™	23	Right Side Cover
9	Bucket [1]	24	Mirrors
10	Boom Cylinder		
11	Tie Downs		
12	Blade Cylinders		
13	Upperstructure		
14	Control Levers (Joysticks)		
15	Operator's Seat with Seat Belt		

[1] BUCKET - Several different buckets and other attachments are available from the Bobcat Excavator.

[2] ROPS, TOPS - (Roll-Over Protective Structure / Tip-Over Protective Structure) as standard equipment. The ROPS / TOPS meets ISO 12117-2 and ISO 12117.

FEATURES, ACCESSORIES AND ATTACHMENTS

Standard Items

Model E45 Bobcat excavators are equipped with the following standard items:

- 1960 mm (77.2 in) Dozer Blade
- Canopy with ROPS / TOPS Approval
- 400 mm (15.7 in) Rubber Tracks
- Two-Speed Travel
- Auto-Shift Drive System
- Auxiliary Hydraulics (With Selectable Auxiliary Hydraulic Flow)
- Hydraulic and Travel Control Lockouts
- Engine Speed Control Dial With Auto Idle Feature
- Blade Float
- Work Lights - Boom and Frame Mounted
- Engine and Hydraulic system Monitor with Shut Down Horn
- Hydraulic Joystick Controls
- ISO / STD Control Pattern Selection Feature
- Suspension Seat
- Retractable Seat Belt
- Spark Arrester Muffler
- Advanced Diagnostics
- X-Change™
- Counterweight

Options And Accessories

Below is a list of some equipment available from your Bobcat excavator dealer as Dealer and/or Factory Installed Accessories and Factory Installed Options. See your Bobcat dealer for other available options, accessories and attachments.

- Enclosed Cab With Heater and A/C
- Enclosed Cab With Heater
- Deluxe Instrument Panel
- Travel Motion Alarm
- Keyless Start
- Canopy / Cab Mounted Lights
- Catalytic Exhaust Purifier
- Top Guard Kit (FOGS)
- Special Application Kit
- Steel Tracks - 400 mm (15.7 in)
- Long Arm
- Angle Blade
- Direct to Tank Auxiliary Hydraulics
- Counterweight (Additional)
- Hydraulic X-Change
- Pin Grabber Quick Coupler
- Extendable Arm
- Boom Load Hold
- Arm Load Hold
- Overload Warning Alarm
- Second Auxiliary Hydraulics
- Arm Mounted Auxiliary Hydraulic Couplers
- HEPA HVAC Fresh Air Filter

Attachments


These and other attachments are approved for use on this model Bobcat excavator. Do not use unapproved attachments. Attachments not manufactured by Bobcat may not be approved.

The versatile Bobcat excavator quickly turns into a multi-job machine with a variety of attachments.

See your Bobcat dealer for information about approved attachments and attachment Operation & Maintenance Manuals.

- Auger
- Breaker
- Hydraulic Clamp
- Pro Clamp™ System
- 3-Tined Grapple
- Compactor
- Grading Blade
- Power Tilt
- Ripper
- Hydro Tilt
- Packer Wheel
- Trencher
- Lazer Receiver

Buckets Available

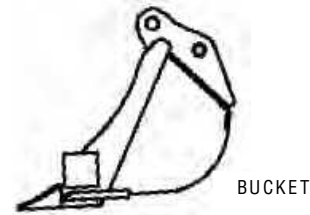

Many bucket styles, widths and different capacities are available for a variety of different applications. See your Bobcat dealer for the correct bucket for your Bobcat excavator and application.


- 305 mm (12 in) Trenching
- 330 mm (13 in) Trenching
- 457 mm (18 in) Trenching
- 610 mm (24 in) Trenching
- 610 mm (24 in) Heavy duty trenching
- 760 mm (30 in) Trenching
- 914 mm (36 in) Trenching
- 914 mm (36 in) Heavy duty trenching
- 1321 mm (52 in) Grading

Specifications subject to change without notice and standard items may vary.

FEATURES, ACCESSORIES AND ATTACHMENTS (CONT'D)

Falling-Object Guards (FOGS)

Figure 4

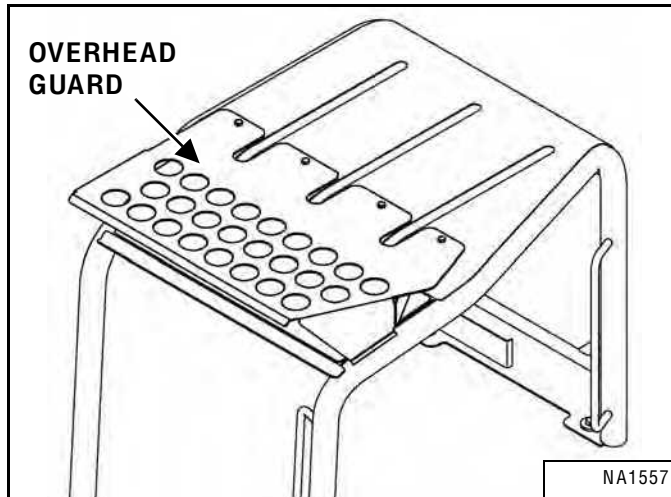


Available for special applications that require protection from smaller objects that can fall on the canopy / cab or restrict material from entering canopy / cab openings [Figure 4] and [Figure 5].

The excavator must have the overhead guard [Figure 4] installed to meet the top guard requirements in ISO 10262.

See your Bobcat Dealer for more information.

Special Applications Kit

Figure 5

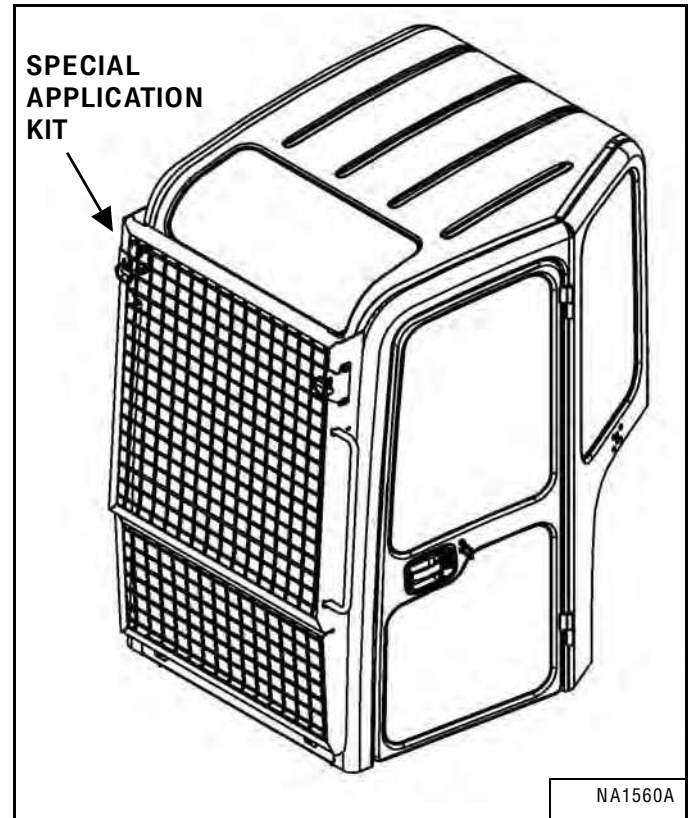

The excavator must have the special applications kit [Figure 5] installed to meet the front guard requirements in FOGS ISO 10262 - level 1.

Kit includes an upper and lower screen guard.

See your Bobcat Dealer for more information.

Special Applications Kit Inspection And Maintenance

The Special Applications Kit must be regularly inspected and maintained. Inspect the screen for damage. Replace parts as necessary.

SAFETY AND TRAINING RESOURCES

SAFETY INSTRUCTIONS	11
Before Operation	11
Safe Operation Is The Operator's Responsibility	12
Safe Operation Needs A Qualified Operator	12
Avoid Silica Dust	13
FIRE PREVENTION	13
Maintenance	13
Operation	13
Electrical	13
Hydraulic System	14
Fueling	14
Starting	14
Spark Arrester Exhaust System	14
Welding And Grinding	14
Fire Extinguishers	14
PUBLICATIONS AND TRAINING RESOURCES	15
MACHINE SIGNS (DECALS)	16
Pictorial Only Safety Signs	18

SAFETY INSTRUCTIONS

Before Operation

Carefully follow the operating and maintenance instructions in this manual.

The Bobcat excavator is highly maneuverable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off highway, rough terrain applications, common with Bobcat excavator usage.

The Bobcat excavator has an internal combustion engine with resultant heat and exhaust. All exhaust gases can kill or cause illness so use the excavator with adequate ventilation.

The dealer explains the capabilities and restrictions of the Bobcat excavator and attachment for each application. The dealer demonstrates the safe operation according to Bobcat instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Lift Capacity. They are designed for secure fastening to the Bobcat excavator. The user must check with the dealer, or Bobcat literature, to determine safe loads of materials of specified densities for the machine - attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.

- An Operator's Handbook is fastened to the operator cab of the excavator. Its brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Compact Excavator Operating Training Course is available through your Bobcat dealer. This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- See the PUBLICATIONS AND TRAINING RESOURCES Page in this manual or your Bobcat dealer for Service and Parts Manuals, printed materials, videos, or training courses available. Also check the Bobcat websites **Bobcat.com/training** or **Bobcat.com**

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

SI EXC-1016

SAFETY INSTRUCTIONS (CONT'D)

Safe Operation Is The Operator's Responsibility



Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material that is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat safety equipment for your model.

SI EXC-1016

SAFETY INSTRUCTIONS (CONT'D)

Avoid Silica Dust



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolant mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

SI EXC-1016

FIRE PREVENTION (CONT'D)

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher Sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

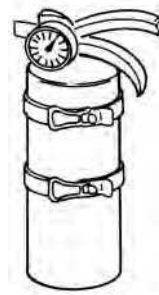


Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

PUBLICATIONS AND TRAINING RESOURCES

The following publications are also available for your Bobcat excavator. You can order them from your Bobcat dealer.

For the latest information on Bobcat products and the Bobcat Company, visit our Web site at **Bobcat.com/training** or **Bobcat.com**.

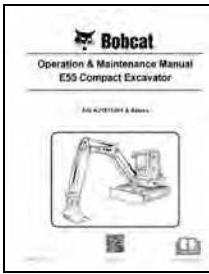

OPERATION & MAINTENANCE MANUAL

6990446enUS

Complete instructions on the correct operation and the routine maintenance of your Bobcat excavator.



OPERATOR'S HANDBOOK

6990434enUS

Gives basic operation instructions and safety warnings.



SAFETY MANUAL

6901951 (English and Spanish)

Gives basic safety procedures and warnings for your Bobcat excavator.



OPERATOR SAFETY DVD

6904762 (English and Spanish)

DVD gives basic safety instructions for many Bobcat products including excavators.



COMPACT EXCAVATOR OPERATOR TRAINING COURSE

7249283 (English)
7249286 (Spanish)

Introduces operator to step-by-step basics of skid-steer excavator operation.



EXCAVATOR SERVICE SAFETY TRAINING COURSE

6900916

Introduces service technicians to step-by-step basics of proper and safe skid-steer excavator maintenance and servicing procedures.



SERVICE MANUAL

6989437enUS

Complete maintenance instructions for your Bobcat excavator.




EXCAVATOR SAFETY VIDEO

(Mobile device with quick response code application required)

Scan the code above to watch the excavator safety video or view at **Bobcat.com/training**.


MACHINE SIGNS (DECALS)

Follow the instructions on all the Machine Signs (Decals) that are on the excavator. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat excavator dealer.

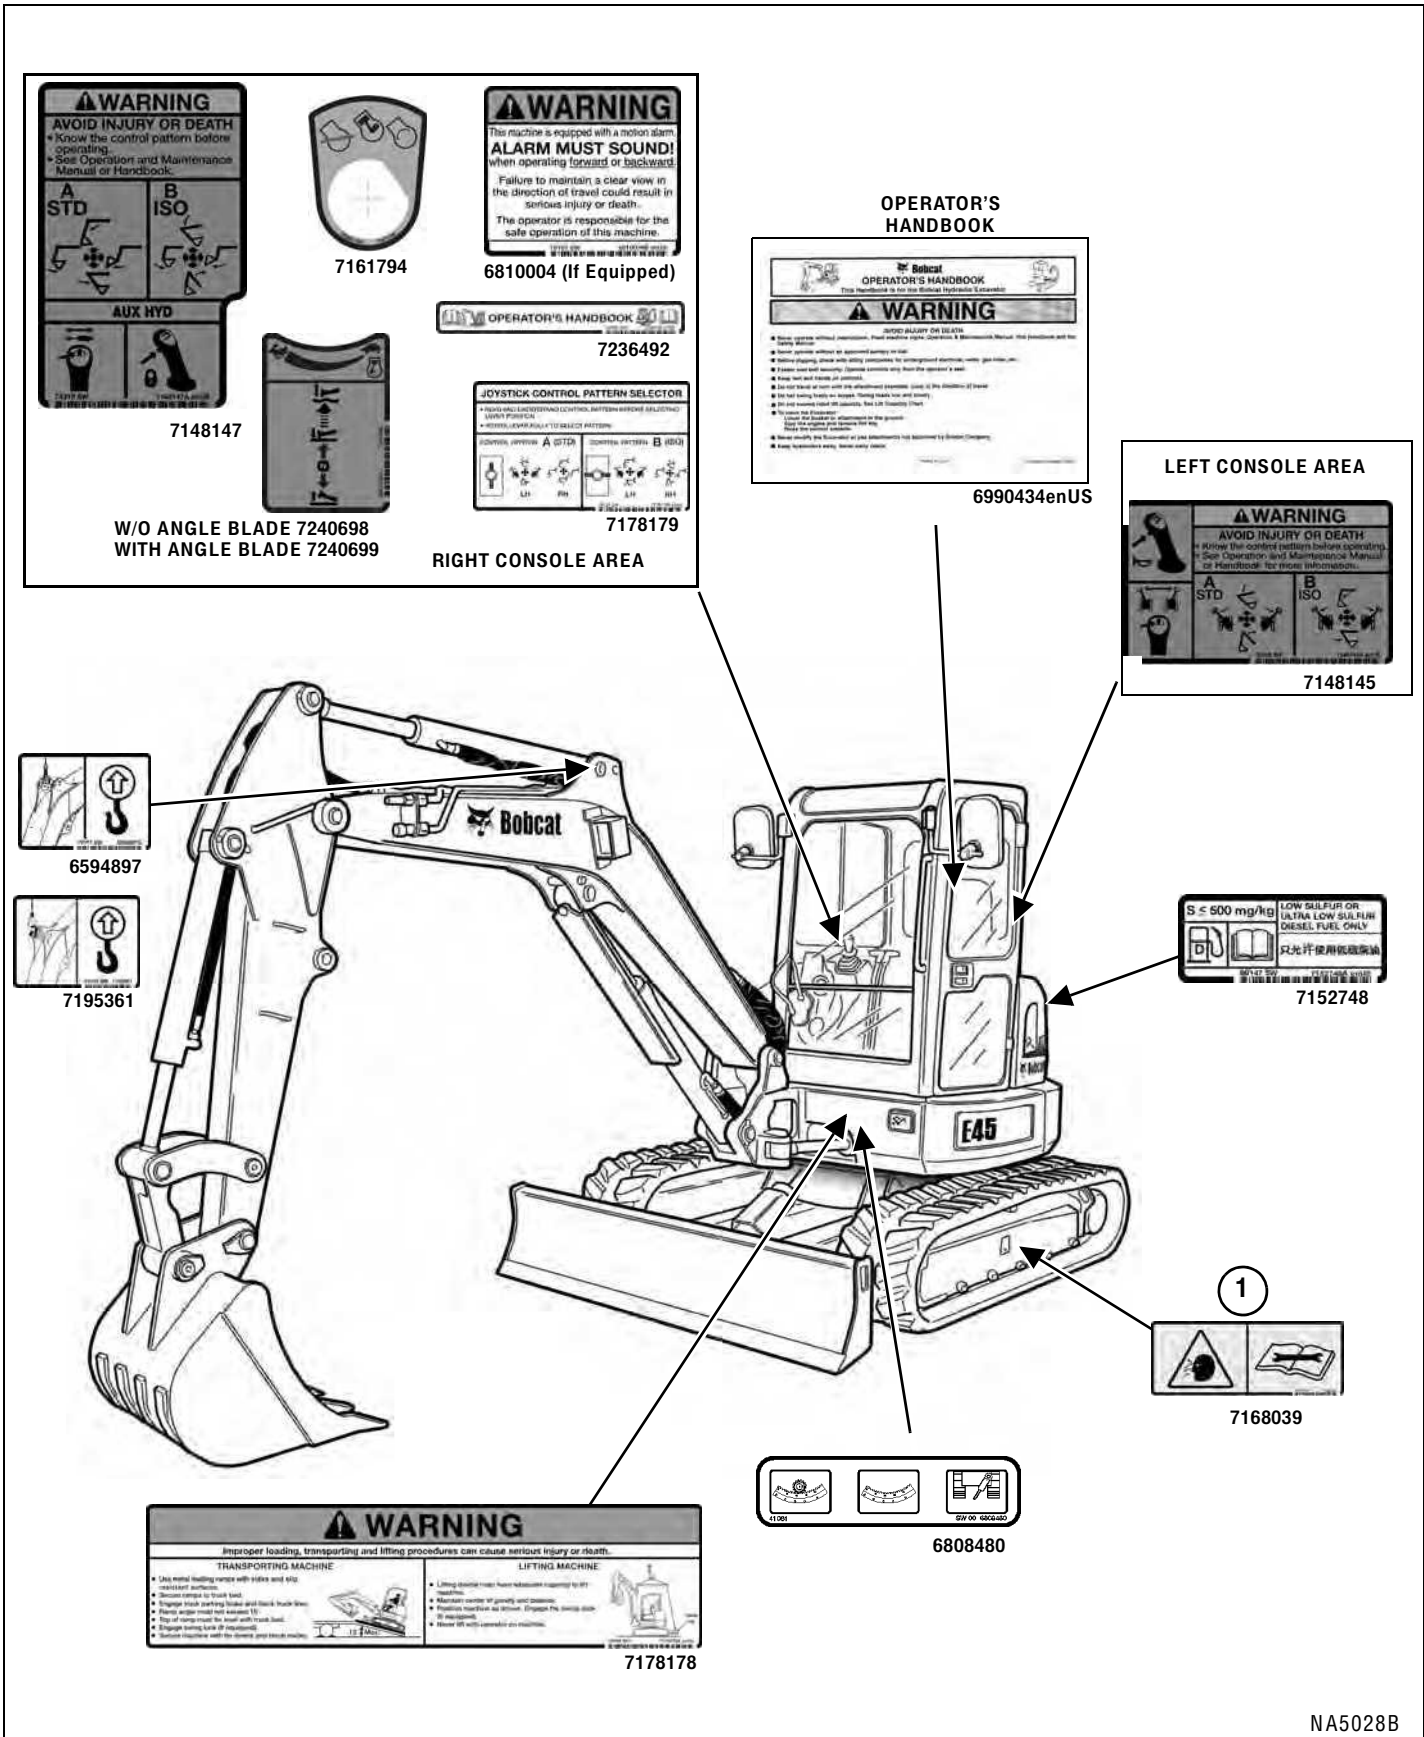

MACHINE SIGNS (DECALS) (CONT'D)

Follow the instructions on all the Machine Signs (Decals) that are on the excavator. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat excavator dealer.

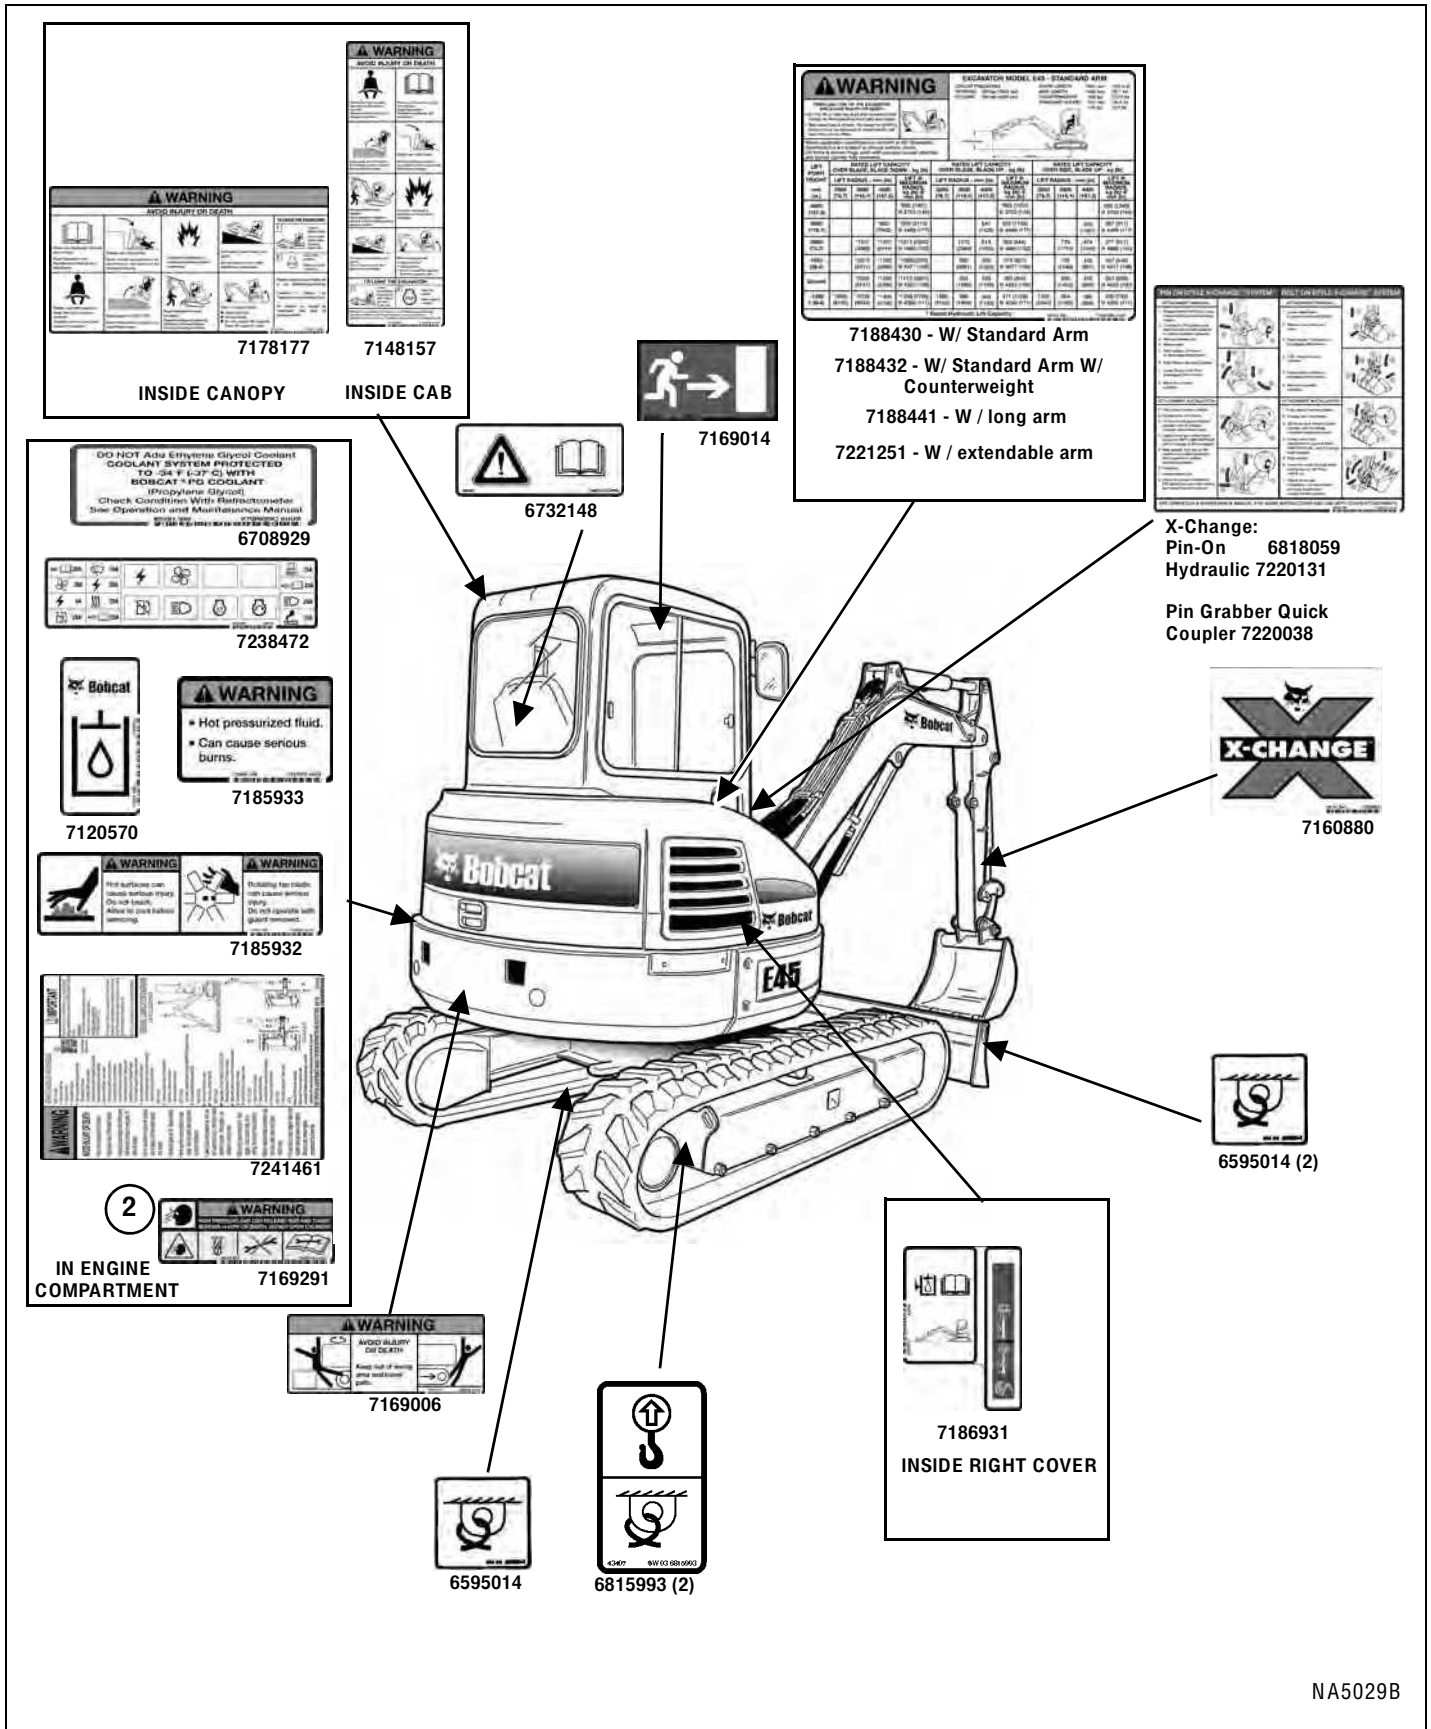


MACHINE SIGNS (DECALS) (CONT'D)


Pictorial Only Safety Signs

Safety signs are used to alert the equipment operator or maintenance person to hazards that may be encountered in the use and maintenance of the equipment. The location and description of the safety signs are detailed in this section. Please become familiarized with all safety signs installed on the excavator.

Vertical Configuration

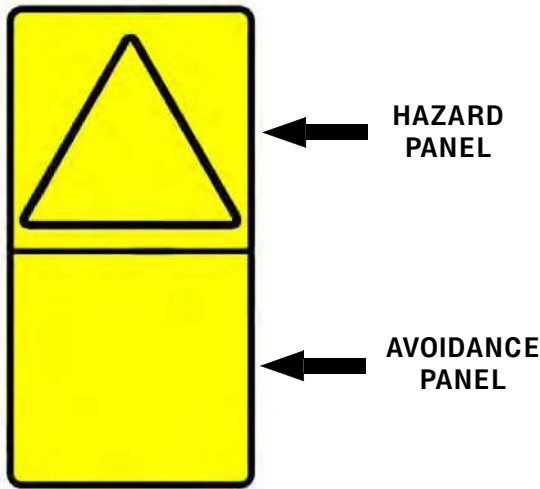

Horizontal Configuration

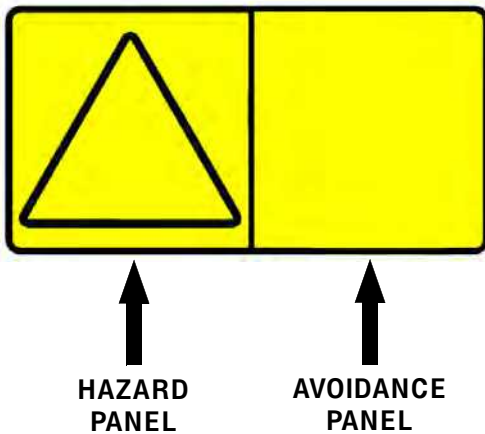

The format consists of the hazard panel(s) and the avoidance panel(s):

Hazard panels depict a potential hazard enclosed in a safety alert triangle.

Avoidance panels depict actions required to avoid the hazards.

A safety sign may contain more than one hazard panel and more than one avoidance panel.

NOTE: See the numbered MACHINE SIGNS (DECALS) on Page 16 and MACHINE SIGNS (DECALS) (Cont'd) on Page 17 for the machine location of each corresponding numbered pictorial only decals as shown below.

1. Thrown Or Flying Objects (7168039)

This safety sign is located on the outside of both tracks.



High pressure grease can cause serious injury. Do not loosen grease fitting. Do not loosen bleed fitting more than 1 - 1/2 turns.

Read and understand the Operation & Maintenance Manual for more information.

W-2516-0110

2. Thrown or Flying Objects (7169291)

This safety sign is located on the gas spring in the engine compartment.



High pressure gas can cause serious injury or death. Do not open. Opening cylinder can release rod.

W-2523-0106

OPERATING INSTRUCTIONS

INTENDED USE	22
INSTRUMENTS AND CONSOLES	23
Cab Interior Light	23
Left Console	23
Right Console	24
Instrument Panel - Standard	25
Instrument Panel - Deluxe	28
Radio Option	29
STD / ISO Selector Valve	31
Raising And Lowering The Console	31
Two-Speed Travel (Without Angle Blade Option)	32
Two-Speed Travel (With Angle Blade Option)	32
Auto-Shift Drive System	32
Auto Idle Feature	33
OPERATOR CANOPY (ROPS / TOPS)	34
Description	34
OPERATOR CAB (ROPS / TOPS)	34
Description	34
Cab Door	35
Front Window	36
Front Wiper	37
Window Washer Reservoir	37
Right Side Windows	38
Heating, Ventilation, And Air Conditioning Ducting	40
EMERGENCY EXIT	41
Right Side Rear Window	41
Front Window	41
MOTION ALARM SYSTEM	42
Operation	42
TRAVEL CONTROLS	43
Forward And Reverse Travel	43
Turning	43

HYDRAULIC CONTROLS	45
Description	45
STANDARD Control Pattern	45
ISO Control Pattern	46
Quick Couplers	47
Auxiliary Hydraulics - Standard Instrument Panel	48
Auxiliary Hydraulics - Deluxe Instrument Panel	49
Relieve Hydraulic Pressure With Standard Instrument Panel (Excavator And Attachment)	50
Relieve Hydraulic Pressure With Deluxe Instrument Panel (Excavator And Attachment) ..	50
Secondary Auxiliary Hydraulics	51
Relieve Secondary Auxiliary Hydraulic Pressure (Excavator And Attachment)	51
Return To Tank Valve	52
 OVERLOAD WARNING	 52
Description	52
Operation	52
 BLADE CONTROL LEVER	 53
Raising And Lowering Blade	53
Angling Blade (If Equipped)	53
 ENGINE SPEED CONTROL DIAL	 54
Setting Engine Speed (RPM)	54
ECO Mode (With Deluxe Instrument Panel Only)	54
 BOOM SWING	 55
Operation	55
 BOOM LOAD HOLDING VALVE	 56
Description	56
Lowering Boom With Load Holding Valve	56
 ARM LOAD HOLDING VALVE	 58
Description	58
Lowering Arm With Load Holding Valve	58
 DAILY INSPECTION	 60
Daily Inspection And Maintenance	60
 PRE-STARTING PROCEDURE	 61
Operation & Maintenance Manual And Operator's Handbook Locations	61
Entering The Excavator	61
Seat Adjustment	62
Seat Belt	62
Control Console	63
Mirror Adjustment	63

STARTING THE ENGINE	64
Key Switch	64
Keyless	65
Deluxe Instrument Panel	66
Warming The Hydraulic System	67
Cold Temperature Starting	67
MONITORING THE DISPLAY PANELS	68
Instrument Panel	68
Warning And Shutdown	68
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR	69
Procedure	69
ATTACHMENTS	70
Installing And Removing The Attachment (Hydraulic X-Change)	70
Installing And Removing The Attachment (Pin Grabber Quick Coupler)	73
Installing And Removing The Attachment (Pin-On X-Change)	78
Installing And Removing The Attachment (Pin-On Attachment)	84
Installing And Removing The Pro Clamp System Tool	85
OPERATING PROCEDURE	92
Inspect The Work Area	92
Basic Operating Instructions	92
Lowering The Work Equipment (Engine STOPPED)	92
Object Handling	93
Object Handling With The Lifting Device	94
Lift Capacity	96
Using The Clamp	98
Using The Pro Clamp System	99
Driving The Excavator	100
Operating On Slopes	101
Operating In Water	103
Extending The Arm	104
Avoiding Track Damage	106
DEPTH CHECK	107
Setup / Calibration	107
Initial Setup	117
Operation	124
TOWING THE EXCAVATOR	130
Procedure	130
LIFTING THE EXCAVATOR	131
Procedure	131
TRANSPORTING THE EXCAVATOR ON A TRAILER	132
Loading And Unloading	132
Fastening	132


INTENDED USE

This machine is classified as an Excavator as defined in ISO 6165. This machine has tracks and commonly a mounted bucket for the principle intended functions of excavating, loading and backfilling loose materials such as earth, gravel, or crushed rock.

Additional Bobcat approved attachments allow this machine to perform other tasks described in the attachment Operation & Maintenance Manuals.

Examples of intended use include:

Excavating

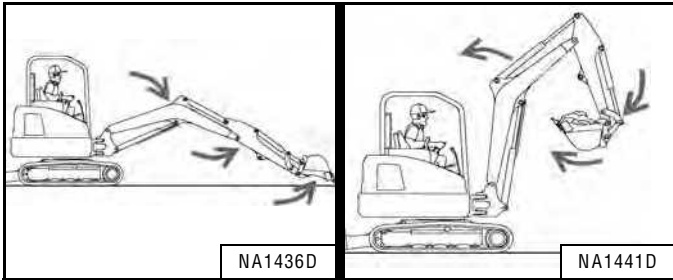


Boom Swing



Rotating the Upperstructure



Loading Material

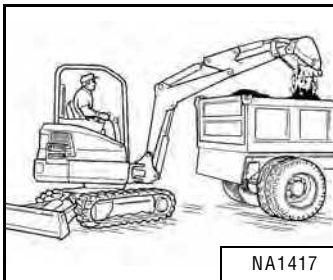

Backfilling



! WARNING

AVOID INJURY OR DEATH

Do not exceed rated lift capacity. Excessive load can cause tipping or loss of control.

W-2374-0500

! WARNING

AVOID INJURY OR DEATH

Check area to be excavated for overhead or underground electrical power lines. Keep a safe distance from electrical power lines.

LINE VOLTAGE	MINIMUM APPROACH DISTANCE
50 kV	At least 3 m (10 ft)
230 kV	At least 5 m (17 ft)
740 kV	At least 10 m (33 ft)

W-2757-0910

! WARNING

Keep all bystanders 6 m (20 ft) away from equipment when operating. Contact with moving parts, a trench cave-in or flying objects can cause injury or death.

W-2119-0910

IMPORTANT


Avoid impacting objects with the blade. Damage to blade and undercarriage components may occur.

I-2256-0507

INSTRUMENTS AND CONSOLES


Cab Interior Light

Figure 6

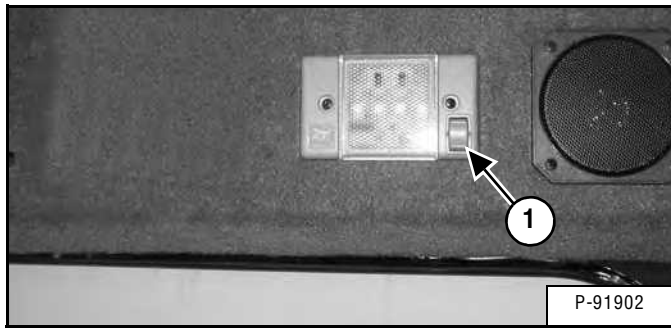

Early Models: Press the top of the switch (Item 1) [Figure 6] to turn the light (if equipped) ON. Press the bottom of the switch to turn OFF.


Figure 7

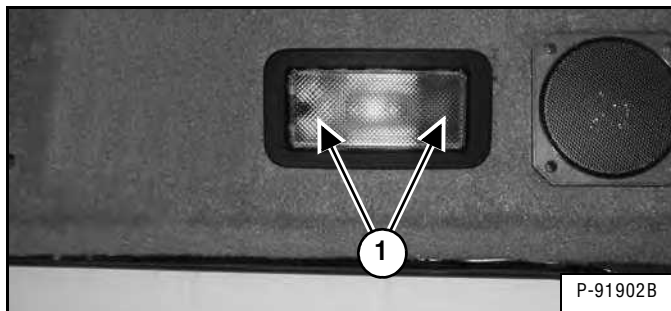

Later Models: Press either side of the lens (Item 1) [Figure 7] to turn the light (if equipped) ON. Return the LENS to the center position to turn OFF.

Left Console

Figure 8

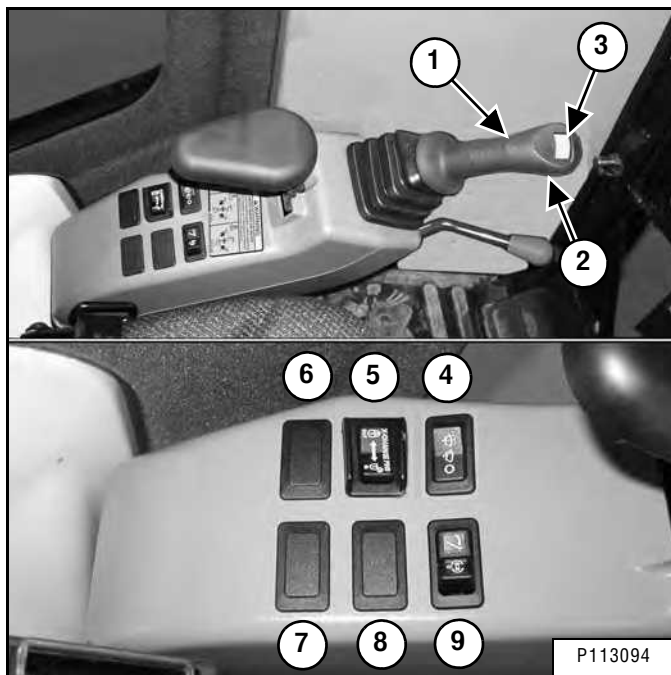


Left Console [Figure 8]

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
1	Left Joystick	(See HYDRAULIC CONTROLS on Page 45.)
2	Horn	Press the switch on the bottom of the left joystick to sound horn.
3	Boom Swing Switch / Secondary Auxiliary Hydraulic (If Equipped)	Move the switch to the left to swing the boom to the left. Move the switch to the right to swing the boom to the right. (See Secondary Auxiliary Hydraulics and Boom Swing in this manual.)
4	Wiper / Washer Switch (If Equipped)	Press the switch to the left to turn wiper ON. Press and hold switch to the left to activate window washer. Press the switch to the right to turn wiper OFF.
5	Hydraulic X-Change Switch (If Equipped)	Press and hold the switch to the right to fully retract hydraulic pins. Press and hold the switch to the left to fully extend hydraulic pins.
	Pin Grabber Quick Coupler ON / OFF Switch (If Equipped)	Press switch to the left to turn the pin grabber quick coupler ON. Press the switch to the right to turn OFF.
6	Beacon / Strobe Light (If Equipped)	Press switch to the left to turn ON the beacon / Strobe light. Press the switch to the right to turn OFF.
7	Pin Grabber Quick Coupler INTENT Switch (If Equipped)	Press switch to the left to initiate the quick coupler install or remove mode. (See Installing And Removing The Attachment (Pin Grabber Quick Coupler) in this manual.)
8	OVERLOAD WARNING SWITCH (If Equipped)	Press switch to the right to enable Overload Warning feature. Press to the left to disable. (See Overload Warning in this manual.)
9	Boom Swing Switch / Secondary Auxiliary Hydraulic (If Equipped)	Move the switch to the right to activate the secondary auxiliary hydraulics. Move the switch to the left for boom swing function. (See Secondary Auxiliary Hydraulics and Boom Swing in this manual.)

INSTRUMENTS AND CONSOLES (CONT'D)

Right Console

Figure 9

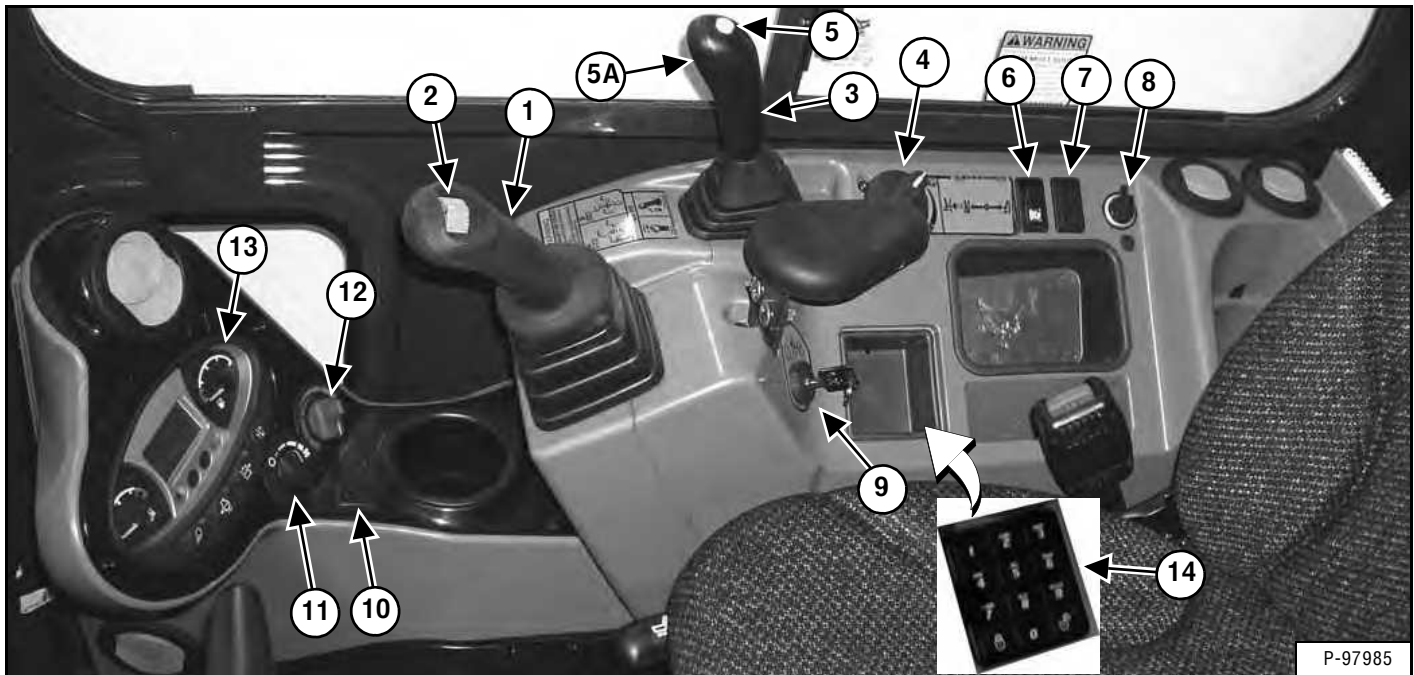

P-97985

REF	DESCRIPTION	FUNCTION / OPERATION
1	Right Joystick	(See HYDRAULIC CONTROLS in this manual.)
2	Auxiliary Hydraulic Switch	Controls the fluid flow to the auxiliary quick couplers (attachment). (See Auxiliary Hydraulics in this manual.)
3	Blade Control Lever	Controls raising and lowering the blade. Pushed all the way forward puts blade in float position. (See BLADE LEVER CONTROL in this manual.)
4	Engine Speed Control Dial	Controls rpm of the engine. (See ENGINE SPEED CONTROL DIAL in this manual.)
5	Two Speed Button (Without Angle Blade Option)	Engages and disengages High Range Travel Speed. (See Two-Speed Travel in this manual.)
5A	Two Speed Button (With Angle Blade Option)	Engages and disengages High Range Travel Speed. (See Two-Speed Travel in this manual). (Also see Angle Blade in this manual.)
6	Motion Alarm Cancel Switch	This switch temporarily disables the motion alarm. (See MOTION ALARM SYSTEM on Page 42.)
7	Not Used	---
8	Auxiliary Power Outlet	12 volt receptacle for accessories.
9	Key Switch	Always perform the PRE-STARTING PROCEDURE. (See PRE-STARTING PROCEDURE in this manual), before starting the engine. (See STARTING THE ENGINE in this manual).
10	Air Conditioning Switch (If Equipped)	Press top of switch to turn air conditioner ON (light in switch will be ON), Press bottom of switch to turn OFF.
11	Fan Motor Switch (If Equipped)	Turn clockwise to increase fan speed; counterclockwise to decrease.
12	Temperature Control (If Equipped)	Turn clockwise to increase temperature; counterclockwise to decrease.
13	Instrument Panel	See Standard or Deluxe Instrument Panel
14	Keyless (If Equipped)	(Always perform the PRE-STARTING PROCEDURE, (See PRE-STARTING PROCEDURE in this manual), before starting the engine. (See STARTING THE ENGINE in this manual).

NOTE: Always turn key switch and all accessories to OFF position when the engine is stopped, the battery will discharge if the key is left ON.

INSTRUMENTS AND CONSOLES (CONT'D)

Instrument Panel - Standard

Figure 10



P-97989

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
1	LIGHTS	Press once for work lights. (Left green LED illuminates.) Press again to turn all lights off. (Left green LED off.) Press and hold 5 seconds to display software version in display screen.
2	Auto Idle Feature	Press once to turn Auto Idle Feature ON. (Left green LED illuminates.) Press a second time to turn OFF. (Left and right green LEDs off.) (See Auto Idle Feature in this manual).
3	Auxiliary Hydraulic Button	Press once to enable auxiliary hydraulic function. (Left green LED illuminates.) Continue to press and release to scroll through the selectable auxiliary hydraulic setting (3-2-1-OFF). Press and hold (minimum of one second) to enable the continuous flow auxiliary hydraulic feature. (Right green LED illuminates.) Continue to press and release to scroll through the continuous flow selectable auxiliary hydraulic settings (3-2-1-OFF). (See Auxiliary Hydraulics in this manual).
4	Information	Cycles through (after each button press) (The following information is displayed in the Data Display Screen, Item 6): <ul style="list-style-type: none"> • Hourmeter (On startup) • Job Clock (1 and 2) • Engine rpm • Battery voltage • Maintenance clock (Press and hold 7 seconds when displayed to reset the maintenance clock.) • Service codes*
5	Engine Temperature Gauge	Shows the engine coolant temperature.

INSTRUMENTS AND CONSOLES (CONT'D)

Instrument Panel - Standard (Cont'd)

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
6	Data Display Screen	The data display screen shows the Hourmeter at start up and then changes to engine rpm during normal operation of the excavator. When preheat is activated, the display screen will show the remaining preheat time. Can also be used to display Job Clock, Engine rpm, and Selectable Auxiliary Hydraulic Flow. (See Job Clock in this manual).
7	Fuel Gauge	Shows the amount of fuel in the tank.
8	Seat Belt	Fasten Seat Belt Reminder - Light stays on for 45 seconds to remind operator to fasten seat belt.
9		Not used for this model.
10		Not used for this model.
11	Left Console Lockout	Icon ON when left console is raised. Icon OFF when left console is lowered.
12	General Warning **	Malfunction with one or more machine functions. (See Service Codes in this manual.)
13	High Range Engaged ***	Icon is illuminated when two speed travel is enabled.
14	Engine Coolant Temperature **	Engine coolant temperature high or sensor error.
15	Engine Malfunction **	Engine malfunction or failure.
16	Hydraulic System Malfunction **	Hydraulic system malfunction or failure.
17	Fuel	Fuel level low or sensor error. (Icon is ON when fuel level is low, Icon flashes when fuel sensor fault is activated.)
18		Not used for this model.
19		Not used for this model.
20		Not used for this model.
21		Not used for this model.

* See SYSTEM SETUP AND ANALYSIS for Service Code Description. (See DIAGNOSTIC SERVICE CODES on Page 185.)

** Icons will be ON or flashing when diagnostic system indicates a problem. (See DIAGNOSTIC SERVICE CODES on Page 185.)

*** Icons will be flashing when diagnostic system indicates a problem. (See DIAGNOSTIC SERVICE CODES on Page 185.)

INSTRUMENTS AND CONSOLES (CONT'D)


Instrument Panel - Standard (Cont'd)

Indicator Icons

The display screen can display the following information:

- Operating hours
- Job Clock (1 and 2)
- Engine rpm
- Battery voltage
- Maintenance clock countdown
- Service codes

Figure 11

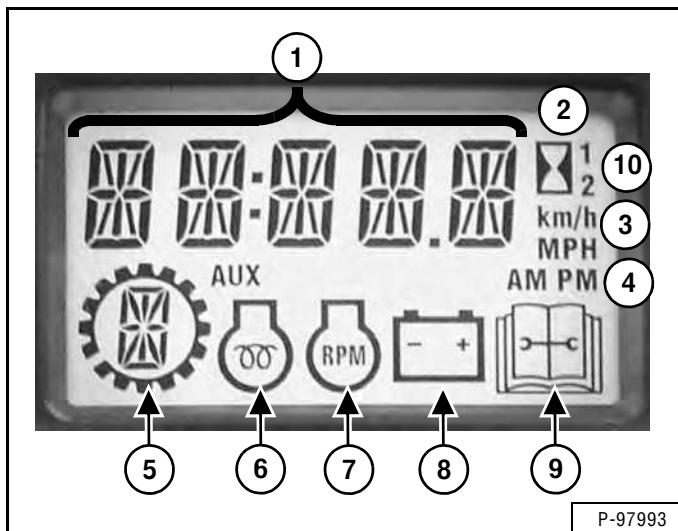


The display screen is shown in [Figure 11]. The data display will show operating hours upon startup.

1. **Data Display**
2. **Hourmeter**
3. **Metric / English (Not Used For This Model)**
4. **Clock (Not Used For This Model)**
5. **Selectable Auxiliary Flow (3 - 2 - 1)**
6. **Engine Preheat**
7. **Engine RPM**
8. **Battery / Charging Voltage**
9. **Service**
10. **Job Clock (1 and 2)**

INSTRUMENTS AND CONSOLES (CONT'D)

Instrument Panel - Deluxe

Figure 12

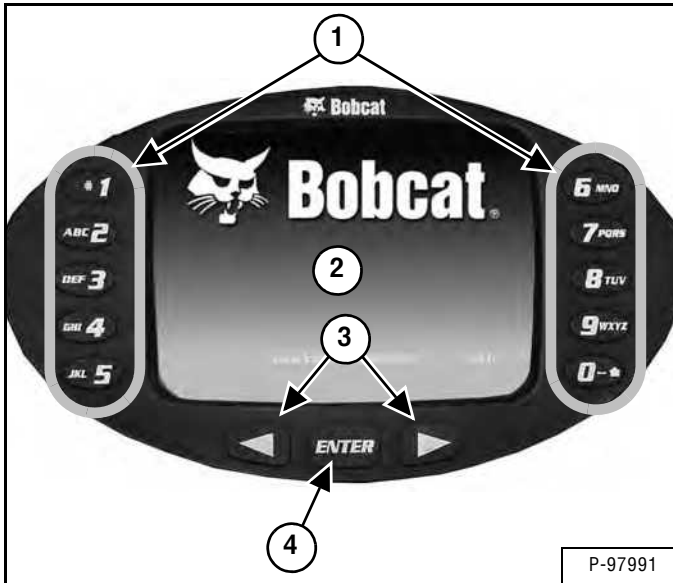

This machine may be equipped with a Deluxe Instrument Panel [Figure 12].

1. **Keypad (1 through 0):** The keypad has two functions:
 - To enter a number code (password) to allow starting the engine.
 - To enter a number as directed for further use of the display screen.
2. **Display Screen:** The display screen is where all system setup, monitoring, and error conditions are displayed.
3. **Scroll Buttons:** Used to scroll through display screen choices.
4. **ENTER Button:** Used to make selections on the display screen.

Figure 13



Turn the start key to the ON position.

When this screen is on the display you can enter the password and start the engine [Figure 13].

NOTE: Your excavator (with Deluxe Instrument Panel) will have an Owner Password. Your dealer will provide you with this password. Change the password to one that you will easily remember to prevent unauthorized use of your excavator. (See Changing The Owner Password on Page 196.) Keep your password in a safe location for future needs.

Enter The Password:

Use the numbers on the keypad to enter the password, then press the [ENTER] button. A symbol will appear on the display screen for each number entered. The left scroll button can be used to backspace if an incorrect number is entered.

If the correct password is not entered, [INVALID PASSWORD] will appear on the display screen and the password will have to be reentered.

See CONTROL PANEL SETUP for further description of screens to set up the system for your use. (See CONTROL PANEL SETUP on Page 189.)

Lights

Press key pad [1] [Figure 13] once for FRONT work lights. Press a second time to turn all lights off.


Change Language:

The language can be changed at any time. (See CONTROL PANEL SETUP on Page 189.)

INSTRUMENTS AND CONSOLES (CONT'D)


Radio Option

Figure 14

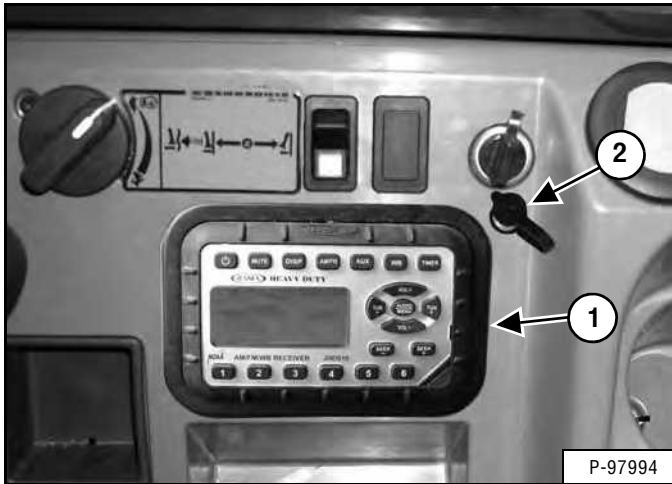

This excavator may be equipped with a radio (Item 1) and the headphone jack (Item 2) [Figure 14].

Figure 15

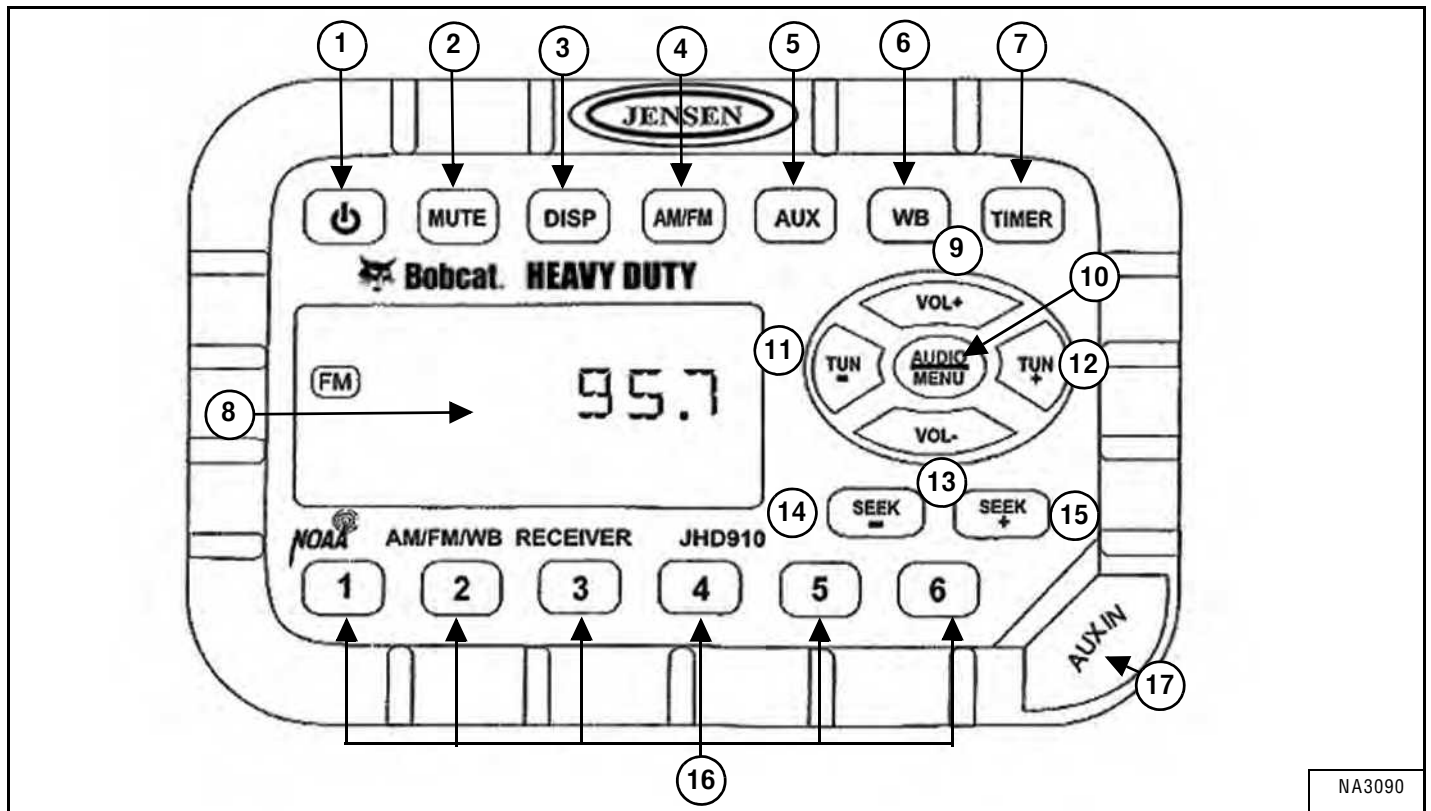

NOTE: See DISPLAY (Item 3) in the following table for clock setting instructions.

INSTRUMENT AND CONSOLES (CONT'D)

Radio (Cont'd)

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
1	POWER	Press to turn ON; press again to turn OFF.
2	MUTE	Press to mute audio output; [MUTE] will appear in display screen; press again to turn OFF.
3	DISPLAY	Press to toggle between function mode (showing tuner frequency, auxiliary input, weather band information, or timer) and clock mode. Press and hold to enter clock setting mode; use FREQUENCY DOWN (TUN -) button to adjust hours and FREQUENCY UP (TUN +) button to adjust minutes; normal operation will resume automatically.
4	BAND	Press to select tuner mode. Press to cycle through 2 AM (MW) bands and 3 FM bands.
5	AUXILIARY	Press to select Auxiliary Input mode. Portable audio device (MP3 player) must be attached to auxiliary input jack.
6	WEATHER BAND	Press to select weather band; use FREQUENCY UP (TUN +) and FREQUENCY DOWN (TUN -) buttons to adjust to the clearest station. The weather alert feature, if activated, will automatically switch from the current function to the weather band if a weather warning is received. See AUDIO / MENU ADJUSTMENT in this table.
7	TIMER	Press to access timer mode. Press to start the timer function; press again to stop timer; press again to resume timer or press and hold to reset timer and exit from timer mode.
8	DISPLAY SCREEN	Displays the time, frequency, and activated functions.
9	VOLUME UP	Adjusts volume up; current volume (0 - 40) will appear briefly in display screen.
10	AUDIO / MENU ADJUSTMENT	AUDIO ADJUSTMENT: Press to cycle through bass, treble, and balance settings; use VOLUME UP (VOL +) and VOLUME DOWN (VOL -) buttons to adjust when desired option is displayed; normal operation will resume automatically. MENU ADJUSTMENT: Press and hold for 3 seconds to enter menu adjustment settings; press to cycle through the following settings; use VOLUME UP (VOL +) and VOLUME DOWN (VOL -) buttons to adjust when desired option is displayed; normal operation will resume automatically. <ul style="list-style-type: none"> • Beep Confirm (On or Off) - Determines if beep will sound with each button press. • Operation Region (USA or Europe) - Selects the appropriate region. • Clock Display (12 or 24) - Selects a 12-hour or 24-hour clock display. • Display Brightness (Low, Medium, or High) - Determines brightness level of display screen. • Backlight Color (Amber or Green) - Determines backlight color of display screen. • Power On Volume (0 - 40) - Selects default volume setting when radio is turned on. • WB Alert (On or Off) - Determines if weather band alert feature is activated.
11	FREQUENCY DOWN	Press to manually tune the radio frequency down.
12	FREQUENCY UP	Press to manually tune the radio frequency up.
13	VOLUME DOWN	Adjusts volume down; current volume (0 - 40) will appear briefly in display screen.
14	SEEK FREQUENCY DOWN	Press to automatically tune frequency down to next strong station.
15	SEEK FREQUENCY UP	Press to automatically tune frequency up to next strong station.
16	PRESET STATIONS	Used to store and recall stations for each AM and FM band. Press and hold to store current station; press button to recall station.
17	AUXILIARY INPUT JACK	Connect line output of portable audio device (MP3 player) to 3,5 mm (1/8 in) jack and press AUXILIARY button.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com