

en

Service manual

Wheel loader

Document ID

Order number: 12200849
Issued: 2021-01-26
Version: 20
Author: LBH / Technical Documentation Department

Product ID

Manufacturer: Liebherr-Werk Bischofshofen GmbH
Valid for: L 586-1334

Contact

Liebherr-Werk Bischofshofen GmbH
Dr. Hans Liebherr-Straße 4
A – 5500 Bischofshofen

Preface

Notes for users

This service manual is designed for trained specialist staff of the Liebherr organisation and their dealers.

This service manual contains specialist knowledge for repairing Liebherr construction machines. Basic specialist knowledge on electronics, hydraulics, mechanics and engine technology is not contained in this service manual. Therefore specialized training and qualifications are necessary. Liebherr recommends participating in the Liebherr training program for construction machines.

In this service manual you will find information on:

- Special tools
- Technical data
- Maintenance intervals and maintenance tasks
- Adjustment procedures
- Structure and function descriptions
- Removal and installation tasks
- Circuit diagrams, hydraulic plans and technical drawings







You will find information on controls and operation in the operator's manual. Information on spare parts are in the spare parts catalogue. Please observe the local accident prevention laws.











You can find information on repairs of machine parts in the service documentation under "Wheel loader - repair instructions".

This document may not be duplicated, even in part, without the permission of Liebherr.

Technical changes are reserved.

Colour legend of hydraulic diagrams

Colour	Line thickness	Designation
 	Thick or thin	High pressure
 	Thick	Tank line
 	Thin	Leak oil line

Colour	Line thick-ness	Designation
 	Thin	Replenishing pressure or pilot pressure to pilot control unit
 	Thin	Control pressure or pilot pressure from pilot control unit
 	Thick	Enclosed oil
 	Thick	Working pressure
 	Thin	Load sensing pressure

Colour legend of hydraulic diagrams

Contents

010	Introduction	010-1
010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14
010.1.6.1	Intoxicants	010-14

	010.1.6.2	Dangerous fuels and operating fluids	010-14
	010.1.6.3	Transporting machine	010-15
	010.1.6.4	Access to machine	010-15
	010.1.6.5	Machine danger zone	010-16
	010.1.6.6	Visibility	010-16
	010.1.6.7	Protection against vibration	010-17
	010.1.6.8	Operation of machine	010-18
010.1.7		Safe maintenance	010-21
	010.1.7.1	Spare parts	010-21
	010.1.7.2	Heavy parts	010-21
	010.1.7.3	Regular checks	010-22
010.1.8		Modifications to the machine	010-22
	010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2		Special tools for maintenance and repair work	010-23
	010.2.1	Special tools, general	010-23
	010.2.2	Special tools for the diesel engine	010-25
	010.2.3	Special tools for lift cylinders with Z kinematics	010-29
	010.2.4	Special tools for tilt cylinders with Z kinematics	010-29
	010.2.5	Special tools for steering wheel	010-30
	010.2.6	Special tools for steering cylinders	010-30
	010.2.7	Special tools for brake system	010-31
	010.2.8	Special tools for the electrical system	010-31
	010.2.9	Special tools for the transmission	010-32
	010.2.10	Special tools for front axle	010-33
	010.2.11	Special tools for rear axle	010-33
	010.2.12	Special tools for air conditioning system	010-34
	010.2.13	Special tools for Grammer driver's seat	010-35
	010.2.14	Special tools for cab glazing	010-36
	010.2.15	Special tools for the central lubrication system (Liebherr)	010-36
010.3		Standards and regulations	010-37
	010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-37
	010.3.1.1	Range of application and purpose	010-37
	010.3.1.2	Other applicable documents	010-37
	010.3.1.3	Modifications and descriptions	010-38

	010.3.1.4	Tightening torques	010-38
	010.3.2	Liebherr standards for assembly instructions and tightening torques	010-44
010.4		Preservation guidelines	010-45
	010.4.1	General information	010-45
	010.4.2	Machine out of service for an unknown period of time	010-45
	010.4.3	Putting the machine out of service	010-46
	010.4.3.1	Out of service for up to 2 months	010-46
	010.4.3.2	Out of service for up to 12 months	010-47
	010.4.3.3	Out of service for longer than 12 months	010-48
	010.4.4	Putting back into service	010-48
	010.4.4.1	After being out of service for 2 months	010-48
	010.4.4.2	After being out of service for 12 months	010-49
	010.4.4.3	After being out of service for longer than 12 months	010-49
010.5		Preservation guidelines for the SCR system	010-50
	010.5.1	Putting out of service for longer than 2 months	010-50
	010.5.2	Starting up after being out of service for longer than 2 months	010-50
020		Technical data	020-1
	020.1	Overall machine	020-5
	020.1.1	Complete machine with bucket (Z lift arms) <i>L586-1334;</i>	020-5
	020.1.2	Working attachment: light material bucket <i>L586-1334;</i>	020-7
	020.1.3	Working attachment: high dump bucket <i>L586-1334;</i>	020-8
	020.2	Drive group	020-10
	020.2.1	Diesel engine <i>L586-1334;</i>	020-10
	020.2.2	Fuel tank <i>L586-1334;</i>	020-11
	020.2.3	Fuel level sensor <i>L586-1334;</i>	020-11
	020.2.4	Fuel pre-filter (separator filter) <i>L586-1334;</i>	020-11
	020.2.5	Compressed air system <i>L586-1334;</i>	020-12
	020.3	Cooling system	020-13
	020.3.1	Fan pump <i>L586-1334;</i>	020-13

020.3.2	Fan motor <i>L586-1334;</i>	020-13
020.3.3	Hydraulic oil temperature sensor B8 <i>L586-1334;</i>	020-13
020.4	Working hydraulics	020-14
020.4.1	Working pump <i>L586-1334;</i>	020-14
020.4.2	Control block for Z-bar kinematics <i>L586-1334;</i>	020-14
020.4.3	Pilot control valve block <i>L586-1334;</i>	020-15
020.4.4	Pilot control hydro accumulator <i>L586-1334;</i>	020-15
020.4.5	Stabilisation module <i>L586-1334;</i>	020-15
020.4.6	Ride control hydro accumulator <i>L586-1334;</i>	020-15
020.4.7	Z kinematics lift cylinder <i>L586-1334;</i>	020-15
020.4.8	Z kinematics tilt cylinder <i>L586-1334;</i>	020-16
020.4.9	Pressure sensors for lift cylinders and tilt cylinders B90, B91, B92, B93 <i>L586-1334/54472-;</i>	020-16
020.5	Hydraulic components	020-17
020.5.1	Return filter <i>L586-1334;</i>	020-17
020.5.2	Breather filter <i>L586-1334;</i>	020-17
020.6	Steering system	020-18
020.6.1	Steering pump <i>L586-1334;</i>	020-18
020.6.2	Servostat <i>L586-1334;</i>	020-18
020.6.3	Steering cylinder <i>L586-1334;</i>	020-18
020.6.4	Steering damper hydro accumulator <i>L586-1334;</i>	020-19
020.6.5	Emergency steering pump <i>L586-1334;</i>	020-19
020.6.6	Emergency steering pressure switch B3 <i>L586-1334;</i>	020-19
020.6.7	Emergency steering check pressure switch B3a <i>L586-1334;</i>	020-19

020.6.8	Joystick steering control valve block <i>L586-1334/0-51486;</i>	020-20
020.6.9	Joystick steering control valve block <i>L586-1334/51487-;</i>	020-20
020.7	Brake system	020-21
020.7.1	Brake pump <i>L586-1334;</i>	020-21
020.7.2	Compact brake valve <i>L586-1334;</i>	020-21
020.7.3	Service brake hydro accumulator <i>L586-1334;</i>	020-21
020.7.4	Brake light pressure switch B12 <i>L586-1334;</i>	020-21
020.7.5	Brake accumulator pressure sensor B19 <i>L586-1334;</i>	020-22
020.7.6	Parking brake hydro accumulator <i>L586-1334;</i>	020-22
020.8	Electrical system	020-23
020.8.1	Central control unit (Master 4) <i>L586-1334;</i>	020-23
020.8.2	Input module <i>L586-1334;</i>	020-23
020.8.3	Output module <i>L586-1334;</i>	020-23
020.8.4	Battery <i>L586-1334;</i>	020-24
020.8.5	Voltage transformer <i>L586-1334;</i>	020-24
020.8.6	Reversing camera <i>L586-1334;</i>	020-24
020.9	Gearbox	020-26
020.9.1	Transmission <i>L586-1334;</i>	020-26
020.9.2	Filter bypass switch B85 <i>L586-1334;</i>	020-26
020.9.3	Proportional solenoid for gear shifting Y1, Y2, Y3, Y4, Y5, Y6 <i>L586-1334;</i>	020-26
020.9.4	Pressure sensor for hydrostat B80, B81 <i>L586-1334;</i>	020-27
020.9.5	Speed sensor B82, B83, B84 <i>L586-1334;</i>	020-27
020.9.6	Transmission oil temperature sensor B86 <i>L586-1334;</i>	020-27

020.9.7	Proportional solenoid for position control Y7 <i>L586-1334;</i>	020-28
020.10	Axles and drive shafts	020-29
020.10.1	Front axle <i>L586-1334;</i>	020-29
020.10.2	Rear axle <i>L586-1334;</i>	020-29
020.10.3	Drive shaft between diesel engine and transmission <i>L586-1334;</i>	020-29
020.10.4	Drive shaft between transmission and front axle <i>L586-1334;</i>	020-30
020.10.5	Cardan shaft between transmission and rear axle <i>L586-1334;</i>	020-30
020.10.6	Tyres <i>L586-1334;</i>	020-30
	020.10.6.2 Special tyres	020-31
020.11	Steel parts of the basic machine	020-32
020.11.1	Ballast weights <i>L586-1334;</i>	020-32
	020.11.1.1 Standard (Z kinematics)	020-32
	020.11.1.2 Foam-filled tyres or tracks	020-32
020.12	Working attachment	020-33
020.12.1	Quick coupler locking hydraulic cylinder <i>L586-1334;</i>	020-33
020.13	Operator's cab, heating and air conditioning	020-34
	020.13.1.1 Air conditioning compressor	020-34
020.13.2	Air conditioning pressure switch <i>L586-1334;</i>	020-34
020.14	Lubrication system	020-35
020.14.1	Central lubrication system (Liebherr) <i>L586-1334;</i>	020-35
	020.14.1.1 Central lubrication pump	020-35
	020.14.1.2 Progressive distributor	020-35
020.14.2	Progressive distributor SXE-2 <i>L586-1334;</i>	020-36
	020.14.2.1 SXE-2 / MX-F	020-36
	020.14.2.2 SXE-2 100	020-36
	020.14.2.3 SXE-2 150	020-37
	020.14.2.4 SXE-2 220	020-37
	020.14.2.5 SXE-2 400	020-37

020.14.2.6	SXE-2 760	020-37
------------	-----------	--------

030	Maintenance	030-1
030.1	Maintenance and inspection schedule	030-10
030.2	Filling quantities and lubrication chart	030-15
030.2.1	Recommended lubricants <i>L586-1334;</i>	030-15
030.2.2	Recommended operating fluids <i>L586-1334;</i>	030-16
030.3	Lubricants and fuels	030-17
030.3.1	General information on changing lubricants and fuels	030-17
030.3.2	Converting hydraulic system from mineral oils to biodegradable hydraulic fluids	030-17
030.3.3	Diesel fuels <i>L586-1334;</i>	030-18
030.3.3.1	Minimum quality requirement	030-18
030.3.3.2	Operating temperatures of diesel fuels	030-18
030.3.3.3	Minimum quality requirement	030-18
030.3.4	Diesel fuels for diesel engines without emission-type approval <i>L586-1334;</i>	030-18
030.3.4.1	Minimum quality requirement	030-18
030.3.4.2	Operating temperatures of diesel fuels	030-19
030.3.4.3	Minimum quality requirement	030-19
030.3.5	Diesel exhaust fluid <i>L586-1334;</i>	030-19
030.3.5.1	Liebherr recommendation	030-19
030.3.5.2	Minimum quality requirement	030-19
030.3.6	Engine oils <i>L586-1334;</i>	030-20
030.3.6.1	Liebherr recommendation	030-20
030.3.6.2	Other approved engine oils	030-20
030.3.6.3	Minimum quality requirement	030-20
030.3.6.4	Changing intervals	030-21
030.3.6.5	Complicating factors	030-21
030.3.7	Engine oils for diesel engines without emission-type approval <i>L586-1334;</i>	030-21
030.3.7.1	Liebherr recommendation	030-21
030.3.7.2	Other approved engine oils	030-21
030.3.7.3	Minimum quality requirement	030-22

	030.3.7.4	Changing intervals	030-22
	030.3.7.5	Complicating factors	030-22
030.3.8	Refrigerant <i>L586-1334;</i>		030-22
030.3.9	Coolant <i>L586-1334;</i>		030-23
	030.3.9.1	Requirements for the water used	030-23
	030.3.9.2	Antifreeze and corrosion inhibitor	030-23
	030.3.9.3	Minimum quality requirement	030-23
030.3.10	Hydraulic oil <i>L586-1334;</i>		030-23
	030.3.10.1	Liebherr recommendation	030-23
	030.3.10.2	Minimum quality requirement	030-24
	030.3.10.3	Oil analysis	030-24
	030.3.10.4	Oil change	030-24
030.3.11	Splitter box oil <i>L586-1334;</i>		030-25
	030.3.11.1	Liebherr recommendation	030-25
	030.3.11.2	Minimum quality requirements	030-25
030.3.12	Gear oil <i>L586-1334;</i>		030-25
	030.3.12.1	Liebherr recommendation	030-25
	030.3.12.2	Minimum quality requirement	030-25
030.3.13	Axle oil <i>L586-1334;</i>		030-26
	030.3.13.1	Liebherr recommendation	030-26
	030.3.13.2	Minimum quality requirement	030-26
030.3.14	Lubrication grease <i>L586-1334;</i>		030-26
	030.3.14.1	Liebherr recommendation	030-26
	030.3.14.2	Minimum quality requirement	030-26
030.4	Maintenance tasks		030-27
030.4.1	Safety precautions <i>L586-1334;</i>		030-27
030.4.2	Preparatory tasks for maintenance		030-27
	030.4.2.1	Maintenance positions <i>L586-1334;</i>	030-28
	030.4.2.2	Opening the service hatches <i>L586-1334;</i>	030-29

030.4.2.3	Turning off the battery main switch <i>L586-1334/0-54471;</i>	030-33
030.4.2.4	Turning off the battery main switch <i>L586-1334/54472-;</i>	030-34
030.4.3	Overall machine	030-35
030.4.3.1	Checking machine is in proper condition <i>L586-1334;</i>	030-35
030.4.3.2	Removing loose parts, dirt, ice and snow from machine <i>L586-1334;</i>	030-37
030.4.3.3	Cleaning machine <i>L586-1334;</i>	030-37
030.4.3.4	Changing the VCI-capsules <i>L586-1334;</i>	030-40
030.4.3.5	Operating fluid analysis: General specifications <i>L586-1334;</i>	030-43
030.4.3.6	Operating fluid analysis: filling out sample information form <i>L586-1334;</i>	030-46
030.4.3.7	Fuel and operating fluid analysis: scope of analysis <i>L586-1334;</i>	030-52
030.4.3.8	Analysis of lubricants and fuels <i>L586-1334;</i>	030-56
030.4.4	Drive group	030-63
030.4.4.1	Checking diesel engine oil level <i>L586-1334;</i>	030-63
030.4.4.2	Diesel engine: changing diesel engine oil <i>L586-1334;</i>	030-66
030.4.4.3	Diesel engine: Changing the oil filter <i>L586-1334;</i>	030-69
030.4.4.4	Checking diesel engine belt drive <i>L586-1334;</i>	030-70
030.4.4.5	Changing diesel engine belt drive <i>L586-1334;</i>	030-71
030.4.4.6	Engine: Checking the fastening of the engine control units and the sensor cable connections <i>L586-1334;</i>	030-72
030.4.4.7	Checking diesel engine valve clearance <i>L586-1334;</i>	030-73
030.4.4.8	Diesel engine: Changing the oil separator filter insert <i>L586-1334;</i>	030-75
030.4.4.9	Diesel engine: Changing the heating flange <i>L586-1334;</i>	030-75
030.4.4.10	Fuel tank: Draining off condensate and sediment <i>L586-1334;</i>	030-76

030.4.4.11	Fuel pre-filter: Draining off condensate <i>L586-1334;</i>	030-77
030.4.4.12	Changing fuel pre-filter cartridge <i>L586-1334;</i>	030-78
030.4.4.13	Changing fuel fine filter element <i>L586-1334;</i>	030-81
030.4.4.14	Diesel exhaust fluid tank: checking ventilation <i>L586-1334;</i>	030-84
030.4.4.15	Air filter system: Cleaning the service cover and dust discharge valve <i>L586-1334;</i>	030-85
030.4.4.16	Cleaning or changing the main element of the air filter system <i>L586-1334;</i>	030-86
030.4.4.17	Air filter system: Changing the safety element <i>L586-1334;</i>	030-89
030.4.4.18	Dust protection for alternator (option): cleaning or replacing filter element <i>L586-1334;</i>	030-90
030.4.4.19	Splitter box: Checking the oil level <i>L586-1334;</i>	030-93
030.4.4.20	Splitter box: Changing the oil <i>L586-1334;</i>	030-94
030.4.4.21	Diesel engine: Checking that the intake and exhaust system is in good condition and not loose or leaking <i>L586-1334;</i>	030-96
030.4.4.22	Checking the diesel engine for leaks, contamination and damage <i>L586-1334;</i>	030-100
030.4.4.23	Diesel particulate filter: Cleaning filter module <i>L586-1334;</i>	030-101
030.4.4.24	Changing the compressed air dryer <i>L586-1334;</i>	030-102
030.4.4.25	Checking compressed air system <i>L586-1334;</i>	030-104
030.4.5	Cooling system	030-105
030.4.5.1	Cooling system: Checking the coolant level <i>L586-1334;</i>	030-105
030.4.5.2	Coolant: checking anti-freeze and corrosion protection agent concentration <i>L586-1334;</i>	030-106
030.4.5.3	Cleaning the cooling system <i>L586-1334;</i>	030-113
030.4.5.4	Changing coolant in cooling system <i>L586-1334;</i>	030-114
030.4.6	Hydraulic components	030-117

030.4.6.1	Hydraulic tank: checking oil level <i>L586-1334;</i>	030-117
030.4.6.2	Draining off condensate and sediment from the hydraulic tank <i>L586-1334;</i>	030-119
030.4.6.3	Change the return filter insert in the hydraulic tank. <i>L586-1334;</i>	030-120
030.4.6.4	Changing the hydraulic tank breather filter <i>L586-1334;</i>	030-121
030.4.6.5	Changing the oil in the hydraulic tank <i>L586-1334;</i>	030-122
030.4.7	Steering system	030-125
030.4.7.1	Test steering. <i>L586-1334;</i>	030-125
030.4.8	Brake system	030-126
030.4.8.1	Service brake: checking function and effectiveness <i>L586-1334;</i>	030-126
030.4.8.2	Checking service brake discs for wear <i>L586-1334;</i>	030-127
030.4.8.3	Checking the gap and wear on the parking brake linings <i>L586-1334;</i>	030-129
030.4.8.4	Emergency actuation of parking brake: checking the seal <i>L586-1334;</i>	030-135
030.4.8.5	Checking emergency parking brake actuation <i>L586-1334;</i>	030-135
030.4.9	Electrical system	030-136
030.4.9.1	Checking function of the lighting and horn <i>L586-1334;</i>	030-136
030.4.9.2	Batteries: Checking the acid level and terminals <i>L586-1334;</i>	030-137
030.4.9.3	Use the control lever to change the travel direction switch rocker and cap. <i>L586-1334;</i>	030-139
030.4.9.4	Personnel detection: cleaning sensor <i>L586-1334;</i>	030-142
030.4.10	Gearbox	030-142
030.4.10.1	Transmission: checking the oil level <i>L586-1334;</i>	030-142
030.4.10.2	Changing gear oil and gear oil filter <i>L586-1334;</i>	030-145
030.4.10.3	Change the transmission hydrostat oil filter. <i>L586-1334;</i>	030-149

030.4.11	Axles and drive shafts	030-150
030.4.11.1	Axles Changing the oil <i>L586-1334;</i>	030-150
030.4.11.2	Checking drive shafts <i>L586-1334;</i>	030-152
030.4.11.3	Checking the tyre pressure <i>L586-1334;</i>	030-154
030.4.11.4	Checking the wheel tightness <i>L586-1334;</i>	030-155
030.4.12	Steel parts of the basic machine	030-156
030.4.12.1	Cooler hood: Lubricating moving parts with penetrating oil <i>L586-1334;</i>	030-156
030.4.12.2	Engine hood: Lubricating moving parts with penetrating oil <i>L586-1334;</i>	030-156
030.4.12.3	Right cab access: Lubricating moving parts with penetrating oil <i>L586-1334;</i>	030-157
030.4.12.4	Service hatches: cleaning and maintaining seals <i>L586-1334;</i>	030-158
030.4.13	Working attachment	030-158
030.4.13.1	Lift arms: Checking the bucket bearing seals <i>L586-1334;</i>	030-158
030.4.13.2	Lift arms: checking bucket bearing bushings <i>L586-1334;</i>	030-159
030.4.13.3	Checking the lift arm bucket stops <i>L586-1334;</i>	030-160
030.4.13.4	Bucket: Check the teeth or undercut blade for wear and replace if necessary <i>L586-1334;</i>	030-162
030.4.13.5	Lubricate and test the bearings on the quick coupler. <i>L586-1334;</i>	030-165
030.4.13.6	High dump bucket: Lubricating the bearing <i>L586-1334;</i>	030-166
030.4.14	Operator's cab, heating and air conditioning	030-166
030.4.14.1	Operator's cab: cleaning the fresh and recirculated air filters <i>L586-1334;</i>	030-166
030.4.14.2	Operator's cab: changing fresh air filter and recirculated air filters <i>L586-1334;</i>	030-167
030.4.14.3	Safety belt: Checking the condition and function <i>L586-1334;</i>	030-169

030.4.14.4	Testing the windscreen washer system <i>L586-1334;</i>	030-170
030.4.14.5	Windscreen washer system: filling windscreen washer fluid <i>L586-1334;</i>	030-170
030.4.14.6	Cab: Lubricating the lock and cylinder with penetrating oil <i>L586-1334;</i>	030-171
030.4.14.7	Operator's cab: cleaning and maintaining seals <i>L586-1334;</i>	030-171
030.4.14.8	Heating and air conditioning: Checking the function <i>L586-1334;</i>	030-172
030.4.15	Lubrication system	030-173
030.4.15.1	Checking the level in the grease reservoir of the central lubrication system <i>L586-1334;</i>	030-173
030.4.15.2	Central lubrication system: Checking the pipes, hoses and lubrication points for leaks and damage <i>L586-1334;</i>	030-174
030.4.15.3	Central lubrication system: Checking the lubrication of the bearings <i>L586-1334;</i>	030-175
030.5	Testing and adjustment checklist <i>L586-1334;</i>	030-176
030.6	Testing and adjustment tasks	030-181
030.6.1	Safety precautions <i>L586-1334;</i>	030-181
030.6.2	Overall machine	030-181
030.6.2.1	Preparing for adjustment procedures <i>L586-1334;</i>	030-181
030.6.2.2	Hydraulic oil: operating temperature <i>L586-1334;</i>	030-183
030.6.2.3	Gear oil operating temperature <i>L586-1334;</i>	030-184
030.6.3	Drive group	030-184
030.6.3.1	Pedals: calibration <i>L586-1334;</i>	030-184
030.6.3.2	Reading the diesel engine service files <i>L586-1334;</i>	030-186
030.6.4	Cooling system	030-187
030.6.4.1	Fan speed proportional solenoid valve <i>L586-1334;</i>	030-187
030.6.5	Working hydraulics	030-189

030.6.5.1	Multi-lever control (option): calibration <i>L586-1334;</i>	030-189
030.6.5.2	Calibrating working hydraulics angle sensors <i>L586-1334;</i>	030-191
030.6.5.3	Calibrating proportional solenoids in control valve block <i>L586-1334;</i>	030-195
030.6.5.4	Pilot control valve block: pressure reducing valve <i>L586-1334;</i>	030-198
030.6.5.5	Working pump: adjusting screw for Qmin (standby pressure) <i>L586-1334;</i>	030-199
030.6.5.6	Working pump flow regulator (differential pressure) <i>L586-1334;</i>	030-200
030.6.5.7	Working pump: power regulator <i>L586-1334;</i>	030-202
030.6.5.8	Control valve block: secondary pressure relief valves <i>L586-1334;</i>	030-204
030.6.5.9	Control valve block: primary pressure relief valve <i>L586-1334;</i>	030-206
030.6.5.10	Control valve block: LS pressure cut-off valve <i>L586-1334;</i>	030-208
030.6.5.11	Stabilisation module: Cut-off function <i>L586-1334;</i>	030-210
030.6.5.12	Ride control hydro accumulator nitrogen filling <i>L586-1334;</i>	030-211
030.6.6	Hydraulic components	030-212
030.6.6.1	Hydro accumulator: checking and topping up nitrogen filling <i>L586-1334;</i>	030-212
030.6.6.2	Checking the hydraulic lines for damage <i>L586-1334;</i>	030-213
030.6.7	Steering system	030-218
030.6.7.1	Joystick for joystick steering (option): calibration <i>L586-1334/55878-;</i>	030-218
030.6.7.2	Angle sensor for articulation angle (option): calibration <i>L586-1334;</i>	030-218
030.6.7.3	Control block for joystick steering (option): calibration <i>L586-1334;</i>	030-220
030.6.7.4	Steering pump: LS pressure cut-off valve <i>L586-1334;</i>	030-221
030.6.7.5	Steering pump flow regulator (standby pressure) <i>L586-1334;</i>	030-223

	030.6.7.6	Steering pump: flow regulator (differential pressure) (up to software version 020) <i>L586-1334;</i>	030-224
	030.6.7.7	Steering pump: flow regulator (differential pressure) (from software version 024) <i>L586-1334;</i>	030-226
	030.6.7.8	Steering damper hydro accumulator nitrogen filling <i>L586-1334;</i>	030-228
030.6.8	Brake system		030-229
	030.6.8.1	Brake accumulator pressure sensor B19: deviation <i>L586-1334;</i>	030-229
	030.6.8.2	Compact brake valve hydro accumulator charging function <i>L586-1334;</i>	030-230
	030.6.8.3	Service brake pressure <i>L586-1334;</i>	030-231
	030.6.8.4	Service brake hydro accumulator capacity <i>L586-1334;</i>	030-232
030.6.9	Electrical system		030-233
	030.6.9.1	Central control unit (Master4) Creating a Servicefile <i>L586-1334;</i>	030-233
	030.6.9.2	Central control unit (Master4): software update <i>L586-1334;</i>	030-237
	030.6.9.3	Setting the IP addresses of the central control unit (Master4) <i>L586-1334;</i>	030-240
	030.6.9.4	Resetting the central control unit (Master4) <i>L586-1334;</i>	030-243
	030.6.9.5	Testing CAN line <i>L586-1334;</i>	030-244
	030.6.9.6	Addressing CAN module and checking system infor- mation <i>L586-1334;</i>	030-247
030.6.10	Gearbox		030-251
	030.6.10.1	Gearbox: basic calibration <i>L586-1334;</i>	030-251
	030.6.10.2	Gearbox: service calibration <i>L586-1334;</i>	030-253
	030.6.10.3	Travel gearbox: Check power output <i>L586-1334;</i>	030-256
	030.6.10.4	Transmission: Reversing test <i>L586-1334;</i>	030-259
	030.6.10.5	Transmission control unit (TCU): Software update <i>L586-1334;</i>	030-261
030.6.11	Axles and drive shafts		030-264

030.6.11.1	Tyres: setting radius <i>L586-1334;</i>	030-264
030.6.12	Working attachment	030-265
030.6.12.1	Valve block for quick coupler (option): Pressure reducing valve <i>L586-1334;</i>	030-265
030.6.12.2	Parameters for lift arm geometry <i>L586-1334;</i>	030-266
030.6.12.3	Working attachment: automatic return of 1st additional function <i>L586-1334;</i>	030-267
030.6.13	Operator's cab, heating and air conditioning	030-268
030.6.13.1	Checking pressure and temperature conditions of air conditioning unit <i>L586-1334;</i>	030-268
030.6.13.2	Calibrating the display (Display4) <i>L586-1334;</i>	030-269
030.6.13.3	Formatting the display and reinstalling the software (Display4) <i>L586-1334;</i>	030-271
030.6.14	Options	030-272
030.6.14.1	Checking the LiDAT connection status <i>L586-1334;</i>	030-272
030.6.14.2	LiDAT: activating data transmission manually <i>L586-1334;</i>	030-274
030.6.14.3	Liebherr weighing device with Truck Payload Assist: calibration <i>L586-1334/54472-;</i>	030-276
030.6.14.4	Personnel detection: transmitting configuration files <i>L586-1334;</i>	030-276
040	Drive group	040-1
040.1	Engine	040-3
040.1.2	Electrical components of diesel engine <i>L586-1334;</i>	040-7
040.1.3	Sensors on diesel engine <i>L586-1334;</i>	040-11
040.1.4	Ambient temperature sensor <i>L586-1334;</i>	040-22
040.1.5	Fuel system	040-24
040.1.5.2	Fuel level sensor <i>L586-1334;</i>	040-28
040.1.5.3	Separ fuel pre-filter <i>L586-1334;</i>	040-30

040.1.6	Air filter system	040-30
040.1.6.1	Air filter <i>L586-1334;</i>	040-31
040.1.6.2	Air mass sensor <i>L586-1334;</i>	040-32
040.1.7	Exhaust system	040-33
040.1.7.1	Overview of exhaust gas treatment system <i>L586-1334;</i>	040-33
040.1.7.2	Metering unit <i>L586-1334;</i>	040-38
040.1.7.3	Sampling module <i>L586-1334;</i>	040-41
040.1.7.4	Exhaust treatment sensors <i>L586-1334;</i>	040-42
040.1.7.5	Exhaust gas treatment with diesel particulate filter (option) <i>L586-1334;</i>	040-44
040.1.8	Compressed air system	040-47
040.1.8.1	Overview of the compressed air system <i>L586-1334;</i>	040-48
040.1.8.2	Compressor <i>L586-1334;</i>	040-50
040.1.8.3	Air dryer <i>L586-1334;</i>	040-51
040.1.8.4	SCR system air supply valve <i>L586-1334;</i>	040-52
040.2	Clutch <i>L586-1334;</i>	040-53
040.3	Splitter box <i>L586-1334;</i>	040-55
050	Cooling system	050-1
050.1	Cooling system: General overview <i>L586-1334;</i>	050-2
050.2	Cooling system hydraulics	050-3
050.2.1	Overview of cooling system hydraulics <i>L586-1334;</i>	050-4
050.2.2	Fan pump <i>L586-1334;</i>	050-8
050.2.3	Fan motor <i>L586-1334;</i>	050-9
050.3	Cooling system electronics	050-13

050.3.1	Overview of electrical control system of cooling system <i>L586-1334;</i>	050-13
050.3.2	Hydraulic oil temperature sensor <i>L586-1334;</i>	050-16
050.4	Cooler	050-18
050.4.1	Cooler unit <i>L586-1334;</i>	050-18
050.5	Reversible fan drive	050-19
050.5.1	Overview of reversible fan drive <i>L586-1334;</i>	050-19
050.5.2	Fan reversal valve block <i>L586-1334;</i>	050-21
060	Working hydraulics	060-1
060.1	Overview of Z-bar kinematics working hydraulics <i>L586-1334;</i>	060-2
060.2	Working pump <i>L586-1334;</i>	060-7
060.3	Control block for Z-bar kinematics <i>L586-1334;</i>	060-15
060.4	Pilot control	060-24
060.4.1	Pilot control valve block <i>L586-1334;</i>	060-24
060.5	Ride control	060-26
060.5.1	Overview of ride control system <i>L586-1334;</i>	060-26
060.5.2	Stabilisation module <i>L586-1334;</i>	060-29
060.5.3	Electric ride control unit <i>L586-1334;</i>	060-31
060.6	Electronics of the working hydraulics	060-33
060.6.1	Overview of electrical controls the working hydraulics <i>L586-1334;</i>	060-33
060.6.2	Working hydraulics angle sensors <i>L586-1334;</i>	060-35
060.6.3	Pressure sensors for lift cylinders and tilt cylinders <i>L586-1334/54472-;</i>	060-37
060.7	Pipe break protection	060-39
060.7.1	Pipe break protection: overview <i>L586-1334;</i>	060-39
060.7.2	Pipe break protection valve block (lift cylinder) <i>L586-1334;</i>	060-42

060.7.3	Pipe break protection valve block (tilt cylinder) <i>L586-1334;</i>	060-44
060.7.4	Ride control release solenoid valve <i>L586-1334;</i>	060-45
080	Hydraulic components	080-1
080.1	Hydraulic system: overview <i>L586-1334/0-50692;</i>	080-2
080.2	Hydraulic system: overview <i>L586-1334/50693-;</i>	080-6
080.3	Hydraulic tank	080-10
080.3.1	Overview of hydraulic tank <i>L586-1334;</i>	080-10
080.3.2	Steel tank <i>L586-1334;</i>	080-12
080.3.3	Return filter <i>L586-1334;</i>	080-14
080.3.4	Leak oil strainer <i>L586-1334;</i>	080-15
080.3.5	Breather filter <i>L586-1334;</i>	080-15
090	Steering system	090-1
090.1	Steering system overview <i>L586-1334/0-50692;</i>	090-3
090.2	Steering system overview <i>L586-1334/50693-;</i>	090-7
090.3	Steering pump <i>L586-1334;</i>	090-11
090.4	Servostat <i>L586-1334;</i>	090-17
090.5	Steering cylinder	090-20
090.5.1	Steering cylinder <i>L586-1334;</i>	090-20
090.5.2	Steering stabilisation valve block <i>L586-1334/0-50692;</i>	090-21
090.5.3	Steering stabilisation valve block <i>L586-1334/50693-;</i>	090-23
090.6	Emergency steering	090-25
090.6.1	Emergency steering overview <i>L586-1334;</i>	090-25
090.6.2	Emergency steering pump <i>L586-1334;</i>	090-27

090.6.3	Emergency steering electronics	090-28
090.6.3.1	Overview of electrical controls of emergency steering system <i>L586-1334;</i>	090-29
090.6.3.2	Emergency steering pressure switch <i>L586-1334;</i>	090-33
090.6.3.3	Emergency steering check pressure switch <i>L586-1334;</i>	090-34
090.7	Joystick steering	090-36
090.7.1	Overview of joystick steering <i>L586-1334/0-50692;</i>	090-36
090.7.2	Overview of joystick steering <i>L586-1334/50693-51486;</i>	090-40
090.7.3	Overview of joystick steering <i>L586-1334/51487-;</i>	090-43
090.7.4	Joystick steering control valve block <i>L586-1334/0-51486;</i>	090-46
090.7.5	Joystick steering control valve block <i>L586-1334/51487-;</i>	090-52
090.7.6	Joystick steering electrical system	090-58
090.7.6.1	Electronic control unit for joystick steering: overview <i>L586-1334/0-51486;</i>	090-58
090.7.6.2	Electronic control unit for joystick steering: overview <i>L586-1334/51487-55877;</i>	090-64
090.7.6.3	Electronic control unit for joystick steering: overview <i>L586-1334/55878-;</i>	090-71
090.7.6.4	Joystick with position tracking <i>L586-1334/55878-;</i>	090-79
090.8	2in1 steering	090-81
090.8.1	2in1 steering: total overview <i>L586-1334/0-50692;</i>	090-81
090.8.2	2in1 steering: total overview <i>L586-1334/50693-;</i>	090-83
090.8.3	Servostat for 2in1 steering <i>L586-1334;</i>	090-86
100	Brake system	100-1
100.1	Overview of brake system <i>L586-1334;</i>	100-2
100.2	Service brake and parking brake	100-7
100.2.1	Brake pump <i>L586-1334;</i>	100-7

100.2.2	Compact brake valve <i>L586-1334;</i>	100-8
100.3	Parking brake	100-16
100.3.1	Parking brake <i>L586-1334;</i>	100-16
110	Electrical system	110-1
110.1	Overview of electrical system <i>L586-1334/0-54471;</i>	110-3
110.2	Overview of electrical system <i>L586-1334/54472-;</i>	110-7
110.3	Lighting <i>L586-1334;</i>	110-11
110.4	Circuit diagrams <i>L586-1334;</i>	110-12
110.5	Electronic control unit	110-14
110.5.1	General overview of electronic control system <i>L586-1334;</i>	110-14
110.5.2	Central control unit (Master4) <i>L586-1334;</i>	110-16
110.5.3	Modules	110-20
110.5.3.1	Overview of the input and output modules <i>L586-1334;</i>	110-21
110.5.3.2	Input modules <i>L586-1334;</i>	110-23
110.5.3.3	Output modules <i>L586-1334;</i>	110-25
110.6	Electrical components of the driver's cab	110-28
110.6.1	Electrical components of the cab General overview <i>L586-1334;</i>	110-28
110.6.2	Fuse and relay boards <i>L586-1334;</i>	110-29
110.6.3	Door contact switch <i>L586-1334/0-46488;</i>	110-34
110.6.4	Door contact switch (inductive sensor) <i>L586-1334/46489-;</i>	110-35
110.7	Electrical components in the rear section	110-36
110.7.1	Battery installation <i>L586-1334;</i>	110-36
110.7.2	Electric battery main switch <i>L586-1334/54472-;</i>	110-38
110.8	Rear area monitoring with camera	110-42

110.8.1	Rear area monitoring with camera: General overview <i>L586-1334;</i>	110-42
110.8.2	Camera <i>L586-1334;</i>	110-43
120	Gearbox	120-1
120.1	Overview of transmission <i>L586-1334;</i>	120-2
120.2	Transmission hydraulics	120-16
120.2.1	Overview of transmission hydraulics <i>L586-1334;</i>	120-16
120.2.2	Gear pump <i>L586-1334;</i>	120-20
120.2.3	Transmission control valve block <i>L586-1334;</i>	120-21
120.2.4	Hydrostat module <i>L586-1334;</i>	120-24
120.3	Transmission electronics	120-29
120.3.1	Overview of the electrical control system of the transmission <i>L586-1334;</i>	120-29
120.3.2	Filter bypass switch <i>L586-1334;</i>	120-30
120.3.3	Gear shifting proportional solenoid <i>L586-1334;</i>	120-31
120.3.4	Pressure sensor for hydrostat <i>L586-1334;</i>	120-32
120.3.5	Engine speed sensor <i>L586-1334;</i>	120-33
120.3.6	Temperature sensor <i>L586-1334;</i>	120-34
120.3.7	Proportional solenoid for position control <i>L586-1334;</i>	120-34
130	Axles and drive shafts	130-1
130.1	Axles	130-2
130.1.1	Front axle <i>L586-1334;</i>	130-2
130.1.2	Rear axle <i>L586-1334;</i>	130-7
130.2	Cardan shafts	130-9
130.2.1	Drive shaft between diesel engine and transmission <i>L586-1334;</i>	130-9

130.2.2	Drive shaft between transmission and front axle <i>L586-1334;</i>	130-10
130.2.3	Drive shaft between transmission and rear axle <i>L586-1334;</i>	130-11
140	Steel parts of the basic machine	140-1
140.1	Vehicle frame	140-2
140.1.1	Articulation bearing <i>L586-1334;</i>	140-2
140.1.2	Articulation lock <i>L586-1334;</i>	140-3
140.2	Covering	140-4
140.2.1	Linear motor for opening the engine hood <i>L586-1334;</i>	140-4
150	Working attachment	150-1
150.1	Lift arms for Z kinematics	150-2
150.1.1	Z kinematics <i>L586-1334;</i>	150-2
150.2	Quick coupler	150-4
150.2.1	Quick coupler <i>L586-1334;</i>	150-4
150.2.2	Quick coupler hydraulics	150-5
150.2.2.1	Overview of the quick coupler hydraulics <i>L586-1334/0-51252;</i>	150-5
150.2.2.2	Overview of quick coupler hydraulics <i>L586-1334/51253-;</i>	150-7
150.2.2.3	Valve block for quick coupler <i>L586-1334;</i>	150-9
150.2.3	Quick coupler electrics	150-11
150.2.3.1	Quick coupler electric control unit <i>L586-1334;</i>	150-11
160	Operator's cab, heating and air conditioning	160-1
160.1	Overview of operator's cab, heating and air conditioning unit <i>L586-1334;</i>	160-3
160.2	Display and control elements	160-5
160.2.1	Electrical components in the control panel	160-5
160.2.1.1	Control unit <i>L586-1334;</i>	160-5
160.2.2	Touch screen display <i>L586-1334;</i>	160-7

160.2.3	Control lever <i>L586-1334;</i>	160-8
160.2.4	Accelerator pedal <i>L586-1334;</i>	160-10
160.3	Heating, ventilation, air conditioning	160-12
160.3.1	Heating, ventilation, air conditioning: General overview <i>L586-1334;</i>	160-12
160.3.2	Heating and air conditioning unit	160-17
160.3.2.1	Heating and air conditioning unit <i>L586-1334;</i>	160-18
160.3.2.2	Blower <i>L586-1334;</i>	160-22
160.3.3	Air conditioning controller <i>L586-1334;</i>	160-23
160.4	Air conditioning	160-26
160.4.1	Basic function of the air conditioning unit <i>L586-1334;</i>	160-26
160.4.2	Air conditioning compressor <i>L586-1334;</i>	160-27
160.4.3	Condenser <i>L586-1334;</i>	160-29
160.4.4	Dryer <i>L586-1334;</i>	160-30
160.4.5	Air conditioning pressure switch <i>L586-1334;</i>	160-31
170	Lubrication system	170-1
170.1	Liebherr automatic central lubrication system	170-2
170.1.1	Liebherr automatic central lubrication system: General overview <i>L586-1334;</i>	170-2
170.1.2	Liebherr central lubrication pump <i>L586-1334;</i>	170-6
170.1.3	Progressive distributor MX-F <i>L586-1334;</i>	170-10
170.1.4	Progressive distributor SXE-2 <i>L586-1334;</i>	170-12
190	Options	190-1
190.1	Diesel engine without emission type approval <i>L586-1334;</i>	190-2
190.2	LiDAT	190-4
190.2.1	Overview of LiDAT <i>L586-1334;</i>	190-4

190.2.2	LiDAT on machine <i>L586-1334;</i>	190-6
190.2.3	LiDAT module (LiTU2) <i>L586-1334;</i>	190-7
190.3	Weighing device (Liebherr) <i>L586-1334/0-54471;</i>	190-10
190.4	Liebherr weighing device with Truck Payload Assist <i>L586-1334/54472-;</i>	190-16
190.5	Skyview 360°	190-18
190.5.1	Skyview 360°: complete overview <i>L586-1334;</i>	190-18
190.5.2	Skyview 360° on machine <i>L586-1334;</i>	190-22
190.6	Remote control for door lock <i>L586-1334;</i>	190-23
190.7	Personnel detection <i>L586-1334;</i>	190-26
200	Diagnosis	200-1
200.1	Malfunctions	200-2
200.1.1	Warning symbols	200-2
200.1.2	SCR system warning symbols	200-3
200.1.3	Service code indicator in display	200-3
200.2	Troubleshooting	200-6
200.2.1	Replacing fuses	200-6
200.2.1.1	Fuses on fuse board A4 in the operator's cab	200-6
200.2.1.2	Fuses on fuse board A4a in the left ballast weight	200-9
200.2.1.3	Fuses on fuse board A4b in the operator's cab	200-11

LBH12200849/20/211-20210127_084457/en

010 Introduction

Contents

010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14

	010.1.6.1	Intoxicants	010-14
	010.1.6.2	Dangerous fuels and operating fluids	010-14
	010.1.6.3	Transporting machine	010-15
	010.1.6.4	Access to machine	010-15
	010.1.6.5	Machine danger zone	010-16
	010.1.6.6	Visibility	010-16
	010.1.6.7	Protection against vibration	010-17
	010.1.6.8	Operation of machine	010-18
010.1.7		Safe maintenance	010-21
	010.1.7.1	Spare parts	010-21
	010.1.7.2	Heavy parts	010-21
	010.1.7.3	Regular checks	010-22
010.1.8		Modifications to the machine	010-22
	010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2		Special tools for maintenance and repair work	010-23
	010.2.1	Special tools, general	010-23
	010.2.2	Special tools for the diesel engine	010-25
	010.2.3	Special tools for lift cylinders with Z kinematics	010-29
	010.2.4	Special tools for tilt cylinders with Z kinematics	010-29
	010.2.5	Special tools for steering wheel	010-30
	010.2.6	Special tools for steering cylinders	010-30
	010.2.7	Special tools for brake system	010-31
	010.2.8	Special tools for the electrical system	010-31
	010.2.9	Special tools for the transmission	010-32
	010.2.10	Special tools for front axle	010-33
	010.2.11	Special tools for rear axle	010-33
	010.2.12	Special tools for air conditioning system	010-34
	010.2.13	Special tools for Grammer driver's seat	010-35
	010.2.14	Special tools for cab glazing	010-36
	010.2.15	Special tools for the central lubrication system (Liebherr)	010-36
010.3		Standards and regulations	010-37
	010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-37
	010.3.1.1	Range of application and purpose	010-37
	010.3.1.2	Other applicable documents	010-37


010.3.1.3	Modifications and descriptions	010-38
010.3.1.4	Tightening torques	010-38
010.3.2	Liebherr standards for assembly instructions and tightening torques	010-44
010.4	Preservation guidelines	010-45
010.4.1	General information	010-45
010.4.2	Machine out of service for an unknown period of time	010-45
010.4.3	Putting the machine out of service	010-46
010.4.3.1	Out of service for up to 2 months	010-46
010.4.3.2	Out of service for up to 12 months	010-47
010.4.3.3	Out of service for longer than 12 months	010-48
010.4.4	Putting back into service	010-48
010.4.4.1	After being out of service for 2 months	010-48
010.4.4.2	After being out of service for 12 months	010-49
010.4.4.3	After being out of service for longer than 12 months	010-49
010.5	Preservation guidelines for the SCR system	010-50
010.5.1	Putting out of service for longer than 2 months	010-50
010.5.2	Starting up after being out of service for longer than 2 months	010-50

010.1 Safety instructions

010.1.1 Information on these instructions

010.1.1.1 Representation of warning messages

Warning symbol

	Warning symbol warns of potential dangers. Obey all measures marked with this symbol to avoid injury or death.
---	--




Tab. 1: Warning symbol

Grading of warning messages

Grading of warning messages is defined by following signal words:





DANGER
WARNING
CAUTION
NOTICE

Definition of warning levels

	DANGER	Indicates an immediately hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	NOTICE	Indicates a hazardous situation which, if not avoided, could result in property damage.

Tab. 2: Warning levels

010.1.1.2 Graphic symbols in these instructions

Symbol	Meaning
	Note Identifies useful information and tips.
	Precondition Identifies conditions for subsequent action steps.
	Action request Identifies action steps.
	Result Identifies results of one or more action steps.

LBH12200849/20/211-20210127_084457/en

Symbol	Meaning
—	List Identifies individual items of a list.

Tab. 3: Symbols

010.1.2 Intended use

010.1.2.1 Laws, rules, guidelines and safety regulations

To ensure safe operation:

- Ask work site manager for safety regulations at place of use.
- Adhere to safety regulations at place of use.
- Adhere to traffic regulations.
- Adhere to valid guidelines from insurers (for example employers' professional liability insurance companies, accident insurance et cetera).
- Avoid working methods that can endanger safety.
- Adhere to all intervals specified for recurrent checks and inspections in this operator's manual.

010.1.2.2 Intended use

Wheel loader is used to pick up, move and dump following materials:

- Soil
- Stones
- Broken rocks
- Bulk materials

This applies to a standard machine in normal operating conditions. Special applications are described in a separate options operator's manual.

To ensure intended use:

- Adhere to operator's manual.
- Adhere to maintenance intervals.
- Observe inspection and maintenance tasks.
- Adhere to specifications in the technical data.
- When using machine on public roads, make sure it complies with applicable national regulations.
- Only lift loads with intended working attachments (fork prongs, crane boom), which must be fitted and functioning.
- Make sure that machines used underground (mining and tunnel construction) are fitted with systems to reduce exhaust emissions (such as diesel particulate filters).
- Adhere to individual country's requirements for underground operation.
- For special uses use special working attachments and if necessary special safety equipment.
- Exclusively mount and use special working attachments with approval and as per stipulations of manufacturer of basic machine.
- Only use approved tyres.
- A suitably equipped workshop is absolutely essential for performing repair work.



Note

- ▶ Any other use or use beyond the stated use is improper use.

010.1.2.3 Foreseeable misuse

Do not use machine in following cases:

- Transport of persons without mounted and functioning safety equipment
- Lifting of persons without mounted and functioning safety equipment
- Driving with attached load
- Working in explosion hazard zones
- Working in contaminated environment without corresponding and necessary equipment
- Lifting of loads without suitable working attachment
- Pulling of loads (for example, containers, wagons, trailers) without suitable towing device
- Breaking rocks
- Hammering in posts



Note

- ▶ The manufacturer accepts no liability for damage caused by improper use.

010.1.2.4 Operating conditions

- Outdoors
- Fording depth is same as maximum obstacle height.
- Operate machine in an ambient temperature of -25 °C to 45 °C.
- In case of divergent ambient temperatures, contact Liebherr customer service.

Danger to life

Operation during thunderstorms or storms

- If possible stop operation before a thunderstorm or storm.
- Put working attachment on the ground in flattest position possible.
- Secure machine correctly.
- Close window.
- Shut off diesel engine.
- Set ignition key to **0**.
- Make sure there are no persons in area around machine.

Lightning strike

- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.

Contact with high voltage cable

- Do not move machine and working attachment.
- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.
- Make sure that all persons stay away from the machine and the high voltage cable.
- Have voltage switched off.

010.1.2.5 Disposal

Danger to life

Unapproved disposal of gas containers and pressure vessels

- Before disposal, completely depressurise pressure vessel.
- Before disposal, professionally empty pressure vessel.
- Adhere to safety instructions of pressure vessel manufacturer.

Unapproved disposal of refrigerant

- Have refrigerant disposed of by refrigerant recycling point.
- Adhere to safety data sheet of refrigerant during disposal.

Environmental pollution

Unapproved disposal of machine

- Make sure that the individual elements of the machine are disposed of correctly after the service life.
- Dispose of elements of machine in line with valid country-specific waste disposal guidelines and relevant valid laws.
- Remove fuels, operating fluids and lubricants from all components before disposal.
- Collect and store fuels, operating fluids and lubricants in suitable containers before disposal.
- Adhere to instructions of relevant manufacturer when disposing of fuels, operating fluids and lubricants.
- Have fuels, operating fluids and lubricants disposed of by old oil recycling point.

010.1.3 Description of staff

010.1.3.1 Personal protective equipment

Operators, assistants and maintenance staff are responsible for the following:

- Wearing personal protective equipment
- Regular cleaning and care of protective equipment
- Immediate replacement of damaged parts of protective equipment

The protective equipment consists of following elements:

- Protective helmet
- Safety glasses
- Hearing protection
- Breathing equipment
- Protective gloves
- Warning clothing (reflective, in signal colour)
- Safety boots
- Special protective clothing
 - To prevent burns
 - To prevent freezing
 - To prevent acid burns
 - To prevent stabbing and cutting injuries

010.1.3.2 Requirements for staff

Staff meet the following requirements:

- The machine is operated, maintained and repaired exclusively by authorised and trained persons.
- All persons operating, maintaining or repairing the machine have the required minimum age.
- Staff training involves theoretical information (technology and safety) and practical training on the machine.
- Staff have read and understood the operator's manual and supplied documentation.
- Experienced staff continuously supervise following staff.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Staff agree to work in safety-aware and risk-aware manner.

010.1.3.3 Operating company

Responsibility

The operator is responsible for the following:

- The operator of the machine must ensure that no persons are in the operating area of the machine on the basis of a risk assessment conducted in respect of the operating site.
- If working attachments are used that deviate from the standard and result in limitations to the field of view, the operator must repeat the visual inspection.
- Make sure that exclusively trained staff operate the machine.
- Make sure that exclusively trained staff maintain the machine.
- If an electric motor is used, ensure that only a qualified and competent person connects the machine to the mains supply.
- If a machine with an “emergency actuation of parking brake” option is used, make sure that only qualified and authorised persons operate the machine.
- Check qualification of persons using the machine.
- Authorise activities of persons in handling the machine.
- Define competences and responsibilities for all persons involved in handling the machine.
- Have following staff continuously supervised by an experienced person.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Provide all persons tasked with handling the machine with the necessary protective equipment.
- Check safety-aware work of staff at regular intervals.
- Check danger-aware work of staff at regular intervals.
- Make sure that machine is operated in flawless, safe condition.
- If flaws affecting safety occur: Immediately decommission machine.
- Perform inspections of machine prescribed by Liebherr punctually.
- Perform nationally mandated inspections of machine punctually.
- Adhere to national legal specifications on provision of machines and tools by the employer (hazard assessment and risk assessment conducted by the operator).
- Make sure that no retrofitting is performed on machine without consultation of the manufacturer.
- Use original Liebherr spare parts wherever possible.

010.1.3.4 Operator

Responsibility

Operator is responsible for following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Wear personal protective equipment.
- Operate machine as intended.
- Avoid working methods that can endanger safety.
- Adhere to safety regulations at place of use.
- Maintain visual contact or voice contact with spotter.
- During operation, do not allow any other persons on machine.
- Report all changes to machine that affect safety to operating company.
- If it is no longer possible to work safely, stop operating the machine immediately.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The operator has following qualification and skills:

- Has completed the legally specified minimum age.
- Is physically and mentally capable of operating the machine safely.
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- Has the necessary authorisation for operation of machine.
- The operator has the necessary education (theoretical and practical) for the following:
 - Handling the machine type
 - Attaching
 - Spotting
 - Handling fire extinguishing equipment
- Knows all means of escape in an emergency.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.5 Maintenance staff

Responsibility

The maintenance staff are responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain machine for safe and reliable function.
- Execute all maintenance tasks specified for maintenance staff in the maintenance and inspection schedule.

- Wear personal protective equipment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The maintenance staff have the following qualifications and skills:

- Are of the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Are able to estimate distance, height and gaps.
- Have the necessary authorisation for maintenance of the machine.
- Know the machine and the hazards.
- Know all procedures and precautions for maintenance.
- Have knowledge of handling special tools for maintenance and repair.
- Have special knowledge and experience handling hydraulic installations when working with hydraulic systems.
- Are not under any physical or mental impairment that limits one of the prescribed requirements.
- Are not under the influence of alcohol.
- Are not under the influence of drugs.

010.1.3.6 Refrigeration technician

Responsibility

The refrigeration technician is responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals of options
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain and repair machine for safe and reliable function.
- Execute all maintenance tasks and repair tasks specified for the refrigeration technician in the maintenance and inspection schedule.
- Isolate battery main switch of power supply system and secure it against switching on again.
- Clearly define and label working position.
- Wear personal protective equipment.
- Use tools suitable for the work deployment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The refrigeration technician has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions

- Is able to estimate distance, height and gaps.
- The refrigeration technician has completed training that complies with the country-specific laws, standards and guidelines.
- The refrigeration technician has following skills:
 - Is able to assess work correctly.
 - Is able to recognise dangers.
 - Is able to take safety measures.
- Has knowledge and experience of the relevant field of activity.
- Knows the relevant national standards.
- Has the necessary authorisation for maintenance and repair of machine.
- Knows the machine and the hazards.
- Knows all procedures and precautions for maintenance.
- Has knowledge of handling special tools for maintenance and repair.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.7 Slinger

Responsibility

Slinger is responsible for following:

- Wear personal protective equipment.
- Choose correct and undamaged slinging gear.
- Correctly attach slinging gear to load or lifting accessory.
- Correctly remove slinging gear from load or lifting accessory.
- Grant approval for movement or accompaniment.

Requirement

The slinger has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of slinging loads:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The slinger has following skills:
 - Is able to estimate mass distribution and load distribution.
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
- Has the necessary authorisation for attaching loads.
- The slinger has the necessary education (theoretical and practical) for the following:
 - Selecting the suitable slinging gear
 - Attaching slinging gear
 - Securing to prevent unintended disengaging of slinging gear
 - Avoiding damage to slinging gear
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.8 Spotter

Responsibility

The spotter is responsible for the following:

- Wear personal protective equipment.
- Forward signals from slinger to operator.
- If the spotter is the only person for this purpose: Give instructions to operator.
- The spotter must be in the field of view of operator or have voice contact with the operator.

Requirement

The spotter has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of spotting and providing signals:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The spotter has following skills:
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
 - Is able to ensure safe movement of load and machine.
- Has the necessary authorisation for giving signal signs.
- The spotter has the necessary education (theoretical and practical) for the following:
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.4 Protective devices on the machine

010.1.4.1 Operator's cab

Danger to life

Unapproved working method

- Put on safety belt before starting work.
- Make sure that changes in the operator's cab (for example installation of accessories) do not restrict the operator's workspace.

Injuries

Objects in the operator's cab

- Remove objects that are not necessary for the work from the operator's cab.
- Stow and fasten objects that are necessary for the work before starting.
- Make sure that objects carried do not protrude into the operator's workspace.

010.1.4.2 Roll over protective structure (ROPS)

Danger to life

Damaged falling object protective structures

- Do not put machine into service with damaged falling object protective structures.
- Do not put machine into service with deformed falling object protective structures.
- Do not use falling object protective structures with structural changes.
- Do not use repaired falling object protective structures.
- Do not perform welding on falling object protective structures.
- Do not cut or saw falling object protective structures.
- Do not drill falling object protective structures.

Exceeding of total weight

- Make sure that total weight of machine (see identification plate) is not exceeded.
- Make sure that the machine does not exceed the total weight with heavy working tools.
- Make sure that the machine does not exceed the total weight after changing the working attachment.
- Make sure that the machine does not exceed the total weight with add-ons or after retrofitting.

010.1.4.3 Falling object protective structures (FOPS)

Danger to life

Damaged falling object protective structures

- Do not put machine into service with damaged falling object protective structures.
- Do not put machine into service with deformed falling object protective structures.
- Do not use falling object protective structures with structural changes.
- Do not use repaired falling object protective structures.
- Do not perform welding on falling object protective structures.
- Do not cut or saw falling object protective structures.
- Do not drill falling object protective structures.

010.1.5 Emergency equipment on the machine

010.1.5.1 Emergency exit (standard)

Danger to life

Incorrect labelling

- Make sure that all information signs are present.
- Make sure that all information signs are legible.

Incorrect equipment

- Make sure that emergency hammer (option) is present.
- Make sure that position of emergency hammer (option) is known.

010.1.5.2 Fire extinguisher (option)**Danger to life****Incorrect behaviour**

- Make sure that all fastening points of fire extinguishers on the machine are known.
- Make sure that everyone is able to operate the fire extinguishers.
- Make sure that everyone knows local fire alarm options.
- Make sure that everyone knows the local fire-fighting possibilities.
- Before starting machine, unlock all locks of hoods and doors of machine.

010.1.6 Safe operation**010.1.6.1 Intoxicants****Danger to life****Physical and mental impairment**

- Make sure that no persons working on or with the machine are under the influence of drugs.
- Make sure that no persons working on or with the machine are under the influence of alcohol.
- Make sure that no persons working on or with the machine are under the influence of medication.
- Make sure that no persons working on or with the machine are overtired.
- Make sure that no persons working on or with the machine are exhausted.

010.1.6.2 Dangerous fuels and operating fluids**Injury****Incorrect handling**

- Adhere to safety instructions on handling oils, greases and chemical substances.
- In case of hot lubricants and fuels put on personal protective equipment.

Environmental damage**Incorrect disposal**

- Dispose of lubricants and fuels safely and in eco-friendly manner.
- Adhere to guidelines applicable to disposal.

010.1.6.3 Transporting machine

Danger to life

Machine tipping

- Make sure that the transport vehicle is authorised for the machine weight and machine size.
- Do not manoeuvre while driving on ramps.
- Before driving on ramps, clean mud, snow and ice off tyres or travel gear.
- Make sure that a spotter is available if necessary.
- To load and unload machine, use only sturdy, stable loading ramps.
- Make sure that width and angle of ramps match the gauge and climbing ability of machine.

Incorrect transport

- Park machine on level ground during preparation for transport (disassembly, cleaning).
- Secure machine against rolling away.
- Apply parking brake.
- Pull out ignition key.
- Leave operator's cab.
- All doors, windows and service access points are closed.
- Make sure that nobody is on the machine during transport.
- If necessary, dismantle a portion of working attachment from machine for duration of transport.
- Make sure that the road to be travelled is known.
- Make sure that all applicable limitations for width, height and weight are known.
- Drive carefully under electric cables and bridges.
- Drive carefully through tunnels.

010.1.6.4 Access to machine

Injury

Incorrect entry and exit

- Clean dirt, oil, ice and snow from steps, ladders, anti-slip mats, handrails and handles.
- Enter and exit carefully on muddy roads, ice, snow, traffic on access roads and in narrow conditions.
- Regularly check steps, ladders, anti-slip mats, handrails and handles and have them repaired if necessary.
- Before entering machine, clean mud, grease, ice and snow from shoes and climbing aids.
- Put on gloves for secure grip.
- Do not climb up or down using tyres, wheel hubs or rims.
- When exterior influences (for example wind) make opening and closing the door more difficult: Always guide door with your hand.
- Make sure that the opened or closed door has engaged properly.
- If the machine is still moving: Do not stand up from the operator's seat.
- Never jump off machine.
- Enter and leave the machine exclusively using the access system.
- Do not use control elements as handles.
- Keep your face towards machine during entry and exit.

- Make sure you always have two hands and a foot or two feet and one hand in contact with the access system.
- After entering the operator's cab, find out about emergency exit.

If the machine has a cab elevation:

- Climb until the door is reached.
- When you reach door handle with your free hand: Open door.
- Continue climbing.

010.1.6.5 Machine danger zone

The area in the immediate vicinity of the machine is considered to be the danger area and must be adapted according to the application for which the machine is used.

Following factors influence size of danger area:

- The travel speed and movement of the machine
- Working attachment installed
- Type of loading material
- Risk of loading material falling

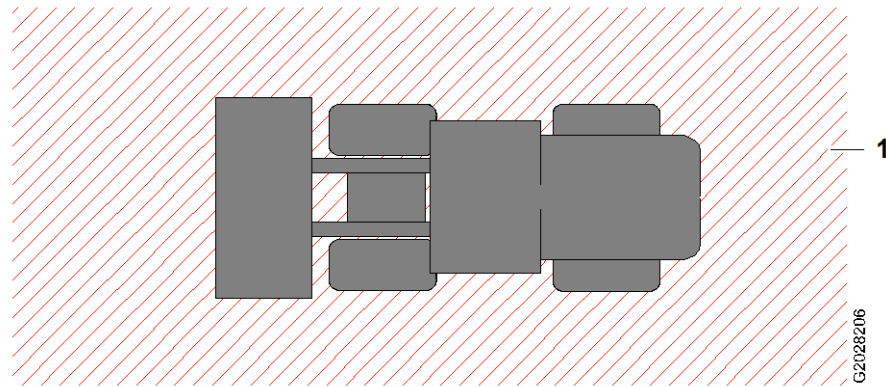


Fig. 10: Machine danger zone (view from above)

1 Danger zone

Danger to life

Unapproved presence in danger zone

- Make sure there is nobody in the danger area.

010.1.6.6 Visibility

Danger to life

Insufficient visibility

- If equipment is installed that deviates from the standard, the operator must re-evaluate the field of view and, if necessary, take measures.
- Make sure that persons approach the machine from the front and within operator's field of vision.
- Make sure that persons contact the operator before approaching the machine.
- Make sure that no obstacles impair visibility in the working area.
- Use viewing devices to observe environment of machine if necessary.

- Use viewing devices if necessary to observe areas around the machine that cannot be seen directly.
- Position working attachment so that sufficient visibility is ensured.
- Work with spotter if visibility is restricted.
- Agree on which hand signs to use.
- If necessary communicate via radio.
- Make sure that spotter is outside danger zone.
- In conditions of poor visibility use illumination in accordance with the applicable regulations.
- Work with extra care and attention in poor visibility and changing weather.
- Only use sun visors if field of vision is not restricted.

Incorrect operation

- Comply with national regulations regarding sufficient visibility in the operator's cab.
- Before operation, check viewing devices for function, cleanliness and correct setting.
- Adjust mirrors so that the best possible all-round visibility is guaranteed.
- Immediately repair defective viewing devices or have them replaced.
- Clean dirty cab windows.
- Avoid covering of visual aids by working attachment.

Damage

Incorrect changes

- Make sure that modifications to the machine do not impair visibility.
- Perform risk analysis again.
- Test machine according to current standards.
- Test machine according to regulations applicable at place of use.
- Depending on the test result, take appropriate measures.
- Inform operator about modifications.

010.1.6.7 Protection against vibration

Injuries

Incorrect working method

- Use machine, working attachment and working tool adapted to the task.
- Check condition of machine (tyre pressure, brakes, steering, mechanical connections, ...).
- Ensure that operator's seat is functional and complies with national regulations.
- Adjust operator's seat to weight and size of operator.
- Adjust shock absorption to weight and size of operator.
- Do not use jerky movements to steer, brake, accelerate and shift gears.
- Do not use jerky movements to move and load working attachment.

Incorrect travel

- Adapt speed to route.
- Travel slowly on rough terrain.
- Travel around obstacles and very rough terrain.
- Travel over longer distances (for example, on public roads) at a suitable (medium) speed.

Incorrect path of machine

- Remove large rocks and obstacles.
- Fill up channels and holes.
- Keep machines to hand for creating and maintaining suitable terrain conditions and calculate sufficient time.

Damage**Increased travel mode**

- If machine is driven a lot: Stipulate use of special auxiliary systems for travel mode.
- Regulate speed to prevent swaying.

010.1.6.8 Operation of machine**Danger to life****Incorrect place of use**

- Make sure that load capacity value of ground is sufficient.
- Do not exceed maximum inclination angle of machine while working.
- Do not exceed maximum inclination angle of machine when driving on ramps (side inclination).
- Make sure that ground offers sufficient grip.
- Assessment of subsoil conditions before starting work
- Adhere to safety gap from live overhead cables.
- Every line must be considered live.
- Keep a safe distance from overhangs, drops, slopes and unsafe terrain.

Incorrect use

- When working in following areas, adhere to the laws, regulations and rules applicable at the place of use.
 - Explosive area
 - Flammable area
 - Areas with underground lines (gas, electricity)
- Ensure that machines in enclosed spaces (for example, tunnels, hangars) are equipped with exhaust reduction components.
- Make sure that adequate ventilation and fresh air supply is ensured when operating in enclosed spaces.
- Never leave operator's seat while machine is still in motion.
- Never leave machine unattended with engine running.
- Clean machine regularly to remove flammable residues (for example dust, wood scraps).

Incorrect handling of electrical system

- Make sure there are no persons with a pacemaker in the vicinity of the running diesel engine.
- Before working on electrical system, make sure that affected parts are voltage-free.
- Before working on electrical system, make sure that neighbouring parts are isolated.
- Have work on electrical systems performed exclusively by a qualified electrician.

Injuries

Incorrect protection

- If there is a danger of falling objects: Exclusively use machines with suitable falling object protective structures.
- If there is a danger of objects penetrating the operator's cab: Exclusively use machines with suitable falling object protective structures.
- If machine is used in toxic environment: Insert filters approved for the use in air conditioning.
- If machine is used in dust-intensive environment: Insert filters approved for the use in air conditioning.

Incorrect refuelling

- Do not touch fuels with your skin.
- Do not inhale fuel vapours.

Incorrect maintenance

- Make sure there is nobody in the danger area.
- Park machine and secure to prevent rolling or driving away.
- Park machine on level, firm ground.
- Park machine with lowered working attachment.
- When searching for leaks in the hydraulic system wear protective gloves.
- Exclusively search for leaks in the hydraulic system with cardboard or similar material.
- Hydraulic system must be depressurised before work can be carried out on it.
- Repairs to hydraulic hoses and hose lines are carried out by authorised specialist staff only.
- Lay and install hydraulic hoses and hose lines professionally.
- Do not weld or solder accumulators.
- Do not perform mechanical work on accumulators.
- Make sure that the permanent labelling of the accumulators (operating data) is kept visible.
- Be especially careful when removing or inserting bolts and pins as this can cause serious injury.
- Make sure that machine is supported in a proper and secure manner.

Crushing injuries

Unexpected movements of machine

- Make sure there is nobody in the danger area.
- Park machine and secure to prevent rolling or driving away.
- Do not work under working attachment unless it is supported or resting on ground.

Unintentional closing of service access points

- Ensure that the service access points cannot close unintentionally.

Incorrect lifting tackle

- Exclusively use undamaged lifting accessories.
- Ensure that the load and tensile capacity of the lifting tackle is sufficient.

Incorrect work clothing

- Wear protective gloves when handling wire ropes.

Incorrect work equipment

- Exclusively align bores with suitable pin.

Burns**Incorrect maintenance**

- Switch off diesel engine before any maintenance or repairs.

Hot, pressurised fuel and operating fluids

- Do not touch fuels and operating fluids and parts that carry fluids.
- Do not touch covers and parts that carry fluids.
- Avoid skin contact with hot surfaces and fuels and operating fluids.

Incorrect heat protection

- Make sure that all holders and protective shields against vibration, chafing and heat build-up have been installed correctly.

Incorrect charging of battery

- Do not smoke.
- Avoid naked flames.
- Wear safety glasses.
- Put on protective gloves.

Incorrect handling of flammable liquids

- Exclusively transport flammable liquids on the machine in the designated tanks.
- Make sure that no oil squirts out of leaks.
- Regularly check lines, hoses and screwed connections for leaks and damage.
- Immediately seal leaks.
- Immediately replace damaged parts.

Incorrect refuelling

- Before refuelling, shut off diesel engine.
- Before refuelling, switch off auxiliary heater (option).
- Do not smoke.
- Avoid naked flames.
- Do not touch fuels with your skin.
- Do not inhale fuel vapours.

Damage to machine

- Before placing machine under heavy load, make sure that machine is at operating temperature.
- Never put damaged machine into operation.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com