

---

# T1010, T1030, T1110 REPAIR MANUAL COMPLETE CONTENTS

|  |    |
|--|----|
| SECTION 00 - GENERAL INFORMATION .....         | 2  |
| SECTION 10 - ENGINE SYSTEMS .....              | 4  |
| SECTION 25 - FWD .....                         | 12 |
| SECTION 27 - DIFFERENTIAL AND REAR AXLES ..... | 14 |
| SECTION 29 - HYDROSTATIC TRANSMISSION .....    | 15 |
| SECTION 31 - PTO .....                         | 18 |
| SECTION 33 - BRAKES .....                      | 20 |
| SECTION 35 - HYDRAULIC SYSTEM .....            | 21 |
| SECTION 41 - POWER STEERING .....              | 26 |
| SECTION 44 - WHEELS .....                      | 28 |
| SECTION 55 - ELECTRICAL SYSTEM .....           | 29 |
| SECTION 58 - 230GM MID MOUNT MOWER .....       | 38 |
| SECTION 90 - PLATFORM .....                    | 40 |

The following pages are the collation of the contents pages from each section and chapter of the T1010, T1030, T1110 Repair manual. Complete Repair part # 87739173.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T1010, T1030, T1110 Tractors.

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87739174

## Chapter 1 - General Information

### CONTENTS

| Section | Description                               | Page |
|---------|---|------|
|         | Precautionary Statements .....            | 3    |
|         | Personal Safety .....                     | 3    |
|         | Machine Safety .....                      | 3    |
|         | Information .....                         | 3    |
|         | Safety .....                              | 4    |
|         | Precautionary Statements .....            | 4    |
|         | The Tractor .....                         | 4    |
|         | Servicing the Tractor .....               | 4    |
|         | Operating the Tractor .....               | 5    |
|         | Driving the Tractor .....                 | 5    |
|         | Operating the PTO .....                   | 6    |
|         | Diesel Fuel .....                         | 6    |
|         | Safety Frame (ROPS) .....                 | 6    |
|         | Safety Decals .....                       | 7    |
|         | Instruction Decals .....                  | 10   |
|         | Ecology and the Environment .....         | 16   |
|         | Helpful Hints .....                       | 16   |
|         | Universal Symbols .....                   | 17   |
|         | General Information .....                 | 18   |
|         | Minimum Hardware Tightening Torques ..... | 19   |
|         | Metric Bolt Torque Specifications .....   | 20   |
|         | Lubrication and Maintenance .....         | 21   |
|         | General Information .....                 | 21   |
|         | Grease Fittings .....                     | 21   |
|         | Chains .....                              | 21   |
|         | Lubrication and Maintenance Chart .....   | 23   |
|         | Lubrication Fittings .....                | 24   |
|         | Diesel Fuel .....                         | 24   |
|         | Fuel Usage Safety .....                   | 24   |

---

# SECTION 00 - GENERAL INFORMATION

BOOK 1 - 87739174

## Chapter 1 - General Information (Continued)

### CONTENTS

| Section | Description                       | Page |
|---------|-----------------------------------|------|
|         | Specifications .....              | 25   |
|         | Engine .....                      | 25   |
|         | Capacities .....                  | 25   |
|         | Cooling System .....              | 26   |
|         | Electrical System .....           | 26   |
|         | Fuel System .....                 | 26   |
|         | Brakes .....                      | 27   |
|         | Steering .....                    | 27   |
|         | Power Take-Off (PTO) .....        | 27   |
|         | Hydraulic Lift Section .....      | 27   |
|         | Transmission Speeds .....         | 28   |
|         | Cast Iron Weights .....           | 29   |
|         | Drawbars .....                    | 29   |
|         | 3-Point Hitch .....               | 29   |
|         | Tires .....                       | 29   |
|         | Wheel Bolt Torques .....          | 29   |
|         | ROPS Attaching Bolt Torques ..... | 29   |
|         | General Dimensions .....          | 30   |
|         | Wheel Tread Settings .....        | 30   |
|         | Liquid Ballast (optional) .....   | 32   |
|         | Tire Pressure .....               | 32   |

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Specifications . . . . .                                 | 6    |
|         | Torque Specifications . . . . .                          | 15   |
|         | Metric Bolt Torque Specifications . . . . .              | 15   |
|         | Special Tools . . . . .                                  | 16   |
|         | General Information - Description of Operation . . . . . | 17   |
|         | Identification Chart . . . . .                           | 17   |
|         | Cylinder Head and Valve Train Components . . . . .       | 17   |
|         | Cylinder Block Assembly . . . . .                        | 19   |
|         | Troubleshooting . . . . .                                | 20   |
|         | Overhaul . . . . .                                       | 26   |
|         | Engine Access . . . . .                                  | 26   |
|         | Disassembly . . . . .                                    | 26   |
|         | Fuel Injector and Glow Plug . . . . .                    | 29   |
|         | Removal . . . . .  | 29   |
|         | Hydraulic Pump . . . . .                                 | 30   |
|         | Removal . . . . .  | 30   |
|         | Fan, Water Pump and External Oil Tube . . . . .          | 30   |
|         | Removal . . . . .  | 30   |
|         | Fuel Shutoff Solenoid . . . . .                          | 30   |
|         | Removal . . . . .  | 30   |
|         | Oil Pressure Switch . . . . .                            | 31   |
|         | Removal . . . . .  | 31   |
|         | Temperature Sending Switch and Alternator . . . . .      | 31   |
|         | Removal . . . . .  | 31   |
|         | Throttle Cable . . . . .                                 | 31   |
|         | Disconnection . . . . .                                  | 31   |
|         | Support Frame . . . . .                                  | 32   |
|         | Removal . . . . .  | 32   |
|         | Engine . . . . .   | 32   |
|         | Removal . . . . .  | 32   |
|         | Valve Cover . . . . .                                    | 33   |
|         | Removal . . . . .  | 33   |

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Rocker Shaft and Push Rod .....                           | 34   |
|         | Removal .....   | 34   |
|         | Cylinder Head .....                                       | 34   |
|         | Removal .....   | 34   |
|         | Valve Tappet .....  | 35   |
|         | Removal .....   | 35   |
|         | Engine Timing Gear Cover, Timing Gears and Camshaft ..... | 35   |
|         | Timing Gears and Camshaft .....                           | 36   |
|         | Removal .....   | 36   |
|         | Oil Sump .....  | 36   |
|         | Removal .....   | 36   |
|         | Oil Suction Pipe and Strainer .....                       | 37   |
|         | Removal .....   | 37   |
|         | Connecting Rods, Bearings and Piston .....                | 37   |
|         | Removal .....   | 37   |
|         | Flywheel .....  | 38   |
|         | Removal .....   | 38   |
|         | Backplate and Oil Seal .....                              | 38   |
|         | Removal .....   | 38   |
|         | Crankshaft and Main Bearings .....                        | 38   |
|         | Removal .....   | 38   |
|         | Cylinder Head .....                                       | 39   |
|         | Disassembly .....   | 39   |
|         | Inspection and Repair .....                               | 39   |
|         | Valve Seats .....   | 40   |
|         | Inspection and Repair .....                               | 40   |
|         | Valves .....  | 40   |
|         | Inspection and Repair .....                               | 40   |
|         | Valve Guides .....  | 42   |
|         | Inspection and Repair .....                               | 42   |
|         | Valve Springs .....                                       | 42   |
|         | Inspection and Repair .....                               | 42   |

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 1 - Engine Systems (Continued)

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Rocker Arms .....                                     | 43   |
|         | Inspection and Replacement .....                      | 43   |
|         | Push Rods .....                                       | 43   |
|         | Inspection and Replacement .....                      | 43   |
|         | Cylinder Head .....                                   | 44   |
|         | Assembly .....  | 44   |
|         | Cylinder Block .....                                  | 44   |
|         | Inspection and Repair .....                           | 44   |
|         | Pistons .....   | 45   |
|         | Disassembly and Inspection .....                      | 45   |
|         | Piston Rings .....                                    | 47   |
|         | Inspection and Replacement .....                      | 47   |
|         | Connecting Rods .....                                 | 48   |
|         | Inspection and Repair .....                           | 48   |
|         | Connecting Rod Bearing Oil Clearance Check .....      | 50   |
|         | Pistons, Rings and Connecting Rod .....               | 50   |
|         | Assembly .....  | 50   |
|         | Main Bearing and Thrust Bearing .....                 | 51   |
|         | Removal and Inspection .....                          | 51   |
|         | Crankshaft .....                                      | 52   |
|         | Inspection .....                                      | 52   |
|         | Crankshaft Journal Wear Limit and Bearing Usage ..... | 52   |
|         | Crankshaft Front Main Bearing (Bushing) .....         | 53   |
|         | Inspection .....                                      | 53   |
|         | Replacement .....                                     | 53   |
|         | Crankshaft Main Bearing .....                         | 54   |
|         | Assembly .....  | 54   |
|         | Port Block .....                                      | 54   |
|         | Removal .....   | 54   |
|         | Installation .....                                    | 55   |
|         | Timing Gear .....                                     | 55   |
|         | Inspection .....                                      | 55   |

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Camshaft . . . . .                                     | 55   |
|         | Disassembly . . . . .                                  | 55   |
|         | Inspection . . . . .                                   | 56   |
|         | Assembly . . . . .                                     | 56   |
|         | Flywheel . . . . .                                     | 57   |
|         | Inspection . . . . .                                   | 57   |
|         | Timing Gear Housing . . . . .                          | 57   |
|         | Front Oil Seal and Steering Pump Seal . . . . .        | 57   |
|         | Replacement . . . . .                                  | 57   |
|         | Crankshaft and Bearing Holder . . . . .                | 58   |
|         | Assembly . . . . .                                     | 58   |
|         | Rear Oil Seal and Backplate . . . . .                  | 58   |
|         | Assembly . . . . .                                     | 58   |
|         | Flywheel . . . . .                                     | 59   |
|         | Installation . . . . .                                 | 59   |
|         | Piston and Connecting Rod . . . . .                    | 59   |
|         | Installation . . . . .                                 | 59   |
|         | Oil Suction Pipe and Suction Strainer . . . . .        | 60   |
|         | Installation . . . . .                                 | 60   |
|         | Oil Sump . . . . .                                     | 60   |
|         | Installation . . . . .                                 | 60   |
|         | Timing Gear Cover, Timing Gears and Camshaft . . . . . | 60   |
|         | Assembly . . . . .                                     | 60   |
|         | Head Gasket Selection . . . . .                        | 62   |
|         | Cylinder Head . . . . .                                | 63   |
|         | Assembly . . . . .                                     | 63   |
|         | Valve Clearance Adjustment . . . . .                   | 64   |
|         | Valve Cover . . . . .                                  | 64   |
|         | Installation . . . . .                                 | 64   |
|         | Engine . . . . .                                       | 65   |
|         | Installation . . . . .                                 | 65   |

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 1 - Engine Systems (Continued)

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Drive Train .....  | 66   |
|         | Installation .....   | 66   |
|         | Support Frame .....  | 66   |
|         | Installation .....   | 66   |
|         | Tachometer and Throttle Cables .....                       | 66   |
|         | Installation .....   | 66   |
|         | Alternator and Temperature Sending Switch .....            | 67   |
|         | Installation .....   | 67   |
|         | Oil Pressure Switch .....                                  | 67   |
|         | Installation .....   | 67   |
|         | Fuel Shutoff Solenoid .....                                | 67   |
|         | Installation .....   | 67   |
|         | Fan, Water Pump and External Oil Tube .....                | 68   |
|         | Installation .....   | 68   |
|         | Hydraulic Pump .....                                       | 68   |
|         | Installation .....   | 68   |
|         | Glow Plug and Connector .....                              | 68   |
|         | Installation .....   | 68   |
|         | Fuel Injection Pump .....                                  | 69   |
|         | Installation .....   | 69   |
|         | Fuel Injector .....  | 70   |
|         | Installation .....   | 70   |
|         | Fuel Line .....  | 70   |
|         | Installation .....   | 70   |
|         | Exhaust Manifold, Air Cleaner and Radiator .....           | 71   |
|         | Installation .....   | 71   |
|         | Engine Lubrication System - Description of Operation ..... | 74   |
|         | Engine Oil Filter .....                                    | 77   |
|         | Construction and Function .....                            | 77   |
|         | Maintenance .....  | 77   |



---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 1 - Engine Systems (Continued)

### CONTENTS

| Section | Description                                     | Page |
|---------|---|------|
|         | Oil Pump .....                                  | 77   |
|         | Removal .....                                   | 77   |
|         | Inspection .....                                | 77   |
|         | Installation and Adjustment .....               | 78   |
|         | Engine Oil Pressure Check .....                 | 79   |
|         | Oil Pressure Relief Valve .....                 | 79   |
|         | Removal .....                                   | 79   |
|         | Installation .....                              | 79   |
|         | Oil Consumption .....                           | 80   |
|         | Cooling System - Description of Operation ..... | 81   |
|         | Maintenance .....                               | 83   |
|         | Coolant .....                                   | 83   |
|         | Thermostat .....                                | 83   |
|         | Water Pump .....                                | 83   |
|         | Cooling Fan .....                               | 83   |
|         | Radiator .....                                  | 83   |
|         | Radiator Cap .....                              | 83   |
|         | Cooling System Overhaul .....                   | 84   |
|         | Radiator .....                                  | 84   |
|         | Removal .....                                   | 84   |
|         | Inspection and Repair .....                     | 85   |
|         | Installation .....                              | 86   |
|         | Water Pump and Thermostat .....                 | 87   |
|         | Removal .....                                   | 87   |
|         | Inspection and Repair .....                     | 89   |
|         | Installation .....                              | 90   |
|         | Testing .....                                   | 93   |
|         | Compression Test and Tools .....                | 93   |

---

# SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

## Chapter 2 - Fuel System

### CONTENTS

| Section | Description                                     | Page |
|---------|---|------|
|         | Specifications - T1010 .....                    | 2    |
|         | Torque Specifications .....                     | 2    |
|         | Special Tools .....                             | 2    |
|         | Specifications - T1030, T1110 .....             | 3    |
|         | Torque Specifications .....                     | 3    |
|         | Special Tools .....                             | 3    |
|         | Fuel System - Description of Operation .....    | 4    |
|         | Injection Pump - Description of Operation ..... | 6    |
|         | Pumping Elements .....                          | 7    |
|         | Delivery Valves .....                           | 9    |
|         | Troubleshooting - General .....                 | 11   |
|         | Troubleshooting - Fuel Injectors .....          | 14   |
|         | Troubleshooting - Governor .....                | 15   |
|         | Troubleshooting - Engine Breather Valve .....   | 16   |
|         | Overhaul .....                                  | 17   |
|         | Injection Pump .....                            | 17   |
|         | Removal .....                                   | 17   |
|         | Repair .....                                    | 17   |
|         | Installation .....                              | 17   |
|         | Timing and Governor Adjustments .....           | 18   |
|         | Using Original Pump and Drive Components .....  | 18   |
|         | New Pump or Drive Component .....               | 18   |
|         | Installation .....                              | 18   |
|         | Spill-Timing Procedure .....                    | 19   |
|         | Bleeding the Fuel System .....                  | 23   |
|         | Bleeding Procedure .....                        | 23   |
|         | Full Screw High Idle Adjustment .....           | 23   |
|         | Governor - Description of Operation .....       | 24   |
|         | Governor .....                                  | 26   |
|         | Disassembly .....                               | 26   |
|         | Assembly .....                                  | 27   |
|         | Adjustments .....                               | 28   |

---

## SECTION 10 - ENGINE SYSTEMS

BOOK 1 - 87739174

### Chapter 2 - Fuel System (Continued)

#### CONTENTS

| Section | Description                                | Page |
|---------|--|------|
|         | Injectors - Description of Operation ..... | 29   |
|         | Injector .....                             | 30   |
|         | Removal .....                              | 30   |
|         | Disassembly .....                          | 31   |
|         | Assembly and Adjustment .....              | 31   |
|         | Engine Breather Valve .....                | 32   |
|         | Removal .....                              | 33   |
|         | Installation .....                         | 33   |

---

## SECTION 25 - FWD

BOOK 1 - 87739174

### Chapter 1 - Front Axle

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Front Wheel Drive Axle - Description of Operation . . . . . | 3    |
|         | FWD Tread Setting . . . . .                                 | 3    |
|         | FWD . . . . .   | 4    |
|         | Manual . . . . .  | 4    |
|         | Auto . . . . .  | 4    |
|         | Auto Position (Engaged) . . . . .                           | 5    |
|         | Auto Position (Disengaged) . . . . .                        | 5    |
|         | Full Time FWD (Locked Down) . . . . .                       | 5    |
|         | Power Flow . . . . .  | 6    |
|         | Front Axle . . . . .  | 6    |
|         | Overhaul . . . . .  | 7    |
|         | FWD Axle . . . . .  | 7    |
|         | Removal . . . . .   | 7    |
|         | Final Drive Case Cover . . . . .                            | 9    |
|         | Removal . . . . .   | 9    |
|         | Steering Cylinder . . . . .                                 | 9    |
|         | Removal . . . . .   | 9    |
|         | Final Drive Case . . . . .                                  | 9    |
|         | Removal . . . . .   | 9    |
|         | Idler Case . . . . .  | 10   |
|         | Removal . . . . .   | 10   |
|         | Disassembly . . . . .                                       | 10   |
|         | Differential . . . . .                                      | 10   |
|         | Removal . . . . .   | 10   |
|         | Drive Pinion . . . . .                                      | 11   |
|         | Removal . . . . .   | 11   |
|         | Differential . . . . .                                      | 11   |
|         | Disassembly . . . . .                                       | 11   |
|         | Inspection . . . . .  | 11   |
|         | Assembly . . . . .  | 11   |

---

## SECTION 25 - FWD

BOOK 1 - 87739174

### Chapter 1 - Front Axle (Continued)

#### CONTENTS

| Section | Description                        | Page |
|---------|------------------------------------|------|
|         | Drive Pinion .....                 | 12   |
|         | Installation .....                 | 12   |
|         | Differential .....                 | 12   |
|         | Installation .....                 | 12   |
|         | Backlash Adjustment .....          | 13   |
|         | Idler Case .....                   | 15   |
|         | Assembly .....                     | 15   |
|         | Axle Seal Installation .....       | 15   |
|         | Installation .....                 | 16   |
|         | FWD Box .....                      | 17   |
|         | Removal (Manual and Auto) .....    | 17   |
|         | Manual FWD Box .....               | 17   |
|         | Disassembly .....                  | 17   |
|         | Inspection .....                   | 18   |
|         | Assembly .....                     | 19   |
|         | Auto FWD Box .....                 | 21   |
|         | Disassembly .....                  | 21   |
|         | Inspection .....                   | 22   |
|         | Assembly .....                     | 23   |
|         | Two Way Clutch (Sensitrack™) ..... | 26   |
|         | Disassembly .....                  | 26   |
|         | Inspection .....                   | 26   |
|         | Assembly .....                     | 27   |
|         | Front to Rear Axle Ratio .....     | 28   |
|         | Specifications .....               | 30   |
|         | Front Wheel Drive .....            | 30   |

---

# SECTION 27 - DIFFERENTIAL AND REAR AXLES

BOOK 1 - 87739174

## Chapter 1 - Differential

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Specifications .....   | 2    |
|         | Bolt Torque Specifications .....                                     | 3    |
|         | Metric Bolt Torque Specifications .....                              | 3    |
|         | Special Tool .....   | 3    |
|         | Description of Operation (T1010/T1030) .....                         | 4    |
|         | Description of Operation (T1110) .....                               | 5    |
|         | Differential .....   | 6    |
|         | Differential Lock .....  | 7    |
|         | Rear Axle .....  | 8    |
|         | Overhaul .....   | 9    |
|         | Differential .....   | 9    |
|         | Removal .....  | 9    |
|         | Drive Pinion .....   | 12   |
|         | Removal .....  | 12   |
|         | Differential .....   | 13   |
|         | Disassembly (T1010/T1030) .....                                      | 13   |
|         | Differential .....   | 14   |
|         | Disassembly (T1110) .....  | 14   |
|         | Inspection .....   | 17   |
|         | Assembly .....   | 17   |
|         | Ring Gear and Pinion Gear Pattern Specification and Adjustment ..... | 21   |

---

# SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

## Chapter 1 - Hydrostatic Transmission

### CONTENTS

| Section | Description                              | Page |
|---------|--|------|
|         | Specifications .....                     | 3    |
|         | HST .....                                | 3    |
|         | Metric Bolt Torque Specifications .....  | 4    |
|         | Special Tools .....                      | 5    |
|         | Description of Operation .....           | 6    |
|         | HST .....                                | 6    |
|         | Variable Displacement Pump .....         | 8    |
|         | Operation .....                          | 8    |
|         | Fixed Displacement Motor .....           | 9    |
|         | Operation .....                          | 9    |
|         | Hydraulic Fluid Flow .....               | 10   |
|         | Neutral Position .....                   | 10   |
|         | Forward Position .....                   | 11   |
|         | Reverse Position .....                   | 12   |
|         | Range Gear .....                         | 13   |
|         | Operation .....                          | 13   |
|         | Power Flow .....                         | 14   |
|         | High Range .....                         | 14   |
|         | Low Range .....                          | 14   |
|         | Troubleshooting .....                    | 15   |
|         | Pressure Testing .....                   | 18   |
|         | High Pressure Relief Valves .....        | 18   |
|         | Forward Testing .....                    | 18   |
|         | Reverse Testing .....                    | 19   |
|         | Low (Charge) Pressure Relief Valve ..... | 20   |
|         | Overhaul .....                           | 21   |
|         | Transmission/Differential .....          | 21   |
|         | Separating .....                         | 21   |
|         | Attaching .....                          | 25   |

---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 1 - Hydrostatic Transmission (Continued)

#### CONTENTS

| Section | Description                               | Page |
|---------|---|------|
|         | HST Unit .....                            | 31   |
|         | Removal .....                             | 31   |
|         | Disassembly .....                         | 32   |
|         | Inspection .....                          | 38   |
|         | Assembly .....                            | 42   |
|         | Installation .....                        | 51   |
|         | HST Adjustment .....                      | 52   |
|         | Neutral Adjustment .....                  | 52   |
|         | HST Forward Pedal Travel Adjustment ..... | 53   |
|         | Cooling Fan .....                         | 54   |
|         | Transmission Range Gears .....            | 54   |
|         | Removal .....                             | 54   |
|         | Inspection .....                          | 56   |
|         | Installation .....                        | 57   |

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 2 - Electric Cruise Control (Optional)

#### CONTENTS

| Section | Description                         | Page |
|---------|-------------------------------------|------|
|         | Description of Operation .....      | 2    |
|         | HST Cruise Control (optional) ..... | 2    |
|         | Cruise Control Switch .....         | 3    |
|         | Description and Location .....      | 3    |
|         | Removal .....                       | 3    |
|         | Testing .....                       | 4    |
|         | Installation .....                  | 5    |



---

## SECTION 29 - HYDROSTATIC TRANSMISSION

BOOK 2 - 87739175

### Chapter 2 - Electric Cruise Control (Optional) (Continued)

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Cruise Magnet .....  | 5    |
|         | Description and Location .....   | 5    |
|         | Removal .....  | 5    |
|         | Testing .....  | 6    |
|         | Installation .....   | 6    |
|         | Cruise Relays .....  | 7    |
|         | Description and Location .....   | 7    |
|         | Removal (all) .....  | 9    |
|         | Testing .....  | 10   |
|         | Testing Cruise Latch and Instrument Panel Relays (normally open) ..... | 10   |
|         | Installation .....   | 10   |
|         | Testing Cruise Brake Relay (normally closed) .....                     | 11   |
|         | Installation .....   | 11   |
|         | Relay Installation (all) .....   | 11   |
|         | Cruise Diode .....   | 12   |
|         | Description and Location .....   | 12   |
|         | Removal .....  | 12   |
|         | Testing .....  | 13   |
|         | Installation .....   | 13   |
|         | Cruise Control Circuit "On Position" .....                             | 14   |
|         | Cruise Control Circuit "Denergizing" .....                             | 15   |
|         | Cruise Control Circuit .....   | 16   |
|         | Ground Circuits .....  | 16   |
|         | Cruise Control "ON" .....  | 16   |
|         | Cruise Control Indicator Lights .....                                  | 17   |
|         | Denergizing the Cruise Control Circuit .....                           | 17   |
|         | Relay Identification .....   | 17   |
|         | Troubleshooting - HST Cruise Control Circuit .....                     | 18   |

---

# SECTION 31 - PTO

BOOK 2 - 87739175

## Chapter 1 - PTO

### CONTENTS

| Section | Description                             | Page |
|---------|---|------|
|         | Specifications .....                    | 3    |
|         | Metric Bolt Torque Specifications ..... | 4    |
|         | Special Tools .....                     | 5    |
|         | Description of Operation .....          | 6    |
|         | Power Flow .....                        | 7    |
|         | PTO Off .....                           | 7    |
|         | Rear and Mid PTO On .....               | 7    |
|         | Rear PTO On .....                       | 8    |
|         | Mid PTO On .....                        | 8    |
|         | Troubleshooting .....                   | 9    |
|         | Overhaul .....                          | 10   |
|         | PTO Clutch .....                        | 10   |
|         | Removal .....                           | 10   |
|         | Disassembly .....                       | 11   |
|         | Inspection .....                        | 15   |
|         | Assembly .....                          | 16   |
|         | Installation .....                      | 20   |
|         | PTO Clutch Shaft .....                  | 21   |
|         | Removal .....                           | 21   |
|         | PTO Change Lever .....                  | 21   |
|         | Removal .....                           | 21   |
|         | Rear Case Cover .....                   | 22   |
|         | Removal .....                           | 22   |
|         | Disassembly .....                       | 22   |
|         | PTO Shift Rod and Input Shaft .....     | 24   |
|         | Removal .....                           | 24   |
|         | Mid PTO Shaft and Gears .....           | 27   |
|         | Removal .....                           | 27   |
|         | Inspection .....                        | 28   |
|         | Mid PTO Shaft and Gears .....           | 29   |
|         | Installation .....                      | 29   |

---

## SECTION 31 - PTO

BOOK 2 - 87739175

### Chapter 1 - PTO (Continued)

#### CONTENTS

| Section | Description                         | Page |
|---------|-------------------------------------|------|
|         | PTO Shift Rod and Input Shaft ..... | 31   |
|         | Installation .....                  | 31   |
|         | Rear Case Cover .....               | 34   |
|         | Assembly .....                      | 34   |
|         | Installation .....                  | 35   |
|         | PTO Clutch Shaft .....              | 36   |
|         | Installation .....                  | 36   |
|         | PTO Change Lever .....              | 36   |
|         | Installation .....                  | 36   |
|         | PTO Clutch Brake .....              | 37   |
|         | Adjustment .....                    | 37   |
|         | PTO Clutch Brake Release .....      | 38   |
|         | Adjustment .....                    | 38   |

---

# SECTION 33 - BRAKES

BOOK 2 - 87739175

## Chapter 1 - Brakes

### CONTENTS

| Section | Description                             | Page |
|---------|---|------|
|         | Specifications .....                    | 2    |
|         | Metric Bolt Torque Specifications ..... | 3    |
|         | Description of Operation .....          | 4    |
|         | Brakes .....                            | 5    |
|         | Park Brake .....                        | 7    |
|         | Troubleshooting .....                   | 8    |
|         | Overhaul .....                          | 9    |
|         | Brakes .....                            | 9    |
|         | Removal .....                           | 9    |
|         | Disassembly .....                       | 9    |
|         | Inspection .....                        | 11   |
|         | Assembly .....                          | 12   |
|         | Installation .....                      | 14   |
|         | Adjustments .....                       | 15   |
|         | Brake .....                             | 15   |
|         | Park Brake .....                        | 16   |

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87739175

## Chapter 1 - Hydraulics

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Specifications (T1010, T1030) .....                         | 6    |
|         | Specifications (T1110) .....                                | 7    |
|         | Metric Bolt Torque Specifications .....                     | 8    |
|         | Special Tools .....   | 9    |
|         | Description and Operation - Hydraulic System Circuits ..... | 10   |
|         | Oil Filter .....  | 12   |
|         | Control Valve Assembly (HPL) (T1010 and T1030) .....        | 12   |
|         | Flow Priority Valve .....                                   | 13   |
|         | Relief Valve .....  | 13   |
|         | Check Valves .....  | 13   |
|         | Safety Valve .....  | 13   |
|         | Detent Balls .....  | 13   |
|         | Oil Flow (T1010 and T1030) .....                            | 14   |
|         | Neutral Position .....                                      | 14   |
|         | Lifting Position .....                                      | 15   |
|         | Lowering Position .....                                     | 16   |
|         | Drop Rate Control Valve (T1010 and T1030) .....             | 17   |
|         | Troubleshooting (T1010 and T1030) .....                     | 18   |
|         | Control Valve Assembly (HPL) (T1110) .....                  | 19   |
|         | Flow Priority Valve .....                                   | 19   |
|         | Relief Valve .....  | 19   |
|         | Check Valve .....   | 19   |
|         | Safety Valve .....  | 20   |
|         | Unload Valve .....  | 20   |
|         | Lowering Valve .....  | 20   |
|         | Oil Flow (T1110) .....                                      | 21   |
|         | Neutral Position .....                                      | 21   |
|         | Lifting Position .....                                      | 22   |
|         | Lowering Position .....                                     | 23   |
|         | Drop Rate Control Valve (T1110) .....                       | 24   |
|         | Troubleshooting (T1110) .....                               | 25   |
|         | Overhaul - Lift Cylinder .....                              | 26   |
|         | Removal .....   | 26   |

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87739175

## Chapter 1 - Hydraulics (Continued)

### CONTENTS

| Section | Description                           | Page |
|---------|---------------------------------------|------|
|         | Lift Cylinder .....                   | 30   |
|         | Disassembly .....                     | 30   |
|         | Inspection and Repair .....           | 31   |
|         | Assembly .....                        | 32   |
|         | Drop Rate Control Valve .....         | 33   |
|         | Disassembly .....                     | 33   |
|         | Inspection .....                      | 33   |
|         | Assembly .....                        | 33   |
|         | Control Valve (T1010 and T1030) ..... | 34   |
|         | Disassembly .....                     | 34   |
|         | Inspection .....                      | 34   |
|         | Lift Check Valve .....                | 35   |
|         | Disassembly .....                     | 35   |
|         | Inspection .....                      | 35   |
|         | Assembly .....                        | 35   |
|         | Safety Valve .....                    | 36   |
|         | Disassembly .....                     | 36   |
|         | Inspection .....                      | 36   |
|         | Assembly .....                        | 36   |
|         | Relief Valve .....                    | 37   |
|         | Disassembly .....                     | 37   |
|         | Inspection .....                      | 37   |
|         | Assembly .....                        | 37   |
|         | Spool .....                           | 38   |
|         | Disassembly .....                     | 38   |
|         | Inspection .....                      | 38   |
|         | Assembly .....                        | 39   |
|         | Flow Priority Valve .....             | 40   |
|         | Disassembly .....                     | 40   |
|         | Inspection .....                      | 40   |
|         | Assembly .....                        | 40   |
|         | Control Valve .....                   | 41   |
|         | Assembly .....                        | 41   |

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87739175

## Chapter 1 - Hydraulics (Continued)

### CONTENTS

| Section | Description                                   | Page |
|---------|---|------|
|         | Control Valve (T1110) .....                   | 42   |
|         | Disassembly .....                             | 42   |
|         | Inspection .....                              | 44   |
|         | Lift Check Valve .....                        | 45   |
|         | Inspection .....                              | 45   |
|         | Assembly .....                                | 45   |
|         | Safety Valve .....                            | 45   |
|         | Inspection .....                              | 45   |
|         | Assembly .....                                | 45   |
|         | Relief Valve .....                            | 46   |
|         | Inspection .....                              | 46   |
|         | Assembly .....                                | 46   |
|         | Flow Priority Valve .....                     | 47   |
|         | Inspection .....                              | 47   |
|         | Assembly .....                                | 47   |
|         | Lowering Valve .....                          | 47   |
|         | Assembly .....                                | 47   |
|         | Check Valve .....                             | 48   |
|         | Assembly .....                                | 48   |
|         | Unload Valve .....                            | 48   |
|         | Assembly .....                                | 48   |
|         | Spool .....                                   | 48   |
|         | Disassembly .....                             | 48   |
|         | Inspection .....                              | 49   |
|         | Assembly .....                                | 49   |
|         | Control Valve .....                           | 50   |
|         | Installation .....                            | 50   |
|         | Lift Cover .....                              | 51   |
|         | Installation .....                            | 51   |
|         | Adjustment .....                              | 54   |
|         | Hydraulic System Circuit (T1010, T1030) ..... | 54   |
|         | Feedback Plate Adjustment .....               | 54   |

---

# SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87739175

## Chapter 1 - Hydraulics (Continued)

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Hydraulic Control Lever Preload .....  | 55   |
|         | Adjustment (T1110) .....   | 55   |
|         | HPL Linkage Adjustments (T1110) .....  | 55   |
|         | Adjustment Procedure .....   | 56   |
|         | Description and Operation - Hydraulic Pump and Filter .....                                  | 57   |
|         | Disassembly .....  | 58   |
|         | Inspection and Repair .....  | 58   |
|         | Assembly .....   | 59   |
|         | Installation .....   | 60   |
|         | Break-in Procedure .....   | 60   |
|         | Overhaul - Hydraulic Pump (All Models) .....   | 61   |
|         | Removal .....  | 61   |
|         | Description and Operation - Remote Control Valves .....                                      | 61   |
|         | Single-Spool Control Valve .....   | 62   |
|         | Double-Spool Control Valve .....   | 63   |
|         | Single-Spool Remote Control Valve - Oil Flow .....   | 65   |
|         | Neutral Position .....   | 65   |
|         | Raising Position .....   | 66   |
|         | Lowering Position .....  | 67   |
|         | Two Spool Remote Control Valve - Oil Flow .....  | 68   |
|         | Bucket and Lift Control - Neutral Position .....   | 68   |
|         | Bucket Cylinder - Dumping .....  | 69   |
|         | Bucket Cylinder - Rollback .....   | 70   |
|         | Lift Cylinder - Raising .....  | 71   |
|         | Lift Cylinder - Lowering .....   | 72   |
|         | Lift Cylinder - Float Position .....   | 73   |
|         | Hydraulic Fluid Flow With 2-Spool Valve (T1010, T1030) .....                                 | 74   |
|         | Hydraulic Fluid Flow With Remote Valve (T1010, T1030) .....                                  | 74   |
|         | Hydraulic Fluid Flow With Remote Valve and 2-Spool Valve Combination<br>(T1010, T1030) ..... | 75   |
|         | Hydraulic Fluid Flow With 2-Spool Valve (T1110) .....  | 75   |
|         | Hydraulic Fluid Flow With Remote Valve (T1110) .....   | 76   |
|         | Hydraulic Fluid Flow With Remote Valve and 2-Spool Valve Combination (T1110) ..              | 76   |



---

## SECTION 35 - HYDRAULIC SYSTEM

BOOK 2 - 87739175

### Chapter 1 - Hydraulics (Continued)

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Troubleshooting - Front and Rear Remote Valves .....                | 77   |
|         | Overhaul - Remote Control Valve .....                               | 78   |
|         | Removal .....   | 78   |
|         | Single-Spool Valve (Rear Remote Valve) .....                        | 79   |
|         | Disassembly .....   | 79   |
|         | Inspection .....  | 79   |
|         | Assembly .....  | 80   |
|         | Installation .....  | 81   |
|         | Two Spool Remote Valve (Front Remote Valve) .....                   | 82   |
|         | Removal .....   | 83   |
|         | Front Remote Valve .....  | 84   |
|         | Disassembly .....   | 84   |
|         | Inspection .....  | 84   |
|         | Assembly .....  | 86   |
|         | Installation .....  | 88   |
|         | Description and Operation - Mower Lift Linkage (T1010, T1030) ..... | 89   |
|         | Adjustment (T1010, T1030) .....                                     | 92   |
|         | Mower Deck Height .....   | 92   |
|         | Description and Operation - Mower Lift Linkage (T1110) .....        | 93   |
|         | Mower Deck Lifting Position (Adjustment) (T1110) .....              | 95   |
|         | Inspection .....  | 95   |
|         | Adjustment .....  | 95   |
|         | Lowering Position Adjustment (T1110) .....                          | 95   |
|         | Pressure Testing .....  | 96   |
|         | Main System Relief Valve (T1010, T1030) .....                       | 96   |
|         | Main System Relief Valve (T1110) .....                              | 97   |
|         | Pressure Testing .....  | 97   |
|         | Pump Efficiency .....   | 99   |

---

# SECTION 41 - POWER STEERING

BOOK 2 - 87739175

## Chapter 1 - Power Steering

### CONTENTS

| Section | Description                         | Page |
|---------|-------------------------------------|------|
|         | Description of Operation .....      | 3    |
|         | Power Steering Control Valve .....  | 6    |
|         | Spool and Sleeve .....              | 6    |
|         | Drive Shaft .....                   | 7    |
|         | Gerotor Pump .....                  | 7    |
|         | Check Valve .....                   | 7    |
|         | Relief Valve .....                  | 7    |
|         | Hydraulic Pump .....                | 9    |
|         | Power Steering Cylinder .....       | 9    |
|         | Power Steering Operation .....      | 10   |
|         | Fluid Flow - Neutral Position ..... | 10   |
|         | Fluid Flow - Left Turn .....        | 11   |
|         | Fluid Flow - Right Turn .....       | 12   |
|         | Manual Operation .....              | 13   |
|         | Overhaul .....                      | 14   |
|         | Steering Control Valve .....        | 14   |
|         | Removal .....                       | 14   |
|         | Disassembly .....                   | 15   |
|         | Inspection .....                    | 18   |
|         | Assembly .....                      | 19   |
|         | Installation .....                  | 24   |
|         | Control Valve Assembly (HPL) .....  | 26   |
|         | Flow Priority Valve .....           | 26   |
|         | Disassembly .....                   | 26   |
|         | Inspection .....                    | 26   |
|         | Assembly .....                      | 26   |
|         | Steering Cylinder .....             | 27   |
|         | Removal .....                       | 27   |
|         | Disassembly .....                   | 28   |
|         | Inspection .....                    | 29   |
|         | Assembly .....                      | 29   |
|         | Installation .....                  | 30   |

---

# SECTION 41 - POWER STEERING

BOOK 2 - 87739175

## Chapter 1 - Power Steering (Continued)

### CONTENTS

| Section | Description                                 | Page |
|---------|---|------|
|         | Troubleshooting .....                       | 31   |
|         | Hydraulic Pump .....                        | 31   |
|         | Power Steering Tubes .....                  | 31   |
|         | Troubleshooting Chart .....                 | 32   |
|         | Pressure Testing .....                      | 33   |
|         | Pump, Steering Valve and Relief Valve ..... | 33   |
|         | Testing .....                               | 33   |
|         | Test Results .....                          | 33   |
|         | Steering Cylinder .....                     | 34   |
|         | Testing .....                               | 34   |
|         | Test Results .....                          | 34   |
|         | Steering Control Relief Valve .....         | 34   |
|         | Adjustment .....                            | 34   |
|         | Priority Flow Valve .....                   | 37   |
|         | Testing .....                               | 37   |
|         | Specifications .....                        | 39   |
|         | Special Tools .....                         | 39   |

---

# SECTION 44 - WHEELS

BOOK 3 - 87739176

## Chapter 1 - Wheels

### CONTENTS

| Section | Description                                   | Page |
|---------|---|------|
|         | Wheel Tread Settings .....                    | 2    |
|         | Front Wheel Settings .....                    | 2    |
|         | Rear Wheel Settings .....                     | 2    |
|         | Tractor Weighting .....                       | 3    |
|         | Weighting for Stability .....                 | 3    |
|         | Weighting Limitations .....                   | 3    |
|         | Cast Iron Weights (optional) .....            | 4    |
|         | Front End Weights .....                       | 4    |
|         | Rear Wheel Weights .....                      | 4    |
|         | Liquid Ballast (optional) (T1010/T1030) ..... | 5    |
|         | Tire Pressure .....                           | 5    |
|         | Liquid Ballast (optional) (T1110) .....       | 6    |
|         | Tire Pressure .....                           | 6    |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 1 - Electrical System

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Electrical Component Location and Function . . . . .              | 5    |
|         | Component Locations and Functions . . . . .                       | 6    |
|         | Ground Locations . . . . .  | 8    |
|         | Description of Operation - Electrical System Components . . . . . | 9    |
|         | Battery . . . . .   | 9    |
|         | Checking the Battery Electrolyte Level . . . . .                  | 10   |
|         | Removal . . . . .   | 10   |
|         | Installation . . . . .  | 10   |
|         | Main Fuse (40 Amp) . . . . .                                      | 11   |
|         | Replacement . . . . .   | 11   |
|         | Fuse Block . . . . .  | 11   |
|         | Key Switch . . . . .  | 12   |
|         | Removal . . . . .   | 13   |
|         | Troubleshooting - Continuity Test . . . . .                       | 14   |
|         | Troubleshooting - Connector Wiring . . . . .                      | 15   |
|         | Installation . . . . .  | 16   |
|         | Light Switch . . . . .  | 16   |
|         | Removal . . . . .   | 16   |
|         | Testing . . . . .   | 17   |
|         | Installation . . . . .  | 17   |
|         | Headlights . . . . .  | 18   |
|         | Replacement . . . . .   | 18   |
|         | Taillights . . . . .  | 18   |
|         | Removal . . . . .   | 18   |
|         | Inspection . . . . .  | 19   |
|         | Installation . . . . .  | 19   |
|         | Hazard Flasher / Turn Signal / Horn Switch . . . . .              | 19   |
|         | Removal . . . . .   | 20   |
|         | Testing . . . . .   | 20   |
|         | Installation . . . . .  | 21   |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 1 - Electrical System (Continued)

### CONTENTS

| Section | Description                                      | Page |
|---------|--|------|
|         | Hazard/Turn Signal Lights .....                  | 22   |
|         | Removal .....                                    | 22   |
|         | Inspection .....                                 | 22   |
|         | Installation .....                               | 22   |
|         | Horn .....                                       | 23   |
|         | Inspection .....                                 | 23   |
|         | Safety Switches .....                            | 23   |
|         | Transmission Range Safety Switch .....           | 23   |
|         | Removal .....                                    | 23   |
|         | Testing .....                                    | 24   |
|         | Installation .....                               | 24   |
|         | Seat Safety Switch .....                         | 24   |
|         | Removal .....                                    | 24   |
|         | Testing .....                                    | 25   |
|         | Switch Plunger Retracted (In) .....              | 25   |
|         | Switch Plunger Extended (Out) .....              | 25   |
|         | Installation .....                               | 25   |
|         | Park Brake Safety Switch .....                   | 26   |
|         | Removal .....                                    | 26   |
|         | Testing .....                                    | 26   |
|         | Installation .....                               | 27   |
|         | Adjustment .....                                 | 27   |
|         | HST Cruise Brake Release Switch (Optional) ..... | 27   |
|         | Removal .....                                    | 28   |
|         | Testing .....                                    | 28   |
|         | Installation .....                               | 28   |
|         | Adjustment .....                                 | 28   |
|         | PTO Position Safety Switch .....                 | 29   |
|         | Removal .....                                    | 29   |
|         | Inspection .....                                 | 29   |
|         | Adjustment .....                                 | 29   |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 1 - Electrical System (Continued)

### CONTENTS

| Section | Description                          | Page |
|---------|--------------------------------------|------|
|         | PTO Clutch Safety Switch .....       | 30   |
|         | Removal .....                        | 30   |
|         | Inspection .....                     | 30   |
|         | Adjustment .....                     | 30   |
|         | Accessory Socket .....               | 31   |
|         | Removal .....                        | 31   |
|         | Testing .....                        | 31   |
|         | Installation .....                   | 31   |
|         | Relays .....                         | 32   |
|         | Safety Start Relay .....             | 32   |
|         | Removal .....                        | 33   |
|         | Testing .....                        | 33   |
|         | Installation .....                   | 33   |
|         | HST Cruise Brake Release Relay ..... | 34   |
|         | Removal .....                        | 34   |
|         | Testing .....                        | 34   |
|         | Installation .....                   | 34   |
|         | Diodes .....                         | 35   |
|         | Charging System Diode .....          | 35   |
|         | Removal .....                        | 35   |
|         | Testing .....                        | 35   |
|         | Installation .....                   | 36   |
|         | Engine Glow Plugs .....              | 36   |
|         | Removal .....                        | 36   |
|         | Testing .....                        | 37   |
|         | Installation .....                   | 37   |
|         | Fuel Pump .....                      | 38   |
|         | Removal .....                        | 38   |
|         | Testing .....                        | 38   |
|         | Installation .....                   | 39   |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 1 - Electrical System (Continued)

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Fuel Level Sender .....  | 39   |
|         | Removal .....  | 39   |
|         | Testing .....  | 39   |
|         | Installation .....   | 40   |
|         | Fuel Shutoff Solenoid .....  | 41   |
|         | Removal .....  | 41   |
|         | Testing .....  | 41   |
|         | Installation .....   | 42   |
|         | Oil Pressure Switch .....  | 42   |
|         | Removal .....  | 42   |
|         | Testing .....  | 43   |
|         | Installation .....   | 43   |
|         | Coolant Temperature Sending Unit .....   | 43   |
|         | Removal .....  | 44   |
|         | Instrument Panel Components .....  | 45   |
|         | Safety Controller .....  | 45   |
|         | Removal .....  | 45   |
|         | Controller Terminal Identification<br>(Viewed from Bottom of Controller) ..... | 46   |
|         | Testing Safety Start Circuit .....   | 47   |
|         | Operator NOT in Seat .....   | 47   |
|         | Operator in Seat .....   | 47   |
|         | Testing Glow Plug Indicator Light Circuit .....                                | 47   |
|         | Key Switch in "HEAT" Position .....  | 47   |
|         | Key Switch in "HEAT" Position .....  | 48   |
|         | Testing PTO Indicator Light Circuit .....                                      | 48   |
|         | Testing the Fuel Shutoff Solenoid Circuit .....                                | 48   |
|         | Operator NOT in Seat .....   | 48   |
|         | Operator in Seat .....   | 49   |
|         | Testing Alarm Circuit .....  | 49   |
|         | Operator NOT in Seat .....   | 49   |
|         | Operator in Seat .....   | 49   |



---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 1 - Electrical System (Continued)

### CONTENTS

| Section | Description                    | Page |
|---------|--------------------------------|------|
|         | Flasher Controller .....       | 50   |
|         | Removal .....                  | 50   |
|         | Testing .....                  | 51   |
|         | Test Procedures .....          | 52   |
|         | Connection for All Tests ..... | 52   |
|         | Hazard Lights Test .....       | 52   |
|         | Left Turn Signal Test .....    | 52   |
|         | Right Turn Signal Test .....   | 53   |
|         | Safety Alarm (Buzzer) .....    | 53   |
|         | Removal .....                  | 53   |
|         | Inspection .....               | 54   |
|         | Installation .....             | 54   |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 2 - Electrical Circuits

### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Electrical Circuits .....                               | 2    |
|         | Complete Circuit Diagram .....                          | 2    |
|         | Starting Circuit (Operator Present) .....               | 4    |
|         | Starting Circuit (No Operator Present) .....            | 8    |
|         | Safe Operation Circuit (Operator Present) .....         | 12   |
|         | Safe Operation Circuit (No Operator Present) .....      | 14   |
|         | Glow Plug Circuit - T1010, T1030, T1110 .....           | 18   |
|         | Lighting Circuits (Headlights) (All Tractors) .....     | 20   |
|         | Lighting Circuits (Worklights) (All Tractors) .....     | 24   |
|         | Hazard Flasher Circuits (All Tractors) .....            | 28   |
|         | Left Turn Signal Circuit (All Tractors) .....           | 30   |
|         | Right Turn Signal Circuit (All Tractors) .....          | 34   |
|         | PTO Indicator Light Circuit - T1010, T1030, T1110 ..... | 38   |
|         | Engine Coolant Temperature Circuit (All Tractors) ..... | 40   |
|         | Engine Oil Pressure Circuit (All Tractors) .....        | 42   |
|         | Fuel Level Circuit (All Tractors) .....                 | 44   |
|         | Auxiliary Electrical Power Socket (All Tractors) .....  | 46   |
|         | Horn Circuit (All Tractors) .....                       | 48   |
|         | Charging Circuit - T1010, T1030, T1110 .....            | 50   |
|         | Safety Alarm Circuit - T1010, T1030, T1110 .....        | 54   |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 3 - Instrument Panel

### CONTENTS

| Section | Description                                       | Page |
|---------|---|------|
|         | Description of Operation - Instrument Panel ..... | 2    |
|         | Instrument Panel .....                            | 3    |
|         | Removal .....                                     | 3    |
|         | Instrument Panel Light Replacement .....          | 4    |
|         | Instrument Panel Lighting .....                   | 4    |
|         | Fuel Gauge Testing .....                          | 5    |
|         | Temperature Gauge Testing .....                   | 6    |
|         | Installation .....                                | 6    |

---

# SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

## Chapter 4 - Alternator and Starter

### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Charging System - Construction of Components ..... | 3    |
|         | Alternator .....                                   | 3    |
|         | Stator .....                                       | 4    |
|         | Rotor .....  | 4    |
|         | Rectifier .....                                    | 4    |
|         | End Frame .....                                    | 5    |
|         | IC Regulator .....                                 | 5    |
|         | Improvement of Charging System .....               | 5    |
|         | Detection Function .....                           | 6    |
|         | Function .....                                     | 6    |
|         | Overhaul .....                                     | 7    |
|         | Alternator .....                                   | 8    |
|         | Disassembly .....                                  | 8    |
|         | Stator .....                                       | 12   |
|         | Inspection and Repair .....                        | 12   |
|         | Rotor .....  | 12   |
|         | Inspection and Repair .....                        | 12   |
|         | Rectifier .....                                    | 13   |
|         | Inspection .....                                   | 13   |
|         | Diode .....  | 13   |
|         | Testing .....                                      | 13   |
|         | Brush Holder and Brushes .....                     | 14   |
|         | Inspection .....                                   | 14   |
|         | Bearings .....                                     | 14   |
|         | Inspection and Replacement .....                   | 14   |
|         | Fan .....  | 14   |
|         | Inspection and Replacement .....                   | 14   |
|         | Drive Pulley .....                                 | 15   |
|         | Inspection and Replacement .....                   | 15   |
|         | Alternator Housing .....                           | 15   |
|         | Inspection and Replacement .....                   | 15   |
|         | Alternator .....                                   | 16   |
|         | Assembly .....                                     | 16   |

---

## SECTION 55 - ELECTRICAL SYSTEM

BOOK 3 - 87739176

### Chapter 4 - Alternator and Starter (Continued)

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | Testing .....   | 17   |
|         | Alternator with IC Regulator .....  | 17   |
|         | Regulator Voltage Check .....   | 17   |
|         | No Load Characteristics .....   | 17   |
|         | Output Characteristics .....  | 17   |
|         | Diagnosis on Alternator and Regulator .....                                   | 17   |
|         | Caution on Inspection .....   | 18   |
|         | Unit Inspection of IC Regulator .....   | 19   |
|         | M-Type IC Regulator (12V Specification) .....                                 | 20   |
|         | Measurement on the Vehicle .....  | 21   |
|         | Regulated Voltage Check (IC Regulator) .....                                  | 21   |
|         | Check for Alternator Output Current .....                                     | 21   |
|         | Troubleshooting .....   | 22   |
|         | Failure in Charging System .....  | 22   |
|         | Preliminary Checks .....  | 22   |
|         | Troubleshooting When Charge Lamp is Turned On While the Engine is Running ... | 23   |
|         | Care In Handling Charging Systems .....                                       | 24   |
|         | Specifications - Alternator .....   | 25   |
|         | Starting System .....   | 26   |
|         | Overhaul -Starter Motor .....   | 27   |
|         | Starter Motor .....   | 27   |
|         | Removal .....   | 27   |
|         | Disassembly .....   | 29   |
|         | Inspection and Repair .....   | 32   |
|         | Electrical Tests .....  | 35   |
|         | Armature Coil - Continuity Test .....   | 35   |
|         | Grounded Armature Coil Test .....   | 35   |
|         | Brush Holder Ground Test .....  | 35   |
|         | Field Coil Continuity Test .....  | 36   |
|         | Field Coil Ground Test .....  | 36   |
|         | Solenoid Coil .....   | 36   |
|         | Specifications - Starter Motor .....  | 37   |

---

## SECTION 58 - 230GM MID MOUNT MOWER

BOOK 3 - 87739176

### Chapter 1 - 230GM Mid Mount Mower

#### CONTENTS

| Section | Description  | Page |
|---------|--|------|
|         | Specifications . . . . .                                 | 3    |
|         | Metric Bolt Torque Specifications . . . . .              | 4    |
|         | Mower Deck - Overhaul . . . . .                          | 5    |
|         | Removal . . . . .  | 5    |
|         | 90° Gearbox, Blade Spindles and Pulley Holders . . . . . | 9    |
|         | Removal . . . . .  | 9    |
|         | 90° Gearbox Components . . . . .                         | 14   |
|         | 90° Gearbox . . . . .                                    | 15   |
|         | Disassembly . . . . .                                    | 15   |
|         | Inspection . . . . .                                     | 19   |
|         | Assembly . . . . .                                       | 19   |
|         | Initial Shimming Procedure . . . . .                     | 24   |
|         | Center Pulley Holder . . . . .                           | 25   |
|         | Disassembly . . . . .                                    | 25   |
|         | Inspection . . . . .                                     | 26   |
|         | Assembly . . . . .                                       | 26   |
|         | RH and LH Pulley Holders . . . . .                       | 28   |
|         | Disassembly . . . . .                                    | 28   |
|         | Inspection . . . . .                                     | 29   |
|         | Assembly . . . . .                                       | 29   |
|         | 90° Gearbox, Blade Spindles and Pulley Holders . . . . . | 31   |
|         | Assembly . . . . .                                       | 31   |
|         | Driveshaft . . . . .                                     | 37   |
|         | Disassembly . . . . .                                    | 37   |
|         | Inspection . . . . .                                     | 38   |
|         | Assembly . . . . .                                       | 38   |
|         | Mower Deck . . . . .                                     | 39   |
|         | Installation . . . . .                                   | 39   |
|         | Lubrication . . . . .                                    | 43   |
|         | Gearbox . . . . .  | 43   |

---

## SECTION 58 - 230GM MID MOUNT MOWER

BOOK 3 - 87739176

### Chapter 1 - 230GM Mid Mount Mower (Continued)

#### CONTENTS

| Section | Description   | Page |
|---------|---|------|
|         | T1010 and T1030 Mower Lift Linkage - Description of Operation ..... | 44   |
|         | Mower Lift Linkage .....  | 47   |
|         | Adjustment .....  | 47   |
|         | T1110 Mower Lift Linkage - Description of Operation .....           | 48   |
|         | Mower Deck Linkage .....  | 50   |
|         | Inspection .....  | 50   |
|         | Lift Position Adjustment .....                                      | 50   |
|         | Lowering Position Adjustable Stop .....                             | 51   |
|         | Cutting Height Adjustment - T1010, T1030 .....                      | 52   |
|         | Cutting Height Adjustment - T1110 .....                             | 53   |
|         | Mower Transport Lock - T1110 .....                                  | 54   |
|         | Adjustment of Transport Locks .....                                 | 54   |

---

# SECTION 90 - PLATFORM

BOOK 3 - 87739176

## Chapter 1 - Platform

### CONTENTS

| Section | Description                             | Page |
|---------|---|------|
|         | Description of Operation .....          | 2    |
|         | Hood .....                              | 2    |
|         | Removal .....                           | 2    |
|         | Installation .....                      | 3    |
|         | Main Cowling .....                      | 3    |
|         | Removal .....                           | 3    |
|         | Installation .....                      | 4    |
|         | Dash Panel .....                        | 6    |
|         | Removal .....                           | 6    |
|         | Installation .....                      | 7    |
|         | Steering Column .....                   | 8    |
|         | Removal .....                           | 8    |
|         | Installation .....                      | 9    |
|         | Engine Removal and Installation .....   | 9    |
|         | Seat .....                              | 10   |
|         | Removal .....                           | 10   |
|         | Installation .....                      | 11   |
|         | Rollover Protection System (ROPS) ..... | 11   |
|         | Removal .....                           | 11   |
|         | Installation .....                      | 12   |
|         | Fender Assembly .....                   | 13   |
|         | Removal .....                           | 13   |
|         | Installation .....                      | 14   |
|         | Foot Platform .....                     | 15   |
|         | Removal .....                           | 15   |
|         | Installation .....                      | 15   |
|         | Fuel Tank .....                         | 16   |
|         | Removal .....                           | 16   |
|         | Installation .....                      | 17   |



This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)