
T4020, T4030, T4040, T4050 DELUXE/SUPERSTEER REPAIR MANUAL COMPLETE CONTENTS

| | |
|---|----|
| SECTION 00 - GENERAL | 2 |
| SECTION 10 - ENGINE | 2 |
| SECTION 18 - CLUTCH | 5 |
| SECTION 21 - GEAR TRANSMISSION | 6 |
| SECTION 23 - DRIVE LINES | 9 |
| SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION | 10 |
| SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION | 13 |
| SECTION 31 - MECHANICAL POWER TAKE-OFF | 15 |
| SECTION 33 - BRAKING SYSTEM | 16 |
| SECTION 35 - HYDRAULIC SYSTEMS | 17 |
| SECTION 41 - STEERING | 24 |
| SECTION 44 - AXLES AND WHEELS | 26 |
| SECTION 50 - CAB AIR CONDITIONING SYSTEM | 27 |
| SECTION 55 - ELECTRICAL SYSTEM | 29 |
| SECTION 90 - CAB | 50 |

The following pages are the collation of the contents pages from each section and chapter of the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Repair manual. Complete Repair part # 84158071.

The sections used through out all New Holland product Repair manuals may not be used for each product. Each Repair manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Repair manual and which sections are in each book.

The sections listed above are the sections utilized for the T4020, T4030, T4040, T4050 Deluxe and SuperSteer Tractors.

SECTION 00 - GENERAL

BOOK 1 - 84158072

Chapter 1 - General

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | General Instructions | 3 |
| | Health and Safety | 5 |
| | Precautionary Statements | 15 |
| | Safety | 16 |
| | Ecology and the Environment | 19 |
| | Minimum Hardware Tightening Torques | 20 |
| | Federal Emissions Warranty | 22 |
| | California Emission Control Warranty Statement | 23 |
| | Consumables | 25 |

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine

CONTENTS

| Section | Description | Page |
|---------|--|------|
| 10 000 | Specifications | 3 |
| | Torque Settings | 9 |
| | Special Tools | 11 |
| | Sectional Views | 12 |
| | Description and Operation | 16 |
| | Exhaust Gas Recirculation System (EGR) | 16 |
| | Troubleshooting | 17 |

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|----------------|---|-------------|
| 10 001 10 | Overhaul | 21 |
| | Engine | 21 |
| | Removal | 21 |
| | Installation | 32 |
| 10 001 54 | Disassembly | 34 |
| | Assembly | 48 |
| | Checks, Measurements and Repairs | 74 |
| | Crankcase | 74 |
| | Crankshaft | 77 |
| | Connecting Rods | 79 |
| | Pistons | 81 |
| | Valves | 84 |
| | Camshaft | 88 |
| | Cylinder Head | 89 |
| | Low Oil Pressure Indicator | 90 |
| | Oil Filter | 90 |
| | Cooling System | 91 |
| 10 102 70 | Crankshaft Front Seal Replacement | 92 |
| | Removal | 92 |
| | Assembly | 93 |
| 10 102 74 | Crankshaft Rear Seal Replacement | 94 |
| | Removal | 94 |
| | Assembly | 95 |
| 10 106 12 | Valve/Rocker Arm | 97 |
| | Removal/Adjustment | 97 |
| | Installation | 99 |
| 10 218 30 | Injectors | 100 |
| | Removal | 100 |
| | Installation | 102 |

SECTION 10 - ENGINE

BOOK 1 - 84158072

Chapter 1 - Engine (Continued)

CONTENTS

| Section | Description | Page |
|-----------|---|------|
| 10 246 14 | Bosch Injection Pump | 103 |
| | Removal | 103 |
| | Installation | 104 |
| | Timing | 105 |
| | Air Bleeding | 107 |
| 10 402 10 | Coolant Pump | 108 |
| | Removal | 108 |
| | Installation | 110 |
| 10 402 30 | Thermostatic Valve | 111 |
| | Removal | 111 |
| | Installation | 112 |
| 10 406 10 | Radiator | 113 |
| | Removal | 113 |
| | Installation | 117 |
| 10 414 10 | Coolant Pump and Generator Drive Belt | 118 |
| | Tension Adjustment | 118 |

SECTION 10 - ENGINE

Chapter 2 - Engine (Models T4020 and T4030)

BOOK 1 - 84158072

CONTENTS

| Section | Description | Page |
|-----------|----------------------|------|
| | Specifications | 2 |
| | Overhaul | 4 |
| 10 001 10 | Engine | 4 |
| | Removal | 4 |
| | Installation | 20 |

SECTION 18 - CLUTCH

BOOK 1 - 84158072

Chapter 1 - Clutch

CONTENTS

| Section | Description | Page |
|-----------|---|------|
| 18 000 | Specifications | 2 |
| | Main Clutch - LUK 11"/11" | 2 |
| | Tightening Torques | 3 |
| | Special Tools | 3 |
| | Sectional Views | 4 |
| | Longitudinal Section of 11"/11" LUK Clutch | 4 |
| | Longitudinal Section of 11" LUK Clutch | 5 |
| | Troubleshooting | 6 |
| | Overhaul | 7 |
| 18 110 10 | Clutch | 7 |
| | Removal | 7 |
| | Installation | 18 |
| 18 110 30 | 11"/11" Dual Disk Clutch | 20 |
| | Disassembly | 20 |
| | Assembly | 24 |
| 18 110 30 | Single Disk Clutch 11" (fitted with Power-shuttle) | 25 |
| | Disassembly | 25 |
| | Assembly | 25 |
| | Checks, Measurements and Repairs - Dual Disk Clutch | 26 |
| | Coplanarity Adjustment of 11"/11" Dual Clutch Release | 27 |
| | Coplanarity of 11" Single Plate Clutch Release Levers | 28 |
| 18 100 40 | Gear Clutch Control Adjustments | 29 |
| | PTO Clutch Control Adjustments | 30 |
| | Sectional Views | 31 |
| | Description and Operation | 32 |
| | Engaging the PTO Control Clutch | 32 |
| | Disengaging the PTO Control Clutch | 33 |
| | PTO Clutch Servo Control Adjustment | 34 |
| | Adjusting the PTO Engaged Switch | 35 |

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 1 - Mechanical Transmission

CONTENTS

| Section | Description | Page |
|----------------|--|------|
| 21 000 | Specifications | 2 |
| | Torques | 3 |
| | Special Tools | 5 |
| | Sectional Views | 9 |
| | Description and Operation | 13 |
| | Gearbox and Shuttle | 13 |
| | Creeper Unit | 13 |
| | Troubleshooting | 13 |
| | Overhaul | 15 |
| 21 118 10 & 12 | Rear Transmission - Gearbox Casing | 15 |
| | Removal | 15 |
| | Installation | 21 |
| 21 118 85 | Gearbox Transmission Casing | 23 |
| | Disassembly | 23 |
| | Assembly | 31 |
| | Transmission - Gearbox Casing | 33 |
| | Gearbox Driving and Driven Shafts End Float Adjustment | 33 |
| 21 130 10 | Gearbox Control Lever | 35 |
| | Removal | 35 |
| | Installation | 35 |
| 21 130 11 | Range Gear Control Lever | 36 |
| | Removal | 36 |
| | Installation | 36 |
| 21 130 52 | Shuttle Control Lever | 37 |
| | Removal | 37 |
| | Installation | 37 |
| 10 216 10 | Fuel Tank | 38 |
| | Removal | 38 |
| | Installation | 39 |

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 2 - Mechanical Transmission and Splitter

CONTENTS

| Section | Description | Page |
|----------------|---|-------------|
| 21 000 | Specifications | 2 |
| | Torques | 2 |
| | Special Tools | 2 |
| | Sectional Views | 3 |
| | Description and Operation | 6 |
| | Gearbox and Shuttle | 6 |
| | Creeper Unit | 6 |
| | Splitter | 6 |
| | Troubleshooting | 7 |
| | Overhaul | 8 |
| 21 160 31 | Splitter Device and Creeper Unit Gearbox, Shafts and Bearings | 8 |
| | Removal | 8 |
| | Installation | 11 |

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 3 - Power Shuttle Transmission with HI LO Function

CONTENTS

| Section | Description | Page |
|----------------|--|------|
| 21 100 | Specifications | 2 |
| | Torques | 4 |
| | Special Tools | 5 |
| | Sectional Views | 8 |
| | Clutch Control Pressure Test | 11 |
| | Description and Operation | 13 |
| | Gearbox and Shuttle | 13 |
| | Creeper Unit | 13 |
| | Power Shuttle Unit | 13 |
| | Troubleshooting | 13 |
| | Overhaul | 14 |
| 21 118 85 | Gearbox Transmission Casing | 14 |
| | Disassembly | 14 |
| | Assembly | 16 |
| 21 134 46 | Power Shuttle Control Valve | 16 |
| | Disassembly | 16 |
| | Assembly | 19 |
| 21 134 62 | Accumulator | 20 |
| | Disassembly | 20 |
| | Assembly | 20 |
| 21 134 70 | Gearbox Control Valve Solenoid Valve | 21 |
| | Removal | 21 |
| | Installation | 21 |
| 21 134 70 | Gearbox Control Valve Solenoid Valve | 22 |
| | Removal | 22 |
| | Installation | 22 |
| 21 154 34 & 60 | Clutch Casing | 23 |
| | Disassembly | 23 |
| | Assembly | 27 |

SECTION 21 - GEAR TRANSMISSION

BOOK 1 - 84158072

Chapter 4 - Power Shuttle Transmission (8 + 8 and 16 + 16 versions)

CONTENTS

| Section | Description | Page |
|---------|------------------------------------|------|
| 21 000 | Specifications | 2 |
| | Torques | 3 |
| | Sectional Views | 4 |
| | Description and Operation | 7 |
| | Clutch Control Pressure Test | 7 |

SECTION 23 - DRIVE LINES

BOOK 2 - 84158073

Chapter 1 - Drive Lines

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 23 000 | Specifications | 2 |
| | Bolt Torques | 3 |
| | Special Tools | 4 |
| | Sectional Views | 6 |
| | Description and Operation | 9 |
| | 4WD Drive Gear with Electrohydraulic Coupling | 9 |
| | Drive Gear Housing | 10 |
| | Troubleshooting | 10 |
| | Overhaul | 11 |
| 23 101 26 | Transmission Shafts and Guard (Supersteer Models) | 11 |
| | Disassembly | 11 |
| | Assembly | 13 |
| 23 101 26 | Propeller Shafts and Guard (Models T4040 / T4050 Deluxe) | 13 |
| | Disassembly | 13 |
| | Assembly | 14 |

SECTION 23 - DRIVE LINES

BOOK 2 - 84158073

Chapter 1 - Drive Lines (Continued)

CONTENTS

| Section | Description | Page |
|-----------|-----------------------------------|------|
| 23 101 40 | | |
| 23 202 50 | Drive Gear Housing Assembly | 14 |
| | Removal | 14 |
| | Assembly | 15 |
| 42 23 101 | Drive Gear Housing Removed | 16 |
| | Disassembly | 16 |
| | Assembly | 17 |
| 23 202 52 | Removal | 18 |
| | Installation | 19 |

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Front Axle Mechanical Transmission (Model T4040 Supersteer and T4050 Supersteer)

CONTENTS

| Section | Description | Page |
|-----------|---------------------------------|------|
| 25 000 | Specifications | 3 |
| | Torques | 5 |
| | Special Tools | 8 |
| | Sectional Views | 11 |
| | Description and Operation | 14 |
| | Front Differential Lock | 15 |
| | Troubleshooting | 16 |
| | Overhaul | 17 |
| 25 100 30 | Front Axle Assembly | 17 |
| | Removal | 17 |
| | Installation | 20 |

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Front Axle Mechanical Transmission (Model T4040 Supersteer and T4050 Supersteer) (Continued)

CONTENTS

| Section | Description | Page |
|-----------------|---|------|
| 25 102 15 | Bevel Drive and Front Axle Differential Housing | 21 |
| | Removal | 21 |
| | Installation | 25 |
| 25 102 20 | Front Axle Bevel Drive Overhaul | 26 |
| | Disassembly | 26 |
| | Assembly | 27 |
| | Bevel Drive Adjustments | 28 |
| | Adjusting the Preloading on the Bevel Drive Shaft Bearings | 28 |
| | Determining the Thickness of the Drive Pinion Position Adjustment Shim | 29 |
| | Adjustment of the Crown Wheel Bearings and Checking the Backlash Between the Pinion and Crown Wheel | 31 |
| 25 102 24 | Front Axle Differential | 35 |
| | Adjustment | 35 |
| 25 104 34 | Front Differential Lock Clutch Unit | 36 |
| | Disassembly | 36 |
| | Assembly | 38 |
| 25 108 30 | Front Epicyclic Final Drive with Brake | 39 |
| | Disassembly | 39 |
| | Assembly | 41 |
| | Wheel Hub Seal Replacement | 42 |
| | Removal | 42 |
| | Installation | 43 |
| 25 108 30 | Front Epicyclic Final Drive | 43 |
| | Removal | 43 |
| | Installation | 45 |
| 25 108 38 | Wheel Hubs and Steering Knuckle | 47 |
| | Removal | 47 |
| | Installation | 47 |
| 25 108 46 or 47 | Steering Knuckle Pins and Bearings | 49 |
| | Replacement | 49 |
| 44 511 80 | Leading Drive Wheels Toe-in Check | 50 |

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 2 - Front Axle Mechanical Transmission (Model T4040 Deluxe and T4050 Deluxe)

CONTENTS

| Section | Description | Page |
|-----------------|---|------|
| 25 000 | Specifications | 3 |
| | Torques | 5 |
| | Tools | 7 |
| | Sectional Views | 9 |
| | Description and Operation | 10 |
| | Front Axle Pivot | 10 |
| | Front Differential Lock | 11 |
| | Troubleshooting | 12 |
| | Overhaul | 13 |
| 25 100 30 | Front Axle Assembly | 13 |
| | Removal | 13 |
| | Installation | 17 |
| 25 100 38 | Disassembly | 17 |
| | Assembly | 27 |
| 25 104 34 | Front Differential Lock Clutch Unit | 28 |
| | Disassembly | 28 |
| | Assembly | 29 |
| 25 108 46 or 47 | Steering Knuckle Pins and Bearings | 30 |
| | Replacement | 30 |
| | Stub Axle Adjustment | 31 |
| | Bevel Drive Adjustments | 33 |
| | Adjusting the Preloading on the Bevel Drive Shaft Bearings | 33 |
| | Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth | 37 |
| 25 102 24 | Front Axle Differential | 40 |
| | Adjusting the Backlash Between the Teeth of the Sun and Planet Pinions | 40 |
| | LIM-SLIP Self-locking Differential Lock | 41 |
| | Operation | 41 |
| 25 102 27 | Removal | 41 |
| | Disassembly | 42 |
| | Assembly | 42 |

SECTION 25 - FRONT AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 2 - Front Axle Mechanical Transmission (Model T4040 Deluxe and T4050 Deluxe) (Continued)

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 44 511 80 | Leading Drive Wheels Toe-in Check | 43 |
| 25 108 30 | Front Epicyclic Final Drive | 44 |
| | Removal | 44 |
| | Installation | 45 |
| 25 108 30 | Front Epicyclic Final Drive with Brake | 46 |
| | Disassembly | 46 |
| | Assembly | 48 |

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Rear Axle Mechanical Transmission

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 27 000 | Specifications | 2 |
| | Torques | 3 |
| | Special Tools | 5 |
| | Sectional Views | 9 |
| | Description and Operation | 11 |
| | Hydraulically Controlled Rear Differential Lock | 11 |
| | Rear Transmission | 12 |
| | Troubleshooting | 12 |
| | Overhaul | 14 |

SECTION 27 - REAR AXLE MECHANICAL TRANSMISSION

BOOK 2 - 84158073

Chapter 1 - Rear Axle Mechanical Transmission (Continued)

CONTENTS

| Section | Description | Page |
|-----------------|---|------|
| 27 106 16 | Rear Transmission Gearbox | 14 |
| | Disassembly | 14 |
| | Assembly | 18 |
| 27 110 10 | Adjusting the Position of Differential Lock Engagement Sleeve | 21 |
| | Adjusting the Bevel Gear Pair | 22 |
| | Adjusting the Bevel Crown Wheel Bearings and Checking the Clearance Between the Sides of the Bevel Drive Teeth | 22 |
| | Adjustment of the Clearance Between the Sun and Planet Pinion Teeth | 23 |
| 27 120 10 or 20 | Right-hand or Left-hand Final Drive Casing Assembly | 25 |
| | Removal | 25 |
| | Installation | 27 |
| 27 120 34 | Drive Wheel Shaft | 28 |
| | Disassembly | 28 |
| | Assembly | 30 |
| 27 120 32 | Epicyclic Final Drive | 30 |
| | Removal | 30 |
| | Installation | 30 |

SECTION 31 - MECHANICAL POWER TAKE-OFF

BOOK 2 - 84158073

Chapter 1 - Mechanical Power Take-off

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 31 000 | Specifications | 2 |
| | Special Tools | 4 |
| | Bolt Torques | 5 |
| | Sectional Views | 7 |
| | Description and Operation | 9 |
| | Mechanical PTO | 9 |
| | PTO Controlled Directly from the Engine Clutch | 9 |
| | PTO Synchronized with Gearbox (Mechanically Controlled Models) | 10 |
| | PTO Synchronized with Gearbox Power-Shuttle/Dual Command (2 Speed Power Shift) Models | 10 |
| | Selecting the Speed with the Lever | 11 |
| | Power Take-off Two or Three Speed Selection from the Driving Seat (On Request) | 11 |
| | Troubleshooting | 11 |
| | Overhaul | 12 |
| 31 112 20 | Mechanical PTO | 12 |
| | Removal | 12 |
| | Installation | 15 |

SECTION 33 - BRAKING SYSTEM

BOOK 3 - 84158074

Chapter 1 - Braking System

CONTENTS

| Section | Description | Page |
|----------------|--|------|
| 33 000 | Specifications | 2 |
| | Torques | 3 |
| | Sectional Views | 4 |
| | Special Tools | 6 |
| | Description and Operation | 7 |
| | Service Brakes | 7 |
| | Park Brake | 7 |
| | Troubleshooting | 8 |
| | Overhaul | 9 |
| 33 202 60 | Right or Left Hand Brake | 9 |
| | Removal | 9 |
| | Installation | 9 |
| 33 202 46 | Brake Hydraulic Pump | 11 |
| | Removal | 11 |
| | Installation | 14 |
| | Service Brakes Control Pedals | 15 |
| | Stroke Adjustment (Tractors with Cabs) | 15 |
| 33 202 04 | Brake Hydraulic System | 17 |
| | Air Bleeding | 17 |
| 33 110 40 & 44 | Parking Brake Disks | 19 |
| | Removal | 19 |
| | Installation | 20 |
| 33 110 08 | Hand Brake Control | 21 |
| | Stroke Adjustment | 21 |
| | Adjusting the Parking Brake ON Switch | 21 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 1 - Rear Mechanical Hydraulic Lift

CONTENTS

| Operation | Description | Page |
|-----------|--|------|
| | Specifications | 2 |
| | Torques | 3 |
| | Special Tools | 5 |
| | Sectional Views | 7 |
| | Description and Operation | 12 |
| | Troubleshooting | 16 |
| | Overhaul | 17 |
| 35 110 40 | Lift Internal Controls | 17 |
| | Disassembly | 17 |
| | Assembly | 21 |
| | Lift Adjustments | 22 |
| | Position Control | 22 |
| | Upper Stroke Limit Adjustment | 24 |
| | Draft Control | 26 |
| 35 110 08 | Rod Mechanism Adjustments | 30 |
| | Position Control Rod | 30 |
| | Draft Control Rod | 30 |
| | Fast Raise/Lower Device Adjustments | 31 |
| | Lift Arm Descent Speed Adjustments | 32 |
| | Upper Stroke Limit Adjustment Check | 33 |
| | Upper Stroke Limit Adjustment of the Fast Raise/Lower Device | 34 |
| 35 110 42 | Arm Shaft and Lift Cylinder | 35 |
| | Disassembly | 35 |
| | Assembly | 37 |
| 35 114 14 | Lift Control Valve | 39 |
| | Disassembly | 39 |
| | Assembly | 44 |
| 35 114 30 | Lift Pressure Relief Valve | 45 |
| | Removal | 45 |
| 35 114 32 | Setting | 45 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 2 - Open Center System Auxiliary Control Valves

CONTENTS

| Operation | Description | Page |
|-----------|---|------|
| | Specifications | 2 |
| | Special Tools | 2 |
| | Torques | 2 |
| | Sectional Views | 3 |
| | Description and Operation | 5 |
| | General | 5 |
| | Lifting | 5 |
| | Neutral | 5 |
| | Lowering | 5 |
| | Float (Only Available on Control Valve li) | 5 |
| | Operating Stages of Auxiliary Control Valve for Operation of a Double-acting Cylinder and Single-acting Cylinder | 6 |
| | Double-acting Cylinder | 6 |
| | Single-acting Cylinder | 6 |
| | Operating Stages of Auxiliary Control Valve for the Operation of a Single/Double-acting Cylinder with Automatic Detent Release and Float | 7 |
| | Lifting | 7 |
| | Lowering | 8 |
| | Float Operation | 8 |
| | Overhaul | 9 |
| 35 130 30 | Lift Electronic Control Center (Replacement) | 9 |
| | Removal | 9 |
| | Installation | 10 |
| 35 204 46 | Auxiliary Control Valves | 10 |
| | Disassembly | 10 |
| | Testing | 11 |
| | Adjustment of the Automatic Detent Release Pressure | 13 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 3 - Trailer Brake Auxiliary Control Valve

CONTENTS

| Operation | Description | Page |
|-----------|---------------------------------|------|
| | Description and Operation | 2 |
| | Fault Finding | 9 |
| 33 220 40 | Trailer Brake Valve | 12 |
| | Removal | 12 |
| | Installation | 12 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 4 - Electronically Controlled Hydraulic Lift

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 35 000 | Electronically Controlled Hydraulic Lift Data | 2 |
| | Electronically Controlled Hydraulic Lift Data | 4 |
| | Implement Hitching Device Data | 4 |
| | Bolt Torques | 5 |
| | Special Tools | 5 |
| | Description and Operation | 14 |
| | Electronically Controlled Hydraulic Lift Operation | 14 |
| | Neutral Phase | 14 |
| | Lifting Phase | 16 |
| | Lowering Phase | 18 |
| 35 110 30 | Electronically Controlled Hydraulic Lift | 20 |
| | Removal | 20 |
| | Installation | 25 |
| 35 110 53 | Draft Sensor Support | 26 |
| | Removal-Installation (With Lift Removed) | 26 |
| 35 130 30 | Lift Electronic Control Center | 27 |
| | Replacement | 27 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 4 - Electronically Controlled Hydraulic Lift (Continued)

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 35 130 36 | Lift Arm Potentiometer | 28 |
| | Replacement | 28 |
| 35 130 56 | Draft Sensor | 30 |
| | Removal-Installation | 30 |
| 35 134 42 | Electronically Controlled Hydraulic Lift | 32 |
| | Disassembly-Assembly | 32 |
| | Cylinder Safety Valve Calibration | 37 |
| 35 138 20 | Hydraulic Control Valve | 38 |
| | Removal-Installation | 38 |
| 35 138 24 | Hydraulic Control Valve | 39 |
| | Disassembly-Assembly | 39 |
| | Inspection and Re-fitting | 41 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 5 - Non-stop Flow Gear Pump

CONTENT

| Operation | Description | Page |
|-----------|--|------|
| | Specifications | 2 |
| | Torque | 3 |
| | Description and Operation | 3 |
| | Sectional Views | 3 |
| | Overhaul | 5 |
| 35 104 30 | Lift Oil Pump Models C42, Bosch 25 | 5 |
| | Disassembly | 5 |
| | Assembly Procedure | 6 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 6 - Front Power Take-off and Electronic Lift (For T4040 Supersteer And T4050 Supersteer Models)

CONTENTS

| Operation | Description | Page |
|-----------|---|------|
| | Main Specifications of Front Electronic Lift | 2 |
| | Main Specifications of Electronically Controlled Front Lift | 3 |
| | Implement Hitching Device Data | 4 |
| | Bolt Torques | 5 |
| | Electromagnetically Engaged Front Lift and Power Take-off | 12 |
| | Description and Operation | 12 |
| | Front Lift | 13 |
| | Operation Controls | 13 |
| | Adjustments | 13 |
| | Front Power Take Off | 14 |
| | Driving | 14 |
| | Implement Attachment and Power Take-off | 15 |
| | Lift Arms | 15 |
| | Front Lift Troubleshooting | 18 |
| 31 140 30 | Front Power Take-off Transmission Shaft R.I. | 20 |
| 31 140 34 | Front Power Take-off Drive Shaft D.A. | 30 |
| 31 140 43 | Front Power Take-off Electromagnetic Coupler R.I. | 32 |
| 31 140 46 | Front Power Take-off Electromagnetic Coupler D.A. | 35 |
| 31 162 52 | Front Lift Support R.I. | 40 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 7 - Front Lift and Power Take-off (For Models T4030 Deluxe, T4040 Deluxe and T4050 Deluxe)

CONTENT

| Operation | Description | Page |
|-----------|--|------|
| | Specifications | 3 |
| | Torque Values | 5 |
| | Front PTO | 5 |
| | Front Lift | 6 |
| | Sectional Views | 7 |
| | Description and Operation | 9 |
| | Front Power Take Off | 9 |
| | Front Mechanical Lift | 13 |
| | Front Electronic Lift | 14 |
| | Safety Switch | 14 |
| | Lift Arm Automatic Raise Switch | 14 |
| | Lift Arm Down Speed Control Potentiometer | 15 |
| | Lift Arm Up Limit Control Potentiometer | 15 |
| | Working Depth Control Potentiometer | 15 |
| | Pressure/Mixed/Position Control Potentiometer | 15 |
| | Lift Arm Up/Down Switch On The Dashboard | 16 |
| | Lift Arm Up/Down Switches On The Right-hand Mudguard | 16 |
| | External Lift Arm Up/Down Switches | 16 |
| | Lift Arms Position Sensor | 16 |
| | Accumulator Control Valve | 19 |
| | Neutral Phase | 20 |
| | Lifting Phase | 21 |
| | Lowering Phase | 22 |
| | Front Electronic Lift Operating Instructions | 23 |
| | Position Control | 23 |
| | Pressure Test | 24 |
| | Smooth Ride Control | 26 |

SECTION 35 - HYDRAULIC SYSTEMS

BOOK 3 - 84158074

Chapter 7 - Front Lift and Power Take-off (For Models T4030 Deluxe, T4040 Deluxe and T4050 Deluxe) (Continued)

CONTENT

| Operation | Description | Page |
|-----------|---|------|
| | Calibration | 27 |
| | Front Lift | 27 |
| | Implement Weight Calibration | 27 |
| | Calibrating The Lift Arms Height Sensor | 28 |
| | Troubleshooting | 30 |
| | Overhaul | 32 |
| | Front Lift (Mechanical/Electronic) | 32 |
| | Removal - Installation | 32 |
| | Front Power Take-off | 34 |
| | Removal - Installation | 34 |
| | Front Power Take-off | 36 |
| | Disassembly | 36 |
| | Assembly | 37 |
| 35 160 52 | Front Electronic Lift Control Unit | 38 |
| | Removal | 38 |
| | Installation | 38 |
| 35 160 40 | Front Electronic Lift Control Valve | 39 |
| | Removal | 39 |
| | Installation | 39 |
| | Fault Code Identification | 40 |
| | Fault Code Decoding | 40 |

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 1 - Steering

CONTENTS

| Operation | Description | Page |
|-----------|--|------|
| | Specifications | 3 |
| | Torques | 3 |
| | Special Tools | 3 |
| | Description and Operation | 4 |
| | Operation | 4 |
| | Neutral Position | 4 |
| | Right-hand Steering Control B, R-HT, E, F | 4 |
| | Left-hand Steering Control B, L-HT | 6 |
| | Emergency Hydraulic Control C, ER-HT, EL-HT | 6 |
| | Cylinder Safety Valve and Backflow Valve | 6 |
| | Sectional Views | 7 |
| | Troubleshooting | 8 |
| | Overhaul | 10 |
| 41 204 10 | Hydrostatic Steering Wheel | 10 |
| | Removal | 10 |
| | Installation | 10 |
| 41 204 30 | Hydrostatic Steering Control Valve | 11 |
| | Removal | 11 |
| | Installation | 14 |
| 41 204 34 | Hydrostatic Steering Control Valve | 15 |
| | Disassembly | 15 |
| | Assembly | 30 |
| 41 204 38 | Power Steering Control Valve - Bench Testing | 35 |
| | Checking Rotating Valve Wear | 35 |
| | Test Conditions | 35 |
| | Checking Return to Neutral Position | 37 |
| | Seal Check | 37 |
| | Pressure Relief Valve Calibration | 37 |
| | Cylinder Safety Valve Calibration | 37 |
| | Checking the Hydrostatic Steering Pressure Relief Valve with Control Valve Installed on Tractor | 38 |

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 1 - Steering (Continued)

CONTENTS

| Operation | Description | Page |
|-----------|--|------|
| 41 216 10 | Steering Control Cylinder (Models T4040 Supersteer and T4050 Supersteer) | 38 |
| | Removal | 38 |
| | Installation | 39 |
| 41 216 18 | Disassembly | 40 |
| | Assembly | 41 |

SECTION 41 - STEERING

BOOK 4 - 87758544

Chapter 2 - Non-stop Flow Gear Pump

CONTENTS

| Operation | Description | Page |
|-----------|--|------|
| | Specifications | 2 |
| | Torque | 3 |
| | Components | 4 |
| | Description and Operation | 5 |
| | Troubleshooting | 5 |
| | Overhaul | 6 |
| 41 206 20 | Hydrostatic Steering Oil Pump (A31 XRP 2 Pump Model) | 6 |
| | Disassembly | 6 |
| | Assembly Procedure | 7 |

SECTION 44 - AXLES AND WHEELS

BOOK 4 - 87758544

Chapter 1 - Axles and Wheels

CONTENTS

| Section | Description | Page |
|----------------|--|-------------|
| 44 000 | Specifications | 2 |
| | Specifications | 3 |
| | 2WD Front Wheel Track Diagram | 3 |
| | Torque | 4 |
| | Torque | 5 |
| | Sectional Views | 7 |
| | Special Tools | 8 |
| | Troubleshooting | 8 |
| | Overhaul | 9 |
| 44 101 22 | Front Axle Hub | 9 |
| | Disassembly | 9 |
| | Assembly | 11 |
| 44 101 30 | Front Axle | 12 |
| | Removal | 12 |
| | Installation | 15 |
| 44 101 46 | Stub Axle | 16 |
| | Removal | 16 |
| | Installation | 19 |
| 44 511 80 | Checking the Alignment of the Leading Wheels | 21 |

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System

CONTENTS

| Operation | Description | Page |
|------------------|---|-------------|
| | Safety | 4 |
| | Description of Operation | 5 |
| | Start Up | 5 |
| | Adjustment | 5 |
| | Switching Off | 5 |
| | Special Tools | 6 |
| | Specifications | 6 |
| | Operating Principles | 7 |
| | Simplified Psychrometric Diagram | 7 |
| | Main Components of Cab Air Conditioning System | 8 |
| | Compressor | 9 |
| | Condenser | 10 |
| | Dryer Filter | 10 |
| | Thermostatic Expansion Valve | 11 |
| | Evaporator | 12 |
| | Thermostatic Switch (ANTI-FROST) | 12 |
| | Cab Heating and Ventilation Controls | 13 |
| | Ventilation | 13 |
| | Electric Fan | 13 |
| | Heating | 14 |
| | Air Filter | 14 |
| | Ignition Switch | 14 |
| | Cab Air Conditioning and Temperature Controls | 15 |
| | Air Conditioning and Temperature Control Button | 15 |
| | Heater Control Knob | 15 |
| | 3-Speed Electric Fan Control Knob | 15 |
| 50 200 03 | Function and Cooling Testing | 16 |
| | Pressure Variations at Different Altitudes | 17 |
| | Maintenance of the Air Conditioning System | 18 |
| | Air Conditioning System Fault Diagnosis Summary | 19 |
| | Visual Inspection of Components | 19 |

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System (Continued)

CONTENTS

| Operation | Description | Page |
|-----------|---|------|
| | Refrigerant Recovery-recycling and Evacuation-charging Stations | 20 |
| | Recovery and Recycling Station (294048) | 20 |
| | Recycling, Evacuation and Charging Station (380000315) | 21 |
| 50 200 04 | Drying, Recharging and Refrigeration Check | 22 |
| | Recovery of Refrigerant from the Cab Air Conditioning System Using the Recovery/Recycling Station 294048 | 22 |
| | Recycling of Recovered Refrigerant | 23 |
| | Discharge of Recovered Oil | 24 |
| | Transfer of Decontaminated Refrigerant From Cylinder (19) to an External Cylinder | 24 |
| | Evacuation and Charging the Cab Air Conditioning System Using the Recycling, Evacuation and Charging Station 380000315 | 24 |
| | Evacuation of the Graduated Cylinder (31) of the Evacuation/Charging Station | 24 |
| | Charging the Graduated Cylinder (31) of the Evacuation/Charging Station | 24 |
| | Evacuation of the Cab Air Conditioning System (Previously Discharged Using the Recover/Recycling Station) | 26 |
| | Charging the Cab Air Conditioning System (After Evacuation) With New Oil | 26 |
| | Charging the Cab Air Conditioning System With Refrigerant (After Evacuation) | 26 |
| | Summary of the Air Conditioning System Charging Operations | 27 |
| 50 200 06 | Checking for and Removing Gas Leaks | 29 |
| | Testing for Leaks With Leak Detector 380000314 | 29 |
| | Checking for Refrigerant Leaks Using an Electronic Leak Detector | 30 |
| | Leak Detector (380000314) | 30 |
| | Use | 30 |
| | Refrigerant Gas Leak Test | 30 |
| | Service | 30 |
| 50 200 10 | Compressor Drive Belt Tension Adjustment | 31 |
| | Fitting the Compressor Drive Belt | 31 |
| | Checking Compressor Drive Belt Tension | 31 |
| | Periodic Checking of Drive Belt | 32 |
| | Troubleshooting | 33 |
| | Overhaul | 37 |

SECTION 50 - CAB AIR CONDITIONING SYSTEM

BOOK 4 - 87758544

Chapter 1 - Cab Air Conditioning System (Continued)

CONTENTS

| Operation | Description | Page |
|-----------|---|------|
| 50 206 14 | Cab Air Infeed Vents | 37 |
| | Removal | 37 |
| | Installation | 37 |
| 50 206 51 | Cab Heating/Air Conditioning System | 38 |
| | Removal | 38 |
| 50 206 51 | Installation | 39 |
| 50 206 54 | Cab Heating Unit | 40 |
| | Disassembly | 40 |
| | Assembly | 41 |
| 50 206 56 | Cab Air Conditioning System Evaporator Unit | 41 |
| | Disassembly | 41 |
| | Assembly | 42 |
| 50 206 66 | Cab Fan Unit | 42 |
| | Disassembly | 42 |
| | Assembly | 43 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 1 - Instrument Panel

CONTENTS

| Section | Description | Page |
|---------|---|------|
| 55 100 | Instrument Cluster Description | 2 |
| | Digital Instrument Cluster | 2 |
| | Warning and Indicator Lights | 3 |
| | Digital Control Panel Indicators | 4 |
| | Transmitters, Sensors & Switches - Locations | 7 |
| | Transmitters, Sensors & Switches - Descriptions | 13 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 2 - Components

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Description of Components | 2 |
| | Central Console Panel | 2 |
| | Rev Counter/Hourmeter | 3 |
| | Digital Display | 3 |
| | Engine Coolant Temperature Gauge | 3 |
| | Fuel Gauge | 3 |
| | Multifunction Display | 4 |
| | Controls on Right-hand Cab Upright | 5 |
| | Key-start Ignition Switch | 5 |
| | Maintenance | 6 |
| | Bulb/Lamp Replacement | 6 |
| | Front Work Lights | 6 |
| | Swivel Work Light Bulbs | 6 |
| | Front Side and Indicator Light Bulbs | 7 |
| | Tail Lights, Brake Lights and Direction Indicator Lamp Bulb Replacement (Version Without Cab) | 7 |
| | License Plate Light Bulb Replacement | 8 |
| | Cab Front and Rear Work Lights | 8 |
| | Rear Sidelights, Brake and Direction Indicator Light Bulbs Replacement | 8 |
| | Replacing the Courtesy Light and Adjustable Reading Light | 9 |
| | Courtesy Light | 9 |
| | Adjustable Reading Lamp | 9 |
| | Work Light Bulb | 9 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 3 - Starting System

CONTENTS

| Section | Description | Page |
|-----------|---|------|
| 55 000 | Specifications | 2 |
| | Description and Operation | 3 |
| | Troubleshooting | 4 |
| | Overhaul | 5 |
| | System Tests | 5 |
| | Starting System Test on Tractor | 5 |
| | Current Absorbed on the Starter Motor Circuit | 5 |
| | Starting System Circuit Resistance (Voltage Drop) | 6 |
| | Battery Positive Cable | 6 |
| | Starter Motor Ground Connections | 7 |
| | Battery Ground Lead | 7 |
| 55 201 50 | Starter Motor | 7 |
| | Removal | 7 |
| | Installation | 7 |
| 55 201 54 | Starter Motor Removed | 9 |
| | Disassembly | 9 |
| | Assembly | 9 |
| | Bench Tests | 10 |
| | Starter Motor Test (Without Load) | 10 |
| | Armature | 10 |
| | Field Coils | 11 |
| | Bearing Bushes | 11 |
| | Pinion | 11 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 4 - Charging System

CONTENTS

| Section | Description | Page |
|-----------|--|------|
| 55 000 | Specifications | 2 |
| | Torque | 2 |
| | Description and Operation | 3 |
| | Alternator | 3 |
| | Description | 3 |
| | Operation | 4 |
| | Troubleshooting | 5 |
| | Precautions During the Operation | 5 |
| | Preliminary Checks | 5 |
| | Battery | 5 |
| | Driving Belt | 5 |
| | Warning Lamp | 6 |
| | Preliminary Tests | 6 |
| | System Testing | 7 |
| | Alternator Wire Connection Tests | 7 |
| | Charging Current and Regulated Voltage Tests | 7 |
| | Charging Circuit Voltage Drop Tests | 8 |
| | Insulated Side | 8 |
| | Ground Side Voltage Drop Test | 9 |
| | Maximum Alternator Output Test | 9 |
| | Alternator Component Tests | 10 |
| | Overhaul | 10 |
| 55 301 10 | Alternator | 10 |
| | Removal | 10 |
| | Disassembly | 11 |
| | Alternate Component Testing | 12 |
| 55 301 12 | Rotor | 15 |
| | Assembly Procedure | 18 |
| | Repair | 18 |
| | Installation | 18 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 4 - 87758544

Chapter 5 - Battery

CONTENTS

| Section | Description | Page |
|-----------|------------------------------------|------|
| 55 000 | Specifications | 2 |
| | Troubleshooting | 2 |
| | Discrepancy | 2 |
| | Probable Cause | 2 |
| | Description and Operation | 3 |
| | Overhaul | 4 |
| 55 301 40 | Battery | 4 |
| | Removal | 4 |
| | Installation | 4 |
| | Battery Maintenance | 5 |
| | Relative Density | 5 |
| | Precautions | 5 |
| | Dry Charged Batteries | 6 |
| | Charging the Battery | 6 |
| | Normal Charging (Top Up) | 6 |
| | Charging Very Flat Batteries | 6 |
| | Testing | 7 |
| | Performance Test | 7 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Electrical Circuit Components | 9 |
| | Description | 9 |
| | Component List - Numeric Order | 10 |
| | Version 1 - Two/Four-wheel Drive Models With Mechanical Four-wheel Drive and Mechanical Lift | 16 |
| | List of Relay Functions | 16 |
| | Main Fusebox | 17 |
| | Maxi-fuses | 17 |
| | Version 2 - Four-wheel Drive Models With Electrohydraulic Four-wheel Drive, Electrohydraulic Differential Lock and Mechanical Lift | 18 |
| | List of Relay Functions | 18 |
| | Main Fusebox | 19 |
| | Maxi-fuses | 19 |
| | Version 3 - Four-wheel Drive Models With Electrohydraulic Four-wheel Drive, Electrohydraulic Differential Lock and Electronic Lift | 20 |
| | List of Relay Functions | 20 |
| | Main Fusebox | 21 |
| | Maxi-fuses | 21 |
| | Version 4 - Four-wheel Drive Models With Permanent Four-wheel Drive, Electrohydraulic Differential Lock and Mechanical Lift | 22 |
| | List of Relay Functions | 22 |
| | Main Fusebox | 23 |
| | Maxi-fuses | 23 |
| | Version 5 - Four-wheel Drive Models With Permanent Four-wheel Drive, Electronic Rear Lift And Electrohydraulic Differential Lock | 24 |
| | List of Relay Functions | 24 |
| | Main Fusebox | 25 |
| | Maxi-fuses | 25 |
| | Fuse and Relay Layout on Cab Right-hand Upright | 26 |
| | Air Conditioned Cab Relays (2) | 26 |
| | Heated Cab Relays (2) | 26 |
| | Fuse Layout | 26 |
| | Fuse Box (1) (Cab Circuit) | 26 |
| | Power Sockets | 27 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Seven-pole Power Socket | 27 |
| | 25 A Two-pole Power Socket (ISO Version) | 27 |
| | 40 A Power Socket (North America Version) | 28 |
| | Grid Heater | 28 |
| | Grid Heater Relay | 28 |
| | Grid Heater Control Module | 28 |
| | Electronic Flasher Module | 29 |
| | Ground Location Points | 30 |
| | Ground Points Layout | 31 |
| | Electrical Circuits | 32 |
| | How to Use the Wiring Diagrams | 32 |
| | Connector Code Reading | 34 |
| | Wire Color Coding | 34 |
| | Symbols Used in Electrical Circuits | 35 |
| | Electrical Circuit Components (Functional Order) | 36 |
| | Version Index | 42 |
| | Version 1 - 2WD Models, Electrohydraulic Differential Lock, Rear Mechanical Lift | 43 |
| | Circuit Index | 43 |
| | Electrical Circuits Components Version 1 | 44 |
| | Circuit Diagrams | 49 |
| | Component Locations - Diagrams 1 through 4 | 49 |
| | Battery Cut-out Circuit - Diagram 1 | 50 |
| | Power Sockets, Wiper/Washer Pumps Circuit - Diagram 2 | 52 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 3 | 54 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 4 | 56 |
| | Component Locations - Diagrams 5 through 7 | 59 |
| | Grid-heater Circuit - Diagram 5 | 60 |
| | Instrument and Sensor Circuit - Diagram 6 | 62 |
| | Power Take-off and Safety Device Circuit - Diagram 7 | 64 |
| | Component Locations - Diagrams 8 through 11 | 67 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 8 | 68 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | External Lights and Horn Circuit - Diagram 9 | 70 |
| | Power Supplies 1 Circuit - Diagram 10 | 72 |
| | Power Supplies 2 Circuit - Diagram 11 | 74 |
| | Wiring Diagrams 12 through 15 | 77 |
| | Trailer Brake Circuit - Diagram 12 | 78 |
| | Engine, Sensors and Transmitters Circuit - Diagram 13 | 80 |
| | Safety and Speed Sensors Circuit - Diagram 14 | 82 |
| | Intermediate Connections Circuit - Diagram 15 | 84 |
| | Component Locations - Diagrams 16 through 21 | 87 |
| | Cab Ventilation and Air-conditioning Circuit - Diagram 16 | 88 |
| | Rotating Beacon Circuit - Diagram 17 | 90 |
| | Supplementary Direction Indicator Lights and Radio Circuit - Diagram 18 | 92 |
| | Cab Power Supplies Circuit - Diagram 19 | 94 |
| | Wiper/Washer Circuit - Diagram 20 | 96 |
| | Work Lights Circuit - Diagram 21 | 98 |
| | Component Locations - Diagrams 22 through 26 | 101 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 22 | 102 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 23 | 104 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 24 | 106 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 25 | 108 |
| | Front PTO Circuit - Diagram 26 | 110 |
| | Version 2 - Electrohydraulic Four-wheel Drive, Electrohydraulic Differential Lock, Rear Mechanical Lift | 113 |
| | Circuit Index | 113 |
| | Electrical Circuits Components Version 2 | 114 |
| | Component Locations - Diagrams 1 through 4 | 118 |
| | Four-wheel Drive Circuit - Diagram 1 | 120 |
| | Battery Cut-out Circuit - Diagram 2 | 122 |
| | Power Sockets, Wiper/Washer Pumps Circuit - Diagram 3 | 124 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 126 |
| | Component Locations - Diagrams 5 through 8 | 129 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 5 | 130 |
| | Grid Heater Circuit - Diagram 6 | 132 |
| | Instrument and Sensor Circuit - Diagram 7 | 134 |
| | Power Take-off and Safety Device Circuit - Diagram 8 | 136 |
| | Component Locations - Diagrams 9 through 12 | 139 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 9 | 140 |
| | External Lights and Horn Circuit - Diagram 10 | 142 |
| | Power Supplies 1 Circuit - Diagram 11 | 144 |
| | Power Supplies 2 Circuit - Diagram 12 | 146 |
| | Component Locations - Diagrams 13 through 15 | 149 |
| | Engine, Sensors and Transmitters Circuit - Diagram 13 | 150 |
| | Intermediate Connections Circuit - Diagram 14 | 152 |
| | Trailer Brake Circuit - Diagram 15 | 154 |
| | Component Locations - Diagram 16 through 21 | 157 |
| | Cab Ventilation and Air-conditioning Circuit - Diagram 16 | 158 |
| | Rotating Beacon Circuit - Diagram 17 | 160 |
| | Supplementary Direction Indicator Lights and Radio Circuit - Diagram 18 | 162 |
| | Cab Power Supplies Circuit - Diagram 19 | 164 |
| | Wiper/Washer Circuit - Diagram 20 | 166 |
| | Work Lights Circuit - Diagram 21 | 168 |
| | Component Locations - Diagrams 21 through 27 | 171 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 22 | 172 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 23 | 174 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 24 | 176 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 25 | 178 |
| | Front PTO Circuit - Diagram 26 | 180 |
| | Digital Instrument Circuit - Diagram 27 | 182 |
| | Version 3 - Electrohydraulic Four-wheel drive, Electrohydraulic Differential Lock, Rear Electronic Lift | 185 |
| | Circuit Index | 185 |
| | Electrical Circuits Components Version 3 | 186 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Component Locations - Diagrams 1 through 4 | 191 |
| | Four-wheel Drive Circuit - Diagram 1 | 192 |
| | Battery Cut-out Circuit - Diagram 2 | 194 |
| | Power Sockets, Wiper/Washer Pumps Circuit - Diagram 3 | 196 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 198 |
| | Component Locations - Diagrams 5 through 8 | 201 |
| | Front and Rear Electronic Lift Circuit - Diagram 5 | 202 |
| | Grid Heater Circuit - Diagram 6 | 204 |
| | Instrument and Sensor Circuit - Diagram 7 | 206 |
| | Power Take-off and Safety Device Circuit - Diagram 8 | 208 |
| | Component Locations - Diagrams 9 through 13 | 211 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 9 | 212 |
| | External Lights and Horn Circuit - Diagram 10 | 214 |
| | Power Supplies 1 Circuit - Diagram 11 | 216 |
| | Power Supplies 2 Circuit - Diagram 12 | 218 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 13 | 220 |
| | Component Locations - Diagrams 14 through 17 | 223 |
| | Intermediate Connections Circuit - Diagram 14 | 224 |
| | Trailer Brake Circuit - Diagram 15 | 226 |
| | Diagnostics Connection Can Line Circuit - Diagram 16 | 228 |
| | Engine, Sensors and Transmitters Circuit - Diagram 17 | 230 |
| | Component Locations - Diagrams 18 through 23 | 233 |
| | Cab Ventilation and Air-conditioning Circuit - Diagram 18 | 234 |
| | Rotating Beacon Circuit - Diagram 19 | 236 |
| | Supplementary Direction Indicator Lights and Radio Circuit - Diagram 20 | 238 |
| | Cab Power Supply Circuit - Diagram 21 | 240 |
| | Wiper/Washer Circuit - Diagram 22 | 242 |
| | Work Lights Circuit - Diagram 23 | 244 |
| | Component Locations - Diagrams 24 through 28 | 247 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 24 | 248 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 25 | 250 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 26 | 252 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 27 | 254 |
| | Front PTO Circuit - Diagram 28 | 256 |
| | Digital Instrument Circuit - Diagram 29 | 258 |
| | Version 4 - Permanent Four-wheel Drive, Electrohydraulic Differential Lock, Rear Mechanical Lift | 261 |
| | Circuit Index | 261 |
| | Electrical Circuits Components Version 4 | 262 |
| | Component Locations - Diagrams 1 through 4 | 266 |
| | Four-wheel Drive Circuit - Diagram 1 | 268 |
| | Battery Cut-out Circuit - Diagram 2 | 270 |
| | Power Sockets, Wiper/Washer Pumps Circuit - Diagram 3 | 272 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 274 |
| | Component Locations - Diagrams 5 through 8 | 277 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 5 | 278 |
| | Grid Heater Circuit - Diagram 6 | 280 |
| | Instrument and Sensor Circuit - Diagram 7 | 282 |
| | Power Take-off and Safety Device Circuit - Diagram 8 | 284 |
| | Component Locations - Diagrams 9 through 12 | 287 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 9 | 288 |
| | External Lights and Horn Circuit - Diagram 10 | 290 |
| | Power Supplies 1 Circuit - Diagram 11 | 292 |
| | Power Supplies 2 Circuit - Diagram 12 | 294 |
| | Component Locations - Diagrams 13 through 16 | 297 |
| | Trailer Brake Circuit - Diagram 13 | 298 |
| | Intermediate Connections Circuit - Diagram 14 | 300 |
| | Engine, Sensors and Transmitters Circuit - Diagram 15 | 302 |
| | Diagnostics Connection Can Line Circuit - Diagram 16 | 304 |
| | Component Locations - Diagrams 17 through 23 | 307 |
| | Cab Ventilation and Air-conditioning Circuit - Diagram 17 | 308 |
| | Rotating Beacon Circuit - Diagram 18 | 310 |
| | Supplementary Direction Indicator Lights and Radio Circuit - Diagram 19 | 312 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Cab Power Supply Circuit - Diagram 20 | 314 |
| | Wiper/Washer Circuit - Diagram 21 | 316 |
| | Work Lights Circuit - Diagram 22 | 318 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 23 | 320 |
| | Component Locations - Diagrams 24 through 27 | 323 |
| | Power Shuttle Circuit (Transmission Side) (Diagram 24) | 324 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 25 | 326 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 26 | 328 |
| | Front PTO Circuit - Diagram 27 | 330 |
| | Version 5 - Permanent Four-wheel Drive, Electrohydraulic Differential Lock, Rear Electronic Lift | 333 |
| | Circuit Index | 333 |
| | Electrical Circuits Components Version 5 | 334 |
| | Component Locations - Diagrams 1 through 4 | 339 |
| | Four-wheel Drive Circuit - Diagram 1 | 340 |
| | Battery Cut-out Circuit - Diagram 2 | 342 |
| | Power Sockets, Wiper/Washer Pumps Circuit - Diagram 3 | 344 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 346 |
| | Component Locations - Diagrams 5 through 8 | 349 |
| | Front and Rear Electronic Lift Circuit - Diagram 5 | 350 |
| | Grid Heater Circuit - Diagram 6 | 352 |
| | Instrument and Sensor Circuit - Diagram 7 | 354 |
| | Power Take-off and Safety Device Circuit - Diagram 8 | 356 |
| | Component Locations - Diagrams 9 through 13 | 359 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 9 | 360 |
| | External Lights and Horn Circuit - Diagram 10 | 362 |
| | Power Supplies 1 Circuit - Diagram 11 | 364 |
| | Power Supplies 2 Circuit - Diagram 12 | 366 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 13 | 368 |
| | Component Locations - Diagrams 14 through 17 | 371 |
| | Diagnostics Connection Can Line Circuit - Diagram 14 | 372 |
| | Trailer Brake Circuit - Diagram 15 | 374 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 5 - 87758545

Chapter 6 - Electric Circuits Tractors Fitted With Cab (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Intermediate Connections Circuit - Diagram 16 | 376 |
| | Engine, Sensors and Transmitters Circuit - Diagram 17 | 378 |
| | Component Locations - Diagrams 18 through 23 | 381 |
| | Cab Ventilation and Air-conditioning Circuit - Diagram 18 | 382 |
| | Rotating Beacon Circuit - Diagram 19 | 384 |
| | Supplementary Direction Indicator Lights and Radio Circuit - Diagram 20 | 386 |
| | Cab Power Supply Circuit - Diagram 21 | 388 |
| | Windscreen and Rear Window Washer/Wiper Circuit - Diagram 22 | 390 |
| | Work Lights Circuit - Diagram 23 | 392 |
| | Component Locations - Diagrams 24 through 28 | 395 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 24 | 396 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 25 | 398 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 26 | 400 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 27 | 402 |
| | Front PTO Circuit - Diagram 28 | 404 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 6 - 87758546

Chapter 7 - Electric Circuits Tractors Fitted With Platform

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Electrical Circuit Components | 5 |
| | Description | 5 |
| | Component List - Numeric Order | 6 |
| | Version 1 (With Roll Bar) Two-wheel Drive Models With Mechanical Lift | 10 |
| | List of Relay Functions | 10 |
| | Main Fusebox | 11 |
| | Maxi-fuses | 11 |
| | Version 2 (With Roll Bar) 4-wheel Drive Models With Electrohydraulic Differential Lock, Electrohydraulic Four-wheel Drive And Mechanical Lift | 12 |
| | List of Relay Functions | 12 |
| | Main Fusebox | 13 |
| | Maxi-fuses | 13 |
| | Version 3 (With Roll Bar) 4wd Models With Mechanical Lift and Electrohydraulic Differential Lock | 14 |
| | List of Relay Functions | 14 |
| | Main Fusebox | 15 |
| | Maxi-fuses | 15 |
| | Power Sockets | 16 |
| | Seven-pole Power Socket | 16 |
| | 25 A Two-pole Power Socket (ISO Version) | 16 |
| | 40 A Power Socket (North America Version) | 17 |
| | Grid Heater | 17 |
| | Grid Heater Relay | 17 |
| | Grid Heater Control Module | 17 |
| | Electronic Flasher Module | 18 |
| | Ground Location Points | 19 |
| | Ground Points Layout | 20 |
| | Electrical Circuits | 21 |
| | How To Use the Wiring Diagrams | 21 |
| | Connector Code Reading | 23 |
| | Wire Color Coding | 23 |
| | Symbols Used in Electrical Circuits | 24 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 6 - 87758546

Chapter 7 - Electric Circuits Tractors Fitted With Platform (Continued)

CONTENTS

| Section | Description | Page |
|--|---|------|
| | Electrical Circuit Components (Functional Order) | 25 |
| | Version Index | 30 |
| Version 1 - 2WD Models, Rear Mechanical Lift | | 31 |
| | Circuit Index | 31 |
| | Electrical Circuits Components Version 1 | 32 |
| | Circuit Diagrams | 35 |
| | Component Locations - Diagrams 1 through 4 | 35 |
| | Four-wheel Drive Circuit - Diagram 1 | 36 |
| | Grid Heater Circuit - Diagram 2 | 38 |
| | Power Socket Circuit - Diagram 3 | 40 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 42 |
| | Component Locations - Diagrams 5 through 7 | 45 |
| | Direction Indicator and hazard Lights Circuit (Control Switches and Flasher) - Diagram 5 | 46 |
| | External Lights and Horn Circuit - Diagram 6 | 48 |
| | Power Supplies 1 Circuit - Diagram 7 | 50 |
| | Component Locations - Diagram 8 through 11 | 53 |
| | Instrument and Sensor Circuit - Diagram 8 | 54 |
| | Power Take-off and Safety Device Circuit - Diagram 9 | 56 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 10 | 58 |
| | Safety and Speed Sensors, Rear Work Light Circuit - Diagram 11 | 60 |
| | Component Locations - Diagrams 12 through 14 | 63 |
| | Trailer Brake Circuit - Diagram 12 | 64 |
| | Power Supplies 2 Circuit - Diagram 13 | 66 |
| | Engine, Sensors and Transmitters Circuit - Diagram 14 | 68 |
| | Component Locations - Diagrams 15 through 19 | 71 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 15 | 72 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 16 | 74 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 17 | 76 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 18 | 78 |
| | Front PTO Circuit - Diagram 19 | 80 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 6 - 87758546

Chapter 7 - Electric Circuits Tractors Fitted With Platform (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| | Version 2 - Electrohydraulic Four-wheel Drive, Electrohydraulic Differential Lock, Rear Mechanical Lift | 83 |
| | Circuit Index | 83 |
| | Electrical Circuits Components Version 2 | 84 |
| | Component Locations - Diagrams 1 through 4 | 87 |
| | Four-wheel Drive Circuit - Diagram 1 | 88 |
| | Power Take-off and Safety Device Circuit - Diagram 2 | 90 |
| | Power Socket Circuit - Diagram 3 | 92 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 4 | 94 |
| | Component Locations - Diagrams 5 through 9 | 97 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 5 | 98 |
| | Grid-Heater Circuit - Diagram 6 | 100 |
| | Power Supplies 1 Circuit - Diagram 7 | 102 |
| | Power Supplies 2 Circuit - Diagram 8 | 104 |
| | Instrument and Sensor Circuit - Diagram 9 | 106 |
| | Component Locations - Diagrams 10 and 11 | 109 |
| | External Lights and Horn Circuit - Diagram 10 | 110 |
| | Safety and Speed Sensors, Rear Work Light Circuit - Diagram 11 | 112 |
| | Component Locations - Diagrams 12 through 14 | 115 |
| | Engine, Sensors and Transmitters Circuit - Diagram 12 | 116 |
| | Seven -pin Socket and Number Plate Light Circuit - Diagram 13 | 118 |
| | Trailer Brake Circuit - Diagram 14 | 120 |
| | Component Locations - Diagrams 15 through 20 | 123 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 15 | 124 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 16 | 126 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 17 | 128 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 18 | 130 |
| | Front PTO Circuit - Diagram 19 | 132 |
| | Digital Instrument Circuit - Diagram 20 | 134 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 6 - 87758546

Chapter 7 - Electric Circuits Tractors Fitted With Platform (Continued)

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Version 3 - Permanent Four-wheel Drive, Electrohydraulic Differential Lock, Rear Mechanical Lift | 137 |
| | Circuit Index | 137 |
| | Electrical Circuits Components Version 3 | 138 |
| | Component Locations - Diagrams 1 through 4 | 141 |
| | Four-wheel Drive Circuit - Diagram 1 | 142 |
| | Power Socket Circuit - Diagram 2 | 144 |
| | Brakes, Brake Lights, Differential Lock Circuit - Diagram 3 | 146 |
| | Direction Indicator and Hazard Lights Circuit (Control Switches and Flasher) - Diagram 4 | 148 |
| | Component Locations - Diagrams 5 through 8 | 151 |
| | Grid-heater Circuit - Diagram 5 | 152 |
| | Instrument and Sensor Circuit - Diagram 6 | 154 |
| | Power Take-off and Safety Device Circuit - Diagram 7 | 156 |
| | Seven-pin Socket and Number Plate Light Circuit - Diagram 8 | 158 |
| | Component Locations - Diagrams 9 through 13 | 161 |
| | External Lights and Horn Circuit - Diagram 9 | 162 |
| | Power Supplies 1 Circuit - Diagram 10 | 164 |
| | Power Supplies 2 Circuit - Diagram 11 | 166 |
| | Trailer Brake Circuit - Diagram 12 | 168 |
| | Intermediate Connections Circuit - Diagram 13 | 170 |
| | Component Locations - Diagrams 14 and 15 | 173 |
| | Engine, Sensors and Transmitters Circuit - Diagram 14 | 174 |
| | Diagnostics Connection Can Line Circuit - Diagram 15 | 176 |
| | Component Locations - Diagrams 16 through 20 | 179 |
| | Power Shuttle Circuit 8+8 / 16+16 (Dashboard Side) - Diagram 16 | 180 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 17 | 182 |
| | Power Shuttle Circuit 32+16 / 44+16 (Dashboard Side) - Diagram 18 | 184 |
| | Power Shuttle Circuit (Transmission Side) - Diagram 19 | 186 |
| | Front PTO Circuit - Diagram 20 | 188 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 84158075

Chapter 8 - Connectors

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Electrical Circuit Components | 2 |
| | Types of Versions for Tractors with Cab | 6 |
| | Types of Versions for Tractors without Cab | 6 |
| | List of Connectors | 7 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 84158075

Chapter 9 - Error Codes

CONTENTS

| Section | Description | Page |
|---------|--|------|
| | Electronically-Control Rear Hydraulic Lift (EDC) Error Codes | 2 |
| | Transmission Error Codes | 32 |
| | Control Board (ADIC) Error Codes | 91 |
| | 4WD Error Codes | 117 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 84158075

Chapter 10 - HH Menu and Calibrations

CONTENTS

| Section | Description | Page |
|---|--|------|
| | HH Menu Access | 3 |
| H1 - Calibrations (SB - SA) | | 5 |
| | Calibration of the Clutches and Synchronizer (SB) | 5 |
| | Manual Calibration | 5 |
| | UXX Fault Codes | 7 |
| | Lift Calibrations (SA) | 8 |
| | Lifting and Lowering Control Solenoid Valve Calibrations | 8 |
| | UXX Fault Codes | 10 |
| | Lift Arms Calibrations | 11 |
| H2 - Displays All the Calibration Values (SB - SA) | | 12 |
| | Clutch Calibration Values (SB) | 12 |
| | Lift Calibration Values (SA) | 12 |
| H3 - Options (SB - ZA - SC) | | 13 |
| | Gearbox Options (SB) | 13 |
| | Options For Control Panel (ZA) | 13 |
| | Automatic Four-wheel Drive Options (SC) | 15 |
| H4 - Software Revision Level (ZA - SC - SB - SA) | | 16 |
| | Software Revision Level of the Control Panel (ZA) | 16 |
| | Software Revision Level of the Automatic Four-wheel Drive Control Unit (SC) | 16 |
| | Software Revision Level of the Power Shuttle Control Unit (SB) | 16 |
| | Software Revision Level of the Rear Lift Control Unit (SA) | 16 |
| H5 - Control Switch Diagnostics (ZA - SC - SB - SA) | | 17 |
| | Control Switches Diagnostics of the Control Panel (ZA) | 18 |
| | Automatic Four-wheel Drive Switches Diagnostics (SC) | 19 |
| | Power Shuttle Switches Diagnostics (SB) | 19 |
| | Electronically Controlled Rear Lift Switches Diagnostics (SA) | 20 |
| H7 - Service Procedures (SB - SA) | | 21 |
| | Service Procedures For Transmission (SB) | 21 |
| | Channel 1 - Clutch Pedal Switch Test | 21 |
| | Channel 2 - Synchronizer Movement Test | 21 |
| | Channel 3 - Power Shuttle Clutches Test | 22 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 84158075

Chapter 10 - HH Menu and Calibrations (Continued)

CONTENTS

| Section | Description | Page |
|---------|---|------|
| H8 | - Deletion of Stored Data (ZA - SC - SB - SA) | 22 |
| | Deletion of Stored Data In the Control Panel (ZA) | 22 |
| | Deletion of Stored Data For Automatic Four-wheel Drive (SC) | 23 |
| | Deletion of Stored Data For Power Shuttle (SB) | 24 |
| | Deletion of Stored Data For Electronically Controlled Rear Lift (SA) | 24 |
| H9 | - Voltmeter (ZA - SC - SB - SA) | 25 |
| | Control Panel Voltmeter (ZA) | 25 |
| | Automatic Four-wheel Drive Voltmeter (SC) | 26 |
| | Power Shuttle Voltmeter (SB) | 26 |
| | Electronically Controlled Rear Lift Voltmeter (SA) | 28 |
| HB | - Displays Stored Error Codes (ZA - SC - SB - SA) | 29 |
| | Displays the Error Codes Stored In the Control Panel (ZA) | 29 |
| | Displays the Error Codes Stored In the Four-wheel Drive Control Unit (SC) | 29 |
| | Displays the Error Codes Stored In the Power Shuttle Control Unit (SB) | 30 |
| | Displays the Error Codes Stored In the Electronically Controlled Rear Lift Control Unit (SA) | 31 |
| HC | - Deletes All the Stored Error Codes (ZA - SC - SB - SA) | 31 |
| | Deletes All the Stored Error Codes (ZA) | 31 |
| | Deletes All the Stored Error Codes (SC) | 32 |
| | Deletes All the Stored Error Codes (SB) | 33 |
| | Deletes All the Stored Error Codes (SA) | 34 |
| HE | - Frequency (ZA - SC) | 35 |
| | Frequency (ZA) | 35 |
| | Frequency (SC) | 35 |
| HF | - Displays the Hardware Information (ZA - SC - SB - SA) | 36 |
| | Displays the Hardware Information (ZA) | 36 |
| | Displays the Hardware Information (SC) | 36 |
| | Displays the Hardware Information (SB) | 36 |
| | Displays the Hardware Information (SA) | 37 |

SECTION 55 - ELECTRICAL SYSTEM

BOOK 7 - 84158075

Chapter 11 - Electronic Front Lift

CONTENTS

| Section | Description | Page |
|----------------|--|-------------|
| | Electrical Circuit Components (Numerical Order) | 2 |
| | Wiring Diagram Components (Functional Order) | 3 |
| | Wiring Diagrams 1-2-3 | 4 |
| | Diagram 1 - Front Lift Circuit (Transmission Side) | 6 |
| | Diagram 2 - Front Lift Circuit (Front Side) | 8 |
| | Diagram 3 - Front Lift Circuit (Cab Side) | 10 |
| | List of Connectors | 13 |

SECTION 90 - CAB

BOOK 7 - 84158075

Chapter 1 - Cab

CONTENTS

| Operation | Description | Page |
|------------------|---|-------------|
| | Overhaul | 2 |
| 90 100 22 | Hood | 2 |
| | Removal | 2 |
| | Installation | 2 |
| 90 110 14 | Instrument Panel Lower Guard | 3 |
| | Removal | 3 |
| | Installation | 3 |
| 90 110 36 | Platform Assembly | 4 |
| | Removal | 4 |
| | Installation | 11 |
| 90 114 10 | Safety Frame Roof | 12 |
| | Removal | 12 |
| | Installation | 12 |
| 90 150 10 | Cab With Platform Assembly | 13 |
| | Removal | 13 |
| | Installation | 22 |
| 90 156 14 - 28 | Cab Windows | 23 |
| | Removal | 23 |
| | Installation | 24 |
| 90 160 16 | Right-hand or Left-hand Upright Seals | 25 |
| | Removal | 25 |
| | Installation | 26 |
| 90 160 60 | Cab Ceiling Fitting | 26 |
| | Removal | 26 |
| | Installation | 28 |
| 88 120 10 | Sun Blind | 28 |
| | Removal | 28 |
| | Installation | 29 |

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com