

# 6105D, 6115D, 6130D and 6140D Interim Tier IV Tractors, Operator's Manual (North America, August 2014) (060000 – )



## OPERATOR'S MANUAL

6105D, 6115D, 6130D and 6140D  
Interim Tier IV Tractors (North America,  
August 2014) (060000 – )

OMSU38638 ISSUE H4 (INGLÉS)

### CALIFORNIA

#### Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

### **⚠ WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

Additional Proposition 65 Warnings can be found in this manual.

**Industrias John Deere S.A. de C.V.**

PRINTED IN U.S.A.



# Introduction

## Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere Dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is

explained on the warranty certificate which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

This tractor is designed solely for use in customary agricultural or similar operations. Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.



*Cab Tractor*

Continued on next page

JS86122,000024A -19-07FEB14-1/2

PY20016 — UN — 10FEB14



OOS Tractor

JS86122.000024A -19-07FEB14-2/2

PY20019—UN—10FEB14

### Look For Supplemental Information

Occasionally new or revised information will become available after manuals are printed. To get this up-to-date information into your hands, publication supplements are prepared and supplied to the field in the machine literature package.

Supplements can be supplied in the following forms and are usually identified with one of these titles:

- Direction(s) Sheet
- Installation Instructions
- Publications Supplement

Before your initial review of the Operator's Manual, look through the machine literature package to see if any

supplemental information has been provided. If supplied, review this information to determine which operating procedures are impacted or modified by the revised instructions. Pay close attention to "CAUTION" and "IMPORTANT" statements as they address your safety, the safety of others, and safe operation of the machine.

When Operator's Manuals are revised, the supplemental information is incorporated directly into the manual, thereby eliminating the supplement.

PX03972.000053E -19-17DEC08-1/1



# Contents

	Page		Page
<b>Safety</b>			
Recognize Safety Information .....	05-1	Service Tires Safely .....	05-21
Understand Signal Words .....	05-1	Service Front-Wheel Drive Tractor Safely .....	05-21
Follow Safety Instructions .....	05-1	Tightening Wheel Retaining Bolts/Nuts .....	05-22
Prepare for Emergencies .....	05-2	Avoid High-Pressure Fluids .....	05-22
Wear Protective Clothing .....	05-2	Do Not Open High-Pressure Fuel System .....	05-22
Protect Against Noise .....	05-2	Store Attachments Safely .....	05-23
Handle Fuel Safely—Avoid Fires .....	05-3	Dispose of Waste Properly .....	05-23
Handle Starting Fluid Safely .....	05-3		
Fire Prevention .....	05-3	<b>Safety Signs</b>	
In Case of Fire .....	05-4	Replace Damaged or Missing Safety Signs .....	10-1
Avoid Static Electricity Risk When Refueling .....	05-4	Warning Decal — Park Brake .....	10-1
Keep ROPS Installed Properly .....	05-5	Danger Decal — Starting Engine .....	10-2
Use Foldable ROPS and Seat Belt Properly .....	05-5	Caution Decal - Power-Driven Parts .....	10-2
Stay Clear of Rotating Drivelines .....	05-6	Warning Decal — Keep Riders Off .....	10-3
Use Steps and Handholds Correctly .....	05-6	Warning Decal — ROPS .....	10-4
Read Operator Manuals for ISOBUS		Warning Decal — Avoid Crushing .....	10-5
Implements .....	05-6	Caution Decal — Safety Instructions .....	10-5
Use Seat Belt Properly .....	05-7	Safety Decals — Cab .....	10-6
Operating the Tractor Safely .....	05-8	Warning Decal — PTO Shield and	
Avoid Backover Accidents .....	05-9	Drawbar Instructions .....	10-7
Limited Use in Forestry Operation .....	05-9	Warning Decal - SCV Selector Knobs	
Operating the Loader Tractor Safely .....	05-9	in Loader Position, Cab .....	10-8
Keep Riders Off Machine .....	05-10		
Instructional Seat .....	05-10	<b>Controls and Instruments</b>	
Use Safety Lights and Devices .....	05-10	Tractor Controls--Dash	
Use a Safety Chain .....	05-11	PowrReverser™ Transmission .....	15-1
Transport Towed Equipment at Safe Speeds .....	05-11	Tractor Controls	
Use Caution On Slopes and Uneven Terrain .....	05-12	Right-Hand Panel .....	15-3
Freeing a Mired Machine .....	05-12	Left-Hand Panel .....	15-4
Avoid Contact with Agricultural Chemicals .....	05-13	Differential Lock Pedal .....	15-4
Handle Agricultural Chemicals Safely .....	05-14	Rockshaft Rate-of-Drop Knob .....	15-5
Handling Batteries Safely .....	05-15	Instrument Panel .....	15-6
Avoid Heating Near Pressurized Fluid Lines .....	05-15	Information Display (Roll Mode Switch) .....	15-8
Remove Paint Before Welding or Heating .....	05-16	Overhead Control Panel .....	15-9
Handle Electronic Components and			
Brackets Safely .....	05-16	<b>Lights</b>	
Practice Safe Maintenance .....	05-17	Light Switch Positions .....	20-1
Avoid Hot Exhaust .....	05-17	Using Headlights .....	20-2
Clean Exhaust Filter Safely .....	05-18	High Beam Indicator .....	20-3
Work In Ventilated Area .....	05-19	Using Floodlights	
Support Machine Properly .....	05-19	OOS .....	20-4
Prevent Machine Runaway .....	05-19	Cab .....	20-5
Park Machine Safely .....	05-20	Using Tail Lights .....	20-6
Transport Tractor Safely .....	05-20	Using Warning Lights .....	20-7
Service Cooling System Safely .....	05-20	Using Turn Signals .....	20-8
Service Accumulator Systems Safely .....	05-21	Using Seven-Terminal Outlet—If Equipped .....	20-9

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2014  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION © Manual  
Previous Editions  
Copyright © 2013

Page	Page		
Operating Rotating Beacon Light—If Equipped ..	20-9	Starting in Cold Weather (If Equipped).....	40-7
<b>Operator Station—OOS</b>		Using Engine Coolant Heater (If Equipped) .....	40-7
Operating Foldable ROPS.....	25-1	Check Instruments After Starting.....	40-8
Using Seat Belt.....	25-2	Stop/Operator Alert Indicator.....	40-8
Adjusting Mechanical Suspension Seat .....	25-3	Oil Pressure Indicator.....	40-9
Adjusting Steering Wheel.....	25-3	Charging System Indicator .....	40-9
Accessory Electrical Outlets.....	25-4	Air Restriction Indicator .....	40-9
Operator's Manual Storage Compartment.....	25-4	Coolant Temperature Gauge .....	40-10
<b>Operator Station—Cab</b>		Fuel Level Gauge .....	40-10
Using Seat Belt.....	26-1	Changing Engine Speed, OOS.....	40-11
Adjusting Seat		Changing Engine Speed, Cab.....	40-12
Mechanical Suspension .....	26-2	Warming Up the Engine .....	40-12
Air Suspension.....	26-4	Restart Stalled Engine.....	40-12
Adjusting Steering Wheel.....	26-5	Avoid Low Speed Idling.....	40-13
Accessory Electrical Outlets.....	26-6	Observe Engine Work and Idle Speeds .....	40-13
Operator's Manual Storage Compartment.....	26-6	Working with Speedometer / Hour Meter .....	40-13
Opening Windows .....	26-7	Stopping the Engine, OOS .....	40-14
Opening Door .....	26-8	Stopping the Engine, Cab.....	40-15
Inside Rear View Mirror and Sun Visor .....	26-8	Using a Booster Battery or Charger .....	40-16
Adjusting Blower Speed .....	26-9	Exhaust Filter System Overview.....	40-17
Controlling Temperature .....	26-9	Automatic (AUTO) Exhaust Filter Cleaning .....	40-19
Deicing, Demisting or Defrosting Windshield .....	26-9	Disabled Exhaust Filter Cleaning .....	40-20
Optimizing A/C and Heater Performance .....	26-10	Parked Exhaust Filter Cleaning .....	40-21
Operating Windshield Wiper and Washer .....	26-10	Service Exhaust Filter Cleaning .....	40-23
Operating Rear Window Wiper and Washer—If Equipped .....	26-11	<b>Driving the Tractor</b>	
Using Auxiliary Power Strip (If Equipped).....	26-11	Operator Training Required.....	45-1
Routing Cables and Harnesses.....	26-12	Avoid Contact with Agricultural Chemicals .....	45-1
Radio .....	26-13	Avoid Pesticides .....	45-1
Radio with Compact Disc Player .....	26-14	Driving on Public Roads .....	45-2
Operating Compact Disc Player (If Equipped) .....	26-15	Using Emergency Exit (Cab).....	45-4
Setting Clock .....	26-15	Use Caution on Hillside.....	45-4
Using Dome Light.....	26-16	Operating Transmission	
Using Courtesy Light.....	26-16	PowrReverser (PRT) (If Equipped) .....	45-5
Using Monitor Mounts.....	26-16	PowrReverser (PRT) (If Equipped) .....	45-7
<b>Break-In Period</b>		Shifting Transmission .....	45-9
Engine Operation—Break-In Check .....	30-1	Using Infinitely Variable Shuttle (If Equipped) .....	45-9
Break-In Service—During First 10 Hours of Operation.....	30-2	Selecting a Gear.....	45-10
Break-In Check—After First 50 Hours of Operation .....	30-2	Using Brakes .....	45-10
Oil and Filters		Using Differential Lock.....	45-10
Break-In.....	30-2	Operating Mechanical Front-Wheel Drive (If Equipped) .....	45-11
<b>Prestarting Checks</b>		Stopping Tractor (OOS).....	45-12
Service Daily Before Start-Up.....	35-1	Stopping Tractor (Cab).....	45-13
<b>Operating the Engine</b>		<b>Rockshaft and 3-Point Hitch</b>	
Before Starting the Engine, OOS .....	40-1	3-Point Hitch Component Identification .....	50-1
Before Starting the Engine, Cab.....	40-2	Rockshaft Control Levers .....	50-1
Operating Ignition Switch.....	40-4	Using Rockshaft Position Control.....	50-2
Starting the Engine, OOS.....	40-5	Setting Position Control Lever Stop.....	50-3
Starting the Engine, Cab .....	40-6	Using Draft Control (If equipped).....	50-4
		Adjusting Rockshaft Rate-of-Drop.....	50-5
		Preparing Implement .....	50-5
		Attaching Implements to 3-Point Hitch .....	50-6
		Attaching Implement with Telescoping Draft Links (If Equipped) .....	50-7
		Adjusting Hitch Side Sway.....	50-8

Continued on next page

	Page
Leveling the Hitch .....	50-8
Adjusting Lateral Float .....	50-10
<b>Hydraulics and Selective Control Valves</b>	
Open Center Hydraulic System .....	55-1
Warming Transmission-Hydraulic System Oil .....	55-1
Use Correct Hose Tips .....	55-2
SCV Control Lever and Coupler Identification .....	55-3
Mid-Mount SCV Control Lever and Coupler Identification—If Equipped .....	55-4
Connecting or Disconnecting High-Pressure Hoses .....	55-5
Connecting Cylinder Hoses	
Rear SCV .....	55-5
Connecting and Operating Single-Acting Cylinder .....	55-7
Operating SCV Control Levers—Single or Two-Function Valve .....	55-8
Setting Detents and Operating SCV Control Levers—Three-Function Deluxe Valve (If Equipped) .....	55-9
Using Rear SCV to Operate Hydraulic Motor .....	55-10
Using Three-Function Deluxe SCV to Operate Loader .....	55-12
Adjusting Flow Control—Three-Function Deluxe Valve (If Equipped) .....	55-13
Operate Mid SCV Multi-Function Control Lever—If Equipped .....	55-14
Using Hydraulic Motor Case Drain Connection (If Equipped) .....	55-16
Using Hydraulic Motor Return Connection (If Equipped) .....	55-16
<b>Drawbar and PTO</b>	
Observe Drawbar Load Limitations .....	60-1
Drawbar	
Adjusting Length .....	60-1
Adjusting Side-to-Side .....	60-1
Using Clevis Assembly (If Equipped) .....	60-2
Changing Reversible PTO Stub Shaft (If Equipped) .....	60-2
Attaching PTO-Driven Implement .....	60-3
Operating Tractor PTO .....	60-5
<b>Performance Ballasting</b>	
Planning for Maximum Productivity .....	65-1
Selecting Ballast Carefully .....	65-1
Measuring Wheel Slip—Manually .....	65-2
Ballasting Front End for Transport .....	65-3
Determining Maximum Rear Ballast .....	65-3
Determining Maximum Front Ballast .....	65-4
Adding Rear Ballast For Front Loader .....	65-4
Using Cast Iron Weights .....	65-5
Installing Rear Cast Iron Weights .....	65-5
Using Liquid Weight .....	65-6
Match Tractor Power to Implement .....	65-6

	Page
Using Implement Codes .....	65-7

### Wheels, Tires and Treads

Service Tires Safely .....	70-1
Check Implement-to-Tire Clearance .....	70-1
Check Tire Inflation Pressure .....	70-2
Tire Inflation Pressure Chart .....	70-2
Front and Rear Tire Combinations	
2WD Axle .....	70-2
MFWD Axle .....	70-3
Selecting Front Tire Rolling Direction .....	70-3
Tighten Wheel/Axle Hardware Correctly .....	70-3
Tighten Bolts	
Adjustable Front Axle .....	70-4
MFWD Axle .....	70-4
Rear Axle .....	70-5
Tread Settings—Adjustable Front Axle (2WD Axle) .....	70-6
Adjusting Front Wheel Tread (2WD Axle) .....	70-7
Toe-In—Adjustable Front Axle (2WD)	
Checking .....	70-7
Adjusting .....	70-8
Tread Settings—MFWD Axle .....	70-8
Tread Settings—Multi-Position Rear Wheels (Steel Disks) .....	70-9
Toe-In—MFWD Axle	
Checking .....	70-10
Adjusting .....	70-10
Steering Stop Adjustment (MFWD Axle) .....	70-11
Front Fender Adjustment (MFWD Axle) .....	70-12

### Transporting

Use Safety Lights and Devices .....	75-1
Use a Safety Chain .....	75-1
Driving Tractor on Roads .....	75-2
Transporting on Carrier .....	75-4
Towing Tractor .....	75-5

### Fuels, Lubricants and Coolant

Handle Fuel Safely—Avoid Fires .....	80-1
Handle Fluids Safely—Avoid Fires .....	80-1
Cold Weather Operation .....	80-1
Hot Weather Operation .....	80-1
Diesel Fuel .....	80-2
Handling and Storing Diesel Fuel .....	80-2
Lubricity of Diesel Fuel .....	80-3
Testing Diesel Fuel .....	80-3
Biodiesel Fuel .....	80-4
Fill Fuel Tank .....	80-5
John Deere Break-In Plus™ Engine Oil	
— Interim Tier 4, Final Tier 4, Stage IIIB, and Stage IV .....	80-5
Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, and Stage IV .....	80-6
Extended Diesel Engine Oil Service Intervals — Non-Emissions Certified and Certified Tier 1 and Stage I .....	80-6

Continued on next page

Page	Page		
Oil Filters .....	80-7	Service Air Conditioner (Cab).....	90-13
Diesel Engine Coolant (engine with wet sleeve cylinder liners) .....	80-7	Cleaning Engine Compartment .....	90-13
Operating in Warm Temperature Climates .....	80-8	ROPS Maintenance or Replacement (OOS) .....	90-14
Liquid Coolant Conditioner .....	80-8	Keep Cab Protection System Installed Properly .....	90-15
Additional Information About Diesel Engine Coolants and John Deere LIQUID COOLANT CONDITIONER.....	80-9	<b>Lubrication</b>	
Testing Diesel Engine Coolant.....	80-10	Use Correct Lubricant.....	95-1
Transmission and Hydraulic Oil.....	80-11	Check Engine Oil Level .....	95-1
Use Correct Transmission/Hydraulic Filter Element .....	80-11	Change Engine Oil and Filter .....	95-2
MFWD Axle and Wheel Hub Oil .....	80-11	Check Transmission-Hydraulic Oil Level .....	95-3
Grease.....	80-12	Change Transmission-Hydraulic Oil .....	95-4
Mixing of Lubricants.....	80-12	Replace Transmission-Hydraulic Oil Filter .....	95-6
Alternative and Synthetic Lubricants .....	80-12	Lubricate Steering Linkage.....	95-7
Lubricant Storage .....	80-13	Lubricate Front Axle Pivot Pins .....	95-8
		Lubricate MFWD Axle Shaft .....	95-8
		Lubricate Hitch Components .....	95-9
		MFWD Axle Wheel Hub	
		Check Oil Level .....	95-9
		Change Oil .....	95-10
		MFWD Axle Housing	
		Check Oil Level .....	95-10
		Change Oil .....	95-11
		Lubricate Front Wheel Bearings (2WD Axle).....	95-11
		Lubricate Rear Axle Bearings .....	95-11
		Lubricate Operator's Seat Slide Rails (OOS) ...	95-12
		Lubricate Hood Latch .....	95-12
<b>Maintenance and Service Intervals</b>			
Additional Service Information.....	85-1		
Service Tractor Safely .....	85-1		
Service Interval Chart			
Daily or 10 Hours / Weekly or 50 Hours / FIRST 100 Hours / 250 Hours .....	85-2		
500 Hours / 1000 Hours / Annually / 2000 Hours or Two Years / 5000 Hours or Five Years.....	85-3		
Service—As Required .....	85-3		
Observe Service Intervals .....	85-4		
Using High-Pressure Washers .....	85-4		
Using Compressed Air.....	85-4		
<b>General Maintenance and Inspection</b>			
Opening Hood .....	90-1		
Engine Air Intake Filters			
Inspect.....	90-1		
Cleaning Air Filter Dust Unloading Valve.....	90-3		
Replace .....	90-3		
Inspect Engine Air Intake System.....	90-4		
Adjust Brake Pedal Free Travel.....	90-5		
Clean Engine Crankcase Vent Tube .....	90-6		
Check Engine Idle Speeds .....	90-6		
Engine Valve Adjustment.....	90-6		
Cleaning the Exhaust Filter Aftertreatment.....	90-7		
Diesel Particulate Filter Maintenance and Service .....	90-7		
Exhaust Filter / Diesel Particulate Filter			
Ash Handling and Disposal .....	90-8		
Exhaust Filter Disposal.....	90-8		
Tighten Hose Clamps .....	90-8		
Inspect Tractor for Loose Hardware .....	90-8		
Check Neutral Start System			
PowrReverser Transmission (If Equipped).....	90-9		
Inspect Seat Belt .....	90-9		
Adjust Hand Throttle Friction .....	90-10		
Inspect Tires .....	90-10		
Tubeless Tire Repair .....	90-10		
Clean Cab Air Filters .....	90-11		
		<b>Maintenance—Cooling System</b>	
		Clean Grille Screens, Radiator, Oil Cooler, Radiator Screen (If Equipped) and A/C Condenser (Cab) .....	100-1
		Check Coolant Level .....	100-2
		Check Cooling System for Leaks .....	100-3
		Flush Cooling System and Replace Thermostat .....	100-4
		<b>Maintenance—Fuel System</b>	
		Do Not Modify Fuel System.....	105-1
		Drain Water and Sediment From Fuel Filters ...	105-2
		Drain Water and Sediment From Fuel Tank .....	105-2
		Replace Prefilter / Water Separator.....	105-3
		Replace Primary Fuel Filter / Water Separator ..	105-3
		Bleed Fuel System .....	105-4
		<b>Maintenance—Electrical System</b>	
		Electrical Service Precautions .....	110-1
		Inspect Alternator/Fan Belt Tensioner .....	110-1
		Replace Alternator/Fan Belt .....	110-3
		Charge Battery .....	110-4
		Clean Battery.....	110-4
		Check Battery Condition.....	110-5
		Remove Battery.....	110-5
		Battery Replacement Specifications.....	110-5
		Service Battery .....	110-6
		Access Fuses and Relays .....	110-6

Continued on next page



	Page
Load Center Fuses and Relays-OOS.....	110-8
Load Center Fuses and Relays-OOS—Behind Instrument Panel .....	110-9
Load Center Fuses and Relays-OOS—Behind Panel at Left Rear Corner of Operators Station .....	110-9
Load Center Fuses and Relays—Cab.....	110-10
Load Center Fuses and Relays—Cab—Behind Instrument Panel ...	110-11
Fusible Link Location.....	110-11
Starter Wiring Connections.....	110-12
Handling Halogen Light Bulbs Safely .....	110-12
Replace Headlight Element.....	110-13
Adjust Headlights.....	110-13
Replace Roof Hazard Light Bulb—Cab .....	110-15
Replace Hazard Light Bulb—OOS .....	110-16
Replace Tail and Turn Light Bulbs.....	110-16
Replace Floodlight Element—OOS.....	110-17
Replace Floodlight Element—Cab .....	110-18
Replace Dome Light Bulb—Cab.....	110-19
Replacing Controls Illumination Light Bulb (Cab).....	110-19
Replacing Rotary Beacon Light Bulb (If Equipped).....	110-20

**Troubleshooting**

Engine .....	115-1
Electrical System.....	115-5
Transmission .....	115-6
Rockshaft and 3-Point Hitch.....	115-7
Brakes .....	115-8
Hydraulic System.....	115-8
Deluxe SCV (If Equipped) .....	115-9
Remote Hydraulic Cylinder.....	115-9
Heater and A/C System (Cab).....	115-10
Wiper(s), Floodlights, Dome Light and Radio (Cab).....	115-12

**Storage**

Place Tractor in Long-Term Storage.....	120-1
Remove Tractor From Storage.....	120-3
Paint Finish Care.....	120-3

**Specifications**

General Specifications.....	125-1
Overall Dimensions and Weights .....	125-4
Turning Radius	
MFWD Axle .....	125-6
2WD Axle .....	125-6
Ground Speeds	
PowrReverser Transmission (PRT).....	125-7
Metric Bolt and Screw Torque Values.....	125-9
Unified Inch Bolt and Screw Torque Values....	125-10
CARB Non-road Emissions Control Warranty Statement—Compression Ignition.....	125-11

	Page
EPA Non-road Emissions Control Warranty Statement—Compression Ignition.....	125-15
Limited Battery Warranty .....	125-17

**Identification Numbers**

Identification Numbers.....	130-1
Product Identification Number .....	130-1
MFWD Axle Serial Number (If Equipped).....	130-1
Engine Serial Number .....	130-1
Fuel Injection Pump Serial Number.....	130-2
Transaxle Serial Number.....	130-2
Cab Serial Number .....	130-2
Selective Control Valve (SCV) Serial Number ..	130-3
Keep Proof of Ownership .....	130-3
Keep Machines Secure .....	130-3

**Lubrication and Maintenance Records**

Service Records	
Daily / 10 Hours.....	135-1
Weekly / 50 Hours.....	135-2
First 100 Hours.....	135-2
250 Hours.....	135-3
500 Hours.....	135-4
1000 Hours.....	135-4
Annual.....	135-5
2000 Hours / Two Years .....	135-5
5000 Hours / Five Years.....	135-5
As Required .....	135-6




# Safety

## Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

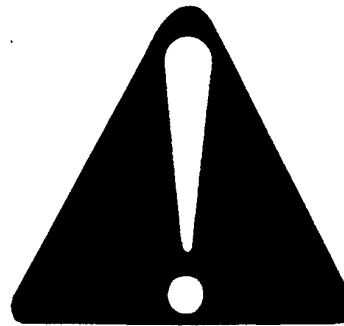

DX,ALERT -19-29SEP98-1/1

TS1389 —UN—28JUN13

## Understand Signal Words

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards.

DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.



DX,SIGNAL -19-03MAR93-1/1

TS187 —19—30SEP88

## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.



If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ -19-16JUN09-1/1


TS201 —UN—15APR13

### Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

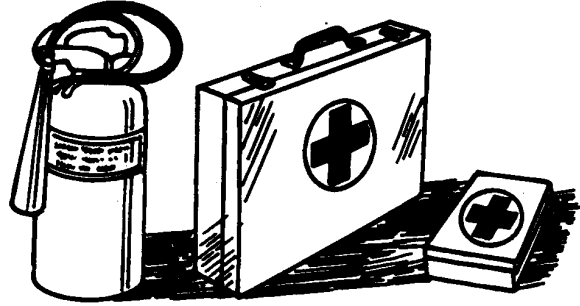


TS291 —UN—15APR13

DX,FIRE2 -19-03MAR93-1/1

### Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

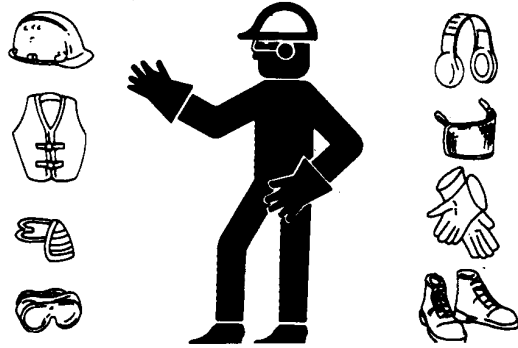

TS206 —UN—15APR13

DX,WEAR2 -19-03MAR93-1/1

### Protect Against Noise

Prolonged exposure to loud noise can cause impairment or loss of hearing.

Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS207 —UN—23AUG88

DX,NOISE -19-03MAR93-1/1

### Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1 -19-12OCT11-1/1

TS202 —UN—23AUG88

### Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.



DX,FIRE3 -19-16APR92-1/1

TS1356 —UN—18MAR92

### Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the

Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.

- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION -19-12OCT11-1/1

## In Case of Fire

### CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:



1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4 -19-22AUG13-1/1

TSS27—UN—15APR13


## Avoid Static Electricity Risk When Refueling

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

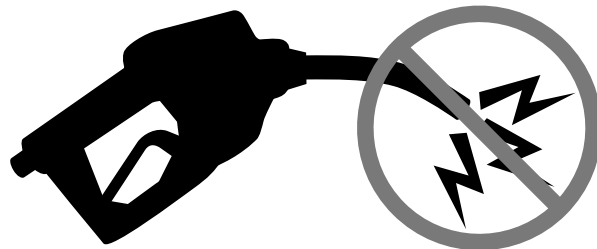

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1

RG22142—UN—17MAR14

RG21992—UN—21AUG13


### Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

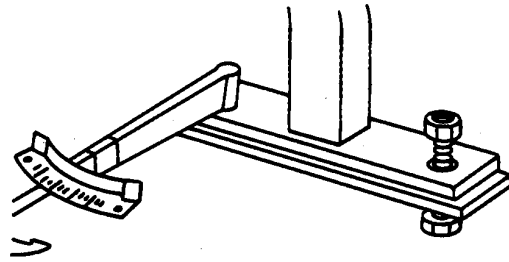


TSS212—UN—23AUG88

DX,ROPS3 -19-12OCT11-1/1

### Use Foldable ROPS and Seat Belt Properly

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
  - Hold the latch and pull the seat belt across the body.
  - Insert the latch into the buckle. Listen for a click.
  - Tug on the seat belt to make sure that the belt is securely fastened.
  - Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

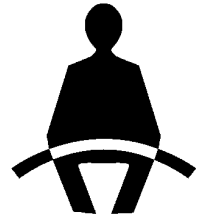

TS1729—UN—24MAY13

DX,FOLDROPS -19-22AUG13-1/1

### Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.


Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO drive shaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)

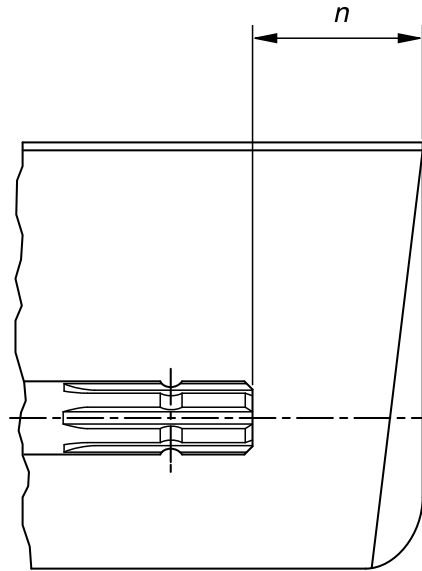

TS1644—UN—22AUG95


H96219—UN—29APR10

DX,PTO -19-30JUN10-1/1

### Use Steps and Handholds Correctly

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

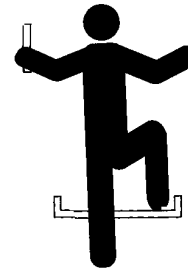

T133488—UN—15APR13

DX,WW,MOUNT -19-12OCT11-1/1

### Read Operator Manuals for ISOBUS Implements

In addition to GreenStar Applications, this display can be used as a display device for any implement that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and implement control functions placed on the display are provided by the implement and are the

responsibility of the implement manufacturer. Some of these implement functions could provide a hazard either to the Operator or a bystander. Read the operator manual provided by the implement manufacturer and observe all safety messages in manual and on implement prior to use.

**NOTE:** ISOBUS refers to the ISO Standard 11783

DX,WW,ISOBUS -19-19AUG09-1/1



## Use Seat Belt Properly


Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear,

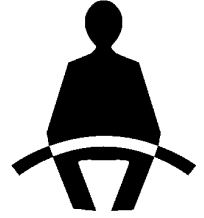

discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1 -19-22AUG13-1/1

TS1729—JN—24MAY13

## Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/attachments, such as front loaders
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Keep hands, feet, and clothing away from power-driven parts

### Driving Concerns


- Never get on or off a moving tractor.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual brakes, or operating around hazards on rough ground or steep slopes.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.

### Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

### Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground

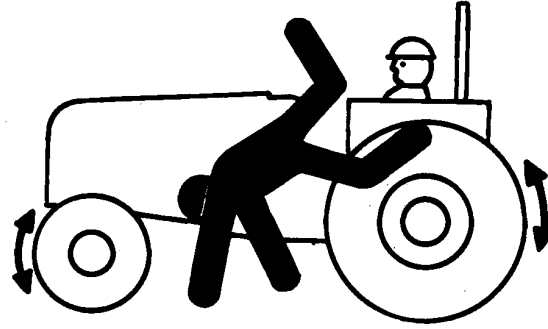

and securely engage park mechanism, including the park pawl and park brake. In addition, if tractor is left unattended, remove key.

- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

### Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor
- Crushing and pinching during hitching

TS290—UN—23AUG88

TS276—UN—23AUG88

DX,WW,TRACTOR -19-21AUG09-1/1

### Avoid Backover Accidents

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.



PC10857XW—UN—15APR13

DX,AVOID,BACKOVER,ACCIDENTS -19-30AUG10-1/1

### Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry

applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY -19-12OCT11-1/1

### Operating the Loader Tractor Safely

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.


Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.

Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load

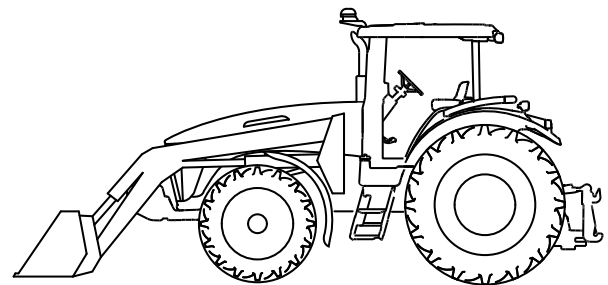

TS1692—UN—09NOV09

falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and clampers).


Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER -19-18SEP12-1/1

### Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

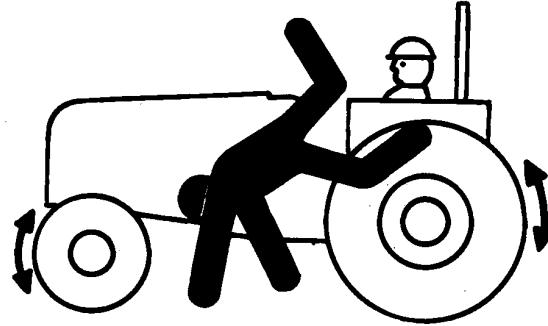


TSS290 —UN—23AUG88

DX,RIDER -19-03MAR93-1/1

### Instructional Seat

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

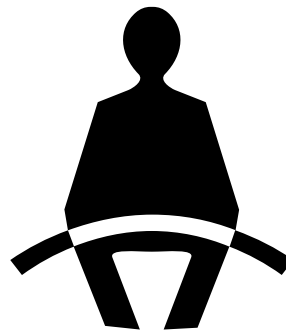


TSS1730 —UN—24MAY13

DX,SEAT,NA -19-22AUG13-1/1

### Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

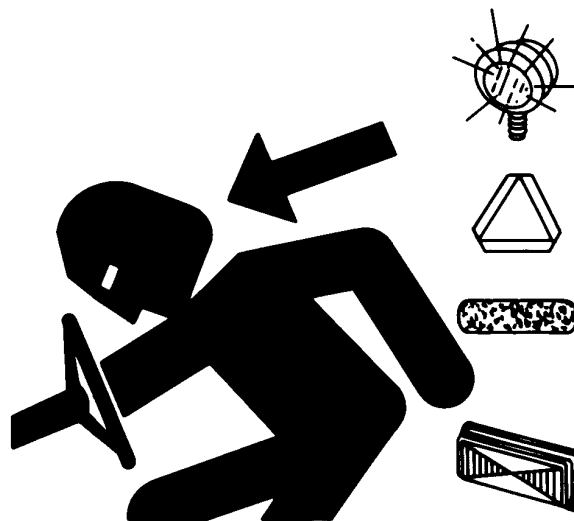

TSS951 —UN—12APR90


DX,FLASH -19-07JUL99-1/1

### Use a Safety Chain

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.

Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

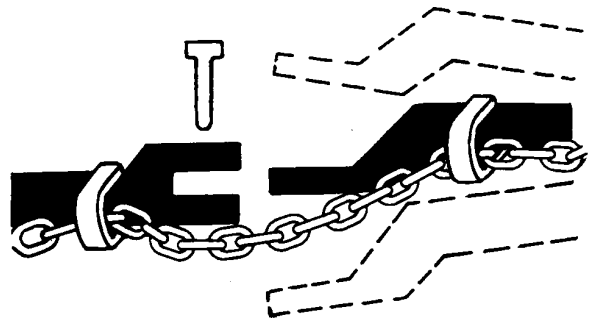

DX,CHAIN -19-03MAR93-1/1

TSS217 —UN—23AUG88

### Transport Towed Equipment at Safe Speeds

Do not exceed the maximum transport speed. This tractor is capable of operating at transport speeds that exceed the maximum allowable transport speed for most towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:


- Loss of control of the tractor/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

#### Implements without brakes:

- Do not transport at speeds greater than 32 km/h (20 mph).
- Must weigh less than 1.5 times the tractor weight and less than 1.5 t (3300 lb) when fully loaded.

#### Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the tractor weight.

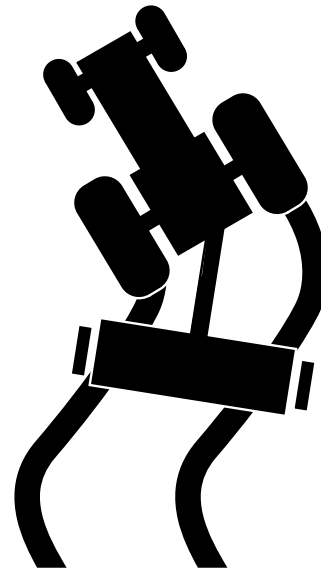

- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the tractor weight.

DX,TOW1 -19-12OCT11-1/1

TS1686 —UN—27SEP06

### Use Caution On Slopes and Uneven Terrain

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause tractor to tip over rearward. Back out of these situations if possible.


Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in

Choose a low ground speed so you will not have to stop or shift while on a slope.

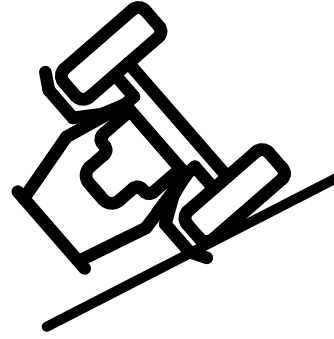

Avoid starting, stopping or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE -19-12OCT11-1/1

RXA0103437 —UN—01JUL09


### Freeing a Mired Machine

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

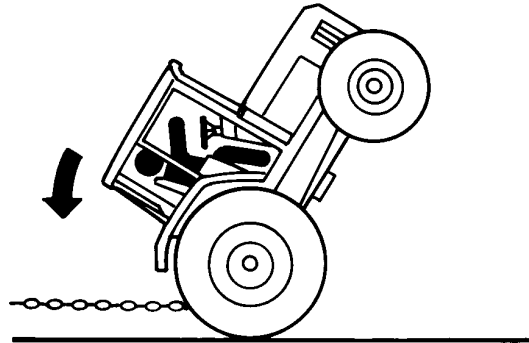

DX,MIREED -19-07JUL99-1/1

TS1645 —UN—16SEP95

TS263 —UN—23AUG88

### Avoid Contact with Agricultural Chemicals

This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.



TS220 —UN—15APR13

TS272 —UN—23AUG88

DX,CABS -19-25MAR09-1/1

## Handle Agricultural Chemicals Safely

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
  - Chemicals labeled '**Danger**': Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
  - Chemicals labeled '**Warning**': Less toxic. Generally require use of goggles, gloves, and skin protections.
  - Chemicals labeled '**Caution**': Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.
- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.



A34471

- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse empty containers and puncture or crush containers and dispose of properly.

TS220 —UN—15APR13

A34471 —UN—11OCT88

DX,WW,CHEM01 -19-24AUG10-1/1



### Handling Batteries Safely

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

#### Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.


#### If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

#### If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

**WARNING:** Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

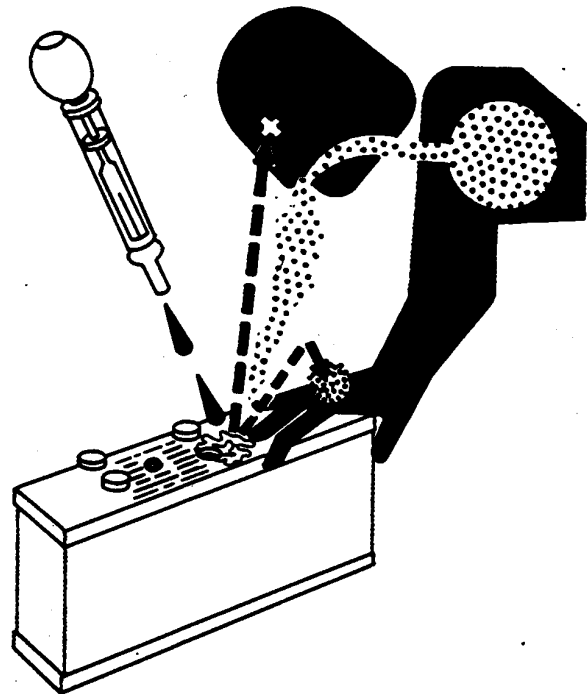

TS204—UN—15APR13

TS203—UN—23AUG88

DX,WW,BATTERIES -19-02DEC10-1/1

### Avoid Heating Near Pressurized Fluid Lines

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.



TS953—UN—15MAY90

DX,TORCH -19-10DEC04-1/1

### Remove Paint Before Welding or Heating

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.



Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT -19-24JUL02-1/1

TS220 —UN—15APR13

### Handle Electronic Components and Brackets Safely

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.



DX,WW,RECEIVER -19-24AUG10-1/1

TS249 —UN—23AUG88

### Practice Safe Maintenance

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.



TS218 —UN—23AUG88

DX,SERV -19-17FEB99-1/1

### Avoid Hot Exhaust

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.



RG17488 —UN—21AUG09

DX,EXHAUST -19-20AUG09-1/1

### Clean Exhaust Filter Safely

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.




If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine

Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

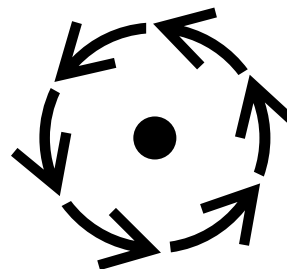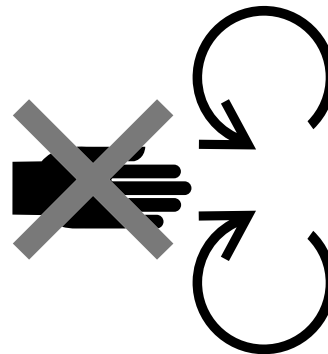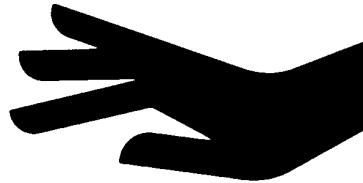

**STOP**

TS227 —UN—15APR13

TS271 —UN—23AUG88

TS1683 —UN—09DEC09


TS1695 —UN—07DEC09

DX,EXHAUST,FILTER -19-12JAN11-1/1

### Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

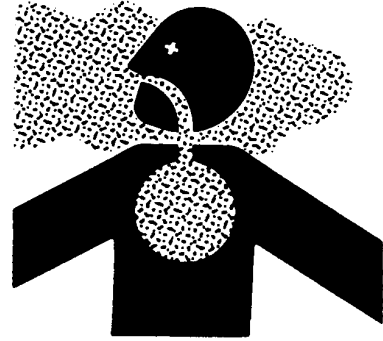

TS220 —UN—15APR13


DX,AIR -19-17FEB99-1/1

### Support Machine Properly

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

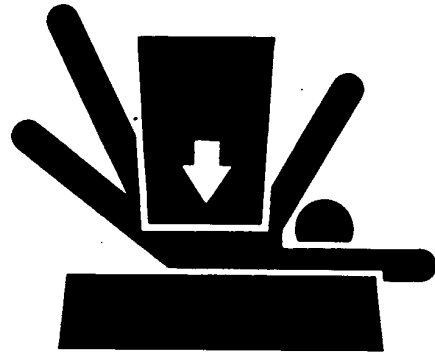

TS229 —UN—23AUG88


DX,LOWER -19-24FEB00-1/1

### Prevent Machine Runaway

Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

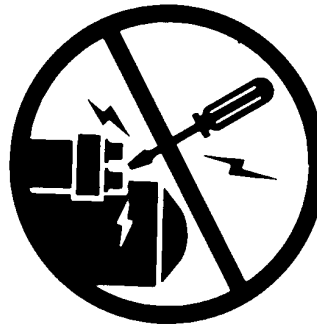


TS177 —UN—11JAN89

DX,BYPAS1 -19-29SEP98-1/1

### Park Machine Safely

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

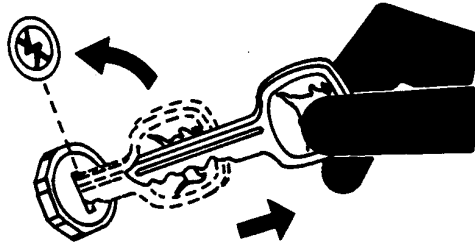

TSS230 —UN—24MAY89


DX,PARK -19-04JUN90-1/1

### Transport Tractor Safely

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

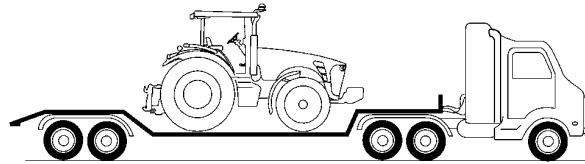


RXA0103709 —UN—01JUL09

DX,WW,TRANSPORT -19-19AUG09-1/1

### Service Cooling System Safely

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

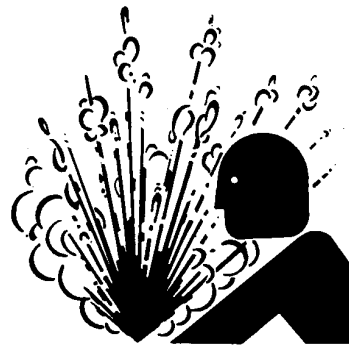

TSS281 —UN—15APR13

DX,WW,COOLING -19-19AUG09-1/1

This as a preview PDF file from [best-manuals.com](https://best-manuals.com)



Download full PDF manual at [best-manuals.com](https://best-manuals.com)