


Operator's Manual

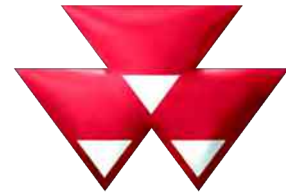

MASSEY FERGUSON

MF 4700 - Operation - Maintenance

MF 4707 MF 4708 MF 4709



Beauvais

**AGCO S.A.S. - 41 avenue Blaise Pascal - 60000
Beauvais - France - RC B562 104 539**

© AGCO 2017

Original Operator's Manual

January 2017

ACT002173A

English

Foreword

We would like to welcome you to the ever-growing number of people who own a Massey Ferguson tractor; people who appreciate quality. We are proud of every tractor that leaves our factories, each being technically advanced and of a high quality.

This Operator's Manual contains the specifications for your new tractor. Please ensure that all operators read the instructions and follow them carefully. The pages that follow contain vital information on your tractor; please read them carefully.

Your Massey Ferguson dealer will guarantee you quality servicing and will provide you with all the assistance you need. When it comes to servicing, remember that your dealer knows your tractor best and that he wants you to be completely satisfied.

Please leave this Operator's Manual in the tractor if resold. The subsequent owner will need the information it contains.

All information and specifications in this manual are up to date at the time of publication. However, our ongoing policy to improve our products obliges us to reserve the right to make alterations at any time without notice.

Please note that this manual relates to all models and refers to both standard and optional equipment. You may therefore find details relating to equipment that is not fitted on your tractor.

This Operator's Manual complies with Directive 2010/52 EC.

Massey Ferguson

MF 4700 - Operation - Maintenance

1 Tractor identification	11
1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14
2 Safety instructions and safety points - Warranty	15
2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	27
2.4.1 Awareness of the safety instructions and symbols	27
2.4.2 Operator familiarity in the use of the tractor	27
2.4.3 Filling the fuel and DEF or AdBlue™ tanks	28
2.4.4 Mounting and dismounting the operator's seat	28
2.4.5 Mandatory procedure before dismounting the tractor	29
2.5 Special instructions	30
2.5.1 Specific recommendations for agricultural and forestry tractors	30
2.6 Special safety instructions for preparing the tractor for use	32
2.6.1 Protective clothing	32
2.6.2 Activated carbon filter information	32
2.6.3 Safety devices and items	34
2.6.4 Checking the tractor	35
2.7 Specific safety instructions for starting the tractor	37
2.7.1 Protection of persons other than the operator	37
2.7.2 Start up safely	37
2.7.3 Checks to be carried out after start-up	38
2.8 Specific safety instructions for using the tractor	39
2.8.1 General instructions	39
2.8.2 Protection of persons other than the operator	40
2.8.3 Overturning	40
2.8.4 Tractor towing	43
2.8.5 Regulatory data on maximum permitted trailed weights	43
2.8.6 Road use	44
2.8.7 Park brake	45
2.8.8 Power take-off	45
2.8.9 Implements	46
2.8.10 Front-end loader	49
2.9 Specific safety instructions for servicing the tractor	50
2.9.1 Pollution warning to observe when servicing the tractor	50
2.9.2 General instructions	50
2.9.3 Handling instructions	51
2.9.4 Special instructions for cleaning the tractor	53
2.10 Protective structures	54
2.10.1 Protective structures: use and accreditation	54
2.10.2 Cab	54

2.10.3	Seat belt	54
2.10.4	Passenger seat	55
2.11	Warranty	56
2.11.1	General	56
2.11.2	Pre-delivery inspection and commissioning on the user's premises	56
2.11.3	Warranty procedure	56
2.11.4	Procedure to follow if changing region	56
2.11.5	Servicing during and after the warranty period	57
3	Usage	59
3.1	Operator environment	63
3.1.1	Standard steering console	63
3.1.2	Essential steering console	63
3.1.3	Instrument panel: Standard option	63
3.1.4	Instrument panel Essential option	66
3.1.5	Control unit	74
3.1.6	Pedals	75
3.1.7	Steering wheel	75
3.1.8	Seats	76
3.1.9	Right-hand pillar	80
3.1.10	Right-hand console	81
3.1.11	Left-hand console	81
3.1.12	Upper console	82
3.1.13	Manual ventilation and manual air conditioning (if fitted)	82
3.1.14	Additional heater	84
3.1.15	Emergency exits	84
3.1.15.1	Accessories sockets	84
3.1.16	Sun visor	85
3.1.17	Wheel chock(s) (optional)	85
3.2	Body	87
3.2.1	Opening the engine cover	87
3.2.2	Adjusting the external rear-view mirrors	87
3.2.2.1	Positioning the arms	87
3.2.2.2	Adjusting the arm extensions (depending on model)	88
3.2.2.3	Adjusting the rear-view mirrors	88
3.2.3	Adjusting the step	89
3.2.4	Tool box	89
3.3	Engine	90
3.3.1	Running-in	90
3.3.2	Start-up	90
3.3.2.1	Starting the engine with preheating on the neutral start switch	90
3.3.3	Stopping the engine	90
3.3.4	Engine speed	91
3.3.5	Operation of the SCR Technology engine	92
3.3.5.1	General	92
3.3.5.2	Information about degraded mode: DEF or AdBlue™ level is too low	94
3.3.5.3	Information on the various degraded modes: SCR system fault	96
3.3.6	Filling with fuel	99
3.3.7	Filling DEF or AdBlue™	99
3.4	Transmission	102
3.4.1	12X12 SMS gearbox	102
3.4.2	12X12 SPS gearbox	103
3.4.3	Clutch function	104
3.4.4	Super creeper gears	105
3.4.5	Tractor towing	106
3.5	Brakes	108
3.5.1	Brake pedals	108

3.5.2 Hydraulic trailer brake	108
3.5.3 Park brake	108
3.6 Steering	110
3.6.1 Steering	110
3.7 Four-wheel drive front axle	111
3.7.1 Control locations	111
3.7.2 Operation	111
3.7.3 Permissible load on the front axle	113
3.8 Differential lock	114
3.8.1 Control locations	114
3.8.2 Operation	114
3.9 Live PTO	116
3.9.1 Control locations	116
3.9.2 Operation	116
3.9.3 Selecting the power take-off speed	117
3.9.4 Interchangeable 540 and 1000 rpm PTO	119
3.9.5 GSPTO	119
3.9.6 Economy PTO	120
3.9.7 Power take-off protection	120
3.9.8 Coupling to the PTO shaft	122
3.10 Standard electronic linkage console	123
3.10.1 Linkage	123
3.10.1.1 Control locations	123
3.10.1.2 Operation	123
3.10.1.3 Rear linkage external controls	126
3.11 Advanced electronic linkage console	127
3.11.1 Linkage	127
3.11.1.1 Control locations	127
3.11.1.2 Operation	127
3.11.1.3 Rear linkage external controls	133
3.12 Linkage	134
3.12.1 General	134
3.12.2 Three-point linkage	134
3.12.3 Top link	134
3.12.4 Bottom links	136
3.12.5 Adjusting the lift rods	137
3.12.6 Stabilisers	138
3.12.6.1 Stabilizers with manual telescopic adjustment	139
3.12.7 Multi-hole drawbar	141
3.12.8 Swinging drawbar	141
3.12.8.1 Settings	141
3.12.8.2 Hitching an attachment	142
3.12.8.3 Drawbars, ISO standard	142
3.12.8.4 Drawbars, SAE standard	143
3.12.9 Types of linkage	144
3.12.9.1 Standard hitch	144
3.12.9.2 Standard hitch with ladder	144
3.12.9.3 Short ladder hitch with high load capacity	149
3.12.9.4 Pick-up hitch	150
3.12.10 Pick-up hitch	151
3.12.10.1 General	151
3.12.10.2 Lift rod-type pick-up hitch	151
3.13 Auxiliary hydraulics	153
3.13.1 Types of spool valve	153
3.13.2 Hydraulic spool-valve controls	154
3.14 Wheels and tires	157

3.14.1	Wheel studs	157
3.14.2	Installation points of the axle stands	157
3.14.3	Adjustment of the front track width, 4-wheel drive	157
3.14.4	Adjusting the rear wheel track width	159
3.14.5	Adjusting the 4WD front axle stops	160
3.14.6	Tires	161
3.14.7	Tire pressures	161
3.14.8	Radial loads and standard inflation pressures	163
3.14.9	Ballasting the tractor	164
3.14.10	Liquid ballasting	165
3.15	Additional weight	168
3.15.1	Additional weight	168
4	Maintenance	169
4.1	Service Guide	171
4.1.1	Service Guide	171
4.2	Operator environment	175
4.2.1	Air conditioning system: condenser	175
4.2.2	Air conditioning system: checking the air conditioning system	175
4.2.3	Cab air filter	176
4.2.4	Cab attachment	176
4.2.5	Operator's seat	176
4.2.6	Windscreen washer	177
4.2.7	Lubrication of hinges and locks	177
4.3	Engine	178
4.3.1	Recommended products	178
4.3.2	3-cylinder AGCO Power Tier 4F engine	179
4.3.3	Engine oil level check	179
4.3.4	Draining the engine oil	180
4.3.5	Replacing the engine oil filter	180
4.3.6	SCR system maintenance	181
4.3.7	Fuel system: SCR Technology engine injection	181
4.3.8	Replacing the urea filter	181
4.3.9	Breather system	182
4.3.10	Fuel system: fuel prefilter	183
4.3.10.1	Draining the water	183
4.3.10.2	Replacing the filter element	183
4.3.11	Fuel filter fuel system	184
4.3.12	Fuel system: Fuel tank	184
4.3.13	Fuel system: bleeding	185
4.3.14	Fuel system: injection pump, regulator and injectors	185
4.3.15	Air filter	185
4.3.16	Cooling system, engine with expansion tank	186
4.3.16.1	Checking the level and quality of the coolant	186
4.3.16.2	Filling to top up the coolant level	187
4.3.16.3	Draining the cooling system	187
4.3.16.4	Cleaning the radiator	188
4.3.17	Check and replace the air conditioning Poly-V accessories belt	188
4.3.18	Check and replace the main fan/alternator belt	188
4.3.18.1	Procedure for tensioning the Poly-V main belt for the AGCO Power engine	189
4.3.19	Fuel quality requirements	189
4.3.19.1	Biodiesel blends	191
4.3.20	Fuel: Safety instructions and storage	192
4.3.21	DEF or AdBlue™	193
4.4	Transmission	195
4.4.1	Recommended products	195

4.4.2	Checking the hydraulic system level	195
4.4.3	Draining the hydraulic system	196
4.4.4	Replacing the filter and strainer	197
4.4.4.1	Replacing the strainer	197
4.4.4.2	Replacing the high-pressure filter	197
4.4.5	Transmission oil cooler	198
4.4.6	Clutch	198
4.4.7	Lubricating the rear axle shaft bearings	199
4.5	Brakes	200
4.5.1	Mechanically controlled brakes	200
4.5.2	Hydraulically controlled brakes	200
4.6	Front axle and steering	203
4.6.1	Recommended products	203
4.6.2	four-wheel drive front axle: Check the wheel alignment	203
4.6.3	Four-wheel drive front axle: checking the oil level in the final drives	203
4.6.4	Four-wheel drive front axle: draining the oil in the final drives	204
4.6.5	Four-wheel drive front axle: Checking the front axle beam oil level	204
4.6.6	Four-wheel drive front axle: draining the oil from the front axle beam	205
4.6.7	Four-wheel drive front axle: lubrication	206
4.6.8	Adjusting the front axle oscillation	207
4.7	Linkage	208
4.7.1	Recommended products	208
4.7.2	Three-point linkage: lubrication	208
4.8	Electrical equipment	209
4.8.1	Batteries	209
4.8.2	Alternator	209
4.8.3	Power socket (ISO)	210
4.8.4	Power socket (ASAE)	211
4.8.5	Accessories sockets (ISO)	211
4.8.6	Accessories sockets (ASAE)	212
4.8.7	Adjusting the headlights	212
4.8.8	Main fuse boxes	213
4.8.8.1	AGCO Power - Cab version - Mechanical reverse shuttle/Main fuse box	213
4.8.8.2	AGCO Power - Cab version - PowerShuttle/Main fuse box	219
4.8.9	Additional fuse boxes	225
4.8.9.1	AGCO Power - Cab version - Additional fuse box	225
4.8.10	Fuse boxes on the side of the battery	226
4.8.10.1	AGCO Power Tier 4F/Stage IIIB engine - Cab version - Fuse box on the battery side for MF 4707 tractors	226
4.8.10.2	AGCO Power Tier 4F/Stage IV SCR Technology engine - Cab version - Fuse box on the side of the battery for MF 4708 MF 4709 tractors	229
4.8.11	AGCO Power - Fuse box specific to Tier 4F/Stage IV SCR Technology engine	231
4.8.12	Battery isolator	234
4.9	Pressure washing	236
4.9.1	Pressure washing	236
4.10	Storing your tractor	237
4.10.1	Storing your tractor	237
4.11	Faults and solutions	238
4.11.1	General table of faults	238
4.11.2	Indicator light panel	240
4.11.3	Error codes	244
4.11.4	Engine error codes - AGCO Power	249
5	Technical specifications	265
5.1	General specifications	267
5.1.1	Model MF 4707	267

5.1.2 Model MF 4708	268
5.1.3 Model MF 4709	269
5.2 Operator environment	271
5.2.1 Noise levels (dBA) at the operator's ears	271
5.2.2 Level of vibration felt through the operator's seat	271
5.3 Engine	272
5.3.1 Specifications: Tier 4F/Stage IV SCR Technology engine	272
5.3.2 Fuel system and air filter	272
5.3.3 Cooling	273
5.3.4 Tightening torques	273
5.4 Transmission	274
5.4.1 Forward speed at 2200 rpm with 12x12 gearbox and 16.9x34 tires - option 40 km/h	274
5.4.2 Gearbox	274
5.4.3 Final drives	274
5.4.4 Rear differential lock	274
5.5 Brakes	275
5.5.1 Brake technical specifications	275
5.6 Front axle and steering	276
5.6.1 Four-wheel drive front axle	276
5.6.2 Steering	276
5.6.3 Tightening torques	276
5.7 Power take-off	277
5.7.1 Specifications	277
5.7.2 Tightening torques	277
5.8 Hydraulic linkage	278
5.8.1 Rear linkage	278
5.9 Auxiliary hydraulics (according to specification or country)	279
5.9.1 Standard hydraulic flow rate	279
5.10 Electrical equipment	280
5.10.1 Electrical equipment technical specifications	280
5.11 Wheels and tires	281
5.11.1 Wheels	281
5.11.2 Tires	281
5.11.3 Tires compatible with MF 4700 tractors	285
5.11.4 Tightening torques	289
5.12 Capacities and dimensions	290
5.12.1 Capacities	290
5.12.2 Dimensions and weights	292
5.12.3 Attachment points for 3-cylinder engines	294

1. Tractor identification

1.1 Locating serial numbers	13
1.1.1 Locating serial numbers	13
1.2 Tractor identification	14
1.2.1 Your tractor identification details	14

1.1 Locating serial numbers

1.1.1 Locating serial numbers

IMPORTANT: Tell your dealer or agent the tractor serial number.

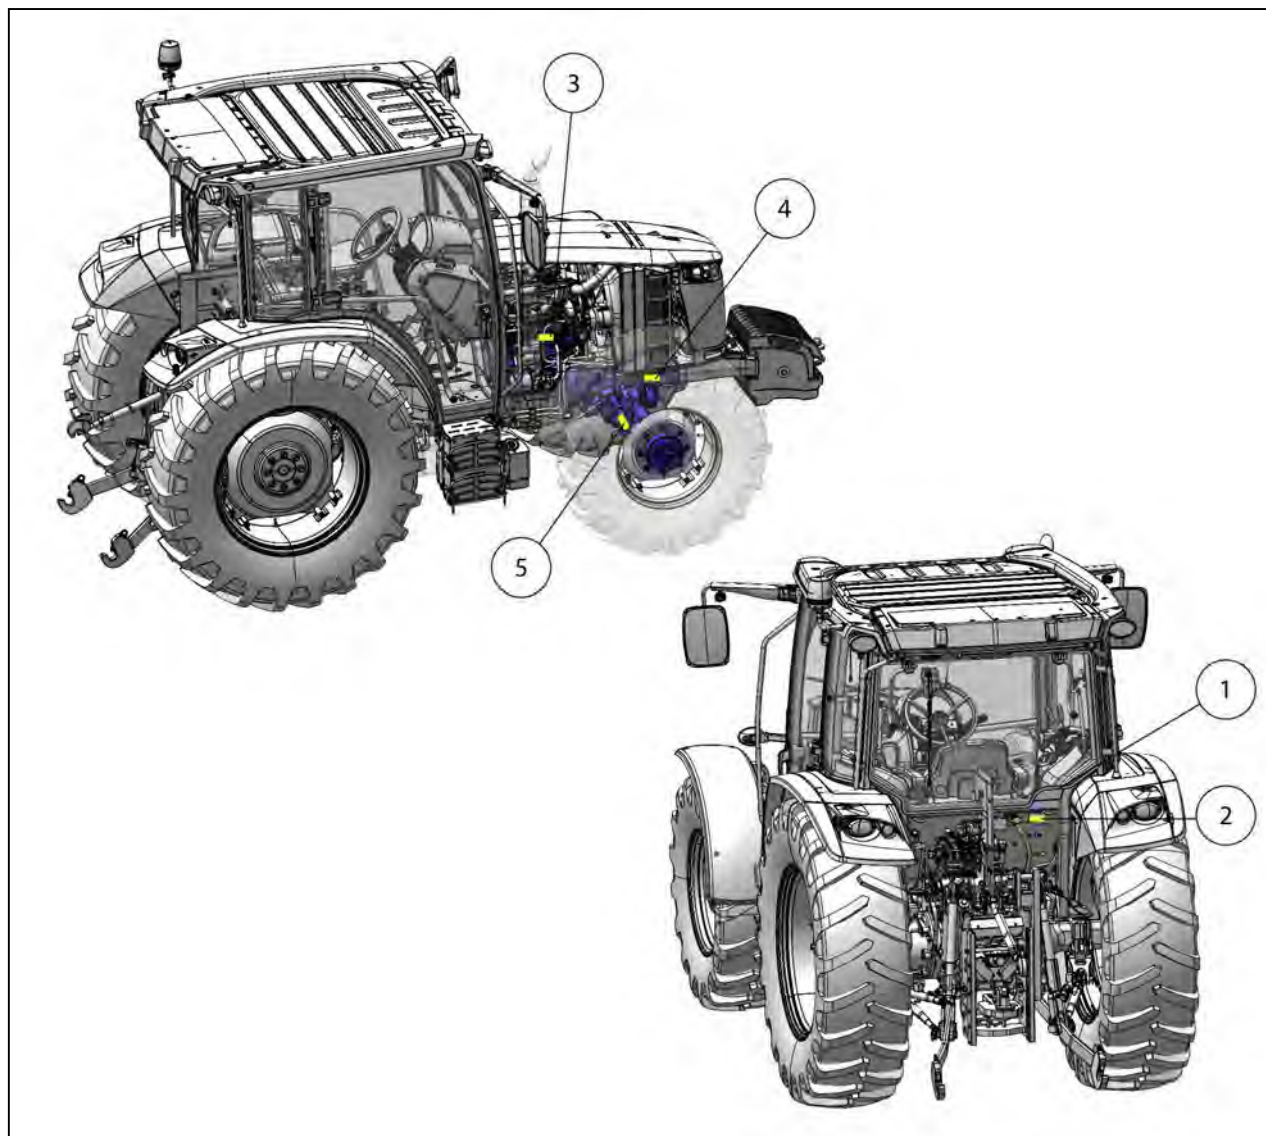


Fig. 1

- | | |
|--------------------------|------------------------------|
| (1) Cab serial number | (4) Chassis serial number |
| (2) Name plate | (5) Front axle serial number |
| (3) Engine serial number | |

1.2.1 Your tractor identification details

Serial number: _____

Engine serial number: _____

Owner's name: _____

Street: _____

Postcode: _____

Town: _____

County: _____

Country: _____

Dealer code: _____

Tractor received from (tick one of the following):

☐ Factory ☐ Other dealer (transfer)

Notes: _____

2. Safety instructions and safety points - Warranty

2.1 Introduction	17
2.1.1 Introduction - Safety instructions	17
2.2 Safety — Symbols and terms	19
2.2.1 Safety — Symbols and terms	19
2.3 Safety decals and instructions	20
2.3.1 Checking and replacing the safety decals and instructions	20
2.3.2 Presentation and location of the safety decals and instructions	21
2.4 General safety instructions	27
2.4.1 Awareness of the safety instructions and symbols	27
2.4.2 Operator familiarity in the use of the tractor	27
2.4.3 Filling the fuel and DEF or AdBlue™ tanks	28
2.4.4 Mounting and dismounting the operator's seat	28
2.4.5 Mandatory procedure before dismounting the tractor	29
2.5 Special instructions	30
2.5.1 Specific recommendations for agricultural and forestry tractors	30
2.6 Special safety instructions for preparing the tractor for use	32
2.6.1 Protective clothing	32
2.6.2 Activated carbon filter information	32
2.6.3 Safety devices and items	34
2.6.4 Checking the tractor	35
2.7 Specific safety instructions for starting the tractor	37
2.7.1 Protection of persons other than the operator	37
2.7.2 Start up safely	37
2.7.3 Checks to be carried out after start-up	38
2.8 Specific safety instructions for using the tractor	39
2.8.1 General instructions	39
2.8.2 Protection of persons other than the operator	40
2.8.3 Overturning	40
2.8.4 Tractor towing	43
2.8.5 Regulatory data on maximum permitted trailed weights	43
2.8.6 Road use	44
2.8.7 Park brake	45
2.8.8 Power take-off	45
2.8.9 Implements	46
2.8.10 Front-end loader	49
2.9 Specific safety instructions for servicing the tractor	50
2.9.1 Pollution warning to observe when servicing the tractor	50
2.9.2 General instructions	50
2.9.3 Handling instructions	51
2.9.4 Special instructions for cleaning the tractor	53
2.10 Protective structures	54
2.10.1 Protective structures: use and accreditation	54
2.10.2 Cab	54
2.10.3 Seat belt	54
2.10.4 Passenger seat	55
2.11 Warranty	56
2.11.1 General	56

2.11.2 Pre-delivery inspection and commissioning on the user's premises	56
2.11.3 Warranty procedure	56
2.11.4 Procedure to follow if changing region	56
2.11.5 Servicing during and after the warranty period	57

2.1 Introduction

2.1.1 Introduction - Safety instructions

Operator's Manual

IMPORTANT: *This manual must always be kept with the tractor. For extra copies, contact your Massey Ferguson dealer.*

NOTE: *This manual is for all users of Massey Ferguson tractors. The availability of the attachments indicated, on the basic tractor or as accessories, may vary according to the region in which the tractor is used. To find out which attachments are available in a region, contact a Massey Ferguson dealer.*

This manual enables the owner and the operator to operate the tractor appropriately under normal conditions of use. Providing they follow the instructions carefully, the tractor will give many years of service in the Massey Ferguson tradition.

During commissioning of the equipment by the Massey Ferguson dealer on the user's premises, the user must ensure that the operating and servicing instructions are properly understood. If the user has any doubt regarding the operation or servicing of the tractor, the Massey Ferguson dealer should always be contacted. It is essential that these instructions are understood and followed.

This manual covers all operating and safety instructions relevant to the Massey Ferguson tractor. For implements and accessories that may be installed at the time of the tractor's delivery or later, the user must refer to the Operator's Manuals relating to these implements and accessories.

This chapter supplements any safety instructions given in other chapters of this manual. It lists safety-related situations that may be encountered during the normal operating and servicing of the tractor with the purpose of enabling the user to work in complete safety.

Depending on the implements and accessories used, and the working conditions on-site or in the servicing area, additional precautions should be followed. Massey Ferguson cannot exercise direct control over the commissioning, operation, inspection, lubrication or servicing of the tractor. Consequently, Massey Ferguson cannot be held responsible if the user fails to take appropriate safety precautions for the implements and accessories used, or for the working conditions on-site or in the servicing area.



WARNING:

It is your responsibility to read and understand the instructions that appear in this chapter before using the tractor. They must be followed by the user.

Servicing, spare parts, accessories and conditions of use

The user must perform daily servicing on the tractor and keep a logbook of operating hours.

Only genuine Massey Ferguson replacement parts should be used when the need arises. Massey Ferguson dealers supply these genuine parts. Contact your dealer if you require any advice on their installation and use. Massey Ferguson cannot be held responsible if the owner uses parts other than the genuine parts sold by Massey Ferguson dealers. Similarly, only accessories specifically adapted to the tractor should be used.

This tractor is designed for normal farming activities only. Use of the tractor for any other activity, particularly forestry work, is considered to be contrary to normal use of the tractor.

If the tractor is to be used in abnormal conditions that could cause damage to it, such as in deep water or in paddy fields, consult a Massey Ferguson dealer to obtain special instructions.

IMPORTANT: *Massey Ferguson under no circumstances covers damage caused by the failure to observe the conditions of use, servicing and repair for its tractors. There is thus no justification for a warranty claim if the user fails to observe the recommendations for use, servicing and repair in this manual.*

IMPORTANT: *Massey Ferguson accepts no responsibility in the event of damage to equipment or personal injury resulting from the failure to observe the conditions of use, servicing and repair for its tractors.*

Always consult a Massey Ferguson dealer:

- For any advice regarding the conditions of use, servicing and repair for the tractor
- If there is any doubt regarding the safety instructions to be observed when using the tractor
- For any adjustments that may be necessary
- To order genuine spare parts
- In the event of after-sales problems
- If you have any questions relating to the tractor, genuine parts or implements and accessories that can be adapted for the tractor.

2.2 Safety — Symbols and terms

2.2.1 Safety — Symbols and terms

Signal



This safety alert symbol means **CAUTION! BE ALERT! YOUR SAFETY DEPENDS ON IT!**

The safety alert symbol identifies important safety notices on machines, safety signs, in instruction books or elsewhere. When you see this symbol, be alert to the risk of injury or death. Follow the instructions in the safety notice.

SAFETY is paramount! Why?

- ACCIDENTS DISABLE AND KILL
- ACCIDENTS ARE COSTLY
- ACCIDENTS CAN BE AVOIDED

Terms

The terms **DANGER**, **WARNING** and **CAUTION** are used with the safety alert symbol. It is essential to learn how to recognize these safety messages and to follow the recommended safety measures and instructions.



DANGER:

indicates an imminently hazardous situation which, if not avoided, will result in DEATH or VERY SERIOUS INJURY.



WARNING:

indicates a potentially hazardous situation which, if not avoided, could result in DEATH or SERIOUS INJURY.



CAUTION:

indicates a potentially hazardous situation which, if not avoided, may result in MINOR or MODERATE INJURY.

The terms **IMPORTANT** and **NOTE** are not directly related to personal safety, but are used to provide additional information and advice on the operation or maintenance of equipment.

IMPORTANT: *identifies specific instructions or procedures which, if not strictly applied, could damage or destroy the tractor, its equipment or the surrounding area.*

NOTE: *identifies points of particular interest for the most effective and suitable operation or repair.*

2.3 Safety decals and instructions

2.3.1 Checking and replacing the safety decals and instructions



WARNING:

Never remove or obscure the safety decals and instructions.

Replace any safety decals and instructions that are illegible or missing. Replacement decals are available from the dealer in the event of loss or damage. If a second-hand tractor has been purchased, check that all safety and instruction decals are correct, legible and in the correct location: To do this, refer to the section on the presentation and location of decals.

2.3.2 Presentation and location of the safety decals and instructions

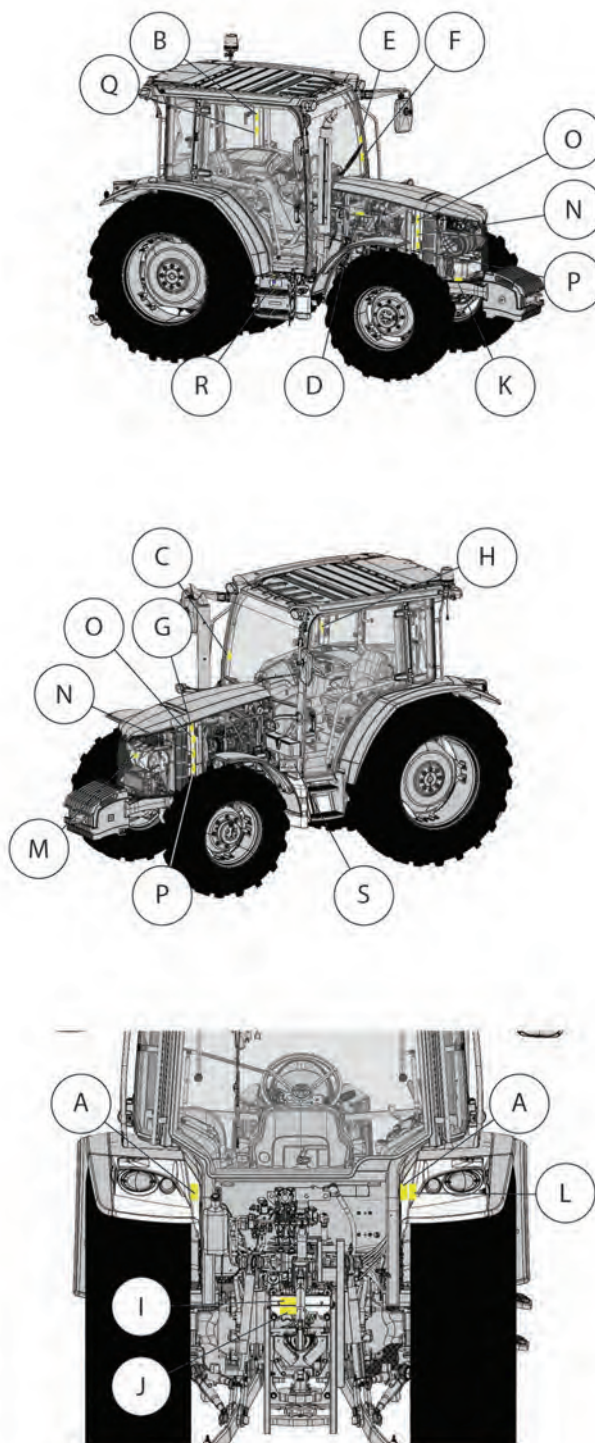
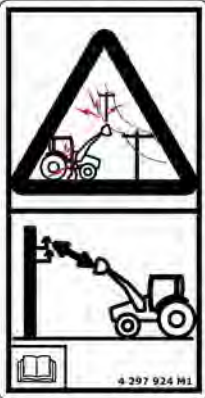
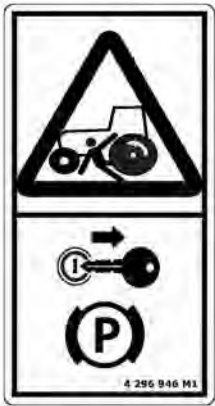
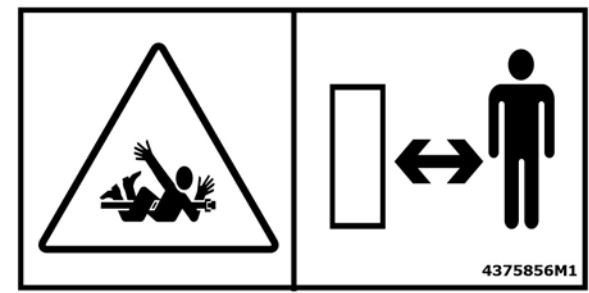
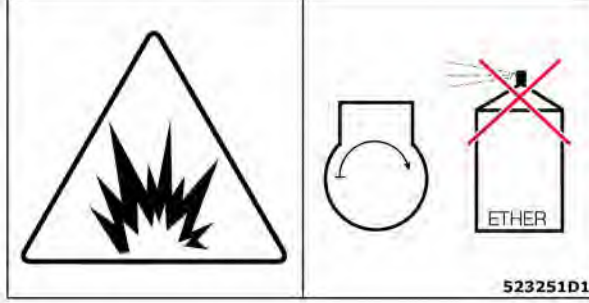
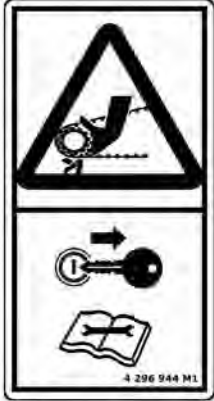
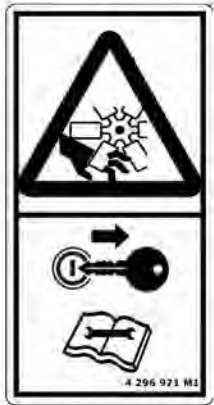



Fig. 1

	• 4392020M1 ((A)) • WARNING: Crushing hazard between tractor and implement. Stand outside of tractor tire when using external controls for 3-point linkage. Do not stand between tractor and implement.
	• 4296958M1 ((B)) • WARNING: Falling or crushing hazard if the tractor overturns Keep seat belt fastened snugly when operating, do not jump if tractor starts to tip.
	• 4297924M1 ((C)) • DANGER: Electrocution hazard Tractors with a front loader: Exercise extreme caution to avoid coming into contact with power lines. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.
	• 4296981M2 ((D)) • DANGER: Runaway machine and runover hazards Only start the engine when seated in the seat with the PTO disengaged and the transmission in the neutral position. DO NOT short across starter terminals to start engine.

	• 4296946M1 ((E)) • WARNING: Runaway machine and runover hazards Shut off engine and remove key before performing maintenance or repair work.
	• ACW0487380 ((F)) • WARNING: Falling or crushing hazard if the tractor overturns To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor. If a passenger seat is provided, it may be used only to carry a passenger ON PUBLIC ROADS, in accordance with the regulations in force in the country of use. It is forbidden to carry a passenger while working in the fields or similar.
	• 4375885M1 ((G)) • WARNING: Risk of burning Keep away from hot engine components when engine has been running. Shut off engine, remove key and wait for system to cool before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
	• 4296950M1 ((H)) • WARNING: To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.

 4375856M1	• 4375856M1 ((I)) • DANGER: Entanglement hazard PTO shaft. Stand clear of rotating shafts. Keep all driveline, tractor and equipment guards in place during operation.
 4 297 148 M1	• 4297148M1 ((J)) • WARNING: Falling hazard Do not step on PTO shield.
	((K)) Not used
	((L)) Not used
 523251D1	• 523251D1 ((M)) • WARNING: Explosion hazard. Never use starter fluid or aerosol sprays.

	• 4296944M1 ((N)) • WARNING: Entanglement hazard in belt drives Keep hands clear of rotating parts and belts while engine is running. Shut off engine and remove key before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
	• 4296971M1 ((O)) • WARNING: Shearing hazard – engine fan. Keep your hands away from the fan and the belts when the engine is running. Shut off engine and remove key before performing maintenance or repair work. Refer to the instructions in the technical manual when removing and reconditioning.
	• 4296967M1 ((P)) • WARNING: Burn hazard – hot surfaces. Keep away from hot engine components when engine has been running. Wait for system to cool before performing maintenance or repair work.

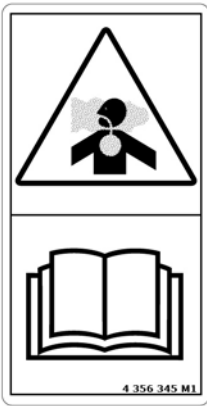 4 356 345 M1	• 4356345M1 ((Q)) • WARNING: Possible inhalation of dangerous substances. Refer to the safety instructions provided by the product manufacturer. Wear personal protective equipment where necessary. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.
 4 291 921 M2	• 4291921M2 ((R)) • WARNING: Use only DEF or AdBlue™. Refer to the safety instructions provided by the product manufacturer. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor. Do not put fuel in the DEF or AdBlue™ tank. Do not dispose of urea spillages through the drains.
 ACW0769200	• ACW0769200 ((S)) • WARNING: Only use diesel fuel with very low sulfur content: $S \leq 20$ mg/kg. To avoid personal injury, read the Operator's Manual for safety information and operating instructions before operating the tractor.

2.4 General safety instructions

2.4.1 Awareness of the safety instructions and symbols

The operator must observe the safety instructions in order to ensure his/her own safety and the safety of other persons. Before using the tractor, familiarize yourself with:

- The instructions in this manual
- All of the safety decals and instructions on the tractor
- All the usual protective measures that should be taken when working



WARNING:

In some of the illustrations in this manual, the safety panels and guards are removed for reasons of clarity. Never use the tractor if these parts are not in place. If some of these parts have been removed for repair purposes, they must be refitted before use.

2.4.2 Operator familiarity in the use of the tractor



WARNING:

The operator must not drink alcohol or take any medication that leads to a loss of concentration or coordination. If taking medication, whether prescribed or not, always seek medical advice with regard to your ability to operate machinery safely.



Fig. 2

- Conditions for use of the tractor:
 - to be familiar with operating an agricultural tractor
 - to be trained in the operation of the tractor
 - to have read and understood this entire manual. Always consult the dealer if there is any doubt or lack of understanding
 - find out about the rules and safety regulations applicable to the work you are doing. Some regulations specify that no one under the age of 16 may operate power machinery, for example. This includes tractors. It is your responsibility to know what these regulations are and to observe them in the operating area or situation. These rules include, but are not limited to, the safety instructions relating to the correct operation of the tractor as described in this manual.
- Do not allow children or unqualified persons to operate the tractor.
- Do not allow children to use the instructor seat.
- The instructor seat is only intended for short periods of use.



WARNING:

In poor conditions, slow down and be extra careful, and engage 4-wheel drive if fitted.

It is important to have good knowledge of the operation of the tractor as well as all of its accessories and attached implements.

Remember that rain, snow, ice, loose gravel or soft ground can change the performance of the tractor.

2.4.3 Filling the fuel and DEF or AdBlue™ tanks



WARNING:

- Always switch off the engine before filling up.
- Do not smoke while refuelling the tractor. Keep away from naked flames.
- Proceed with care to prevent any splashes.

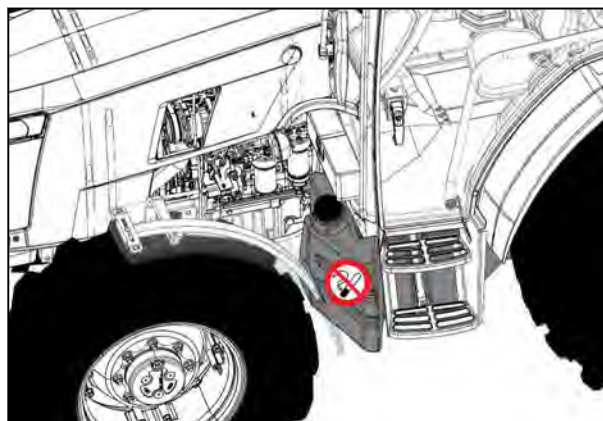


Fig. 3

Filling DEF or AdBlue™



WARNING:

Avoid all contact with the eyes, skin and clothing.

- Proceed with care to prevent any splashes.
- If the product is ingested, seek medical attention immediately. Do NOT induce vomiting unless indicated to do so by medical staff. Do not administer liquid to a person who is unconscious.
- In case of contact with skin, rinse with plenty of water and remove contaminated clothing.
- In case of contact with the eyes, rinse immediately under running water. In the event of irritation, seek medical advice.
- If fumes are inhaled, breathe in fresh air and seek medical advice, if necessary.
- Prevent DEF or AdBlue™ from coming into contact with other chemical products.
- Urea spillages must not be discharged into the drains.

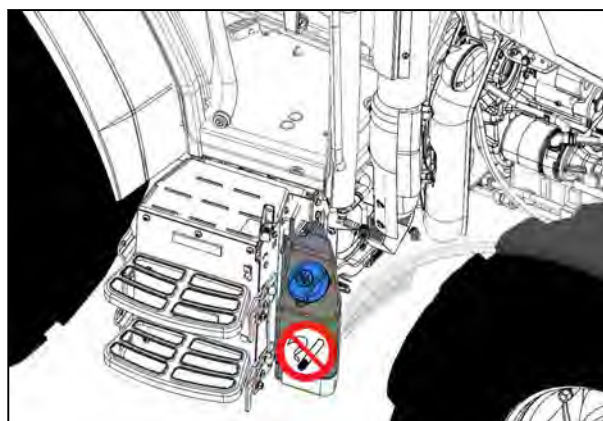


Fig. 4

2.4.4 Mounting and dismounting the operator's seat

- Always use three-point contact with the tractor and face the tractor when mounting and dismounting the operator's seat. (Three-point contact means that both hands and one foot or one hand and both feet are in contact with the tractor at all times when getting on and off).
- Clean your shoes and wipe your hands before getting in the tractor.
- Use handrails, grab handles, ladders or steps (if fitted) when getting on and off.
- Do not use the control levers as a handhold.
- Do not step on pedals when getting in and out.

- Never attempt to mount or dismount a moving tractor.
- Never jump off a tractor when it is running except in an emergency.

2.4.5 Mandatory procedure before dismounting the tractor

Before getting out of the operator's seat, observe this procedure:

Procedure

1. Apply the parking brake in order to immobilize the tractor.
2. Place the reverse shuttle lever in the neutral position.
3. Disengage the rear PTO.
4. Lower the implements to the ground.
5. Stop the engine as per chapter Operation, Engine: Stopping the engine.
Make sure that the engine is not idling.
6. Remove the ignition key.

2.5 Special instructions

2.5.1 Specific recommendations for agricultural and forestry tractors

Hot surfaces

Be careful of surfaces which may be hot, in particular engine and hydraulics components, during operation and services.

FOPS (Falling Object Protection Structure)

- Alternative 1 (no FOPS available): Protection against falling objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional FOPS fitted): Protection against falling objects is provided under OECD-code 10 (Energy level 1365 J). If a higher protection level is necessary, additional safety equipment must be installed on the tractor (no original equipment available).

OPS (Operator Protection Structure)

- Alternative 1 (no OPS available): Protection against penetrating objects is not provided, unless clearly specified otherwise.
- Alternative 2 (optional OPS fitted): Protection against penetrating objects is provided under ISO 8084 (Machinery for forestry). Before operating, check if protection is adapted to your work conditions.

Dangerous substances for tractors with ROPS

NOTE:

A mark indicating the ROPS' level of protection against hazardous substances is located on the ROPS.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Tractor without cab: Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. These tractors are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

Dangerous substances for tractors with a cab

NOTE:

A mark indicating the cab's level of protection against hazardous substances is located on the front left-hand pillar inside the cab. For platform tractors, this mark is displayed on the arch.

IMPORTANT:

Always wear personal protective equipment when handling the filters.

- Alternative 1 (less cab or cab under category 1): Protection against hazardous substances (agricultural chemicals etc.) in the form of dust, aerosols and fumes is not provided. Tractors equipped with a cab are not intended for spraying pesticides without additional protection. Personal protective equipment must be used according to the chemical manufacturer's recommendations.

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**