



# Bobcat®

## Operation & Maintenance Manual

---



---

# T590

## Compact Track Loader

S/N A3NR15599 & Above



# OPERATOR SAFETY WARNINGS

## WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

**! Safety Alert Symbol:** This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

**CORRECT**

P-90216

**! Never use the loader without instructions. See machine signs (decals), Operation & Maintenance Manual, and Operator's Handbook.**

**CORRECT**

NA1254

**! Always use the seat bar and fasten seat belt snugly.**  
**! Always keep feet on the foot pedals or footrests when operating loader.**

**CORRECT**

NA1720

**! Never use loader without operator cab with ROPS and FOPS approval. Fasten your seat belt.**

**WRONG**

NA1723

**! Never use loader as man lift or elevating device for personnel.**

**WRONG**

NA1724

**! Do not use loader in atmosphere with explosive dust, explosive gas, or where exhaust can contact flammable material.**

**WRONG**

NA1721

**! Never carry riders.**  
**! Keep bystanders away from work area.**

**WRONG**

NA1716

**! Always carry bucket or attachments as low as possible.**  
**! Do not travel or turn with lift arms up.**  
**! Load, unload, and turn on flat level ground.**

**WRONG**

NA1718

**! Never exceed Rated Operating Capacity.**

**WRONG**

NA1719

**! Never leave loader with engine running or with lift arms up.**  
**! To park, engage parking brake and put attachment flat on the ground.**

**WRONG**

NA1717

**! Never modify equipment.**  
**! Use only attachments approved by Bobcat Company for this model loader.**

## SAFETY EQUIPMENT

The Bobcat® loader must be equipped with safety items necessary for each job. Ask your Bobcat dealer for information on the availability and safe use of attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. SEAT BAR: When up, it must lock the loader controls.
3. OPERATOR CAB (ROPS and FOPS): It must be on the loader with all fasteners tight.
4. OPERATOR'S HANDBOOK: Must be in the cab.
5. SAFETY SIGNS (DECALS): Replace if damaged.
6. SAFETY TREADS: Replace if damaged.
7. GRAB HANDLES: Replace if damaged.
8. LIFT ARM SUPPORT DEVICE: Replace if damaged.
9. PARKING BRAKE
10. BOBCAT INTERLOCK CONTROL SYSTEM (BICS)

# CONTENTS

FOREWORD .....	2
SAFETY AND TRAINING RESOURCES .....	10
OPERATING INSTRUCTIONS .....	20
PREVENTIVE MAINTENANCE .....	111
SYSTEM SETUP AND ANALYSIS .....	187
SPECIFICATIONS .....	204
WARRANTY .....	211
ALPHABETICAL INDEX .....	213

## REFERENCE INFORMATION

Write the correct information for YOUR Bobcat loader in the spaces below. Always use these numbers when referring to your Bobcat loader.

Loader Serial Number \_\_\_\_\_  
Engine Serial Number \_\_\_\_\_

NOTES:

\_\_\_\_\_  
\_\_\_\_\_  
\_\_\_\_\_

YOUR BOBCAT DEALER:

\_\_\_\_\_  
ADDRESS:

\_\_\_\_\_  
PHONE:

\_\_\_\_\_  
Bobcat Company  
P.O. Box 128  
Gwinner, ND 58040-0128  
UNITED STATES OF AMERICA

Doosan Bobcat EMEA s.r.o.  
U Kodetky 1810  
263 12 Dobris  
CZECH REPUBLIC

## FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat loader. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT LOADER. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your loader.

BOBCAT COMPANY IS ISO 9001 CERTIFIED .....	3
REGULAR MAINTENANCE ITEMS .....	3
SERIAL NUMBER LOCATIONS .....	4
Loader Serial Number .....	4
Engine Serial Number .....	4
DELIVERY REPORT .....	4
LOADER IDENTIFICATION .....	5
FEATURES, ACCESSORIES, AND ATTACHMENTS .....	6
Standard Items .....	6
Options And Accessories .....	6
Buckets Available .....	7
Attachments .....	7
High-Flow Attachments .....	7
Special Applications Kit .....	8
Special Applications Kit Inspection And Maintenance .....	8
Forestry Door And Window Kit .....	9
Forestry Door And Window Kit Inspection And Maintenance .....	9

**BOBCAT COMPANY IS ISO 9001 CERTIFIED**














**ISO 9001** is an international standard that specifies requirements for a quality management system that controls the processes and procedures which we use to design, develop, manufacture, and distribute Bobcat products.

British Standards Institute (**BSI**) is the Certified Registrar Bobcat Company chose to assess the company's compliance with the ISO 9001 at Bobcat's manufacturing facilities in Gwinner, North Dakota (U.S.A.), Pontchâteau (France), and the Bobcat corporate offices (Gwinner, Bismarck, and West Fargo) in North Dakota. **TÜV Rheinland** is the Certified Registrar Bobcat Company chose to assess the company's compliance with the ISO 9001 at Bobcat's manufacturing facility in Dobris (Czech Republic). Only certified assessors, like BSI and TÜV Rheinland, can grant registrations.

ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

**REGULAR MAINTENANCE ITEMS**

 <p><b>ENGINE OIL FILTER (6 Pack)</b> 6675517</p>	 <p><b>BATTERY</b> 7269857</p>
 <p><b>FUEL FILTER</b> 6667352</p>	 <p><b>HYDRAULIC FILTER</b> 7024037</p>
 <p><b>AIR FILTER, Outer</b> 6666375</p>	 <p><b>HYDRAULIC CHARGE FILTER</b> 6692337 (Earlier Models) 7319444 (Later Models)</p>
 <p><b>AIR FILTER, Inner</b> 6666376</p>	 <p><b>HYDRAULIC FILL / BREATHER CAP</b> 6727475</p>
 <p><b>ANTIFREEZE, Propylene Glycol</b>  6983128 - Premixed - U.S. gal (6) 6983129 - Concentrate - U.S. gal (6)</p>	 <p><b>FLUID, Hydraulic / Hydrostatic</b>  6903117 - 2.5 U.S. gal (2) 6903118 - 5 U.S. gal (1) 6903119 - 55 U.S. gal (1)</p>
 <p><b>FLUID, Hydrostatic Drive Motor (Later Models)</b>  7270874 – 12 U.S. fl oz</p>	


**NOTE: Always verify Part Numbers with your Bobcat dealer.**

## SERIAL NUMBER LOCATIONS

Always use the serial number of the loader when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or there may be different procedures to follow when performing a specific service operation.

### Loader Serial Number

 
Figure 1

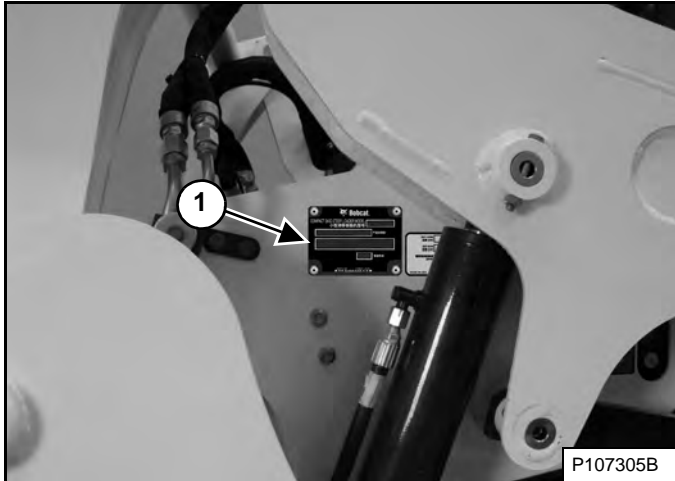

The loader serial number plate (Item 1) [Figure 1] is located on the outside of the loader frame.

### Engine Serial Number

 Figure 2

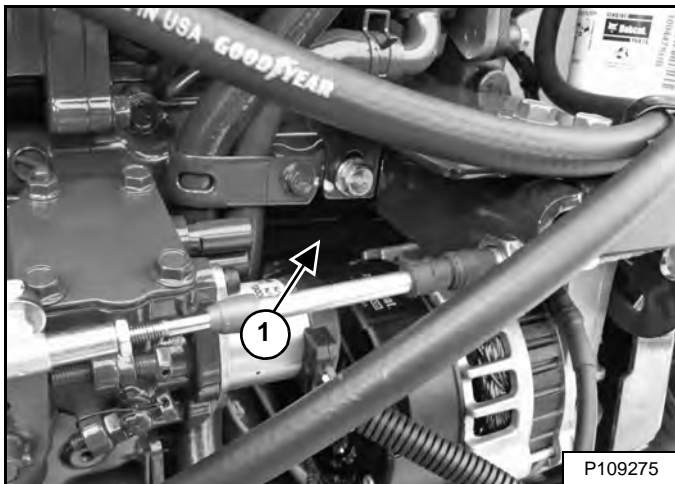

The engine serial number (Item 1) [Figure 2] is located on the side of the engine behind the alternator.

## DELIVERY REPORT


Figure 3



The delivery report [Figure 3] contains a list of items that must be explained or shown to the owner or operator by the dealer when the Bobcat loader is delivered.

The delivery report must be reviewed and signed by the owner or operator and the dealer.

 **LOADER IDENTIFICATION**

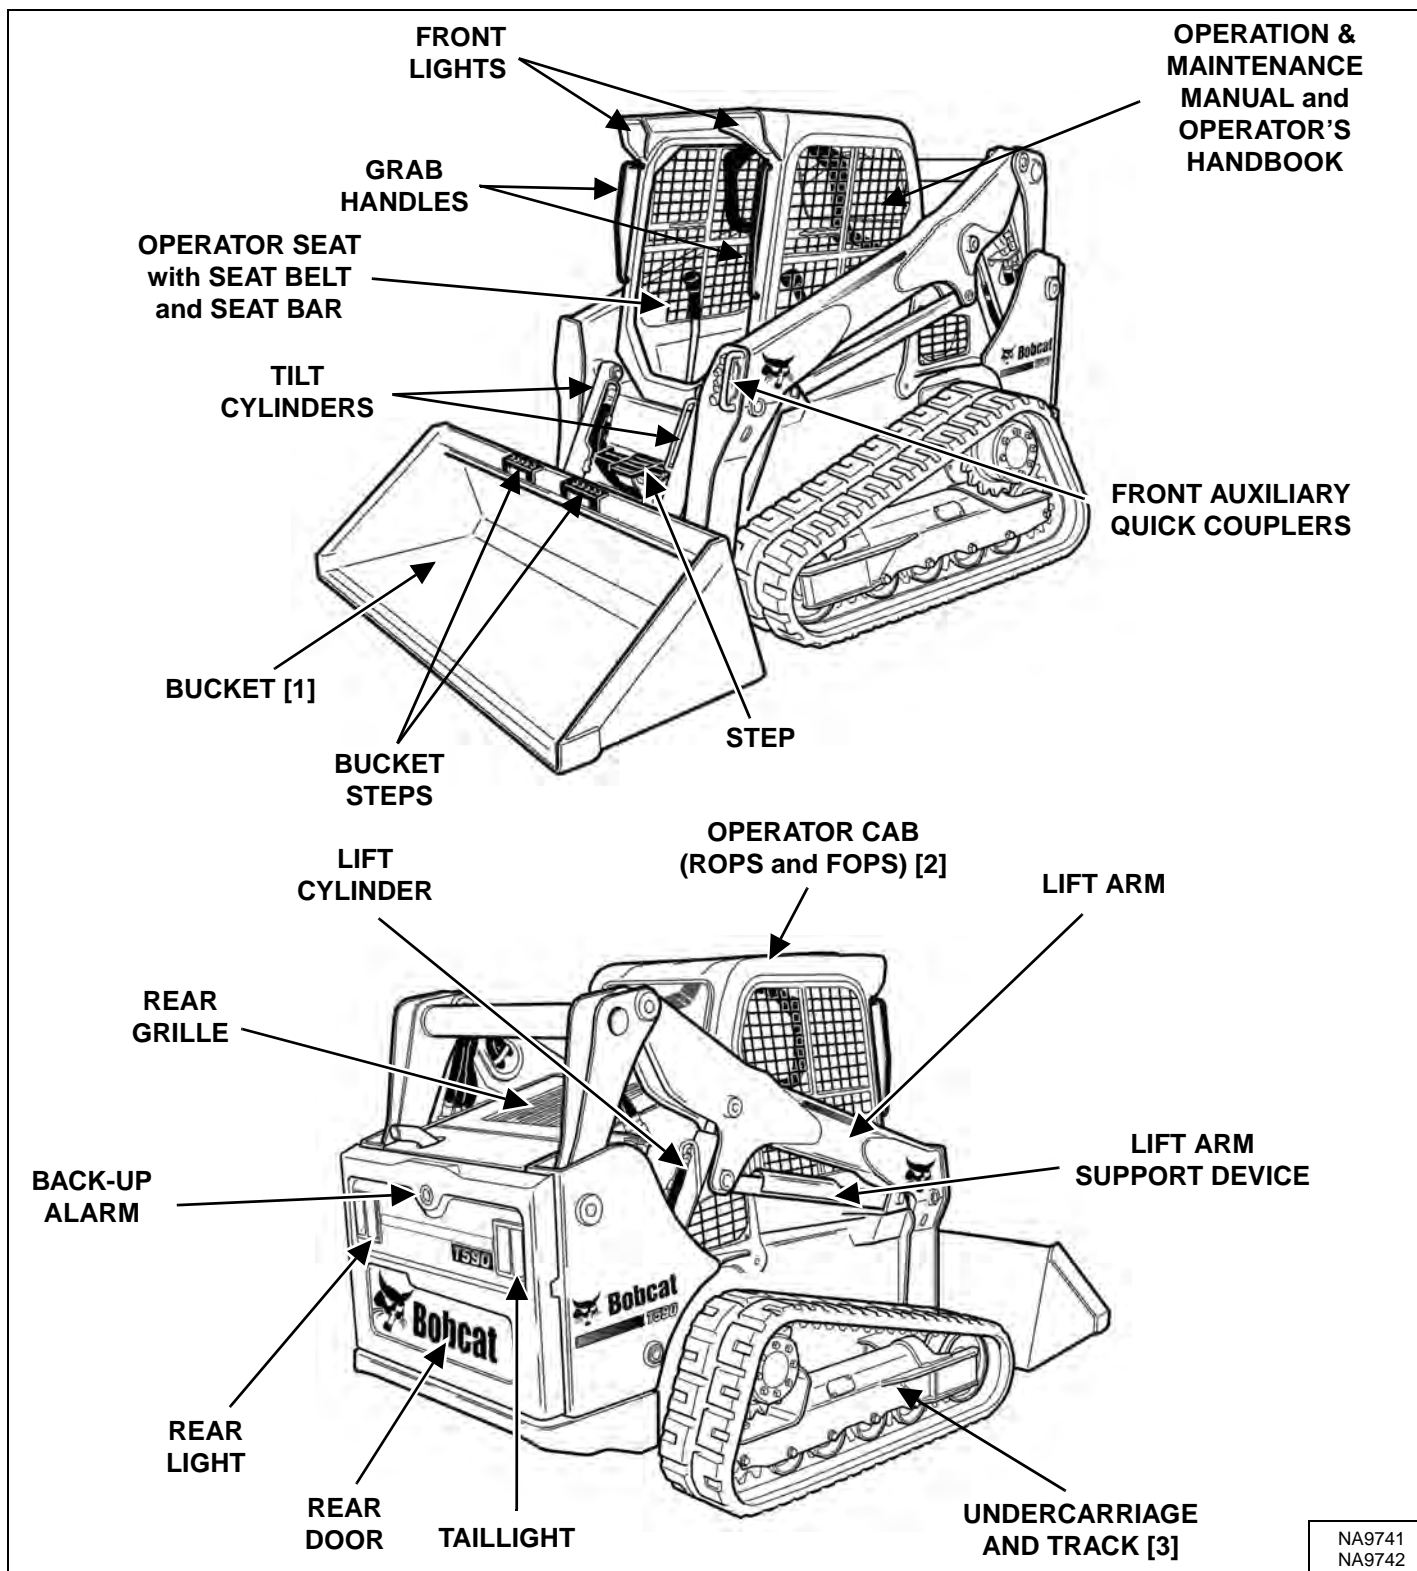

NA9741  
NA9742

- [1] BUCKETS - Several different buckets and other attachments are available for the Bobcat loader.
- [2] ROPS - Roll-Over Protective Structure per ISO 3471 and FOPS - Falling-Object Protective Structure per ISO 3449, Level I. Level II is available.
- [3] UNDERCARRIAGE and TRACK - Undercarriage and Track options are available.

## FEATURES, ACCESSORIES, AND ATTACHMENTS

### Standard Items

Model T590 Bobcat loaders are equipped with the following standard items:

- Adjustable Suspension Seat
- Automatically Activated Glow Plugs
- Auxiliary Hydraulics
- Bobcat Interlock Control System (BICS™)
- Bob-Tach®
- Cab (includes: rear window and polycarbonate top window) ROPS and FOPS (Level I) Approved
- Engine / Hydraulic Systems Shutdown
- Front Horn / Back-up Alarm
- Instrumentation: Hourmeter, Engine rpm, System Voltage; Engine Temperature and Fuel Gauges; Warning Lights
- Lift Arm Support Device
- Lights, Front and Rear
- Parking Brake
- Seat Bar
- Seat Belt - Retractable
- Spark Arrester Device
- Tracks, Rubber - 320 mm (12.6 in)
- Turbocharger

### Options And Accessories

Below is a list of some equipment available from your Bobcat loader dealer as Dealer and / or Factory Installed Accessories and Factory Installed Options. See your Bobcat dealer for other available options and accessories.

- Adjustable Heated Cloth Air Ride Suspension Seat
- Air Conditioning
- Air Deflector Kit
- Air Filter Precleaner
- Attachment Control Device (ACD) (7-Pin, 14-Pin)
- Automatic Ride Control
- Auxiliary Hydraulic Coupler Guard
- Cab Accessory Harness
- Cab Door with Emergency Exit
- Cab Heater
- Cab Reseal Plug Kit
- Controls:
  - Advanced Control System (ACS)  
(Selectable Foot Pedal or Hand Control)
  - Advanced Hand Controls (AHC)
  - Selectable Joystick Controls (SJC)  
(Selectable 'ISO' or 'H' Pattern Control)
  - Standard Controls
- Counterweight Kit
- Deluxe Instrumentation Panel
- Deluxe Interior with Storage Compartments
- Dual Steering Damper
- Engine Heater
- Exhaust Purifying Muffler
- Extended Pedals

### Options And Accessories (Cont'd)

- Fire Extinguisher
- Foot Area Duct Kit
- FOPS Kit (Level II)
- FOPS Window Kit
- Forestry Door and Window Kit
- Forestry Door Wiper
- Four-Way Flashers (Also adds Turn Signal function)
- Front and Rear Light Guards
- Fuel Sediment Bowl Kit
- High-Flow Auxiliary Hydraulics
- Hose Guide
- Hydraulic Bucket Positioning (With On / Off Selection)
- Hydraulic Muffler
- Isolated Steering Link Kit
- Keyless Start
- Larger Capacity Battery (For cold weather starting)
- Lift Cylinder Cushion Kit
- Lift Kit (Four-Point, Single-Point)
- Locking Fuel Cap
- Maintenance Platform
- MSHA Approval Kit
- Muffler Guard
- Power Bob-Tach®
- Radio
- Radio Remote Control
- Rear Auxiliary Hydraulics
- Rear Bumper Kit
- Rear Camera Kit
- Rear Window Wiper
- Reversing Fan
- Rotating Beacon
- Seat Belt with 3-Point Restraint (Standard on Two-Speed Models)
- Seat Belt - 3 in. Wide
- Side Lighting
- Sound Reduction Kit (Reduces noise at operator ear)
- Special Applications Kit
- Strobe Light
- Tailgate Lock
- Tilt Cylinder Guard Kit
- Tracks:
  - Multi-Bar Lug – 320 mm (12.6 in)
  - Rubber - 400 mm (15.75 in)
  - Winter Rubber - 320 mm (12.6 in)
- Two-Speed Travel
- Undercarriage:
  - Roller Suspension™
  - Solid-Mounted
- Undercarriage Cover Kit
- Windows:
  - Externally Removable Rear Window
  - Polycarbonate Rear Window
  - Polycarbonate Side Windows
  - Side Windows

***Specifications subject to change without notice and standard items may vary.***



## FEATURES, ACCESSORIES, AND ATTACHMENTS (CONT'D)

 
These and other attachments are approved for use on this model loader. Do not use unapproved attachments. Attachments not manufactured by Bobcat may not be approved.

The versatile Bobcat loader quickly turns into a multijob machine with a tight-fit attachment hook-up ... from bucket to grapple to pallet fork to backhoe, and a variety of other attachments.

See your Bobcat dealer for information about approved attachments and attachment Operation & Maintenance Manuals.

Increase the versatility of your Bobcat loader with a variety of bucket styles and sizes.

### Buckets Available

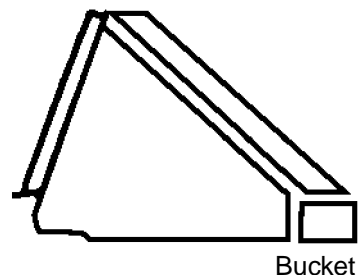

Many bucket styles, widths, and different capacities are available for a variety of different applications. They include Construction and Industrial, Low Profile, Fertiliser, and Snow, to name a few. See your Bobcat dealer for the correct bucket for your Bobcat loader and application.

---

### Attachments

- Angle Broom
- Auger
- Backhoe
- Blades — Box, Dozer, Snow, Snow V-Blade
- Breaker, Hydraulic
- Brush Saw
- Brushcat™ Rotary Cutter
- Buckets
- Bucket Adapter
- Chipper
- Combination Bucket
- Concrete Mixer
- Concrete Pump
- Digger
- Drop Hammer
- Dumping Hopper
- Flail Cutter
- Grader
- Grapples — Farm / Utility, Industrial, Root
- Landplane
- Landscape Rake
- Laser Equipment
- Mower
- Packer Wheel
- Pallet Fork
- Planer
- Rock Bucket
- Scarifier
- Scraper
- Seeder
- Silt Fence Installer
- Snow Pusher
- Snowblower
- Sod Layer
- Soil Conditioner
- Spreader
- Stabiliser, Rear
- Stump Grinder
- Sweeper
- Three-Point Hitch Adapter
- Tiller

- Tilt-Tatch™
- Tree Spade
- Trench Compactor
- Trencher
- Utility Fork
- Utility Frame
- Vibratory Roller
- Water Kit
- Whisker Broom

### High-Flow Attachments

The following attachments are approved for use on High-Flow machines. See your Bobcat dealer for an updated list of approved attachments.

- Angle Broom
- Auger
- Brushcat™ Rotary Cutter
- Chipper
- Concrete Pump
- Flail Cutter
- Planer
- Snowblower
- Soil Conditioner
- Stump Grinder
- Tiller
- Trencher
- Wheel Saw

## FEATURES, ACCESSORIES, AND ATTACHMENTS (CONT'D)

### Special Applications Kit


# WARNING

### AVOID INJURY OR DEATH

Some attachment applications can cause flying debris or objects to enter front, top or rear cab openings. Install the Special Applications Kit to provide added operator protection in these applications.

W-2737-0508

 Figure 4

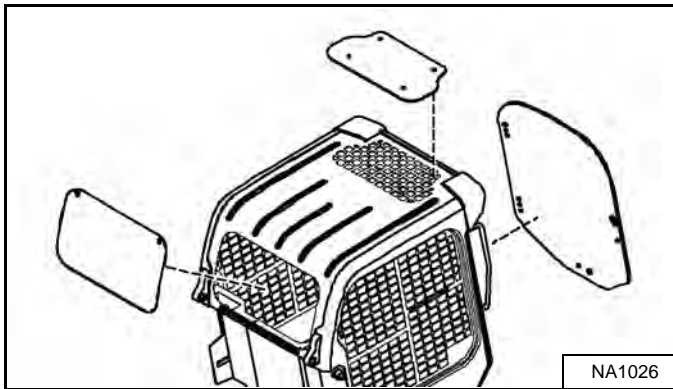

Available for special applications to restrict material from entering cab openings. Kit includes 12,7 mm (0.5 in) thick polycarbonate front door and polycarbonate rear window [Figure 4].

Polycarbonate top window (standard item) must be installed for special applications to restrict material from entering cab openings.

See your Bobcat dealer for availability.


### Special Applications Kit Inspection And Maintenance

- Inspect for cracks or damage. Replace if required.
- Prerinse with water to remove gritty materials.
- Wash with a mild household detergent and warm water.
- Use a sponge or soft cloth. Rinse well with water and dry with a clean soft cloth or rubber squeegee.
- Do not use abrasive or highly alkaline cleaners.
- Do not clean with metal blades or scrapers.

## FEATURES, ACCESSORIES, AND ATTACHMENTS (CONT'D)

### Forestry Door And Window Kit

 Figure 5

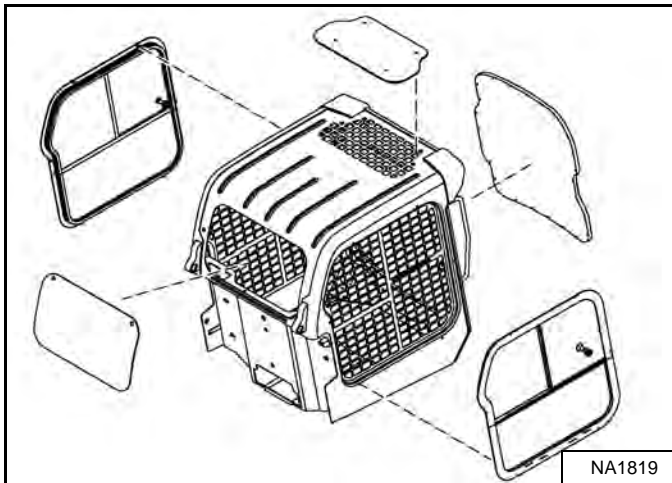

Available for special applications to prevent flying debris and objects from entering the cab. Kit includes 19,1 mm (0.75 in) thick laminated polycarbonate front door, polycarbonate side windows, and polycarbonate rear window [Figure 5].


Polycarbonate top window (standard item) must be installed as part of the Forestry Door And Window Kit to restrict material from entering cab openings.

### Forestry Door And Window Kit Inspection And Maintenance

- Inspect for cracks or damage. Replace if required.
- Order part number 7171104 if door frame is damaged and needs to be replaced.
- Order kit part number 7193293 if door polycarbonate is damaged and needs to be replaced.
- Prerinse with water to remove gritty materials.
- Wash with a mild household detergent and warm water.
- Use a sponge or soft cloth. Rinse well with water and dry with a clean soft cloth or rubber squeegee.
- Do not use abrasive or highly alkaline cleaners.
- Do not clean with metal blades or scrapers.

### Forestry Door Emergency Exit

 Figure 6

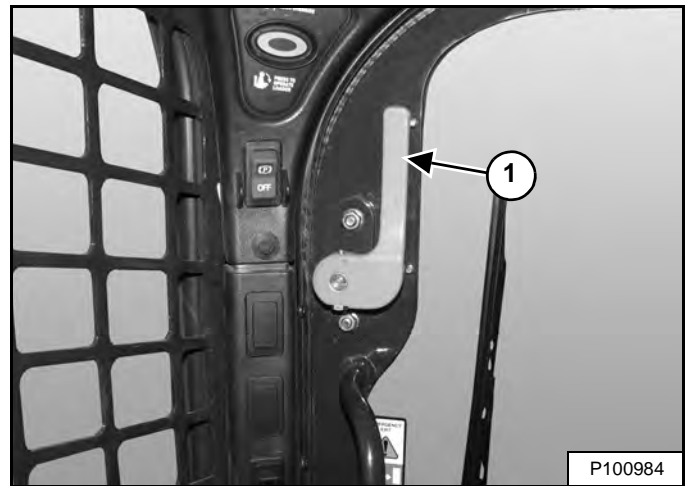

- Inspect both emergency exit levers (Item 1) [Figure 6], linkages, and hardware for loose or damaged parts.
- Repair or replace if necessary.

## SAFETY AND TRAINING RESOURCES

SAFETY INSTRUCTIONS .....	11
Before Operation .....	11
Safe Operation Is The Operator's Responsibility .....	12
Safe Operation Needs A Qualified Operator .....	12
Avoid Silica Dust .....	13
FIRE PREVENTION .....	13
Maintenance .....	13
Operation .....	13
Electrical .....	13
Hydraulic System .....	14
Fuelling .....	14
Starting .....	14
Spark Arrester Exhaust System .....	14
Welding And Grinding .....	14
Fire Extinguishers .....	14
PUBLICATIONS AND TRAINING RESOURCES .....	15
MACHINE SIGNS (DECALS) .....	16
Pictorial Only Safety Signs .....	18

## SAFETY INSTRUCTIONS

### Before Operation

Carefully follow the operating and maintenance instructions in this manual.

The Bobcat loader is highly manoeuvrable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off motorway, rough terrain applications, common with Bobcat loader usage.

The Bobcat loader has an internal combustion engine with resultant heat and exhaust. All exhaust gases can kill or cause illness so use the Loader with adequate ventilation.

The dealer explains the capabilities and restrictions of the Bobcat loader and attachment for each application. The dealer demonstrates the safe operation according to Bobcat instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Operating Capacity (some have restricted lift heights). They are designed for secure fastening to the Bobcat loader. The user must check with the dealer, or Bobcat literature, to determine safe loads of materials of specified densities for the machine - attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook is fastened to the operator cab of the loader. Its brief instructions are convenient to the operator. See your Bobcat dealer for more information on translated versions.

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.

## SAFETY INSTRUCTIONS (CONT'D)

### Safe Operation Is The Operator's Responsibility



Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat loader and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

### Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

*A Qualified Operator Must Do The Following:*

*Understand the Written Instructions, Rules and Regulations*

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. For driving on public roads, the machine must be equipped as stipulated by the local regulations authorising operation on public roads in your specific country. Regulations may identify a hazard such as a utility line.

*Have Training with Actual Operation*

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.

*Know the Work Conditions*

- Know the weight of the materials being handled. Avoid exceeding the Rated Operating Capacity (ROC) of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of the load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat Safety Equipment for your model.

SI SSL EMEA-0913

## SAFETY INSTRUCTIONS (CONT'D)

### Avoid Silica Dust



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Use a respirator, water spray or other means to control dust.

## FIRE PREVENTION



### Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolants mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

### Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

### Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

## FIRE PREVENTION (CONT'D)

### Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use petrol or diesel fuel for cleaning parts. Use commercial non-flammable solvents.

### Fuelling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher Sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fuelling standards for proper grounding and bonding practices.

### Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

### Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).

## Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing non-metallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

### Fire Extinguishers



Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.



## PUBLICATIONS AND TRAINING RESOURCES

The following publications are also available for your Bobcat loader. You can order them from your Bobcat dealer.

For the latest information on Bobcat products and the Bobcat Company, visit our website at **Bobcat.com/training** or **Bobcat.com**



### OPERATION & MAINTENANCE MANUAL

7277050enGB

Complete instructions on the correct operation and the routine maintenance of your Bobcat loader.



### OPERATOR'S HANDBOOK

6987175enUS

Gives basic operation instructions and safety warnings.



### SAFETY MANUAL

6556500 (English and Spanish)

Gives basic safety procedures and warnings for your Bobcat loader.



### OPERATOR SAFETY DVD

6904762 (English and Spanish)

DVD gives basic safety instructions for many Bobcat products including loaders.



### SKID-STEER LOADER OPERATOR TRAINING COURSE

7249275 (English)  
7249278 (Spanish)

Introduces operator to step-by-step basics of skid-steer loader operation.



### SERVICE SAFETY TRAINING COURSE

7297250

Introduces service technicians to step-by-step basics of proper and safe maintenance and servicing procedures.



### SERVICE MANUAL

6989683enUS

Complete maintenance instructions for your Bobcat loader.

# MACHINE SIGNS (DECALS)

Follow the instructions on all the Machine Signs (Decals) that are on the loader. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat loader dealer.

7167994	Standard, ACS, And AHC - 7168140			SJC 7168142	Standard, ACS, And AHC 7168138	7177742	6987175enUS
Standard, ACS, And AHC - 7168136	SJC 7168144	SJC 7168023	SJC 7168024	SJC 7168114	7323562 (Inside Fuse Access Panel) (Left Foot Area)	Door 7168025	
3-Point Restraint 7184346	Rated Operating Capacity (ROC) 2000 lbs	Rated Operating Capacity (ROC) 910 kg	Roller Suspension Undercarriage - 7183752	Door Gas Spring 7170360	6737189	6737189	Standard, ACS, And AHC 7168272
	Rated Operating Capacity (ROC) 2100 lbs	Rated Operating Capacity (ROC) 950 kg	Solid-Mounted Undercarriage 7183758	Door Gas Spring 7170360	Door Gas Spring 7169291	Rear Window with Latches 7167991	


Inside Cab

7167993	6561383 (Behind Bob-Tach)	7167990	7167996	7167989		Single-Point Lift 6533898 (2)	Failure of the Lift Assembly Can Cause Serious Injury or Death
						Single-Point Lift 7142141 (2)	Failure of the Lift Assembly Can Cause Serious Injury or Death
						Single-Point Lift 7168021 (2)	Failure of the Lift Assembly Can Cause Serious Injury or Death
						Four-Point Lift 7167996	Failure of the Lift Assembly Can Cause Serious Injury or Death
						Lift Kit Options	Failure of the Lift Assembly Can Cause Serious Injury or Death

NA9741

# MACHINE SIGNS (DECALS) (CONT'D)

 Follow the instructions on all the Machine Signs (Decals) that are on the loader. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat loader dealer.

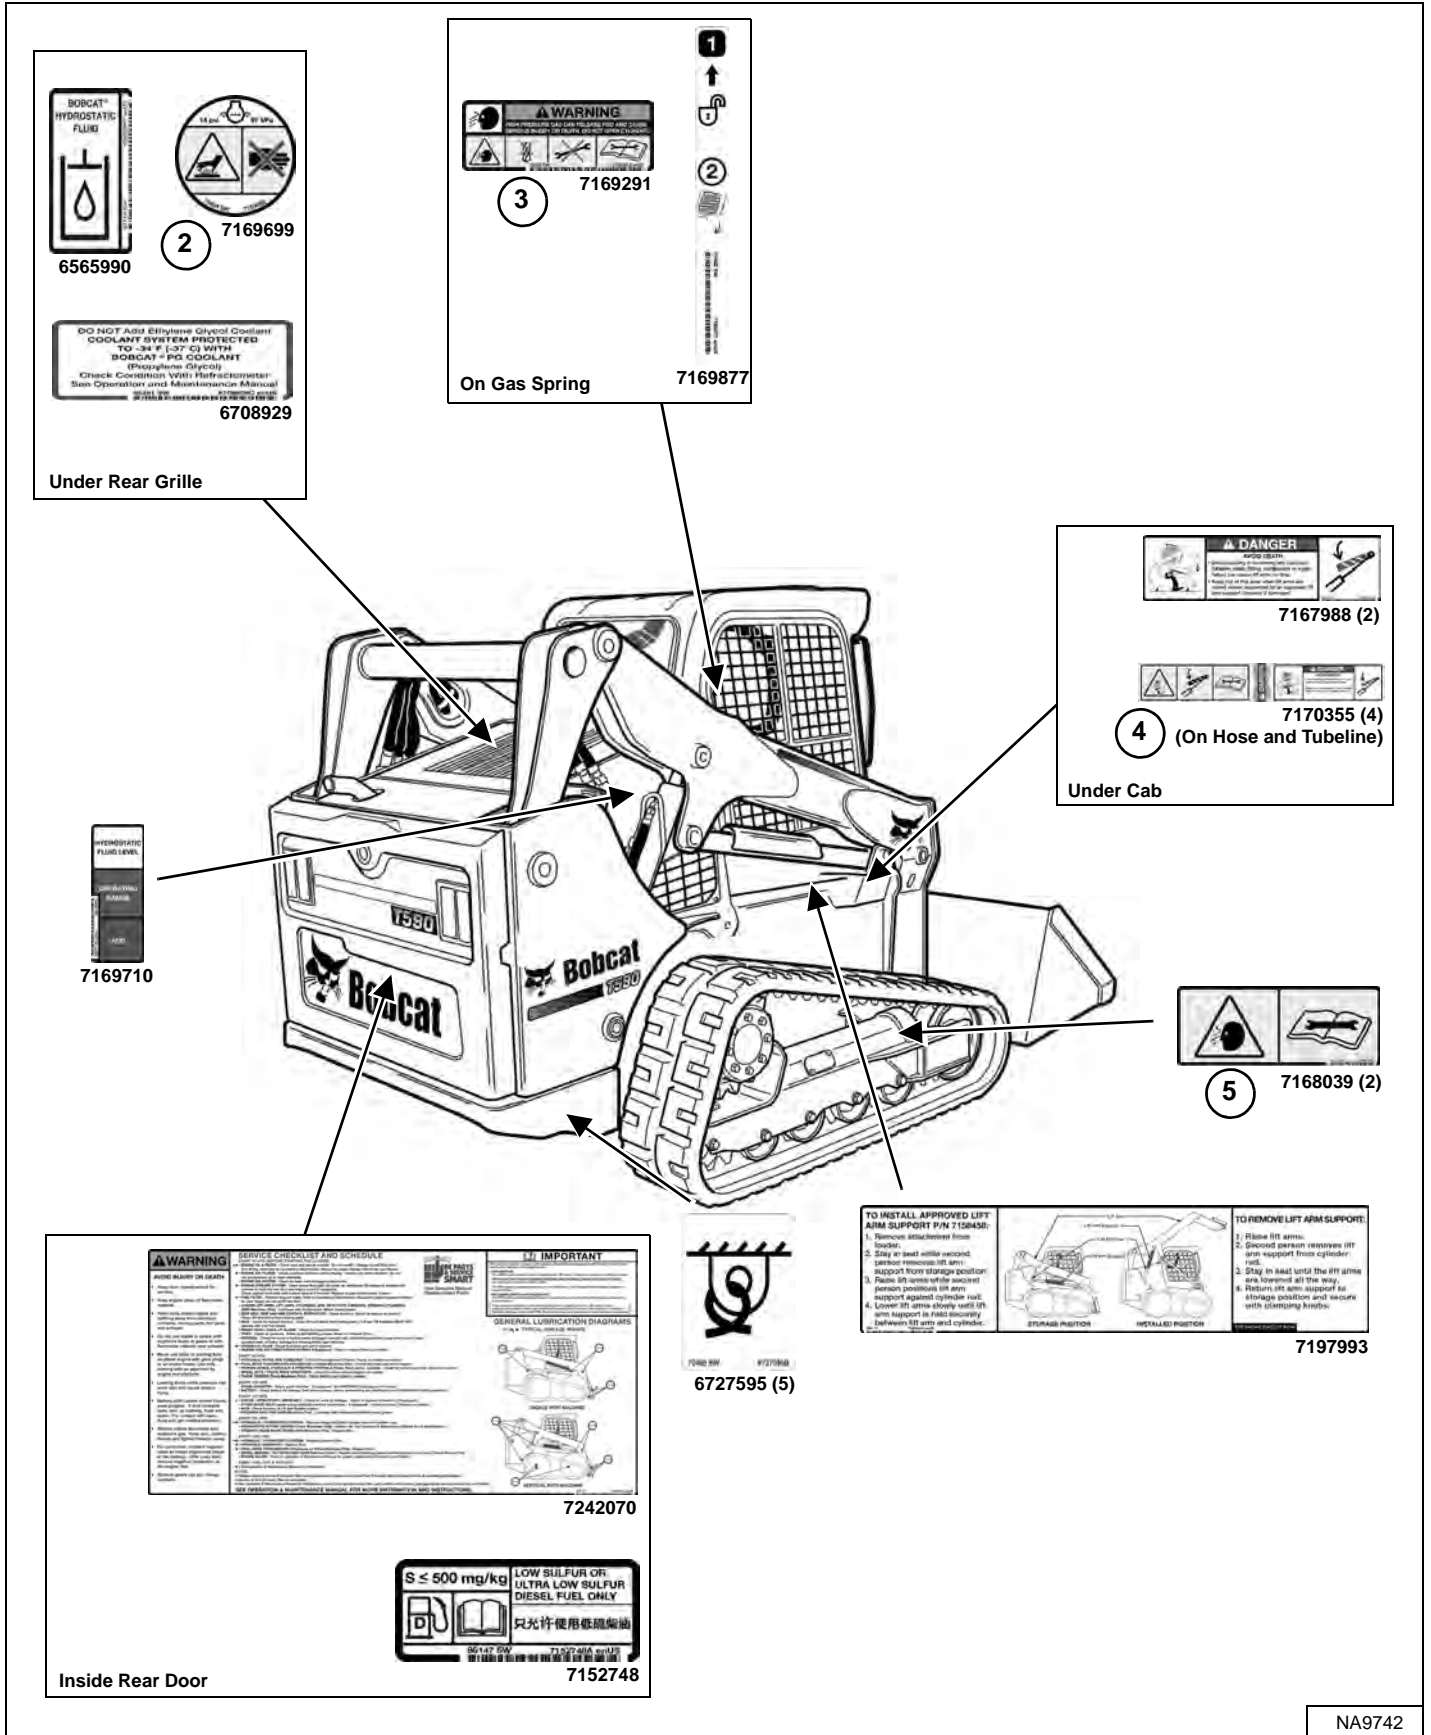


NA9742

## MACHINE SIGNS (DECALS) (CONT'D)

 
### Pictorial Only Safety Signs

Safety signs are used to alert the equipment operator or maintenance person to hazards that may be encountered in the use and maintenance of the equipment. The location and description of the safety signs are detailed in this section. Please become familiarised with all safety signs installed on the machine / attachment.

*Vertical Configuration*

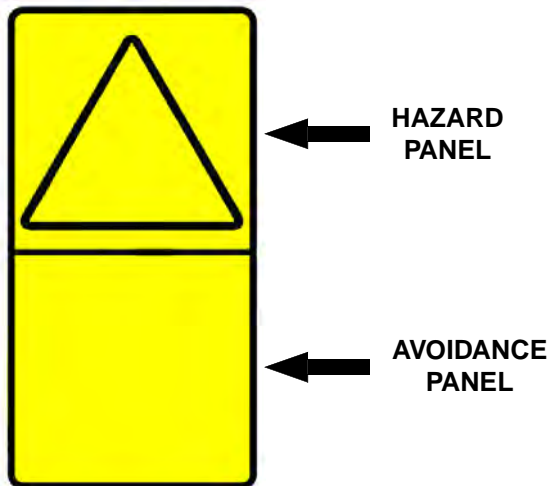

*Horizontal Configuration*

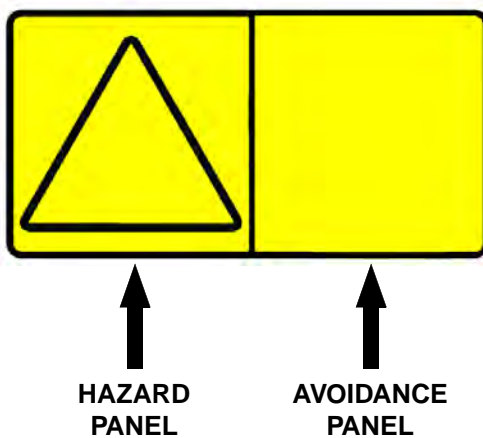 

The format consists of the hazard panel(s) and the avoidance panel(s):

Hazard panels depict a potential hazard enclosed in a safety alert triangle.

Avoidance panels depict actions required to avoid the hazards.

A safety sign may contain more than one hazard panel and more than one avoidance panel.

**NOTE:** See the numbered **MACHINE SIGNS (DECALS)** on Page 16 and **MACHINE SIGNS (DECALS) (CONT'D)** on Page 17 for the machine location of each correspondingly numbered pictorial only decal.

#### 1. High Range Speeds (7184346)

This safety sign is located in the operator cab on loaders equipped with a seat belt with 3-point restraint.



**HITTING OBSTRUCTIONS AT HIGH RANGE SPEEDS  
CAN CAUSE SERIOUS INJURY OR DEATH**  
Fasten shoulder belt for additional restraint when  
operating at high range speeds.

W-2754-0908

**MACHINE SIGNS (DECALS) (CONT'D)**

**Pictorial Only Safety Signs (Cont'd)**

**2. Hot Pressurised Fluid (7169699)**

This safety sign is located on the engine coolant tank cap.



**HOT PRESSURISED FLUID CAN CAUSE  
SERIOUS BURNS**

- Never open hot.
- OPEN SLOWLY.

W-2755-EN-0909

**3. High Pressure Gas (7169291)**

This safety sign is located on the gas spring component(s) supporting the cab and on the front door option.



**HIGH PRESSURE GAS CAN RELEASE ROD AND  
CAUSE SERIOUS INJURY OR DEATH**

- Do not open cylinder.
- See Service Manual for more information.

W-2756-0908

**4. Lift Arm Crushing (7170355)**

This safety sign is located on certain hoses or tubelines inside the loader frame underneath the operator cab.



**AVOID DEATH**

- Disconnecting hydraulic lines can cause the lift arms or attachment to drop.
- Always use an approved lift arm support when lift arms are in a raised position.

D-1008-0409

**5. Flying Debris or Objects (7168039)**

This safety sign is located on compact track loader undercarriages near the grease cylinder tensioning fittings.



**HIGH PRESSURE GREASE CAN  
CAUSE SERIOUS INJURY**

- Do not loosen grease fitting.
- Do not loosen bleed fitting more than 1 - 1/2 turns.

W-2781-0109

# OPERATING INSTRUCTIONS

INTENDED USE .....	24
INSTRUMENT PANEL IDENTIFICATION .....	25
Overview .....	25
Left Panel .....	26
Display Screen .....	28
Right Panel (Standard Key Panel) .....	29
Right Panel (Keyless Start Panel) .....	30
Right Panel (Deluxe Instrumentation Panel) .....	31
Left Switch Panel .....	33
Right Switch Panel .....	33
Left Side Lower Panel .....	34
Right Side Lower Panel .....	34
Radio .....	35
Rear View Camera System .....	37
CONTROL IDENTIFICATION .....	39
Description .....	39
Standard Controls .....	39
Advanced Control System (ACS) .....	40
Advanced Hand Controls (AHC) .....	41
Selectable Joystick Controls (SJC) .....	42
OPERATOR CAB .....	43
Description .....	43
Side Windows .....	43
Door Operation .....	43
Front Wiper .....	44
Cab Light .....	44
BOBCAT INTERLOCK CONTROL SYSTEM (BICS™) .....	45
Description .....	45
Operation .....	45
SEAT BAR RESTRAINT SYSTEM .....	46
Description .....	46
Operation .....	46
PARKING BRAKE .....	47
Operation .....	47
TRACTION LOCK OVERRIDE .....	47
Description .....	47
Operation .....	47
ENGINE SPEED CONTROL .....	48
Operation .....	48
LIFT ARM BYPASS CONTROL .....	48
Description .....	48
Operation .....	48

EMERGENCY EXIT .....	49
Rear Window Identification .....	49
Rear Window Removal (Latches) .....	49
Rear Window Removal (Rubber Cord) .....	49
External Access (Rear Window With Latches) .....	50
External Access (Rear Window With Rubber Cord) .....	50
Front Door .....	50
BACK-UP ALARM SYSTEM .....	52
Description .....	52
Operation .....	52
DRIVING AND STEERING THE LOADER .....	53
Available Control Configurations .....	53
Operation (Standard, ACS, And AHC) .....	53
Operation (SJC) In 'ISO' Control Pattern .....	54
Operation (SJC) In 'H' Control Pattern .....	55
STOPPING THE LOADER .....	56
Using The Control Levers Or Joysticks .....	56
TWO-SPEED CONTROL .....	56
Description .....	56
Operation (Standard And ACS) .....	57
Operation (SJC) .....	57
SPEED MANAGEMENT .....	58
Description .....	58
Operation .....	58
Changing The Factory Default Setting .....	59
DRIVE RESPONSE .....	60
Description .....	60
Operation .....	60
STEERING DRIFT COMPENSATION .....	62
Description .....	62
Operation .....	62
LIFT AND TILT COMPENSATION .....	64
Description .....	64
Operation .....	64
Operation (ACS And AHC) .....	65
Operation (SJC) .....	66

HYDRAULIC CONTROLS .....	.67
Description .....	.67
Standard Controls And Advanced Control System (ACS) In FOOT Pedal Mode .....	.67
Advanced Control System (ACS) In HAND Control Mode And Advanced Hand Controls (AHC) .....	.68
Selectable Joystick Controls (SJC) In 'ISO' Control Pattern .....	.68
Selectable Joystick Controls (SJC) In 'H' Control Pattern .....	.69
Hydraulic Bucket Positioning .....	.69
Automatic Ride Control .....	.70
Reversing Fan .....	.71
FRONT Auxiliary Hydraulics Operation .....	.72
FRONT Auxiliary Hydraulics Operation (CONTINUOUS FLOW) .....	.73
FRONT Auxiliary Hydraulics Operation (REVERSE CONTINUOUS FLOW) .....	.73
REAR Auxiliary Hydraulics Operation .....	.74
High-Flow Auxiliary Hydraulics Operation .....	.75
Quick Couplers .....	.76
Quick Coupler Troubleshooting .....	.76
Relieve Auxiliary Hydraulic Pressure (Loader And Attachment) .....	.77
 ATTACHMENT CONTROL DEVICE (ACD) .....	 .78
Description .....	.78
 DAILY INSPECTION .....	 .79
Daily Inspection And Maintenance .....	.79
 PRE-STARTING PROCEDURE .....	 .81
Entering The Loader .....	.81
Operation & Maintenance Manual And Operator's Handbook Locations .....	.81
Seat Adjustment .....	.82
Seat Belt Adjustment .....	.84
Seat Bar .....	.85
Joystick Position Adjustment .....	.85
 STARTING THE ENGINE .....	 .86
Standard Key Panel .....	.86
Keyless Start Panel .....	.88
Deluxe Instrumentation Panel .....	.90
Warming The Hydraulic / Hydrostatic System .....	.92
Cold Temperature Starting .....	.92
Cold Temperature Drive Control (SJC) .....	.93
 MONITORING THE DISPLAY PANELS .....	 .94
Left Panel .....	.94
Warning And Shutdown .....	.94
 STOPPING THE ENGINE AND LEAVING THE LOADER .....	 .95
Procedure .....	.95



COUNTERWEIGHTS .....	96
Description .....	96
Effect On The Loader And Loader Operation .....	96
When To Consider Using Counterweights .....	96
When To Consider Removing Counterweights .....	96
Accessories That Affect Machine Weight .....	96
ATTACHMENTS .....	97
Choosing The Correct Bucket .....	97
Pallet Fork .....	97
Installing And Removing The Attachment (Hand Lever Bob-Tach) .....	98
Installing And Removing The Attachment (Power Bob-Tach) .....	101
TRACK UNDERCARRIAGE SYSTEM .....	104
Introduction .....	104
Compact Track Loader Operating And Maintenance Tips .....	104
OPERATING PROCEDURE .....	106
Inspect The Work Area .....	106
Basic Operating Instructions .....	106
Driving On Public Roads .....	106
Operating With A Full Bucket .....	107
Operating With An Empty Bucket .....	107
TOWING THE LOADER .....	108
Procedure .....	108
LIFTING THE LOADER .....	108
Single-Point Lift .....	108
Four-Point Lift .....	109
TRANSPORTING THE LOADER ON A TRAILER .....	110
Loading And Unloading .....	110
Fastening .....	110

 
## INTENDED USE

This machine is classified as a Skid-Steer Loader as defined in ISO 6165. This machine has tracks and commonly a front mounted bucket for the principle intended functions of digging, moving, levelling, lifting, carrying, and loading loose materials such as earth, gravel, or crushed rock.


Additional Bobcat approved attachments allow this machine to perform other tasks described in the attachment Operation & Maintenance Manuals.

Examples of intended use include:


**Digging**

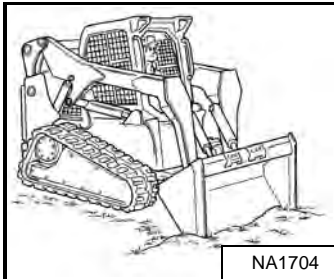

**Backfilling**

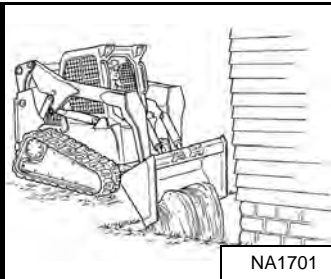 


**Leveling**

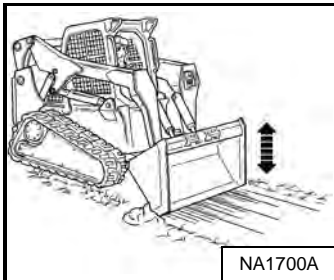 


**Piling Material**



 **Loading Material**

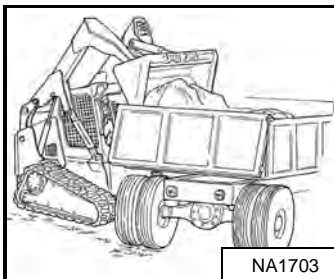

**Moving Palletized Loads**

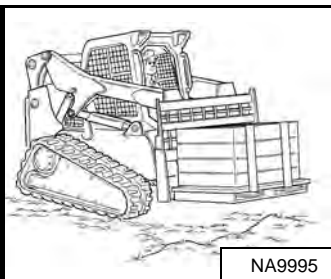 

## **WARNING**

Load, unload and turn on flat level ground. Do not exceed Rated Operating Capacity (ROC) shown on sign (decal) in cab. Failure to obey warnings can cause the machine to tip or rollover and cause injury or death.

W-2056-1112

## **WARNING**

Never dump over an obstruction, such as a post, that can enter the operator cab. The machine could tip forward and cause injury or death.

W-2057-0694

## **IMPORTANT**

Never drive forward when the hydraulic control for lift arms is in float position.

I-2005-1285

# INSTRUMENT PANEL IDENTIFICATION


## Overview

**Figure 7**




The left panel **[Figure 7]** is described in more detail. (See Left Panel on Page 26.)

 **Figure 8**

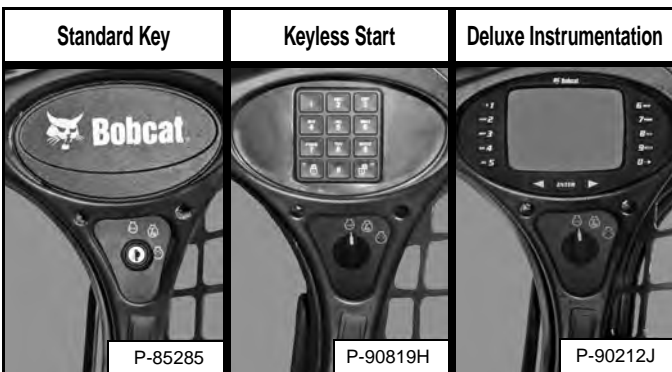


The right panel **[Figure 8]** is described in more detail. (See Right Panel (Standard Key Panel) on Page 29.), (See Right Panel (Keyless Start Panel) on Page 30.), or (See Right Panel (Deluxe Instrumentation Panel) on Page 31.)

 **Figure 9**

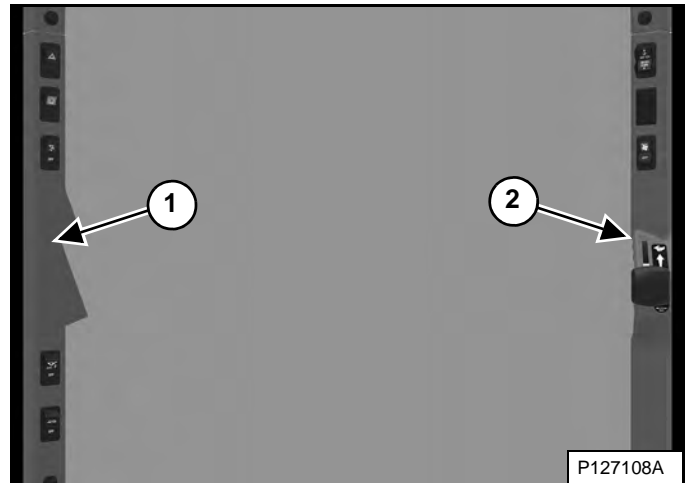

The left (Item 1) and right (Item 2) **[Figure 9]** switch panels are described in more detail. (See Left Switch Panel on Page 33.) and (See Right Switch Panel on Page 33.)

 **Figure 10**

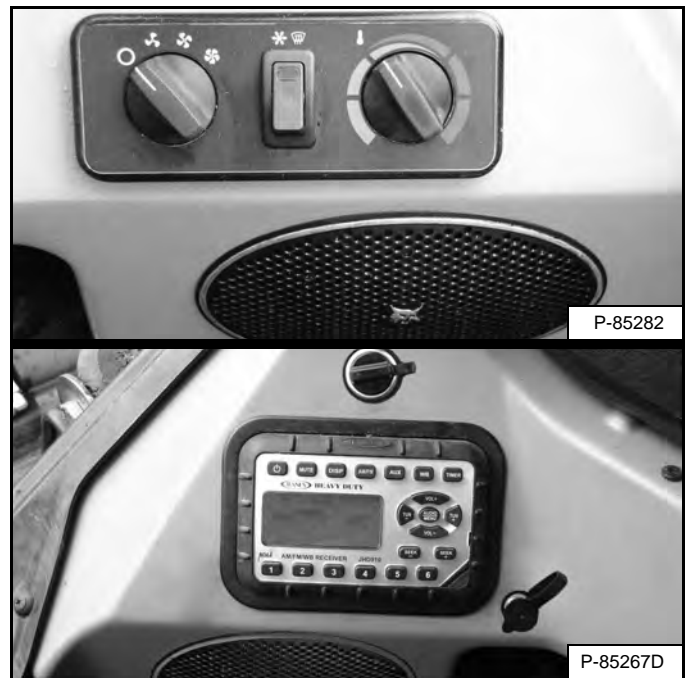


The left and right side lower panels **[Figure 10]** are described in more detail. (See Left Side Lower Panel on Page 34.) and (See Right Side Lower Panel on Page 34.)

## INSTRUMENT PANEL IDENTIFICATION (CONT'D)

### Left Panel

 Figure 11

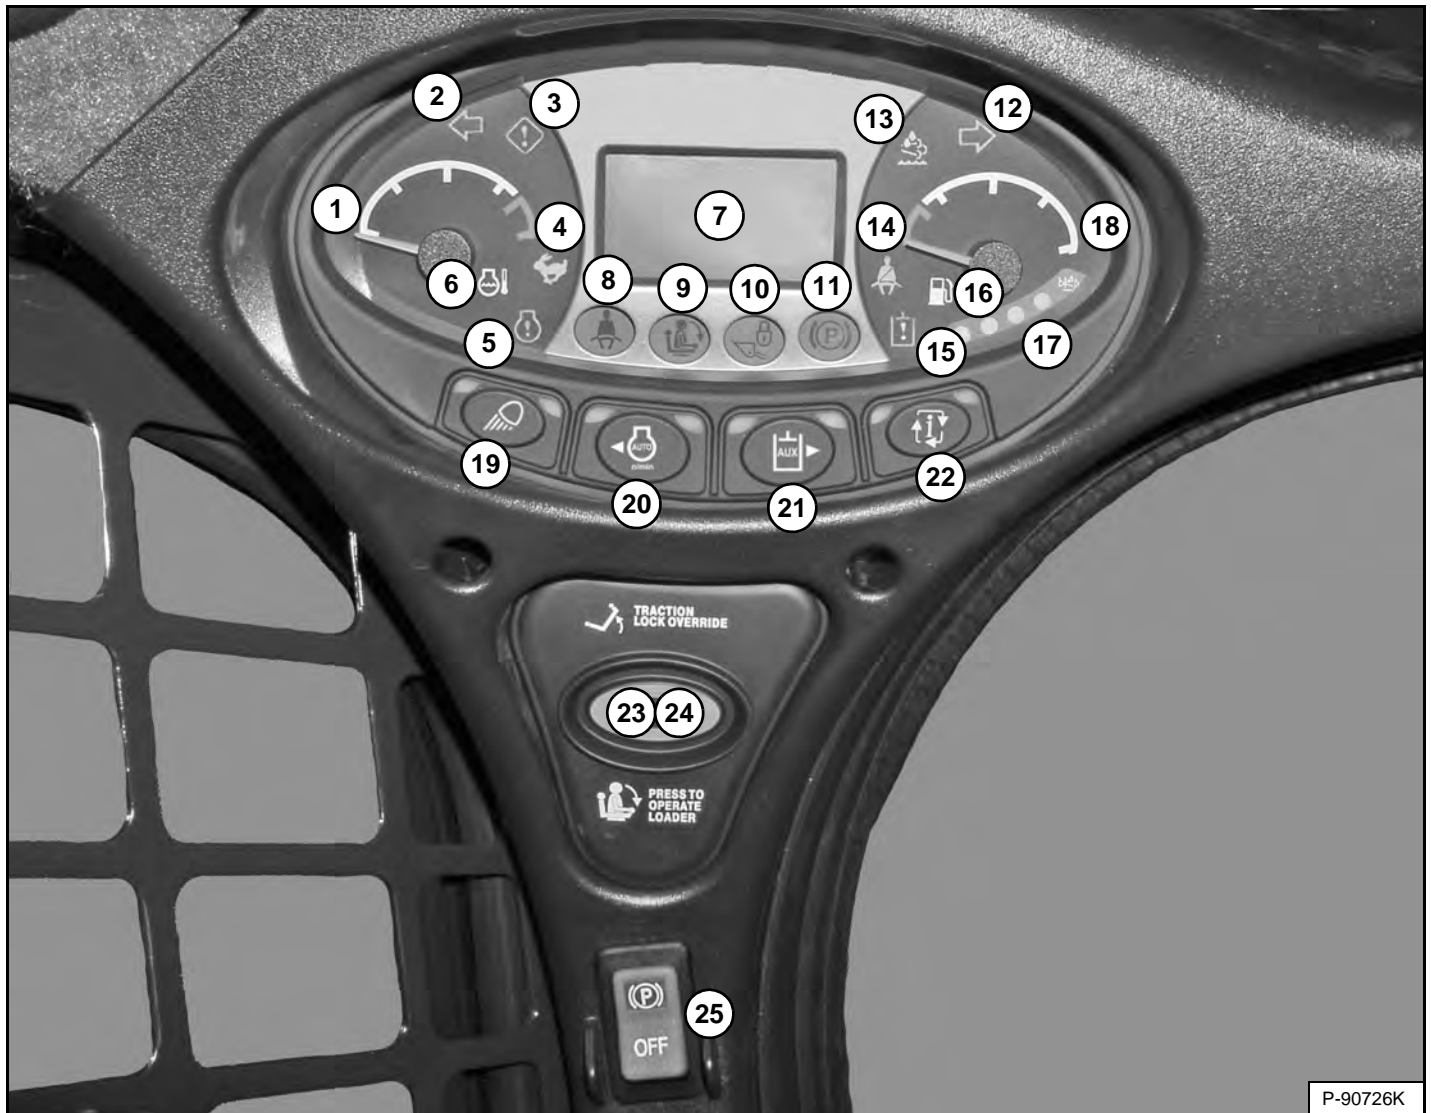

P-90726K

The left panel [Figure 11] is the same for all machines regardless of options and accessories.

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
1	ENGINE TEMPERATURE GAUGE	Shows the engine coolant temperature.
2	LEFT TURN SIGNAL (Option)	Indicates left turn signals are ON.
3	GENERAL WARNING	Malfunction with one or more machine functions. (See Service Codes*)
4	TWO-SPEED (Option)	High range selected.
5	ENGINE MALFUNCTION	Engine malfunction or failure. (See Service Codes*)
6	ENGINE COOLANT TEMPERATURE	Engine coolant temperature high or sensor error.
7	DISPLAY SCREEN	Displays information. (See Display Screen in this manual.)
8	SEAT BELT	Instructs operator to fasten seat belt. Remains lit for 45 seconds.
9	SEAT BAR	The light is on when the seat bar is UP.
10	LIFT AND TILT VALVE	The light is on when the lift and tilt functions cannot be operated.
11	PARKING BRAKE	The light is on when the loader cannot be driven.

## INSTRUMENT PANEL IDENTIFICATION (CONT'D)

### Left Panel (Cont'd)

REF. NO.	DESCRIPTION	FUNCTION / OPERATION
12	RIGHT TURN SIGNAL (Option)	Indicates right turn signals are ON.
13	DIESEL PARTICULATE FILTER (DPF) / DIESEL EXHAUST FLUID (DEF)	Not used.
14	SHOULDER BELT (Option)	Instructs operator to fasten shoulder belt when operating in high range. Remains lit while in high range.
15	HYDRAULIC SYSTEM MALFUNCTION	Hydraulic system malfunction or failure. (See Service Codes*)
16	FUEL	Fuel level low or sensor error.
17	DIESEL EXHAUST FLUID (DEF) / AdBlue® LEVEL	Not used.
18	FUEL GAUGE	Shows the amount of fuel in the tank.
19	LIGHTS	Press once for FRONT work lights and REAR taillights. (Left green LED lights.) Press a second time to add REAR work lights. (Left and right green LEDs light.) Press a third time to turn all lights off. (Left and right green LEDs off.)
		Press and hold 5 seconds to display software version in display screen.
20	AUTO IDLE	Not used.
		Move cursor to the left inside the DISPLAY SCREEN when using certain INFORMATION button menus.
21	AUXILIARY HYDRAULICS without high-flow option	Press once to activate the auxiliary hydraulic system. (Left green LED lights.) Press a second time to deactivate the system.
	AUXILIARY HYDRAULICS with high-flow option	Press once to activate the auxiliary hydraulic system. (Left green LED lights.) Press a second time to engage the HIGH-FLOW auxiliary hydraulics. (Left and right green LEDs light.) Press a third time to deactivate auxiliary hydraulics. (Left and right green LEDs off.)
		Move cursor to the right inside the DISPLAY SCREEN when using certain INFORMATION button menus.
22	INFORMATION	Cycles through (after each button press): <ul style="list-style-type: none"> <li>• Hourmeter (On startup)</li> <li>• Engine rpm</li> <li>• Battery voltage</li> <li>• Drive response menu</li> <li>• Steering drift compensation menu</li> <li>• Maintenance clock (Press and hold 7 seconds when displayed to reset the maintenance clock.)</li> <li>• Service codes*</li> </ul>
23	TRACTION LOCK OVERRIDE	Functions only when the seat bar is raised and the engine is running. Press once to unlock the brakes. Allows you to use the steering levers or joystick(s) to move the loader forward or backward when using the backhoe attachment. (See TRACTION LOCK OVERRIDE in this manual.) Press a second time to lock the brakes.
24	PRESS TO OPERATE LOADER	Press to activate the BICS™ when the seat bar is down and operator is seated in operating position. Button will light.
25	PARKING BRAKE (Standard on all loaders)	Press the top to engage the Parking Brake. Press the bottom to disengage. (See PARKING BRAKE in this manual.)

\* This manual contains a table with Service Code descriptions. (See DIAGNOSTIC SERVICE CODES on Page 188.)


## INSTRUMENT PANEL IDENTIFICATION (CONT'D)

### Display Screen

The display screen can display the following information:

- Operating hours
- Engine rpm
- Battery voltage
- Drive response setting
- Steering drift compensation setting
- Maintenance clock countdown
- Service codes
- Engine preheat countdown
- Speed management setting
- Lift and tilt compensation setting

 Figure 12

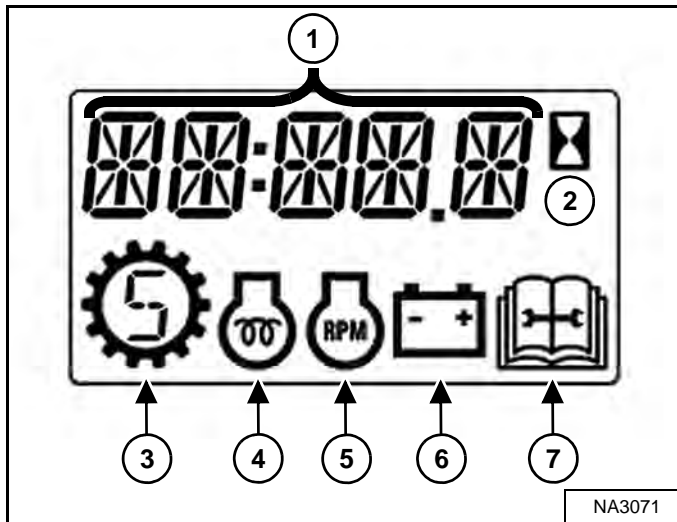

The display screen is shown in **[Figure 12]**. The data display will show operating hours upon startup.

1. **Data Display**
2. **Hourmeter**
3. **Speed Management**
4. **Engine Preheat**
5. **Engine RPM**
6. **Battery / Charging Voltage**
7. **Service**

This as a preview PDF file from [best-manuals.com](https://best-manuals.com)



Download full PDF manual at [best-manuals.com](https://best-manuals.com)