 
 


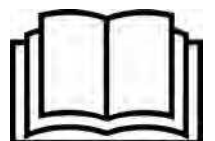

Bobcat®

Operation & Maintenance Manual E19 Compact Excavator

S/N B3LB11001 & Above

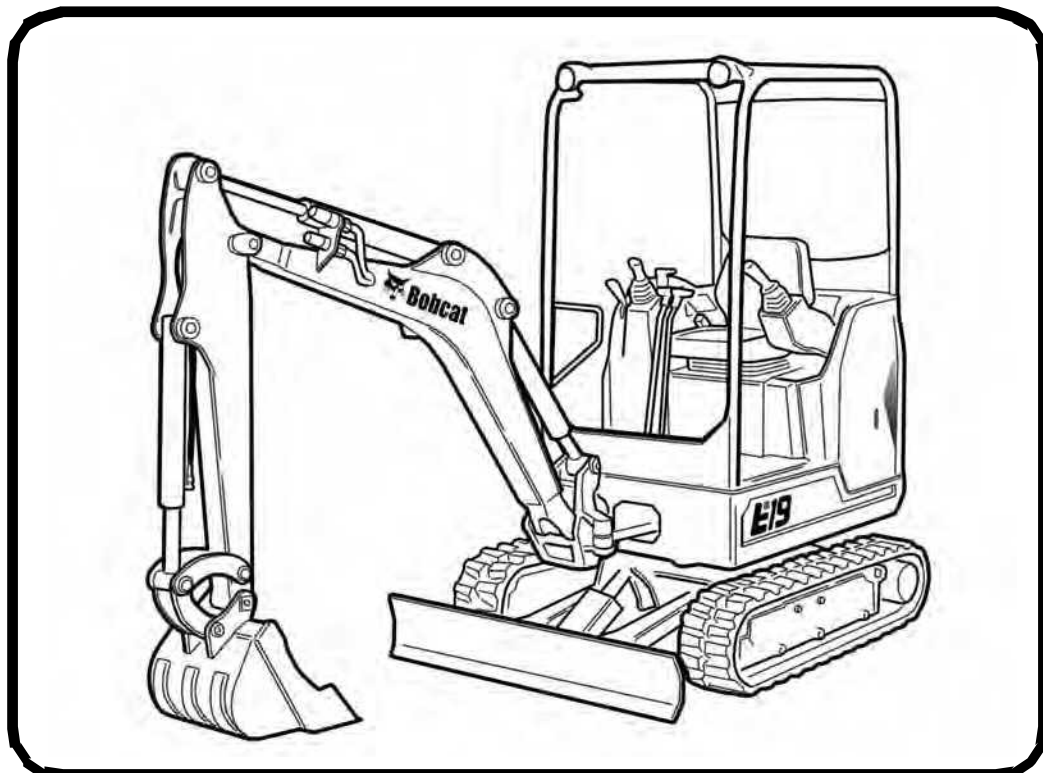

OPERATOR SAFETY WARNING



 
WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

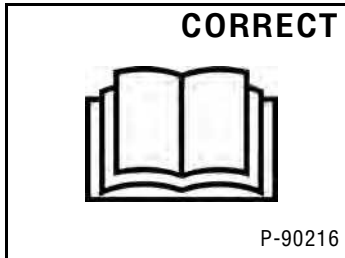

⚠ Never operate without instructions.

 
⚠ Read machine signs, and Operation & Maintenance Manual, and Operator's Handbook.

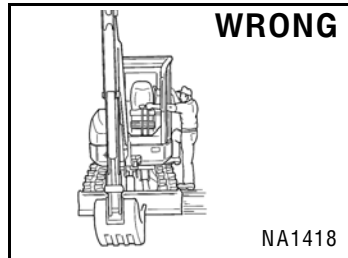

⚠ Do not grasp control handles when entering cab / canopy.

⚠ Be sure controls are in neutral before starting.

 
⚠ Sound horn and check behind machine before starting.

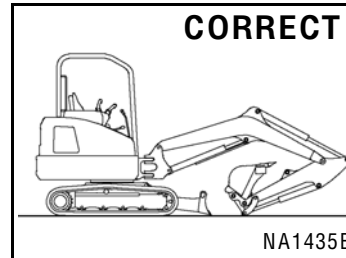


⚠ Never operate without approved cab / canopy.

⚠ Never modify equipment.

 ⚠ Never use attachments not approved by Bobcat Company.

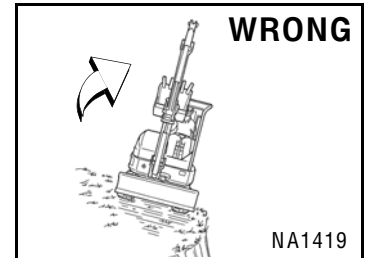


 ⚠ Avoid steep areas or banks that could break away.

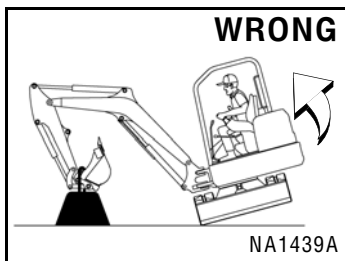

⚠ Use caution to avoid tipping - do not swing heavy load over side of track.

 
⚠ Operate on flat, level ground.

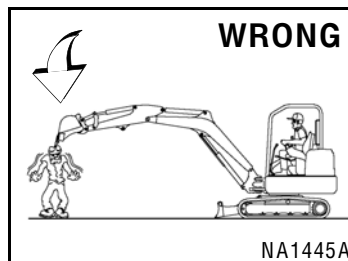


⚠ Keep bystanders out of maximum reach area.

⚠ Do not travel or turn with bucket extended.

 
⚠ Never carry riders.

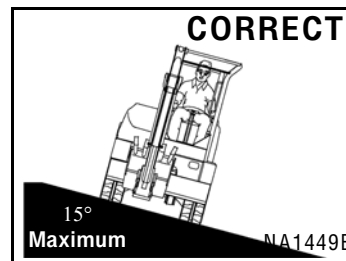


⚠ Never exceed a 15° slope to the side.

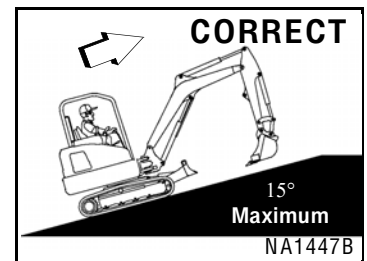 

 
⚠ Never travel up a slope that exceeds 15°.

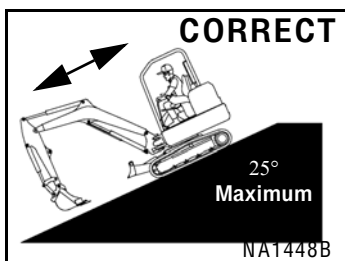

 ⚠ Never exceed 25° when going down or backing up a slope.

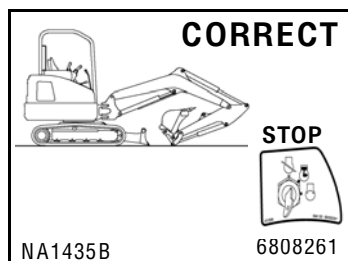


 ⚠ To leave excavator, lower the work equipment and the blade to the ground. Stop the engine.

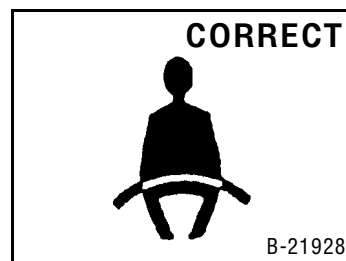

⚠ Fasten seat belt securely.

 ⚠ Operate controls only from operator's seat.

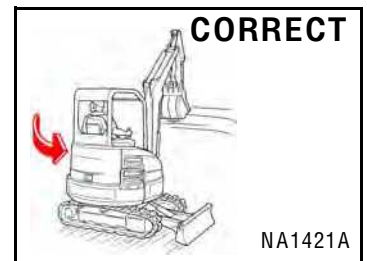

⚠ Look in the direction of rotation and make sure no bystanders are in the work area.

SAFETY EQUIPMENT

The excavator must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. OPERATOR CAB / CANOPY (ROPS and TOPS): Check condition and mounting hardware.
3. OPERATOR'S HANDBOOK: Must be in the cab / canopy.
4. LEFT HAND CONSOLE: When raised must deactivate the travel and hydraulic functions.
5. SAFETY SIGNS (DECALS): Replace if damaged.
6. GRAB HANDLES: Replace if damaged.
7. INTEGRATED SLEW LOCK BRAKE.
8. SAFETY TREAD.: Replace if damaged.

OSW66-0409



Bobcat®

CONTENTS

FOREWORD	5
SAFETY AND TRAINING RESOURCES	13
OPERATING INSTRUCTIONS	29
PREVENTIVE MAINTENANCE	99
SYSTEM SETUP AND ANALYSIS	145
SPECIFICATIONS	153
WARRANTY	171
ALPHABETICAL INDEX	175

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat excavator in the spaces below. Always use these numbers when referring to your Bobcat excavator.

Excavator Serial Number _____
Engine Serial Number _____

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128
UNITED STATES OF AMERICA

Doosan Benelux SA
Drève Richelle 167
B-1410 Waterloo
BELGIUM



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat excavator. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT EXCAVATOR. If you have any questions, see your Bobcat dealer. This manual can illustrate options and accessories not installed on your excavator.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	7
REGULAR MAINTENANCE ITEMS	7
LUBRICANTS AND FLUIDS	8
SERIAL NUMBER LOCATIONS	9
Excavator Serial Number	9
Engine Serial Number	9
DELIVERY REPORT	9
EXCAVATOR IDENTIFICATION	10
FEATURES, ACCESSORIES AND ATTACHMENTS	11
Standard Items	11
Options And Accessories	11
Attachments	11
Buckets Available	11
Falling-Object Guards (FOGS)	12
Special Applications Kit	12
Special Applications Kit Inspection And Maintenance	12



Bobcat®

BOBCAT COMPANY IS ISO 9001 CERTIFIED

 
 










ISO 9001 is an international standard that specifies requirements for a quality management system that controls the processes and procedures which we use to design, develop, manufacture, and distribute Bobcat products.

British Standards Institute (**BSI**) is the Certified Registrar Bobcat Company chose to assess the company’s compliance with the ISO 9001 at Bobcat’s manufacturing facilities in Gwinner, North Dakota (U.S.A.), Pontchâteau (France), and the Bobcat corporate offices (Gwinner, Bismarck, and West Fargo) in North Dakota. **TÜV Rheinland** is the Certified Registrar Bobcat Company chose to assess the company’s compliance with the ISO 9001 at Bobcat’s manufacturing facility in Dobris (Czech Republic). Only certified assessors, like BSI and TÜV Rheinland, can grant registrations.




 
ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

REGULAR MAINTENANCE ITEMS

	ENGINE OIL FILTER 6671057		BATTERY 6670251
	FUEL FILTER 6667352 FUEL FILTER - Pre-Filter 7247169		HYDRAULIC FILL / BREATHER CAP 6692836
	AIR FILTER, Outer 6673752		FLUID, Hydraulic / Hydrostatic 6903117 - 9,5 L (2.5 U.S. gal) 6903118 - 18,9 L (5 U.S. gal) 6903119 - 208 L (55 U.S. gal)
	AIR FILTER, Inner 6673753		
	PRIMARY HYDRAULIC FILTER 6661248		ANTI-FREEZE, Propylene Glycol 6983128 - Premixed 6983129 - Concentrate
			RADIATOR CAP 7257434

NOTE: Always verify Part Numbers with your Bobcat dealer.

LUBRICANTS AND FLUIDS

Bobcat Equipment		Only for Wheeled EXC and AL												
Packaging	Lineart	ENGINE / LOADER TRANSMISSION		ANTIFREEZE COOLANT		AXLE / TRANSMISSION		BRAKE FLUID						
		Bobcat Engine Power SAE 0W30	Bobcat Engine Power SAE 10W30 CJ4	Bobcat Engine Power SAE 15W40 CJ4	Bobcat Engine Power SAE 15W40	Bobcat Engine Power SAE 20W50	Bobcat Superior SH Hydraulic/Hydrostatic	Bobcat Bio Hydraulic Hydraulic/Hydrostatic	Bobcat PG Coolant Concentrated	Bobcat PG Coolant 4 Seasons Concentrated	Bobcat EG Coolant Concentrated	Bobcat EG Coolant Premixed	Bobcat Axle / Transmission Oil ISO 100	Bobcat Axle / Transmission Oil SAE 85W90 LS
		Bobcat Engine Power SAE 0W30 -35°C +30°C	Bobcat Engine Power SAE 10W30 CJ4 -25°C +30°C	Bobcat Engine Power SAE 15W40 CJ4 -20°C +40°C	Bobcat Engine Power SAE 15W40 -15°C +50°C	Bobcat Superior SH Hydraulic/Hydrostatic -35°C +60°C	Bobcat Bio Hydraulic Hydraulic/Hydrostatic Protection -36°C	Bobcat PG Coolant Concentrated	Bobcat PG Coolant 4 Seasons Concentrated	Bobcat EG Coolant Concentrated	Bobcat EG Coolant Premixed	Bobcat Axle / Transmission Oil ISO 100 -20°C +40°C	Bobcat Axle / Transmission Oil SAE 85W90 LS -12°C +30°C	Bobcat LHM
5 L Can		6987796A	6987789A	6987818A	6987797A	6987791A	6987792A	6987793A	6987803A	6987804A	6987804A	6987805A	6987794A	6987795A
25 L Container		6987796B	6987789B	6987818B	6987797B	6987791B	6987792B	6987793B	6987803B	6987804B	6987804B	6987805B	6987794B	
209 L Drum		6987796C	6987789C	6987818C	6987797C	6987791C	6987792C	6987793C	6987803C	6987804C	6987804C	6987805C	6987794C	
1000 L Tank		6987796D	6987789D	6987818D	6987797D	6987791D	6987792D	6987793D	6987803D	6987804D	6987804D	6987805D		
		Bobcat Multi-Purpose Grease		Bobcat Multi-Purpose Grease		Bobcat Multi-Purpose Grease		Bobcat Multi-Purpose Grease		Bobcat Multi-Purpose Grease		Bobcat Multi-Purpose Grease		
		Bobcat Supreme HD Grease		Bobcat Supreme HD Grease		Bobcat Supreme HD Grease		Bobcat Supreme HD Grease		Bobcat Supreme HD Grease		Bobcat Supreme HD Grease		
		Bobcat Extreme HP Grease		Bobcat Extreme HP Grease		Bobcat Extreme HP Grease		Bobcat Extreme HP Grease		Bobcat Extreme HP Grease		Bobcat Extreme HP Grease		


4700300-EN (06-13)

SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) can use different parts, or it can be necessary to use a different procedure in doing a specific service operation.


Excavator Serial Number

 Figure 1

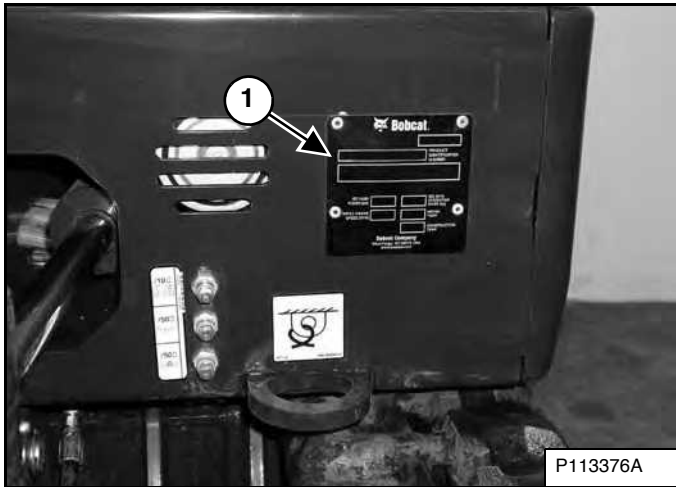

The excavator serial number plate (Item 1) [Figure 1] is located on the frame of the machine in the location shown.

 Figure 2

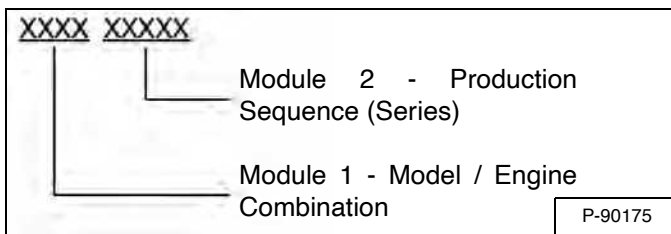


Explanation of excavator Serial Number [Figure 2]:

1. The four digit Model / Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the excavator is produced.

Engine Serial Number

 Figure 3

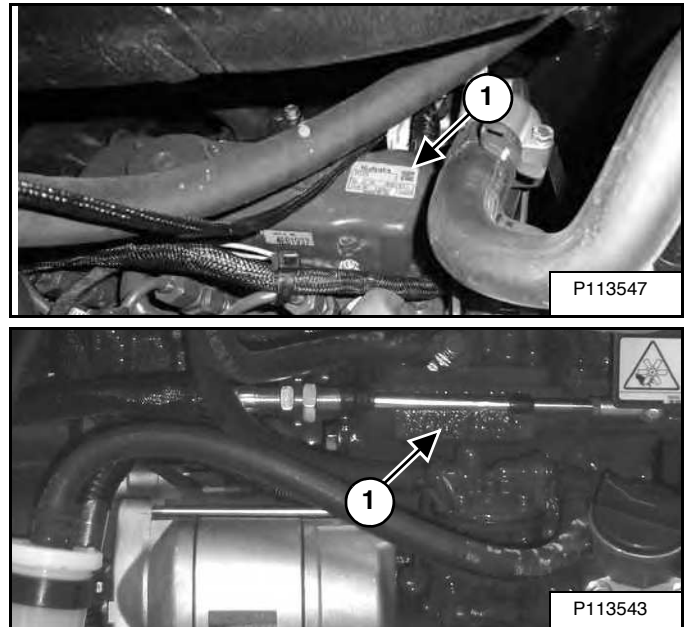

The engine serial number is located on the top cover (Item 1) or on the side of the engine block (Item 2) [Figure 3] above the fuel pump.


DELIVERY REPORT

Figure 4

The delivery report [Figure 4] contains a list of items that must be explained or shown to the owner or operator by the dealer when the Bobcat excavator is delivered.

The delivery report must be reviewed and signed by the owner or operator and the dealer.

 EXCAVATOR IDENTIFICATION

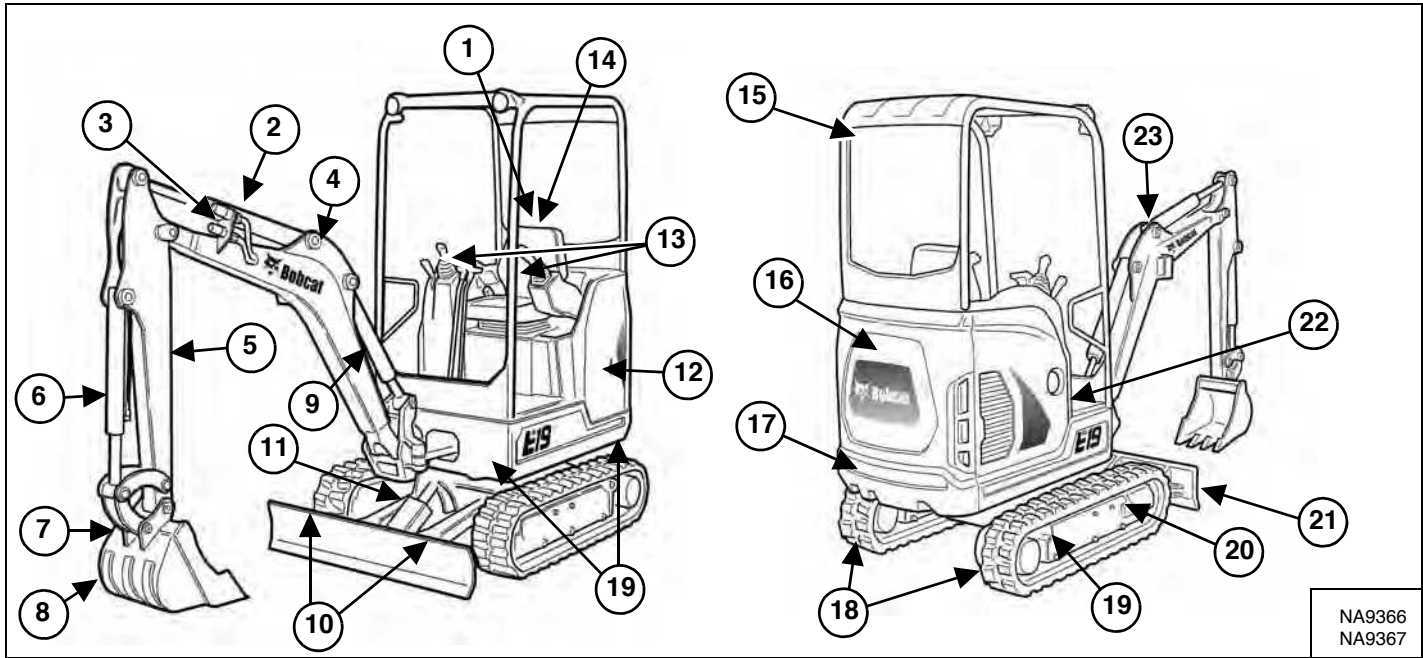

ITEM	DESCRIPTION	ITEM	DESCRIPTION
1	Operator's Handbook	15	Cab / Canopy (ROPS / TOPS) [B]
2	Arm Cylinder	16	Rear Cover
3	Auxiliary Quick Couplers	17	Counterweight
4	Boom	18	Tracks
5	Arm	19	Tie Downs (Both Sides)
6	Bucket Cylinder	20	Track Frames
7	Bucket Link / Attachment Coupler (If Equipped)	21	Blade
8	Bucket [A]	22	Right Side Cover
9	Boom Cylinder	23	Lift Point
10	Tie Downs / Lift Points		
11	Blade Cylinder		
12	Upperstructure		
13	Control Levers (Joysticks)		
14	Operator's Seat with Seat Belt		

[A] BUCKET - Several different buckets and other attachments are available for the Bobcat excavator.

[B] ROPS, TOPS - (Roll-Over Protective Structure / Tip-Over Protective Structure) as standard equipment. The ROPS / TOPS meets ISO 12117-2 AND ISO 12117.

FEATURES, ACCESSORIES AND ATTACHMENTS

Standard Items

Model E19 Bobcat excavators are equipped with the following standard items:

- 1354 mm (53.3 in) Dozer Blade (Including extensions)
- Canopy with ROPS / TOPS Approval
- 230 mm (9.0 in) Rubber Tracks
- Two-Speed Travel
- Auxiliary Hydraulics On Boom With Quick Couplers
- Engine Speed Control Lever
- Hydraulic and Travel Control Lockouts
- Work Light - Boom Mounted
- Engine with Shut Down
- Track Retraction - Expansion Valve / Switch
- Horn
- Hydraulic Joystick Controls
- Adjustable Seat
- Retractable Seat Belt
- Spark Arrester Muffler
- Advanced Diagnostics
- Counterweight

Options And Accessories

Below is a list of some equipment available from your Bobcat excavator dealer as Dealer and / or Factory Installed Accessories and Factory Installed Options. See your Bobcat dealer for other available options, accessories and attachments.

- Auto Shift Drive Motors
- Auxiliary Hydraulics On Arm
- Enclosed Cab With Heater
- Travel Motion Alarm
- Keyless Start
- Canopy / Cab Mounted Lights
- Cab Top Guard Kit (FOGS) (Standard with Canopy)
- Special Application Kit
- Load Holding Valve - Boom
- Load Holding Valve - Arm
- Lift Eye
- Suspension Seat
- Strobe Light
- Side Mirror
- Additional Counter Weight
- Fire Extinguisher
- Radio

Specifications subject to change without notice and standard items can vary.

Attachments

These and other attachments are approved for use on this model Bobcat excavator. Do not use unapproved attachments. Attachments not manufactured by Bobcat can not be approved.

The versatile Bobcat excavator quickly turns into a multi-job machine with a variety of attachments.

See your Bobcat dealer for information about approved attachments and attachment Operation & Maintenance Manuals.

- Auger
- Breaker
- Hydraulic Clamp
- Grading bucket
- Trenching Buckets

Buckets Available


Increase the versatility of your Bobcat excavator with a variety of bucket sizes.

Many bucket styles, widths and different capacities are available for a variety of different applications. They include Trenching, Digging, Grading, Tilt, to name a few. See your Bobcat dealer for the correct bucket for your Bobcat excavator and application.

FEATURES, ACCESSORIES AND ATTACHMENTS (CONT'D)

Falling-Object Guards (FOGS)

 Figure 5

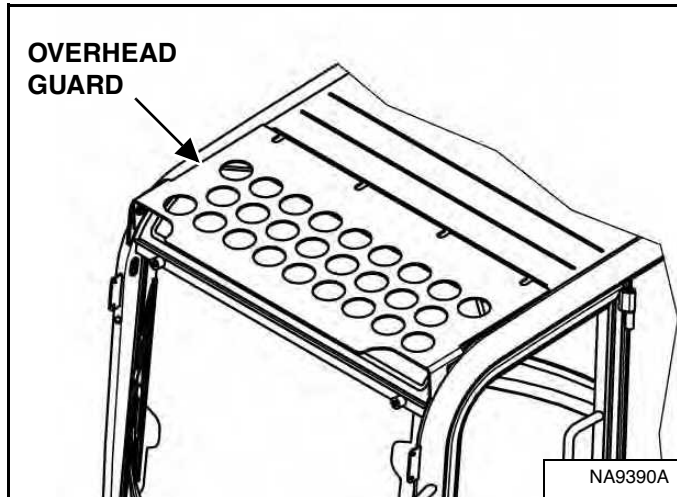

Available for special applications that require protection from smaller objects that can fall on the canopy / cab or restrict material from entering cab openings [Figure 5] and [Figure 6].


Excavator equipped with a cab (canopy excavators are equipped with the overhead guard as standard equipment) must have the overhead guard [Figure 5] installed to meet the top guard requirements in ISO 10262.

See your Bobcat Dealer for more information.

NOTE: The Falling-Object Guard is factory installed on the canopy.

Special Applications Kit

 Figure 6

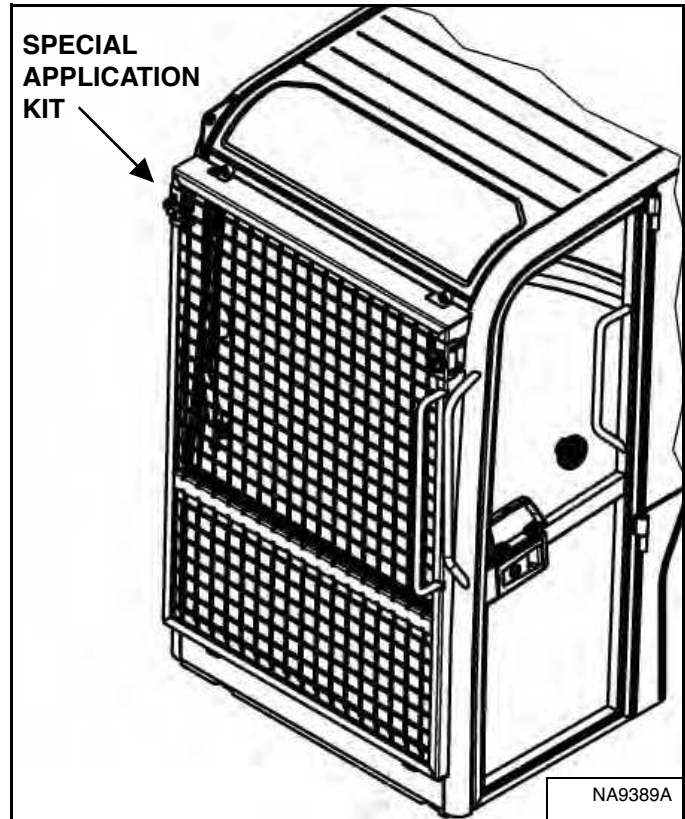

The excavator must have the special applications kit [Figure 6] installed to meet the front guard requirements in ISO 10262 - level 1.

Kit includes an upper and lower screen guard.

See your Bobcat Dealer for more information.

Special Applications Kit Inspection And Maintenance

The Special Applications Kit must be regularly inspected and maintained. Inspect the screen for damage. Replace parts as necessary.

SAFETY AND TRAINING RESOURCES

SAFETY INSTRUCTIONS	15
Before Operation	15
Safe Operation Is The Operator's Responsibility	16
Safe Operation Needs A Qualified Operator	16
Avoid Silica Dust	17
FIRE PREVENTION	17
Maintenance	17
Operation	17
Electrical	17
Hydraulic System	18
Fueling	18
Starting	18
Spark Arrester Exhaust System	18
Welding And Grinding	18
Fire Extinguishers	18
PUBLICATIONS AND TRAINING RESOURCES	19
MACHINE SIGNS (DECALS)	20
No-Text Safety Signs	23



Bobcat®

SAFETY INSTRUCTIONS

Before Operation

Carefully follow the operating and maintenance instructions in this manual.

The Bobcat excavator is highly maneuverable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off highway, rough terrain applications, common with Bobcat excavator usage.

The Bobcat excavator has an internal combustion engine with resultant heat and exhaust. All exhaust gases can kill or cause illness so use the excavator with adequate ventilation.

The dealer explains the capabilities and restrictions of the Bobcat excavator and attachment for each application. The dealer demonstrates the safe operation according to Bobcat instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Lift Capacity. They are designed for secure fastening to the Bobcat excavator. The user must check with the dealer, or Bobcat literature, to determine safe loads of materials of specified densities for the machine - attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.

- An Operator's Handbook is fastened to the operator cab of the excavator. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Compact Excavator Operating Training Course is available through your Bobcat dealer. This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- See the PUBLICATIONS AND TRAINING RESOURCES Page in this manual or your Bobcat dealer for Service and Parts Manuals, printed materials, videos, or training courses available. Also check the Bobcat web sites www.training.bobcat.com or www.bobcat.com

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

SI EXC-0913

SAFETY INSTRUCTIONS (CONT'D)

Safe Operation Is The Operator's Responsibility

 Safety Alert Symbol
This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

 WARNING
--

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

 DANGER

The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107

 WARNING
--

The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat safety equipment for your model.

SI EXC-0913

SAFETY INSTRUCTIONS (CONT'D)

Avoid Silica Dust



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolant mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

SI EXC-0913

FIRE PREVENTION (CONT'D)

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher Sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

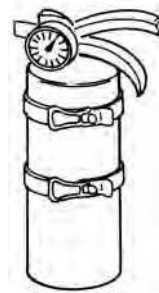

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com