



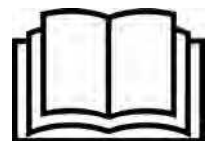

Bobcat®

Operation & Maintenance Manual E35 Compact Excavator

S/N A93K18000 & Above

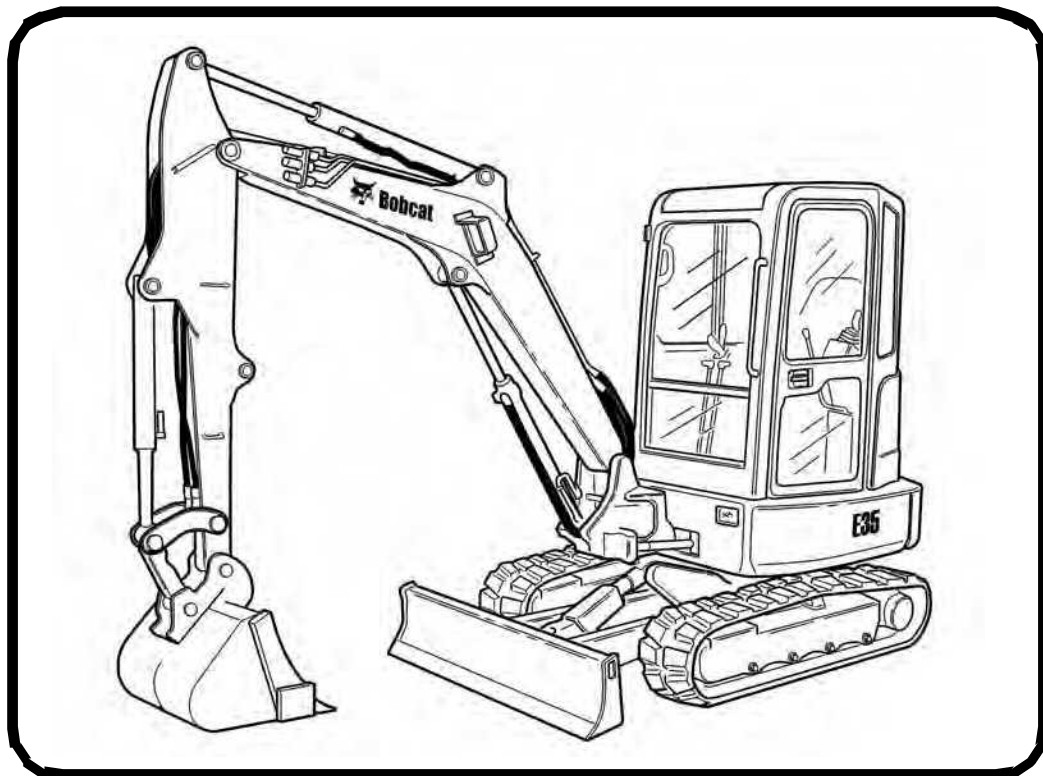

OPERATOR SAFETY WARNING




WARNING

Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502




Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

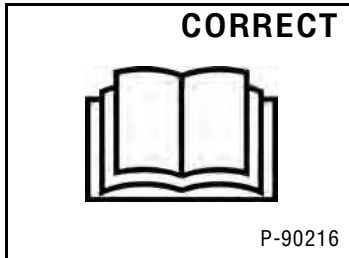

⚠ Never operate without instructions.


⚠ Read machine signs, and Operation & Maintenance Manual, and Operator's Handbook.

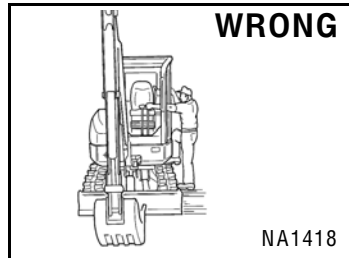

⚠ Do not grasp control handles when entering cab / canopy.

⚠ Be sure controls are in neutral before starting.


⚠ Sound horn and check behind machine before starting.

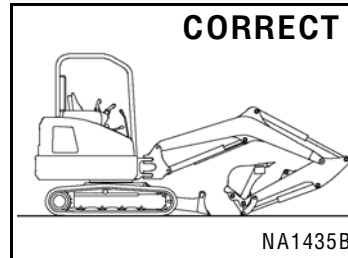


⚠ Never operate without approved cab / canopy.

⚠ Never modify equipment.

⚠ Never use attachments not approved by Bobcat Company.

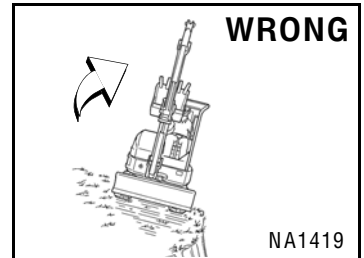


⚠ Avoid steep areas or banks that could break away.

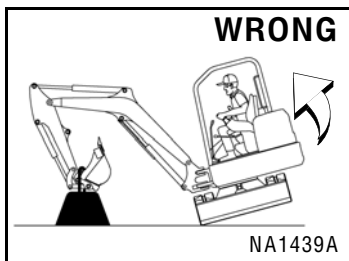

⚠ Use caution to avoid tipping - do not swing heavy load over side of track.


⚠ Operate on flat, level ground.

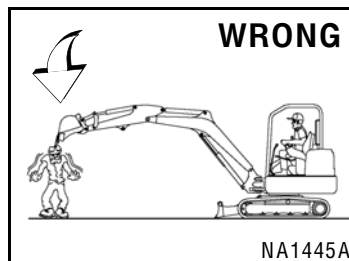


⚠ Keep bystanders out of maximum reach area.

⚠ Do not travel or turn with bucket extended.


⚠ Never carry riders.

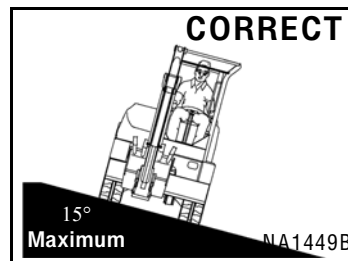


⚠ Never exceed a 15° slope to the side.

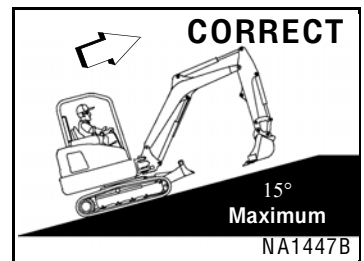

⚠ Never travel up a slope that exceeds 15°.

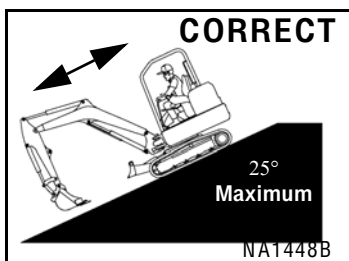


⚠ Never exceed 25° when going down or backing up a slope.

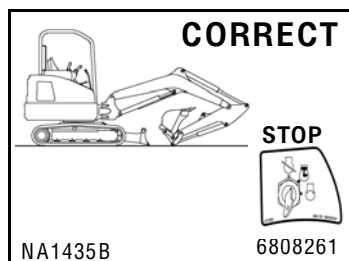


⚠ To leave excavator, lower the work equipment and the blade to the ground.

⚠ Stop the engine.

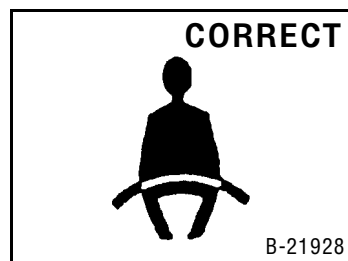

⚠ Fasten seat belt securely.

⚠ Operate controls only from operator's seat.

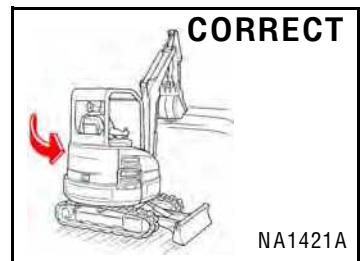

⚠ Look in the direction of rotation and make sure no bystanders are in the work area.

SAFETY EQUIPMENT

The excavator must be equipped with safety items necessary for each job. Ask your dealer about attachments and accessories.

1. SEAT BELT: Check belt fasteners and check for damaged webbing or buckle.
2. OPERATOR CAB / CANOPY (ROPS and TOPS): Check condition and mounting hardware.
3. OPERATOR'S HANDBOOK: Must be in the cab / canopy.
4. LEFT HAND CONSOLE: When raised must deactivate the travel and hydraulic functions.
5. SAFETY SIGNS (DECALS): Replace if damaged.
6. GRAB HANDLES: Replace if damaged.
7. INTEGRATED SLEW LOCK BRAKE.
8. SAFETY TREAD.: Replace if damaged.

OSW66-0409



Bobcat®

CONTENTS

CONTENTS	3
FOREWORD	5
SAFETY AND TRAINING RESOURCES	13
OPERATING INSTRUCTIONS	25
PREVENTIVE MAINTENANCE	137
SYSTEM SETUP AND ANALYSIS	191
MACHINE SIGN TRANSLATIONS	209
SPECIFICATIONS	243
WARRANTY	255
ALPHABETICAL INDEX	259

REFERENCE INFORMATION

Write the correct information for YOUR Bobcat excavator in the spaces below. Always use these numbers when referring to your Bobcat excavator.

Excavator Serial
Number

Engine Serial Number

NOTES:

YOUR BOBCAT DEALER:

ADDRESS:

PHONE:

Bobcat Company
P.O. Box 128
Gwinner, ND 58040-0128

Bobcat Company Europe
Drève Richelle 167
B-1410 WATERLOO
Belgium



Bobcat®

FOREWORD

This Operation & Maintenance Manual was written to give the owner / operator instructions on the safe operation and maintenance of the Bobcat excavator. READ AND UNDERSTAND THIS OPERATION & MAINTENANCE MANUAL BEFORE OPERATING YOUR BOBCAT EXCAVATOR. If you have any questions, see your Bobcat dealer. This manual may illustrate options and accessories not installed on your excavator.

BOBCAT COMPANY IS ISO 9001 CERTIFIED	7
REGULAR MAINTENANCE ITEMS	7
SERIAL NUMBER LOCATIONS	8
Excavator Serial Number	8
Engine Serial Number	8
DELIVERY REPORT	8
EXCAVATOR IDENTIFICATION	9
FEATURES, ACCESSORIES AND ATTACHMENTS	10
Standard Items	10
Options And Accessories	10
Attachments	10
Buckets Available	10
Falling Object Guards (FOGS)	11
Special Applications Kit	11
Special Applications Kit Inspection And Maintenance	11



Bobcat®

BOBCAT COMPANY IS ISO 9001 CERTIFIED



ISO 9001 is an international standard that specifies requirements for a quality management system that controls the processes and procedures which we use to design, develop, manufacture and distribute Bobcat products.


 









British Standards Institute (BSI) is the Certified Registrar Bobcat Company chose to assess the Company's compliance with the ISO 9001 at Bobcat's manufacturing facilities in Gwinner and Bismarck, North Dakota (U.S.A.), Pontchateau (France), Dobris (Czech Republic) and the Bobcat corporate offices (Gwinner, Bismarck & West Fargo) in North Dakota. Only certified assessors, like BSI, can grant registrations.

 ISO 9001 means that as a company we say what we do and do what we say. In other words, we have established procedures and policies, and we provide evidence that the procedures and policies are followed.

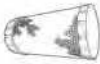CALIFORNIA PROPOSITION 65 WARNING

Diesel engine exhaust and some of its constituents are known to the state of California to cause cancer, birth defects and other reproductive harm.

REGULAR MAINTENANCE ITEMS

	ENGINE OIL FILTER (6 Pack) 6675517		BATTERY 6670251
	FUEL FILTER 6667352		HYDRAULIC FILL / BREATHER CAP 6692836
	AIR FILTER, Outer 6672467		FLUID, Hydraulic / Hydrostatic 6903117 - (2.5 U.S. gal) 6903118 - (5 U.S. gal) 6903119 - (55 U.S. gal)
	AIR FILTER, Inner 6672468		
	PRIMARY HYDRAULIC FILTER 6668819 CASE DRAIN HYDRAULIC FILTER 7009365		ANTI-FREEZE, Propylene Glycol 6983128 - Premixed 6983129 - Concentrate
	HVAC AIR FILTER (IF EQUIPPED) Fresh Air 7176099 Recirculation 7222791		RADIATOR CAP 6673313
ENGINE OIL 6903105 SAE 15W40 CE/SG (12 qt) 6903107 SAE 10W30 CE/SG (12 qt) 6903109 SAE 30W CE/SG (12 qt) 6903113 SAE 15W40 CE/SG (2.5 U.S. gal) 6903112 SAE 10W30 CE/SG (2.5 U.S. gal) 6903111 SAE 30W CE/SG (2.5 U.S. gal)		ENGINE OIL 6903106 SAE 15W40 CE/SG (1 U.S. gal) 6903108 SAE 10W30 CE/SG (1 U.S. gal) 6903110 SAE 30W CE/SG (1 U.S. gal)	


NOTE: Always verify Part Numbers with your Bobcat dealer.

SERIAL NUMBER LOCATIONS

Always use the serial number of the excavator when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.


Excavator Serial Number

Figure 1

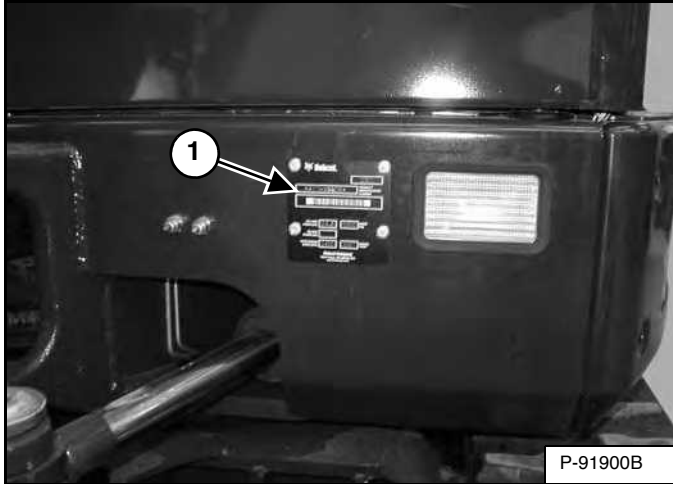

The excavator serial number plate (Item 1) [Figure 1] is located on the frame of the machine in the location shown.

Figure 2

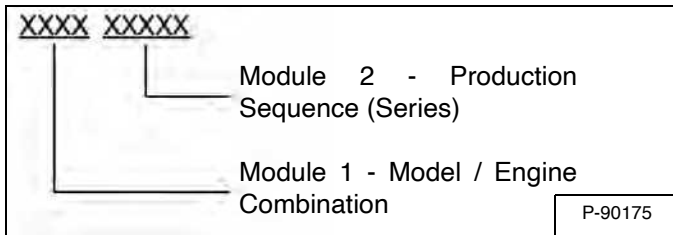


Explanation of excavator Serial Number [Figure 2]:

1. The four digit Model / Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the excavator is produced.

Engine Serial Number

Figure 3

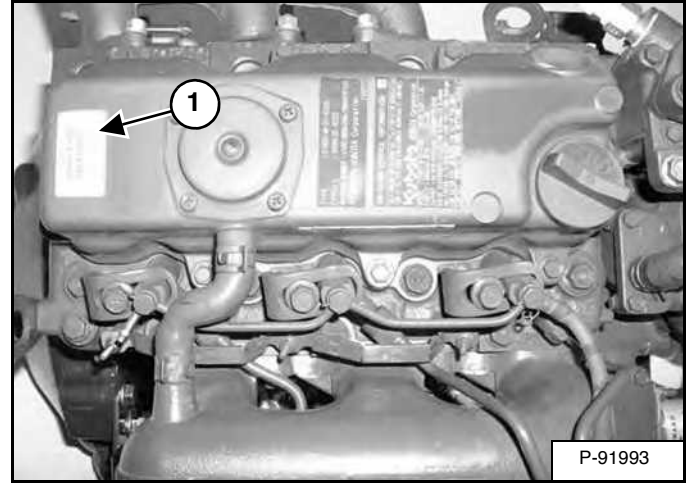

The engine serial number (Item 1) [Figure 3] is located on the top cover.


DELIVERY REPORT

Figure 4

The delivery report [Figure 4] contains a list of items that must be explained or shown to the owner or operator by the dealer when the Bobcat excavator is delivered.

The delivery report must be reviewed and signed by the owner or operator and the dealer.

EXCAVATOR IDENTIFICATION

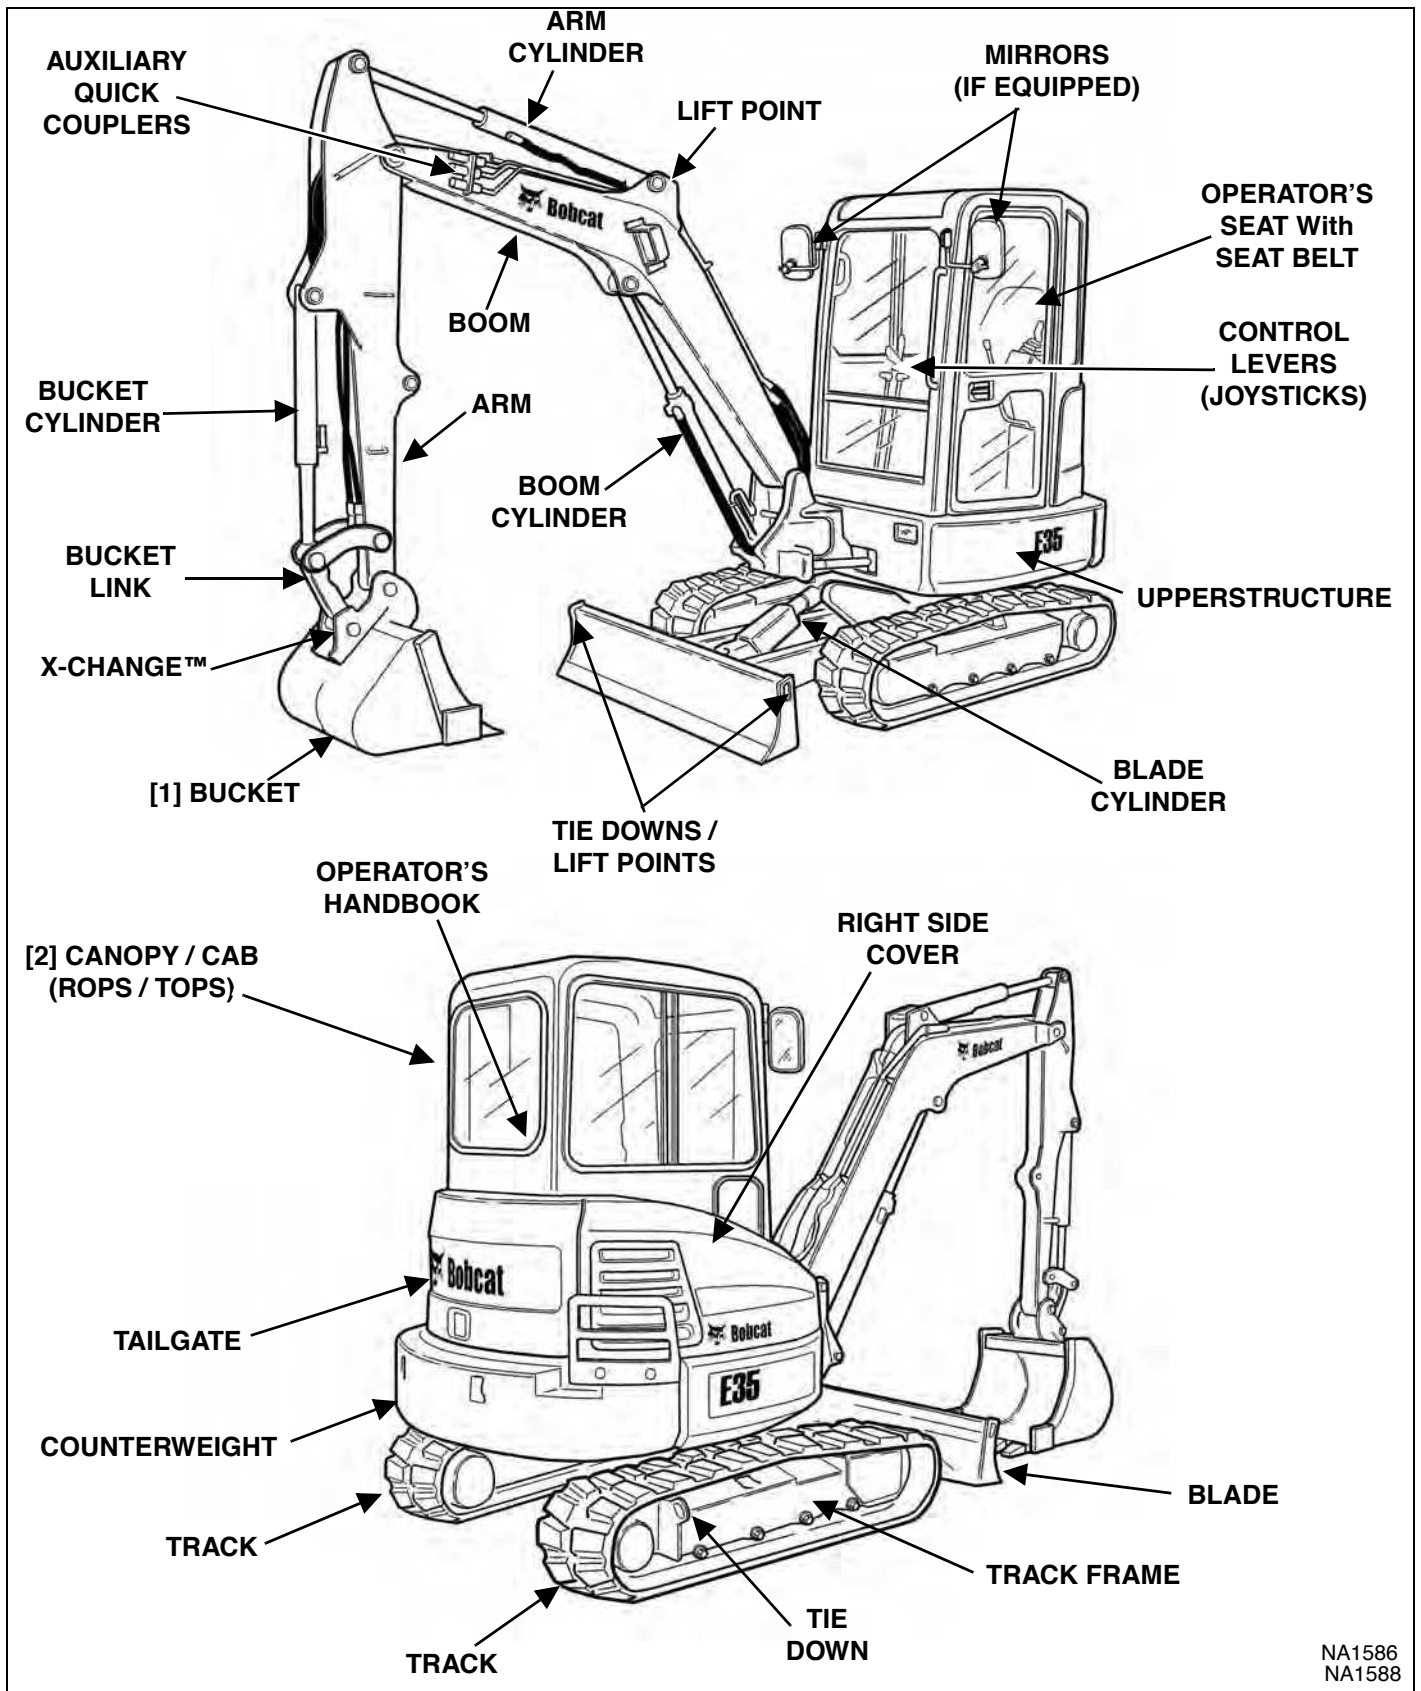

NA1586
NA1588

- [1] BUCKET - Several different buckets and other attachments are available from the Bobcat Excavator.
- [2] ROPS, TOPS - (Roll-Over Protective Structure / Tip-Over Protective Structure) as standard equipment. The ROPS / TOPS meets ISO 12117-2 and ISO 12117.

FEATURES, ACCESSORIES AND ATTACHMENTS

Standard Items

Model E35 Bobcat excavators are equipped with the following standard items:

- 1750 mm (68.9 in) Dozer Blade
- Canopy with ROPS / TOPS Approval
- 320 mm (12.6 in) Rubber Tracks
- Two-Speed Travel
- Auto Shift Drive Motors
- Auxiliary Hydraulics (With Selectable Auxiliary Hydraulic Flow)
- Hydraulic and Travel Control Lockouts
- Engine Speed Control Dial With Auto Idle Feature
- Blade Float
- Work Lights - Boom and Frame Mounted
- Engine and Hydraulic system Monitor with Shut Down
- Horn
- Hydraulic Joystick Controls
- ISO / STD Control Pattern Selection Feature
- Suspension Seat
- Retractable Seat Belt
- Spark Arrester Muffler
- Advanced Diagnostics
- X-Change™
- Counterweight

Options And Accessories

Below is a list of some equipment available from your Bobcat excavator dealer as Dealer and/or Factory Installed Accessories and Factory Installed Options. See your Bobcat dealer for other available options, accessories and attachments.

- Enclosed Cab With Heater and A/C
- Enclosed Cab With Heater
- Deluxe Instrument Panel
- Travel Motion Alarm
- Keyless Start
- Canopy / Cab Mounted Lights
- Catalytic Exhaust Purifier
- Top Guard Kit (FOGS)
- Special Application Kit
- Steel Tracks
- Long Arm
- Angle Blade
- Direct to Tank Auxiliary Hydraulics
- Counterweight (Additional)
- Hydraulic X-Change
- Pin Grabber Quick Coupler
- Extendable Arm
- Second Auxiliary Hydraulics
- Arm Mounted Auxiliary Hydraulic Couplers
- HEPA HVAC Fresh Air Filter

Specifications subject to change without notice and standard items may vary.

Attachments


These and other attachments are approved for use on this model Bobcat excavator. Do not use unapproved attachments. Attachments not manufactured by Bobcat may not be approved.

The versatile Bobcat excavator quickly turns into a multi-job machine with a variety of attachments.

See your Bobcat dealer for information about approved attachments and attachment Operation & Maintenance Manuals.

- Auger
- Breaker
- Hydraulic Clamp
- Pro Clamp™ System
- 3-Tined Grapple
- Compactor
- Power Tilt
- Ripper
- Hydro tilt
- Packer wheel
- Laser Receiver

Buckets Available

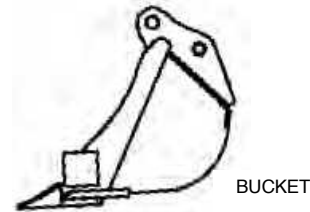


Many bucket styles, widths and different capacities are available for a variety of different applications. See your Bobcat dealer for the correct bucket for your Bobcat excavator and application.

- 305 mm (12 in) Trenching
- 305 mm (13 in) Trenching
- 305 mm (13 in) Heavy duty trenching
- 406 mm (16 in) Trenching
- 457 mm (18 in) Trenching
- 457 mm (18 in) Heavy duty trenching
- 508 mm (20 in) Trenching
- 610 mm (24 in) Trenching
- 610 mm (24 in) Heavy duty trenching
- 760 mm (30 in) Trenching
- 914 mm (36 in) Trenching
- 991 mm (39 in) Grading
- 13201 mm (52 in) Grading

FEATURES, ACCESSORIES AND ATTACHMENTS (CONT'D)

Falling Object Guards (FOGS)

Figure 5

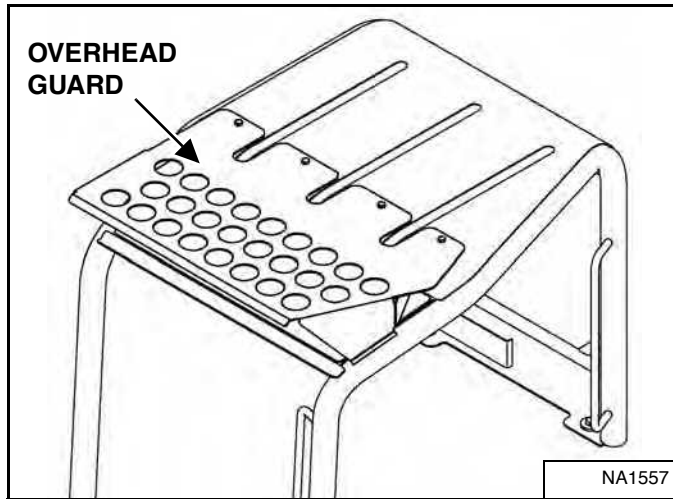


Available for special applications that require protection from smaller objects that can fall on the canopy / cab or restrict material from entering canopy / cab openings **[Figure 5]** and **[Figure 6]**.

The excavator must have the overhead guard **[Figure 5]** installed to meet the top guard requirements in ISO 10262.

See your Bobcat Dealer for more information.

Special Applications Kit

Figure 6

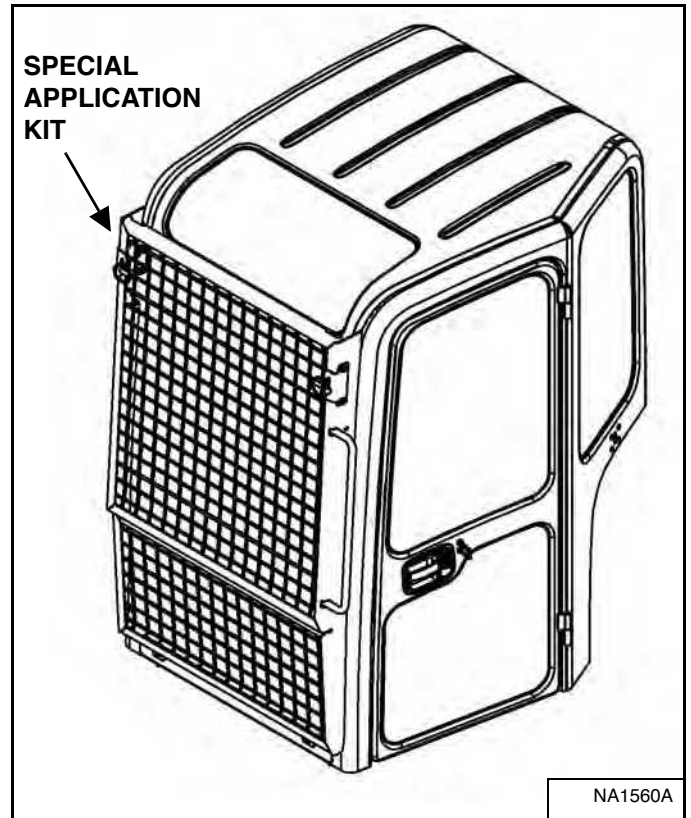

The excavator must have the special applications kit **[Figure 6]** installed to meet the front guard requirements in FOGS ISO 10262 - level 1.

Kit includes an upper and lower screen guard.

See your Bobcat Dealer for more information.

Special Applications Kit Inspection And Maintenance

The Special Applications Kit must be regularly inspected and maintained. Inspect the screen for damage. Replace parts as necessary.



Bobcat®

SAFETY AND TRAINING RESOURCES

SAFETY INSTRUCTIONS	15
Before Operation	15
Safe Operation Is The Operator's Responsibility	16
Safe Operation Needs A Qualified Operator	16
Avoid Silica Dust	17
FIRE PREVENTION	17
Maintenance	17
Operation	17
Electrical	17
Hydraulic System	18
Fueling	18
Starting	18
Spark Arrester Exhaust System	18
Welding And Grinding	18
Fire Extinguishers	18
PUBLICATIONS AND TRAINING RESOURCES	19
MACHINE SIGNS (DECALS)	20
Pictorial Only Safety Signs	22



Bobcat®

SAFETY INSTRUCTIONS

Before Operation

Carefully follow the operating and maintenance instructions in this manual.

The Bobcat excavator is highly maneuverable and compact. It is rugged and useful under a wide variety of conditions. This presents an operator with hazards associated with off highway, rough terrain applications, common with Bobcat excavator usage.

The Bobcat excavator has an internal combustion engine with resultant heat and exhaust. All exhaust gases can kill or cause illness so use the excavator with adequate ventilation.

The dealer explains the capabilities and restrictions of the Bobcat excavator and attachment for each application. The dealer demonstrates the safe operation according to Bobcat instructional materials, which are also available to operators. The dealer can also identify unsafe modifications or use of unapproved attachments. The attachments and buckets are designed for a Rated Lift Capacity. They are designed for secure fastening to the Bobcat excavator. The user must check with the dealer, or Bobcat literature, to determine safe loads of materials of specified densities for the machine - attachment combination.

The following publications and training materials provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine and attachment is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment gives operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.

- An Operator's Handbook is fastened to the operator cab of the excavator. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Compact Excavator Operating Training Course is available through your Bobcat dealer. This course is intended to provide rules and practices of correct operation of the Bobcat excavator. The course is available in English and Spanish versions.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.
- See the PUBLICATIONS AND TRAINING RESOURCES Page in this manual or your Bobcat dealer for Service and Parts Manuals, printed materials, videos, or training courses available. Also check the Bobcat web sites www.training.bobcat.com or www.bobcat.com

The dealer and owner / operator review the recommended uses of the product when delivered. If the owner / operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig
Dial 811 (USA Only)
1-888-258-0808 (USA & Canada)

When you call, you will be directed to a location in your state / province, or city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.).

SI EXC-0913

SAFETY INSTRUCTIONS (CONT'D)

Safe Operation Is The Operator's Responsibility

 Safety Alert Symbol
This symbol with a warning statement means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.



Operator must have instructions before operating the machine. Untrained operators can cause injury or death.

W-2001-0502



This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284



The signal word DANGER on the machine and in the manuals indicates a hazardous situation which, if not avoided, will result in death or serious injury.

D-1002-1107



The signal word WARNING on the machine and in the manuals indicates a potentially hazardous situation which, if not avoided, could result in death or serious injury.

W-2044-1107

The Bobcat excavator and attachment must be in good operating condition before use.

Check all of the items on the Bobcat Service Schedule Decal under the 8-10 hour column or as shown in the Operation & Maintenance Manual.

Safe Operation Needs A Qualified Operator

For an operator to be qualified, he or she must not use drugs or alcoholic drinks which impair alertness or coordination while working. An operator who is taking prescription drugs must get medical advice to determine if he or she can safely operate a machine.

A Qualified Operator Must Do The Following:

Understand the Written Instructions, Rules and Regulations

- The written instructions from Bobcat Company include the Delivery Report, Operation & Maintenance Manual, Operator's Handbook, Safety Manual and machine signs (decals).
- Check the rules and regulations at your location. The rules may include an employer's work safety requirements. Regulations may apply to local driving requirements or use of a Slow Moving Vehicle (SMV) emblem. Regulations may identify a hazard such as a utility line.

Have Training with Actual Operation

- Operator training must consist of a demonstration and verbal instruction. This training is given by your Bobcat dealer before the product is delivered.
- The new operator must start in an area without bystanders and use all the controls until he or she can operate the machine and attachment safely under all conditions of the work area. Always fasten seat belt before operating.
- Operator Training Courses are available from your Bobcat dealer in English and Spanish. They provide information for safe and efficient equipment operation. Safety videos are also available.
- Service Safety Training Courses are available from your Bobcat dealer. They provide information for safe and correct service procedures.

Know the Work Conditions

- Know the weight of the materials being handled. Avoid exceeding the Rated Lift Capacity of the machine. Material which is very dense will be heavier than the same volume of less dense material. Reduce the size of load if handling dense material.
- The operator must know any prohibited uses or work areas, for example, he or she needs to know about excessive slopes.
- Know the location of any underground lines. Call local utilities or the TOLL FREE phone number found in the *Before Operation* section of this manual.
- Wear tight fitting clothing. Always wear safety glasses when doing maintenance or service. Safety glasses, respiratory equipment, hearing protection or Special Applications Kits are required for some work. See your Bobcat dealer about Bobcat safety equipment for your model.

SI EXC-0913

SAFETY INSTRUCTIONS (CONT'D)

Avoid Silica Dust



Cutting or drilling concrete containing sand or rock containing quartz may result in exposure to silica dust. Do not exceed Permissible Exposure Limits (PEL) to silica dust as determined by OSHA or other job site Rules and Regulations. Use a respirator, water spray or other means to control dust. Silica dust can cause lung disease and is known to the state of California to cause cancer.

FIRE PREVENTION



Maintenance

The machine and some attachments have components that are at high temperatures under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.

Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it can cause a fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential fire hazard.

The operator's area, engine compartment and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazards and overheating.

All fuels, most lubricants and some coolant mixtures are flammable. Flammable fluids that are leaking or spilled onto hot surfaces or onto electrical components can cause a fire.

Operation

Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.

Electrical



Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part or wires that are loose or frayed.

Battery gas can explode and cause serious injury. Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting. Do not jump start or charge a frozen or damaged battery. Keep any open flames or sparks away from batteries. Do not smoke in battery charging area.

SI EXC-0913

FIRE PREVENTION (CONT'D)

Hydraulic System

Check hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Hydraulic tubes and hoses must be properly routed and have adequate support and secure clamps. Tighten or replace any parts that show leakage.

Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.

Fueling



Stop the engine and let it cool before adding fuel. No smoking! Do not refuel a machine near open flames or sparks. Fill the fuel tank outdoors.

Ultra Low Sulfur Diesel (ULSD) poses a greater static ignition hazard than earlier diesel formulations with higher Sulfur content. Avoid death or serious injury from fire or explosion. Consult with your fuel or fuel system supplier to ensure the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

Starting

Do not use ether or starting fluids on any engine that has glow plugs or air intake heater. These starting aids can cause explosion and injure you or bystanders.

Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.

Spark Arrester Exhaust System

The spark arrester exhaust system is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

Check the spark arrester exhaust system regularly to make sure it is maintained and working properly. Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrester muffler (if equipped).


Welding And Grinding

Always clean the machine and attachment, disconnect the battery, and disconnect the wiring from the Bobcat controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding.

Have good ventilation when grinding or welding painted parts. Wear dust mask when grinding painted parts. Toxic dust or gas can be produced.

Dust generated from repairing nonmetallic parts such as hoods, fenders or covers can be flammable or explosive. Repair such components in a well ventilated area away from open flames or sparks.

Fire Extinguishers

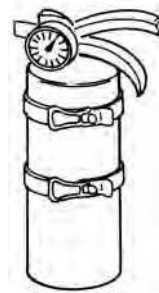

Know where fire extinguishers and first aid kits are located and how to use them. Inspect the fire extinguisher and service the fire extinguisher regularly. Obey the recommendations on the instructions plate.

PUBLICATIONS AND TRAINING RESOURCES

The following publications are also available for your Bobcat excavator. You can order them from your Bobcat dealer.



OPERATION & MAINTENANCE MANUAL

6990442enUS

Complete instructions on the correct operation and the routine maintenance of your Bobcat excavator.



SAFETY MANUAL

6901951 (English and Spanish)

Gives basic safety procedures and warnings for your Bobcat excavator.



COMPACT EXCAVATOR OPERATOR TRAINING COURSE

7249283 (English)
7249286 (Spanish)

Introduces operator to step-by-step basics of skid-steer excavator operation.




SERVICE MANUAL

6987276enUS

Complete maintenance instructions for your Bobcat excavator.

For the latest information on Bobcat products and the Bobcat Company, visit our Web site at www.training.bobcat.com or www.bobcat.com.

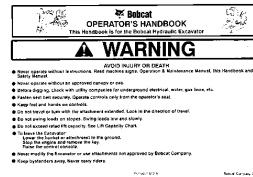

OPERATOR'S HANDBOOK

6990434enUS

Gives basic operation instructions and safety warnings.



OPERATOR SAFETY DVD

6904762 (English and Spanish)

DVD gives basic safety instructions for many Bobcat products including excavators.



EXCAVATOR SERVICE SAFETY TRAINING COURSE

6900916

Introduces service technicians to step-by-step basics of proper and safe skid-steer excavator maintenance and servicing procedures.



EXCAVATOR SAFETY VIDEO

(Mobile device with quick response code application required)

Scan the code above to watch the excavator safety video or view at www.training.bobcat.com.

MACHINE SIGNS (DECALS)

Follow the instructions on all the Machine Signs (Decals) that are on the excavator. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat excavator dealer.

WARNING
AVOID INJURY OR DEATH
 Know the control pattern before operating.
 See Operation and Maintenance Manual or Handbook.

A STD B ISO

AUX HYD

7148147

W/O ANGLE BLADE 7240698
 WITH ANGLE BLADE 7240699

7161794

WARNING
 This machine is equipped with a motion alarm.
ALARM MUST SOUND!
 when operating forward or backward.
 Failure to maintain a clear view in the direction of travel could result in serious injury or death.
 The operator is responsible for the safe operation of this machine.

6810004 (If Equipped)

OPERATOR'S HANDBOOK

7236492

JOYSTICK CONTROL PATTERN SELECTOR

CONTROL SYSTEM A (STD) CONTROL SYSTEM B (ISO)

7178179

OPERATOR'S HANDBOOK

WARNING
 AVOID INJURY OR DEATH
 Know the control pattern before operating.
 See Operation and Maintenance Manual or Handbook for more information.

6990434enUS

LEFT CONSOLE AREA

WARNING
AVOID INJURY OR DEATH
 Know the control pattern before operating.
 See Operation and Maintenance Manual or Handbook for more information.

A STD B ISO

7148145

6594897

7195361

S ≤ 600 mg/kg LOW SULFUR OR ULTRA LOW SULFUR DIESEL FUEL ONLY
 只允许使用低硫柴油

7152748

1

7168039 (2)

/50B /50B

7238017

WARNING
 Improper loading, transporting and lifting procedures can cause serious injury or death.


TRANSPORTING MACHINE

LIFTING MACHINE

7178178

MACHINE SIGNS (DECALS) (CONT'D)

Follow the instructions on all the Machine Signs (Decals) that are on the excavator. Replace any damaged machine signs and be sure they are in the correct locations. Machine signs are available from your Bobcat excavator dealer.

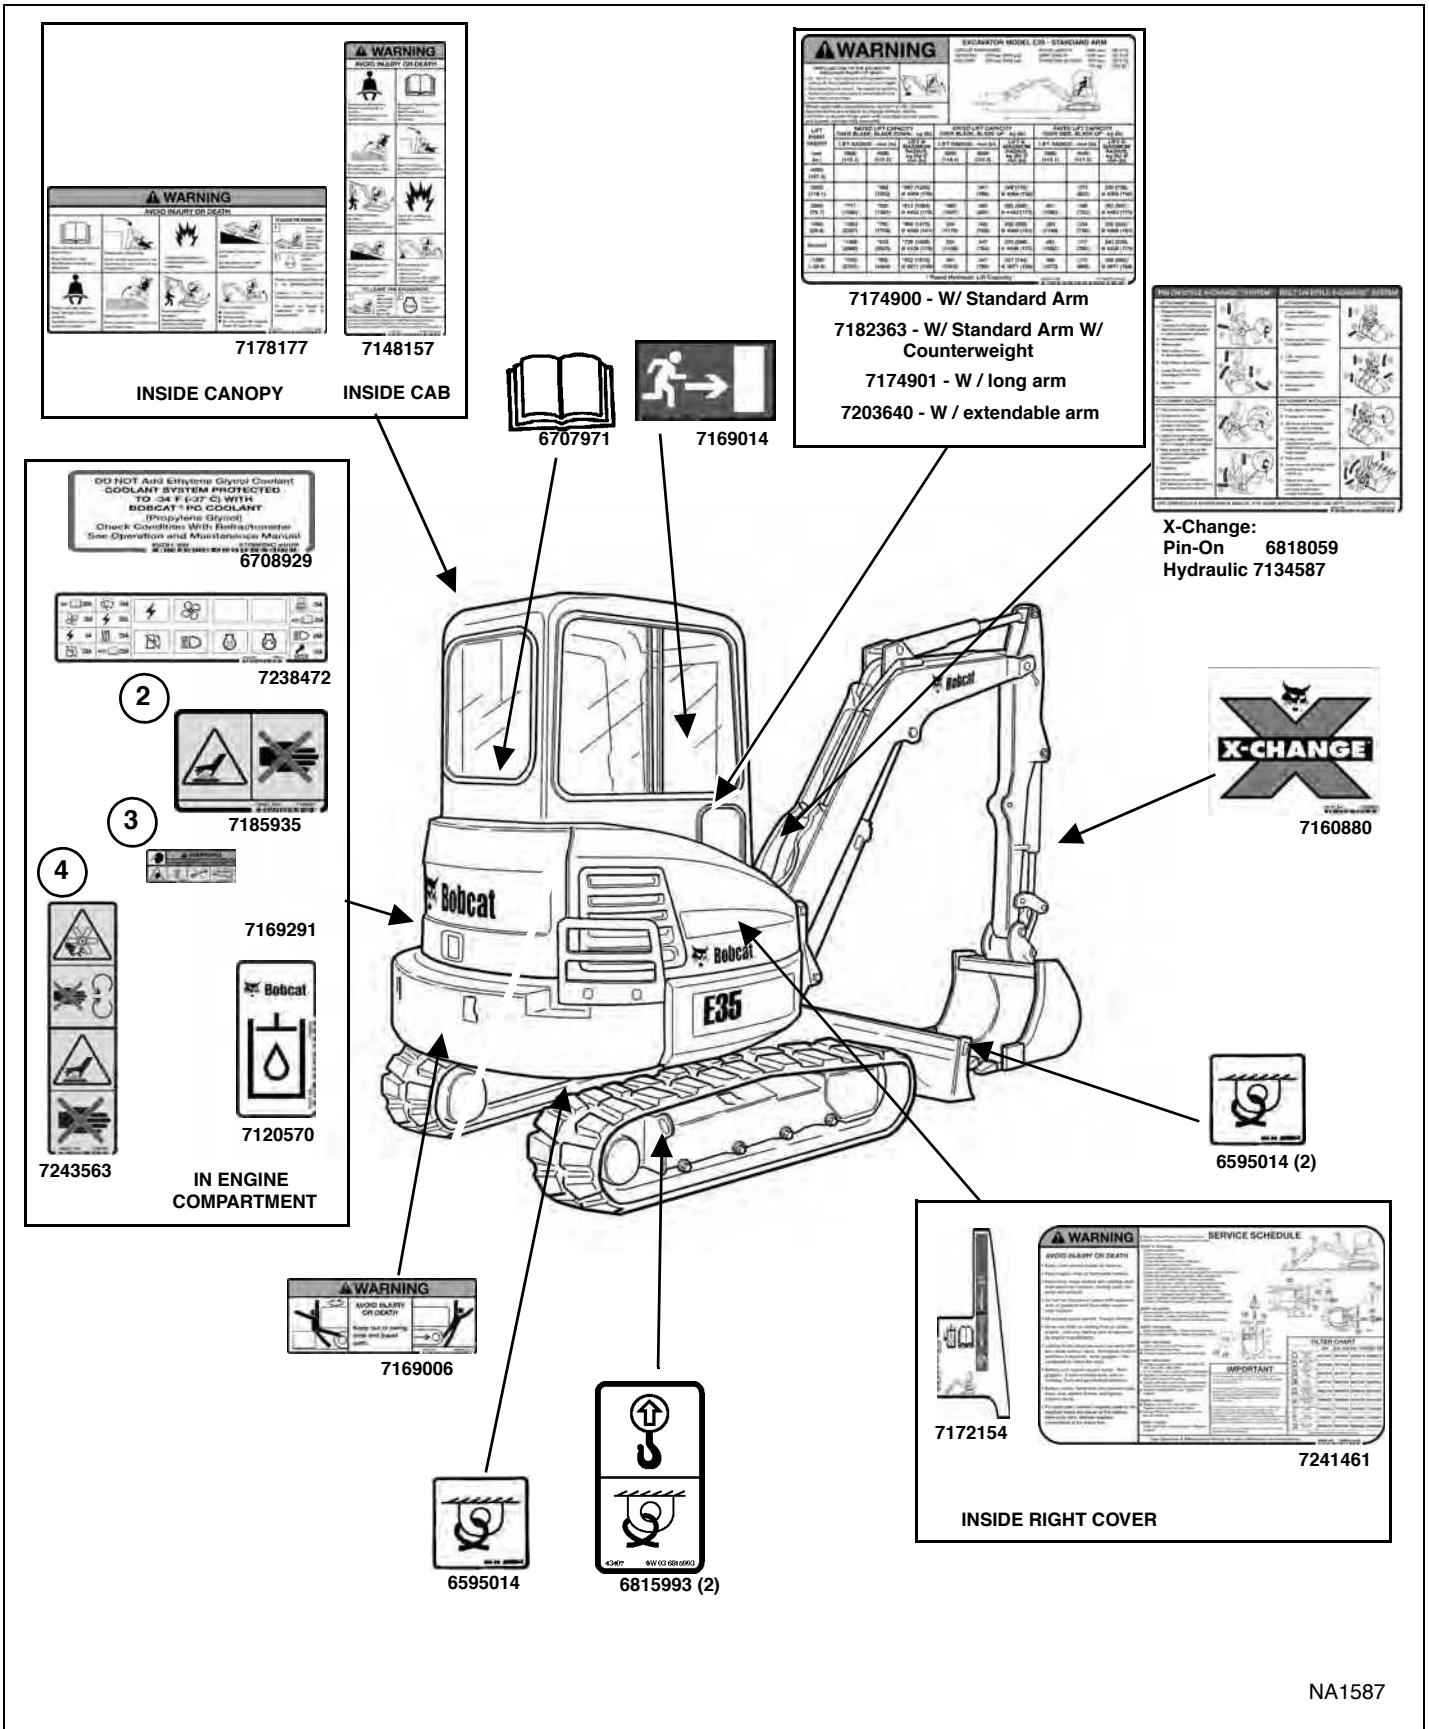


MACHINE SIGNS (DECALS) (CONT'D)


Pictorial Only Safety Signs

Safety signs are used to alert the equipment operator or maintenance person to hazards that may be encountered in the use and maintenance of the equipment. The location and description of the safety signs are detailed in this section. Please become familiarized with all safety signs installed on the excavator.

Vertical Configuration

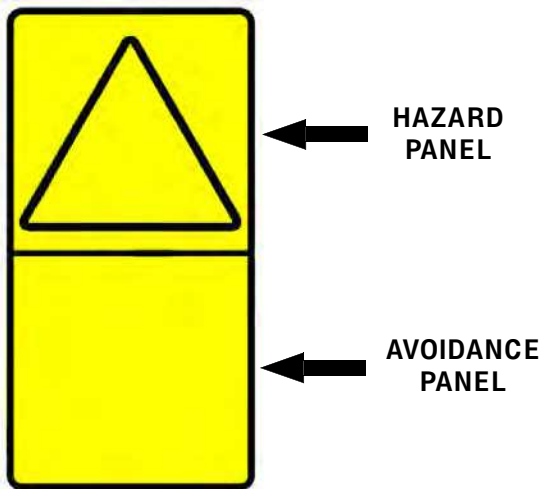

Horizontal Configuration

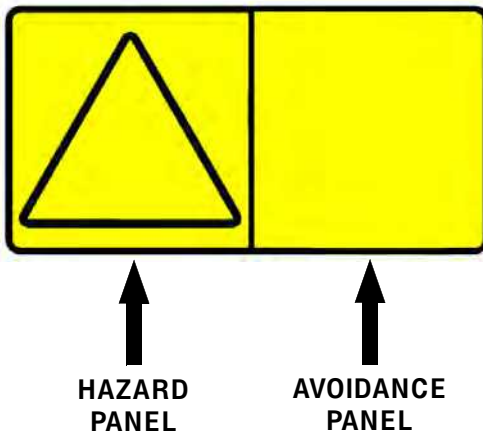

The format consists of the hazard panel(s) and the avoidance panel(s):

Hazard panels depict a potential hazard enclosed in a safety alert triangle.

Avoidance panels depict actions required to avoid the hazards.

A safety sign may contain more than one hazard panel and more than one avoidance panel.

NOTE: See the numbered MACHINE SIGNS (DECALS) on Page 20 and Machine Signs (Decals) (Cont'd) on Page 21 for the machine location of each corresponding numbered pictorial only decals as shown below.

1. Thrown Or Flying Objects (7120574)

This safety sign is located on the outside of both tracks.



High pressure grease can cause serious injury. Do not loosen grease fitting. Do not loosen bleed fitting more than 1 - 1/2 turns.

Read and understand the Operation & Maintenance Manual for more information.

W-2516-0110

2. Thrown or Flying Objects (7169291)

This safety sign is located on the gas spring in the engine compartment.



High pressure gas can cause serious injury or death. Do not open. Opening cylinder can release rod.

W-2523-0106

MACHINE SIGNS (DECALS) (CONT'D)

Pictorial Only Safety Signs (Cont'd)

3. Hot Surfaces (7185935)

This safety sign is located in the engine compartment.



AVOID BURNS

Do not remove radiator cap when the engine is hot. You can be seriously burned.

W-2070-1203

4. Thrown or Flying Objects (7169291)

This safety sign is located on the gas spring in the engine compartment.



High pressure gas can cause serious injury or death. Do not open. Opening cylinder can release rod.

W-2523-0106

5. Hot Surfaces and Rotating Fan (7243563)

This safety sign is located inside the engine compartment.



Rotating fan blade can cause serious injury or death. Keep away from fan and moving parts. Do not operate with guard removed.

Hot surfaces can cause injury. Do not touch. Allow to cool before servicing.

W-2521-0106



Bobcat®

OPERATING INSTRUCTIONS

INSTRUMENTS AND CONSOLES	29
Cab Interior Light	29
Left Console	29
Right Console	30
Instrument Panel - Standard	31
Instrument Panel - Deluxe	34
Radio Option	35
STD / ISO Selector Valve	37
Raising And Lowering The Console	37
Two-Speed Travel (Without Angle Blade Option)	38
Two-Speed Travel (With Angle Blade Option)	38
Auto Shift Drive Motors	38
Auto Idle Feature	39
OPERATOR CANOPY (ROPS / TOPS)	40
Description	40
OPERATOR CAB (ROPS / TOPS)	40
Description	40
Cab Door	41
Front Window	42
Front Wiper	43
Window Washer Reservoir	43
Right Side Windows	44
Heating, Ventilation, And Air Conditioning Ducting	45
EMERGENCY EXIT	46
Right Side Rear Window	46
Front Window	46
MOTION ALARM SYSTEM	47
Operation	47
TRAVEL CONTROLS	48
Forward And Reverse Travel	48
Turning	48

HYDRAULIC CONTROLS	50
Description	50
STANDARD Control Pattern	50
ISO Control Pattern	51
Quick Couplers	52
Auxiliary Hydraulics - Standard Instrument Panel	53
Auxiliary Hydraulics - Deluxe Instrument Panel	54
Relieve Hydraulic Pressure With Standard Instrument Panel (Excavator And Attachment)	55
Relieve Hydraulic Pressure With Deluxe Instrument Panel (Excavator And Attachment) ..	55
Secondary Auxiliary Hydraulics	56
Relieve Secondary Auxiliary Hydraulic Pressure (Excavator And Attachment)	56
Return To Tank Valve	57
 BLADE CONTROL LEVER	 58
Raising And Lowering Blade	58
Angling Blade (If Equipped)	58
 ENGINE SPEED CONTROL DIAL	 59
Setting Engine Speed (RPM)	59
ECO Mode (With Deluxe Instrument Panel Only)	59
 BOOM SWING	 60
Operation	60
 BOOM LOAD HOLDING VALVE	 61
Description	61
Lowering Boom With Load Holding Valve	61
 ARM LOAD HOLDING VALVE	 63
Description	63
Lowering Arm With Load Holding Valve	63
 DAILY INSPECTION	 65
Daily Inspection And Maintenance	65
 PRE-STARTING PROCEDURE	 66
Operation & Maintenance Manual And Operator's Handbook Locations	66
Entering The Excavator	66
Seat Adjustment	67
Seat Belt	67
Control Console	68
Mirror Adjustment	68
 STARTING THE ENGINE	 69
Key Switch	69
Keyless	70
Deluxe Instrument Panel	71
Warming The Hydraulic System	72
Cold Temperature Starting	72

MONITORING THE DISPLAY PANELS	73
Instrument Panel	73
Warning And Shutdown	73
STOPPING THE ENGINE AND LEAVING THE EXCAVATOR	74
Procedure	74
ATTACHMENTS	75
Installing And Removing The Attachment (Hydraulic X-Change)	75
Installing And Removing The Attachment (Pin-On X-Change)	78
Installing And Removing The Attachment (Pin-On Attachment)	84
Installing And Removing The Pro Clamp System Tool	85
OPERATING PROCEDURE	93
Inspect The Work Area	93
Basic Operating Instructions	93
Lowering The Work Equipment (Engine STOPPED)	93
Object Handling	94
Object Handling With The Lifting Device	95
Lift Capacity	97
Using The Clamp (If Equipped)	99
Using The Pro Clamp System (If Equipped)	100
Excavating	101
Boom Swing	103
Backfilling	104
Driving The Excavator	104
Operating On Slopes	105
Operating In Water	107
Extending The Arm (If Equipped)	108
Avoiding Track Damage	110
DEPTH CHECK	111
Setup / Calibration	111
Initial Setup	121
Operation	128
TOWING THE EXCAVATOR	134
Procedure	134
LIFTING THE EXCAVATOR	135
Procedure	135
TRANSPORTING THE EXCAVATOR ON A TRAILER	136
Loading And Unloading	136
Fastening	136



Bobcat®

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com