

# Shop Manual

# PC210LL-10

## HYDRAULIC EXCAVATOR

**SERIAL NUMBERS**    **PC210LL-10 A52001 and up**

**ENGINE**                    **6D107E-2**

This material is proprietary to Komatsu America Corp. and is not to be reproduced, used, or disclosed except in accordance with written authorization from Komatsu America Corp.

It is our policy to improve our products whenever it is possible and practical to do so. We reserve the right to make changes or improvements at any time without incurring any obligation to install such changes on products sold previously.

Due to this continuous program of research and development, revisions may be made to this publication. It is recommended that customers contact their distributor for information on the latest revision.

Copyright 2015 Komatsu  
Printed in U.S.A.  
Komatsu America Corp.

August 2015



# HYDRAULIC EXCAVATOR

## PC210LL-10

Model                      Serial Number

PC210LL-10      A52001   and up

---

## 00 Index and foreword

---

---

**Index** (ALL-0310-001-A-00-A)

00 Index and foreword .....	00-1
Index .....	00-2
Foreword, safety and general information .....	00-14
Important safety notice .....	00-14
How to read the shop manual .....	00-21
Explanation of terms for maintenance standard .....	00-23
Handling equipment of fuel system devices .....	00-25
Handling of intake system parts .....	00-26
Handling of hydraulic equipment .....	00-27
Method of disconnecting and connecting of push-pull type coupler .....	00-29
Handling of electrical equipment .....	00-32
How to read electric wire code .....	00-40
Precautions when performing operation .....	00-43
Practical use of KOMTRAX .....	00-47
Standard tightening torque table .....	00-48
List of abbreviation .....	00-52
Conversion table .....	00-57
01 Specification .....	01-1
Table of contents .....	01-1
Specifications .....	01-2
Specification drawing .....	01-2
Working range drawings .....	01-5
Specifications .....	01-6
Weight table .....	01-8
Table of fuel, coolant, and lubricants .....	01-10
10 Structure and function .....	10-1
Table of contents .....	10-2
Engine and cooling system .....	10-3
Engine related parts .....	10-3
KVG T .....	10-5
EGR system piping drawing .....	10-12
EGR system circuit diagram .....	10-14
EGR valve .....	10-16
EGR cooler .....	10-18
KCCV layout drawing .....	10-19
KCCV ventilator .....	10-21
KDPF .....	10-23
Cooling system .....	10-27
Power train .....	10-29
Power train system .....	10-29
Swing circle .....	10-31
Swing machinery .....	10-32
Final drive .....	10-34
Undercarriage and frame .....	10-36
Track frame and idler cushion .....	10-36
Hydraulic system .....	10-38
Hydraulic equipment layout drawing .....	10-38
Valve control .....	10-40
Hydraulic tank .....	10-42
CLSS .....	10-44
Main pump .....	10-49
Control valve .....	10-74
Swing motor .....	10-131
Travel motor .....	10-144
PPC valve .....	10-156
Solenoid valve .....	10-176

Center swivel joint .....	10-186
Accumulator .....	10-188
Work equipment .....	10-189
Work equipment .....	10-189
Work equipment shim .....	10-190
Bucket play adjustment shim .....	10-191
Cab and its attachments .....	10-193
Electrical system .....	10-194
Electrical control system .....	10-194
Machine monitor system .....	10-245
KOMTRAX system .....	10-267
Sensor .....	10-270
20 Standard value tables .....	20-1
Table of contents .....	20-2
Standard service value table .....	20-3
Standard value table for engine .....	20-3
Standard value table for machine .....	20-5
Standard value table for electrical system .....	20-18
30 Testing and adjusting .....	30-1
Table of contents .....	30-2
General information on testing and adjusting .....	30-3
Tools for testing and adjusting .....	30-3
Sketch of tools for testing and adjusting .....	30-7
Engine and cooling system .....	30-8
Testing engine speed .....	30-8
Testing boost pressure .....	30-9
Testing exhaust gas color .....	30-11
Measuring and adjusting valve clearance .....	30-13
Testing compression pressure .....	30-16
Testing blowby pressure .....	30-20
Testing engine oil pressure .....	30-21
Testing EGR valve and KVGT oil pressures .....	30-22
Measuring fuel pressure .....	30-23
Measuring fuel delivery, return and leakage .....	30-29
Bleeding air from fuel system .....	30-34
Checking fuel circuit for leakage .....	30-36
Handling cylinder cutout mode operation .....	30-37
Handling no injection cranking operation .....	30-38
Checking and adjusting air conditioner compressor belt tension .....	30-39
Replacing fan belt .....	30-41
Power train .....	30-42
Testing swing circle bearing clearance .....	30-42
Undercarriage and frame .....	30-43
Testing and adjusting track shoe tension .....	30-43
Hydraulic system .....	30-44
Releasing remaining pressure from hydraulic circuit .....	30-44
Testing and adjusting oil pressure in work equipment, swing, and travel circuits .....	30-45
Testing oil pressure of control circuit .....	30-49
Testing and adjusting oil pressure in pump PC control circuit .....	30-52
Testing and adjusting oil pressure in pump LS control circuit .....	30-55
Testing output pressure of solenoid valve .....	30-60
Testing PPC valve output pressure .....	30-64
Adjusting play of work equipment and swing PPC valves .....	30-66
Testing pump swash plate sensor .....	30-67
Isolating the parts causing hydraulic drift in work equipment .....	30-68
Testing oil leakage .....	30-69

Bleeding air from hydraulic circuit .....	30-72
Cab and its attachments.....	30-75
Adjusting mirrors.....	30-75
Electrical system .....	30-77
Special functions of machine monitor.....	30-77
Adjusting rearview camera angle.....	30-148
Handling voltage circuit of engine controller.....	30-150
Handling battery disconnect switch.....	30-151
Testing diodes .....	30-152
Pm clinic .....	30-153
Pm Clinic service .....	30-153
40 Troubleshooting.....	40-1
Table of contents .....	40-2
General information on troubleshooting .....	40-9
Troubleshooting points .....	40-9
Sequence of events in troubleshooting.....	40-11
Testing before troubleshooting .....	40-13
Inspection procedure before troubleshooting .....	40-15
Preparation work for troubleshooting of electrical system.....	40-34
Classification and procedure for troubleshooting.....	40-38
Symptom of probable failure and troubleshooting No.....	40-41
Information in troubleshooting table .....	40-44
Diagnostic procedure for wiring harness open circuit of pressure sensor system .....	40-46
Connector list and layout .....	40-48
Connector contact identification.....	40-59
T-branch box and T-branch adapter table .....	40-95
Fuse location table .....	40-101
Precautions for KDPF (KCSF and KDOC) Cleaning and Replacement .....	40-103
Fabrication of dummy temperature sensor (for KDOC and KDPF temperature sensors).....	40-106
Fabrication of short-circuit connector (for CA1883 and CA3135).....	40-107
Failure codes table .....	40-108
Troubleshooting by failure code (Display of code).....	40-117
Failure code [879AKA] A/C Inner Sensor Open Circuit .....	40-117
Failure code [879AKB] A/C Inner Sensor Short Circuit.....	40-118
Failure code [879BKA] A/C Outer Sensor Open Circuit.....	40-119
Failure code [879BKB] A/C Outer Sensor Short Circuit.....	40-120
Failure code [879CKA] Ventilating Sensor Open Circuit.....	40-121
Failure code [879CKB] Ventilating Sensor Short Circuit.....	40-122
Failure code [879DKZ] Sunlight Sensor Open or Short Circuit.....	40-123
Failure code [879EMC] Ventilation Damper Abnormality.....	40-124
Failure code [879FMC] Air Mix Damper Abnormality .....	40-125
Failure code [879GKX] Refrigerant Abnormality.....	40-126
Failure code [989L00] Engine Controller Lock Caution1.....	40-127
Failure code [989M00] Engine Controller Lock Caution2.....	40-128
Failure code [989N00] Engine Controller Lock Caution3.....	40-129
Failure code [A1U0N3]: KDPF Dry Request (HC Release).....	40-130
Failure code [A1U0N4] KDPF Dry Request (HC Release).....	40-132
Failure code [A1U0R7] Manual Stationary Regeneration Request (96 Hour Timer Request).....	40-133-1
Failure code [AA10NX] Air Cleaner Clogging.....	40-134
Failure code [AB00KE] Charge Voltage Low.....	40-136
Failure code [B@BAZG] Engine Oil Pressure Low .....	40-138
Failure code [B@BAZK] Eng Oil Level Low .....	40-139
Failure code [B@BCNS] Engine Coolant Overheat .....	40-140
Failure code [B@BCZK] Radiator Coolant Level Low .....	40-141
Failure code [B@HANS] Hyd Oil Overheat.....	40-143
Failure code [CA115] Eng Ne and Bkup Speed Sens Error .....	40-144
Failure code [CA122] Chg Air Press Sensor High Error .....	40-145
Failure code [CA123] Chg Air Press Sensor Low Error .....	40-147

Failure code [CA131] Throttle Sensor High Error.....	40-149
Failure code [CA132] Throttle Sensor Low Error .....	40-151
Failure code [CA144] Coolant Temp Sens High Error .....	40-153
Failure code [CA145] Coolant Temp Sens Low Error .....	40-155
Failure code [CA153] Chg Air Temp Sensor High Error.....	40-157
Failure code [CA154] Chg Air Temp Sensor Low Error.....	40-159
Failure code [CA187] Sensor 2 Supply Volt Low Error .....	40-161
Failure code [CA221] Ambient Press Sens High Error .....	40-163
Failure code [CA222] Ambient Press Sens Low Error.....	40-165
Failure code [CA227] Sensor 2 Supply Volt High Error.....	40-167
Failure code [CA234] Eng Overspeed .....	40-168
Failure code [CA238] Ne Speed Sensor Supply Volt Error .....	40-169
Failure code [CA239] Ne Speed Sens Supply Volt High Error.....	40-170
Failure code [CA271] IMV/PCV1 Short Error .....	40-171
Failure code [CA272] IMV/PCV1 Open Error .....	40-173
Failure code [CA295] Ambient Press Sens In Range Error.....	40-175
Failure code [CA322] Inj #1(L#1) Open/Short Error .....	40-176
Failure code [CA323] Inj #5(L#5) Open/Short Error .....	40-178
Failure code [CA324] Inj #3(L#3) Open/Short Error .....	40-180
Failure code [CA325] Inj #6(L#6) Open/Short Error .....	40-182
Failure code [CA331] Inj #2(L#2) Open/Short Error .....	40-184
Failure code [CA332] Inj #4(L#4) Open/Short Error .....	40-186
Failure code [CA343] ECM Critical Internal Failure.....	40-188
Failure code [CA351] Injectors Drive Circuit Error .....	40-189
Failure code [CA352] Sensor 1 Supply Volt Low Error .....	40-190
Failure code [CA356] Mass Air Flow Sensor High Error .....	40-192
Failure code [CA357] Mass Air Flow Sensor Low Error.....	40-194
Failure code [CA386] Sensor 1 Supply Volt High Error.....	40-196
Failure code [CA428] Water in Fuel Sensor High Error .....	40-197
Failure code [CA429] Water in Fuel Sensor Low Error.....	40-199
Failure code [CA435] Eng Oil Press Sw Error .....	40-201
Failure code [CA441] Battery Voltage Low Error .....	40-202
Failure code [CA442] Battery Voltage High Error.....	40-204
Failure code [CA449] Rail Press Very High Error.....	40-205
Failure code [CA451] Rail Press Sensor High Error.....	40-206
Failure code [CA452] Rail Press Sensor Low Error .....	40-208
Failure code [CA488] Chg Air Temp High Torque Derate.....	40-210
Failure code [CA515] Rail Press Sens Sup Volt High Error .....	40-211
Failure code [CA516] Rail Press Sens Sup Volt Low Error .....	40-213
Failure code [CA553] Rail Press High Error.....	40-215
Failure code [CA555] Crankcase Press High Error 1 .....	40-216
Failure code [CA556] Crankcase Press High Error 2 .....	40-217
Failure code [CA559] Rail Press Low Error.....	40-218
Failure code [CA595] Turbo Speed High Error 2 .....	40-220
Failure code [CA687] Turbo Speed Low Error.....	40-221
Failure code [CA689] Eng Ne Speed Sensor Error.....	40-223
Failure code [CA691] Intake Air Temp Sens High Error.....	40-225
Failure code [CA692] Intake Air Temp Sens Low Error.....	40-227
Failure code [CA697] ECM Int Temp Sensor High Error.....	40-229
Failure code [CA698] ECM Int Temp Sensor Low Error.....	40-230
Failure code [CA731] Eng Bkup Speed Sens Phase Error .....	40-231
Failure code [CA778] Eng Bkup Speed Sensor Error.....	40-233
Failure code [CA1117] Persistent Data Lost Error.....	40-238
Failure code [CA1664] KDOC Malfunction.....	40-239
Failure code [CA1691] Regeneration Ineffective .....	40-241
Failure code [CA1695] Sensor 5 Supply Volt High Error.....	40-244
Failure code [CA1696] Sensor 5 Supply Volt Low Error .....	40-246
Failure code [CA1843] Crankcase Press Sens High Error.....	40-248
Failure code [CA1844] Crankcase Press Sens Low Error .....	40-250

Failure code [CA1879] KDPF Delta P Sensor High Error .....	40-252
Failure code [CA1881] KDPF Delta P Sensor Low Error .....	40-254
Failure code [CA1883] KDPF Delta P Sens In Range Error .....	40-256
Failure code [CA1921] KDPF Soot Load High Error 1 .....	40-259
Failure code [CA1922] KDPF Soot Load High Error 2 .....	40-262
Failure code [CA1942] Crankcase Press Sens In Range Error .....	40-267
Failure code [CA1993] KDPF Delta Pressure Low Error .....	40-268
Failure code [CA2185] Throt Sensor Sup Volt High Error .....	40-271
Failure code [CA2186] Throt Sensor Sup Volt Low Error .....	40-273
Failure code [CA2249] Rail Press Very Low Error .....	40-275
Failure code [CA2271] EGR Valve Pos Sens High Error .....	40-276
Failure code [CA2272] EGR Valve Pos Sens Low Error .....	40-278
Failure code [CA2288] Turbo Speed High Error 1 .....	40-281
Failure code [CA2311] IMV Solenoid Error .....	40-282
Failure code [CA2349] EGR Valve Solenoid Open Error .....	40-283
Failure code [CA2353] EGR Valve Solenoid Short Error .....	40-285
Failure code [CA2357] EGR Valve Servo Error .....	40-287
Failure code [CA2373] Exhaust Manifold Press Sens High error .....	40-288
Failure code [CA2374] Exhaust Manifold Press Sens Low error .....	40-290
Failure code [CA2375] EGR Orifice Temp Sens High Error .....	40-292
Failure code [CA2376] EGR Orifice Temp Sens Low Error .....	40-294
Failure code [CA2381] KVGt Pos Sens High Error .....	40-296
Failure code [CA2382] KVGt Pos Sens Low Error .....	40-298
Failure code [CA2383] KVGt Solenoid Open Error .....	40-301
Failure code [CA2386] KVGt Solenoid Short Error .....	40-303
Failure code [CA2387] KVGt Servo Error .....	40-305
Failure code [CA2554] Exh Manifold Press Sens In Range Error .....	40-306
Failure code [CA2555] Grid Htr Relay Volt Low Error .....	40-307
Failure code [CA2556] Grid Htr Relay Volt High Error .....	40-309
Failure code [CA2637] KDOC Face Plugging .....	40-311
Failure code [CA2639] Manual Stationary Regeneration Request .....	40-313
Failure code [CA2961] EGR Orifice Temp High Error 1 .....	40-316
Failure code [CA2973] Chg Air Press Sensor In Range Error .....	40-317
Failure code [CA3133] KDPF Outlet Press Sens High Error .....	40-318
Failure code [CA3134] KDPF Outlet Press Sens Low Error .....	40-320
Failure code [CA3135] KDPF Outlet Press Sens In Range Error .....	40-322
Failure code [CA3251] KDOC Inlet Temp High Error .....	40-326
Failure code [CA3253] KDOC Temp Error - Non Regeneration .....	40-329
Failure code [CA3254] KDOC Outlet Temp High Error 1 .....	40-332
Failure code [CA3255] KDPF Temp Error - Non Regeneration .....	40-335
Failure code [CA3256] KDPF Outlet Temp High Error 1 .....	40-338
Failure code [CA3311] KDOC Outlet Temp High Error 2 .....	40-341
Failure code [CA3312] KDPF Outlet Temp High Error 2 .....	40-344
Failure code [CA3313] KDOC Inlet Temp Sensor Low Error .....	40-347
Failure code [CA3314] KDOC Inlet Temp Sens High Error .....	40-350
Failure code [CA3315] KDOC Inlet Temp Sens In Range Error .....	40-353
Failure code [CA3316] KDOC Outlet Temp Sens Low Error .....	40-357
Failure code [CA3317] KDOC Outlet Temp Sens High Error .....	40-360
Failure code [CA3318] KDOC Outlet Temp Sens In Range Error .....	40-364
Failure code [CA3319] KDPF Outlet Temp Sens High Error .....	40-368
Failure code [CA3321] KDPF Outlet Temp Sens Low Error .....	40-372
Failure code [CA3322] KDPF Outlet Temp Sens In Range Error .....	40-375
Failure code [CA3419] Mass Air Flow Sensor Sup Volt High Error .....	40-379
Failure code [CA3421] Mass Air Flow Sensor Sup Volt Low Error .....	40-381
Failure code [CA3741] Rail Press Valve Trip Error .....	40-383
Failure code [D110KB] Battery Relay Output Voltage .....	40-384
Failure code [D19JKZ] Personal Code Relay Abnormality .....	40-386
Failure code [D811MC] KOMTRAX Error .....	40-389
Failure code [D862KA] GPS Antenna Open Circuit .....	40-390



Failure code [D8ALKA] System Operating Lamp Disconnection (KOMTRAX).....	40-391
Failure code [D8ALKB] System Operating Lamp Short Circuit (KOMTRAX) .....	40-393
Failure code [D8AQKR] CAN2 Discon (KOMTRAX) .....	40-394
Failure code [DA20MC] Pump Controller.....	40-395
Failure code [DA22KK] Pump Solenoid Power Low Error.....	40-396
Failure code [DA25KP] 5V Sensor 1 Power Abnormality.....	40-398
Failure code [DA29KQ] Model Selection Abnormality .....	40-401
Failure code [DA2LKA] System Operating Lamp Disconnection (Pump Con) .....	40-403
Failure code [DA2LKB] System Operating Lamp Short Circuit (Pump Con) .....	40-405
Failure code [DA2QKR] CAN2 Discon (Pump Con).....	40-406
Failure code [DA2RKR] CAN1 Discon (Pump Con).....	40-409
Failure code [DAF0MB] Monitor ROM Abnormality.....	40-410
Failure code [DAF0MC] Monitor Error .....	40-411
Failure code [DAF8KB] Camera Power Supply Short Circuit .....	40-412
Failure code [DAF9KQ] Model Selection Abnormality .....	40-414
Failure code [DAFGMC] GPS Module Error.....	40-415
Failure code [DAFLKA] Operating Lamp Open Circuit(Monitor) .....	40-416
Failure code [DAFLKB] System Operating Lamp Short Circuit (Monitor).....	40-418
Failure code [DAFQKR] CAN2 Discon (Monitor) .....	40-419
Failure code [DAZ9KQ] A/C Model Selection Abnormality.....	40-420
Failure code [DAZQKR] CAN2 Discon (AC).....	40-421
Failure code [DB2QKR] CAN2 Discon (Engine Con) .....	40-426
Failure code [DB2RKR] CAN1 Discon (Engine Con) .....	40-431
Failure code [DGH2KB] Hyd Oil Sensor Short .....	40-435
Failure code [DHA4KA] Air Cleaner Clog Sensor Open Circuit .....	40-437
Failure code [DHPAMA] F Pump Press Sensor Abnormality.....	40-438
Failure code [DHPBMA] R Pump Press Sensor Abnormality .....	40-441
Failure code [DHS3MA] Arm IN PPC Sen. Abnormality .....	40-444
Failure code [DHS4MA] Bucket Curl/Heel Out PPC Press Sensor Abnormality .....	40-446
Failure code [DHS8MA] Boom Raise PPC Press Sensor Abnormality.....	40-449
Failure code [DHS9MA] Boom LOWER Press Sensor Abnormality.....	40-452
Failure code [DHSAMA] Swing RH PPC Press Sensor Abnormality .....	40-455
Failure code [DHSBMA] Swing LH PPC Press Sensor Abnormality .....	40-458
Failure code [DHSCMA] Arm Dump PPC Press Sensor Abnormality .....	40-461
Failure code [DHSDMA] Bucket Dump/Heel In PPC Press Sensor Abnormality.....	40-464
Failure code [DHSFMA] Travel Fwd LH PPC Press Sensor Abnormality .....	40-467
Failure code [DHSGMA] Travel Fwd RH PPC Press Sensor Abnormality .....	40-470
Failure code [DHSHMA] Travel Rev LH PPC Press Sensor Abnormality .....	40-473
Failure code [DHSJMA] Travel Rev RH PPC Press Sensor Abnormality .....	40-476
Failure code [DKR0MA] F pump S/P sensor Abnormality.....	40-479
Failure code [DKR1MA] R pump S/P sensor Abnormality .....	40-481
Failure code [DR21KX] Camera 2 Picture Rev. Drive Abnormality .....	40-483
Failure code [DR31KX] Camera 3 Picture Rev. Drive Abnormality .....	40-485
Failure code [DV20KB] Travel Alarm Short Circuit.....	40-487
Failure code [DW43KA] Travel Speed Sol Open Circuit .....	40-489
Failure code [DW43KB] Travel Speed Sol Short Circuit .....	40-491
Failure code [DW45KA] Swing holding brake Sol Open Circuit.....	40-493
Failure code [DW45KB] Swing holding brake Sol Short Circuit .....	40-496
Failure code [DW91KA] Travel Junction Sol Open Circuit .....	40-499
Failure code [DW91KB] Travel Junction Sol Short Circuit.....	40-501
Failure code [DWA2KA] Attachment Sol Open Circuit.....	40-503
Failure code [DWA2KB] Attachment Sol Short Circuit.....	40-505
Failure code [DWK0KA] 2-Stage Relief Sol Open Circuit .....	40-507
Failure code [DWK0KB] 2-stage Relief Sol Short Circuit.....	40-509
Failure code [DWK2KA] Variable Back Press Sol Open Circuit.....	40-511
Failure code [DWK2KB] Variable Back Press Sol Short Circuit.....	40-513
Failure code [DWK8KA] Swing Press C/O Sol Open Circuit .....	40-515
Failure code [DWK8KB] Swing Press C/O Sol Short Circuit .....	40-517
Failure code [DXA8KA] PC-EPC (F) Sol Open Circuit.....	40-519

Failure code [DXA8KB] PC-EPC (F) Sol Short Circuit.....	40-521
Failure code [DXA9KA] PC-EPC (R) Sol Open Circuit .....	40-523
Failure code [DXA9KB] PC-EPC (R) Sol Short Circuit .....	40-525
Failure code [DXE0KA] LS-EPC Sol Open Circuit .....	40-527
Failure code [DXE0KB] LS-EPC Sol Short Circuit .....	40-529
Failure code [DXE4KA] Attachment Flow EPC Open Circuit .....	40-531
Failure code [DXE4KB] Attachment Flow EPC Short Circuit.....	40-533
Failure code [DXE5KA] Merge-divide Main Sol Open Circuit.....	40-535
Failure code [DXE5KB] Merge-divide Main Sol Short Circuit .....	40-537
Failure code [DXE6KA] Merge-divide LS Sol Open Circuit .....	40-539
Failure code [DXE6KB] Merge-divide LS Sol Short Circuit .....	40-541
Failure code [DY20KA] Wiper Working Abnormality .....	40-543
Failure code [DY20MA] Wiper Parking Abnormality.....	40-545
Failure code [DY2CKB] Washer Drive Short Circuit.....	40-547
Failure code [DY2DKB] Wiper Drive (Fwd) Short Circuit .....	40-549
Failure code [DY2EKB] Wiper Drive (Rev) Short Circuit.....	40-551
Troubleshooting of electrical system (E-mode) .....	40-553
E-1 Engine does not start (Engine does not crank).....	40-553
E-2 Manual preheating system does not work.....	40-559
E-3 Automatic preheating system does not work.....	40-562
E-4 Preheating monitor does not light up when preheater is operated .....	40-564
E-5 When starting switch is turned to ON position, machine monitor displays nothing.....	40-566
E-6 When starting switch is turned to ON position (before starting engine), engine oil level monitor lights up in yellow.....	40-569
E-7 When starting switch is turned to ON position (before starting engine), radiator coolant level monitor lights up in yellow .....	40-570
E-8 Coolant temperature monitor lights up in white while engine is running .....	40-571
E-9 Hydraulic oil temperature monitor lights up in white while engine is running .....	40-572
E-10 Charge level monitor lights up while engine is running .....	40-573
E-11 Fuel level monitor lights up in red while engine is running.....	40-574
E-12 Air cleaner clogging monitor lights up in yellow while engine is running .....	40-575
E-13 Water separator monitor lights up while engine is running .....	40-576
E-14 Coolant temperature monitor lights up in red while engine is running.....	40-577
E-15 Hydraulic oil temperature monitor lights up in red while engine is running .....	40-578
E-16 Engine oil pressure monitor lights up in red while engine is running .....	40-579
E-17 Fuel gauge indicates either full or empty and does not move.....	40-580
E-18 Fuel gauge indicates incorrect amount (indicates neither full nor empty).....	40-581
E-19 Coolant temperature gauge indicates either Min. or Max. and does not move .....	40-582
E-20 Coolant temperature gauge indicates incorrect temperature (indicates neither Min. nor Max.) .....	40-583
E-21 Hydraulic oil temperature gauge indicates either Min. or Max. and does not move .....	40-584
E-22 Hydraulic oil temperature gauge indicates incorrect temperature (indicates neither Min. nor Max.) .....	40-586
E-23 Content of display on machine monitor is different from that of actual machine .....	40-587
E-24 Machine monitor does not display some items .....	40-588
E-25 Function switch does not work.....	40-589
E-26 Automatic preheating system does not work (In cold season).....	40-590
E-27 Auto-deceleration monitor does not light up or does not go out when auto-deceleration switch is operated .....	40-591
E-28 Auto-deceleration is not actuated or canceled when lever is operated .....	40-592
E-29 Working mode selection screen is not displayed when working mode switch is operated .....	40-593
E-30 Engine or hydraulic pump setting does not change when working mode is changed.....	40-594
E-31 Travel speed monitor does not change when travel speed switch is operated .....	40-595
E-32 Travel speed does not change while travel speed selection is changed.....	40-596
E-33 Alarm buzzer does not stop sounding.....	40-597

E-35 Service mode cannot be selected .....	40-599
E-36 Any of work equipment, swing and travel does not work.....	40-600
E-37 Any of work equipment, swing and travel cannot be locked .....	40-602
E-38 Machine cannot swing while swing brake cancel switch is canceled .....	40-603
E-39 Swing brake does not operate while swing brake cancel switch is locked .....	40-605
E-40 One-touch power maximizing function does not work or monitor is not displayed .....	40-607
E-41 One-touch power maximizing function cannot be canceled .....	40-609
E-42 Travel alarm does not sound when machine travels.....	40-610
E-43 Alarm does not stop sounding while machine is stopped.....	40-611
E-44 Horn does not sound .....	40-612
E-45 Horn does not stop sounding.....	40-614
E-46 Wiper monitor does not light up or go out when wiper switch is operated .....	40-615
E-47 Wiper does not operate when wiper switch is operated .....	40-616
E-48 Window washer does not operate when window washer switch is operated.....	40-618
E-49 BOOM LOWER indication is not displayed properly with monitoring function .....	40-619
E-50 ARM DUMP indication is not displayed properly with monitoring function .....	40-620
E-51 ARM IN indication is not displayed properly with monitoring function .....	40-621
E-52 BOOM RAISE indication is not displayed properly with monitoring function .....	40-622
E-53 BUCKET Curl/Heel Out indication is not displayed properly with monitoring function.....	40-623
E-54 BUCKET Dump/Heel In indication is not displayed properly with monitoring function .....	40-624
E-55 SWING indication is not displayed properly with monitoring function .....	40-625
E-56 TRAVEL indication is not displayed properly with monitoring function.....	40-626
E-57 Service is not displayed properly with monitoring function .....	40-627
E-58 Attachment hydraulic circuit cannot be changed.....	40-630
E-59 KOMTRAX system does not operate normally .....	40-631
No Code, Short or open in attachment solenoid System (E-mode).....	40-632-1
Electrical circuit diagram for attachment solenoid system.....	40-632-3
Open in cab tilt system.....	40-632-4
Electrical circuit diagram for cab tilt system.....	40-632-5
Troubleshooting of hydraulic and mechanical system (H-mode).....	40-633
Information described in troubleshooting table (H-mode) .....	40-633
System chart for hydraulic system .....	40-634
Failure mode and cause table .....	40-636
H-1 All of work equipment, swing and travel operation lacks speed or power .....	40-644
H-2 Engine speed drops significantly or engine stalls .....	40-647
H-3 All work equipment, swing and travel does not work .....	40-650
H-4 Unusual sound is heard from around hydraulic pump .....	40-651
H-5 Fine control performance or response is poor .....	40-652
H-6 Boom speed or power is low .....	40-654
H-7 Arm speed or power is low .....	40-658
H-8 Bucket speed or power is low .....	40-663
H-9 Work equipment does not move in single operation.....	40-666
H-10 Hydraulic drift of boom is large .....	40-667
H-11 Hydraulic drift of arm is large .....	40-668
H-12 Hydraulic drift of bucket is large .....	40-669
H-13 Time lag of work equipment is large .....	40-670
H-14 When part of work equipment is relieved singly, other parts of work equipment move .....	40-672
H-15 One-touch power maximizing function does not operate .....	40-673
H-16 In combined operation of work equipment, equipment having heavier load moves slower.....	40-674
H-17 In combined operations of swing and boom RAISE, boom rising speed is low.....	40-675
H-18 In combined operations of swing and travel, travel speed drops largely .....	40-676
H-19 Machine does not travel straight.....	40-677
H-20 Travel speed is slow .....	40-680
H-21 Machine is hard to steer or travel power is low .....	40-682
H-22 Travel speed does not change, or travel speed is too slow or fast .....	40-685
H-23 One of tracks does not run .....	40-686

H-24 Upper structure does not swing to the right or left .....	40-688
H-25 Upper structure swing only to the right or left .....	40-689
H-26 Swing acceleration or swing speed is low in both directions (right and left) .....	40-690
H-27 Swing acceleration performance is poor or swing speed is slow in only one direction.....	40-691
H-28 Upper structure overruns excessively when it stops swinging (both right and left).....	40-692
H-29 Upper structure overruns excessively when it stops swinging (either right or left) .....	40-693
H-30 Shock is large when upper structure stops swinging.....	40-694
H-31 Large unusual noise is heard when upper structure stops swinging .....	40-695
H-32 Swing drift on a slope is large while swing holding brake is applied .....	40-696
H-33 Swing drift on a slope is large while swing holding brake is released.....	40-697
H-34 Attachment hydraulic circuit cannot be changed while attachment is installed.....	40-698
H-35 Oil flow in attachment circuit cannot be controlled .....	40-699
Troubleshooting of engine (S-mode).....	40-700
Information mentioned in troubleshooting table (S mode).....	40-700
S-1 When starting switch is turned to START position, engine does not crank .....	40-701
S-2 Engine cranks but no exhaust smoke comes out.....	40-702
S-3 Fuel is being injected but engine does not start (misfiring: engine cranks but does not start).....	40-703
S-4 Engine startability is poor .....	40-704
S-5 Engine does not pick up smoothly .....	40-706
S-6 Engine stops during operation .....	40-708
S-7 Engine runs rough or is unstable .....	40-710
S-8 Engine lacks power .....	40-711
S-9 Exhaust smoke is black (KDPF clogs up early) .....	40-713
S-10 Engine oil consumption is excessive .....	40-715
S-11 Engine oil becomes contaminated early.....	40-716
S-12 Fuel consumption is excessive .....	40-717
S-13 Oil is in coolant (or coolant spurts or coolant level goes down).....	40-718
S-14 Engine oil pressure drops .....	40-719
S-15 Fuel is contaminated in engine oil .....	40-720
S-16 Coolant is contaminated in engine oil (Oil becomes cloudy white).....	40-721
S-17 Coolant temperature rises too high (overheating) .....	40-722
S-18 Unusual noise is heard .....	40-723
S-19 Vibration is excessive .....	40-724
S-20 Air cannot be bled from fuel circuit .....	40-725
S-21 Active regeneration is executed frequently .....	40-726
S-22 Active regeneration takes time.....	40-727
S-23 White smoke is exhausted during active regeneration .....	40-728
60 Maintenance standard.....	60-1
Table of contents .....	60-2
Engine and cooling system.....	60-3
Engine mount .....	60-3
Cooling system.....	60-4
Power train.....	60-5
Swing circle .....	60-5
Swing machinery .....	60-6
Final drive .....	60-8
Sprocket.....	60-10
Undercarriage and frame.....	60-12
Track frame and idler cushion .....	60-12
Idler .....	60-14
Track roller .....	60-16
Carrier roller .....	60-17
Track shoe .....	60-18
Hydraulic system .....	60-24
Hydraulic tank.....	60-24

Main pump .....	60-25
Control valve .....	60-26
Swing motor .....	60-36
Travel motor .....	60-38
Work equipment and swing PPC valve .....	60-41
Travel PPC valve .....	60-44
1st-line attachment PPC valve (with EPC valve) .....	60-47
2nd-line attachment PPC valve .....	60-50
Solenoid valve .....	60-52
Attachment circuit selector valve (for high-pressure circuit) .....	60-53
Attachment circuit selector valve (for low-pressure circuit) .....	60-54
Center swivel joint .....	60-55
Work equipment .....	60-56
Work equipment .....	60-56
Boom cylinder (large diameter piston) .....	60-65
Arm cylinder .....	60-66
Bucket cylinder .....	60-67
80 Appendix .....	80-1
Table of contents .....	80-2
Air conditioner components .....	80-3
Precautions for refrigerant .....	80-3
Air conditioner component .....	80-4
Configuration and function of refrigeration cycle .....	80-7
Outline of refrigeration cycle .....	80-8
Air conditioner unit .....	80-10
Dual pressure switch .....	80-17
Air conditioner controller .....	80-18
Compressor .....	80-19
Air conditioner condenser .....	80-20
Sunlight sensor .....	80-22
Outer temperature sensor (outside air temperature sensor) .....	80-23
Procedure for testing and troubleshooting .....	80-24
Circuit diagram and arrangement of connector pins .....	80-26
System diagram .....	80-28
Input and output signals of the air conditioner controller .....	80-29
Parts and connectors layout .....	80-31
Testing air leakage (duct) .....	80-35
Testing with self-diagnosis function .....	80-38
Testing vent (mode) changeover .....	80-40
Testing FRESH/RECIRC air changeover .....	80-42
Testing sunlight sensor .....	80-43
Testing (dual) pressure switch for refrigerant .....	80-44
Testing relays .....	80-45
Troubleshooting chart 1 .....	80-46
Troubleshooting chart 2 .....	80-47
Information in troubleshooting table .....	80-50
Failure code list related to air conditioner .....	80-51
Failure code [879AKA] A/C Inner Sensor Open Circuit .....	80-52
Failure code [879AKB] A/C Inner Sensor Short Circuit .....	80-53
Failure code [879BKA] A/C Outer sensor Open Circuit .....	80-54
Failure code [879BKB] A/C Outer sensor Short Circuit .....	80-56
Failure code [879CKA] Ventilating Sensor Open Circuit .....	80-58
Failure code [879CKB] Ventilating Sensor Short Circuit .....	80-59
Failure code [879DKZ] Sunlight sensor Open or Short Circuit .....	80-60
Failure code [879EMC] Ventilation Damper Abnormality .....	80-62
Failure code [879FMC] Air Mix Damper Abnormality .....	80-63
Failure code [879GKX] Refrigerant Abnormality .....	80-64
A-1 Troubleshooting for power supply system (Air conditioner does not operate) .....	80-65


A-2 Troubleshooting of compressor system (Air is not cooled).....	80-67
A-3 Troubleshooting for blower motor system (No air comes out or air flow is abnormal) .....	80-70
A-1 Troubleshooting for power supply system (Air conditioner does not operate) .....	80-65
A-2 Troubleshooting of compressor system (Air is not cooled).....	80-67
A-3 Troubleshooting for blower motor system (No air comes out or air flow is abnormal) .....	80-70
A-4 Troubleshooting for FRESH/RECIRC air changeover .....	80-72
Troubleshooting with gauge pressure.....	80-74
Connection of service tool.....	80-77
Precautions for disconnecting and connecting air conditioner piping .....	80-79
Handling of compressor oil.....	80-81
Desiccant replacement .....	80-83
90 Diagrams and drawings.....	90-1
Table of contents .....	90-2
Hydraulic circuit diagram .....	90-3
Symbols in hydraulic circuit diagram .....	90-3
Hydraulic circuit diagram.....	90-7
Electric circuit diagram .....	90-9
Symbols in electric circuit diagram .....	90-9
Electric circuit diagram.....	90-13
Electric circuit diagram for air conditioner unit .....	90-25

## MEMORANDUM


## Foreword, safety and general information (ALL-0370-001-A-00-A)

### Important safety notice (ALL-1120-012-A-01-A)

(Rev. 2012/01)

- Appropriate servicing and repair are extremely important to ensure safe operation of the machine. The shop manual describes the effective and safe servicing and repair methods recommended by Komatsu. Some of these methods require the use of the special tools designed by Komatsu for the specific purpose.
- The symbol mark  is used for such matters that require special cautions during the work. The work indicated by the caution mark should be performed according to the instructions with special attention to the cautions. Should hazardous situation occur or be anticipated during such work, be sure to keep safe first and take every necessary measure.

#### General precautions

 **Inappropriate handling causes an extreme danger. Read and understand what is described in the operation and maintenance manual before operating the machine. Read and understand what is described in this manual before starting the work.**

- Before performing any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the operation and maintenance manual.
- Locate a place in the repair workshop to keep the tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- When performing any work, always wear the safety shoes and helmet. Do not wear loose work cloths, or clothes with buttons missing.
  1. Always wear the protective eyeglasses when hitting parts with a hammer.
  2. Always wear the protective eyeglasses when grinding parts with a grinder, etc.
- When performing any work with two or more workers, always agree on the working procedure before starting. While working, always keep conversations of the work between your fellow workers and your self on any step of the work. During the work, hang the warning tag of "UNDER WORKING" in the operator's compartment.
- Only qualified workers must perform the work and operation which require license or qualification.
- Keep the tools in good condition. And learn the correct way to use the tools, and use the proper ones among them. Before starting the work, thoroughly check the tools, forklift truck, service car, etc.
- If welding repairs is required, always have a trained and experienced welder with good

knowledge of welding perform the work. When performing welding work, always wear welding gloves, apron, shielding goggles, cap, etc.

- Before starting work, warm up your body thoroughly to start work under good condition.
- Avoid continuing work for long hours and take rests with proper intervals to keep your body in good condition. Take a rest in a specified safe place.

#### Safety points

1	Good arrangement
2	Correct work clothes
3	Observance of work standard
4	Practice of making and checking signals
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

#### Preparation

- Before adding oil or making any repairs, place the machine on a firm and level ground, and apply the parking brake and chock the wheels or tracks to prevent the machine from moving.
- Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If it is not possible to lower the equipment to the ground, insert the lock pin or use blocks to prevent the work equipment from falling. And be sure to lock all the work equipment control levers and hang a warning tag on them.
- When performing the disassembling or assembling work, support the machine securely with blocks, jacks, or stands before starting the work.
- Remove all of mud and oil from the steps or other places used to get on and off the machine completely. Always use the handrails, ladders of



steps when getting on or off the machine. Never jump on or off the machine. When the scaffold is not provided, use steps or stepladder to secure your footing.

#### **Precautions during work**

- For the machine equipped with the battery disconnect switch, check that the system operating lamp is turned off before starting the work. Then, turn the battery disconnect switch to the OFF (○) position and remove the switch key. For the machine not equipped with the battery disconnect switch, remove the cable from the battery before starting the work. Be sure to remove the negative end (-) of the battery cable first.
- Release the remaining pressure in the circuits completely before the work when the parts in the circuits of oil, fuel, coolant and air are disconnected or removed. When the cap of the oil filter, drain plug or oil pressure pickup plug is removed, loose them slowly to prevent the oil from spurting out.
- When removing or installing the checking plug or the piping in the fuel circuit, wait 30 seconds or longer after the engine is shut down and start the work after the remaining pressure is released from the fuel circuit.
- Immediately after the engine is shut down, the coolant and oil in the circuits are hot. Be careful not to get scalded by the hot coolant and oil. Start the work after checking that the coolant and oil are cooled down sufficiently.
- Start the work after the engine is shut down. Be sure to shut down the engine when working on or around the rotating parts in particular. When checking the machine without shutting down the engine (measuring oil pressure, engine speed, oil or coolant temperature), take extreme care not to get caught in the rotating parts or the working equipment.
- The hoist or crane must be used to sling the components weighing 25 kg or heavier. Check the slings (wire rope, nylon sling, chain and hook) for damage before the work. Use the slings with ample capacity and install them to the proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- When removing the part which is under internal pressure or reaction force of the spring, always leave two bolts in diagonal positions. Loosen those two bolts gradually and alternately and release the pressure, then, remove the part.
- When removing the part, be careful not to break or damage the electrical wiring. The damaged wiring may cause electrical fires.
- When removing piping, prevent the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it off immediately. Fuel or oil on the floor can cause you to slip and can even cause fires.
- As a general rule, do not use gasoline to wash parts. Do not use gasoline to clean the electrical parts, in particular.
- Reinstall the parts removed to their original places. Replace the damaged parts and the parts which must not be used with new ones. When installing the hoses and wiring harnesses, be careful that they are not damaged by contacting with other parts when the machine is operated.
- When connecting the high pressure hoses and tubes, make sure that they are not twisted. The damaged high pressure hoses and tubes are very dangerous when they are installed. So, be extremely careful when connecting the high pressure pipings. In addition, check that their connections are correct.
- When assembling or installing the parts, be sure to tighten the bolts to the specified torque. When installing the protective parts such as guards, or the parts which vibrate violently or rotate at high speeds, be sure to check that they are installed correctly.
- When aligning two holes, never insert your fingers or hand into the holes. Align the holes with care so that your fingers are not caught in the hole.
- When measuring hydraulic pressure, check that the measuring tools are correctly installed.
- Pay attention to safety when removing and installing the tracks of the track type machines. When removing the track, it separates suddenly. The workers should not stand at either end of the track.
- If the engine is operated for a long time in a closed place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate the place well.

#### **Precautions for slinging work and making signals**

- Only one appointed worker must make signals and co-worker must communicate with each other frequently. The appointed signaler must make specified signals clearly at the place where the signaler is well seen from the operator's seat and where the signaler can see the working condition easily. The signaler must always stand in front of the load and guide the operator safely.
  1. Do not stand under the load.
  2. Do not step on the load.
- Check the slings before starting sling work.


## 00 Index and foreword

### Foreword, safety and general information

- Keep putting on the gloves during sling work. (Put on the leather gloves, if available.)
- Measure the weight of the load by the eye and check its center of gravity.
- Use the proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- Do not sling a load with one wire rope only. If do so, the load may rotate or the sling gets loose and the sling may slip off. Install two or more wire ropes symmetrically.

**⚠ Slinging with one rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original slinging position on the load, which can result in a dangerous accident.**


- Hanging angle must be 60 degrees or smaller as a rule.
- When hanging a heavy load (25kg or heavier), the hanging angle of the rope must be narrower than that of the hook.
- ★ When slinging a load with two ropes or more, the larger the hanging angle is, the larger the tension of each rope. The figure below shows the variation of allowable load in kN {kg} when hoisting is made with two ropes, each of which is allowed to sling up to 9.8 kN {1000kg} a load vertically, at various hanging angles. When the two ropes sling a load vertically, up to 19.6 kN {2000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1000 kg} when the two ropes make a hanging angle of 120 degrees. If the two ropes sling a 19.6 kN {2000 kg} load at a hanging angle of 150 degrees, each rope is subjected to a force as large as 39.2 kN {4000 kg}.

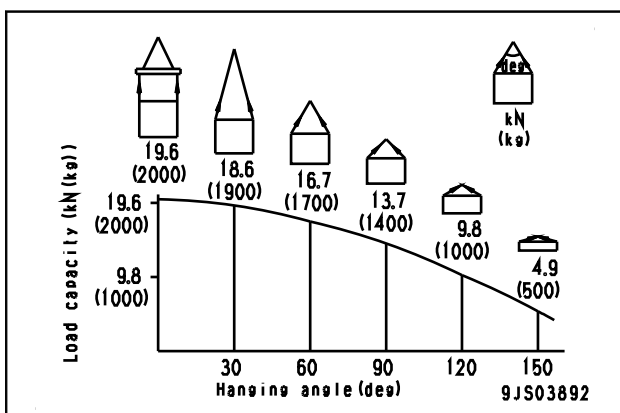

- When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.

- Use the specified eye bolts and fix wire ropes, chains, etc. to them with shackles, etc.
- Apply wire ropes to the middle portion of the hook.

★ Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle part.

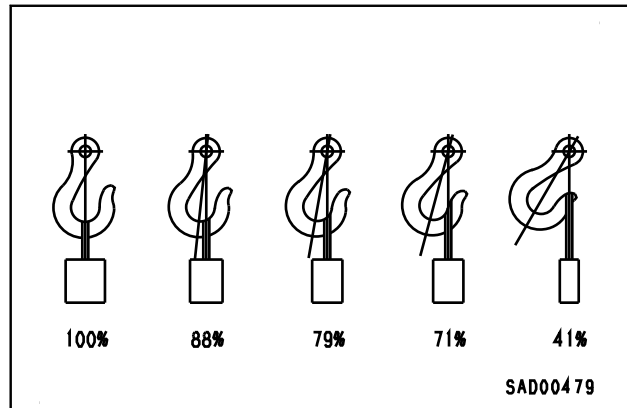


- Do not use twisted or kinked wire ropes.
- When slinging up a load, observe the following.
  1. Wind up the rope slowly until the wire rope tensions. When putting your hands on the wire ropes, do not grasp them but press them down from above. If you grasp them, your fingers may be caught.
  2. After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.
  3. If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
  4. Do not lift up the load at an angle.
- When lowering a load, pay attention to the following.
  1. When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
  2. Check that the load is stable, and then remove the sling.
  3. Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

#### Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

### Precautions for using overhead traveling crane

**⚠ The hoist or crane must be used to sling the components weighing 25 kg or heavier. A part weighing 25 kg or heavier in "disassembly and assembly" section is indicated with the symbol of .**

- Before starting work, check the wire ropes, brake, clutch, controller, rails, over winding prevention device, ground fault circuit interrupter for electric shock prevention, crane collision prevention device, and energizing warning lamp, and check the following safety items.
- Observe the signals for sling work.
- Operate the hoist at a safe place.
- Be sure to check the directions of the direction indication plate (north, south, east and west) and the operating button.
- Do not sling a load at an angle. Do not move the crane while the slung load is swinging.
- Do not raise or lower a load while the crane is moving longitudinally or laterally.
- Do not drag a sling.
- When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- Consider the travel route in advance and lift up a load to a safe height.
- Place the control switch in a position where it will not be an obstacle to work and passage.
- After operating the hoist, do not swing the control switch.
- Remember the position of the main switch so that you can turn off the power immediately in an emergency.
- Shut down the main switch when the hoist stops because of a blackout. When turning on a switch which is turned OFF by the ground fault circuit interrupter for electric shock prevention, check that the devices related to that switch are not in operating condition.
- If you find an obstacle around the hoist, stop the operation.
- After finishing the work, stop the hoist at the specified position and raise the hook to at least two meters above the floor. Do not leave the sling attached to the hook.

### Selecting wire ropes

- Select adequate ropes depending on the weight of the parts to be hoisted, referring to the table below

Wire ropes (standard "Z" twist ropes without galvanizing) (JIS G3525, Type 6x37-A)

Nominal diameter of rope	Allowable load	
	kN	ton
10	8.8	0.9

Nominal diameter of rope	Allowable load	
	kN	ton
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is calculated as one sixth of the breaking load of the rope to be used (safety coefficient: 6).

### Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

#### Disconnection

**⚠ When replacing the air conditioner unit, air conditioner compressor, condenser or receiver drier, etc., collect the refrigerant (air conditioner gas: R134a) from the air conditioner circuit before disconnecting the air conditioner hoses.**

- ★ Ask a qualified person for collecting, adding and filling operations of the refrigerant (air conditioner gas: R134a).
- ★ Never release the refrigerant (air conditioner gas: R134a) to the atmosphere.

**⚠ If refrigerant gas (air conditioner gas: R134a) gets in your eyes, you may lose your sight. And if it touches your skin, you may suffer from frostbite. Put on protective eyeglasses, gloves and working cloth with long sleeves while collecting the refrigerant or filling the air conditioner circuit with the refrigerant.**

- When loosening the nuts fixing air conditioner hoses and tubes, be sure to use two wrenches; use one wrench to fix and use the other one to loosen the nut.

#### Connection

- When installing the hose for the air conditioner circuit, take care not to allow invasion of dirt, dusts and water into the hose.
- Check that the O-rings are fitted to the joints when connecting the air conditioner piping.
- Once an O-ring is used, it is deformed and deteriorated. Accordingly, do not reuse it.
- When removing the O-rings, use a soft tool so that the piping is not damaged.



## 00 Index and foreword

### Foreword, safety and general information

- Check that the O-ring is not damaged or deteriorated.
- Apply compressor oil for refrigerant (R134a) to the O-ring.
  - ★ However, do not apply oil to the threaded portion of a bolt, nut or union.

Manufacturer	Part name
DENSO	ND-OIL8
VALEO THERMAL SYSTEMS	ZXL100PG (equivalent to PAG46)
SANDEN	SP-10

- When tightening nuts of the air conditioner hoses and tubes, be sure to use two wrenches. Use one wrench to fix and tighten the nut with the other wrench to the specified torque (Use a torque wrench for tightening).
- ★ Example of fitting of O-ring
  - An O-ring is fitted to every joint of the air conditioner piping.

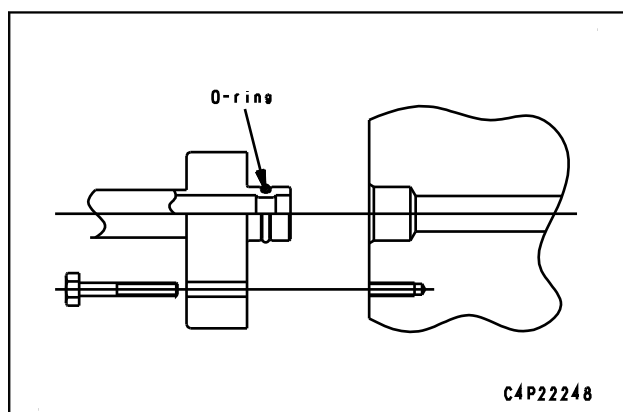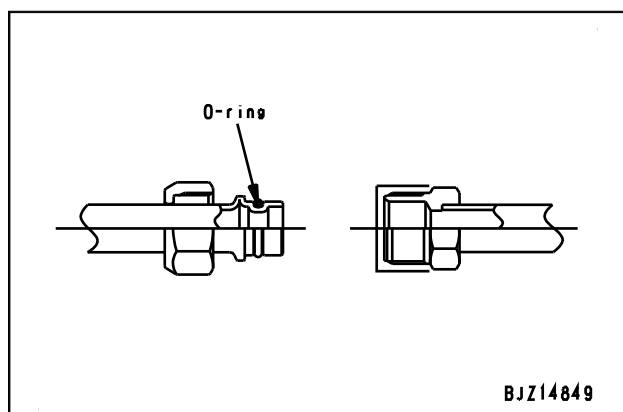

For tightening torques, see "Others",  
"Precautions for disconnection and connection  
of air conditioner piping".

## Fire prevention (ALL-0000-001-K-27-A)

### Action if fire occurs (ALL-0000-17A-K-01-A)

- Turn the starting switch to the OFF position to shutdown the engine.
- Use the handrails and steps to get off the machine.
- Do not jump off the machine. You may fall or suffer serious injury.
- The fumes generated by a fire contain hazardous materials. Avoid inhaling fumes to minimize risks to your health.
- After a fire, there may be harmful compounds left. If it touches your skin it may have a bad effect on your body.

Be sure to wear rubber gloves when handling the materials left after the fire.

The material of the gloves, which is recommended is polychloroprene (Neoprene) or polyvinyl chloride (in the lower temperature environment).

When wearing cotton-work-gloves, wear rubber gloves under them.

### Prevent fire (ALL-0000-17B-K-03-A)


#### • Fire caused by fuel, oil, coolant or window washer fluid

Do not bring any flame or fire close to flammable substances such as fuel, oil, coolant or window washer fluid. There is danger that they may catch fire. Always observe the following.

- Do not smoke or use any flame near fuel or other flammable substances.
- Shut down the engine before adding fuel.
- Do not leave the machine when adding fuel or oil.
- Tighten all the fuel and oil caps securely.
- Be careful not to spill fuel on overheated surfaces or on parts of the electrical system.
- After adding fuel or oil, wipe up any spilled fuel or oil.
- Put greasy rags and other flammable materials into a safe container to maintain safety at the workplace.
- When washing parts with oil, use a non-flammable oil. Do not use diesel oil or gasoline. There is danger that they may catch fire.
- Do not weld or use a cutting torch to cut any pipes or tubes that contain flammable liquids.
- Determine well-ventilated areas for storing oil and fuel. Keep the oil and fuel in the specified place and do not allow unauthorized persons to enter.
- When performing grinding or welding work on the machine, move any flammable materials to a safe place before starting.



9JD01720

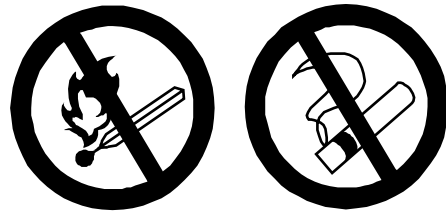

9JD01721

#### • Fire caused by accumulation or attachment of flammable material

- Remove any dry leaves, chips, pieces of paper, coal dust, or any other flammable materials accumulated or attached to or around the engine exhaust manifold, muffler, or battery, or on the undercovers.
- To prevent fires from being caught, remove any flammable materials such as dry leaves, chips, pieces of paper, coal dust, or any other flammable materials accumulated around the cooling system (radiator, oil cooler) or on the undercover.

#### • Fire coming from electric wiring

Short circuits in the electrical system can cause fire. Always observe the following.

- Keep all the electric wiring connections clean and securely tightened.
- Check the wiring every day for looseness or damage. Reconnect any loose connectors or refasten wiring clamps. Repair or replace any damaged wiring.

#### • Fire caused by piping

Check that all the clamps for the hoses and tubes, guards, and cushions are securely fixed in position.

If they are loose, they may vibrate during operation and rub against other parts. There is danger that this may lead to damage to the hoses and cause high-pressure oil to spurt out, leading to fire and serious personal injury or death.

#### • Fire around the machine due to highly heated exhaust gas

This machine is equipped with KDPF (Komatsu Diesel Particulate Filter).


KDPF is a system for purifying soot in exhaust gas. The exhaust gas discharged during the purification process (regeneration) can be higher temperature than that of existing models. Do not bring any flammable material close to the outlet of the exhaust pipe.

- If there are thatched houses, dry leaves or pieces of paper around the job site, make sure the system is set to "Regeneration Disable" before starting operation to prevent fire hazard of highly heated exhaust gas caused by KDPF regeneration. See the operation and maintenance manual for the setting procedure.
- Automatic regeneration is disabled by default for all Log Loader machines. See operation and maintenance manual regarding how to perform regeneration requests.
- **Explosion caused by lighting equipment**
  - When checking fuel, oil, battery electrolyte, or coolant, always use lighting equipment with anti-explosion specifications.
  - When taking the electrical power for the lighting equipment from the machine itself, follow the instructions in the operation and maintenance manual.

### Dispose of waste materials (ALL-0000-99A-K-02-A)

To prevent pollution, pay full attention to the way to dispose of waste materials.

- Always put the oil and coolant drained from the machine in containers. Never drain the oil and coolant directly onto the ground or dump into the sewage system, rivers, the sea, or lakes.
- Observe the related laws and regulations when disposing of harmful objects such as oil, fuel, coolant, solvent, filters, and batteries.

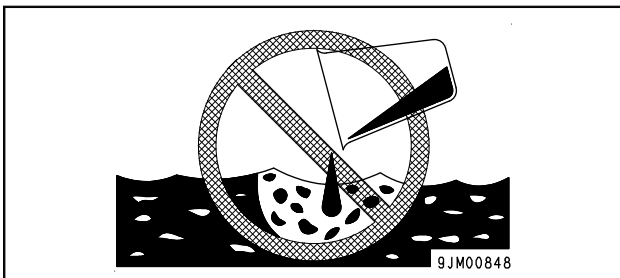

Some kinds of rubber and plastics may produce poisonous gas harmful to human body when they are burned.

- As for rubber, plastics, or parts (hoses, cables, and wiring harnesses, etc.) which contain those materials, ask the industrial waste treatment firms for their disposals in accordance with the local regulations.

## How to read the shop manual (ALL-0320-010-A-01-A)

(Rev. 2012/01)

- Some attachments and optional parts described in this shop manual may not be arranged for certain areas. Contact your Komatsu distributor if one or some of them are required.
- Materials and specifications are subject to change without notice.
- The shop manuals are available for "Machine part" and "Engine part". For the engine, see the shop manual for the same model of the engine as the one which is mounted on the machine.

### Composition of shop manual

- This shop manual describes the technical information required for the services performed in a workshop. The shop manual is divided into the following chapters for the convenience of use.

#### 00. Index and foreword

- This section includes the index, foreword, safety and basic information.

#### 01. Specification

- This section explains the specifications of the machine.

#### 10. Structure and function

- This section explains the structure and function of the machine. The section of "Structure and function" serves not only to give an understanding for the structure of each component, but also serves as reference material for troubleshooting.

#### 20. Standard value table

- The standard values for a new machine and trouble shooting are described. This standard value table is used for testing and adjusting, and determining a failure at troubleshooting.

#### 30. Testing and adjusting

- This section describes the measuring tools and how to measure, and how to adjust various parts. As for the standard value and failure criterion, see the standard value table.

#### 40. Troubleshooting

- This section describes the troubleshooting in a suspected area when a failure occurs and the remedy for the failure. Troubleshooting is described by each failure mode.

#### 50. Disassembly and assembly

- This section explains the procedures for removing, installing, disassembling, and assembling each part or component and the special tools for the works as well as precautions for doing them safely. In addition, tightening torque, and quantity and weight of coating material, oil, grease, and coolant required for the works are also explained.

#### 60. Maintenance standard

- This section describes the maintenance standard values for each component. This section gives the criterion values for each component and required remedy at disassembly or maintenance.

#### 80. Appendix



 
 
- The structure and function, testing and adjusting, and troubleshooting for all of the other components or equipment which can not be separately classified are explained together in the appendix.

#### 90. Diagrams and drawings

- This section gives hydraulic circuit diagrams and electrical circuit diagrams.

### Symbol




Important safety and quality portions are marked with the following symbols so that the shop manual is used practically.

Symbol	Item	Remarks
	Safety	The special safety precautions required for performing work are described.
	Caution	The special technical precautions or other precautions for preserving standards required when performing work are described
	Weight	The weight of part or component and the cautions required when selecting hoisting wire or when working posture is important are described.
	Tightening torque	The tightening torques that require special attention during assembly work are described.

## 00 Index and foreword

### Foreword, safety and general information

---

Symbol	Item	Remarks
	Coat	The places to be coated with adhesives, etc. during assembling are indicated.
	Oil, coolant	The places to which oil is supplied and the quantity of the oil are indicated.
	Drain	The places from which oil is drained and quantity of the oil are indicated.

#### Unit

- In this shop manual, the units are indicated with International System of units (SI).
- For reference, Gravitational System of units which is used to be used is indicated in parentheses of { }.



## Explanation of terms for maintenance standard (ALL-0330-006-A-01-A)

(Rev. 2012/01)

- The chapter of maintenance standard shows judgement criteria to determine the products to be replaced or to be reused. The judgement criteria are described by using the following terms.

### Standard dimension and tolerance

- To be accurate, the finished dimension of a part is slightly different from one to another.
- To specify the finished dimension of a part, a certain dimension is set for the part and an allowable difference from that dimension is indicated.
- The above dimension set is called the "standard dimension" and the range of difference from the standard dimension is called the "tolerance".
- The standard dimension and tolerance are indicated by attaching the symbols of + or - and a number on the right side of the standard dimension.

Example:

Standard dimension	Tolerance
120	-0.022
	-0.126


- The tolerance may be indicated in the text and a table as "standard dimension (upper limit of tolerance/lower limit of tolerance)."  
Example: 120(-0.022/-0.126)
- Usually, the dimension of a hole and the dimension of a shaft to be inserted into the hole are indicated by the same standard dimension and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of dimension of rotating shaft and hole and their related drawing.

Example:

Standard dimension	Tolerance	
	Shaft	Hole
60	-0.030	+0.046
	-0.076	0

### Standard clearance and standard value

- The clearance made when new parts are assembled is called the standard clearance, which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- The values indicating performance and function of new products or equivalent are called the "standard value", which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

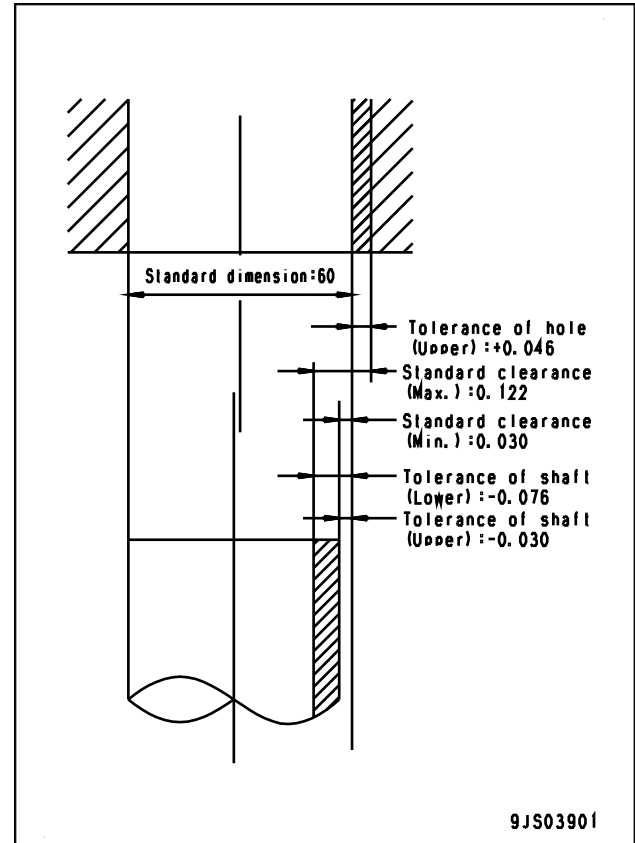

### Standard interference

- When the diameter of a hole of a part shown in the given standard dimension and tolerance table is smaller than that of the shaft to be inserted, the difference between those diameters is called the "interference".
- Subtract the maximum dimension of the hole from the minimum dimension of the shaft and call it (A). Subtract the minimum dimension of the hole from the maximum dimension of the shaft and call it (B). The range between (A) and (B) is the "standard interference".
- After repairing or replacing some parts, measure the dimension of their hole and shaft and check that the interference is in the standard range.

### Repair limit and allowable value or allowable dimension

- The dimensions of parts change because of the wear or deformation while they are used. When the dimension changes exceeding certain value, the parts can not be used any longer. This value is called "repair limit".
- If a part is worn to the repair limit, it must be replaced or repaired.

- The performance and function of the products lower while they are used. When the value of the performance and function lowers exceeding a certain limit and it influences the operation etc., this value is called the allowable value or allowable dimension.
- A product whose dimension is out of the allowable value, must be repaired. However, since the allowable values are generally estimated through various tests or experiences in most cases, the judgement must be made in consideration of the operating condition and customer's requirement.

#### **Allowable clearance**

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the "allowable clearance".
- If the clearance between the parts exceeds the allowable clearance, they must be replaced or repaired.

#### **Allowable interference**

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the "allowable interference".
- The allowable interference shows the repair limit of the part of smaller tolerance.
- The parts whose interferences are out of the allowable interference must be replaced or repaired.

## Handling equipment of fuel system devices (PC-AD00-2A4-K-00-A)

(Rev. 2012/01)

- The common rail fuel injection system (CRI) consists of more precise parts than the parts used in the conventional fuel injection pump and nozzle. If foreign material enters this system, it may cause a failure. Use special care to prevent entry of the foreign material when servicing the fuel system.

### Use care for working environment

- Avoid filter change or repairing the machine in rain or high winds, or at places where there is a lot of dust.

### Sealing openings

- Plug the pipes and the openings of the components which are removed with the caps, tapes, vinyl bags, etc. to prevent foreign material from entering. Never perform repair works under the condition that the openings are left as they are or plugged with cloths as foreign material may enter or environment may be polluted by the oil leaked. Do not discard the waste oil somewhere or other. Hand it over to your customer for disposal, or dispose it by yourself.

### How to clean parts when dirt is stuck

- If any dirt or dust sticks the parts of the fuel system, clean it off thoroughly with clean fuel.

### Precautions for replacing fuel filter cartridge

- Be sure to use the Komatsu genuine fuel filter cartridge.
- The common rail fuel injection system (CRI) consists of more precise parts than the parts used in the conventional fuel injection pump and nozzle. In order to prevent foreign material from entering this system, the filter employs a specially high performance of filter element. If a filter element other than the genuine one is used, the fuel system may have a failure. Accordingly, never use such a filter element.

## Handling of intake system parts (PC220-A900-2A4-K-00-A)

(Rev.2012/01)

- The Komatsu Variable Geometry Turbocharger (KVGT) consists of more precise parts (variable mechanism) than the parts used in the conventional turbocharger. If foreign material enters this system, it may cause a failure. Use special care to prevent entry of the foreign material when servicing the air intake system.

### **Be careful of working environment**

- Avoid the repair work of the machine in rain or strong wind or at the places where there is a lot of dust.

### **Sealing openings**

- Plug the pipes and the openings of the components which are removed, with the caps, tapes, vinyl bags, etc. to prevent foreign material from entering. Never perform repair works under the condition that the openings are left open or plugged with rag since foreign material may enter.

## Handling of hydraulic equipment (ALL-C000-2A4-P-01-A)

(Rev. 2012/01)


- With the increase in pressure and precision of the hydraulic components, the most common cause of a failure is dirt (foreign material) in the hydraulic circuit. Therefore, the special care must be taken when adding hydraulic oil, or when disassembling or assembling the hydraulic components.

### Be careful of working environment

- Avoid adding hydraulic oil, replacing filters, or repairing the machine in rain or high winds, or at places where there is a lot of dust.


### Disassembly and maintenance work in the field

- When disassembly or maintenance work of the hydraulic is performed in the field, there is danger of dust entering the components. It is also difficult to check the performance of the components after repairs, so it is desirable to use the component exchange service. The disassembly and assembly of the hydraulic components must be performed in the specially arranged dustproof workshop and the performance test of the components must be performed with the special testing equipment.

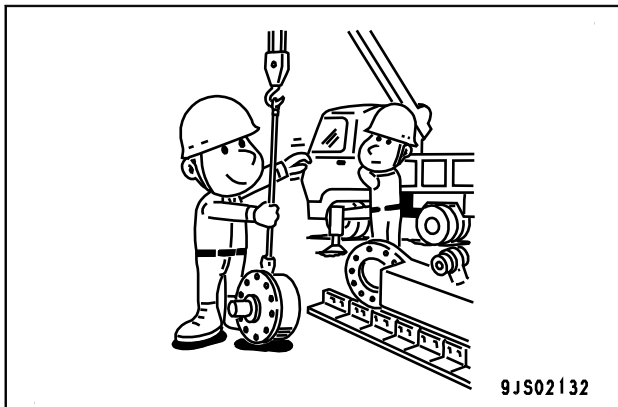


### Sealing openings

- Plug the pipes and the openings of the components which are removed with the caps, tapes, vinyl bags, etc. to prevent foreign material from entering. Never leave the openings of the pipes and hoses without being covered or plugged with cloth as foreign material may enter them or environment may be polluted by the oil leaked. Do not discard the waste oil somewhere or other. Hand it over to your customer for disposal, or dispose it by yourself.

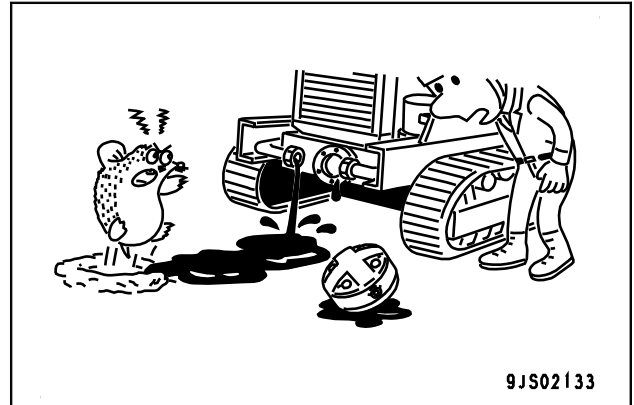

### Preventing intrusion of foreign materials during refilling operations.

- Care must be taken when adding hydraulic oil so that foreign material does not enter. Keep the oil filler port and the area around it, oil supply pump and oil container clean. If an oil cleaning device is used, it is possible to remove the dirt that is collected during storage. It is a surer means.

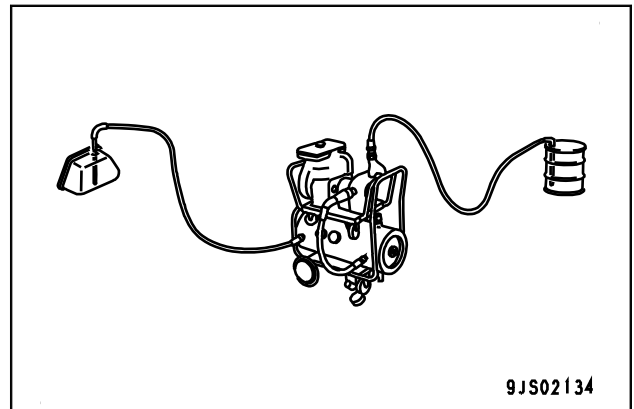


### Replacing hydraulic oil while its temperature is high

- When the hydraulic oil is warm, it flows easily. In addition, sludge can also be drained from the circuit together with the oil. So, it is better to change the hydraulic oil while it is warm. When changing the hydraulic oil, the old oil must be drained as much as possible. (Drain the oil not only from the hydraulic tank, but also from the filter housing and the drain plug hole in the circuit.) If the old oil is left in the system, the contaminant and sludge in the oil mix with the new oil and shorten the life of the new hydraulic oil.


#### Flushing operations

- After disassembling the equipment or when changing the hydraulic oil with new one, flush the system to remove the contaminant and sludge left in the hydraulic circuit as well as the oil which includes them. Normally, flushing is performed twice. Primary flushing is performed by use of the flushing oil and the secondary flushing is performed by use of the specified hydraulic oil.

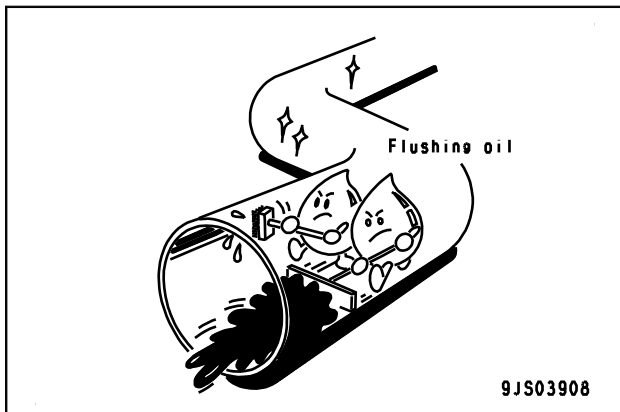

#### Cleaning operations

- After repairing the hydraulic equipment (pump, control valve, etc.) or when the machine is in operation, perform oil cleaning to remove the sludge or contaminant in the hydraulic oil circuit. The oil cleaning equipment can remove the ultra fine (approximately 3  $\mu\text{m}$ ) particles that the filter built in the hydraulic equipment can not remove. So, it is an extremely effective device.

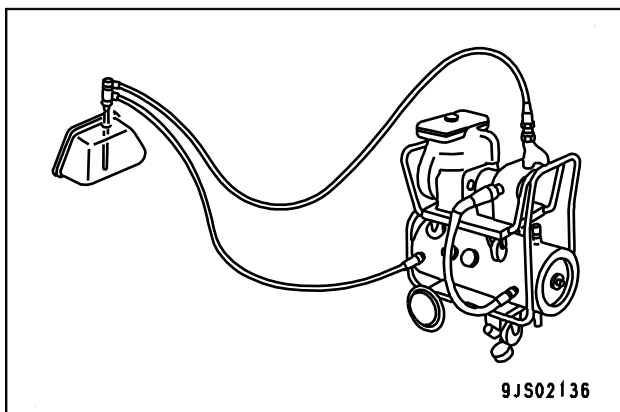

## Method of disconnecting and connecting of push-pull type coupler (ALL-

C930-001-P-00-A)

(Rev. 2012/01)


**⚠ Loosen the oil filler cap of the hydraulic tank slowly to release the remaining pressure in the hydraulic tank.**

**⚠ Even if the remaining pressure is released from the hydraulic tank, some hydraulic oil flows out when the hose is disconnected. Accordingly, prepare an oil container.**

### Type 1 (ALL-C930-925-P-01-A)


#### Disconnection

1. Hold adapter (1) and push hose joint (2) into mating adapter (3). (Fig. 1)
  - ★ It can be pushed in by approximately 3.5mm.
  - ★ Do not hold rubber cap portion (4).
2. While pushing hose joint (2) into adapter (3), push rubber cap (4) against adapter (3) until "click" is heard. (Fig. 2)
3. Hold hose adapter (1) or hose (5) and pull it out. (Fig. 3)
  - ★ Since some hydraulic oil flows out, prepare an oil container.

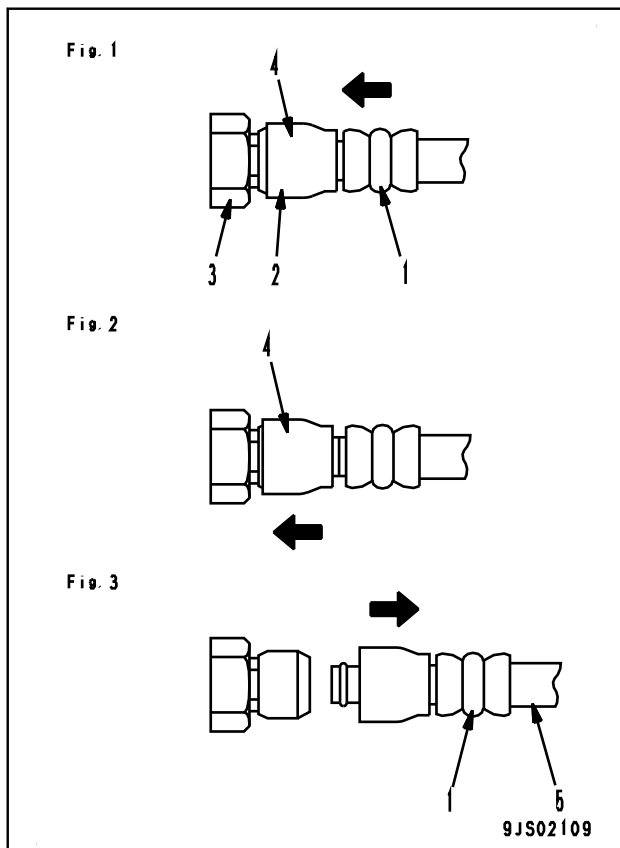

#### Connection


1. Hold hose adapter (1) or hose (5) and insert it in mating adapter (3) aligning them with each other. (Fig. 4)
  - ★ Do not hold rubber cap part (4).
2. After inserting the hose fitting in the adapter on the other side perfectly, pull it back to check the connecting condition. (Fig. 5)
  - ★ When the hose fitting is pulled back, the rubber cap will move toward the hose, however, it is not a problem.

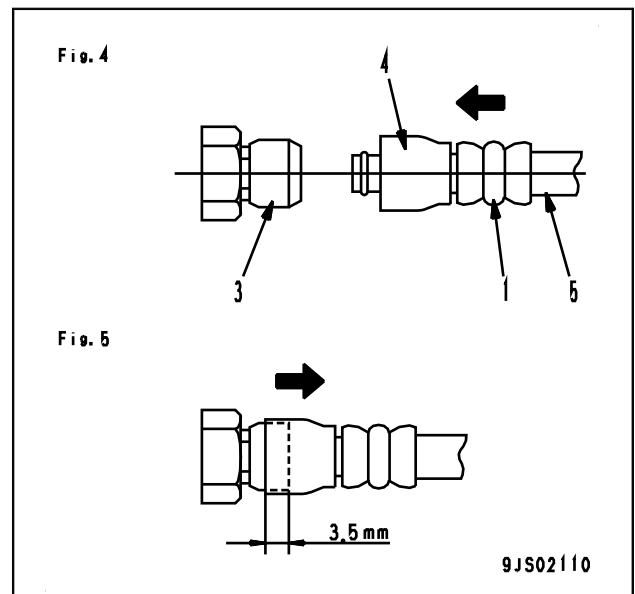

## Type 2 (ALL-C930-925-P-02-A)


### Disconnection

1. While holding the fitting, push body (7) in straight until sliding prevention ring (6) hits contact surface (a) at the hexagonal part on the male side. (Fig. 6)
2. While keeping the condition of Step 1, turn lever (8) to the right (clockwise). (Fig. 7)
3. While keeping the conditions of Steps 1 and 2, pull out whole body (7) to disconnect it. (Fig. 8)

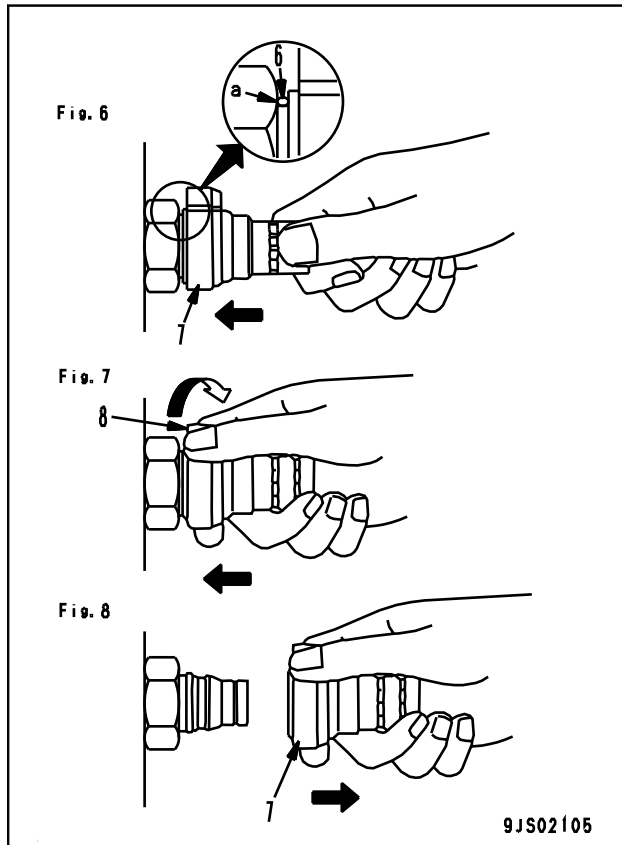

### Connection

1. While holding the fitting, push body (7) in straight until sliding prevention ring (6) hits contact surface (a) at the hexagonal part on the male side to connect it. (Fig. 9)

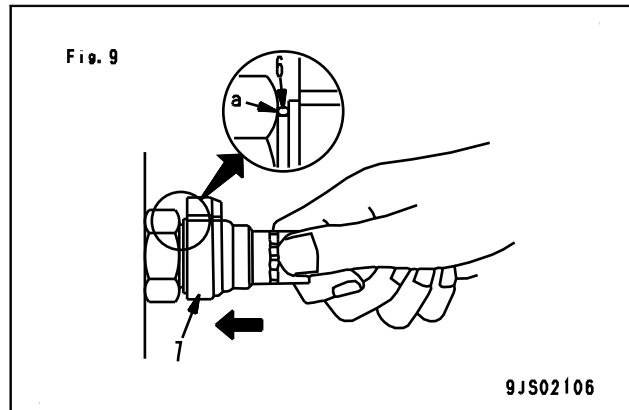




## Type 3 (ALL-C930-925-P-03-A)


### Disconnection

1. While holding the fitting, push body (9) in straight until sliding prevention ring (8) hits contact surface (b) at the hexagonal portion on the male side. (Fig. 10)
2. While keeping the condition of Step 1, push cover (10) straight until it hits contact surface (b) of the hexagonal portion on the male side. (Fig. 11)
3. While keeping the conditions of Steps 1 and 2, pull out whole body (9) to disconnect it. (Fig. 12)

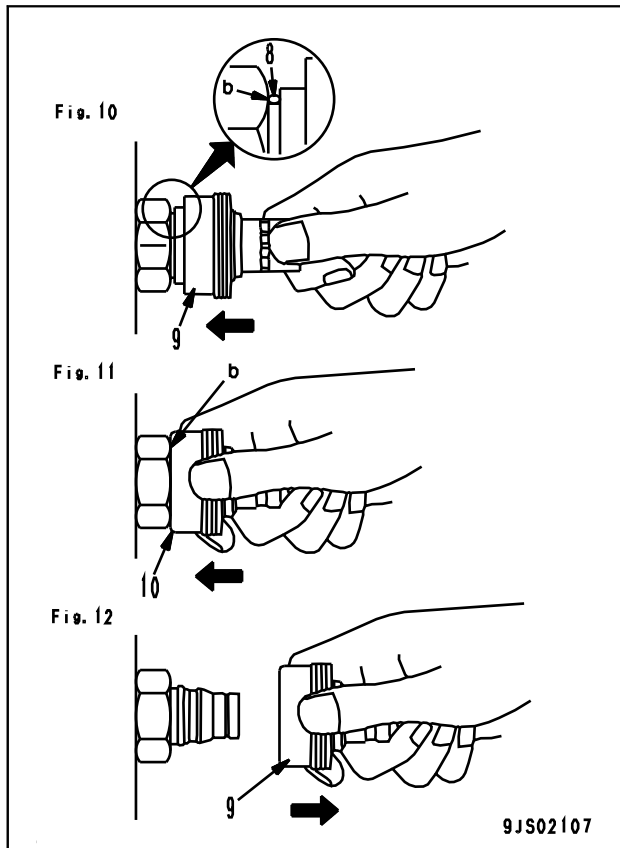

### Connection

1. While holding the fitting, push body (9) in straight until sliding prevention ring (8) hits contact surface (a) at the hexagonal portion on the male side to connect them. (Fig. 13)

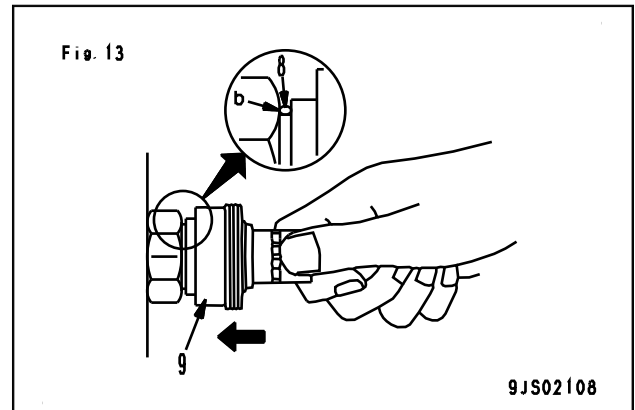

## Handling of electrical equipment (ALL-E000-2A4-P-01-A)


(Rev. 2012/01)

- To maintain the performance of the machine over a long period, and to prevent failures or troubles before they occur, correct "operation", "maintenance and inspection" "troubleshooting", and "repairs" must be performed. This section deals particularly with correct repair procedures for mechatronics components and is aimed at improving the quality of repairs. For this purpose, it describes the working procedures in "Handling of electrical equipment".

### Precautions for handling electric equipment

#### Handling wiring harnesses and connectors


- Wiring harnesses consist of wires connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wires.
- Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling the wiring harnesses.

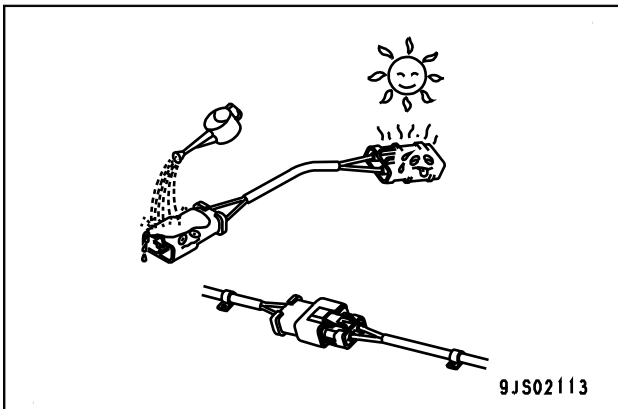

#### Main failures occurring in wiring harness


##### Defective contact of connectors (defective contact between male and female connectors)

- Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of connectors are deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces. The corroded or oxidized contact surfaces may become shiny again (and contact may become normal) by connecting and disconnecting the connectors approximately ten times.

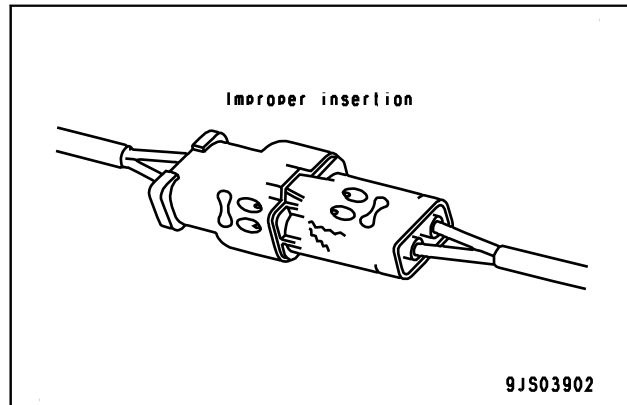


##### Defective crimping or soldering of connectors

- The pins of the male and female connectors are attached to wires by crimping or soldering. If excessive force is applied to the wire, the joining area may become loose, which may result in a defective connection or breakage.

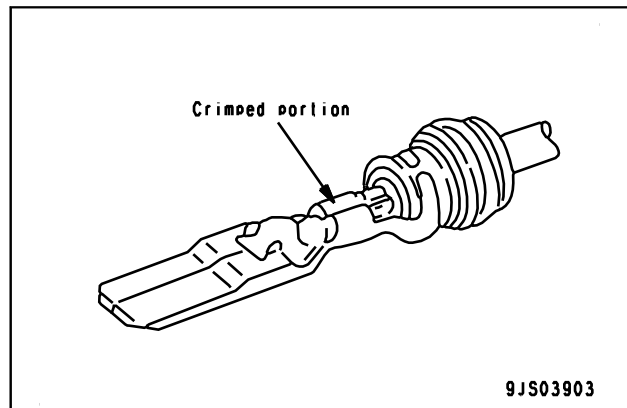


##### Disconnections in wiring

- If the wiring harness is pulled to disconnect the connector, or the components are lifted with a crane while the wiring harness is still connected, or a heavy object hits the wiring harness, the crimping of the connector may separate, or the soldering may be damaged, or the wiring harness may be broken.

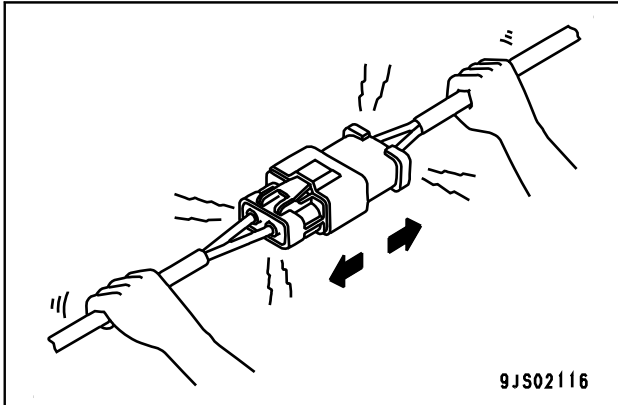

#### High-pressure water entering connector

- The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not to spray water over the connector.
- The connector is designed to prevent water from entering, but once water does enter, it is difficult to drain it. If water should get into the connector, the pins will be short-circuited by the water. So if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

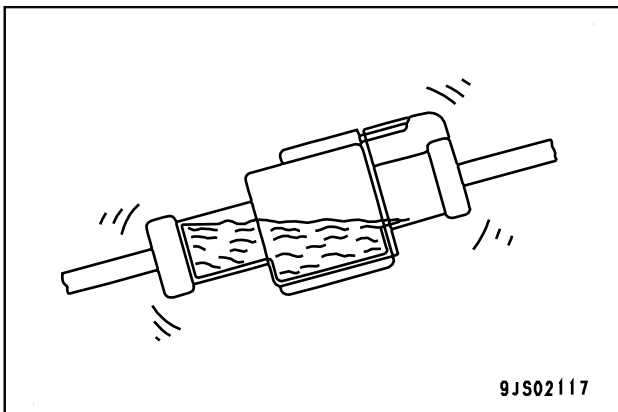

#### Entry of water, mud or dirt when disconnecting a connector


- If any water, mud or dirt is stuck to the outside surface of a connector, it can enter inside the connector when the connector is disconnected. Before disconnecting the connector, wipe off any stuck water or dirt by using a piece of dry cloth or blow it with compressed air.

#### Oil, mud or dirt stuck to connector

- If any oil or grease is stuck to the connector and an oil film is formed on the mating surface of the male and female pins, the oil prevents electricity from passing through, resulting in defective contact. If any oil or grease, mud or dirt is stuck to the connector, wipe it off with a dry cloth or

blow it with compressed air and spray it with electrical contact restorer.


- ★ When wiping the joint portion of the connector, be careful not to apply excessive force or deform the pins.
- ★ If there is oil or water in the compressed air, it causes the contacts to become dirtier. So, remove the oil and water from the compressed air completely before cleaning the connector with the compressed air.

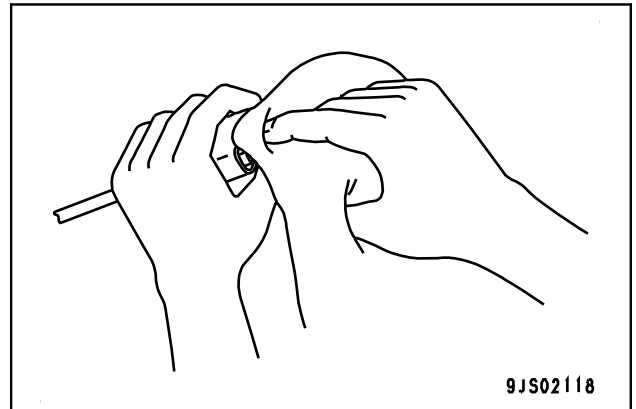


#### Removing, installing, and drying connectors and wiring harnesses

##### Disconnecting connectors


- Hold the connectors when disconnecting.
    - Disconnect connectors by holding the connector bodies. For the connectors held by a screw, loosen the screw fully, then hold the male and female connectors with each hand respectively and pull them apart horizontally. For the connectors with lock stopper, press down the stopper with your thumb and pull the connectors apart.
- ★ Never pull the connector with one hand.

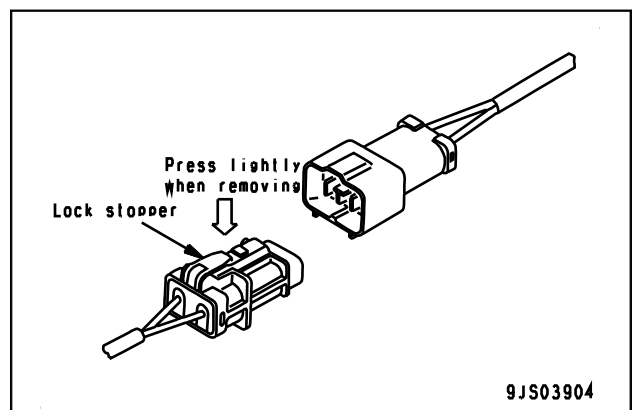

- When removing from clips
  - Both of the connector and clip have stoppers, which are engaged with each other when the connector is connected.

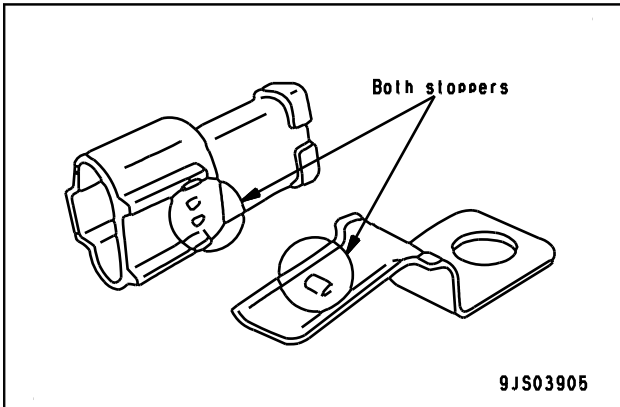


- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.
- ★ If the connector is pried up and down or to the right and left, the housing may break.

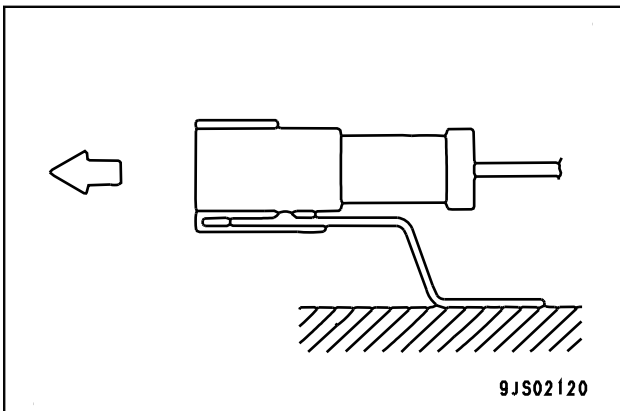

#### 3. Action to take after removing connectors

- After removing the connector, cover it with the vinyl bag to prevent entry of dust, dirt, oil or water in the contact portion.
- ★ If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

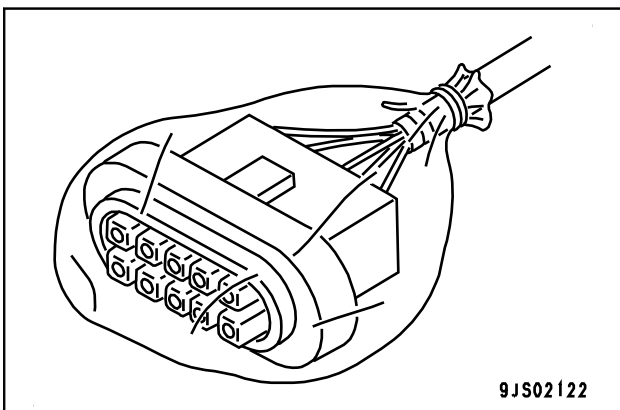

#### Connecting connectors

1. Check the connector visually.


- Check that there is no oil, dirt or water stick to the connector pins (joint portion).
- Check that the connector pins are free from deformation, defective contact, corrosion, or damage.
- Check that external surfaces of the connectors are free from damage or breakage.

- ★ If any oil, water or dirt is stuck to the connector, wipe it off with a dry cloth. If any water is inside the connector, warm the connector and the inside of the wiring harness with a dryer. But be careful not to make it too hot as it causes short circuit.

- ★ If there is any damage or breakage, replace the connector.

#### 2. Fix the connector securely.


- Align the connectors correctly, and fit them securely. For the connectors with the lock stopper, push in the connectors until "click" is heard.

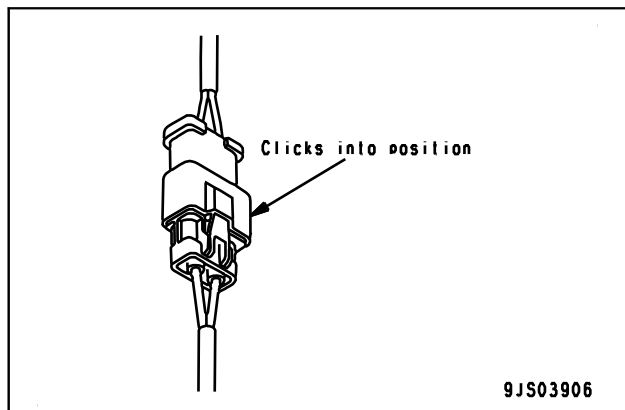


#### 3. Correct the protrusion of the boot and misalignment of the wiring harness

- For connectors fitted with the boot, correct any extrusion of the boot. In addition, if the wiring harness or the clamp is out of the position, put it in its original position.

- ★ If the connector cannot be corrected easily, remove the clamp and adjust the position.

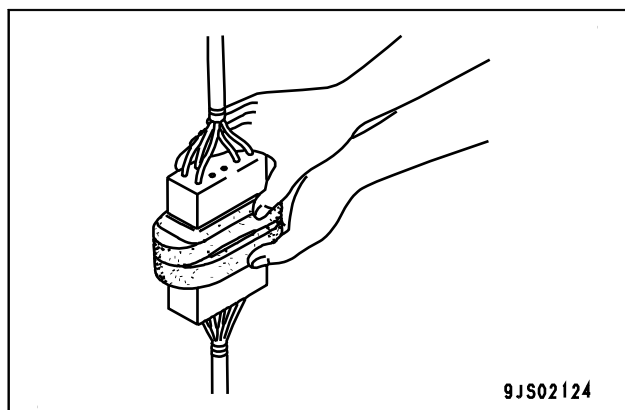


- If the connector clamp is removed, be sure to return it to its original position. And check that it is securely installed.

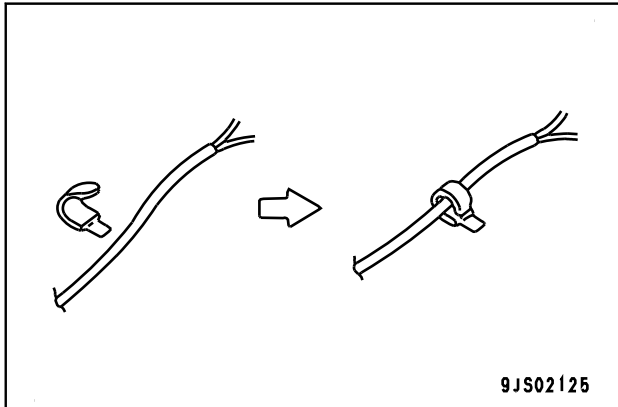

### Deutsch connector (DT8-pin, DT12-pin)

#### Disconnection


1. While pressing locks (a) and (b) from each side respectively, pull out female connector (2).

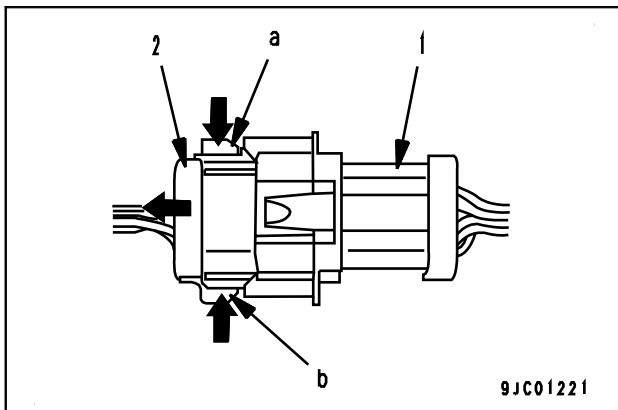

#### Connection

1. Push in female connector (2) horizontally until the lock clicks. (Arrow: x)
2. Since locks (a) and (b) may not be set completely, push in female connector (2) with curving movement until the locks are set normally. (Arrow: x, y, and z)

- ★ Lock (a) in the figure is pulled down (not set completely), and lock (b) is set completely.

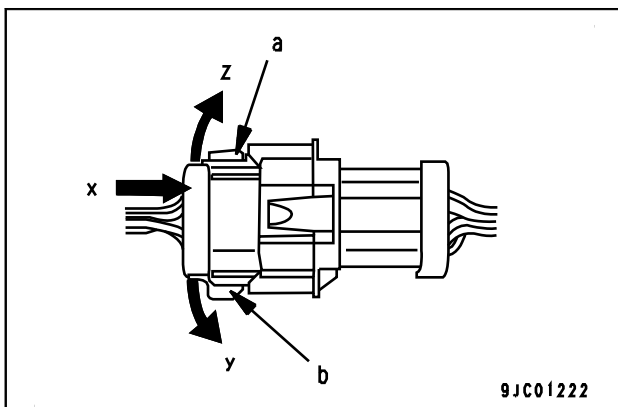


#### Drying wiring harness

- If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing by using steam. If the wire harness must be washed in water, do not apply high pressure water or steam directly to the wiring harness. If water gets directly on the connector, do as follows.


1. Disconnect the connector and wipe off the water with a dry cloth.

- ★ If the connector is to be blown with dry compressed air, there is a risk that oil in the air may cause defective contact of the conditioner, remove oil and water in the air before starting air blow.

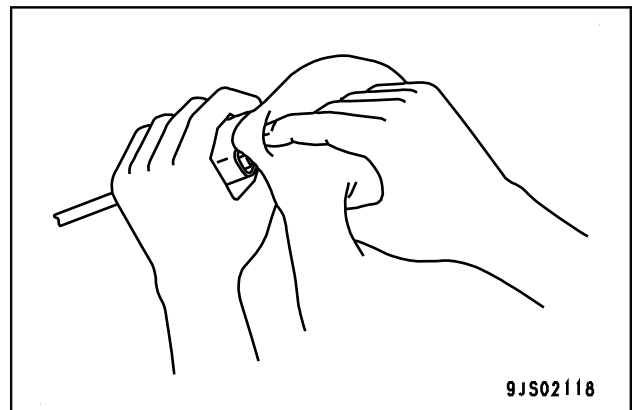


2. Dry the inside of the connector with a dryer. If water gets inside the connector, use a dryer to dry the connector.

- ★ Hot air from the dryer can be used, but regulate the time to use hot air in order to prevent the connector or related parts from becoming too hot, as it causes deformation or damage to the connector.

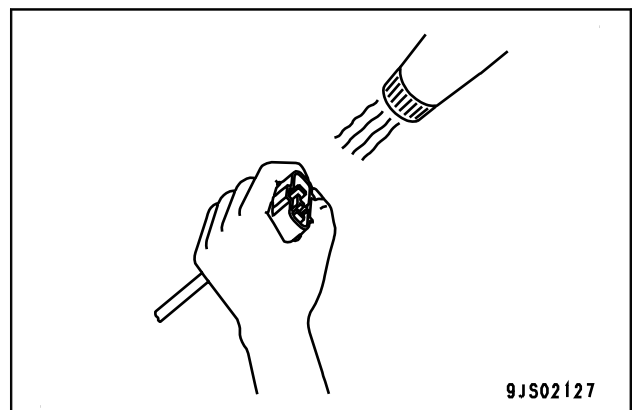

3. Perform a continuity test on the connector. After drying, leave the wiring harness disconnected and perform a continuity test to check for any short circuits between pins caused by water.

- ★ After the connector is completely dried, blow the contact restorer and reassemble them.

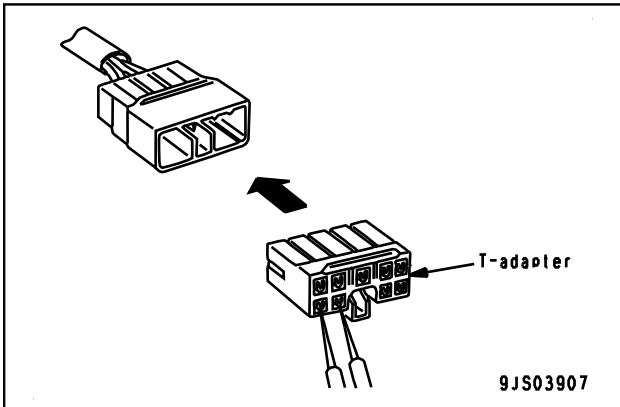


#### Handling of connectors used on engine

##### Slide, lock type (Type 1) (FRAMATOME-3, FRAMATOME-2)

###### Disconnection

1. Slide lock (L1) to the right.
2. While pressing lock (L2), pull out connector (1) toward you.

- ★ In the case that even if lock (L2) is pressed, connector (1) cannot be pulled out toward you unless part A floats, float part A with a small flat-head screwdriver while pressing lock (L2), and then pull out connector (1) toward you.

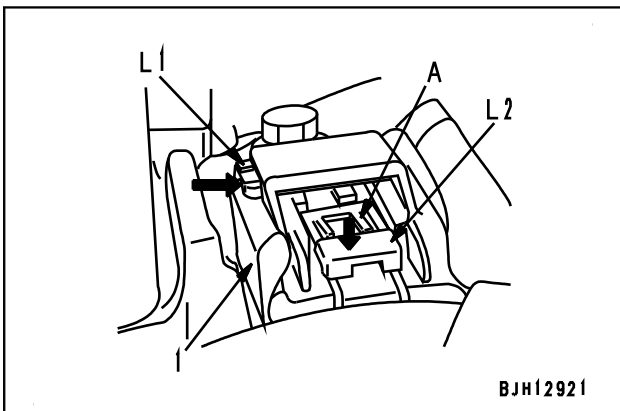


###### Connection

1. Insert the connector securely until a click is heard.


##### Slide, lock type (Type 2) (FRAMATOME-24)

###### Disconnection


1. Slide down lock (red) (L1).

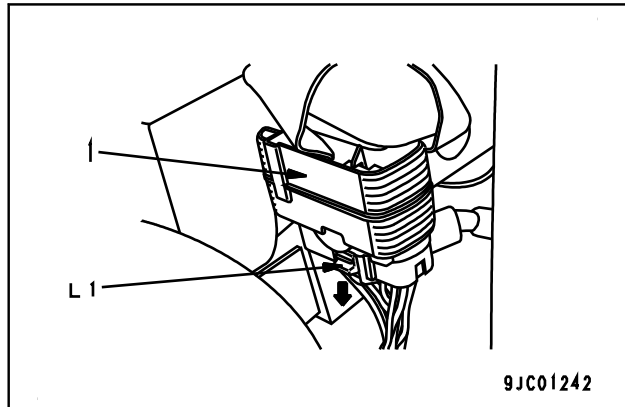

2. While pressing lock (L2), pull out connector (1).

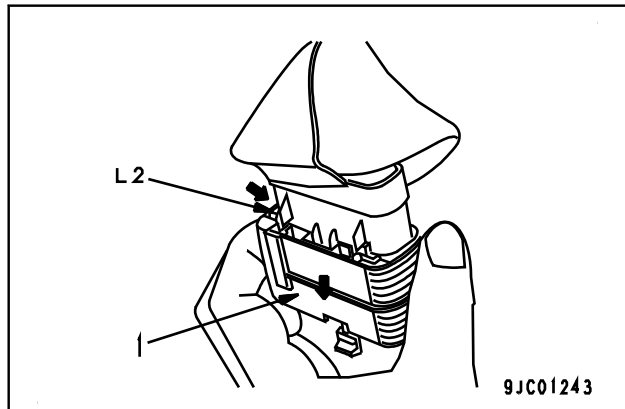

- ★ Lock (L2) is located in the back of connector (1).

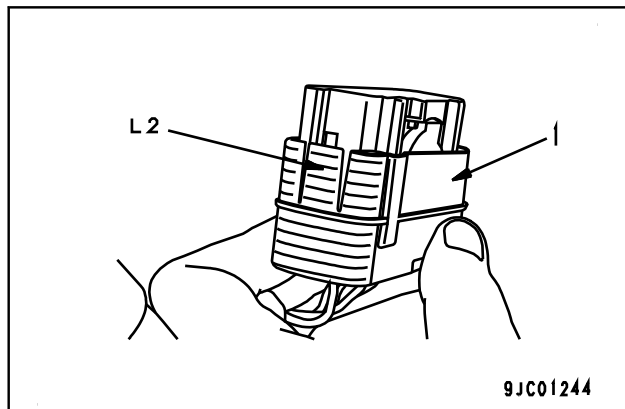


###### Connection

1. Insert the connector securely until a click is heard.

##### Pull lock type (PACKARD-2)

###### Disconnection

1. Disconnect the connector (2) by pulling lock (B) (on the wiring harness side) of connector (2) outward.

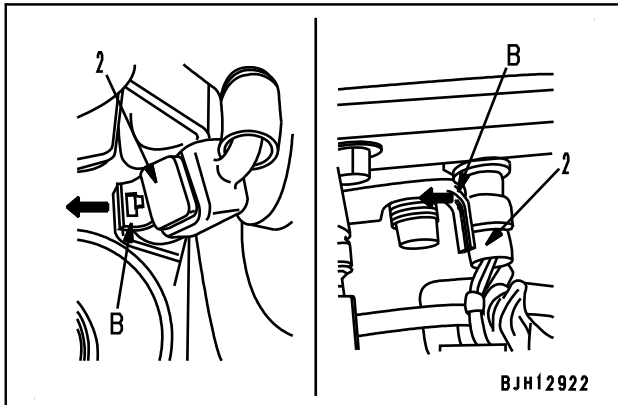


#### Connection

1. Insert the connector securely until a click is heard.


#### Push lock type (1) (BOSCH-3)

##### Disconnection

1. While pressing lock (C), pull out connector (3) in the direction of the arrow.
  - 114 series

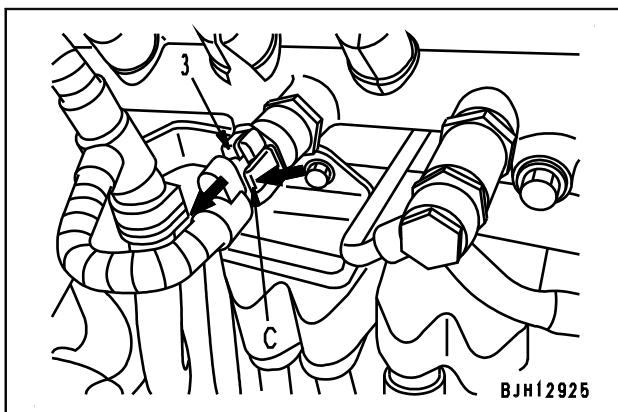


- 107 series

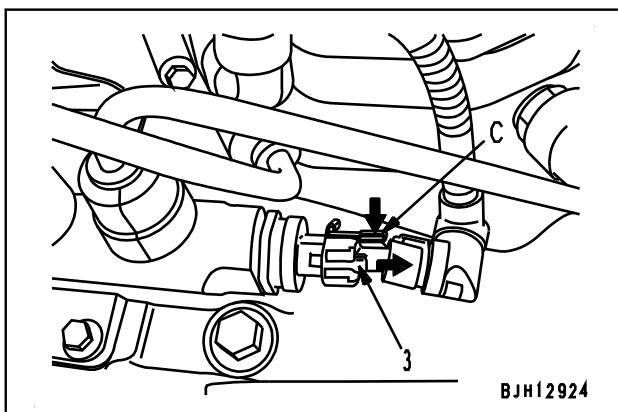

- ★ If the lock is located on the underside, use flat-head screwdriver [1] since you cannot insert your fingers.

While pushing up lock (C) of the connector with flat-head screwdriver [1], pull out connector (3) in the direction of the arrow.

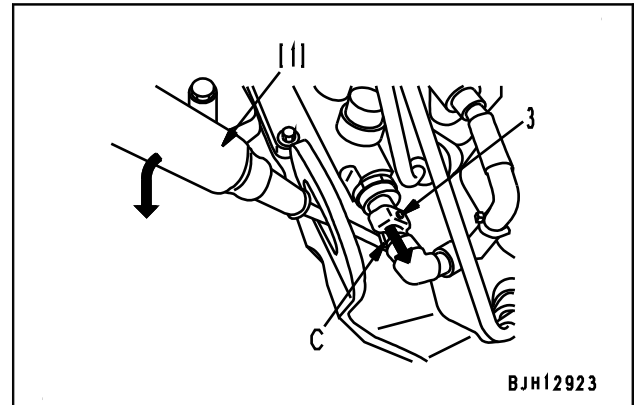

#### Connection

1. Insert the connector securely until a click is heard.


#### Push lock type (2) (SUMITOMO-4)

##### Disconnection

1. While pressing lock (C), pull out connector (4) in the direction of the arrow.

##### Connection


1. Insert the connector securely until a click is heard.

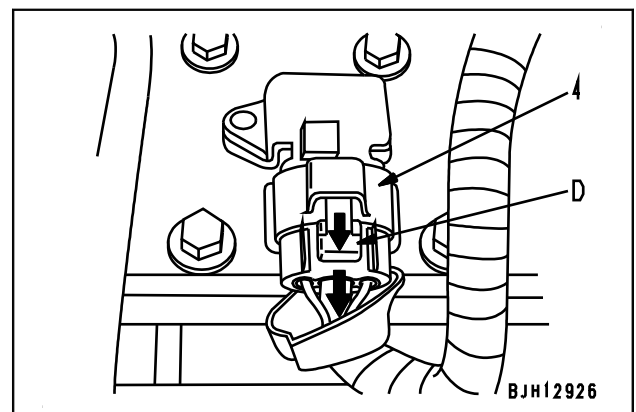


#### Push lock type (3) (AMP-3)

##### Disconnection

1. While pressing lock (E), pull out connector (5) in the direction of the arrow.  
Example) Fuel pressure sensor in common rail: PFUEL etc (AMP-3)

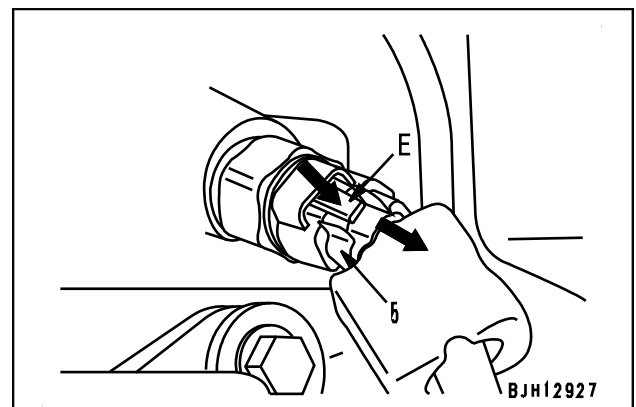


Example) Injection pressure control valve of supply pump: PCV (SUMITOMO-2)

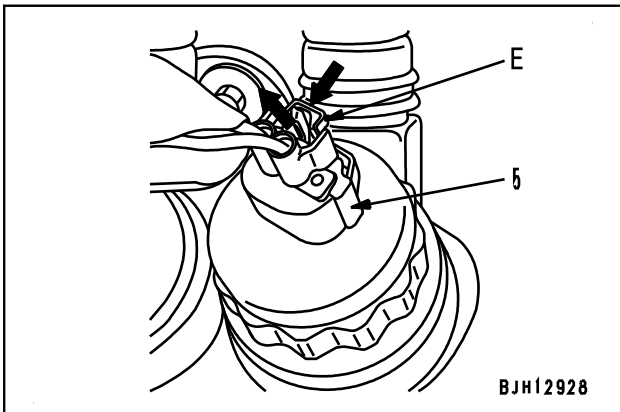

Example) Speed sensor of supply pump: G (SUMITOMO-3)

★ Pull the connector straight up.

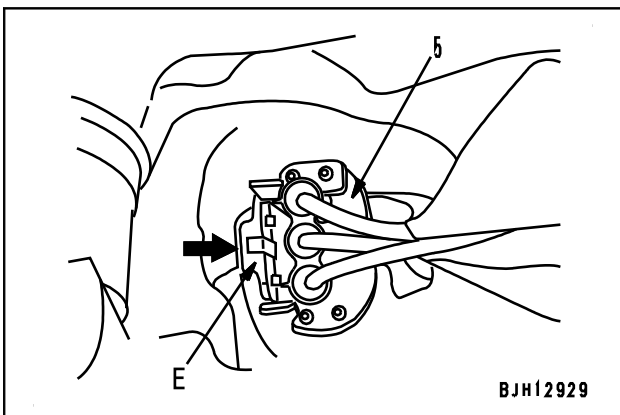


Connection

1. Insert the connector securely until a click is heard.

#### Turn-housing type (Round green connector) (CANNON-4)


Disconnection

1. Turn housing (H1) in the direction of the arrow.
  - ★ Unlock the connector by turning housing (H1). When the lock is released the housing is felt tight to turn.
2. Pull out housing (H1) in the direction of the arrow.
  - ★ Housing (H1) is left on the wiring harness side.

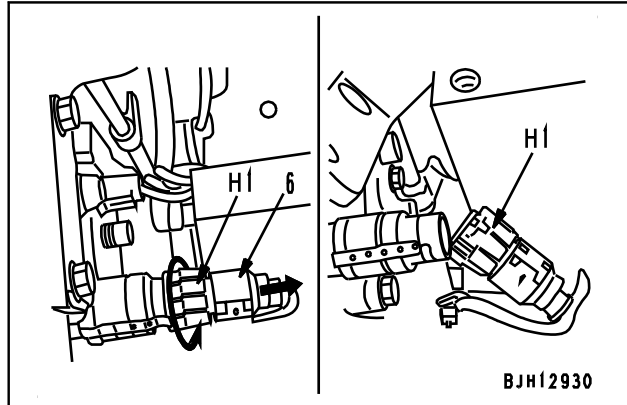


Connection

1. Insert the connector to the end while aligning its groove to the other.
2. Turn housing (H1) in the direction of the arrow until it "clicks".

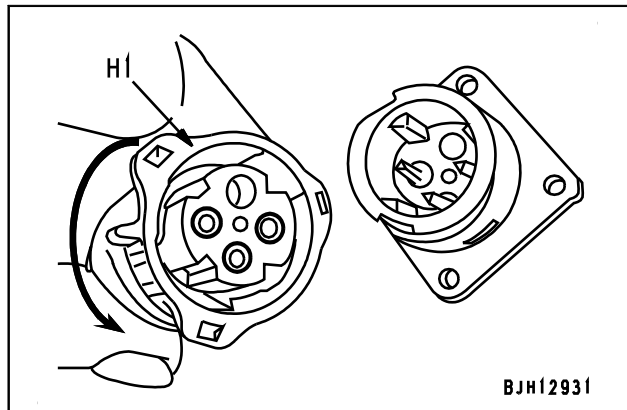

#### Handling controller


- The electronic circuits for control including the microcomputers are assembled in the controller. These electronic circuits in the controller must be handled with care as they control the machine.
- Do not place objects on top of the controller.

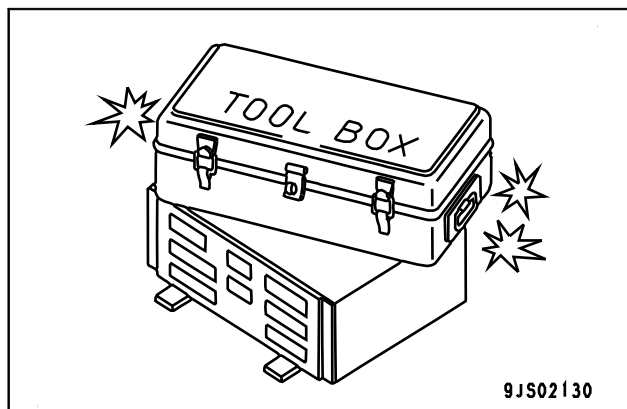

- Cover the control connectors with tape or a vinyl bag. Never touch the connector contacts.
- During rainy weather, do not leave the controller in a place where it is exposed to rain.
- Do not place the controller on oil, water, or soil, or in a place that can be heated to a high



temperature even for a short period of time.  
(Place it on a suitable dry stand.)

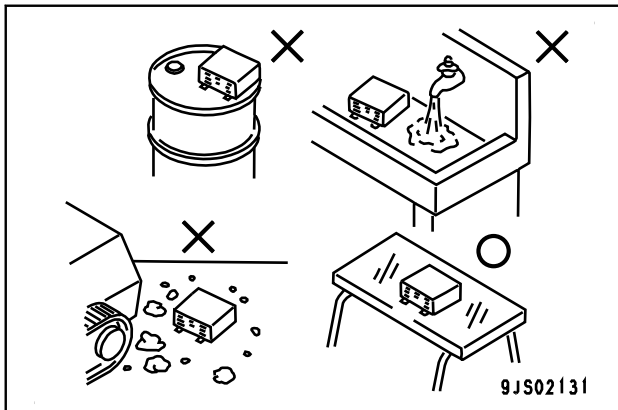

- Precautions when performing arc welding  
When performing arc welding on the machine body, disconnect all the wiring harness connectors connected to the controller. Put the arc welding ground to the place close to the welding point.

#### Precautions for troubleshooting electrical circuits

- Be sure to turn the starting switch to the "OFF" position before disconnecting or connecting the connectors.
- Before performing troubleshooting, check all the related connectors for loose connection.
  - ★ Check the related connectors for their performance by disconnecting and connecting them several times.
- Be sure to connect all the disconnected connectors before proceeding to the next step.
  - ★ If the starting switch is turned to the "ON" position with the connectors disconnected, the failure which is not related to the part which is actually failed.
- When performing the troubleshooting for the circuit (measurement of voltage, resistance, continuity, current, etc.), shake the related wiring harnesses and connectors several times and check that the multimeter reading does not change.
  - ★ If there is any value change on the multimeter, there may be a defective contact in the circuit.

## How to read electric wire code (ALL-E500-030-P-00-A)

(Rev. 2012/01)

- In the electrical circuit diagram, material, thickness and color of each electric wire are indicated by symbols. The wire code is helpful in understanding the electrical circuit diagram.

Example) AEX 0.85 L: Indicates blue, heat-resistant, low-voltage wire for automobile, having nominal No. of 0.85

AEX	Indicates type of wire by symbol. Type, symbol, and material of wire are shown in Table 1. (Since the use of AV and AVS wires depends on size (nominal No.), their symbols are not indicated on the diagram.)
0.85	Indicates size of wire by nominal No. Size (Nominal No.) is shown in Table 2.
L	Indicates color of wire by color code. Color codes are shown in Table 3.

### Type, symbol, and material

- AV and AVS are different in thickness and outside diameter of the coating. CAVC has a circular compressed conductor. It differs from AV and AVS in the outside diameter of conductor and thickness of the coating. And AEX is similar to AV in thickness and outside diameter of the coating but different from AV and AVS in material of the coating.

(Table 1)

Type	Sym- bol	Conductor material	Insulator material	Temperature range (°C) in use	Example of use
Low-voltage wire for automobile	AV	Annealed copper for electric appliance	Soft polyvinyl chloride	-30 to +60	For large current wiring (nominal No. 5 and above)
Thin-cover low-voltage wire for automobile (Type 1)	AVS				General wiring (nominal No. 3 and lower)
Thin-cover low-voltage wire for automobile Type 2	CAVS				For mid- to small-size excavators (nominal No. 1.25 and lower)
Heat- resistant low- voltage wire for automobile	AEX		Heat-resistant cross linked polyethylene	-50 to +110	(Safety factor: Wiring at high-temperature place

**Dimension**  
(Table 2)

Nominal No.		0.5f	(0.5)	0.75f	(0.85)	1.25f	(1.25)	2f	2	3f	3	5
Conductor	Number of strands/ Diameter of strand	20/ 0.18	7/0.32	30/ 0.18	11/ 0.32	50/ 0.18	16/ 0.32	37/ 0.26	26/ 0.32	58/ 0.26	41/ 0.32	65/ 0.32
	Cross-sectional area (mm <sup>2</sup> )	0.51	0.56	0.76	0.88	1.27	1.29	1.96	2.09	3.08	3.30	5.23
	d (approx.)	1.0		1.2		1.5		1.9	1.9	2.3	2.4	3.0
Coating D	AVS	Standard	2.0	2.2		2.5		2.9	2.9	3.5	3.6	—
	AV	Standard	—	—		—		—	—	—	—	4.6
	AEX	Standard	2.0	2.2		2.7		3.0	3.1	—	3.8	4.6


  

Nominal No.		8	15	20	30	40	50	60	85	100
Conductor	Number of strands/ Diameter of strand	50/0.45	84/0.45	41/0.80	70/0.80	85/0.80	108/ 0.80	127/ 0.80	169/ 0.80	217/ 0.80
	Cross-sectional area (mm <sup>2</sup> )	7.95	13.36	20.61	35.19	42.73	54.29	63.84	84.96	109.1
	d (approx.)	3.7	4.8	6.0	8.0	8.6	9.8	10.4	12.0	13.6
Coating D	AVS	Standard	—	—	—	—	—	—	—	—
	AV	Standard	5.5	7.0	8.2	10.8	11.4	13.0	13.6	16.0
	AEX	Standard	5.3	7.0	8.2	10.8	11.4	13.0	13.6	16.0

Nominal No.		0.5f	0.5	0.75f	0.85	1.25f	1.25
Conductor	Number of strands/ Diameter of strand	—	7/round compression	—	11/round compression	—	16/round compression
	Cross-sectional area (mm <sup>2</sup> )	—	0.56	—	0.88	—	1.29
	d (approx.)	—	0.9	—	1.1	—	1.4
Coating D	CAVS	Standard	—	1.6	—	1.8	—

★ "f" of nominal No. denotes "flexible".

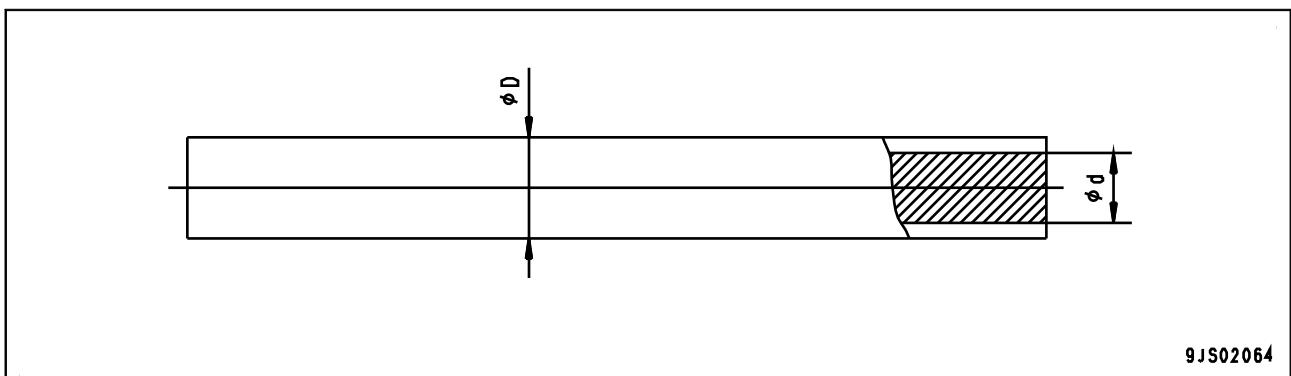

## 00 Index and foreword

### Foreword, safety and general information

#### Color codes table

(Table 3)

Color Code	Color of wire	Color Code	Color of wire
B	Black	LgW	Light green & White
Br	Brown	LgY	Light green & Yellow
BrB	Brown & Black	LR	Blue & Red
BrR	Brown & Red	LW	Blue & White
BrW	Brown & White	LY	Blue & Yellow
BrY	Brown & Yellow	O	Orange
Ch	Charcoal	P	Pink
Dg	Dark green	R	Red
G	Green	RB	Red & Black
GB	Green & Black	RG	Red & Green
GL	Green & Blue	RL	Red & Blue
Gr	Gray	RW	Red & White
GR	Green & Red	RY	Red & Yellow
GW	Green & White	Sb	Sky Blue
GY	Green & Yellow	Y	Yellow
L	Blue	YB	Yellow & Black
LB	Blue & Black	YG	Yellow & Green
Lg	Light green	YL	Yellow & Blue
LgB	Light green & Black	YR	Yellow & Red
LgR	Light green & Red	YW	Yellow & White

★ Remarks: In a color code consisting of two colors, the first color is the color of the background and the second color is the color of the marking.

Examples)

GW means that the background is "Green" and marking is "White".

#### Types of circuits and color codes

Type of wire		AVS, AV, CAVS						AEX	
Type of circuit	Charge	R	WG	—	—	—	—	R	—
	Ground	B	—	—	—	—	—	B	—
	Start	R	—	—	—	—	—	R	—
	Light	RW	RB	RY	RG	RL	—	D	—
	Instrument	Y	YR	YB	YG	YL	YW	Y	Gr
	Signal	G	GW	GR	GY	GB	GL	G	Br
	Appendix	L	LW	LR	LY	LB	—	L	—
		Br	BrW	BrR	BrY	BrB	—	—	—
		Lg	LgR	LgY	LgB	LgW	—	—	—
		O	—	—	—	—	—	—	—
		Gr	—	—	—	—	—	—	—
		P	—	—	—	—	—	—	—
		Sb	—	—	—	—	—	—	—
		Dg	—	—	—	—	—	—	—
		Ch	—	—	—	—	—	—	—

## Precautions when performing operation (ALL-1160-927-A-00-A)

(Rev. 2012/01)

- When performing "removal or installation" and "disassembly or assembly" of the components, observe the following general cautions.

### Precautions for removal work

- If the coolant contains antifreeze, dispose of it correctly as chemicals. Do not drain the coolant to the sewage rashly.
- After disconnecting the hoses or tubes, plug them to prevent dirt or dust from entering.
- When draining oil, prepare a container with sufficient capacity.
- Check the match marks which indicate the installing position, and put match marks on the places where they seem necessary before removal of the components to prevent any mistake when assembling.
- To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors. Do not pull the wires.
- Attach the tags to wires and hoses to show their installing positions to prevent any mistake when installing.
- Check the number and thickness of the shims, and keep them in a safe place.
- When hoisting the components, prepare the slings with sufficient strength.
- When using forcing screws to remove any component, tighten the forcing screws uniformly and alternately.
- Before removing any component, clean the surrounding area and cover the component to prevent any foreign material from entering after removal.

### ★ Precautions when handling piping during disassembly

Use the plugs indicated below for the pipes disconnected at the disassembly.

### Face seal type hoses and tubes

Nominal No.	Plug (nut end)	Nut (elbow end)
02	07376-70210	02789-00210
03	07376-70315	02789-00315
04	07376-70422	02789-00422
05	07376-70522	02789-00522
06	07376-70628	02789-00628

### Split flange type hoses and tubes


Nominal No.	Flange (hose end)	Sleeve head (tube end)	Split flange
04	07379-00400	07378-10400	07371-30400
05	07379-00500	07378-10500	07371-30500

## 00 Index and foreword

### Foreword, safety and general information

If the part is not under hydraulic pressure, the following corks can be used.

Nominal No.	Part No.	Dimensions		
		D	d	L
06	07049-00608	6	5	8
08	07049-00811	8	6.5	11
10	07049-01012	10	8.5	12
12	07049-01215	12	10	15
14	07049-01418	14	11.5	18
16	07049-01620	16	13.5	20
18	07049-01822	18	15	22
20	07049-02025	20	17	25
22	07049-02228	22	18.5	28
24	07049-02430	24	20	30
27	07049-02734	27	22.5	34

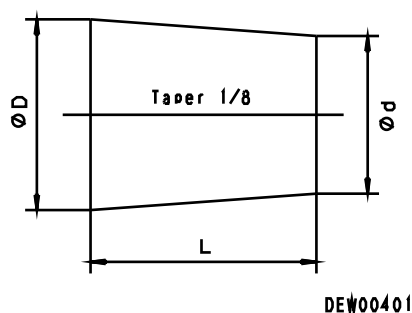

#### Precautions for installation work

- Tighten all of the bolts and nuts (sleeve nuts) to the specified torque (KES).
  - Install the hoses without twist and interference, and securely fasten the clamps located in-between if they are.
  - Replace all of the gaskets, O-rings, cotter pins, and lock plates with new parts.
  - Bend the cotter pins and lock plates securely.
  - When applying adhesive, clean and degrease the part, and apply two to three drops of adhesive to the threaded portion.
  - When applying liquid gasket, clean and degrease the surface, and apply it uniformly after making sure that the surface is free from dirt or damage.
  - Clean all of the parts, and correct any damage, dents, burrs, or rust found on them.
  - Coat the rotating parts and sliding parts with engine oil.
  - Coat the surfaces of the press-fitting parts with molybdenum disulfide lubricant (LM-P).
  - After installing the snap ring, check that the snap ring is settled in the ring groove completely.
  - When connecting wiring harness connectors, clean the connectors to remove oil, dirt, or water, then connect them securely.
  - Use the eye bolts with no fatigue and deformation and screw them in securely. Match the directions of the eyes and the hook.
  - When installing split flanges, tighten the bolts uniformly and alternately to prevent excessive tightening on one side.
- ★ When the hydraulic cylinder is used for the first time after reassembly of the hydraulic equipment such as the hydraulic cylinder, pump, etc. and piping after removing them for repair, be sure to perform air bleeding of the hydraulic circuit according to the following procedure.
1. Start and run the engine at low idle.
  2. Repeat the operation to extend and retract each cylinder of the work equipment to approximately 100 mm before the stroke end four to five times.
  3. Operate the hydraulic cylinder three to four times to the end of its stroke.

- ★ After the completion of repair and when operating the machine which is stored long term, perform the air bleeding with the same procedure as the one described above.

#### Precautions at the time of completing work

##### Refilling of coolant, oil and grease

- When the coolant is drained, tighten the drain valve securely, then refill the coolant reservoir with the coolant Komatsu recommends to the specified level. Start the engine to circulate the coolant in the piping, and add the coolant to the specified level again.
- When the hydraulic components are removed and installed, refill the oil reservoir with the oil Komatsu recommends to the specified level. Start the engine to circulate the oil in the piping, and add the oil to the specified level again.
- If the hydraulic piping or hydraulic equipment is removed, be sure to bleed air from the system after rebuilding the parts, by referring to "Testing and adjusting".
- Supply the specified amount of grease to the work equipment parts.

##### Check of installed condition of cylinder heads and manifolds

- Check the cylinder head and intake and exhaust manifold mountings for looseness.
- If any bolt is loose, retighten it.

★ For the tightening torques, see the "Disassembly and assembly".

##### Check of engine piping for damage and looseness

Intake and exhaust system	Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for air suction and exhaust gas leakage.
	If any part is loosely installed or damaged, retighten the bolts or repair the part.
Cooling system	Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for water leakage.
	If any part is loosely installed or damaged, retighten the bolts or repair the part.
Fuel system	Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for fuel leakage.
	If any part is loosely installed or damaged, retighten the bolts or repair the parts.

##### Check of KDPF or muffler and exhaust pipe for damage and looseness

- Visually check the KDPF or muffler, exhaust pipe and their mounting parts for a crack and damage. If any part is damaged, replace it.
- Check the mounting bolts, nuts, and clamps of the KDPF or muffler, exhaust pipe and their mounting parts for looseness.  
If any part is loosely installed, retighten the bolts.

##### Check of KDPF or muffler function

- Check the KDPF or the muffler for unusual noise comparing to the noise when they are new.  
If any unusual noise is heard, repair KDPF or muffler, referring to "Troubleshooting" and "Disassembly and assembly".



## **Practical use of KOMTRAX** (ALL-Q210-13V-K-00-A)

(Rev. 2012/01)

KOMTRAX system transmits various machine information by use of the radio communication and KOMTRAX operator can refer this information in the office and provide various services to the customers.

When KOMTRAX is installed on the machine, the machine information can be checked through the KOMTRAX system and the testing and troubleshooting can be performed efficiently.

(KOMTRAX may not be installed on the machine in some countries or areas.)

### **Merit of using KOMTRAX**

- The working place of the machine can be checked in the map on PC.
- Operation information such as service meter reading, operating hours, fuel consumption, occurred caution and failure code can be checked.
- The hours used and replacement time of consumable parts of the machine such as fuel filter, hydraulic oil filter, hydraulic oil and engine oil can be checked.
- The information of machine working condition (idling time, traveling time, digging time, relieving time, etc.) can be checked and the machine operating condition can be presumed with these information.
- Various reports such as "Fuel saving operation support", "Summary of operation", etc. can be generated and utilized as an advice tool for the user and operator.

### **How to use KOMTRAX practically**

With KOMTRAX, following support activities will be available.

1. Quick response to sudden request of repair
  - 1) When receiving a repair request from a user, check the displayed caution and failure code, etc. through KOMTRAX.
  - 2) Arrange the necessary tools, replacement parts, etc, immediately in accordance with the displayed failure code.
  - 3) By using the map of KOMTRAX, find the location of the failed machine and visit the customer there.
2. Proactive maintenance
  - 1) Check the service summary screen of KOMTRAX, and find the machine which has high priority failure code indicated by a red or yellow flag.
  - 2) Check the condition of the machine with the customer and make a plan to visit.
  - 3) Arrange necessary tools, replacement parts, etc, immediately in accordance with the displayed failure code.
3. Practice of periodic maintenance and periodic inspection service
  - 1) Check the service summary screen of KOMTRAX, and find the machine of which the usage limits for the consumable parts indicated by red flags are over.
  - 2) Submit an estimate sheet for the consumable parts to be replaced and the labor cost for the replacement work to the customer.
  - 3) Propose the periodic inspection (PM clinic, etc.) according to the service meter reading.

### **How to operate KOMTRAX**

For the operating method of each screen of KOMTRAX, see "KOMTRAX basic operation manual".

## Standard tightening torque table (ALL-M140-03B-P-01-A)

(Rev. 2012/01)

### Table of tightening torque for bolts and nuts

Unless otherwise specified, tighten the metric bolts and nuts to the torque shown in the table below.

1. The following table applies to the bolts in Fig. A.

Thread diameter (mm)	Width across flats (mm)	Tightening torque	
		(Nm)	(kgm)
6	10 (10)	11.8 to 14.7	1.2 to 1.5
8	13 (12)	27 to 34	2.8 to 3.5
10	17 (14)	59 to 74	6.0 to 7.5
12	19 (17)	98 to 123	10.0 to 12.5
14	22	157 to 196	16 to 20
16	24	245 to 309	25 to 31.5
18	27	343 to 427	35 to 43.5
20	30	490 to 608	50 to 62
22	32	662 to 829	67.5 to 84.5
24	36	824 to 1,030	84 to 105
27	41	1,180 to 1,470	120 to 150
30	46	1,520 to 1,910	155 to 195
33	50	1,960 to 2,450	200 to 250
36	55	2,450 to 3,040	250 to 310
39	60	2,890 to 3,630	295 to 370

★ Values with ( ) in the "Width across flats" column are for (\*) marked bolt (flange bolt) shown in Fig. A.

2. The following table applies to the bolts in Fig. B.

Thread diameter (mm)	Width across flats (mm)	Tightening torque	
		(Nm)	(kgm)
6	10	5.9 to 9.8	0.6 to 1.0
8	12	13.7 to 23.5	1.4 to 2.4
10	14	34.3 to 46.1	3.5 to 4.7
12	17	74.5 to 90.2	7.6 to 9.2

Fig. A


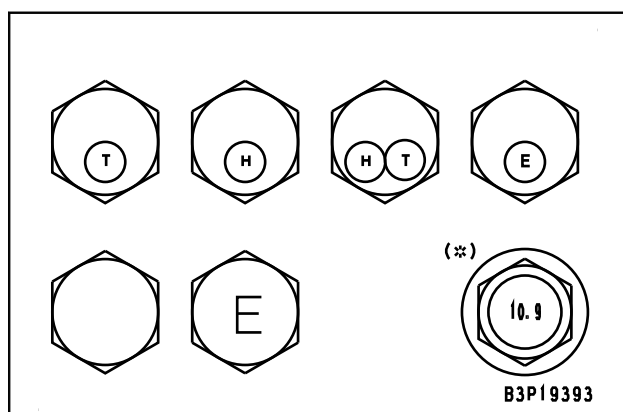


Fig. B



★ Values with parentheses are applied to the width across flats of (\*) marked bolts (flanged bolts)

This as a preview PDF file from **best-manuals.com**

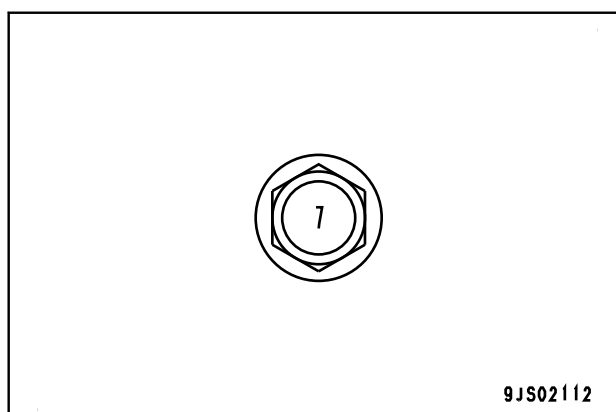

Download full PDF manual at **best-manuals.com**