

160DLC Excavator Engines 4045HT056 and 4045HT065



OPERATOR'S MANUAL 160DLC Excavator Engines 4045HT056 and 4045HT065 OMT226911 ISSUE E9 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

⚠ WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

Additional Proposition 65 Warnings can be found in this manual.

**Worldwide Construction
And Forestry Division**

PRINTED IN U.S.A.

Introduction

Introduction

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your authorized dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only

correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I.N.) in the Machine Numbers Section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

JH91824,000092D -19-08DEC09-1/1

IMPORTANT

Warranty will not apply to engine and drivetrain failures resulting from unauthorized adjustments to this engine.

Unauthorized adjustments are in violation of the emissions regulations applicable to this engine and may result in substantial fines and penalties.

DW90712,0000444 -19-09JAN07-1/1

EPA Non-road Emissions Control Warranty Statement—Compression Ignition

DXLOGOV1 —UN—28APR09



JOHN DEERE

U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-Induction System	Aftertreatment Devices
Fuel System	Crankcase Ventilation Valves
Ignition System	Sensors
Exhaust Gas Recirculation Systems	Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

Continued on next page

DX,EMISSIONS,EPA -19-12DEC12-1/2

Introduction



JOHN DEERE

U.S. AND CANADA EMISSION CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emissions Control Information" label located on the engine. If the engine is operated in the United States or Canada and the Emissions Control information label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine conforms to US EPA nonroad compression-ignition regulations", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines", or "This engine conforms to US EPA and California nonroad compression-ignition emission regulations", also refer to the "California Emission Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emissions-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

JOHN DEERE'S WARRANTY RESPONSIBILITY

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine including all parts of its emission-control system was designed, built and equipped so as to conform at the time of the sale with Section 213 of the Clean Air Act and is free from defects in materials and workmanship which would cause the engine to fail to conform with applicable US EPA regulations for a period of five years from the date the engine is placed into service or 3,000 hours of operation, whichever first occurs.

Where a warrantable condition exists, John Deere will repair or replace, as it elects, any part or component with a defect in materials or workmanship that would increase the engine's emissions of any regulated pollutant within the stated warranty period at no cost to you, including expenses related to diagnosing and repairing or replacing emission-related parts. Warranty coverage is subject to the limitations and exclusions set forth herein. Emission-related components include engine parts developed to control emissions related to the following:

Air-Induction System	Aftertreatment Devices
Fuel System	Crankcase Ventilation Valves
Ignition System	Sensors
Exhaust Gas Recirculation Systems	Engine Electronic Control Units

EMISSION WARRANTY EXCLUSIONS

John Deere may deny warranty claims for malfunctions or failures caused by:

- Non-performance of maintenance requirements listed in the Operator's Manual
- The use of the engine/equipment in a manner for which it was not designed
- Abuse, neglect, improper maintenance or unapproved modifications or alterations
- Accidents for which it does not have responsibility or by acts of God

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel can harm the emissions control system of the engine/equipment and is not approved for use.

To the extent permitted by law John Deere is not liable for damage to other engine components caused by a failure of an emission-related part, unless otherwise covered by standard warranty.

THIS WARRANTY IS EXPRESSLY IN LIEU OF ANY OTHER WARRANTIES, EXPRESS OR IMPLIED, INCLUDING ANY WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE. REMEDIES UNDER THIS WARRANTY ARE LIMITED TO THE PROVISIONS OF MATERIAL AND SERVICES AS SPECIFIED HEREIN. WHERE PERMITTED BY LAW, NEITHER JOHN DEERE NOR ANY AUTHORIZED JOHN DEERE ENGINE DISTRIBUTOR, DEALER, OR REPAIR FACILITY OR ANY COMPANY AFFILIATED WITH JOHN DEERE WILL BE LIABLE FOR INCIDENTAL OR CONSEQUENTIAL DAMAGES.

Emission_CI_EPA (18Dec09)

DX,EMISSIONS,EPA -19-12DEC12-2/2

TS1721—UN—15JUL13

CARB Non-road Emissions Control Warranty Statement—Compression Ignition

Emissions Control Warranty Statement 2016 through 2018

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2016 through 2018 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Introduction

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System <ul style="list-style-type: none">• Intake manifold• Turbocharger• Charge air cooler	Emission control labels	Advanced Oxides of Nitrogen (NOx) Controls <ul style="list-style-type: none">• NOx absorbers and catalysts
Fuel Metering system <ul style="list-style-type: none">• Fuel injection system	Particulate Controls <ul style="list-style-type: none">• Any device used to capture particulate emissions• Any device used in the regeneration of the capturing system• Enclosures and manifolding• Smoke Puff Limiters	SCR systems and urea containers/dispensing systems
Exhaust Gas Recirculation <ul style="list-style-type: none">• EGR valve	Positive Crankcase Ventilation (PCV) System <ul style="list-style-type: none">• PCV valve• Oil filler cap	Miscellaneous Items used in Above Systems <ul style="list-style-type: none">• Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware
Catalyst or Thermal Reactor Systems <ul style="list-style-type: none">• Catalytic converter• Exhaust manifold		

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (13Jun14)

Continued on next page

DX,EMISSIONS,CARB -19-03FEB17-2/8

Emissions Control Warranty Statement 2016 through 2018

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2016 through 2018 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-03FEB17-3/8

RG26035 —UN—24JUN14

Introduction

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (13Jun14)

Continued on next page

DX,EMISSIONS,CARB -19-03FEB17-4/8

RG26036—UN—24JUN14

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT YOUR WARRANTY RIGHTS AND OBLIGATIONS

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Introduction

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System <ul style="list-style-type: none">• Intake manifold• Turbocharger• Charge air cooler	Emission control labels	Advanced Oxides of Nitrogen (NOx) Controls <ul style="list-style-type: none">• NOx absorbers and catalysts
Fuel Metering system <ul style="list-style-type: none">• Fuel injection system	Particulate Controls <ul style="list-style-type: none">• Any device used to capture particulate emissions• Any device used in the regeneration of the capturing system• Enclosures and manifold• Smoke Puff Limiters	SCR systems and urea containers/dispensing systems
Exhaust Gas Recirculation <ul style="list-style-type: none">• EGR valve	Positive Crankcase Ventilation (PCV) System <ul style="list-style-type: none">• PCV valve• Oil filler cap	Miscellaneous Items used in Above Systems <ul style="list-style-type: none">• Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware
Catalyst or Thermal Reactor Systems <ul style="list-style-type: none">• Catalytic converter• Exhaust manifold		

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

Continued on next page

DX,EMISSIONS,CARB -19-03FEB17-6/8

Introduction

Emissions Control Warranty Statement 2019 through 2021

DXLOGOV1 —UN—28APR09



JOHN DEERE

**CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT
YOUR WARRANTY RIGHTS AND OBLIGATIONS**

To determine if the John Deere engine qualifies for the additional warranties set forth below, look for the "Emission Control Information" label located on the engine. If the engine is operated in the United States or Canada and the engine label states: "This engine complies with US EPA regulations for nonroad and stationary diesel engines", or "This engine complies with US EPA regulations for stationary emergency diesel engines", refer to the "U.S. and Canada Emission Control Warranty Statement." If the engine is operated in California, and the engine label states: "This engine complies with US EPA and CARB regulations for nonroad diesel engines" also refer to the "California Emissions Control Warranty Statement."

Warranties stated on this certificate refer only to emissions-related parts and components of your engine. The complete engine warranty, less emission-related parts and components, is provided separately. If you have any questions about your warranty rights and responsibilities, you should contact John Deere at 1-319-292-5400.

CALIFORNIA EMISSIONS CONTROL WARRANTY STATEMENT:

The California Air Resources Board (CARB) is pleased to explain the emission-control system warranty on 2019 through 2021 off-road diesel engines. In California, new off-road engines must be designed, built and equipped to meet the State's stringent anti-smog standards. John Deere must warrant the emission control system on your engine for the periods of time listed below provided there has been no abuse, neglect or improper maintenance of your engine.

Your emission control system may include parts such as the fuel injection system and the air induction system. Also included may be hoses, belts, connectors and other emission-related assemblies.

John Deere warrants to the ultimate purchaser and each subsequent purchaser that this off-road diesel engine was designed, built, and equipped so as to conform at the time of sale with all applicable regulations adopted by CARB and is free from defects in materials and workmanship which would cause the failure of a warranted part to be identical in all material respects to the part as described in John Deere's application for certification for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first for all engines rated at 19 kW and greater. In the absence of a device to measure hours of use, the engine shall be warranted for a period of five years.

EMISSIONS WARRANTY EXCLUSIONS:

John Deere may deny warranty claims for failures caused by the use of an add-on or modified part which has not been exempted by the CARB. A modified part is an aftermarket part intended to replace an original emission-related part which is not functionally identical in all respects and which in any way affects emissions. An add-on part is any aftermarket part which is not a modified part or a replacement part.

In no event will John Deere, any authorized engine distributor, dealer, or repair facility, or any company affiliated with John Deere be liable for incidental or consequential damage.

Continued on next page

DX,EMISSIONS,CARB -19-03FEB17-7/8

RG29280 —UN—02FEB17

Introduction

JOHN DEERE'S WARRANTY RESPONSIBILITY:

Where a warrantable condition exists, John Deere will repair or replace, as it elects, your off-road diesel engine at no cost to you, including diagnosis, parts or labor. Warranty coverage is subject to the limitations and exclusions set forth herein. The off-road diesel engine is warranted for a period of five years from the date the engine is delivered to an ultimate purchaser or 3,000 hours of operation, whichever occurs first. The following are emissions-related parts:

Air Induction System

- Intake manifold
- Turbocharger
- Charge air cooler

Fuel Metering system

- Fuel injection system

Exhaust Gas Recirculation

- EGR valve

Catalyst or Thermal Reactor Systems

- Catalytic converter
- Exhaust manifold

Emission control labels

Particulate Controls

- Any device used to capture particulate emissions
- Any device used in the regeneration of the capturing system
- Enclosures and manifolding
- Smoke Puff Limiters

Positive Crankcase Ventilation (PCV) System

- PCV valve
- Oil filler cap

Advanced Oxides of Nitrogen (NOx) Controls

- NOx absorbers and catalysts

SCR systems and urea containers/dispensing systems

Miscellaneous Items used in Above Systems

- Electronic control units, sensors, actuators, wiring harnesses, hoses, connectors, clamps, fittings, gasket, mounting hardware

Any warranted emissions-related part scheduled for replacement as required maintenance is warranted by John Deere for the period of time prior to the first scheduled replacement point for the part. Any warranted emissions-related part not scheduled for replacement as required maintenance or scheduled only for regular inspection is warranted by John Deere for the stated warranty period.

OWNER'S WARRANTY RESPONSIBILITIES:

As the off-road diesel engine owner you are responsible for the performance of the required maintenance listed in your Operator's Manual. John Deere recommends that the owner retain all receipts covering maintenance on the off-road diesel engine, but John Deere cannot deny warranty solely for the lack of receipts or for the owner's failure to ensure the performance of all scheduled maintenance. However, as the off-road diesel engine owner, you should be aware that John Deere may deny you warranty coverage if your off-road diesel engine or a part has failed due to abuse, neglect, improper maintenance or unapproved modifications.

The off-road diesel engine is designed to operate on diesel fuel as specified in the Fuels, Lubricants and Coolants section in the Operators Manual. Use of any other fuel may result in the engine no longer operating in compliance with applicable emissions requirements.

The owner is responsible for initiating the warranty process, and should present the machine to the nearest authorized John Deere dealer as soon as a problem is suspected. The warranty repairs should be completed by the authorized John Deere dealer as quickly as possible.

Emissions regulations require the customer to bring the unit to an authorized servicing dealer when warranty service is required. As a result, John Deere is NOT liable for travel or mileage on emissions warranty service calls.

Emission_CI_CARB (01Feb17)

DX,EMISSIONS,CARB -19-03FEB17-8/8

RG28281 — UN—27FEB17

Introduction

Contents

Page	Page
Safety—Safety and Operator Conveniences	
Safety and Operator Convenience Features	1-1-1
Safety—General Precautions	
Recognize Safety Information	1-2-1
Follow Safety Instructions	1-2-1
Operate Only If Qualified	1-2-1
Wear Protective Equipment	1-2-2
Avoid Unauthorized Machine Modifications	1-2-2
Inspect Machine	1-2-2
Stay Clear of Moving Parts	1-2-2
Avoid High-Pressure Fluids	1-2-3
Avoid High-Pressure Oils	1-2-3
Work In Ventilated Area	1-2-4
Prevent Fires	1-2-4
Prevent Battery Explosions	1-2-5
Handle Chemical Products Safely	1-2-5
Decommissioning — Proper Recycling and Disposal of Fluids and Components	1-2-6
Prepare for Emergencies	1-2-6
Clean Debris from Machine	1-2-7
Add Cab Guarding for Special Uses	1-2-7
Safety—Operating Precautions	
Use Steps and Handholds Correctly	1-3-1
Start Only From Operator's Seat	1-3-1
Use and Maintain Seat Belt	1-3-1
Avoid Work Site Hazards	1-3-2
Keep Riders Off Machine	1-3-2
Avoid Backover Accidents	1-3-3
Avoid Machine Tip Over	1-3-3
Operating or Traveling On Public Roads	1-3-4
Inspect and Maintain ROPS	1-3-4
Add and Operate Attachments Safely	1-3-4
Use Special Care When Lifting Objects	1-3-4
Prevent Unintended Detonation of Explosive Devices	1-3-5
Safety—Maintenance Precautions	
Park and Prepare for Service Safely	1-4-1
Service Cooling System Safely	1-4-1
Remove Paint Before Welding or Heating	1-4-2
Make Welding Repairs Safely	1-4-2
Drive Metal Pins Safely	1-4-2
Service Tires Safely	1-4-3
Safety—Safety Signs	
Safety Signs	1-5-1
Safety Signs Installed in Cab—Hydraulic Coupler—If Equipped	1-5-2
Safety Signs Installed on Hydraulic Coupler—If Equipped	1-5-3
Operation—Operator's Station	
Pedals, Levers, and Panels	2-1-1
Front Switch Panel	2-1-2
Front Switch Panel Functions	2-1-3
Rear Panel	2-1-3
Horn	2-1-4
Power Dig Button	2-1-4
Pilot Shutoff Lever	2-1-4
Left Console	2-1-5
Travel Alarm and Travel Alarm Cancel Switch ..	2-1-6
Seat Heater Switch—If Equipped	2-1-6
Reversing Cooling Fan Switch—If Equipped ..	2-1-7
Cab Heater and Air Conditioner	2-1-8
Selecting Display Between Celsius and Fahrenheit	2-1-9
Operating the AM/FM Radio	2-1-9
Secondary Exit Tool	2-1-10
Opening Upper Front (Secondary Exit) Window	2-1-10
Removing and Storing the Lower Front Window	2-1-10
Opening Cab Door Window	2-1-11
Opening and Closing the Polycarbonate Type Roof Exit Cover	2-1-12
Adjusting the Mechanical Suspension Seat ..	2-1-12
Adjusting the Air Suspension Seat—If Equipped	2-1-13
Adjusting Pilot Control Lever Console Height ..	2-1-13
Operation—Monitor Operation	
Monitor	2-2-1
Monitor Functions	2-2-2
Monitor Start-Up	2-2-3
Main Menu	2-2-4
Time Set Menu	2-2-4
Selecting an Attachment From Default Screen ..	2-2-5
Selecting an Attachment From Main Menu	2-2-6
Attachment Specification Screen	2-2-7

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

COPYRIGHT © 2019
DEERE & COMPANY
Moline, Illinois
All rights reserved.
A John Deere ILLUSTRATION™ Manual
Previous Editions
Copyright © 2007, 2008, 2009, 2010, 2011, 2012, 2013, 2014, 2015

Page	Page		
Pump 2 Flow Rate Adjustment.....	2-2-8	Drain Intervals for Diesel Engine Coolant.....	3-1-12
Displaying Operating Conditions	2-2-9	John Deere COOL-GARD™ II Coolant	
Maintenance Settings	2-2-10	Extender.....	3-1-12
Screen Display When Scheduled		Supplemental Coolant Additives.....	3-1-13
Maintenance is Due	2-2-12	Operating in Warm Temperature Climates	3-1-13
Fuel Rate Display/No Display.....	2-2-14	Additional Information About Diesel	
Language Settings.....	2-2-15	Engine Coolants and John Deere	
Alarm Occurrence Screen	2-2-16	COOL-GARD™ II Coolant Extender	3-1-14
		Testing Diesel Engine Coolant.....	3-1-15
Operation—Operating the Machine		Maintenance—Periodic Maintenance	
Before Starting Work	2-3-1	Service Machine at Specified Intervals.....	3-2-1
Operator's Daily Machine Check		Check the Hour Meter Regularly	3-2-1
Before Starting	2-3-1	Prepare Machine for Maintenance	3-2-1
Engine Break-In Period	2-3-2	Open Access Doors for Service	3-2-2
Starting Engine	2-3-2	Open Engine Hood	3-2-2
Cold Weather Start Aid—If Equipped	2-3-4	Fuel Tank	3-2-2
Cold Weather Warm-Up	2-3-5	Hydraulic Breaker and Crusher Attachments	3-2-3
Travel Pedals and Levers	2-3-6	Fluid Analysis Program Test Kits and	
Locking the Hydraulic Coupler to the		3-Way Coolant Test Kit.....	3-2-3
Attachment.....	2-3-7	Service Intervals.....	3-2-4
Unlocking the Hydraulic Coupler From		Required Parts.....	3-2-6
the Attachment.....	2-3-8		
Control Lever Pattern Operation.....	2-3-9	Maintenance—As Required	
Control Lever Pattern Conversion	2-3-10	Remove and Clean Fuel Tank Inlet Screen.....	3-3-1
Mechanical Control Lever Pattern		Check and Clean Air Cleaner Dust	
Selector—If Equipped	2-3-11	Unloader Valve	3-3-1
Operating In Water and Mud	2-3-11	Check Windshield Washer Fluid Level	3-3-1
Driving Up a Steep or Slippery Slope	2-3-12	Check and Adjust Track Sag	3-3-2
Lifting	2-3-12	Check Coolant.....	3-3-4
Lower Boom With Engine Stopped.....	2-3-13	Drain Auxiliary Fuel Filter and Water	
Parking the Machine.....	2-3-14	Separator—If Equipped.....	3-3-5
Loading and Unloading for Transport	2-3-15		
Towing	2-3-16	Maintenance—Every 10 Hours or Daily	
Lifting Machine	2-3-16	Check Engine Oil Level	3-4-1
		Check Engine Coolant Level	3-4-1
Maintenance—Machine		Check Hydraulic System Oil Level	3-4-2
Diesel Fuel.....	3-1-1	Lubricate Hydraulic Coupler—If Equipped	3-4-3
Lubricity of Diesel Fuel	3-1-2		
Handling and Storing Diesel Fuel.....	3-1-2	Maintenance—Initial Service—50 Hours	
Biodiesel Fuel.....	3-1-3	Inspect and Re-Torque Track Hardware.....	3-5-1
Testing Diesel Fuel	3-1-4		
Minimizing the Effect of Cold Weather		Maintenance—Every 50 Hours or Weekly	
on Diesel Engines	3-1-5	Drain Water and Sediment from Fuel	
Alternative and Synthetic Lubricants	3-1-6	Tank Sump	3-6-1
Diesel Engine Oil — Tier 3 and Stage IIIA	3-1-6	Drain Water Separator Filter.....	3-6-1
Diesel Engine Oil and Filter Service Intervals	3-1-7		
Hydraulic Oil	3-1-8	Maintenance—Every 100 Hours	
Lubricant Storage	3-1-9	Lubricate Working Tool Pivots	3-7-1
Mixing of Lubricants.....	3-1-9		
Swing Gear Case and Travel Gear		Maintenance—Initial Service—250 Hours	
Case Oils.....	3-1-9	Drain and Refill Engine Break-In Oil	
Pump Drive Gear Case Oil.....	3-1-10	and Replace Filter	3-8-1
Track Adjuster, Working Tool Pivot,			
Swing Bearing, and Swing Bearing			
Gear Grease	3-1-10		
Diesel Engine Coolant (engine with			
wet sleeve cylinder liners).....	3-1-11		

Continued on next page

Page	Page
Maintenance—Every 250 Hours	
Check and Adjust Air Conditioner Belt	3-9-1
Check Swing Gear Case Oil Level	3-9-1
Drain Hydraulic Tank Sump	3-9-1
Check Pump Drive Gear Case Oil Level	3-9-2
Check Battery Electrolyte Level and Terminals ..	3-9-3
Check Travel Gear Case Oil Level	3-9-5
Clean Primary Air Cleaner Element.....	3-9-6
Inspect and Re-Torque Track Hardware.....	3-9-7
Take Engine Oil Sample	3-9-7
Maintenance—Every 500 Hours	
Lubricate Front End Pin Joints	3-10-1
Lubricate Swing Bearing.....	3-10-2
Lubricate Swing Bearing Gear.....	3-10-2
Replace Water Separator Filter	3-10-3
Replace Final Fuel Filter.....	3-10-3
Replace Auxiliary Fuel Filter and Water Separator—If Equipped.....	3-10-4
Drain and Refill Engine Oil and Replace Filter	3-10-5
Check Air Intake Hoses	3-10-5
Clean Cab Fresh Air and Cab Recirculation Air Filters	3-10-6
Take Fluid Samples	3-10-6
Maintenance—Every 1000 Hours	
Drain and Refill Swing Gear Case Oil	3-11-1
Replace Hydraulic Oil Tank Oil Filter	3-11-1
Clean Engine Crankcase Ventilation Tube	3-11-2
Replace Pilot Control Oil Filter	3-11-3
Inspect Serpentine Belt	3-11-4
Drain and Refill Pump Drive Gear Case Oil	3-11-4
Replace Air Cleaner Elements	3-11-5
Replace Air Cleaner Dust Unloader Valve.....	3-11-6
Check Coolant.....	3-11-6
Maintenance—Every 2000 Hours	
Adjust Engine Valve Lash.....	3-12-1
Drain and Refill Travel Gear Case Oil	3-12-1
Maintenance—Every 4000 Hours	
Replace Engine Crankshaft Damper	3-13-1
Maintenance—Every 5000 Hours	
Drain and Refill Hydraulic System Oil.....	3-14-1
Replace Hydraulic Tank Vent Cap Filter.....	3-14-3
Maintenance—Every 6000 Hours	
Drain Cooling System.....	3-15-1
Cooling System Fill and Deaeration Procedure.....	3-15-3
Miscellaneous—Machine	
Bleed Fuel System	4-1-1
Cleaning Radiator, Oil Cooler, Charge Air Cooler, Air Conditioner Condenser, and Fuel Cooler	4-1-1
Do Not Service or Adjust Injection Nozzles or High Pressure Fuel Pump	4-1-2
Do Not Service Control Valves, Cylinders, Pumps, or Motors.....	4-1-2
Precautions for Alternator and Regulator	4-1-2
Handling, Checking, and Servicing Batteries Carefully.....	4-1-3
Using Battery Charger	4-1-4
Using Booster Batteries—24-Volt System	4-1-5
Replacing Batteries	4-1-5
Location of Fluid Sampling Test Ports—If Equipped	4-1-5
Welding On Machine	4-1-6
Clean the Machine Regularly	4-1-6
Adding 12-Volt Accessories.....	4-1-6
JDLINK™ Machine Monitoring System (MMS)—If Equipped.....	4-1-6
Replacing Fuses.....	4-1-7
Replacing Bucket Teeth.....	4-1-10
Replacing Bucket Tooth Tip—Heavy-Duty Bucket	4-1-11
Replacing Bucket Teeth—TK Series	4-1-11
Removing the Bucket	4-1-12
Track Sag General Information	4-1-12
Unified Inch Bolt and Screw Torque Values.....	4-1-13
Metric Bolt and Screw Torque Values.....	4-1-14
Miscellaneous—Operational Checkout	
Operational Checkout.....	4-2-1
Miscellaneous—Troubleshooting	
Troubleshooting Procedure	4-3-1
Engine	4-3-2
Electrical System.....	4-3-5
Hydraulic System.....	4-3-7
Miscellaneous—Storage	
Prepare Machine for Storage	4-4-1
Monthly Storage Procedure.....	4-4-2
Miscellaneous—Machine Numbers	
Record Product Identification Number (PIN)	4-5-1
Record Engine Serial Number.....	4-5-1
Record Travel Motor Serial Numbers	4-5-1
Record Swing Motor Serial Number.....	4-5-2
Record Hydraulic Pump Serial Number.....	4-5-2
Hydraulic Coupler Serial Number—If Equipped	4-5-2
Keep Proof of Ownership	4-5-3
Keep Machines Secure	4-5-3

Continued on next page

 
Page

Miscellaneous—Specifications

160DLC Engine Specifications4-6-1
160DLC Drain and Refill Capacities4-6-1
160DLC Machine Specifications.....4-6-2
160DLC Working Ranges4-6-4
Lift Capacity—160DLC, Arm: 2.58 m
(8 ft 5 in.), Shoe: 600 mm (24 in.)4-6-5
Lift Capacity—160DLC, Arm: 3.10 m
(10 ft 2 in.), Shoe: 600 mm (24 in.)4-6-6
Lift Capacity—160DLC, Arm: 2.58 m
(8 ft 5 in.), Shoe: 700 mm (28 in.)4-6-7
Lift Capacity—160DLC, Arm: 3.10 m
(10 ft 2 in.), Shoe: 700 mm (28 in.)4-6-8

Safety—Safety and Operator Conveniences

Safety and Operator Convenience Features

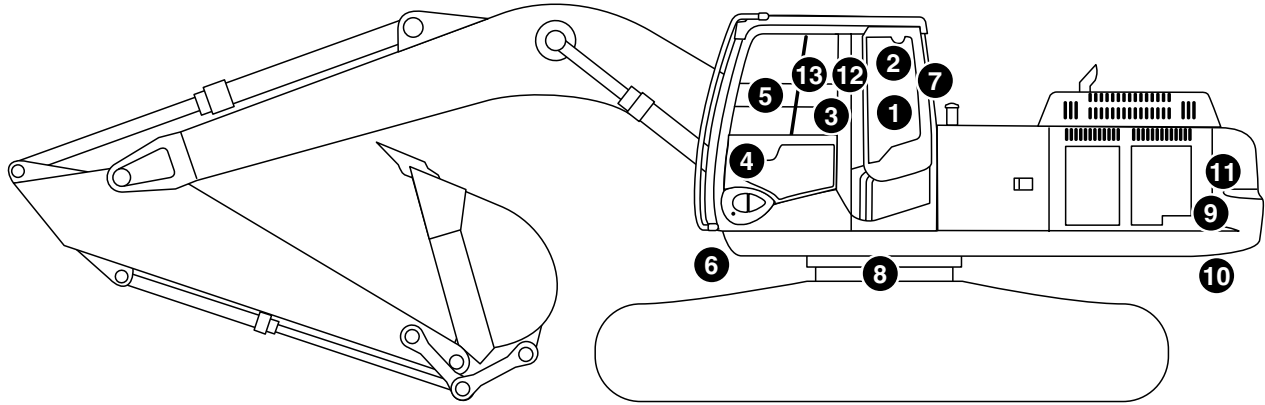

TX1002130

TX1002130—UN—04JAN06

Please remember that the operator is the key to preventing accidents.

- 1. Seat belt.** A seat belt is provided for the operator.
- 2. Window Guarding.** The stationary window with bars prevent contact with a moving boom.
- 3. Rearview Mirrors.** Rearview mirrors offer the operator a view of activity behind him.
- 4. Secondary Exit.** The front window provides a large exit path if the cab door is blocked in an emergency situation. The rear window is an alternate secondary exit, a secondary exit tool is also provided.
- 5. Pilot Shutoff Lever.** A lever near the cab exit reminds the operator to deactivate hydraulic functions before leaving the machine.
- 6. Steps.** Wide, slip-resistant steps make entry and exit easier. Steps also provide a place to clean shoes.
- 7. Handholds.** Large, conveniently placed handholds make it easy to enter or exit the operator's station or service area.
- 8. Swing Brake.** Swing brake engages automatically when the swing is not operated. Helps secure upperstructure when transporting the machine.
- 9. Bypass Start Protection.** Shielding over the starter helps prevent dangerous bypass starting.
- 10. Travel Alarm.** Alerts bystanders of forward or reverse machine movement.
- 11. Engine Fan Guard.** A fan guard inside the engine compartment helps prevent contact with the hydraulically driven fan.
- 12. Horn.** Standard horn is useful when driving or signaling co-workers.
- 13. Cab with Heater, Defroster, and Air Conditioner.** Ventilation system circulates both outside and inside air through filters for a clean working environment. Built in defroster vents direct air flow for effective window defogging/deicing. Air conditioner provides a comfortable, temperature-controlled working environment.

DW90712,0000435 -19-03JAN07-1/1

Safety—General Precautions

Recognize Safety Information

This is the safety alert symbol. When you see this symbol on your machine or in this manual, be alert for the potential of personal injury.

Follow the precautions and safe operating practices highlighted by this symbol.

A signal word — DANGER, WARNING, or CAUTION — is used with the safety alert symbol. DANGER identifies the most serious hazards.

On your machine, DANGER signs are red in color, WARNING signs are orange, and CAUTION signs are yellow. DANGER and WARNING signs are located near specific hazards. General precautions are on CAUTION labels.



TX,RECOGNIZE -19-28JUN10-1/1

T133555—UN—15APR13

T133558—19—28AUG00

 
Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Use this operator's manual for correct safety sign placement. Be sure that new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine could impair the function or safety and affect machine life.

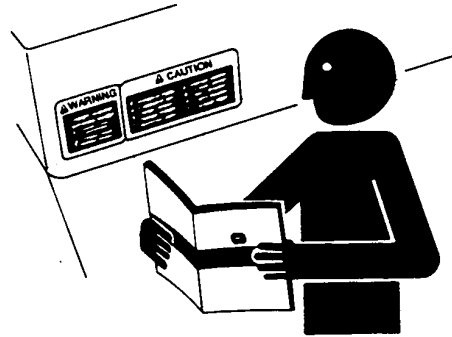

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

TX,FOLLOW -19-20JAN11-1/1

TS201—UN—15APR13

Operate Only If Qualified

Do not operate this machine unless the operator's manual has been read carefully, and you have been qualified by supervised training and instruction.

Operator should be familiar with the job site and surroundings before operating. Try all controls and

machine functions with the machine in an open area before starting to work.

Know and observe all safety rules that may apply to every work situation and work site.

TX,QUALIFIED -19-18JAN11-1/1

 
Wear Protective Equipment

Guard against injury from flying pieces or metal or debris; wear goggles or safety glasses.

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

Prolonged exposure to loud noise can cause impairment or loss of hearing. Wear suitable hearing protection such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises. Radio or music headphones are not suitable to use for hearing protection.

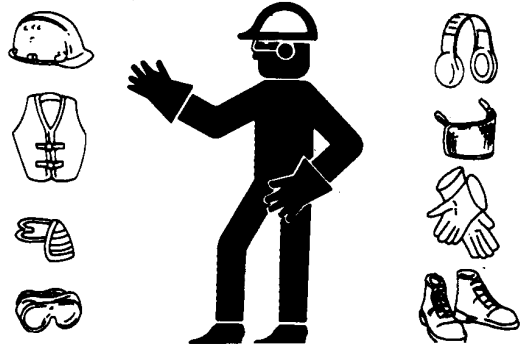

TS206—UN—15APR13

TX,WEAR,PE -19-22SEP10-1/1

Avoid Unauthorized Machine Modifications

John Deere recommends using only genuine John Deere replacement parts to ensure machine performance. Never substitute genuine John Deere parts with alternate parts not intended for the application as these can create hazardous situations or hazardous performance. Non-John Deere parts, or any damage or malfunctions resulting from their use, are not covered by any John Deere warranty.

Modifications of this machine, or addition of unapproved products or attachments, may affect machine stability or

reliability, and may create a hazard for the operator or others near the machine. The installer of any modification which may affect the electronic controls of this machine is responsible for establishing that the modification does not adversely affect the machine or its performance.

Always contact an authorized dealer before making machine modifications that change the intended use, weight or balance of the machine, or that alter machine controls, performance, or reliability.

AM40430,00000A9 -19-01JUL15-1/1

Inspect Machine

Inspect machine carefully each day by walking around it before starting.

Keep all guards and shields in good condition and properly installed. Fix damage and replace worn or broken parts immediately. Pay special attention to hydraulic hoses and electrical wiring.



T6607AQ—UN—15APR13

 
TX,INSPECT -19-08SEP10-1/1

Stay Clear of Moving Parts

Entanglements in moving parts can cause serious injury.

Stop engine before examining, adjusting, or maintaining any part of machine with moving parts.

Keep guards and shields in place. Replace any guard or shield that has been removed for access as soon as service or repair is complete.

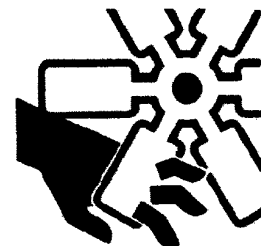

T133592—UN—15APR13

TX,MOVING,PARTS -19-20JAN11-1/1

Avoid High-Pressure Fluids

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

 
Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar

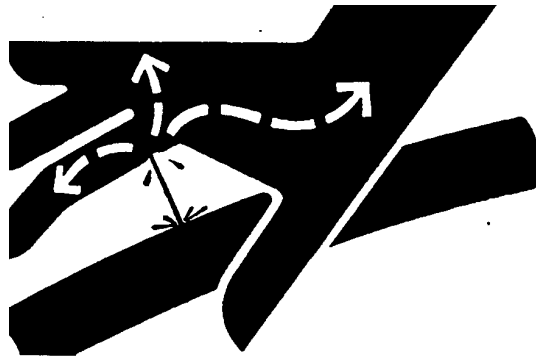

with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

X8611 —UN—23AUG88

 
DX,FLUID -19-12OCT11-1/1

Avoid High-Pressure Oils

This machine uses a high-pressure hydraulic system. Escaping oil under pressure can penetrate the skin causing serious injury.

Never search for leaks with your hands. Protect hands. Use a piece of cardboard to find location of escaping oil. Stop engine and relieve pressure before disconnecting lines or working on hydraulic system.

If hydraulic oil penetrates your skin, see a doctor immediately. Injected oil must be removed surgically within hours or gangrene could result. Contact a knowledgeable medical source or the Deere & Company Medical Department in Moline, Illinois, U.S.A.

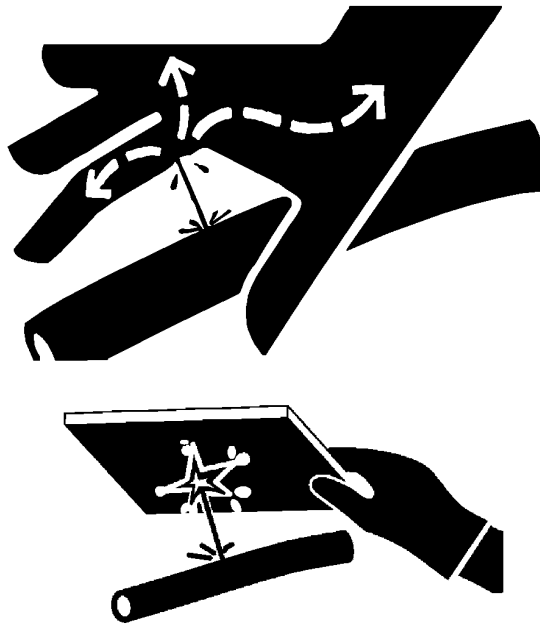

T133509 —UN—15APR13

 
T133840 —UN—20SEP00

TX,HPOILS -19-20JAN11-1/1

Work In Ventilated Area

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

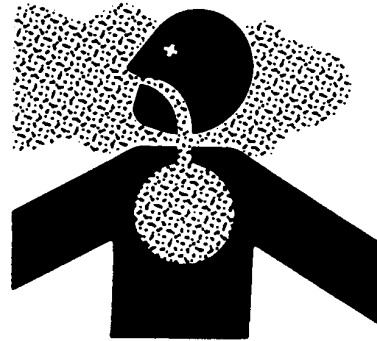

TS220 —UN—15APR13

DX,AIR -19-17FEB99-1/1

Prevent Fires

Handle Fluids Safely: All fuels, most lubricants, and some coolant mixtures are flammable. Store flammable fluids away from fire hazards. Never refuel machine while smoking or when near sparks or flame.

Clean Machine Regularly: Keep flammable debris (trash, leaves, twigs, straw, and so forth), grease and oil from accumulating in engine compartment, around fuel lines, hydraulic lines, exhaust components, and electrical wiring. Never store oily rags or flammable materials inside a machine compartment.

Maintain Hoses, Tubes, and Wiring: Replace hoses and tubes immediately if they begin to leak, and clean up any oil spills. Examine electrical wiring and connectors frequently for damage.

Keep A Fire Extinguisher Available: Always keep a multipurpose fire extinguisher on or near the machine. Know how to use an extinguisher properly.

 
Be Aware of the Operating Environment: Airborne debris may contain sparks or embers. Do not operate near any flame.



T133553 —UN—07SEP00



T133554 —UN—07SEP00

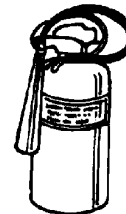

T133552 —UN—15APR13

TX,PREVENT,FIRE -19-09JUN16-1/1

Prevent Battery Explosions

Keep sparks, lighted matches, and open flame away from the top of battery. Battery gas can explode.

Never check battery charge by placing a metal object across the posts. Use a volt-meter or hydrometer.

Do not charge a frozen battery; it may explode. Warm battery to 16°C (60°F).



TS204—UN—15APR13

DX, SPARKS -19-03MAR93-1/1

Handle Chemical Products Safely

Direct exposure to hazardous chemicals can cause serious injury. Potentially hazardous chemicals used with John Deere equipment include such items as lubricants, coolants, paints, and adhesives.

A Material Safety Data Sheet (MSDS) provides specific details on chemical products: physical and health hazards, safety procedures, and emergency response techniques.

Check the MSDS before you start any job using a hazardous chemical. That way you will know exactly what the risks are and how to do the job safely. Then follow procedures and recommended equipment.

(See your John Deere dealer for MSDS's on chemical products used with John Deere equipment.)




TS1132—UN—15APR13

DX, MSDS, NA -19-03MAR93-1/1

Decommissioning — Proper Recycling and Disposal of Fluids and Components

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

 - Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.
- Release stored energy by lowering suspended machine elements, relaxing springs, disconnecting the battery or other electrical power, and releasing pressure in hydraulic components, accumulators, and other similar systems.
- Minimize exposure to components which may have residue from agricultural chemicals, such as fertilizers and pesticides. Handle and dispose of these components appropriately.
- Carefully drain engines, fuel tanks, radiators, hydraulic cylinders, reservoirs, and lines before recycling components. Use leak-proof containers when draining fluids. Do not use food or beverage containers.
- Do not pour waste fluids onto the ground, down a drain, or into any water source.
- Observe all national, state, and local laws, regulations, or ordinances governing the handling or disposal of waste fluids (example: oil, fuel, coolant, brake fluid);

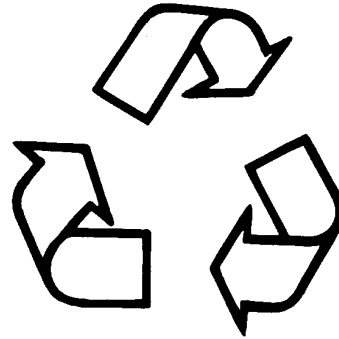

- filters; batteries; and, other substances or parts. Burning of flammable fluids or components in other than specially designed incinerators may be prohibited by law and could result in exposure to harmful fumes or ashes.
- Service and dispose of air conditioning systems appropriately. Government regulations may require a certified service center to recover and recycle air conditioning refrigerants which could damage the atmosphere if allowed to escape.
 - Evaluate recycling options for tires, metal, plastic, glass, rubber, and electronic components which may be recyclable, in part or completely.
 - Contact your local environmental or recycling center, or your John Deere dealer for information on the proper way to recycle or dispose of waste.

DX,DRAIN -19-01JUN15-1/1


TS1133 —UN—15APR13

Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

 Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

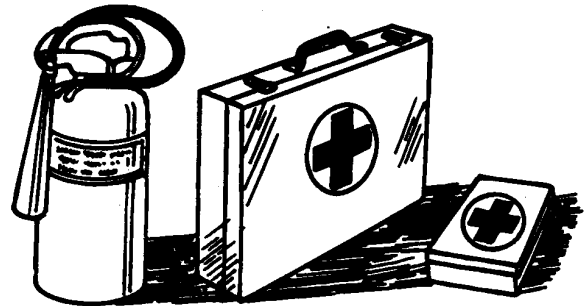

DX,FIRE2 -19-03MAR93-1/1

TS291 —UN—15APR13

 
Clean Debris from Machine

Keep engine compartment, radiator, batteries, hydraulic lines, exhaust components, fuel tank, and operator's station clean and free of debris.

Clean any oil spills or fuel spills on machine surfaces.

Temperature in engine compartment could go up immediately after engine is stopped. **BE ON GUARD FOR FIRES DURING THIS PERIOD.**

Open access door(s) to cool the engine faster, and clean engine compartment.

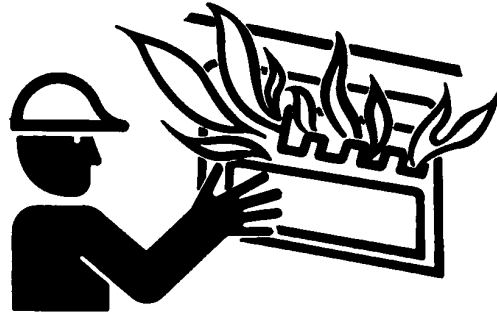

T6669AG—UN—15APR13

TX,DEBRIS -19-20JAN11-1/1

Add Cab Guarding for Special Uses

Special work situations or machine attachments could create an environment with falling or flying objects. Working near an overhead bank, demolition work, using a hydraulic hammer or winch, working in a forestry application or wooded area, or working in a waste management application, for example, could require added guarding to protect the operator.

Additional level II FOPS (falling object protective structure), forestry protection packages, and special

screens or guarding should be installed when falling or flying objects could enter or damage the machine. A rear screen should always be used with a winch to protect against a snapping cable. Before operating in any special work environments, follow the operator protection recommendations of the manufacturer of any specialized attachment or equipment. Contact your authorized John Deere dealer for information on protective guarding.

 
TX,CABGUARD -19-12FEB13-1/1

Safety—Operating Precautions

Use Steps and Handholds Correctly

Prevent falls by facing the machine when you get on and off. Maintain 3-point contact with steps and handrails. Never use machine controls as handholds.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

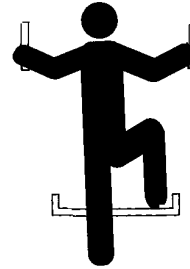

T133468 —UN—15APR13

TX,STEPS -19-09FEB11-1/1

Start Only From Operator's Seat

Avoid unexpected machine movement. Start engine only while sitting in operator's seat. Ensure that all controls and working tools are in proper position for a parked machine.

Never attempt to start engine from the ground. Do not attempt to start engine by shorting across the starter solenoid terminals.



T133715 —UN—15APR13

TX,SOFOS -19-20JAN11-1/1

Use and Maintain Seat Belt

Use seat belt when operating machine. Remember to fasten seat belt when loading and unloading from trucks and during other uses.

Examine seat belt frequently. Be sure that webbing is not cut or torn. Replace seat belt immediately if any part is damaged or does not function properly.

The complete seat belt assembly should be replaced every three years, regardless of appearance.



USE SEAT BELT

T133716 —19—17APR13

TX,SEAT,BELT -19-20JAN11-1/1

Avoid Work Site Hazards

Avoid contact with gas lines, buried cables, and water lines. Call utility line location services to identify all underground utilities before digging.

 
 
Prepare work site properly. Avoid operating near structures or objects that could fall onto the machine. Clear away debris that could move unexpectedly if run over.

Avoid boom or arm contact with overhead obstacles or overhead electrical lines. Never move any part of machine or load closer than 3 m (10 ft) plus twice the line insulator length to overhead wires.

Keep bystanders clear at all times. Keep bystanders away from raised booms, attachments, and unsupported loads. Avoid swinging or raising booms, attachments, or loads over or near bystanders. Use barricades or a signal person to keep vehicles and pedestrians away. Use a signal person if moving machine in congested areas or where visibility is restricted. Always keep signal person in view. Coordinate hand signals before starting machine.

Operate only on solid footing with strength sufficient to support machine. When working close to an excavation, position travel motors away from the hole.

Reduce machine speed when operating with tool on or near ground when obstacles may be hidden (e.g., during snow removal or clearing mud, dirt, etc). At high speeds, hitting obstacles (rocks, uneven concrete, or manholes) can cause a sudden stop. Always wear seat belt.

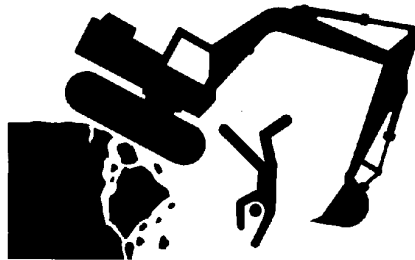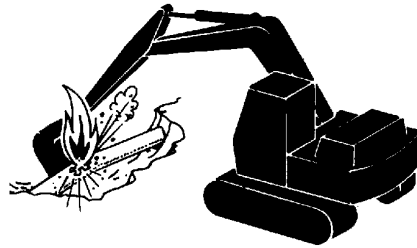

Work Site Hazards

TX03679,0001748 -19-08JUL15-1/1

T134886—UN—31OCT00

T133650—UN—27SEP00

T133549—UN—24AUG00

Keep Riders Off Machine

Only allow operator on machine.

Riders are subject to injury. They may fall from machine, be caught between machine parts, or be struck by foreign objects.

Riders may obstruct operator's view or impair the ability to operate machine safely.



Keep Riders Off Machine

TX03679,0001726 -19-30JUN16-1/1

T7273AH—UN—08JUN90

Avoid Backover Accidents

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use mirrors to assist in checking all around machine. Keep windows and mirrors clean, adjusted, and in good repair.

Be certain reverse warning alarm is working properly.

Use a signal person when backing if view is obstructed or when in close quarters. Keep signal person in view at all times. Use prearranged hand signals to communicate.

Do not rely on the rear camera and radar object detection systems, if equipped, to determine if personnel are behind the machine. The system has limitations due to maintenance practices, environmental conditions, and operating range.



TX.AVOID.BACKOVER -19-04MAR16-1/1

PC10857XW —UN—15APR13

Avoid Machine Tip Over

Use seat belt at all times.

Do not jump if the machine tips. Operator will be unlikely to jump clear and the machine may crush the operator.

Load and unload from trucks or trailers carefully. Be sure truck is wide enough and on a firm level surface. Use loading ramps and attach them properly to truck bed. Avoid trucks with steel beds because tracks slip more easily on steel.

Be careful on slopes. Use extra care on soft, rocky or frozen ground. Machine may slip sideways in these conditions. When traveling up or down slopes, keep the bucket on uphill side and just above ground level.

 
Be careful with heavy loads. Using oversize buckets or lifting heavy objects reduces machine stability. Extending a heavy load or swinging it over side of undercarriage may cause machine to tip.

Ensure solid footing. Use extra care when operating near banks or excavations that may cave-in and cause machine to tip or fall.




**USE
SEAT
BELT**

Use Seat Belt

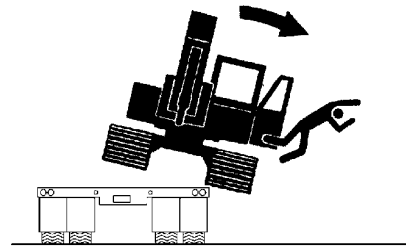

Unloading Machine

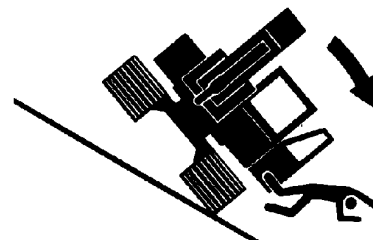 

Do Not Jump

TX03679,00016DF -19-30JUN16-1/1

T133716 —19—17APR13

 
 
T133545 —UN—15SEP00

T133803 —UN—27SEP00

Operating or Traveling On Public Roads

Machines that work near vehicle traffic or travel slower than normal highway speeds must have proper lighting and markings to assure they are visible to other drivers.

Install additional lights, beacon lights, slow moving vehicle (SMV) emblems, or other devices and use as required to make the machine visible and identify it as a work machine. Check state and local regulations to assure compliance. Keep these devices clean and in working condition.

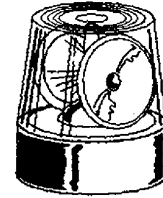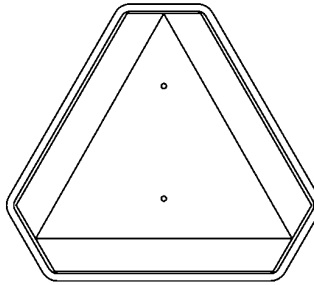

T141891—UN—15APR13

TX,ROADS -19-20JAN11-1/1

Inspect and Maintain ROPS

A damaged rollover protective structure (ROPS) should be replaced, not reused.

The protection offered by ROPS could be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting.

If ROPS was loosened or removed for any reason, inspect it carefully before operating the machine again.

To maintain the ROPS:

- Replace missing hardware using correct grade hardware.
- Check hardware torque.
- Check isolation mounts for damage, looseness, or wear; replace them if necessary.
- Check ROPS for cracks or physical damage.

TX,ROPS -19-20JAN11-1/1

Add and Operate Attachments Safely

Always verify compatibility of attachments by contacting your authorized dealer. Adding unapproved attachments could affect machine stability or reliability and could create a hazard for others near the machine.

Ensure that a qualified person is involved in attachment installation. Add guards to machine if operator protection

is required or recommended. Verify that all connections are secure and attachment responds properly to controls.

Carefully read attachment manual and follow all instructions and warnings. In an area free of bystanders and obstructions, carefully operate attachment to learn its characteristics and range of motion.

TX,ATTACH -19-20JAN11-1/1

 
Use Special Care When Lifting Objects

Never use this machine to lift people.

Never lift a load above another person. Keep bystanders clear of all areas where a load might fall if it breaks free. Do not leave the seat when there is a raised load.

Do not exceed lift capacity limits posted on machine and in this manual. Extending heavy loads too far or swinging over undercarriage side may cause machine to tip over.

Use proper rigging to attach and stabilize loads. Be sure slings or chains have adequate capacity and are in good

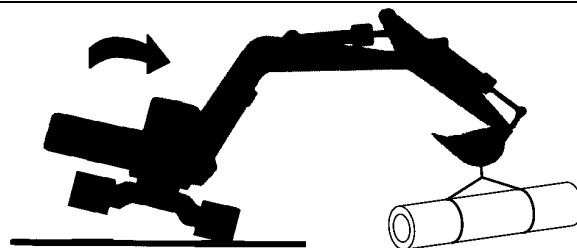

Use Special Care When Lifting Objects

condition. Use tether lines to guide loads and prearranged hand signals to communicate with co-workers.

TX03679,00016E1 -19-08JUL15-1/1

T133839—UN—27SEP00

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com