

Quality Changes the World



# Excavator

**SY215C9M3KS**



---

**Safety, Operation & Maintenance Manual**



# SANY

## SY215 Excavator

(SY215C9M3KS)

### Safety, Operation & Maintenance Manual

#### **WARNING**

Read and understand all safety precautions and instructions in this manual before reading any other manuals provided with this machine and before operating or maintaining it. Failure to do this could result in death or serious injury.

This manual and its contents prepared by Sany group Technical Publications while deemed to be accurate, is based upon technical information provided, and for equipment designed, manufactured and tested by:

Sany heavy machinery CO., LTD  
Sany Industry Town, Lianggang Road, No.318, Fengxian, Shanghai,  
China 201413  
[www.sanygroup.com](http://www.sanygroup.com)

It is the responsibility of the owner, user, properly trained operator and lessor to be knowledgeable of, and comply with, all industry standards, government regulations, workplace rules and other directives that may govern and/or apply to this equipment as well as its environment/conditions of use.

Sany heavy machinery CO., LTD  
Sany Industry Town, Lianggang Road, No.318, Fengxian, Shanghai,  
China 201413  
[www.sanygroup.com](http://www.sanygroup.com)  
Phone: 4008 28 2318  
Fax: 021-57001222

© 2015 by Sany group, Inc. All rights reserved. No part of this publication may be reproduced, used, distributed or disclosed except for normal operation and maintenance of the machine as described herein. All information included within this publication was accurate at the time of publication. Product improvements, revisions, etc., may result in differences between your machine and what is presented here. For more information, contact Sany group, Inc.



# Table of Contents

About This Manual .....	1-3
Contact Information .....	1-3
Your Documentation Package .....	1-4
Safety, Operation & Maintenance	
Parts Book .....	1-4
Maintenance Log .....	1-4
Organization of This Manual .....	1-5
Table of Contents .....	1-5
Introduction .....	1-5
Safety .....	1-5
System Functions .....	1-5
Operation .....	1-5
Maintenance .....	1-5
Troubleshooting .....	1-5
Specifications .....	1-5
Optional Equipment .....	1-5
Serial Number Location .....	1-6
Record of Serial Number and Dealer Information .....	1-6
Correction Request Form .....	1-7

TABLE OF CONTENTS
INTRODUCTION
SAFETY
SYSTEM FUNCTION
OPERATION
MAINTENANCE
TROUBLESHOOTING
SPECIFICATIONS
OPTIONAL EQUIPMENT

**SAFETY**

Safety - General . . . . . 2-3

    Hazard Alerts in This Manual . . . . . 2-4

    Diesel Engine Exhaust . . . . . 2-5

    Battery Posts, Terminals and Related Accessories . . . . . 2-5

    Operator Safety Information . . . . . 2-5

    Operator is Important . . . . . 2-6

    Operator Qualifications . . . . . 2-6

    Machine Safety . . . . . 2-6

    Keep the Operator Cab Clean . . . . . 2-7

    Mount and Dismount the Machine . . . . . 2-8

    Unauthorized Machine Modifications . . . . . 2-9

    Job Safety . . . . . 2-9

    Job Site Safety . . . . . 2-10

    Surface and Underground Hazards . . . . . 2-10

        High Voltage Areas . . . . . 2-11

        Electrocution Hazard . . . . . 2-11

    Pre-Start Checks . . . . . 2-13

    Start-Up Safety . . . . . 2-13

    Personal Protective Equipment . . . . . 2-14

    Fire Safety . . . . . 2-14

        Fluid Fires . . . . . 2-15

        Electrical Fires . . . . . 2-15

        Fire Extinguisher . . . . . 2-16

        In Case of Fire . . . . . 2-16

    Dust and Chemical Hazards . . . . . 2-16

        Dust Hazards . . . . . 2-16

        Safety Data Sheets (SDS) . . . . . 2-17

    Maintenance Safety . . . . . 2-17

        Clean the Machine . . . . . 2-17

        Use the Correct Tools . . . . . 2-18

        Jack Up the Machine . . . . . 2-18

        Rotating Parts . . . . . 2-18

Remove Attachments . . . . .	2-19	TABLE OF CONTENTS
Weld, Drill, Cut or Grind on the Machine . . . . .	2-19	
Fluid Systems . . . . .	2-19	INTRODUCTION
Add Fluids to the Machine . . . . .	2-19	
Refuel. . . . .	2-19	
High-Pressure Fluid Lines . . . . .	2-20	SAFETY
Accumulator . . . . .	2-20	
Electrical System . . . . .	2-20	SYSTEM FUNCTION
Battery Safety. . . . .	2-20	
Disconnect the Battery . . . . .	2-21	
Jump-Start Safety . . . . .	2-21	OPERATION
Environmental Precautions . . . . .	2-21	
Product-Specific Safety . . . . .	2-22	MAINTENANCE
Lockout/Tagout Procedures . . . . .	2-22	
Lock Out of Operation . . . . .	2-22	
Return to Operation . . . . .	2-23	SPECIFICATIONS TROUBLESHOOTING
Machine Decals . . . . .	2-23	
Type, Location and Meaning . . . . .	2-24	OPTIONAL EQUIPMENT
Authorized Use of the Machine . . . . .	2-37	
Unauthorized Use of the Machine . . . . .	2-37	
Job Site Precautions . . . . .	2-38	
Surface and Underground Hazards . . . . .	2-39	
Job Site Working Clearances. . . . .	2-39	
Travel Precautions . . . . .	2-41	
Traveling on Sloped Areas. . . . .	2-42	
Snow or Frozen Surfaces. . . . .	2-42	
Accumulation of Flammable Material. . . . .	2-43	
Escape Tool . . . . .	2-44	
Crush or Pinch-Point Precautions . . . . .	2-44	
Tow or Lift the Machine . . . . .	2-44	
Operation Precautions . . . . .	2-47	
Operation on a Sloped Area. . . . .	2-48	

**System Functions**

Exterior Components . . . . . 3-3

Cab Interior . . . . . 3-4

    Seat and Seat Belt . . . . . 3-4

    Hydraulic Lockout Control Lever . . . . . 3-5

    Left Control Console . . . . . 3-6

        Climate Control Panel . . . . . 3-7

        Radio Control Panel. . . . . 3-9

    Right Control Console . . . . . 3-11

        Switches. . . . . 3-11

        Indicator Lights. . . . . 3-11

        Ignition Switch . . . . . 3-12

        Throttle Control Dial . . . . . 3-12

        12V Power Supply Socket . . . . . 3-13

        Work Lamp Switch . . . . . 3-13

        Windshield Wiper Switch . . . . . 3-13

        Windshield Washer Switch . . . . . 3-13

        Head Lamp Switch. . . . . 3-13

    Joystick Controls . . . . . 3-14

        SAE/BHL Joystick Operating Modes . . . . . 3-14

        SAE Mode . . . . . 3-16

    Travel Controls. . . . . 3-19

        Auto Deceleration Function . . . . . 3-20

    Fuses . . . . . 3-21

Combined Instruments Display/Monitor. . . . . 3-22

    Screen Displays - Configuration 1 . . . . . 3-23

        Main Operator Screen . . . . . 3-23

        System Information (Password) Screen . . . . . 3-25

        Main Menu Screen. . . . . 3-26

        Running Information. . . . . 3-27

        Failure Codes Screens . . . . . 3-32

        Throttle Help Info Screen . . . . . 3-34



Language Selection Screen . . . . .	3-34	TABLE OF CONTENTS
Sys Clock Calibration Screen . . . . .	3-35	
Units Display Setting Screen . . . . .	3-35	
Screen Displays - Configuration 2 . . . . .	3-36	INTRODUCTION
Main Operator Screen . . . . .	3-36	
System Information (Password) Screen . . . . .	3-36	
Main Menu Screen . . . . .	3-37	SAFETY
Running Information . . . . .	3-38	
Failure Codes Screens . . . . .	3-40	
Throttle Help Info Screen . . . . .	3-40	SYSTEM FUNCTION
Language Selection Screen . . . . .	3-40	
Sys Clock Calibration Screen . . . . .	3-40	
<b>Operation</b>		OPERATION
Work Area . . . . .	4-3	
General Job Safety . . . . .	4-3	
Job Site Safety . . . . .	4-3	MAINTENANCE
Work Crew . . . . .	4-4	
Supervisor . . . . .	4-4	
Owner and Other Authorized Personnel . . . . .	4-4	SPECIFICATIONS TROUBLESHOOTING
Operator . . . . .	4-5	
Mount and Dismount the Machine . . . . .	4-6	
Seat Belt Usage . . . . .	4-6	OPTIONAL EQUIPMENT
New Machine Run-In . . . . .	4-7	
Pre-Start Checks . . . . .	4-8	
Safety, Operation & Maintenance Manual . . . . .	4-8	
Daily Maintenance Record . . . . .	4-8	
Clean . . . . .	4-10	
Interior . . . . .	4-11	
Operator Cab . . . . .	4-11	
Seat Belt . . . . .	4-11	
Mirrors . . . . .	4-12	

---

Operator Controls .....	4-13
Lamps and Warning Devices .....	4-13
Fire Extinguisher .....	4-14
Escape Tool .....	4-14
Front Window Locks .....	4-14
Combined Instruments Display/Monitor Settings.....	4-15
First-Time Setup .....	4-15
Access the Main Menu.....	4-15
Language Selection .....	4-16
System Clock Calibration.....	4-16
Units Selection .....	4-16
Engine Procedures .....	4-17
Cold-Weather Operation .....	4-17
Engine Start Procedure .....	4-18
Idle the Engine .....	4-20
Engine Shutdown Procedure .....	4-21
Machine Warm-Up.....	4-22
Travel Operations .....	4-24
Before Travel .....	4-25
Track Direction.....	4-27
Right Turn .....	4-27
Left Turn.....	4-28
Straight Travel .....	4-28
Left Zero-Degree Rotation .....	4-28
Right Zero-Degree Rotation.....	4-29
Slopes .....	4-29
Operations in Water .....	4-30
Release Machine from Mud .....	4-31
One Track Stuck .....	4-31
Two Tracks Stuck .....	4-31
Control Work Equipment .....	4-32
SAE Control Pattern.....	4-32
Swing .....	4-32

Arm . . . . .	4-33
Boom . . . . .	4-33
Bucket . . . . .	4-33
BHL Control Pattern. . . . .	4-34
Swing . . . . .	4-34
Arm . . . . .	4-34
Boom . . . . .	4-35
Bucket . . . . .	4-35
Recommended Applications . . . . .	4-36
Backhoe Operation . . . . .	4-36
Digging a Trench . . . . .	4-37
Loading Operations . . . . .	4-37
Bucket Replacement . . . . .	4-38
End-of-Workday Checks . . . . .	4-40
Park and Store the Machine . . . . .	4-41
Overnight Storage . . . . .	4-41
Short-Term Storage . . . . .	4-42
Long-Term Storage . . . . .	4-42
Preparation . . . . .	4-43
During Storage. . . . .	4-46
Return to Service . . . . .	4-46
Transport . . . . .	4-47
Lift the Machine . . . . .	4-47
Load the Machine . . . . .	4-48
Unload the Machine . . . . .	4-53

TABLE OF CONTENTS
INTRODUCTION
SAFETY
SYSTEM FUNCTION
OPERATION
MAINTENANCE
SPECIFICATIONS TROUBLESHOOTING
OPTIONAL EQUIPMENT

**Maintenance**

Maintenance Information . . . . . 5-5

    Checks Before Maintenance . . . . . 5-5

    Checks After Maintenance or Repairs . . . . . 5-6

    Hour Meter Reading. . . . . 5-6

    Genuine Sany Replacement Parts. . . . . 5-6

    Sany-Approved Lubricants. . . . . 5-6

    Weld, Drill, Cut or Grind on the Machine . . . . . 5-7

    Clean Parts or the Machine . . . . . 5-7

    Covers and Locks . . . . . 5-7

    Hydraulic Fluid Inspection . . . . . 5-8

    Inspection and Maintenance in Adverse Environments . . . . . 5-8

        Mud, Rain or Snow Conditions . . . . . 5-8

        Near Ocean (Salt Air) Environments . . . . . 5-8

        Dusty Environments. . . . . 5-9

        Rocky Ground Surface. . . . . 5-9

        Cold Environments. . . . . 5-9

        Other Weather Environments . . . . . 5-9

Torque Values . . . . . 5-10

    Specific Torque Values. . . . . 5-10

    General Torque Values . . . . . 5-11

        Hardware . . . . . 5-11

        Hoses. . . . . 5-12

        Fittings . . . . . 5-12

Fluids & Lubricants . . . . . 5-13

    Location, Capacity and Type . . . . . 5-13

    Fuel . . . . . 5-14

    Engine Oil Viscosity/Temperature Data . . . . . 5-14

    Lubricating Grease/Temperature Data. . . . . 5-15

    Industrial Gear Oil/Temperature Data . . . . . 5-15

    Hydraulic Fluid/Ambient Temperature Data . . . . . 5-15

    Engine Coolant . . . . . 5-16

        Supplemental Coolant Additive (SCA) . . . . . 5-16

Lubricants . . . . .	5-17	TABLE OF CONTENTS
Grease . . . . .	5-17	
Windshield Washer Fluid . . . . .	5-17	INTRODUCTION
Daily Maintenance . . . . .	5-18	
Secure the Machine for Maintenance (Power Off). . . . .	5-18	SAFETY
Check. . . . .	5-19	
Safety, Operation & Maintenance Manual . . . . .	5-19	SYSTEM FUNCTION
Fire Extinguisher . . . . .	5-19	
Escape Tool . . . . .	5-19	OPERATION
Electrical System . . . . .	5-19	
Air Intake . . . . .	5-21	MAINTENANCE
Engine Oil Level. . . . .	5-21	
Engine Serpentine Belt . . . . .	5-22	TROUBLESHOOTING
Swing Gearbox . . . . .	5-23	
Pump Mounting Bolts. . . . .	5-25	OPTIONAL EQUIPMENT
Hydraulic Line Connections . . . . .	5-26	
Idler Wheel. . . . .	5-27	
Sheet Metal . . . . .	5-27	
Decals . . . . .	5-27	
Drain . . . . .	5-28	
Primary Fuel Filter . . . . .	5-28	
Secure the Machine for Maintenance (Power On). . . . .	5-30	
Check. . . . .	5-30	
Operating Functions. . . . .	5-30	
Fuel Level . . . . .	5-33	
Engine Coolant Level. . . . .	5-34	
Hydraulic Fluid Tank . . . . .	5-35	
Air Conditioner . . . . .	5-38	
Maintenance Log . . . . .	5-41	
Lockout/Tagout. . . . .	5-41	
50-Hour Maintenance . . . . .	5-42	
Secure the Machine for Maintenance (Power Off). . . . .	5-42	
Check. . . . .	5-43	

Engine Air Filter System . . . . .	5-43
Muffler and Exhaust System . . . . .	5-45
Hydraulic Hoses. . . . .	5-46
Batteries. . . . .	5-47
Track Shoe Connecting Bolts . . . . .	5-49
Track Support Roller Mounting Bolts . . . . .	5-50
Final Drive Motor Mounting Bolts. . . . .	5-50
Lubricate . . . . .	5-52
Work Equipment . . . . .	5-52
Secure the Machine for Maintenance (Power On). . . . .	5-56
Change . . . . .	5-57
Engine Oil and Filter (Initial). . . . .	5-57
Check. . . . .	5-61
Final Drive Gearbox Oil Level . . . . .	5-61
Track Tension (Initial) . . . . .	5-62
Lubricate . . . . .	5-64
Swing Bearing . . . . .	5-64
Maintenance Log . . . . .	5-64
Lockout/Tagout. . . . .	5-64
250-Hour Maintenance . . . . .	5-65
Secure the Machine for Maintenance (Power Off). . . . .	5-65
Change . . . . .	5-66
Hydraulic Pilot Line Filter Element (Initial) . . . . .	5-66
Hydraulic Fluid - Breaker-Equipped (400 Hours) . . . . .	5-67
Check. . . . .	5-68
Air Conditioner Compressor Belt . . . . .	5-68
Windshield Washer and Windshield Wiper . . . . .	5-70
Track Assemblies. . . . .	5-72
Fuses . . . . .	5-72
Supplemental Coolant Additive (SCA) Levels (if used) . . . . .	5-72
Grab Handles and Steps . . . . .	5-73
Cab Door, Access Panels and Locks. . . . .	5-73
Secure the Machine for Maintenance (Power On). . . . .	5-74

Change .....	5-74	TABLE OF CONTENTS
Hydraulic Tank Return Filter (Initial) .....	5-74	
Check .....	5-77	INTRODUCTION
Track Tension .....	5-77	
Maintenance Log .....	5-77	SAFETY
Lockout/Tagout .....	5-77	
500-Hour Maintenance .....	5-78	SYSTEM FUNCTION
Secure the Machine for Maintenance (Power Off) .....	5-78	
Change .....	5-79	OPERATION
Hydraulic System Breather Filter .....	5-79	
Engine Air Filter .....	5-80	MAINTENANCE
Check .....	5-80	
Radiator, Oil Cooler, and A/C Condenser Fins .....	5-80	SPECIFICATIONS TROUBLESHOOTING
Air Conditioning Fresh Air & Recirculation Filters .....	5-82	
Seat Belt .....	5-84	OPTIONAL EQUIPMENT
Swing Gearbox Bolts .....	5-84	
Hydraulic Hoses .....	5-85	
Upperworks and Lowerworks .....	5-86	
Final Drive .....	5-87	
Swing Pinion Gear .....	5-87	
Swing Gearbox Bearing .....	5-88	
Secure the Machine for Maintenance (Power On) .....	5-89	
Change .....	5-89	
Swing Gearbox Oil .....	5-89	
Engine Oil and Filter .....	5-92	
Primary Fuel Filter .....	5-93	
Check .....	5-95	
Hydraulic Pump .....	5-95	
Maintenance Log .....	5-95	
Lockout/Tagout .....	5-95	
1,000-Hour Maintenance .....	5-96	
Secure the Machine for Maintenance (Power Off) .....	5-96	
Change .....	5-97	

---

Hydraulic Pilot Line Filter . . . . .	5-97
Hydraulic Tank Return Filter . . . . .	5-97
Check. . . . .	5-97
Engine Exhaust Pipe Clamps . . . . .	5-97
Fuel Tank Strainer . . . . .	5-98
Fuel Lines . . . . .	5-99
Secure the Machine for Maintenance (Power On). . . . .	5-99
Check. . . . .	5-100
Accumulator Function Check (Breaker-Equipped only) . . . . .	5-100
Maintenance Log . . . . .	5-100
Lockout/Tagout. . . . .	5-100
2,000-Hour Maintenance . . . . .	5-101
Secure the Machine for Maintenance (Power Off). . . . .	5-101
Change . . . . .	5-102
Final Drive Oil . . . . .	5-102
Check. . . . .	5-103
Hydraulic Hoses. . . . .	5-103
Secure the Machine for Maintenance (Power On). . . . .	5-103
Change . . . . .	5-104
Hydraulic Fluid . . . . .	5-104
Engine Coolant . . . . .	5-110
Check. . . . .	5-114
Accumulator Function Check . . . . .	5-114
Swing Bearing Bolts. . . . .	5-114
Maintenance Log . . . . .	5-114
Lockout/Tagout. . . . .	5-114
Machine Storage . . . . .	5-115
Short-Term Storage . . . . .	5-115
Long-Term Storage . . . . .	5-115



**Troubleshooting**

Towing . . . . . 6-2

    General Information . . . . . 6-2

    Light Loads . . . . . 6-3

Purge the Fuel System . . . . . 6-4

Jump-Start the Engine . . . . . 6-5

Fuses . . . . . 6-7

Failure Codes . . . . . 6-8

**Specifications**

Machine Dimensions . . . . . 7-2

Operating Ranges . . . . . 7-4

Lift Chart - Long Arm . . . . . 7-8

Lift Chart - Super Long Reach . . . . . 7-9

**Optional Equipment**

Optional Equipment Safety . . . . . 8-2

    Optional Equipment Selection . . . . . 8-2

    Read Equipment Instructions. . . . . 8-2

    Removal and Installation Precautions . . . . . 8-2

    Optional Equipment Operation Precautions. . . . . 8-2

Optional Equipment System Functions . . . . . 8-3

    Component Location and Function . . . . . 8-3

        Stop Valves . . . . . 8-3

        Selector Valve . . . . . 8-4

        Combined Instrument Display . . . . . 8-5

Optional Equipment Operation . . . . . 8-6

    Attach Optional Equipment . . . . . 8-6

    Optional Equipment Controls . . . . . 8-9

        Breaker Control . . . . . 8-10

        Shear Control. . . . . 8-10

    Disconnect Optional Equipment. . . . . 8-11

TABLE OF CONTENTS

INTRODUCTION

SAFETY

SYSTEM FUNCTION

OPERATION

MAINTENANCE

SPECIFICATIONS TROUBLESHOOTING

OPTIONAL EQUIPMENT

Super Long Reach Option ..... 8-14

    Safety ..... 8-14

    Combined Instrument Display - Super Long Reach ..... 8-15

    Bucket ..... 8-16

        Attach the Bucket ..... 8-16

        Disconnect the Bucket ..... 8-16



# Introduction

About This Manual . . . . .	1-3
Contact Information . . . . .	1-3
Your Documentation Package . . . . .	1-4
Safety, Operation & Maintenance	
Parts Book . . . . .	1-4
Maintenance Log . . . . .	1-4
Organization of This Manual . . . . .	1-5
Table of Contents . . . . .	1-5
Introduction . . . . .	1-5
Safety. . . . .	1-5
System Functions . . . . .	1-5
Operation . . . . .	1-5
Maintenance . . . . .	1-5
Troubleshooting . . . . .	1-5
Specifications. . . . .	1-5
Optional Equipment . . . . .	1-5
Serial Number Location . . . . .	1-6
Record of Serial Number and Dealer Information . . . . .	1-6
Correction Request Form. . . . .	1-7

TABLE OF CONTENTS

INTRODUCTION

SAFETY

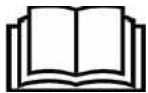 
SYSTEM FUNCTION

OPERATION

MAINTENANCE

SPECIFICATIONS TROUBLESHOOTING

OPTIONAL EQUIPMENT

**⚠ WARNING**

To prevent death or serious injury:

- Avoid unsafe operation and maintenance.
- This machine must be operated and maintained by trained and experienced personnel. Sany is not responsible for qualifying these personnel.
- Do not operate or work on this machine without first reading and understanding this Safety, Operation & Maintenance manual supplied with the machine.
- Store the Safety, Operation & Maintenance manual in the operator cab.

If the Safety, Operation & Maintenance manual is missing or damaged, do not use the machine until a replacement has been obtained from your Sany dealer. Failure to have and to refer to an available copy of the manual can result in damage to the machine or improper operation.

**⚠ WARNING**

Read and understand all safety precautions and instructions in this manual before reading any other manuals provided with this machine and before operating or maintaining it. Failure to do this could result in death or serious injury.

## ABOUT THIS MANUAL

This manual provides safety, operation, maintenance and technical specification information. A copy must be kept in the cab (a) at all times. If you sell the machine, a copy of this manual must be provided to the new owner.

It is important to read this manual carefully before beginning any operation or maintenance. All personnel involved with this machine must read this manual periodically to remain knowledgeable about its operation and maintenance.



Fig. 1-1

a

Items addressed in this manual are designed to help you:

- Understand the different systems and performance of your machine.
- Reduce improper operation.
- Point out possible hazardous situations when operating and maintaining the machine.
- Increase machine efficiency during operation.
- Prolong the service life of your machine.
- Reduce maintenance costs.

Continuing improvements in the design of this machine can lead to changes in detail which may not be covered in this manual. Always consult your Sany dealer for the latest available information on your machine or if you have questions regarding information in this manual.

## CONTACT INFORMATION

Thank you for purchasing a Sany machine. If you need to contact us for any reason, you can reach us as follows:

Sany Group

Sany Industry Town, Changsha Economic &  
Technical Development Zone

Hunan, China 410100

[www.sanygroup.com](http://www.sanygroup.com)

Phone: 0086-0731-84031711

Fax: 0086-0731-84031999-654



Fig. 1-2

## YOUR DOCUMENTATION PACKAGE

This documentation applies only to this machine and should not be used with any other machine. The documentation for this machine includes the following items:

### Safety, Operation & Maintenance Manual

A copy of this Safety, Operation & Maintenance manual must always remain in the operator cab (a) at all times. See “Organization of This Manual” on page 1-5 for complete details.

A copy of this manual should be made available to maintenance personnel when maintaining the machine.

### Parts Book

The Parts book consists of parts lists and matching drawings used for ordering spare parts as needed. The Parts book is best left in the workshop area or office. It should always be available to the maintenance and service personnel.

### Maintenance Log

The Maintenance Log lists regularly scheduled maintenance to be performed by the operator or maintenance personnel. All maintenance performed upon the machine must be recorded in the Maintenance Log.



Fig. 1-3



Fig. 1-4

## ORGANIZATION OF THIS MANUAL

### Table of Contents

List of the general topics that are contained in this manual along with the page number each starts on.

NOTE: There is also a table of contents at the start of each section in this manual.

### Introduction

Overview of what is covered in the rest of this manual, including serial number information and Sany contact information.

### Safety

General and product-specific safety information relating to this machine. It describes what the hazard alerts mean that are used throughout the manual. Decals used on the machine by location, type and meaning are also addressed in this section.

### System Functions

Overview of all controls and operating systems.

### Operation

Detailed operator qualifications, pre-start checks, operating procedures and end-of-day checks and storage information.

### Maintenance

Routine maintenance procedures, fluid specifications, and torque values.

### Troubleshooting

Overview of common malfunctions for the operating systems, instructions on towing and jump-starting.

### Specifications

Dimensions and weight of the machine, and systems/components performance information.

### Optional Equipment

Information on the function and operation of optional equipment.

## SERIAL NUMBER LOCATION

The serial number (a) will be needed by your Sany dealer when ordering replacement parts or providing assistance for your machine. Record this information in this manual for future use.



Fig. 1-5 a

## Record of Serial Number and Dealer Information

This location is for you to record information relating to your machine. It is required that you keep this manual with your machine at all times for reference.	
Machine Serial No.	
Engine Serial No.	
Right Final Drive Motor Serial No.	
Left Final Drive Motor Serial No.	
Swinging Gearbox Motor No.	
Hydraulic Pump No.	
Dealer Name:	
Address:	
Phone Numbers:	



## CORRECTION REQUEST FORM

If you find a problem with this manual, make a copy of this page, complete the form below and send it to us, attention Technical Publications. You can also email us at [techpubs@sanygroup.com](mailto:techpubs@sanygroup.com).

NOTE: See “Contact Information” on page 1-3.

Date of This Request
Your Name
Company Name
Your Department
Street Address
City, State & ZIP
Phone
E-mail
Machine Model & Serial No.
Description of Problem (wrong information, unclear or erroneous procedure, etc.)
Corrective Action by You (if any)

This Page Intentionally Left Blank

# SANY

## Safety

Safety - General . . . . .	2-3	
Hazard Alerts in This Manual . . . . .	2-4	
Diesel Engine Exhaust . . . . .	2-5	
Battery Posts, Terminals and Related Accessories . . . . .	2-5	
Operator Safety Information . . . . .	2-5	
Operator is Important . . . . .	2-6	
Operator Qualifications . . . . .	2-6	
Machine Safety . . . . .	2-6	
Keep the Operator Cab Clean . . . . .	2-7	
Mount and Dismount the Machine . . . . .	2-8	
Unauthorized Machine Modifications . . . . .	2-9	
Job Safety . . . . .	2-9	
Job Site Safety . . . . .	2-10	
Surface and Underground Hazards . . . . .	2-10	
High Voltage Areas . . . . .	2-11	
Electrocution Hazard . . . . .	2-11	
Pre-Start Checks . . . . .	2-13	
Start-Up Safety . . . . .	2-13	
Personal Protective Equipment . . . . .	2-14	
Fire Safety . . . . .	2-14	
Fluid Fires . . . . .	2-15	
Electrical Fires . . . . .	2-15	
Fire Extinguisher . . . . .	2-16	
In Case of Fire . . . . .	2-16	
Dust and Chemical Hazards . . . . .	2-16	
Dust Hazards . . . . .	2-16	
Safety Data Sheets (SDS) . . . . .	2-17	
Maintenance Safety . . . . .	2-17	
Clean the Machine . . . . .	2-17	

TABLE OF CONTENTS

INTRODUCTION

**SAFETY**

SYSTEM FUNCTION

OPERATION

MAINTENANCE

SPECIFICATIONS TROUBLESHOOTING

OPTIONAL EQUIPMENT

Use the Correct Tools . . . . . 2-18

Jack Up the Machine . . . . . 2-18

Rotating Parts . . . . . 2-18

Remove Attachments. . . . . 2-19

    Weld, Drill, Cut or Grind on the Machine . . . . . 2-19

Fluid Systems . . . . . 2-19

    Add Fluids to the Machine . . . . . 2-19

    Refuel. . . . . 2-19

    High-Pressure Fluid Lines . . . . . 2-20

    Accumulator . . . . . 2-20

Electrical System . . . . . 2-20

    Battery Safety. . . . . 2-20

    Disconnect the Battery . . . . . 2-21

    Jump-Start Safety . . . . . 2-21

Environmental Precautions . . . . . 2-21

Product-Specific Safety . . . . . 2-22

    Lockout/Tagout Procedures . . . . . 2-22

        Lock Out of Operation . . . . . 2-22

        Return to Operation . . . . . 2-23

    Machine Decals . . . . . 2-23

        Type, Location and Meaning . . . . . 2-24

    Authorized Use of the Machine . . . . . 2-37

    Unauthorized Use of the Machine . . . . . 2-37

    Job Site Precautions . . . . . 2-38

        Surface and Underground Hazards . . . . . 2-39

        Job Site Working Clearances. . . . . 2-39

    Travel Precautions . . . . . 2-41

        Traveling on Sloped Areas. . . . . 2-42

        Snow or Frozen Surfaces. . . . . 2-42

Accumulation of Flammable Material. . . . . 2-43

Escape Tool . . . . . 2-44

Crush or Pinch-Point Precautions . . . . . 2-44

Tow or Lift the Machine . . . . . 2-44

Operation Precautions . . . . . 2-47

    Operation on a Sloped Area. . . . . 2-48

**⚠WARNING**

Read and understand all safety precautions and instructions in this manual before reading any other manuals provided with this machine and before operating or maintaining it. Failure to do this could result in death or serious injury.

## SAFETY - GENERAL

### WARNING

**Make sure the precautions described in this manual and the safety decals on the machine are fully understood before operating or maintaining this machine. Read and follow all safety precautions. Failure to do this could result in death or serious injury.**

This section of the manual provides detailed information on basic safety precautions and preventative measures to be followed during operation and maintenance of this machine.

Safe operation is very important. Prior to operation and maintenance, carefully read and understand all content in this section of this manual. Only after completely understanding the content in this manual, can the machine be safely and expertly operated. Following are some of the benefits of doing this:

- Avoid personal injury or machine damage caused by improper operation.
- Increase the reliability of the machine.
- Prolong the service life of the machine.
- Reduce repair cost and downtimes.

The safety information in this manual provides basic guidelines for safe operation for all authorized personnel. Sany is unable to foresee all risks on work sites, so workers, operators and owners must consider if there are other safety concerns that must be addressed for specific job situations.

Local governments or authorities may have stricter standards. If some stipulations in this manual disagree with the local laws or regulations, the stricter ones prevail.

This manual must be kept on the machine for reference and periodically reviewed by all personnel involved with operation or maintenance of this machine.

Some actions involved in the operation or maintenance of this machine could cause a serious accident if they are not performed in the manner described in this manual.

All procedures and precautions outlined in this manual apply only to intended use of this machine. If you use your machine for any unintended use that is not specifically prohibited, you must be sure that it is safe for you and others to do so. In no event should you or others engage in prohibited uses or actions as described in this manual.

This machine complies with all applicable regulations and standards of the country to which the machine has been shipped. If this machine was purchased in another country or purchased from someone in another country, it may lack certain safety features and specifications that are necessary for use in your country. If there is any question about whether your machine complies with the applicable standards and regulations of your country, contact your Sany dealer before operating this machine.

## Hazard Alerts in This Manual

Most accidents are usually caused by the failure to follow fundamental safety rules for the operation and maintenance of the machine. To avoid accidents, it is important that all personnel involved with the operation or maintenance of this machine must read this manual before operating or performing maintenance on this machine.

Improper operation or maintenance of this machine could result in death or serious injury.

Carelessness or neglect by operators, job supervisors, maintenance staff, and job site workers can result in their death or injury and costly damage to the machine and property.

To alert operators, job supervisors, maintenance staff, and job site workers to hazardous operating practices and maintenance procedures, hazard alerts are used throughout this manual. Each hazard alert contains a hazard alert symbol and a signal word to identify the hazard's degree of consequence if the message is ignored.

The following (ANSI/ISO) signal words are used to inform that there is a potentially hazardous situation that may lead to damage, personal injury or even death. In this manual and on the machine decals, different signal words or illustrations are used to express the potential level of hazard.

### **DANGER**

**DANGER** indicates a hazardous situation which, if not avoided, will result in death or serious injury.

### **WARNING**

**WARNING** indicates a hazardous situation which, if not avoided, could result in death or serious injury.

### **CAUTION**

**CAUTION** indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

### **NOTICE**

**NOTICE** indicates a situation which can cause damage to the machine, personal property and/ or the environment, or cause the machine to operate improperly.



This symbol is used within a graphic to alert the user not to do something.

Sany cannot foresee every circumstance that might involve a potential hazard in operation or maintenance. Therefore, some hazard alerts in this manual and on the machine may not include all possible safety precautions.

If any procedure or action not specified, recommended or allowed in this manual is used, be sure that such procedures and actions can be safely performed without damaging the machine or causing injury. When unsure about the safety of some procedures, contact your Sany dealer.

This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)