

350GLC Excavator



JOHN DEERE

PARTS CATALOG

**350GLC Excavator
(Engine 6090HT006 / 6090HT002)**

PC10219 (Mar-12) English

Worldwide Construction and Forestry Division

Litho in U.S.A. (Revised)
COPYRIGHT © 2012
DEERE & COMPANY
Moline, Illinois
All rights reserved

350GLC Excavator

TX1086885A B.1



350GLC Excavator

(Manufactured 2011–)

(Engine 6090HT006 / 6090HT002)

(Specifications and design are subject to change without notice)

To the Customer

The part numbers in this parts catalog were correct at the time your catalog was published. It is our policy to constantly improve our machines, and therefore, part numbers may change. When ordering parts, verify part numbers through your dealer.

SI Units of Measure

Metric dimensions are given, where applicable, throughout this parts catalog.

Bolt and Cap Screw Strength Identification

Bolts and cap screws required to have high-strength qualities equivalent to SAE grade 8 are identified throughout this catalog by the description HS SAE 8 (10.9 for metric). All standard bolts and cap screws are SAE grade 5 (metric 8.8) or lower.

Serial Number Listing Information

Serial number information is listed to show on which machines each part can be used; for example:

- **The part can be used on all products.**
- 000000** – **The part can be used on products beginning with the serial number listed.**
- **000000** **The part can be used on products up to and including the serial number listed.**
- 000000** – **000000** **The part can be used on products between and including the serial number listed.**

When XXXXXX's are listed in place of a serial number, a serial number change was made, but the exact serial number was not available when the catalog was produced.

If product identification numbers or serial numbers are required for warranty claims or correspondence pertaining to this product, it is extremely important that all characters be furnished. This point cannot be overemphasized.

Direction Arrow

Arrows are used with illustrations to indicate the front of the unit. "Right-Hand" and "Left-Hand" sides are determined by facing in direction of machine forward travel.

Box-enclosed Illustrations

A key number, shown in the parts list, is assigned to a box enclosing all parts sold as a service assembly. A box not keyed includes non-current parts.

Complete Goods Listings

Complete Goods are listed in bold face type. Order separately. Do not include on replacement part order.

Orientation of Engine

"Right Hand" and "Left Hand" sides are determined by standing at the flywheel and facing the engine.

John Deere Reman Components

The service parts listed in this catalog are intended for the repair of original equipment components. Although most service parts may be used to repair remanufactured components, the remanufacturing process may change parts sufficiently so that service parts are inadequate or not usable.

Serial Number Location

Each 350G LC excavator has seven serial number plates: A product identification number plate, an engine serial number plate, a hydraulic pump serial number plate, a left-hand travel device serial number plate, a right-hand propel motor serial number plate, a swing motor serial number plate and a control valve serial number plate.

The product identification plate is located at the front of the upperstructure to the right of the cab.

The engine serial number plate is located on the right side of the cylinder block near the starter.

The hydraulic pump serial number plate is located near the front of the hydraulic pump

The swing motor serial number plate is located on the top of the swing motor.

The right travel device serial number plate is located on the left-hand of the motor.

 
The left travel device serial number plate is located on the right-hand of the motor

The control valve serial number plate is located on the upper left-hand side of the control valve.

If product identification numbers or serial numbers are required for warranty claims or correspondence pertaining to this product. It is extremely important that all characters be furnished. This point cannot be overemphasized.

Product Identification Number

A.1

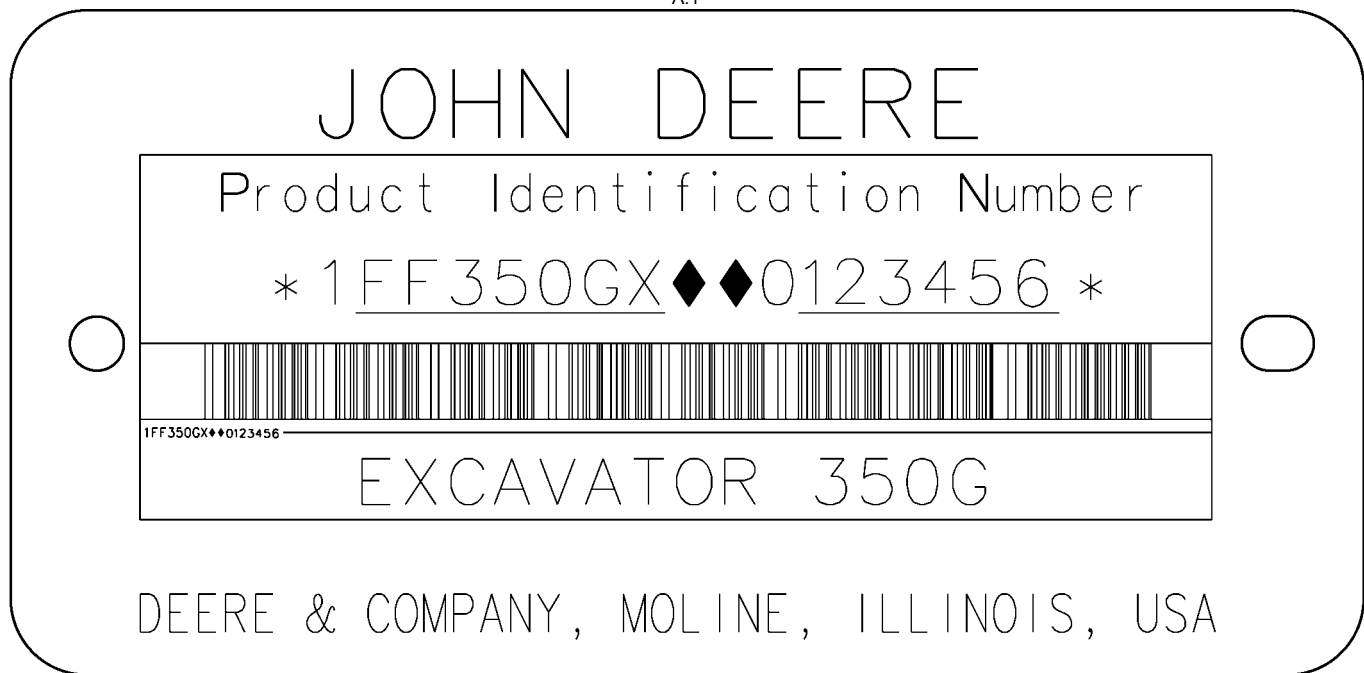

TX1087134

First Line	Designates
FF	Manufacturer — John Deere
350	Model
GX	Configuration
0123456	Serial Number
Second Line	Designates
EXCAVATOR	Unit Type

Engine Serial Number Plate — 6081 & 6090

RGP11387 A.1



RGP11387

Engine Serial Number is Defined by 13 Characters	
First Line	Designates
1 — Two letters for engine factory designation	RG: Waterloo, USA, JX: Rosario, Argentina
2 — One digit for number of cylinders.	6 Cylinder
3 — Three digits for displacement in liters	081: 8.1 Liter, 090: 9.0 Liter
4 — One letter for emission level	B= Non-Certified C= Tier1/Stage I emission level G= Tier 2/Stage II emission level L= Tier 3/Stage IIIA emission level R= Interim Tier 4/Stage IIIB emission level
5 — Six digits	123456= Engine build sequence number. Sequence numbers start at 000001
Engine Type is Defined by 9 Alpha-Numerical Characters	
6 — Four digits	Same as items 2 and 3 above
7 — One letter for aspiration type	A= Turbocharged with air-to-water after-cooler D= Naturally Aspirated T= Turbocharged H= Turbocharged with air-to-air after cooler S= Turbocharged with air-to-sea water after-cooler
8 — One or two letters for OEM application	F: OEM, FM: Marine, FH: HazLoc, FN: Compressed Natural Gas
8 — One or two letters for John Deere Vehicle application	TJ: Forestry, RW: Tractor, H, Z, CQ: Combine, N: Picker/Sprayer, DW: Construction, T8: Sugar Cane Harvester
9 — Two or three digits for version	485

Trademarks

Throughout this parts catalog, you may find the following Deere and Company trademarks:

Best Bid™	CounterParts™	DEERE™ (Deere™)
Dura-Trax™	Fanggs™	Guardian™
HTH™	Jagz™	JDLink™
MARKS™	MIC™ [Machine Information Center]	MTH™
Power Curve™	Powerllel™	PowerShift Plus™
Powerwize™	POWR SAVR™	PowrShift™
ProPath™	Quad-Cool™	Quik-Tatch™
SC-2™	Side-Tracker™	Stinger™
StructureALL™	Swamper™	TMC™ [Total Machine Control]
ValueSelect™	Waratah™	Worksite Pro™
FlexBox™	Funk™	iTorque™
Phoenix™	Phoenix International™	PowerTech™
PowerTech™ E	PowerTech™ M	PowerTech™ Plus
Precision Joint™	SHIFT-O-MATIC™	SWEDA™ (Super Wide Extreme Dual Axle)
TeamMate™	TeamMate™ II	TeamMate™ IV
TMII™	TMIII™	

Remarks and Abbreviations

The following remarks and abbreviations may appear throughout this parts catalog. Refer to the following table for translations.

Phrase	Meaning	Phrase	Meaning
ALSO ORDER, ORD W/	Also Order	MFWD	Mechanical Front Wheel Drive
AMP	Ampere	NA, NOT USED THIS APPL	Not used in this application
APPL, APPL ONLY	This application only	NLA	No longer available
AR	As required	NSEP	Not available separately
ASSY	Complete assembly	OD	Outside diameter
BOAC	Bolt-on cutting edge	OPTIONAL	Optional
CCW	Counterclockwise	OR	Or
COMPLETE	Complete	ORD, ORDER	Order
COMPLETE GOODS	Complete goods	OS	Oversize
CONVENIENCE ASSY, CA	Convenience assembly	OUTER	Outer
CTL, CUT TO LENGTH	Cut to length	PKG, PACKG	Package, Packet of
CW	Clockwise	PTO	Power Take Off
ENGINE	Engine	RATIO	Ratio
FOR	For	REAR	Rear
FRONT	Front	REMAN	Remanufactured
GAS	Gasoline	REPL	Replaces
HFWD	Hydraulic Front-Wheel Drive	RH	Right-hand
HP	Horsepower	SN	Serial number
HS, HEAD MARKED	High Strength, head marked	STD	Standard
ID	Inside diameter	SUB	Replaced by
INCH	Inch	SUB COMPONENTS	Substitute components (of the kit or assy)
INCL KEYS	Includes keys...	SUB FOR	Substitutes for
INCL, INCLUDES	Includes...	TEETH, Z	Number of gear teeth
INCLUDES PARTS/ ITEMS MARKED	Includes parts/items marked...	TK	Thickness
INNER	Inner	UP, UPPER	Upper
KIT	Kit	US	Undersize
L	Number of links	USE UNTIL EXHAUSTED	Use until exhausted
LF, LINE FILL	Line Fill	USE WITH	Use with
LGP	Low Ground Pressure	VEC	Vehicle Electronic Controller
LGTH	Length	VLC	Vehicle Load Center
LH	Left-hand	W/	With
LOW, LOWER	Lower	W/O	Without
LT	Long Track	WHOLE GOODS	Whole Goods
MAKE FROM, MF	Make from	WT	Wide Track
MARKED	Marked	XLT	Extra Long Track
MATCHED SET	Matched set		

Table of Contents

01 Wheels & Tires & Tracks	
0130 Track Systems	22
03 Transmission	
0360 Transmission Hydraulics	42
04A Engine	
0400A Engine 6090HT006	60
04B Engine	
0400B Engine 6090HT002	132
05 Engine Auxiliary System	
0510 Engine Cooling Systems	224
0520 Intake System	238
0530 External Exhaust Systems	244
0540 Engine Mounting	248
0560 External Fuel Supply Systems	250
0574 Wiring Harnesses & Switches	256
13 Miscellaneous Vehicle	
1311 Vehicle Assembly	258
1322 Labels & Trademarks	260
16 Vehicle Electrical Systems	
1671 Batteries, Support & Cables	268
1673 Vehicle Lighting System	270
1674 Wiring Harness & Switches	274
1675 System Controls	294
17 Frame Chassis Or Supporting Structure	
1740 Frame Installation	300
18 Operator's Station	
1810 Operator Enclosure	310
1821 Seat And Seat Belts	358
1830 Heating & Air Conditioning	374
19 Sheet Metal & Styling	
1910 Hood Or Engine Enclosure	394
20 Safety, Convenience & Miscellaneous	
2001 Radio	416
2002 Mirror	418
2004 Warning Devices Including Horn & Reverse Alarm	422
21 Vehicle Main Hydraulic System	
2160 Vehicle Hydraulics	428
2161 Hydraulic Pumps & Drives	442
2164 Hydraulic Reservoir, Filter & Cooler	452
26 Global Vehicle Communication	
2601 Communication Controller	454
33 Backhoe & Excavator	
3302 Bucket With Teeth	458
3315 Controls Linkage	472
3340 Backhoe & Excavator Frames	486
3362 Control & Load Holding Valves	506
3363 Lines, Hoses & Fittings	518
3365 Hydraulic Cylinders	568
43 Swing, Rotation Or Pivoting System	
4350 Mechanical Drive Elements	584

Alphabetical Index

	Page		Page
1106 Rocker Arm Cover	60	9901 FUEL FILTER ELEMENT SERVICE KIT	203
1106 ROCKER ARM COVER	132	9901 GASKET KIT - CYLINDER HEAD REMOVAL	216
1312 CRANKSHAFT PULLEY WITH DAMPENER	134	9901 PISTON LINER KIT	200
1312 Crankshaft Pulley, W/ Torsional Dampener	62	9901 PISTON RING PACK	211
1405 Flywheel Housing	64	9901 PRIMARY FUEL FILTER SEAL KIT	201
1405 FLYWHEEL HOUSING	135	9901 REPLACEMENT - WATER PUMP	202
1543 Flywheel	66	9901 Replacement Engine	128
1543 FLYWHEEL	136	9901 REPLACEMENT ENGINE	197
1603 FUEL INJECTION PUMP	138	9901 SERVICE KIT CYLINDER HEAD BOLTS	204
1611 Fuel Injection Pump	68	9901 STARTER MOTOR KIT	222
1701 AIR INTAKE	140		
1707 Intake Manifold	70		
1903 Oil Pan	72		
1903 OIL PAN	142		
2001 Water Pump	74		
2001 WATER PUMP	144		
2107 Thermostat Cover	75		
2107 THERMOSTAT COVER	145		
2201 Thermostat	76		
2201 THERMOSTAT	146		
2430 Fan Belt	77		
2430 FAN BELT	147		
2699 Engine Coolant Heater - Plug	78		
2699 NO ENGINE HEATER	148		
2802 EXHAUST MANIFOLD	149		
2814 Exhaust Manifold	80		
2907 Ventilating System	82		
2907 VENTILATING SYSTEM	150		
3003 Starting Motor	84		
3003 STARTING MOTOR	152		
3102 Alternator	86		
3102 ALTERNATOR	154		
3509 FUEL FILTER	156		
3520 Fuel Filter / Filter Element	88		
3902 Thermostat Housing	90		
3902 THERMOSTAT HOUSING, BY PASS TUBE TO WATER PUMP	158		
4013 Engine Oil Dipstick	92		
4013 ENGINE OIL DIPSTICK	160		
4397 Air Intake	94		
4397 STARTING AID	162		
4601 Cylinder Block	96		
4601 CYLINDER BLOCK	164		
4701 Crankshaft / Bearings	98		
4701 CRANKSHAFT AND BEARINGS	166		
4801 Connecting Rods and Pistons	100		
4801 CONNECTING RODS AND PISTONS	168		
4901 Rocker Arm / Rocker Arm Shaft / Push Rod	102		
4901 ROCKER ARMS, SHAFTS AND PUSH RODS	170		
5001 Oil Pump	104		
5001 OIL PUMP	172		
5101 Cylinder Head	106		
5101 CYLINDER HEAD AND VALVES	174		
5203 Auxiliary Drive	108		
5203 AUXILIARY DRIVE	176		
5212 AUXILIARY DRIVE	178		
5705 WATER PUMP INLET	179		
5708 Water Pump Inlet	110		
5916 OIL COOLER	180		
5936 Oil Filter / Cooler	112		
6208 ALTERNATOR MOUNTING	182		
6208 Belt Tensioner	114		
6513 TURBOCHARGER	184		
6560 Turbocharger	116		
7702 Timing Gear Cover	118		
7702 TIMING GEAR COVER	188		
7899 AIR COMPRESSOR MOUNTING	190		
7899 Air Compressor Mounting - Plug	120		
8411 (ENGINE WIRING HARNESS)	192		
8411 Engine Wiring Harness	122		
8902 EXHAUST GAS RECIRCULATION	194		
8997 Exhaust Gas Recirculation (EGR) - Plug	124		
9801 Lift Straps	126		
9801 LIFT STRAPS	196		
9901 AIR COMPRESSOR KIT	210		
9901 CAMSHAFT KIT	206		
9901 Cylinder Head Kit	127		
9901 CYLINDER HEAD KIT	208		
9901 CYLINDER LINER PACKING	205		
9901 EGR VALVE GASKET KIT	213, 214		
9901 ENGINE OVERHAUL KIT	220		
9901 ENGINE OVERHAUL KIT, GASKET KIT	218		
9901 ENGINE SHORT BLOCK	198		
9901 EXHAUST MANIFOLD REMOVAL	212		
		A	
		Access Panels, Bottom	414
		ACTUATOR 6513	184
		ADJUSTER, TRACK CHAIN	28
		Air Cleaner	238
		Air Cleaner Hoses	240
		Air Cleaner Intake Lines	240
		AIR COMPRESSOR KIT	210
		Air Compressor Mounting - Plug	120
		AIR COMPRESSOR MOUNTING (7899)	190
		Air Conditioner / Heater	374
		Air Conditioner / Heater (Components)	376
		Air Conditioner / Heater Duct	388
		AIR CONDITIONER COMPONENTS	376
		Air Conditioner Compressor and Condenser Hoses	378
		AIR CONDITIONER COMPRESSOR BELT	382
		AIR CONDITIONER COMPRESSOR HOSE	378
		Air Conditioner Condenser	384
		AIR CONDITIONER CONDENSER HOSE	378
		Air Conditioner Hose	382
		Air Conditioner Parts	382
		Air Conditioner System, Engine Compartment	382
		Air Conditioner, Compressor, Condenser and Receiver-Dryer	384
		AIR CONDITIONER/HEATER FILTER	388
		Air Conditioning Compressor	380
		AIR DUCT, AIR CONDITIONER/HEATER	374, 388
		Air Flow Tube, Intercooler	228
		Air Inlet	94
		AIR INLET (1701)	140
		Air Intake	70
		AIR INTAKE (1701)	140
		Air Suspension Seat (Heated)	358
		Air Temperature Sensor	94
		Alarm Switch, Motion	426
		Alarm Switch, Travel	426
		Alarm, Travel	424
		Alarm, Travel, Wire Harness	424
		ALTERNATOR (28 VOLT) (80 AMP) (WITH WIRING HARNESS) (3102)	154
		Alternator (28V) (80 Amp) (With Wiring Harness)	86
		ALTERNATOR MOUNTING	180
		ALTERNATOR MOUNTING (6208)	182
		Alternator Mounting Bracket	114
		Alternator Wiring Harness	86
		ALTERNATOR WIRING HARNESS (3102)	154
		Antenna, JDLINK™ MTG (Cellular)	454
		Antenna, Radio	314
		Arm (18m Super Long Front)	492
		Arm (22m Super Long Front)	494
		ARM CYLINDER	572
		Arm Cylinder Components	572
		Arm Cylinder Components (Super Long Front)	574
		ARM CYLINDER OIL LINE	572
		ARM CYLINDER SEAL KIT	572
		Arm Link	502
		ARM PIVOT PINS 2.67M	500
		ARM PIVOT PINS 3.2M	496
		Arm, Front Windshield Wiper	322
		ARM, LONG 4.0M	498
		ARM, SHORT 2.67M	500
		ARM, STANDARD 3.2M	496
		Armrest, Cab	368
		Armrests	368
		Ashtray	354
		Attaching Pins, Bucket Thumb, w/ Coupler (Kits Built 28 June 2010 -)	466
		Attaching Pins, Bucket Thumb, w/o Coupler (Kits Built 28 June 2010 -)	468
		ATTACHMENTS, SWING BEARING	308
		Attenuator Lines	540
		Attenuator Lines, Hydraulic Pump	540

Page

Base, Seat, Air Suspension Seat	364
Batteries, Support and Cables	268
BATTERY	268
Battery Cable	268
Battery Cover	268
Battery Relay	268
Battery Relay Cover	268
BEARING BOTTOM COVER, TRACK FRAME	90
Bearing, Crankshaft Thrust	48
BEARING, CRANKSHAFT THRUST (4701)	166
BEARING, LOWER TRACK ROLLER, HEAVY DUTY	32
BEARING, SWING, ATTACHMENTS	308
BEARING, TRACK IDLER	30
BEARING, SWING	306
BEARINGS AND CONNECTING ROD (4801)	166
Bearings, Connecting Rod	100
Bearings, Main	98
BEARINGS, MAIN (4701)	166
Belt Tensioner	114
Belt, Air Conditioner Compressor	382
Belt, Fan	77
BELT, FAN (2430)	147
Belt, Seat, Air Suspension Heated Seat	358
Belt, Seat, Mechanical Suspension Seat	360
BELT, V (2430)	147
Blade, Front Windshield Wiper	322
Block, Cylinder	96
BLOCK, CYLINDER (4601)	164
Boom (18m Super Long Front)	488
Boom (22m Super Long Front)	490
BOOM BOTTOM TO ARM HYDRAULIC CYLINDER LINES	564
Boom Cylinder Lines	538
Boom Cylinder Lines To Boom Bottom Lines	538
Boom Cylinder Lines To Control Valve	538
BOOM CYLINDER, LEFT	570
BOOM CYLINDER, RIGHT	568
Boom Foot Pin	302
Boom Pin	300
BOOM PINS	486
BOOM PINS AND BUSHINGS (18M SUPER LONG FRONT)	488
BOOM PINS AND BUSHINGS (22M SUPER LONG FRONT)	490
Boom Work Light	274
Boom Work Light Wiring Harness	274
BOOM WORK LIGHT, GROUND WIRE	274
BOOM, STANDARD	486
BOOT, PILOT CONTROLLER	482
Bottom Covers	414
Box, Switch	286
Brace, Engine Compartment Main Panel	400
Bracket, Air conditioner Compressor	382
BRACKET, CAB FLOOR	338
BRACKET, CAB MOUNTING	344
Bracket, Engine Control Unit Mounting (6090HT002)	280
Bracket, Engine Control Unit Mounting (6090HT006)	278
Bracket, Engine Mounting	248
BRACKET, LOWER TRACK ROLLER, HEAVY DUTY	32
Bracket, Monitor	284
BRACKET, UPPER TRACK ROLLER	24
Brackets, Cab	318
Brackets, Control Valve	438
Brackets, Cooling Package	226
BRAKE VALVE COMPONENTS	46
BRAKE VALVE, TRAVEL MOTOR	44
Brake Valve, Travel Motor, Components	46
BUCKET CYLINDER	576
Bucket Cylinder Components	576
Bucket Cylinder Components (18m Super Long Front)	578
Bucket Cylinder Components (22m Super Long Front)	580
Bucket Cylinder Hydraulic Lines	496, 498, 500
BUCKET CYLINDER SEAL KIT	576
BUCKET CYLINDER SEAL KIT (18 M SUPER LONG FRONT)	578
BUCKET CYLINDER SEAL KIT (22 M SUPER LONG FRONT)	580

Page

Cab.....	310
Cab Air Vent Cover.....	320
Cab Components (Brackets, Bushings and Stoppers).....	318
Cab Components (Cab Light, Antenna and Speakers).....	314
Cab Components (Door Catch).....	326
Cab Components (Door).....	328
Cab Components (Handrail, Guard Bars).....	320
Cab Components (Sunroof, Shade, and Headliner).....	324
Cab Door Components.....	328
Cab Door Lock.....	328
Cab Door Weatherstrip.....	328
Cab Door Window Glass.....	328
Cab Floor Parts (1) of (2).....	338
Cab Floor Parts (2) of (2).....	340
CAB FLOOR PLATE.....	356
Cab Floor Plate Hardware.....	342
Cab Glass.....	316
CAB GUARD, FOPS.....	346
Cab Guard, Operator Protection.....	348
Cab Headliner.....	324
Cab Horn.....	292
Cab Inside Right Cover.....	334
Cab Mounting Bracket.....	344
Cab Mounts.....	312
CAB TO FLOOR PLATE HARDWARE.....	342
Cab Wiring Harness.....	290
CAB WIRING HARNESS COVER.....	292
CAB WIRING HARNESS GROUND STRAPS.....	290
CAB WIRING HARNESS RELAYS.....	290
Cable, Door Catch Release.....	326
CABLE, STARTING MOTOR (3003).....	152
CAM COVER PLATE (7702) (WITH LH AUXILIARY DRIVE).....	188
Camera, Mounting Parts.....	304
CAMSHAFT KIT (9901).....	206
Cap, Fuel Tank.....	250
CAPSCREWS, CONTROL VALVE.....	428
Carrier Roller.....	24
CARRIER ROLLER, TRACK.....	24
Catch, Door.....	326
Center Joint Components.....	584
Center Joint Seal and Swing Stop.....	586
CHAIN ADJUSTER, TRACK.....	28
CHAIN DRIVE GEAR, TRACK.....	42
CHAIN IDLER, TRACK.....	30
CHAIN, TRACK ASSEMBLY.....	34
CHAIN, TRACK ASSEMBLY, HEAVY DUTY.....	36
Clamp, Direct Hydraulic, w/ Coupler (Kits Built 28 June 2010 -).....	466
Clamp, Direct Hydraulic, w/o Coupler (Kits Built 28 June 2010 -).....	468
Clamp, Exhaust (Engine 6090HT002).....	246
Clamp, Exhaust (Engine 6090HT006).....	244
Clamp, Progressive Hydraulic (Kits Built 28 June 2010 -).....	470
CLAMP, STARTING MOTOR (3003).....	152
Clutch, Compressor, Air Conditioning.....	380
CLUTCH, STARTING MOTOR (12V) (3003).....	152
CODE 1106 ROCKER ARM COVER.....	132
CODE 1312 CRANKSHAFT PULLEY.....	134
CODE 1405 FLYWHEEL HOUSING.....	135
CODE 1543 FLYWHEEL.....	136
CODE 1603 FUEL INJECTION PUMP.....	138
CODE 1701 AIR INTAKE.....	140
CODE 1903 OIL PAN.....	142
CODE 2001 WATER PUMP.....	144
CODE 2107 THERMOSTAT COVER.....	145
CODE 2201 THERMOSTAT.....	145

Alphabetical Index - Continued

	Page		Page
CODE 2430 FAN BELT	147	Control Valve Lines to Hydraulic Pump	522
CODE 2699 COOLANT HEATER PLUG	148	Control Valve Lines To Oil Tank	524
CODE 2802 EXHAUST MANIFOLD	149	Control Valve Lines To Rotary Manifold	536
CODE 2907 VENTILATING SYSTEM	150	Control Valve Mounting Brackets	438
CODE 3003 STARTER MOTOR (12V)	152	CONTROL VALVE O-RINGS	428
CODE 3102 ALTERNATOR (28 VOLT, 80 AMP)	154	CONTROL VALVE SPOOLS (4-SPOOL SIDE)	430
CODE 3509 FUEL FILTER	156	CONTROL VALVE SPOOLS (5-SPOOL SIDE)	434
CODE 3902 THERMOSTAT HOUSING	158	Control Valve To Boom Cylinder Lines	538
CODE 4013 ENGINE OIL DIPSTICK	160	CONTROL VALVE, TRAVEL; COMPONENTS	474
CODE 4397 STARTING AID	162	CONTROLLER, AIR CONDITIONER/HEATER	374
CODE 4601 CYLINDER BLOCK	164	CONTROLLER, AUXILIARY CONTROL SWITCH	276
CODE 4701 CRANKSHAFT AND BEARINGS	166	Controller, Engine	122
CODE 4801 CONNECTION ROD, PISTON	168	Controller, Engine Control Unit (6090HT002)	280
CODE 4901 ROCKER ARM, SHAFT	170	Controller, Engine Control Unit (6090HT006)	278
CODE 5001 OIL PUMP	172	Controller, JDLINK™ Modular Telematics Gateway	456
CODE 5101 CYLINDER HEAD	174	Controller, JDLINK™ Satellite Module	456
CODE 5203 AUXILIARY DRIVE (LH BASE HSG W/IDLER GEAR)	176	Controller, Monitor (DSZ)	296
CODE 5212 AUXILIARY DRIVE (RH SIDE GEAR DRIVEN AUXILIARY DRIVE)	178	CONTROLLER, PILOT	482
CODE 5705 WATER PUMP INLET	179	CONTROLLER, RIGHT PILOT, TO PILOT SIGNAL MANIFOLD HYDRAULIC PILOT HOSES	558
CODE 5916 OIL COOLER	180	CONTROLLER, RIGHT PILOT, TO PILOT SIGNAL MANIFOLD HYDRAULIC PILOT LINES	558
CODE 6208 ALTERNATOR MOUNTING	182	CONVERTER (24-VOLT TO 12-VOLT)	392
CODE 6513 TURBOCHARGER	184	Converter, Data	298
CODE 7701 TIMING GEAR COVER (WITH RH AUXILIARY DRIVE)	186	Coolant Heater Plug	78
CODE 7702 TIMING GEAR COVER, (WITH LH AUXILIARY DRIVE)	188	COOLANT HEATER PLUG (2699)	148
CODE 7899 AIR COMPRESSOR MOUNTING	190	Coolant Temperature Sensor	90
CODE 8411 ENGINE WIRING HARNESS	192	Cooler, Fuel System	254
CODE 8902 EXHAUST GAS RECIRCULATION	194	Cooler, Hydraulic Oil	224
CODE 9801 LIFT STRAPS	196	COOLER, OIL	180
CODE 9901 AIR COMPRESSOR KIT	210	Cooling Package	224
CODE 9901 CAMSHAFT KIT	206	Cooling Package Brackets	226
CODE 9901 CYLINDER HEAD KIT	208	Cooling Package Compartment Door	406
CODE 9901 CYLINDER HEAD REMOVAL GASKET KIT	216	Cooling Package Covers	402
CODE 9901 CYLINDER LINER PACKING	205	Cooling Package Lines To Control Valve	526
CODE 9901 EGR SERVICE KIT	214	Cooling Package Mounting	226
CODE 9901 EGR VALVE GASKET KIT	213	Cooling Package Piping	228
CODE 9901 ENGINE OVERHAUL KIT	220	Cooling Package, Standard Fan Drive	232
CODE 9901 ENGINE OVERHAUL KIT, GASKET	218	Counterweight	304
CODE 9901 ENGINE SHORT BLOCK	198	Counterweight Isolators	304
CODE 9901 EXHAUST MANIFOLD REMOVAL	212	Counterweight Mirror	418
CODE 9901 FUEL FILTER ELEMENT SERVICE KIT	203	Counterweight Rubber	304
CODE 9901 PISTON LINER KITS	200	Cover (Battery and Cooling Package Compartment)	402
CODE 9901 PISTON RING PACK	211	Cover (Center Front Top)	398
CODE 9901 PRIMARY FUEL FILTER SEAL KIT	201	Cover (Cooling Package)	402
CODE 9901 REPLACEMENT ENGINE	197	Cover (Floor of Storage Compartment)	408
CODE 9901 REPLACEMENT, WATER PUMP	202	Cover (Left Side Middle)	394
CODE 9901 SERVICE KIT CYLINDER HEAD BOLTS	204	Cover (Storage Compartment)	396
CODE 9901 STARTER MOTOR KIT	222	Cover, Battery	268
COLD WEATHER STARTING AID	162	Cover, Battery Relay	268
Compartment Panel, Engine	402	Cover, Bottom	414
Compartment, Battery and Cooling Package	402	Cover, Cab Air Vent	320
Compartment, Engine Pane	400	Cover, Cab Interior; Rear Tray	390
Compartment, Hydraulic Pump	404	COVER, CAB WIRING HARNESS COVER	292
Components, Fan Drive Motor, Reversing	236	COVER, CONSOLE	354
Components, Hydraulic Thumb Kit Cylinder (Kits Built 28 June 2010 -)	582	Cover, Engine	410
Compressor Hose, Air Conditioner	378	Cover, Engine Compartment	400
COMPRESSOR KIT, AIR	210	Cover, Fuse Box	290
COMPRESSOR MOUNTING, AIR (7899)	190	Cover, Pilot Shutoff Lever	478
Compressor, Air Conditioner	380, 384	Cover, Propel Motor	54
Condenser Hose, Air Conditioner	378	Cover, Rear Cab Roof	314
Condenser, Air Conditioner	384	Cover, Rear Tray Lid	390
CONNECTING ROD AND BEARINGS (4801)	170	Cover, Right Cab Inside	334
Connecting Rod Bearing	100	Cover, Rocker Arm	60
CONNECTING ROD, BEARINGS (4801)	168	COVER, ROCKER ARM (1106)	132
CONNECTING ROD, PISTON	168	Cover, Rotary Manifold	586
Connecting Rods	100	Cover, Seat Base	366
Connectors, Engine Interface Wiring Harness (6090HT002)	280	Cover, Solenoid Starting Motor	84
Connectors, Engine Interface Wiring Harness (6090HT006)	278	COVER, SOLENOID STARTING MOTOR (3003)	152
Console	368	Cover, Thermostat	75
Console Cover	354	COVER, THERMOSTAT (2107)	145
CONTROL LEVER, PILOT, WIRING HARNESSES AND RELAYS	276	Cover, Timing Gear	118
Control Valve Body and Spools (4 Spool Side)	430	COVER, TIMING GEAR (7701) (WITH RH AUXILIARY DRIVE)	186
Control Valve Body and Spools (5 Spool Side)	434	COVER, TIMING GEAR (7702) (WITH LH AUXILIARY DRIVE)	188
Control Valve Brackets	438	COVER, TRACK FRAME BOTTOM	40
CONTROL VALVE CAPSCREWS	428	Cover, Travel Motor	54
Control Valve Components, Travel Pilot	476	Cover, Valve	60
Control Valve End Caps (4 Spool Side)	432	Cover, Water Pump Inlet	110
Control Valve End Caps (5 Spool Side)	436	Covers (Cooling and Hydraulic Compartment Doors)	406
Control Valve Hardware and O-Rings	428	Crankshaft	98
Control Valve Lines To Cooling Package	526	CRANKSHAFT / BEARINGS (4701)	168
		Crankshaft and Bearing	98
		CRANKSHAFT AND BEARING (4701)	166

Alphabetical Index - Continued

Page	Page
Crankshaft Oil Seal.....	64
Crankshaft Position Sensor.....	96
CRANKSHAFT POSITION SENSOR (4601).....	164
Crankshaft Pulley.....	62
CRANKSHAFT PULLEY (1312).....	134
Crankshaft Thrust Bearing.....	98
CRANKSHAFT THRUST BEARING (4701).....	166
Cup Holder.....	334
Cylinder Block.....	96
CYLINDER BLOCK (4601).....	164
CYLINDER COMPONENTS, BUCKET.....	576
Cylinder Components, Hydraulic Thumb Kit (Kits Built 28 June 2010 -).....	582
CYLINDER COMPONENTS, LEFT BOOM.....	570
CYLINDER COMPONENTS, RIGHT BOOM.....	568
CYLINDER HEAD (5101).....	174
CYLINDER HEAD BOLTS SERVICE KIT.....	204
Cylinder Head Gasket.....	106
CYLINDER HEAD GASKET (5101).....	174
Cylinder Head Kit.....	127
CYLINDER HEAD KIT.....	208
CYLINDER HEAD REMOVAL KIT (9901).....	216
Cylinder Liner.....	96
CYLINDER LINER (4601).....	164
Cylinder Liner Packing.....	100
CYLINDER LINER PACKING.....	205
Cylinder Lines, Bucket.....	496, 498, 500
Cylinder Seal Kit, Direct Hydraulic Thumb, w/ Coupler (Kits Built 28 June 2010 -).....	466
Cylinder Seal Kit, Direct Hydraulic Thumb, w/o Coupler (Kits Built 28 June 2010 -).....	468
Cylinder Seal Kit, Progressive Hydraulic Thumb (Kits Built 28 June 2010 -).....	470
CYLINDER, ARM.....	572
CYLINDER, ARM, COMPONENTS (SUPER LONG FRONT).....	574
CYLINDER, BUCKET.....	576
CYLINDER, BUCKET COMPONENTS (18 M SUPER LONG FRONT).....	578
CYLINDER, BUCKET COMPONENTS (22 M SUPER LONG FRONT).....	580
Cylinder, Direct Hydraulic Thumb, w/ Coupler (Kits Built 28 June 2010 -).....	466
Cylinder, Direct Hydraulic Thumb, w/o Coupler (Kits Built 28 June 2010 -).....	468
CYLINDER, LEFT BOOM.....	570
Cylinder, Progressive Hydraulic Thumb (Kits Built 28 June 2010 -).....	470
CYLINDER, RIGHT BOOM.....	568
D	
Dampener, Torsional.....	62
DAMPENER, TORSIONAL (1312).....	134
Data Converter.....	298
decal, Falling Object Protection Kit.....	346
Decal, Oil Level.....	452
Decals (French and Spanish).....	264
Decals and Labels.....	260, 262
Decals and Labels (Portuguese).....	266
Delivery Lines.....	522
Diodes, Cab Wiring Harness.....	290
Dipstick, Engine Oil.....	92
DIPSTICK, ENGINE OIL.....	160
DIPSTICK, HYDRAULIC PUMP.....	442
DIPSTICK, SWING MOTOR OIL.....	588
Direct Hydraulic Thumb Kit (w/ Coupler) (Kits Built 28 June 2010 -).....	466
Direct Hydraulic Thumb Kit (w/o Coupler) (Kits Built 28 June 2010 -).....	468
Ditching Bucket, Super Long Front.....	464
Dome Light.....	314
Door (Storage Compartment).....	394
Door Catch.....	326
Door Components, Cab.....	328
Door, Cab.....	310
Door, Cooling Package Compartment.....	406
Door, Hydraulic Pump Compartment.....	406
Drain Lines.....	528
Drain Plug, Radiator.....	224
Drain Valve, Fuel Tank.....	250
DRIVE COVER, TRAVEL MOTOR.....	54
DRIVE GEAR, TRAVEL MOTOR.....	42
Drive, Auxiliary.....	108
Dryer, Air Conditioner.....	384
DUCT, AIR CONDITIONER/HEATER.....	374, 388
Duct, Rear Tray.....	390
E	
EGR (8902).....	194
EGR VALVE GASKET KIT (9901).....	213, 214
Electronic Control Unit.....	456
Element, Air Cleaner.....	238
Element, Engine Oil Filter.....	112
ELEMENT, OIL FILTER.....	518
END CAPS, CONTROL VALVE (4-SPOOL SIDE).....	432
END CAPS, CONTROL VALVE (5-SPOOL SIDE).....	436
Engine Compartment Cover.....	400
Engine Compartment Panel.....	400
Engine Control Unit (6090HT002).....	280
Engine Control Unit (6090HT006).....	278
Engine Control Unit (ECU).....	122
Engine Control Unit and Engine Interface Wiring Harness (6090HT002).....	280
Engine Control Unit and Engine Interface Wiring Harness (6090HT006).....	278
Engine Control Unit Mounting Bracket (6090HT002).....	280
Engine Control Unit Mounting Bracket (6090HT006).....	278
Engine Control Unit Wiring Harness (6090HT002).....	280
Engine Control Unit Wiring Harness (6090HT006).....	278
Engine Coolant Heater - Plug.....	78
Engine Cover.....	410
Engine Fan Motor Standard Valve.....	232
ENGINE GASKET KIT, CYLINDER HEAD REMOVAL (9901).....	216
Engine Hoses, Radiator.....	228
Engine Interface Wiring Harness (6090HT002).....	280
Engine Interface Wiring Harness (6090HT006).....	278
Engine Mounting.....	248
Engine Mounting Bracket.....	248
Engine Oil Cooler.....	112
Engine Oil Cooler, Oil Filter.....	112
Engine Oil Dipstick.....	92
ENGINE OIL DIPSTICK.....	160
Engine Oil Filter.....	112, 258
Engine Oil Filter Element.....	112
Engine Oil Filter Hoses.....	258
Engine Oil Sampling Valve.....	258
ENGINE OVERHAUL KIT (9901).....	220
ENGINE OVERHAUL KIT, GASKET.....	218
ENGINE SHORT BLOCK.....	198
Engine Stop Switch.....	256
Engine Tube to Intercooler.....	228
Engine Wiring Harness.....	122
ENGINE WIRING HARNESS.....	192
Engine, Replacement.....	96, 128
ENGINE, REPLACEMENT (4601).....	164
EVAPORATOR, AIR CONDITIONER.....	376
Exhaust Clamp (Engine 6090HT002).....	246
EXHAUST GAS RECIRCULATION (8902).....	194
Exhaust Gas Recirculation (EGR) - Plug.....	124
Exhaust Manifold.....	80
EXHAUST MANIFOLD (2802).....	149
EXHAUST MANIFOLD REMOVAL.....	212
Exhaust Pipe (Engine 6090HT002).....	246
Exhaust Pipe (Engine 6090HT006).....	244
Exhaust Valve.....	106
EXHAUST VALVE (5101).....	174
F	
Falling Object Protection Kit.....	346
Fan Belt.....	77
FAN BELT (2430).....	147
Fan Drive Motor, Standard.....	232
Fan Drive, Reversing.....	234
Fan Guard.....	224
Fan Shroud.....	224
Fan, Cooling Package.....	224
filter Element.....	88
Filter Element Kit.....	88
filter Element, Primary.....	88
Filter, Air Cleaner.....	238
Filter, Engine Oil.....	258
Filter, Final Fuel.....	88
FILTER, FRESH AIR.....	388

Alphabetical Index - Continued

	Page		Page
Filter, Fuel.....	88, 254	Gear Case, Swing Motor	588
FILTER, FUEL (3509).....	156	Gear, Crankshaft	98
Filter, Hydraulic Oil	542	GEAR, CRANKSHAFT (4701).....	166
Filter, Hydraulic Oil Tank.....	452	Gearbox Components, Swing Motor	592
FILTER, OIL	180	GEARBOX, TRAVEL MOTOR	42
FILTER, OIL, COMPONENTS	518	General Purpose High Capacity Bucket	458
Filter, Pilot.....	542	Glass, Cab	316
FINAL DRIVE COVER, TRAVEL MOTOR	54	Grab Bar, Cab Door.....	328
Final Fuel Filter Element.....	88	Grab Bar, Cab Left.....	320
FITTINGS, PILOT SIGNAL MANIFOLD (CONTROL VALVE SIDE).....	512	GREASE HOSES	566
FITTINGS, PILOT SIGNAL MANIFOLD (PILOT CONTROLLER SIDE).....	510	GREASE LINES	566
Float, Fuel Tank	250	GRIP, PILOT CONTROLLER LEVER	482
Floor Mat	336	GRIP, PILOT SHUTOFF LEVER	478
Floor Plate	356	Ground Cable, Battery	268
FLOOR PLATE TO CAB HARDWARE	342	GROUND STRAPS, CAB WIRING HARNESS	290
FLOOR PLATE, CAB	356	GROUND WIRE, BOOM WORK LIGHT	274
Floor, Storage Compartment.....	408	GROUSER, TRACK CHAIN ASSEMBLY	34
FLOW CONTROL VALVE, AIR CONDITIONER / HEATER	376	GROUSER, TRACK CHAIN ASSEMBLY, HEAVY DUTY	36
Flywheel	66	Guard Bars, Cab Side Window.....	320
FLYWHEEL (1543).....	136	Guard, Fan	224
FLYWHEEL HOUSING (1405).....	135	GUARD, FOPS.....	346
Footrest	484	GUARD, LOWER ROLLER	38
FOPS.....	346	Guard, Operator Protection	348
FRAME BOTTOM COVER, TRACK.....	40		
Frame Counterweight.....	304	H	
Frame, Main	300		
Frame, Main, Boom Foot Pin.....	302	Hammer.....	314
FRAME, UNDERCARRIAGE	22	HANDLE AUXILIARY CONTROL SWITCH	276
FRESH AIR FILTER	388	Handle, Cab Door	328
Front Attach Pressure Sensor	546	Handle, Door Catch	326
Front Crank Oil Seal	118	Handrail, Cab Door.....	328
FRONT LIGHTS (2 LAMP)	270	Handrail, Cab Left.....	320
Front Lights (2 Light)	270	Handrail, Tool Box	412
Front Lines	530	HARDWARE, TRAVEL MOTOR SUPPORT	52
FRONT PLATE (7702) (WITH LH AUXILIARY DRIVE).....	188	HARNESSE, CAB WIRING AND COMPONENTS	290
FUEL AND WATER SEPARATOR (3509).....	156	Harness, Engine Interface (6090HT002).....	280
Fuel Cooler.....	254	Harness, Engine Interface (6090HT006).....	278
Fuel Filter.....	88, 254	Harness, Head Lamp.....	272
FUEL FILTER (3509).....	156	HARNESSE, PILOT CONTROL LEVER WIRING	276
FUEL FILTER ELEMENT SERVICE KIT	203	Harness, Wire, Roof Lights	330
FUEL FILTER GASKET KIT (3509).....	156	Harness, Wire, Travel Alarm	424
FUEL FILTER KIT (3509).....	156	Harness, Wiring, Cab Roof	314
FUEL FILTER SEAL KIT, PRIMARY	201	Harness, Wiring; Machine	282
FUEL INJECTION LINES AND NOZZLE (1603).....	138	Harness, Wiring, Monitor	284
Fuel Injection Nozzle	68	Harness, Wiring, Reversing Fan Drive	234
Fuel Injection Pump.....	68	Harness, Wiring; Starter Protection	268
FUEL INJECTION PUMP (1603).....	138	Harness, Wiring, Windshield Wiper	322
Fuel Injection Pump Reman	139	Hatch, Cab Roof.....	324
Fuel Injector.....	68	HEAD LAMP	270
Fuel Lines	254	HEAD REMOVAL GASKET KIT, CYLINDER (9901).....	216
Fuel Pressure Sensor.....	88	Headlamp Wiring Harness (Cab).....	272
Fuel Pressure Sensor Wiring Connector (6090HT002).....	280	Headliner, Cab	324
Fuel Pressure Sensor Wiring Connector (6090HT006).....	278	HEATER	374
Fuel Rail Pressure Sensor.....	68	HEATER COMPONENTS	376
Fuel System Hoses	254	HEATER CORE	376
FUEL SYSTEM UNIT PUMP (1603)	138	Heater Hoses.....	386
Fuel Tank	250	Heater Hoses To Engine.....	386
Fuel Tank Level Sending Unit.....	250	Heater Plug.....	78
Fuel Tank Mounting	252	HEATER PLUG (2699).....	148
Fuel Temperature Sensor	68	Heater Switch, Seat (Air-Suspension).....	372
FUEL TRANSFER PUMP (3509).....	156	HEATER WIRING HARNESS, SEAT	370
Fuel Transfer Pump Wiring Connector (6090HT002).....	280	Heater Wiring Harness, Seat (Air-Suspension).....	372
Fuel Transfer Pump Wiring Connector (6090HT006).....	278	Heavy Duty Bucket.....	460
FUSE BOX	290	Heavy Duty High Capacity Bucket.....	462
FUSE COVER	290	HEAVY DUTY LOWER TRACK ROLLER	32
Fuses.....	290	HEAVY DUTY TRACK CHAIN ASSEMBLY	36
		High Pressure Common Rail	68
		Hood, Engine.....	410
		Horn	422
		Horn and Cab Hardware.....	292
		Hose, Air Conditioner	382
		Hose, Boom Cylinder To Boom Bottom Lines	538
		Hose, Boom Cylinder To Control Valve	538
		HOSE, COMPRESSOR	378
		HOSE, CONDENSER	378
		Hose, Control Valve To Cooling Package	526
		Hose, Control Valve to Hydraulic Pump	522
		Hose, Control Valve To Oil Tank	524
		Hose, Control Valve to Pilot Signal Manifold	548

350GLC Excavator PC10219 (C.1)

Alphabetical Index - Continued

Page	Page
Light, Dome.....	314
LIGHTS (2 LAMP), FRONT.....	270
Line, Engine To Heater.....	386
Line, Hydraulic Pilot (Pilot Signal Manifold To Swing Motor).....	546
Line, Oil Tank to Solenoid Valve.....	542
LINE, OIL, ARM CYLINDER.....	572
Line, Oil, Hydraulic Pump.....	442
LINE, PILOT (PILOT SHUTOFF VALVE TO HYDRAULIC OIL TANK).....	554
LINE, PILOT, (SOLENOID VALVE TO PILOT SHUTOFF VALVE).....	554
Line, Solenoid Valve to Hydraulic Pump.....	542
Line, Solenoid Valve to Oil Tank.....	542, 550
Liner, Cylinder.....	96
LINER, CYLINDER (4601).....	164
Liner, Piston Kit.....	100
Lines, Air Cleaner Intake.....	240
LINES, BOOM BOTTOM TO ARM HYDRAULIC CYLINDER LINES.....	564
LINES, BOOM BOTTOM TO BUCKET HYDRAULIC CYLINDER.....	564
Lines, Boom Cylinder To Boom Bottom Lines.....	538
Lines, Boom Cylinder To Control Valve.....	538
LINES, BOOM HYDRAULIC.....	564
Lines, Bucket Cylinder Hydraulic.....	496, 498, 500
Lines, Control Valve To Cooling Package.....	526
Lines, Control Valve to Hydraulic Pump.....	522
Lines, Control Valve To Oil Tank.....	524
Lines, Delivery.....	522
Lines, Drain.....	528
LINES, FRONT.....	530
LINES, FUEL INJECTION (1603).....	138
Lines, Fuel System.....	254
LINES, GREASE.....	566
Lines, Hydraulic Pump Attenuator.....	540
LINES, LONG ARM 4.0M.....	498
LINES, LUBRICATION.....	566
Lines, Oil Tank To Cooling Package.....	524
Lines, Oil Tank To Hydraulic Pump.....	520
Lines, Pilot (Hydraulic Filter To Solenoid Valve).....	544, 562
Lines, Pilot (Hydraulic Pump To Solenoid Valve).....	544, 562
Lines, Pilot (Pilot Signal Manifold To Hydraulic Pump).....	544, 562
LINES, PILOT (PILOT SIGNAL MANIFOLD TO LEFT PILOT CONTROLLER).....	552
LINES, PILOT (PILOT SIGNAL MANIFOLD TO PILOT SHUTOFF VALVE).....	554
LINES, PILOT (PILOT SIGNAL MANIFOLD TO PROPEL PILOT VALVE).....	556
LINES, PILOT (PILOT SIGNAL MANIFOLD TO RIGHT PILOT CONTROLLER).....	558
LINES, PILOT (PROPEL PILOT VALVE TO PILOT SHUTOFF VALVE).....	560
Lines, Pilot (Solenoid Valve To Hydraulic Pump).....	544, 562
Lines, Return.....	524
Lines, Return (Control Valve To Cooling Package).....	526
Lines, Rotary Manifold To Control Valve.....	536
LINES, SHORT ARM 2.67M.....	500
LINES, STANDARD ARM 3.2M.....	496
Lines, Suction.....	520
Lines, Swing Motor To Control Valve (6090HT002).....	534
Lines, Swing Motor To Control Valve (6090HT006).....	532
LINES, TRAVEL MOTOR HYDRAULIC.....	50
Lines, Turbocharger Oil.....	116
LINK ASSEMBLY, ARM CYLINDER TO BUCKET.....	504
LINK, ARM.....	502
LINK, BUCKET HYDRAULIC CYLINDER TO ARM.....	502
LINK, TRACK CHAIN ASSEMBLY.....	34
LINK, TRACK CHAIN ASSEMBLY, HEAVY DUTY.....	36
Lock, Cab Door.....	328
Lock, Cooling Package Compartment Door.....	406
Lock, Hydraulic Pump Compartment Door.....	406
Long Arm 4.0m.....	498
Lower Roller Guard.....	38
Lower Roller, Track.....	26
LOWER ROLLER, TRACK, HEAVY DUTY.....	32
Lower Track Roller.....	26
Lower Track Roller, Heavy Duty.....	32
LUBRICATION HOSES.....	566
LUBRICATION LINES.....	566
Lubrication System.....	566
M	
Machine Wiring Harness.....	282
Main Bearings.....	98
MAIN BEARINGS (4701).....	166
Main Controller (MCZ).....	294
Main Frame.....	300
Main Frame Boom Foot Pin.....	302
Manifold, Exhaust.....	80
MANIFOLD, EXHAUST (2802).....	149
Manifold, Intake.....	70
MANIFOLD, PILOT SIGNAL (CONTROL VALVE SIDE).....	512
Manifold, Pilot Signal (Housing and Gaskets).....	508
MANIFOLD, PILOT SIGNAL (HOUSING AND GASKETS).....	506
MANIFOLD, PILOT SIGNAL (PILOT CONTROLLER SIDE).....	510
MANIFOLD, PILOT SIGNAL (VALVES).....	514
MANIFOLD, PILOT SIGNAL, TO LEFT PILOT CONTROLLER HYDRAULIC PILOT LINES.....	552
MANIFOLD, PILOT SIGNAL, TO PROPEL PILOT VALVE PILOT HYDRAULIC HOSES.....	556
MANIFOLD, PILOT SIGNAL, TO RIGHT PILOT CONTROLLER HYDRAULIC PILOT HOSES.....	558
Manifold, Pilot Signal, To Swing Motor Pilot Hydraulic Line.....	546
MANIFOLD, SOLENOID VALVE.....	440
MAP SENSOR.....	162
MAP SENSOR (1701).....	140
Mat, Floor.....	336
Mechanical Pattern Changer.....	516
Mechanical Suspension Seat.....	360
Mirror, Cab, Left Rear View.....	420
Mirror, Counterweight.....	418
Mirror, Right Rear View.....	412
Module.....	456
Moisture Sensor.....	88
Monitor.....	284
Monitor and Monitor Wiring Harness.....	284
Monitor Bracket.....	284
Monitor Controller (DSZ).....	296
Motion Alarm Wire Harness.....	426
MOTOR KIT, STARTER (9901).....	222
MOTOR, AIR CONDITONER / HEATER.....	376
Motor, Propel.....	42
Motor, Propel, Components.....	44
Motor, Reversing Fan Drive.....	234
Motor, Standard Fan Drive.....	232
Motor, Starting (12V).....	84
MOTOR, STARTING (12V)(3003).....	152
Motor, starting with solenoid cover.....	84
MOTOR, STARTING WITH SOLENOID COVER.....	152
Motor, Swing.....	588
Motor, Swing, Components.....	590
Motor, Swing, To Control Valve Pilot Hydraulic Line.....	546
Motor, Travel.....	42
Motor, Travel, Components.....	44
Motor, Windshield Wiper.....	322
Mounting Brackets, Control Valve.....	438
MOUNTING, AIR COMPRESSOR (7899).....	190
MOUNTING, ALTERNATOR (6208).....	182
Mounting, Cooling Package.....	226
Mounting, JDLINK™ MTG (Cellular Controller).....	454
Mounting, Swing Motor.....	594
Mounts, Cab.....	312
MTG Assembly, JDLINK™.....	454
Muffler (Engine 6090HT002).....	246
Muffler (Engine 6090HT006).....	244
Muffler Support (Engine 6090HT002).....	246
Muffler Support (Engine 6090HT006).....	244
N	
Non-Slip Cover, Pump Compartment.....	404
Nozzle and Pump Seal Kit.....	68
Nozzle, Fuel Injection.....	68
Nozzle, Windshield Washer.....	314
O	
O-RINGS, CONTROL VALVE.....	428
Oil Cooler.....	224
OIL COOLER, OIL FILTER (5916).....	180
OIL DIPSTICK.....	158
OIL DIPSTICK, ENGINE.....	160
Oil Dipstick, Engine.....	92
OIL FILL, SWING MOTOR.....	588

350GLC Excavator PC10219 (C.1)

Alphabetical Index - Continued

	Page		Page
Push Rod.....	102	ROCKER ARM COVER (1106)	132
PUSH ROD (4901)	170	Rocker Arm Shaft	102
		Rod, Push.....	102
		ROLLER, LOWER GUARD	38
		ROLLER, LOWER TRACK, HEAVY DUTY	32
		ROLLER, SWING BEARING	306
		ROLLER, UPPER TRACK.....	24
		Roof Lights Wiring Harness.....	330
		Rotary Manifold Components.....	584
		Rotary Manifold Cover.....	586
		Rotary Manifold Lines To Control Valve.....	536
		Rotary Manifold Seal and Swing Stop.....	586
		Rotary Manifold Swing Stop	586
		ROTATING GROUP, HYDRAULIC PUMP.....	444
		Rubber, Counterweight.....	304
		S	
		SEAL KIT, ARM CYLINDER.....	572
		SEAL KIT, ARM CYLINDER (SUPER LONG FRONT).....	574
		SEAL KIT, BUCKET CYLINDER	576
		SEAL KIT, BUCKET CYLINDER (18 M SUPER LONG FRONT).....	578
		SEAL KIT, BUCKET CYLINDER (22 M SUPER LONG FRONT).....	580
		Seal Kit, Hydraulic Pump.....	444
		SEAL KIT, HYDRAULIC PUMP.....	442
		Seal Kit, Hydraulic Thumb Kit Cylinder (Kits Built 28 June 2010 -)	582
		SEAL KIT, LEFT BOOM CYLINDER	570
		Seal Kit, Nozzle and Pump.....	68
		SEAL KIT, RIGHT BOOM CYLINDER.....	568
		Seal, Rotary Manifold	586
		SEAL, SWING BEARING	308
		Sealing Gasket, Exhaust	80
		Sealing Ring, Exhaust Manifold.....	80
		Seat Base Cover	366
		Seat Base, Air Suspension.....	364
		Seat Belt, Air Suspension Heated Seat.....	358
		Seat Belt, Mechanical Suspension Seat.....	360
		Seat Heater Switch (Air-Suspension).....	372
		Seat Heater Wiring Harness.....	370
		Seat Heater Wiring Harness (Air-Suspension).....	372
		Seat Mounting Hardware, Cab Floor.....	340
		Seat Mounting, Cab Floor.....	338
		Seat Mounting, Hardware.....	362
		Seat Slide Track Kit, Air Suspension Seat	364
		Seat Stand (Air Suspension).....	364
		Seat, Air Suspension, Heated	358
		Seat, Mechanical Suspension	360
		Sending Unit, Fuel Tank Level.....	250
		Sensor, Air Temperature, Air Cleaner.....	240
		Sensor, Coolant Temperature.....	90
		Sensor, Crankshaft Position	96
		SENSOR, CRANKSHAFT POSITION (4601)	164
		Sensor, Front Attach Pressure	546
		Sensor, Fuel	88
		SENSOR, HYDRAULIC PUMP DELIVERY PRESSURE.....	444
		SENSOR, MAP (1701)	140
		Sensor, Moisture.....	88
		Sensor, Pressure, Control Valve.....	548
		Sensor, Pressure, Hydraulic Solenoid Valve	544
		Sensor, Pressure, Pilot Control Valve.....	548
		Sensor, Solar, Air Conditioning.....	384
		Sensor, Temperature, Air Conditioner	384
		SENSOR, TEMPERATURE (1701)	140
		Sensor, Temperature, Hydraulic Oil Reservoir	452
		Sensor, Water in Fuel	88
		SENSOR, WATER TEMPERATURE (3509)	156
		SENSOR, WATER TEMPERATURE (3902)	158
		SERVICE KIT CYLINDER HEAD BOLTS	204
		Shaft, Rocker Arm	102
		SHAFT, ROCKER ARM (4901)	170
		SHOE, TRACK CHAIN ASSEMBLY.....	34
		SHOE, TRACK CHAIN ASSEMBLY, HEAVY DUTY.....	36
		Short Arm 2.67m	500
		SHORT ARM 2.67M HYDRAULIC HOSES.....	500
		SHORT ARM 2.67M HYDRAULIC LINES.....	500
		SHORT ARM PIVOT PINS 2.67M.....	500
		SHORT BLOCK, ENGINE	198
		Shroud, Fan.....	224
		SHUTOFF LEVER, PILOT	478
		Shutoff Valve, Pilot	560
		SHUTOFF VALVE, PILOT, TO PROPEL PILOT VALVE PILOT HYDRAULIC LINES	560
RACE, SWING BEARING	306		
Radiator.....	224		
Radiator Tubes to Engine.....	228		
Radio	416		
Radio Antenna.....	314		
Rail, Fuel	68		
Rain Visor	350		
Rain Visor Support	352		
Rear Oil Seal	64		
Rear Tray.....	390		
Rear View Mirror, Left.....	420		
Receiver-Dryer, Air Conditioner.....	384		
Receptacle, BUS, Engine Control Unit Wiring Harness (6090HT002).....	280		
Receptacle, BUS, Engine Control Unit Wiring Harness (6090HT006).....	278		
Refrigerant Hose, Air Conditioner.....	382		
Regulator, Hydraulic Pump, Components	446		
Relay Box	290		
Relay, Battery	268		
Relay, Cab Headlamp Wiring Harness.....	272		
RELAY, PILOT CONTROL LEVER.....	276		
RELAY, SEAT HEATER.....	370		
Relay, Seat Heater (Air-Suspension).....	372		
RELAYS, CAB WIRING HARNESS	290		
Release Lever, Door Catch	326		
RELIEF VALVE, SWING MOTOR	590		
RELIEF VALVE, TRAVEL MOTOR BRAKE VALVE (COMPONENTS).....	48		
RELIEF VALVE, TRAVEL MOTOR CROSSOVER.....	46		
RELIEF VALVE, TRAVEL MOTOR CROSSOVER COMPONENTS	48		
Reman Alternator	154		
Reman Camshaft.....	96, 164		
Reman Center Joint Components	584		
Reman Connecting Rod	100, 168		
Reman Crankshaft.....	166		
Reman Cylinder Head	106, 127, 174		
Reman Engine.....	197		
Reman Fuel Injection Pump	68, 138		
Reman Injection Nozzle.....	138		
REMAN MAIN HYDRAULIC PUMP	442		
Reman Main Hydraulic Pump Components	444		
Reman Oil Pump	104, 172		
REMAN PROPEL MOTOR.....	42		
Reman Propel Motor Components.....	44		
Reman Rotary Manifold Components	584		
Reman Starter Motor	84, 152		
Reman Starter Motor 12V.....	222		
REMAN SWING BEARING	306		
Reman Travel Motor	42		
Reman Travel Motor Components	44		
Reman Turbocharger	116, 184		
Reman Water Pump	74, 144		
Replacement Engine	96, 128		
REPLACEMENT ENGINE.....	197		
REPLACEMENT ENGINE (4601)	164		
REPLACEMENT, WATER PUMP.....	202		
Reservoir, Hydraulic Oil.....	452		
Reservoir, Window Washer	332		
Return Lines	524, 526		
Return Lines (Control Valve To Cooling Package)	526		
Reversing Fan Drive.....	234		
Reversing Fan Drive Motor Components	236		
Reversing Fan Drive Pump	234		
RIGHT BOOM CYLINDER.....	568		
Right Boom Cylinder Components.....	568		
RIGHT BOOM CYLINDER SEAL KIT	568		
Right Cab Inside Cover	334		
RIGHT PILOT CONTROLLER TO PILOT SIGNAL MANIFOLD HYDRAULIC PILOT HOSES	558		
Ring Gear, Flywheel.....	66		
RING GEAR, FLYWHEEL (1543).....	136		
Ring Kit, Piston.....	100		
RING KIT, PISTON (4801).....	168		
RING PACK, PISTON.....	211		
Rocker Arm.....	102		
ROCKER ARM (4901).....	170		
Rocker Arm Cover	60		

Alphabetical Index - Continued


Page	Page
Side Window Guard Bars.....	320
Sight Gauge, Hydraulic Oil Tank.....	452
SKID PLATE, LOWER ROLLER.....	38
Solenoid Cover, Starting Motor.....	84
SOLENOID COVER, STARTING MOTOR (3003).....	152
Solenoid Valve.....	440
Solenoid Valve Lines to Hydraulic Pump.....	542
Solenoid Valve Lines to Oil Tank.....	550
Speakers.....	314
SPOOLS, CONTROL VALVE (4-SPOOL SIDE).....	430
SPOOLS, CONTROL VALVE (5-SPOOL SIDE).....	434
SPRING, TRACK CHAIN ADJUSTER.....	28
Standard Arm 3.2m.....	496
STANDARD ARM 3.2M HYDRAULIC HOSES.....	496
STANDARD ARM 3.2M HYDRAULIC LINES.....	496
STANDARD ARM PIVOT PINS 3.2M.....	496
Standard Boom.....	486
Standard Fan Piping.....	232
Starter (12V).....	84
STARTER (12V)(3003).....	152
STARTER MOTOR KIT 9901.....	222
Starter Protection Wiring Harness.....	268
STARTING AID (4397).....	162
Starting Motor (12V).....	84
STARTING MOTOR (12V)(3003).....	152
Starting Motor with Solenoid Cover.....	84
STARTING MOTOR WITH SOLENOID COVER(3003).....	152
Step, Tool Box.....	412
STEP, UNDERCARRIAGE FRAME.....	22
Stop Switch, Engine.....	256
Stop, Swing, Rotary Manifold.....	586
Stoppers, Cab.....	318
Storage Compartment Cover.....	396
Storage Compartment Floor Cover.....	408
Storage Compartment, Door.....	394
Strainer, Fuel Tank.....	250
Straps, Lift.....	126
STRAPS, LIFT (9801).....	196
Suction Lines.....	520
Sunroof.....	324
SUPER LONG FRONT ARM (18 M).....	492
SUPER LONG FRONT ARM (22 M).....	494
SUPER LONG FRONT BOOM (18M).....	488
SUPER LONG FRONT BOOM (22M).....	490
SUPER LONG FRONT BUCKET CYLINDER COMPONENTS (18 M).....	578
SUPER LONG FRONT BUCKET CYLINDER COMPONENTS (22 M).....	580
Super Long Front Ditching Bucket.....	464
SUPER LONG FRONT KIT (18 M).....	492
SUPER LONG FRONT KIT (22 M).....	494
Super Long Front Pressure Relief Valve, Swing Front.....	588
Support, Muffler (Engine 6090HT002).....	246
Support, Muffler (Engine 6090HT006).....	244
SUPPORTS, FLOOR PLATE.....	356
Surge Tank.....	230
Surge Tank Hoses.....	230
Swing Bearing.....	306
SWING BEARING ATTACHMENTS.....	308
SWING BEARING BOTTOM COVER, TRACK FRAME.....	40
Swing Bearing Parts.....	308
SWING BEARING SEAL.....	308
Swing Gearbox Components.....	592
Swing Motor and Gear Case.....	588
Swing Motor Components.....	590
Swing Motor Gear Case.....	588
Swing Motor Lines From Control Valve (6090HT002).....	534
Swing Motor Lines From Control Valve (6090HT006).....	532
Swing Motor Lines To Control Valve (6090HT002).....	534
Swing Motor Mounting.....	594
SWING MOTOR OIL FILL.....	588
Swing Motor To Control Valve Pilot Hydraulic Line.....	546
Swing Stop, Rotary Manifold.....	586
Switch Box.....	286
SWITCH, AUXILIARY CONTROL.....	276
Switch, Engine Stop.....	256
Switch, Ignition.....	288
Switch, Pilot Shutoff.....	478
Switch, Reversing Fan Drive.....	234
Switch, Seat Heater (Air-Suspension).....	372
SWITCH, STARTING MOTOR (12V) (3003).....	152
SWITCH, TRAVEL ALARM.....	426
	T
	Tank, Fuel.....
	Tank, Hydraulic Oil.....
	Tank, Surge.....
	Tank, Window Washer.....
	TAPPET (4901).....
	TEMPERATURE SENSOR.....
	TEMPERATURE SENSOR (1701).....
	Temperature Sensor, Air.....
	Temperature Sensor, Hydraulic Oil Reservoir.....
	TENSION DEVICE, TRACK CHAIN ADJUSTER.....
	Tensioner, Belt.....
	Thermostat.....
	THERMOSTAT (2201).....
	Thermostat Cover.....
	THERMOSTAT COVER (2107).....
	Thermostat Housing.....
	THERMOSTAT HOUSING (3902).....
	THERMOSTAT, AIR CONDITIONER / HEATER.....
	THRUST BEARING , CRANKSHAFT (4701).....
	Thrust Bearing, Crankshaft.....
	Thumb, Direct Hydraulic, w/ Coupler (Kits Built 28 June 2010 -).....
	Thumb, Direct Hydraulic, w/o Coupler (Kits Built 28 June 2010 -).....
	Thumb, Progressive Hydraulic (Kits Built 28 June 2010 -).....
	Timing Gear Cover.....
	TIMING GEAR COVER (7701) (WITH RH AUXILLIARY DRIVE).....
	TIMING GEAR COVER, (7702) (WITH LH AUXILIARY DRIVE).....
	Tool Box.....
	Tool Box Cover.....
	Torsional Dampener.....
	TORSIONAL DAMPENERS (1312).....
	Track Chain Adjuster.....
	Track Chain Assembly.....
	Track Chain Assembly, Heavy Duty.....
	TRACK CHAIN DRIVE GEAR.....
	Track Chain Idler.....
	TRACK CHAIN ROLLER, UPPER.....
	Track Frame Bottom Cover.....
	TRACK FRAME, UNDERCARRIAGE.....
	Track Kit, Seat Slide, Air Suspension Seat.....
	Track Roller, Lower.....
	TRACK ROLLER, LOWER, HEAVY DUTY.....
	TRANSFER PUMP, FUEL (3509).....
	Travel Alarm.....
	TRAVEL ALARM SWITCH.....
	Travel Alarm Wire Harness.....
	Travel Device Hydraulic Lines.....
	Travel Motion Alarm Switch.....
	Travel Motor.....
	Travel Motor Brake Valve.....
	TRAVEL MOTOR BRAKE VALVE COMPONENTS.....
	Travel Motor Components.....
	Travel Motor Cover.....
	Travel Motor Crossover Relief Valve.....
	TRAVEL MOTOR CROSSOVER RELIEF VALVE.....
	TRAVEL MOTOR CROSSOVER RELIEF VALVE COMPONENTS.....
	TRAVEL MOTOR DRIVE GEAR.....
	Travel Motor Gearbox.....
	TRAVEL MOTOR HYDRAULIC LINES.....
	Travel Motor Support Hardware.....
	Travel Pilot Control Pedals.....
	Travel Pilot Control Valve Components.....
	TRAVEL PILOT CONTROL VALVE COMPONENTS.....
	Travel Pilot Control Valve Lever.....
	Tray, Left Console.....
	Tray, Rear.....
	TUBE, THERMOSTAT HOUSING (3902).....
	Tube, Turbo Intercooler.....
	Tubes, Engine Radiator.....
	Turbocharger.....
	TURBOCHARGER (6315).....
	Turbocharger and Oil Lines.....
	Turbocharger to Air Cleaner Hoses.....
	Turbocharger to Air Cleaner Lines.....
	U
	Undercarriage Frame.....
	UPPER ROLLER, TRACK.....

Alphabetical Index - Continued

	Page		Page
V			
V-Belt	77	Wiring Harness, Engine Control Unit (6090HT002)	280
V-BELT (2430)	147	Wiring Harness, Engine Control Unit (6090HT006)	278
VALVE ACTUATING MECHANISM	170	Wiring Harness, Engine Interface (6090HT002)	280
VALVE BODY, CONTROL VALVE (4-SPOOL SIDE)	430	Wiring Harness, Engine Interface (6090HT006)	278
VALVE BODY, CONTROL VALVE (5-SPOOL SIDE)	434	Wiring Harness, Fan Drive Motor	234
Valve Cover	60	WIRING HARNESS, FRONT LIGHTS (2 LAMP)	270
VALVE COVER (1106)	132	Wiring Harness, Machine	282
VALVE, BRAKE, COMPONENTS	46	Wiring Harness, Monitor	284
Valve, Brake, Travel Motor	44	WIRING HARNESS, PILOT CONTROL LEVER	276
Valve, Engine Oil By-pass	96	Wiring Harness, Power Converter (12 Volt)	392
VALVE, ENGINE OIL BY-PASS (4601)	164	WIRING HARNESS, SEAT HEATER	370
Valve, Engine Oil Sampling	258	Wiring Harness, Seat Heater (Air-Suspension)	372
Valve, Exhaust	106	Wiring Harness, Starter Protection	268
VALVE, EXHAUST (5101)	174	Wiring Harness, Windshield Wiper	322
Valve, Hydraulic / Travel Control Components	476	WORK LIGHT, BOOM	274
Valve, Hydraulic Oil Sampling	542		
Valve, Intake	106		
VALVE, INTAKE (5101)	174	Y	
Valve, Pilot Control	472	YOKE, TRACK IDLER	30
Valve, Pilot Shutoff	560		
VALVE, PILOT SHUTOFF, TO PILOT SIGNAL MANIFOLD PILOT HYDRAULIC HOSES	554		
VALVE, PILOT SHUTOFF, TO PILOT SIGNAL MANIFOLD PILOT HYDRAULIC LINES	554		
VALVE, PILOT SHUTOFF, TO SOLENOID VALVE PILOT HYDRAULIC LINES	554		
Valve, Pressure Regulating	112		
VALVE, PROPEL PILOT VALVE TO PILOT SHUTOFF VALVE	560		
VALVE, RELIEF, TRAVEL MOTOR BRAKE (COMPONENTS)	48		
VALVE, SOLENOID	440		
VALVE, TRAVEL CONTROL, COMPONENTS	474		
VALVES, PILOT SIGNAL MANIFOLD	514		
Vapor Condenser, Air Conditioner	384		
Vent, Cooling Package Panel	402		
Vent, Right Cab Inside Cover	334		
Ventilating Hose	82		
VENTILATING HOSE (2907)	150		
Ventilating System	82		
VENTILATING SYSTEM (2907)	150		
Visor Support, Rain	352		
VISOR, RAIN	350		
W			
Washer Nozzle	314		
Water in Fuel Sensor	88		
Water in Fuel Sensor Wiring Connector (6090HT002)	280		
Water in Fuel Sensor Wiring Connector (6090HT006)	278		
Water Pump	74		
WATER PUMP (2001)	144		
Water Pump Inlet	110		
WATER PUMP INLET (5705)	179		
Water Pump Inlet Cover	110		
WATER PUMP REPLACEMENT	202		
Water Separator, Fuel Filter	254		
WATER TEMPERATURE SENSOR (3509)	156		
WATER TEMPERATURE SENSOR (3902)	158		
Weight, Rear Frame	304		
Window Glass, Cab Door	328		
Window Guard Bars	320		
Window Washer Reservoir	332		
Window, Cab	316		
Windshield	322		
Windshield Washer Nozzle	314		
Wiper Arm, Windshield Wiper	322		
Wiper Blade, Windshield	322		
Wiper Motor, Windshield	322		
Wire Harness, Roof Lights	330		
Wire Harness, Travel Alarm	424		
WIRE HARNESS, TRAVEL ALARM SWITCH	426		
Wiring Connectors, Engine Interface Wiring Harness (6090HT002) ..	280		
Wiring Connectors, Engine Interface Wiring Harness (6090HT006) ..	278		
Wiring Harness Cover, Cab	292		
WIRING HARNESS, ALTERNATOR (28 VOLT) (80 AMP) (3102)	154		
Wiring Harness, Alternator (28V) (80 Amp)	86		
Wiring Harness, Cab	290		
Wiring Harness, Cab Roof	314		
Wiring Harness, Cab, Headlamp	272		
Wiring Harness, Engine	122		
WIRING HARNESS, ENGINE	192		

Undercarriage Frame
Bâti de châssis porteur
Chassi da Estrutura Inferior
Bastidor de base inferior

 TX1093367 A.1

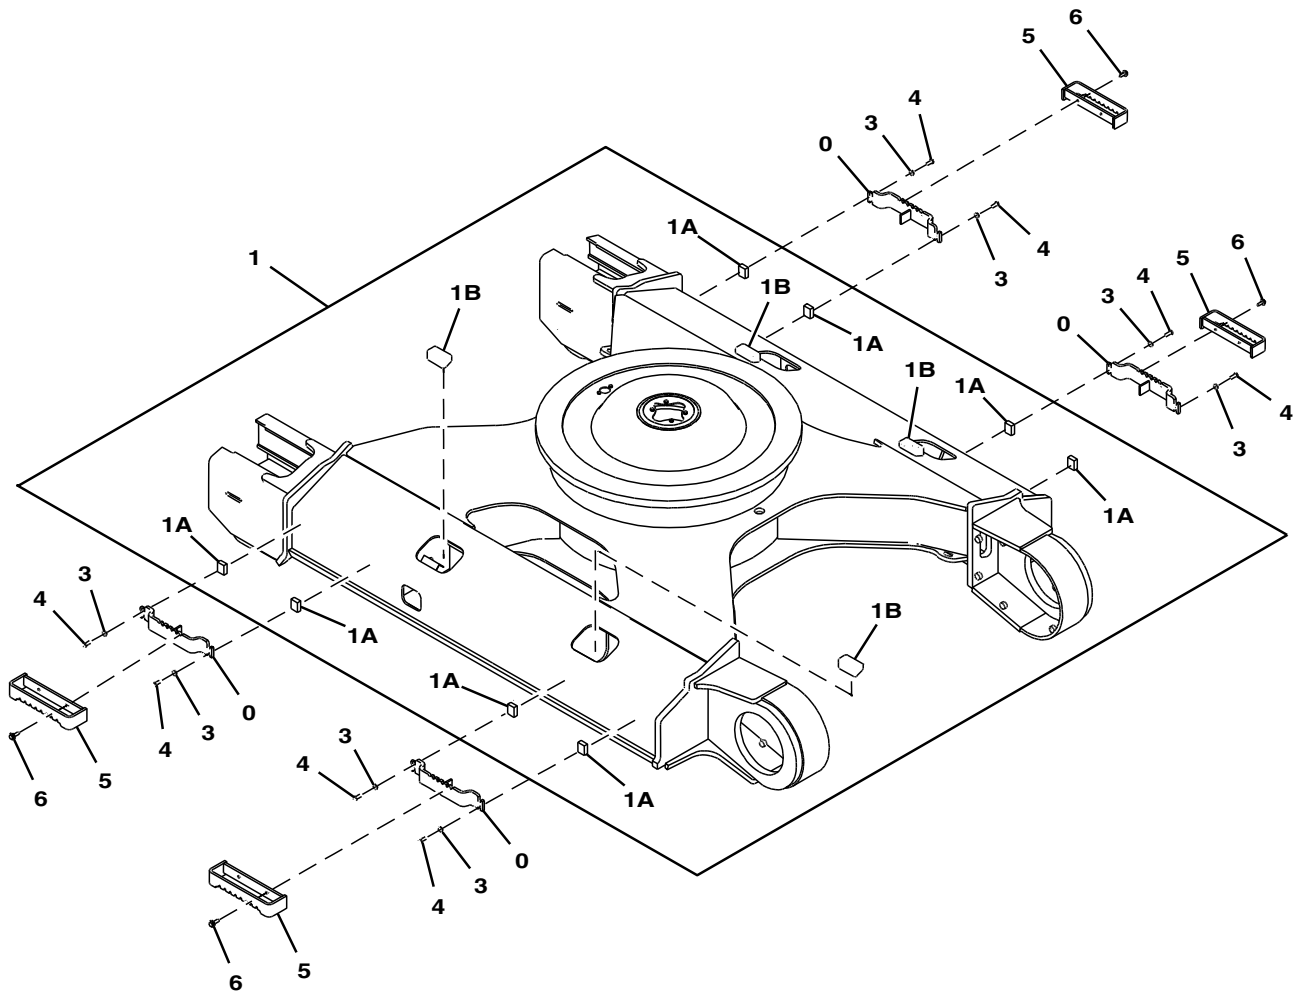


TX1093367

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	9763511	Step	4		
1	5009886	Frame	1		
1A	4366661	Screw	8		
1B	3106880	Bracket	4		
3	24M7338	Washer	16		17 X 30 X 3 mm, (SUB FOR J222016)
4	19M7488	Cap Screw	16		M16 X 40, (SUB FOR J901640)
5	9755978	Step	4		
6		Screw With Washer	8		(J281240 NLA)
	19M7493	Cap Screw	8		M12 X 40, (SUB FOR J901240)
	24H1748	Washer	8		1/2" X 1-1/4" X 0.105", (SUB FOR 449490)

Carrier Roller
Galet porteur
Cilindro do Transportador
Rodillo superior

 TX1093373 A.1

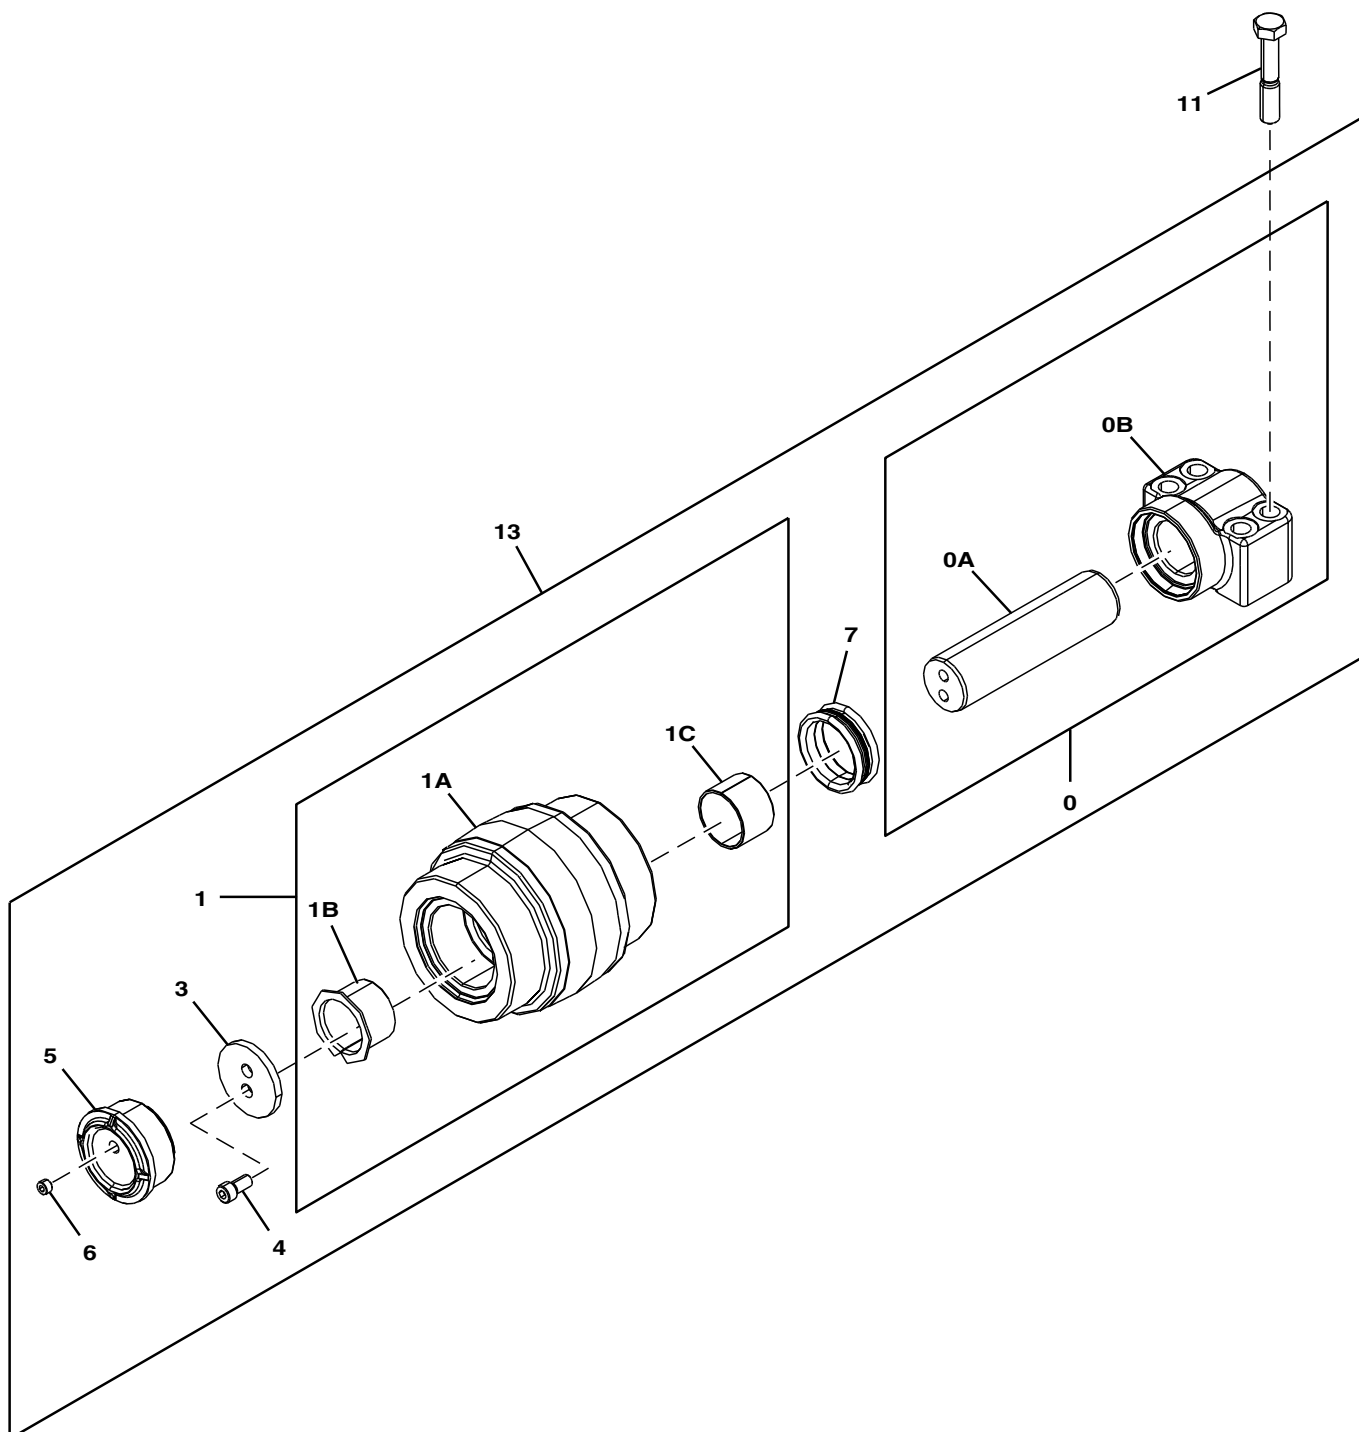


TX1093373

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0		Axle	1		(9245119 NLA)
0A		Shaft	1		(3103617 NLA)
0B		Bracket	1		(2053014 NLA)
1		Roller	1		(9245118 NLA)
1A		Roller	1		(2051920 NLA)
1B		Bushing	1		(3103618 NLA)
1C		Bushing	1		(3103619 NLA)
3		Lock Plate	1		(4628511 NLA)
4	T224690	Bolt	2		(SUB FOR M351225)
5		Cover	1		(3103620 NLA)
6	94-2011	Fitting Plug	1		(SUB FOR 4315607)
7	4479926R	Seal Kit	1		(SUB FOR 4479926)
11	4647124	Bolt	4		
13	9245117R	Roller	1		(SUB FOR 9245117)

John Deere Dealer Order Directly From Duratrax™ Direct
 Concessionnaires John Deere commander directement auprès de Duratrax™ Direct
 Concessionário John Deere Dealer: Encomende Diretamente da Duratrax™ Direct
 Concessionarios John Deere pedir directamente de Duratrax™ Direct

Lower Track Roller
Galet de chenille inférieur
Roleta Inferior da Esteira
Rodillo inferior

 DH900841_TX1094221 A.1

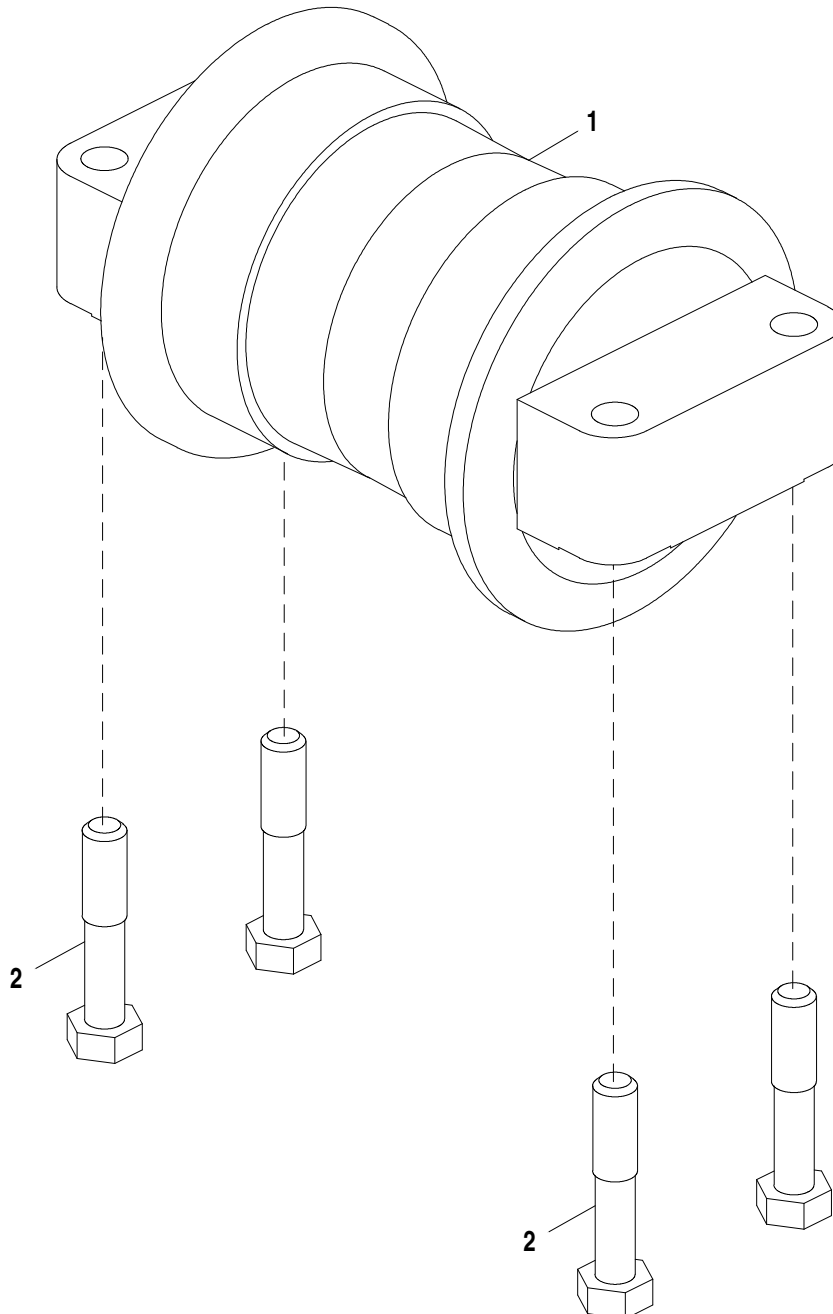


DH900841_TX1094221

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
1	FF510786	Bottom Roller	16		
2	4648103	Bolt	64		

Track Chain Adjuster
Dispositif de réglage de chaîne de chenille
DtI Ajustador da Corrente da Esteira
Ajustador de cadena de oruga

 TX1093375 A.1

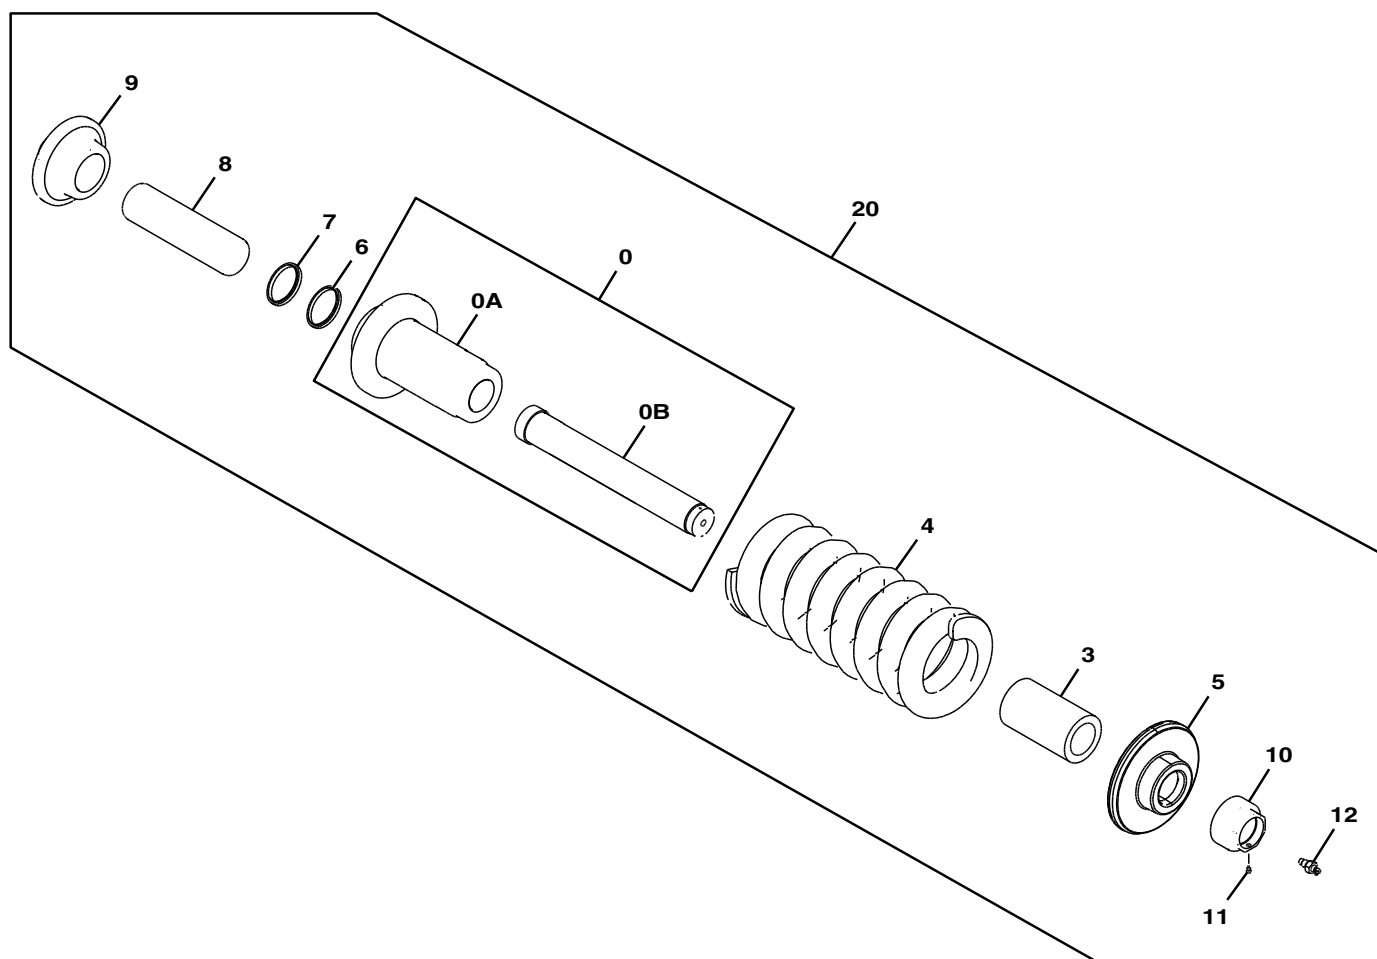


TX1093375

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	9243509R	Cylinder	1		(SUB FOR 9243509)
0A		Cylinder	1		(2051759 NLA)
0B		Rod	1		(3103229 NLA)
3	4625670R	Spacer	1		(SUB FOR 4625670)
4	3102995R	Spring	1		(SUB FOR 3102995)
	3118595	Spring	1		For Harsh Environment
5	3103191R	Lock Washer	1		(SUB FOR 3103191)
6	4625912R	Packing	1		(SUB FOR 4625912)
7	4625911R	Seal	1		(SUB FOR 4625911)
8	3103242R	Rod	1		(SUB FOR 3103242)
9	3103254R	Holder	1		(SUB FOR 3103254)
10	TH3103252R	Nut	1		(SUB FOR 3103252 OR TH3103252)
11	AT180047	Fitting Plug	1		(SUB FOR 4248106)
12	4255055R	Valve	1		(SUB FOR 4255055)
20		Adjuster	1		(9243535 NLA)

John Deere Dealer Order Directly From Duratrax™ Direct
 Concessionnaires John Deere commander directement auprès de Duratrax™ Direct
 Concessionário John Deere Dealer: Encomende Diretamente da Duratrax™ Direct
 Concesionarios John Deere pedir directamente de Duratrax™ Direct

Track Chain Idler
Tendeur de chaîne de chenille
Polia Intermediária da Corrente da Esteira
Rodillo tensor de cadena de oruga

 TX1093377 A.1

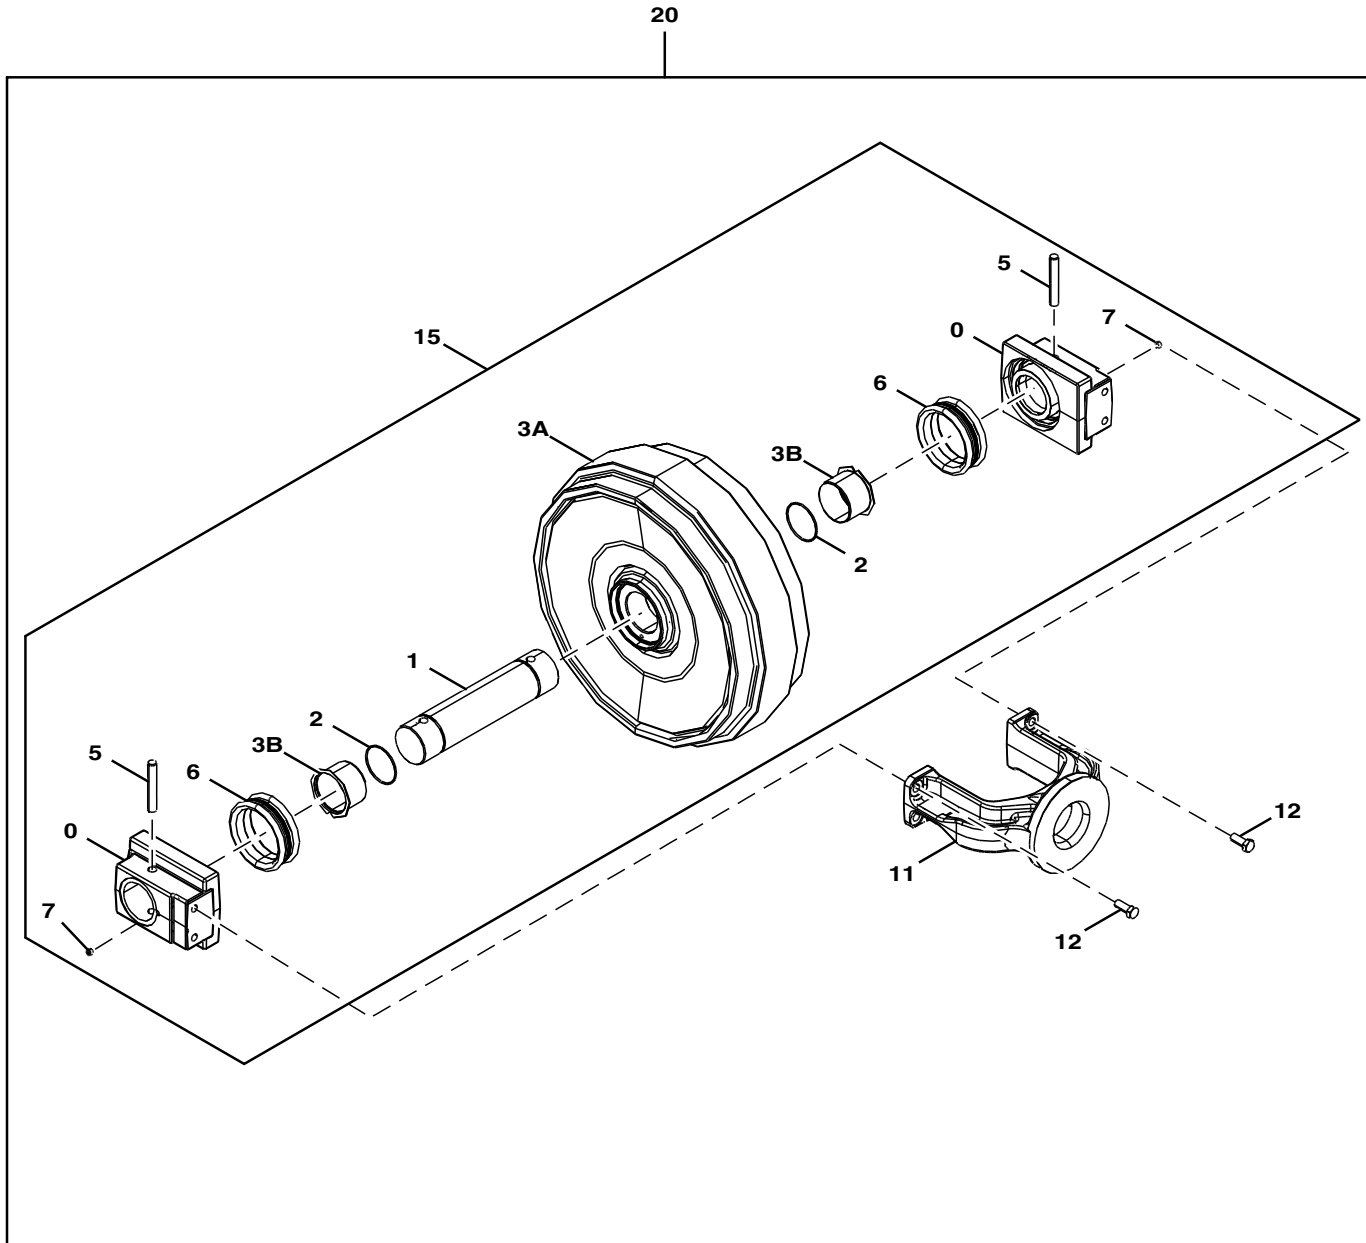

3 — 3A,3B


TX1093377

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	1032661R	Bearing	2		(SUB FOR 1032661)
1	T210832	Shaft	1		(SUB FOR 3077237)
2	T210833	O-Ring	2		(SUB FOR A810080)
3	9245617R	Idler	1		(SUB FOR 9245617)
3A		Track Idler	1		(7047467 NLA)
3B	3103740R	Bushing	2		(SUB FOR 3103740)
5	T210837	Pin Fastener	2		(SUB FOR 4138084)
6	4282633R	Seal Kit	2		(SUB FOR 4282633)
7	94-2011	Fitting Plug	2		(SUB FOR 4315607)
11	T210839	Yoke	1		(SUB FOR 1023479)
12	19M7488	Cap Screw	4		M16 X 40, (SUB FOR J901640)
15	9245616R	Idler	1		(9245616 NLA)
20		Track Idler	2		(9245615 NLA)

JOHN DEERE DEALER ORDER DIRECTLY FROM DURATRAX DIRECT
 CONCESSIONNAIRES JOHN DEERE COMMANDER DIRECTEMENT AUPRES DE DURTRAX DIRECT
 CONCESSIONÁRIO JOHN DEERE, ENCOMENDE DIRETAMENTE DA DURATRAX DIRECT
 CONCESIONARIOS JOHN DEERE PEDIR DIRECTAMENTE DE DURATRAX DIRECT

Lower Track Roller, Heavy Duty
Galet inférieur, usage intensif
Roleta Inferior da Esteira, Serviço Pesado
Rodillo inferior, servicio severo

 
TX1093378 A.1

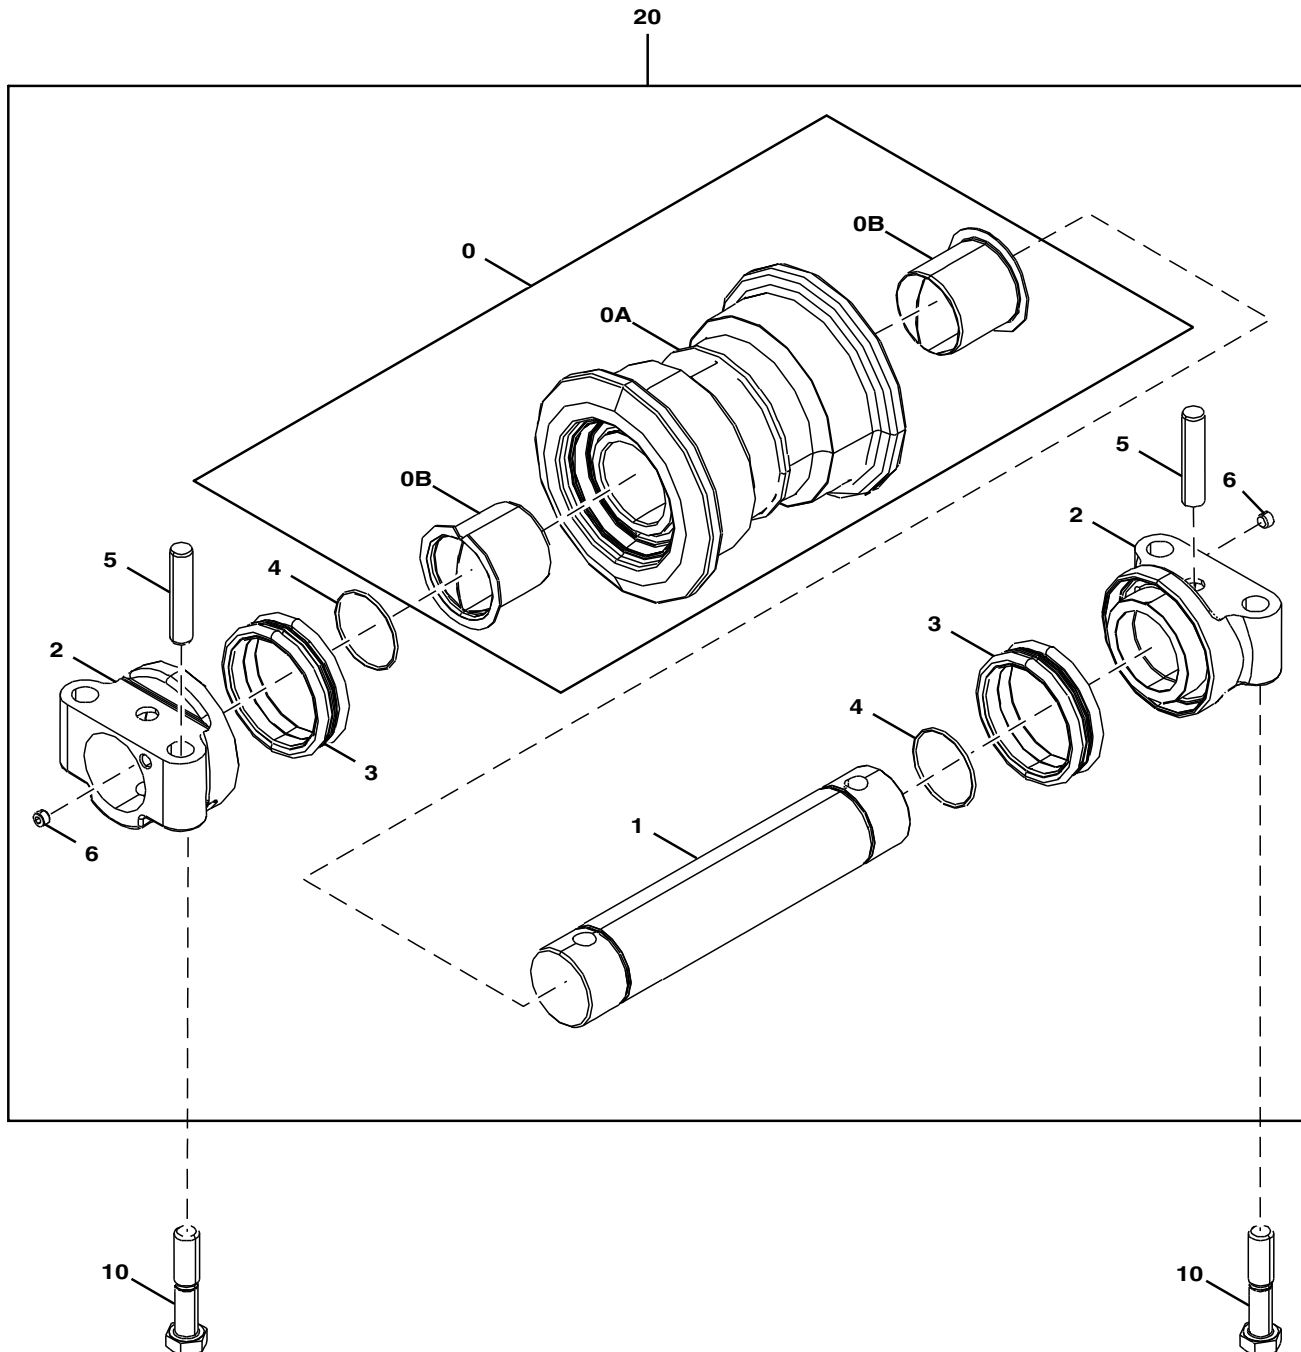

TX1093378

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0		Roller	1		(NLA)
0A		Roller	1		(NLA)
0B	T210829	Bushing	2		(SUB FOR 3081250)
1		Shaft	1		(NLA)
2		Bracket	2		(2053081 NLA)
3	AT180017	Seal	2		(SUB FOR 4317587)
4	AT180019	O-Ring	2		(SUB FOR A810070)
5		Pin	2		(4137684 NLA)
6	94-2011	Fitting Plug	2		(SUB FOR 4315607)
10	4648103	Bolt	56		
20	AT349831	Bottom Roller	16		(SUB FOR AT349831 OR FF107693)

 JOHN DEERE DEALER ORDER DIRECTLY FROM DURATRAX DIRECT
 CONCESSIONNAIRES JOHN DEERE COMMANDER DIRECTEMENT AUPRES DE DURTRAX DIRECT
 CONCESSIONARIO JOHN DEERE, ENCOMENDE DIRETAMENTE DA DURATRAX DIRECT
 CONCESIONARIOS JOHN DEERE PEDIR DIRECTAMENTE DE DURATRAX DIRECT



350GLC Excavator PC10219 (C.1)
ST14511(C.1)


Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	0005253R	Track Link	47		(RH) (SUB FOR 0005253)
1	0005254R	Track Link	48		(LH) (SUB FOR 0005254)
2	4632763R	Master Track Link	1		(SUB FOR 4632763)
3	FFSB112368	Pin Fastener	47		(SUB FOR 4378891)
4	T210808	Track Bushing	48		(SUB FOR 3077928)
5	FFSB112367	Seal	88		(SUB FOR 4378892)
6	T210811	Master Track Pin	1		Master Track Pin, (SUB FOR 3077929)
7	T210809	Master Track Bushing	1		Master Track Bushing, (SUB FOR 3077930)
8	FFSB112370	Spacer	2		Master Track Seal, (SUB FOR 4378893)
10	T238670	Snap Ring	1		(SUB FOR 4649624 OR 4649624R)
11	T210807	Track Bolt	192		600 mm Shoes, 800 mm Shoes, (SUB FOR 3104216)
	T230010	Track Bolt	192		700 mm Shoes
12	T210814	Nut	192		(SUB FOR 3081344)
13	T210815	Triple Bar Shoe	48		600 mm, (SUB FOR 2040403)
	FFSB113248	Single Bar Shoe	48		700 mm, (SUB FOR AT342598 AND T230012)
	FFSB108844	Triple Bar Shoe	48		800 mm, (SUB FOR 2042033)
20	9251025R	Track Assembly With Shoes	1		600 mm, (SUB FOR 9251025)
		Track Assembly With Shoes	1		700 mm, (9258193 NLA)
	9258059R	Track Assembly With Shoes	1		800 mm, (SUB FOR 9258059)
50	9251026R	Track Chain W/O Shoes	1		(SUB FOR 9251026)

John Deere Dealer Order Directly From Duratrax™ Direct
 Concessionnaires John Deere commander directement auprès de Duratrax™ Direct
 Concessionário John Deere Dealer: Encomende Diretamente da Duratrax™ Direct
 Concesionarios John Deere pedir directamente de Duratrax™ Direct

Track Chain Assembly, Heavy Duty
Systèmes à chenilles, usage intensif
Conjunto da Corrente da Esteira, Serviço Pesado
Sistemas de orugas, servicio severo

TX1093441 A.1

 20

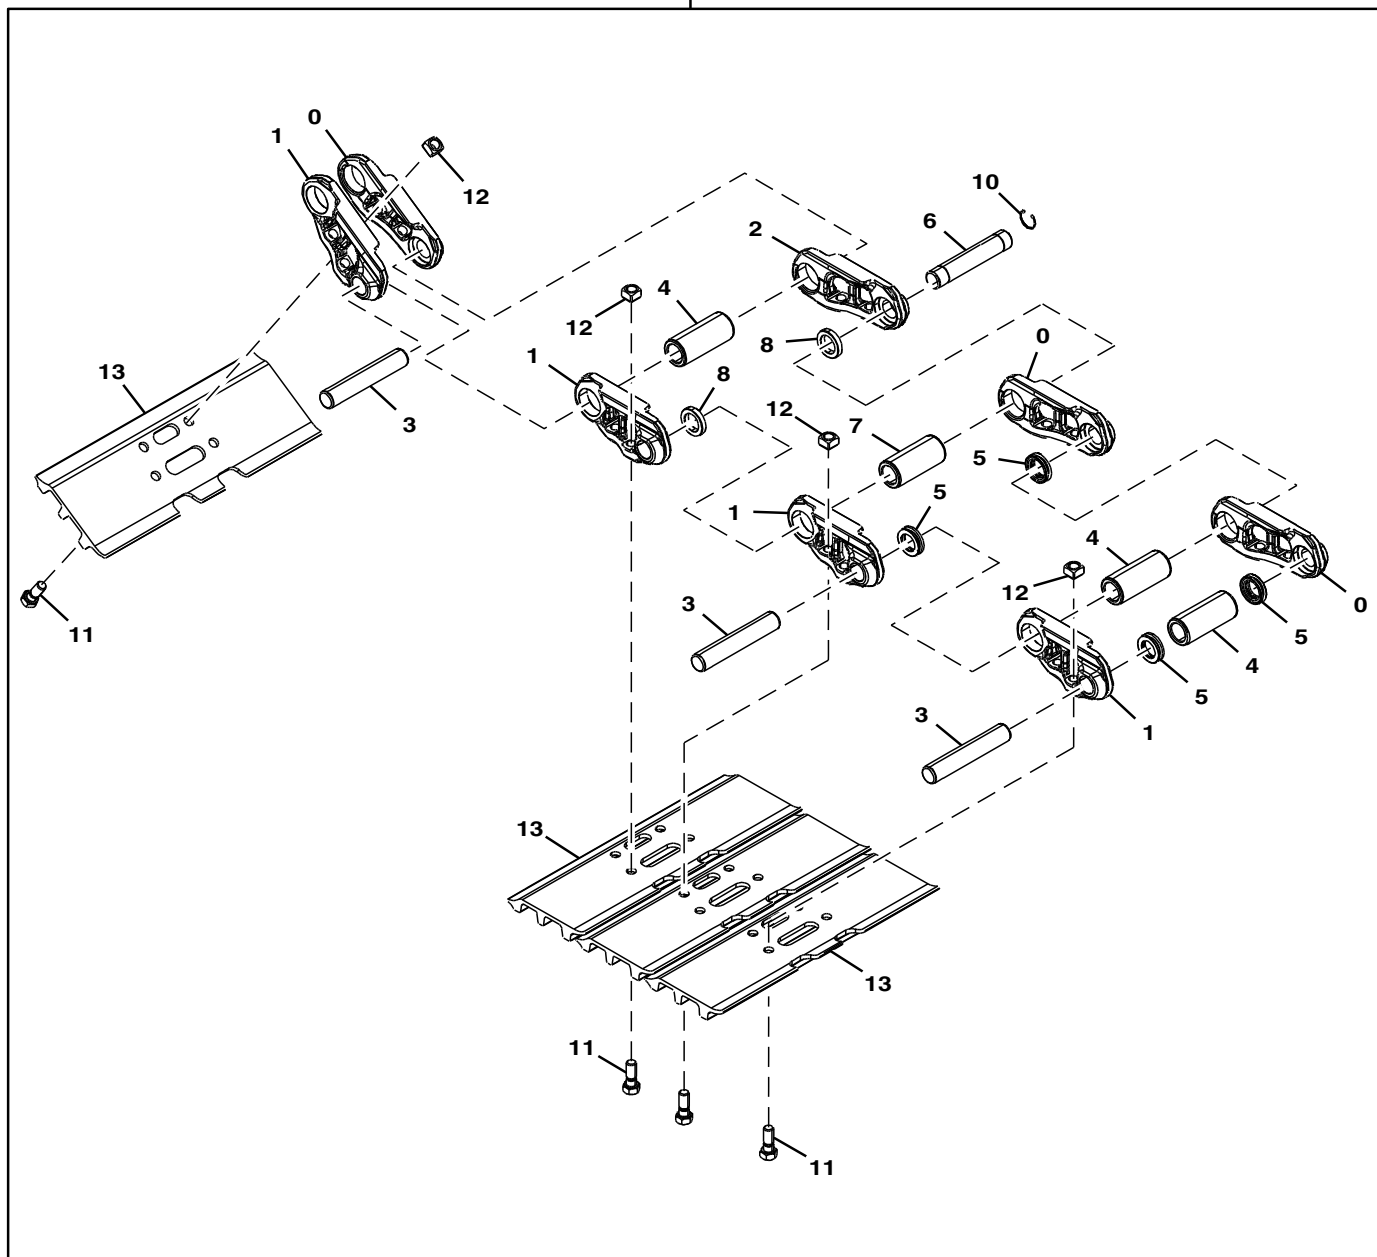

50 [0,1,2,3,4,
5,6,7,8,10


TX1093441

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	T189334	Track Link	47	(RH)	
1	T189335	Track Link	48	(LH)	
2	T238664	Master Track LINK-RH	1		
3	FFSB114326	Track Pin	47		
4	T238662	Track Bushing	48		
5	FFSB114325	Seal	88		
6	T238665	Master Track Pin	1		
7	T238663	Master Track Bushing	1		
8	FFSB114328	Spacer	2		Master Track Seal
10	T238670	Snap Ring	1		
11	FFSB114332	Track Bolt	192		
12	FFSB114333	Nut	192		
13	T238671	Single Bar Shoe	48		700 mm
	T238668	Triple Bar Shoe	48		800 mm
20	AT349833	Track Assembly With Shoes	1		700 mm
	AT349829	Track Assembly With Shoes	1		800 mm
50	AT349830	Track Chain W/O Shoes	1		

John Deere Dealer Order Directly From Duratrax™ Direct
 Concessionnaires John Deere commander directement auprès de Duratrax™ Direct
 Concessionário John Deere Dealer: Encomende Diretamente da Duratrax™ Direct
 Concesionarios John Deere pedir directamente de Duratrax™ Direct

Lower Roller Guard
Protection galet inférieur
Proteção do Rolete Inferior
Protectores rodillo inferior

 TX1093380 A.1

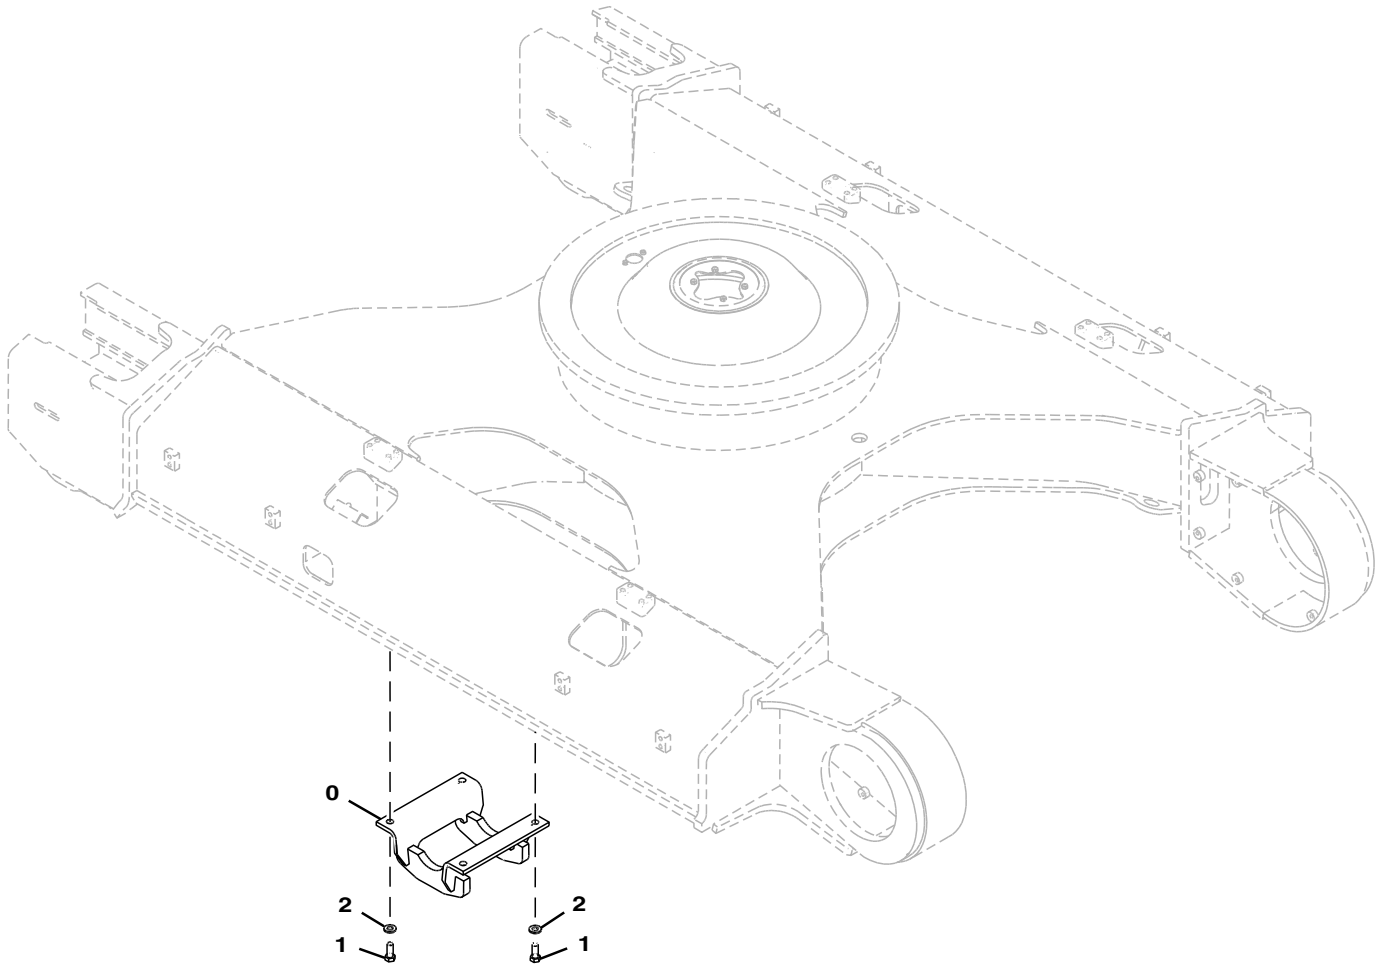


TX1093380

Key	Part No.	Part Name	Qty.	Serial No.	Remarks
0	8103642	Guard	2		
1	19M8191	Cap Screw	8		M22 X 60. (SUB FOR J932255)
2	T56006	Washer	8		(SUB FOR 4089822)

Track Frame Bottom Cover
Couvercle inférieur bâti de chenille
Tampa Inferior da Estrutura da Esteira
Cubierta de fondo de bastidor de cadena

 TX1093230 A.1

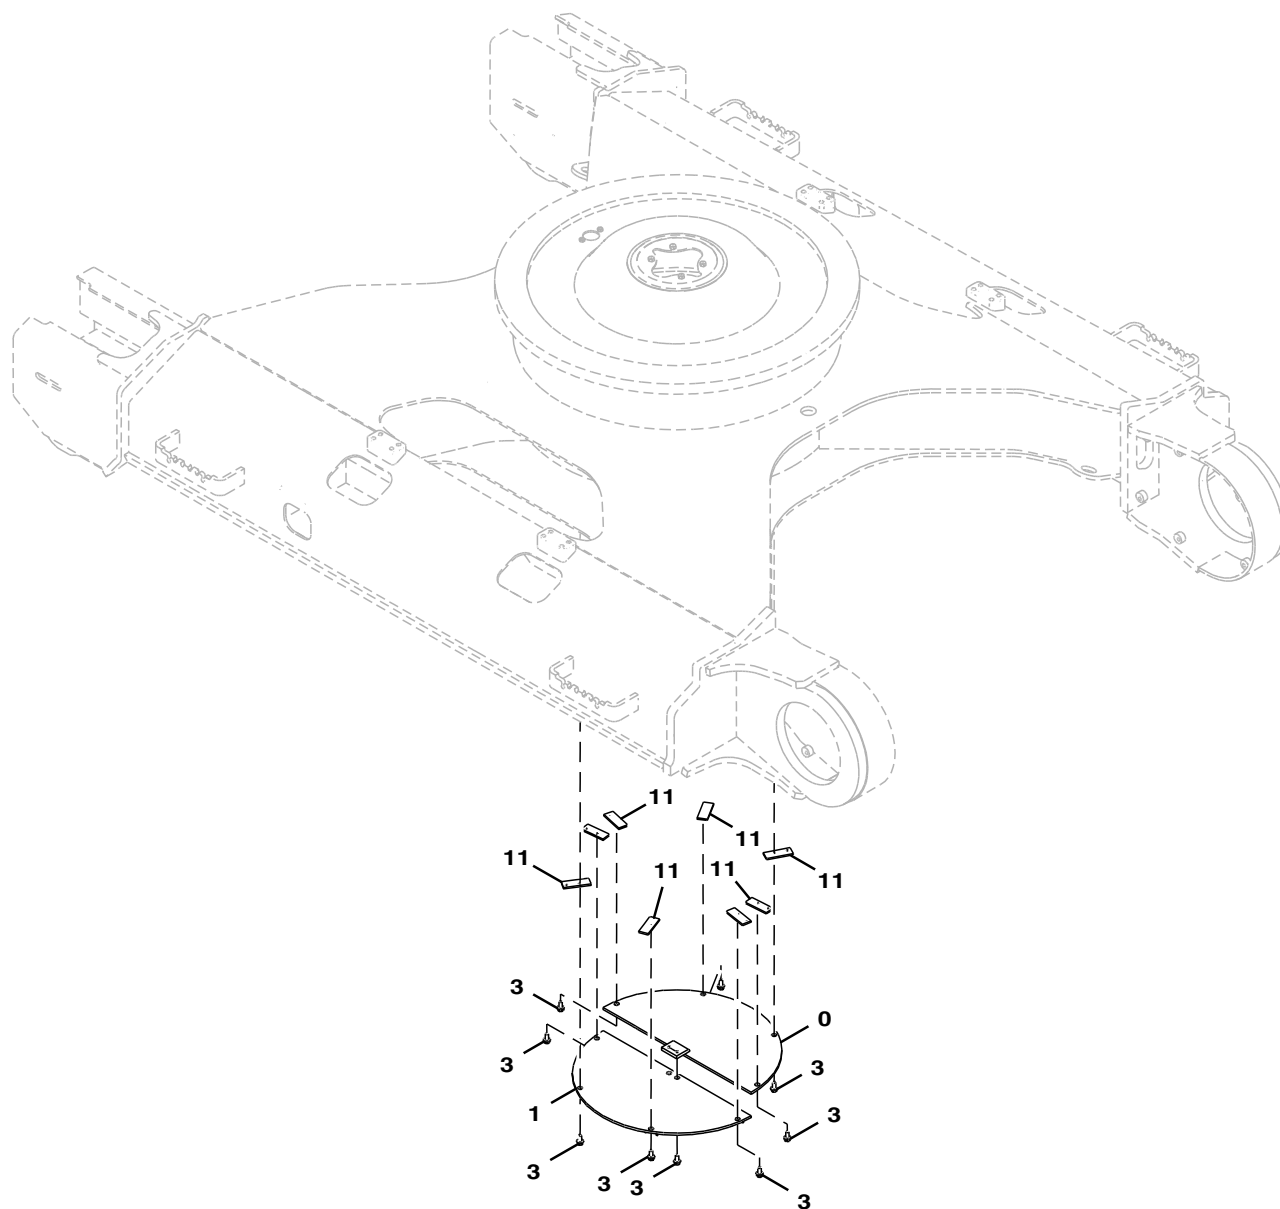

TX1093230

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**