

en

Service manual

Wheel loader

Document ID

Order number: 11657121
Issued: 12-2019
Version: 10
Author: LBH / Technical Documentation Department

Product ID

Manufacturer: Liebherr-Werk Bischofshofen GmbH
Valid for: L 528-1267

Contact

Liebherr-Werk Bischofshofen GmbH
Dr. Hans Liebherr-Straße 4
A – 5500 Bischofshofen

LBH/165712/10/211-20191203_080456/en

Preface

Notes for users

This service manual is designed for trained specialist staff of the Liebherr organisation and their dealers.

This service manual contains specialist knowledge for repairing Liebherr construction machines. Basic specialist knowledge on electronics, hydraulics, mechanics and engine technology is not contained in this service manual. Therefore specialized training and qualifications are necessary. Liebherr recommends participating in the Liebherr training program for construction machines.

In this service manual you will find information on:

- Special tools
- Technical data
- Maintenance intervals and maintenance tasks
- Adjustment procedures
- Structure and function descriptions
- Removal and installation tasks
- Circuit diagrams, hydraulic plans and technical drawings







You will find information on controls and operation in the operator's manual. Information on spare parts are in the spare parts catalogue. Please observe the local accident prevention laws.











You can find information on repairs of machine parts in the service documentation under "Wheel loader - repair instructions".

This document may not be duplicated, even in part, without the permission of Liebherr.

Technical changes are reserved.

Colour legend of hydraulic diagrams

Colour	Line thickness	Designation
 	Thick or thin	High pressure
 	Thick	Tank line
 	Thin	Leak oil line

Colour	Line thick-ness	Designation
 	Thin	Replenishing pressure or pilot pressure to pilot control unit
 	Thin	Control pressure or pilot pressure from pilot control unit
 	Thick	Enclosed oil
 	Thick	Working pressure
 	Thin	Load sensing pressure

Colour legend of hydraulic diagrams

Contents

010	Introduction	010-1
010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14
010.1.6.1	Intoxicants	010-14

010.1.6.2	Dangerous fuels and operating fluids	010-14
010.1.6.3	Transporting machine	010-15
010.1.6.4	Access to machine	010-15
010.1.6.5	Machine danger zone	010-16
010.1.6.6	Visibility	010-16
010.1.6.7	Protection against vibration	010-17
010.1.6.8	Operation of machine	010-18
010.1.7	Safe maintenance	010-21
010.1.7.1	Spare parts	010-21
010.1.7.2	Heavy parts	010-21
010.1.7.3	Regular checks	010-22
010.1.8	Modifications to the machine	010-22
010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2	Special tools for maintenance and repair work	010-23
010.2.1	Special tools, general	010-23
010.2.2	Special tools for the diesel engine	010-24
010.2.3	Special tools for Z kinematics lift cylinder	010-24
010.2.4	Special tools for Z kinematics tilt cylinder	010-25
010.2.5	Special tools for P kinematics lift cylinder	010-25
010.2.6	Special tools for P kinematics tilt cylinder	010-25
010.2.7	Special tools for steering cylinders	010-25
010.2.8	Special tools for the electrical system	010-26
010.2.9	Special tools for axles	010-26
010.2.10	Special tools for the air conditioning system	010-27
010.2.11	Special tools for cab glazing	010-27
010.2.12	Special tools for the central lubrication system (Liebherr)	010-27
010.2.13	Special tools for the central lubrication system (Groeneveld)	010-28
010.3	Standards and regulations	010-29
010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-29
010.3.1.1	Range of application and purpose	010-29
010.3.1.2	Other applicable documents	010-29
010.3.1.3	Modifications and descriptions	010-30
010.3.1.4	Tightening torques	010-30
010.3.2	Liebherr standards for assembly instructions and tightening torques	010-36

010.4	Preservation guidelines	010-37
010.4.1	General information	010-37
010.4.2	Machine out of service for an unknown period of time	010-37
010.4.3	Putting the machine out of service	010-38
010.4.3.1	Out of service for up to 2 months	010-38
010.4.3.2	Out of service for up to 12 months	010-39
010.4.3.3	Out of service for longer than 12 months	010-40
010.4.4	Putting back into service	010-40
010.4.4.1	After being out of service for 2 months	010-40
010.4.4.2	After being out of service for 12 months	010-41
010.4.4.3	After being out of service for longer than 12 months	010-41
020	Technical data	020-1
020.1	Drive group	020-5
020.1.1	Engine <i>L528-1267/25345-;</i>	020-5
020.1.2	Fuel tank <i>L528-1267/25345-;</i>	020-6
020.1.2.1	Fuel tank - plastic version	020-6
020.1.2.2	Steel fuel tank (optional)	020-6
020.1.3	Fuel level sensor <i>L528-1267/25345-;</i>	020-6
020.1.4	Fuel pre-filter <i>L528-1267/25345-;</i>	020-7
020.1.5	Fuel fine filter <i>L528-1267/25345-;</i>	020-7
020.1.6	Air mass sensor vacuum switching point <i>L528-1267/25345-;</i>	020-7
020.1.7	Clutch <i>L528-1267/25345-;</i>	020-7
020.2	Cooling system	020-8
020.2.1	Water cooler <i>L528-1267/25345-;</i>	020-8
020.2.2	Fan gear pump <i>L528-1267/25345-;</i>	020-8
020.2.3	Fan gear motor <i>L528-1267/25345-;</i>	020-8
020.3	Working hydraulics	020-9
020.3.1	Working hydraulics pump <i>L528-1267/25345-;</i>	020-9

020.3.2	Z kinematics control valve block <i>L528-1267/25345-;</i>	020-9
020.3.3	P kinematics control valve block <i>L528-1267/25345-;</i>	020-9
020.3.4	Pilot control hydro accumulator <i>L528-1267/25345-;</i>	020-10
020.3.5	Stabilisation module (optional) <i>L528-1267/25345-;</i>	020-10
020.3.6	Ride control hydro accumulator (optional) <i>L528-1267/25345-;</i>	020-10
020.3.7	Z kinematics lift cylinder <i>L528-1267/25345-;</i>	020-10
020.3.8	Z kinematics tilt cylinder <i>L528-1267/25345-;</i>	020-11
020.3.9	P kinematics lift cylinder <i>L528-1267/25345-;</i>	020-11
020.3.10	P kinematics tilt cylinder <i>L528-1267/25345-;</i>	020-12
020.4	Travel hydraulics	020-13
020.4.1	Travel pump <i>L528-1267/25345-;</i>	020-13
020.4.2	Travel motor 1 <i>L528-1267/25345-;</i>	020-13
020.4.3	Travel motor 2 <i>L528-1267/25345-;</i>	020-13
020.5	Hydraulic components	020-15
020.5.1	Filter unit <i>L528-1267/25345-;</i>	020-15
020.5.2	Breather filter <i>L528-1267/25345-;</i>	020-15
020.6	Steering system	020-16
020.6.1	Servostat <i>L528-1267/25345-;</i>	020-16
020.6.2	Steering cylinder <i>L528-1267/25345-;</i>	020-16
020.6.3	Emergency steering pump <i>L528-1267/25345-;</i>	020-16
020.6.4	Emergency steering pressure switch B3 <i>L528-1267/25345-;</i>	020-17
020.6.5	Emergency steering check pressure switch B3a <i>L528-1267/25345-;</i>	020-17
020.7	Brake system	020-18
020.7.1	Service brake hydro accumulator <i>L528-1267/25345-;</i>	020-18

020.7.2	Brake light pressure switch B12 <i>L528-1267/25345-;</i>	020-18
020.7.3	Accumulator charge pressure switch B19 <i>L528-1267/25345-;</i>	020-18
020.7.4	Disc brake <i>L528-1267/25345-;</i>	020-18
020.7.5	Parking brake hydro accumulator <i>L528-1267/25345-;</i>	020-19
020.8	Electrical system	020-20
020.8.1	Central control unit (Master 4) <i>L528-1267/25345-;</i>	020-20
020.8.2	Input module <i>L528-1267/25345-;</i>	020-20
020.8.3	Output module <i>L528-1267/25345-;</i>	020-20
020.8.4	Battery <i>L528-1267/25345-;</i>	020-21
020.8.5	Voltage transformer <i>L528-1267/25345-;</i>	020-21
020.9	Gearbox	020-22
020.9.1	Transmission <i>L528-1267/25345-;</i>	020-22
020.9.2	Output speed sensor B1 and travel motor 2 speed sensor B2 <i>L528-1267/25345-;</i>	020-22
020.10	Axles and drive shafts	020-23
020.10.1	Front axle <i>L528-1267/25345-;</i>	020-23
020.10.2	Rear axle <i>L528-1267/25345-;</i>	020-23
020.10.3	Cardan shaft <i>L528-1267/25345-;</i>	020-23
020.11	Steel parts of the basic machine	020-25
020.11.1	Ballast weight <i>L528-1267/25345-;</i>	020-25
020.12	Operator's cab, heating and air conditioning	020-26
020.12.1.1	Air conditioning compressor	020-26
020.12.2	Dryer <i>L528-1267/25345-;</i>	020-26
020.12.3	Pressure switches <i>L528-1267/25345-;</i>	020-26
020.12.4	Anti-icing temperature sensor <i>L528-1267/25345-;</i>	020-26
020.13	Lubrication system	020-28

020.13.1	Central lubrication system (Liebherr) <i>L528-1267/25345-;</i>	020-28
020.13.1.1	Central lubrication pump	020-28
020.13.2	Progressive distributor <i>L528-1267/25345-;</i>	020-28
020.13.2.1	MX-F	020-28
020.13.2.2	MX-F 25	020-28
020.13.2.3	MX-F 45	020-29
020.13.2.4	MX-F 75	020-29
020.13.2.5	MX-F105	020-29
030	Maintenance	030-1
030.1	Maintenance and inspection schedule	030-9
030.2	Filling quantities and lubrication chart	030-14
030.2.1	Recommended lubricants <i>L528-1267/25345-;</i>	030-14
030.2.2	Recommended operating fluids <i>L528-1267/25345-40516;</i>	030-15
030.2.3	Recommended operating fluids <i>L528-1267/40517-;</i>	030-15
030.3	Lubricants and fuels	030-16
030.3.1	General information on lubricants and fuels	030-16
030.3.1.1	General questions	030-16
030.3.1.2	Safety data sheets	030-16
030.3.1.3	Technical data sheets	030-16
030.3.1.4	Specific Liebherr standards	030-16
030.3.2	General information on changing lubricants and fuels	030-16
030.3.3	Converting hydraulic system from mineral oils to biodegradable hydraulic fluids	030-17
030.3.4	Diesel fuels <i>L528-1267/25345-;</i>	030-17
030.3.4.1	Specification	030-17
030.3.4.2	Sulphur content of the diesel fuel, lubricity	030-17
030.3.4.3	Diesel fuel at low temperatures (winter operation)	030-18
030.3.4.4	Flow improvers at low temperatures	030-18
030.3.5	Lubricating oils for diesel engines <i>L528-1267/25345-;</i>	030-18
030.3.5.1	Lubricating oil quality	030-18
030.3.5.2	Lubricating oil viscosity	030-19

	030.3.5.3	Complicating factors affect the oil change	030-19
030.3.6	Refrigerant <i>L528-1267;</i>		030-20
030.3.7	Coolants for diesel engines <i>L528-1267/25345-40516;</i>		030-20
	030.3.7.1	General recommendations	030-20
	030.3.7.2	Water (fresh water)	030-20
	030.3.7.3	Coolant mixing ratio	030-21
	030.3.7.4	Permissible antifreeze and corrosion inhibitors	030-21
	030.3.7.5	Corrosion inhibitors without antifreeze	030-22
030.3.8	Coolants for diesel engines <i>L528-1267/40517-;</i>		030-22
	030.3.8.1	General recommendations	030-22
	030.3.8.2	Water (fresh water)	030-23
	030.3.8.3	Coolant - Mixing ration	030-23
	030.3.8.4	Approved antifreeze and corrosion inhibitors	030-23
	030.3.8.5	Permissible premixed antifreeze/corrosion inhibitors	030-24
	030.3.8.6	Corrosion inhibitors without antifreeze	030-24
030.3.9	Hydraulic oil <i>L528-1267/25345-;</i>		030-25
	030.3.9.1	Liebherr hydraulic oil	030-25
	030.3.9.2	Using engine oil as hydraulic oil	030-25
	030.3.9.3	Warming up	030-26
	030.3.9.4	Biodegradable hydraulic oils	030-26
	030.3.9.5	Changing the oil, analysing the oil, changing filters	030-27
030.3.10	Lubricating oils for transmissions <i>L528-1267/25345-;</i>		030-28
030.3.11	Lubricating oils for axles <i>L528-1267/25345-;</i>		030-29
030.3.12	Lubrication grease and other lubricants <i>L528-1267/25345-;</i>		030-30
	030.3.12.1	Minimum quality requirements	030-30
	030.3.12.2	Liebherr lubrication grease	030-30
030.4	Maintenance tasks		030-32
030.4.1	Safety precautions <i>L528-1267/25345-;</i>		030-32
030.4.2	Preparatory tasks for maintenance		030-32
	030.4.2.1	Maintenance positions <i>L528-1267/25345-;</i>	030-33

030.4.2.2	Opening the service accesses <i>L528-1267/25345-;</i>	030-34
030.4.2.3	Turning off the battery main switch <i>L528-1267/25345-;</i>	030-36
030.4.3	Overall machine	030-36
030.4.3.1	Checking the machine for external damage <i>L528-1267/25345-;</i>	030-36
030.4.3.2	Removing loose parts, dirt, ice and snow from the machine <i>L528-1267/25345-;</i>	030-36
030.4.3.3	Cleaning the machine <i>L528-1267/25345-;</i>	030-37
030.4.3.4	Checking the machine for leaks <i>L528-1267/25345-;</i>	030-38
030.4.3.5	Making sure the bolted connections are tight <i>L528-1267/25345-;</i>	030-39
030.4.3.6	Corrosion protection system for use with salt and artificial fertilisers (optional): Carrying out corrosion protection <i>L528-1267/25345-;</i>	030-39
030.4.3.7	Oil analyses <i>L528-1267/25345-;</i>	030-39
030.4.4	Drive group	030-45
030.4.4.1	Checking the engine oil level <i>L528-1267/25345-;</i>	030-45
030.4.4.2	Changing the engine oil <i>L528-1267/25345-;</i>	030-46
030.4.4.3	Changing the engine oil filter <i>L528-1267/25345-;</i>	030-47
030.4.4.4	Checking the V-ribbed belt on the engine <i>L528-1267/25345-;</i>	030-48
030.4.4.5	Changing V-ribbed belt of diesel engine <i>L528-1267/25345-;</i>	030-49
030.4.4.6	Checking the diesel engine valve clearance <i>L528-1267/25345-;</i>	030-51
030.4.4.7	Diesel engine oil separator - changing filter cartridge <i>L528-1267/25345-;</i>	030-54
030.4.4.8	Checking the bleeder filter of the crankcase <i>L528-1267/25345-;</i>	030-55
030.4.4.9	Checking the glow plugs <i>L528-1267/25345-;</i>	030-56
030.4.4.10	Draining off condensate and sediment from the fuel tank <i>L528-1267/25345-;</i>	030-58

030.4.4.11	Draining off condensate from the fuel pre-filter <i>L528-1267/25345-;</i>	030-59
030.4.4.12	Changing the fuel pre-filter <i>L528-1267/25345-;</i>	030-60
030.4.4.13	Changing the fuel fine filter <i>L528-1267/25345-;</i>	030-61
030.4.4.14	Bleeding the fuel system <i>L528-1267/25345-;</i>	030-62
030.4.4.15	Cleaning the air filter service cover and dust discharge valve <i>L528-1267/25345-;</i>	030-63
030.4.4.16	Checking the air suction system for leaks and tight fitting <i>L528-1267/25345-;</i>	030-65
030.4.4.17	Cleaning or changing the main filter element <i>L528-1267/25345-;</i>	030-66
030.4.4.18	Changing the air filter safety element <i>L528-1267/25345-;</i>	030-69
030.4.4.19	Checking the exhaust system for leaks and tight fitting <i>L528-1267/25345-;</i>	030-70
030.4.4.20	Cleaning or changing the diesel particulate filter <i>L528-1267/25345-;</i>	030-71
030.4.5	Cooling system	030-75
030.4.5.1	Checking the coolant level <i>L528-1267/25345-;</i>	030-75
030.4.5.2	Checking the coolant antifreeze and corrosion inhibitor concentration <i>L528-1267/25345-;</i>	030-76
030.4.5.3	Cleaning the cooling system <i>L528-1267/25345-;</i>	030-80
030.4.5.4	Changing the coolant <i>L528-1267/25345-40516;</i>	030-81
030.4.5.5	Changing the coolant <i>L528-1267/40517-;</i>	030-83
030.4.6	Working hydraulics	030-85
030.4.6.1	Lubricating the solenoids, universal joints and tappets on the pilot control unit <i>L528-1267/25345-;</i>	030-85
030.4.7	Hydraulic components	030-86
030.4.7.1	Checking the oil level in the hydraulic tank <i>L528-1267/25345-;</i>	030-86
030.4.7.2	Checking and cleaning the magnetic rod on the hydraulic tank <i>L528-1267/25345-35974;</i>	030-87

030.4.7.3	Checking and cleaning the magnetic rod on the hydraulic tank <i>L528-1267/35975-;</i>	030-88
030.4.7.4	Draining off condensate and sediment from the hydraulic tank <i>L528-1267/25345-;</i>	030-89
030.4.7.5	Hydraulic tank - changing the return-suction filter <i>L528-1267/25345-35974;</i>	030-90
030.4.7.6	Changing the hydraulic tank return suction filter <i>L528-1267/35975-;</i>	030-91
030.4.7.7	Changing the hydraulic tank breather filter <i>L528-1267/25345-;</i>	030-92
030.4.7.8	Changing the oil in the hydraulic system in accordance with oil quality and oil analysis <i>L528-1267/25345-;</i>	030-92
030.4.8	Steering system	030-94
030.4.8.1	Testing the steering <i>L528-1267/25345-;</i>	030-94
030.4.8.2	Lubricating the bearing points on the steering cylinders <i>L528-1267/25345-;</i>	030-95
030.4.9	Brake system	030-96
030.4.9.1	Testing the service brake and parking brake <i>L528-1267/25345-;</i>	030-96
030.4.9.2	Checking the service brake discs for wear <i>L528-1267/25345-;</i>	030-97
030.4.9.3	Checking gap and wear on parking brake linings <i>L528-1267/25345-;</i>	030-99
030.4.10	Electrical system	030-105
030.4.10.1	Checking the lights <i>L528-1267/25345-;</i>	030-105
030.4.10.2	Checking the batteries, fluid level and terminals <i>L528-1267/25345-;</i>	030-106
030.4.10.3	Changing the travel direction rocker switch and cap (optional) on the control lever <i>L528-1267/25345-;</i>	030-108
030.4.11	Gearbox	030-110
030.4.11.1	Checking the transmission oil level <i>L528-1267/25345-;</i>	030-110
030.4.11.2	Changing the transmission oil <i>L528-1267/25345-;</i>	030-110
030.4.12	Axles and drive shafts	030-111
030.4.12.1	Checking the axle oil levels <i>L528-1267/25345-;</i>	030-111

030.4.12.2	Changing the axle oil <i>L528-1267/25345-;</i>	030-112
030.4.12.3	Checking the tightening torque of the front axle fastening bolts <i>L528-1267/25345-;</i>	030-114
030.4.12.4	Checking the cardan shafts <i>L528-1267/25345-;</i>	030-115
030.4.12.5	Checking the tyre pressure <i>L528-1267/25345-;</i>	030-115
030.4.12.6	Checking the wheel tightness (once after 50, 100 and 250 h) <i>L528-1267/25345-;</i>	030-116
030.4.13	Steel parts of the basic machine	030-117
030.4.13.1	Lubricating the articulation bearing and the rear axle oscillating bearing <i>L528-1267/25345-;</i>	030-117
030.4.13.2	Covering - lubricating locks and hinges <i>L528-1267/25345-;</i>	030-117
030.4.14	Working attachment	030-118
030.4.14.1	Lubricating lift arms and attached working attachment <i>L528-1267/25345-;</i>	030-118
030.4.14.2	Checking the lift arm bearing bushings <i>L528-1267/25345-;</i>	030-119
030.4.14.3	Checking the lift arm bucket stops (Z kinematics) <i>L528-1267/25345-;</i>	030-120
030.4.14.4	Lubricating and testing the quick-change device <i>L528-1267/25345-;</i>	030-121
030.4.15	Operator's cab, heating and air conditioning	030-122
030.4.15.1	Lubricating the elongated hole on the accelerator pedal and checking the bearing <i>L528-1267/25345-;</i>	030-122
030.4.15.2	Cleaning the fresh and recirculated air filters <i>L528-1267/25345-;</i>	030-123
030.4.15.3	Changing the fresh and recirculated air filters <i>L528-1267/25345-;</i>	030-125
030.4.15.4	Checking the condition and function of the safety belt <i>L528-1267/25345-;</i>	030-126
030.4.15.5	Checking and topping up the windscreen washer reservoir <i>L528-1267/25345-;</i>	030-126
030.4.15.6	Checking the seals on the driver's cab <i>L528-1267/25345-;</i>	030-127
030.4.15.7	Checking the indicator bead in the air conditioning dryer-collector unit <i>L528-1267/25345-;</i>	030-127

030.4.15.8	Heating and air conditioning unit: Testing the function <i>L528-1267/25345-;</i>	030-128
030.4.16	Lubrication system	030-129
030.4.16.1	Checking the lubrication system grease reservoir level <i>L528-1267/25345-;</i>	030-129
030.4.16.2	Checking the pipes, hoses and lubrication points of the lubrication system <i>L528-1267/25345-;</i>	030-130
030.4.16.3	Checking whether metered quantities are adequate at the bearing points (grease collars) of the lubrication system <i>L528-1267/25345-;</i>	030-130
030.5	Testing and adjustment checklist <i>L528-1267/25345-;</i>	030-132
030.6	Testing and adjustment tasks	030-136
030.6.1	Safety precautions <i>L528-1267/25345-;</i>	030-136
030.6.2	Overall machine	030-136
030.6.2.1	Preparatory tasks for testing and adjustment <i>L528-1267/25345-;</i>	030-136
030.6.2.2	Bringing the machine up to operating temperature <i>L528-1267/25345-;</i>	030-138
030.6.3	Drive group	030-139
030.6.3.1	Calibrating the pedals <i>L528-1267/25345-;</i>	030-139
030.6.3.2	Engine: Speed <i>L528-1267/25345-;</i>	030-139
030.6.3.3	Reading the diesel engine service files <i>L528-1267;</i>	030-140
030.6.4	Cooling system	030-142
030.6.4.1	Fan gear motor proportional pressure relief valve <i>L528-1267/25345-;</i>	030-142
030.6.5	Working hydraulics	030-145
030.6.5.1	Working hydraulics pump flow regulator (standby pressure) <i>L528-1267/25345-;</i>	030-145
030.6.5.2	Z kinematics control valve block secondary pressure relief valves <i>L528-1267/25345-;</i>	030-146
030.6.5.3	Working hydraulics LS pressure cut-off <i>L528-1267/25345-;</i>	030-148
030.6.5.4	P-kinematics control block for secondary pressure relief valves <i>L528-1267/25345-;</i>	030-149

030.6.5.5	Stabilisation module (optional), cut-off function <i>L528-1267/25345-;</i>	030-151
030.6.5.6	Ride control hydro accumulator (optional), nitrogen filling <i>L528-1267/25345-;</i>	030-151
030.6.5.7	Testing the control valve block for leakage <i>L528-1267/25345-;</i>	030-154
030.6.6	Hydraulic components	030-158
030.6.6.1	Checking the hydraulic lines for damage <i>L528-1267;</i>	030-158
030.6.7	Travel hydraulics	030-163
030.6.7.1	Travel pump replenishing pressure relief valve <i>L528-1267/25345-;</i>	030-163
030.6.7.2	Travel pump high pressure relief valves <i>L528-1267/25345-;</i>	030-164
030.6.7.3	Travel pump pressure cut-off <i>L528-1267/25345-;</i>	030-167
030.6.7.4	Travel pump block curve calibration <i>L528-1267/25345-;</i>	030-168
030.6.7.5	Travel motor 1 start of regulation <i>L528-1267/25345-;</i>	030-170
030.6.7.6	Travel motor 2 automatic calibration <i>L528-1267/25345-;</i>	030-171
030.6.7.7	Engine output <i>L528-1267/25345-;</i>	030-172
030.6.8	Steering system	030-174
030.6.8.1	Steering system LS pressure cut-off <i>L528-1267/25345-;</i>	030-174
030.6.9	Brake system	030-175
030.6.9.1	Accumulator charge pressure switch shift pressure <i>L528-1267/25345-;</i>	030-175
030.6.9.2	Compact brake valve, hydro accumulator charging function <i>L528-1267/25345-;</i>	030-176
030.6.9.3	Service brake pressure <i>L528-1267/25345-;</i>	030-177
030.6.9.4	Service brake hydro accumulator capacity <i>L528-1267/25345-;</i>	030-177
030.6.10	Electrical system	030-179
030.6.10.1	Central control unit (Master4) Creating a Servicefile <i>L528-1267/25345-;</i>	030-179
030.6.10.2	Central control unit (Master4): software update <i>L528-1267;</i>	030-182

030.6.10.3	Setting the IP addresses of the central control unit (Master4) <i>L528-1267/25345-;</i>	030-185
030.6.10.4	Resetting the central control unit (Master4) <i>L528-1267/25345-;</i>	030-187
030.6.10.5	Testing the CAN line <i>L528-1267/25345-;</i>	030-188
030.6.10.6	Addressing the CAN module and checking the system information <i>L528-1267/25345-;</i>	030-192
030.6.11	Gearbox	030-195
030.6.11.1	Automatic calibration of clutch proportional solenoid valve <i>L528-1267/25345-;</i>	030-195
030.6.11.2	Hydraulic control system – hydraulic oil adjustment <i>L528-1267/25345-;</i>	030-196
030.6.12	Operator's cab, heating and air conditioning	030-196
030.6.12.1	Adjusting the heating circuit pressure relief valve <i>L528-1267/25345-39419;</i>	030-196
030.6.12.2	Checking the pressure and temperature conditions of the air conditioning unit <i>L528-1267/25345-;</i>	030-197
030.6.12.3	Calibrating the display (Display4) <i>L528-1267/25345-;</i>	030-198
030.6.12.4	Formatting the display and reinstalling the software (Display4) <i>L528-1267/25345-;</i>	030-200
030.6.13	Options	030-201
030.6.13.1	Checking the LiDAT connection status <i>L528-1267/25345-;</i>	030-201
030.6.13.2	LiDAT: activating data transmission manually <i>L528-1267;</i>	030-203
040	Drive group	040-1
040.1	Engine	040-2
040.1.1	Diesel engine overview <i>L528-1267/25345-;</i>	040-2
040.1.2	Fuel system	040-5
040.1.2.1	Overview of fuel system <i>L528-1267/25345-;</i>	040-6
040.1.2.2	Fuel level sensor <i>L528-1267/25345-;</i>	040-7
040.1.2.3	Fuel pre-filter <i>L528-1267/25345-;</i>	040-9

	040.1.2.4	Fuel fine filter <i>L528-1267/25345-;</i>	040-10
040.1.3	Air filter system		040-10
	040.1.3.1	Overview of the air filter unit <i>L528-1267/25345-;</i>	040-11
	040.1.3.2	Air filter <i>L528-1267/25345-;</i>	040-12
040.1.4	Exhaust system		040-12
	040.1.4.1	Overview of the exhaust system <i>L528-1267/25345-;</i>	040-13
	040.1.4.2	Overview of the diesel particulate filter <i>L528-1267/25345-;</i>	040-14
040.2	Clutch <i>L528-1267/25345-;</i>		040-20
050	Cooling system		050-1
050.1	Overview of the cooling system <i>L528-1267/25345-;</i>		050-2
050.2	Cooling system hydraulics		050-4
	050.2.1	Overview of the hydraulics cooling system <i>L528-1267/25345-;</i>	050-4
	050.2.2	Fan gear pump <i>L528-1267/25345-;</i>	050-6
	050.2.3	Fan gear motor <i>L528-1267/25345-;</i>	050-7
050.3	Cooling system electronics		050-11
	050.3.1	Electronic control system – general overview <i>L528-1267/25345-;</i>	050-11
	050.3.2	Coolant temperature sensor <i>L528-1267/25345-;</i>	050-12
	050.3.3	Hydraulic oil temperature sensor <i>L528-1267/25345-;</i>	050-14
	050.3.4	Charge air temperature sensor <i>L528-1267/25345-;</i>	050-15
050.4	Cooler		050-17
	050.4.1	Water cooler <i>L528-1267/25345-;</i>	050-17
	050.4.2	Hydraulic oil cooler <i>L528-1267/25345-;</i>	050-18
	050.4.3	Intercooler <i>L528-1267/25345-;</i>	050-20
	050.4.4	Fuel cooler <i>L528-1267/25345-;</i>	050-21

050.5	Reversible fan drive	050-22
050.5.1	Reversible fan drive <i>L528-1267/25345-;</i>	050-22
060	Working hydraulics	060-1
060.1	Overview of z kinematics working hydraulics <i>L528-1267/25345-;</i>	060-3
060.2	Overview of working hydraulics for p kinematics <i>L528-1267/25345-;</i>	060-8
060.3	Working hydraulics pump <i>L528-1267/25345-;</i>	060-13
060.4	Control valve block for Z-bar kinematics <i>L528-1267/25345-;</i>	060-17
060.5	Control valve block for P kinematics <i>L528-1267/25345-;</i>	060-23
060.6	Pilot control	060-28
060.6.1	Overview of the pilot control unit <i>L528-1267/25345-;</i>	060-28
060.6.2	Pilot control unit <i>L528-1267/25345-;</i>	060-29
060.6.3	Working hydraulics lockout solenoid valve <i>L528-1267/25345-;</i>	060-34
060.6.4	Pilot control hydro accumulator <i>L528-1267/25345-;</i>	060-35
060.7	Ride control	060-36
060.7.1	Ride control overview <i>L528-1267/25345-;</i>	060-36
060.7.2	Stabilisation module <i>L528-1267/25345-;</i>	060-37
060.7.3	Ride control hydro accumulator <i>L528-1267/25345-;</i>	060-42
060.8	Hydraulic cylinders of the working hydraulics	060-43
060.8.1	Hydraulic cylinders for Z kinematics	060-43
060.8.1.1	Z kinematics lift cylinder <i>L528-1267/25345-;</i>	060-43
060.8.1.2	Z kinematics tilt cylinder <i>L528-1267/25345-;</i>	060-45
060.8.2	Hydraulic cylinders for P kinematics	060-46
060.8.2.1	P kinematics lift cylinder <i>L528-1267/25345-;</i>	060-47
060.8.2.2	P kinematics tilt cylinder <i>L528-1267/25345-;</i>	060-48

070	Travel hydraulics	070-1
070.1	Travel hydraulics overview <i>L528-1267/25345-36291;</i>	070-2
070.2	Travel hydraulics overview <i>L528-1267/36292-;</i>	070-7
070.3	Travel pump <i>L528-1267/25345-36291;</i>	070-12
070.4	Travel pump <i>L528-1267/36292-;</i>	070-26
070.5	Travel motors	070-41
070.5.1	Overview of the travel motors <i>L528-1267/25345-;</i>	070-41
070.5.2	Travel motor 1 <i>L528-1267/25345-;</i>	070-43
070.5.3	Travel motor 2 <i>L528-1267/25345-;</i>	070-50
080	Hydraulic components	080-1
080.1	Hydraulic tank	080-2
080.1.1	Overview of the hydraulic tank <i>L528-1267/25345-;</i>	080-2
080.1.2	Filter unit <i>L528-1267/25345-;</i>	080-4
080.1.3	Breather filter <i>L528-1267/25345-;</i>	080-9
090	Steering system	090-1
090.1	Steering system overview <i>L528-1267/25345-35802;</i>	090-2
090.2	Steering system overview <i>L528-1267/35803-;</i>	090-6
090.3	Servostat <i>L528-1267/25345-;</i>	090-10
090.4	Steering cylinder	090-14
090.4.1	Steering cylinder overview <i>L528-1267/25345-35802;</i>	090-14
090.4.2	Steering cylinder overview <i>L528-1267/35803-;</i>	090-16
090.4.3	Steering damper hydro accumulator <i>L528-1267/35803-;</i>	090-18
090.5	Emergency steering	090-19
090.5.1	Emergency steering overview <i>L528-1267/25345-;</i>	090-19

090.5.2	Emergency steering pump <i>L528-1267/25345-;</i>	090-20
090.5.3	Emergency steering electronics	090-22
090.5.3.1	Overview of the electronic control system <i>L528-1267/25345-;</i>	090-22
090.5.3.2	Emergency steering pressure switch <i>L528-1267/25345-;</i>	090-23
090.5.3.3	Emergency steering check pressure switch <i>L528-1267/25345-;</i>	090-24
090.5.4	Valve block <i>L528-1267/25345-;</i>	090-25
100	Brake system	100-1
100.1	Overview of the brake system <i>L528-1267/25345-;</i>	100-2
100.2	Service brake and parking brake	100-4
100.2.1	Brake system gear pump <i>L528-1267/25345-;</i>	100-4
100.2.2	Compact brake valve <i>L528-1267/25345-;</i>	100-5
100.3	Service brake	100-12
100.3.1	Overview of the service brake <i>L528-1267/25345-;</i>	100-12
100.3.2	Service brake hydro accumulator <i>L528-1267/25345-;</i>	100-15
100.3.3	Brake light pressure switch <i>L528-1267/25345-;</i>	100-16
100.3.4	Accumulator charge pressure switch <i>L528-1267/25345-;</i>	100-17
100.4	Parking brake	100-18
100.4.1	Overview of the parking brake <i>L528-1267/25345-;</i>	100-18
100.4.2	Disc brake <i>L528-1267/25345-;</i>	100-21
100.4.3	Parking brake hydro accumulator <i>L528-1267/25345-;</i>	100-22
110	Electrical system	110-1
110.1	Overview of the electrical system <i>L528-1267/25345-;</i>	110-2
110.2	Lighting <i>L528-1267/25345-;</i>	110-7

110.3	Circuit diagrams <i>L528-1267/25345-;</i>	110-9
110.4	Electronic control unit	110-11
110.4.1	Overview of the electronic control system <i>L528-1267/25345-;</i>	110-11
110.4.2	Central control unit (Master4) <i>L528-1267/25345-;</i>	110-14
110.4.3	Modules	110-18
110.4.3.1	Overview of the module <i>L528-1267/25345-;</i>	110-18
110.4.3.2	Input modules <i>L528-1267/25345-;</i>	110-20
110.4.3.3	Output modules <i>L528-1267/25345-;</i>	110-22
110.5	Electrical components of the driver's cab	110-25
110.5.1	Overview of electrical components in the driver's cab <i>L528-1267/25345-;</i>	110-25
110.5.2	Fuse and relay board <i>L528-1267/25345-;</i>	110-26
110.6	Electrical components in the rear section	110-30
110.6.1	Battery installation <i>L528-1267/25345-36021;</i>	110-30
110.6.2	Battery installation <i>L528-1267/36022-;</i>	110-32
120	Gearbox	120-1
120.1	Overview of the transmission <i>L528-1267/25345-;</i>	120-2
120.2	Mechanical transmission <i>L528-1267/25345-;</i>	120-3
120.3	Transmission hydraulics	120-9
120.3.1	Overview of the hydraulic control system <i>L528-1267/25345-;</i>	120-9
120.4	Transmission electronics	120-13
120.4.1	Overview of the electronic control system <i>L528-1267/25345-;</i>	120-13
120.4.2	Output speed sensor and travel motor 2 speed sensor <i>L528-1267/25345-;</i>	120-14
130	Axles and drive shafts	130-1
130.1	Axles	130-2

130.1.1	Front axle <i>L528-1267/25345-;</i>	130-2
130.1.2	Rear axle <i>L528-1267/25345-;</i>	130-7
130.2	Cardan shafts	130-8
130.2.1	Cardan shaft <i>L528-1267/25345-;</i>	130-8
140	Steel parts of the basic machine	140-1
140.1	Vehicle frame	140-2
140.1.1	Articulation bearing <i>L528-1267/25345-;</i>	140-2
140.1.2	Articulation lock <i>L528-1267/25345-;</i>	140-3
150	Working attachment	150-1
150.1	Lift arms for Z kinematics	150-2
150.1.1	Z kinematics lift arms <i>L528-1267/25345-;</i>	150-2
150.1.2	Pin bearing	150-2
150.1.2.1	Z kinematics standard pin bearing <i>L528-1267/25345-;</i>	150-3
150.2	Lift arms for P kinematics	150-4
150.2.1	P kinematics lift arm <i>L528-1267/25345-;</i>	150-4
150.3	Quick coupler	150-5
150.3.1	Z kinematics quick coupler <i>L528-1267/25345-;</i>	150-5
150.3.2	P kinematics quick coupler <i>L528-1267/25345-;</i>	150-8
160	Operator's cab, heating and air conditioning	160-1
160.1	Overview of the cab, heating and air conditioning unit <i>L528-1267/25345-;</i>	160-3
160.2	Display and control elements	160-5
160.2.1	Electrical components in the control panel	160-5
160.2.1.1	Overview of electrical components in the control panel <i>L528-1267/25345-;</i>	160-5
160.2.1.2	Control unit for main functions <i>L528-1267/25345-;</i>	160-5

	160.2.1.3	Starter switch <i>L528-1267/25345-;</i>	160-8
160.2.2		Display <i>L528-1267/25345-;</i>	160-9
160.2.3		Touch screen display <i>L528-1267/25345-;</i>	160-11
160.2.4		Control lever <i>L528-1267/25345-;</i>	160-13
160.3		Heating, ventilation, air conditioning	160-16
160.3.1		Overview of the heating, ventilation and air conditioning system <i>L528-1267/25345-;</i>	160-16
160.3.2		Heating and air conditioning unit	160-21
	160.3.2.1	Heating and air conditioning unit <i>L528-1267/25345-;</i>	160-22
	160.3.2.2	Blower <i>L528-1267/25345-;</i>	160-24
160.3.3		Heating/air conditioning electronics <i>L528-1267/25345-;</i>	160-25
160.3.4		Heating circuit pressure relief valve <i>L528-1267/25345-39419;</i>	160-26
160.3.5		Pressure relief valve for heating circuit <i>L528-1267/39420-;</i>	160-28
160.4		Air conditioning	160-30
160.4.1		Basic function of the air conditioning unit <i>L528-1267/25345-;</i>	160-30
160.4.2		Air conditioning compressor <i>L528-1267/25345-;</i>	160-31
160.4.3		Condenser <i>L528-1267/25345-;</i>	160-32
160.4.4		Dryer <i>L528-1267/25345-;</i>	160-33
160.4.5		Air conditioning pressure switch <i>L528-1267/25345-;</i>	160-35
160.4.6		Evaporator <i>L528-1267/25349-;</i>	160-37
160.4.7		Anti-icing temperature sensor <i>L528-1267/25345-;</i>	160-38
160.4.8		Automatic air conditioning	160-38
	160.4.8.1	Overview of the automatic air conditioning <i>L528-1267/25345-;</i>	160-39
	160.4.8.2	Interior temperature sensor and air flow temperature sensor <i>L528-1267/25345-;</i>	160-40

160.4.8.3	Outside temperature sensor <i>L528-1267/25345-;</i>	160-40
160.4.8.4	Sun sensor <i>L528-1267/25345-;</i>	160-41
170	Lubrication system	170-1
170.1	Liebherr automatic central lubrication system	170-2
170.1.1	Overview of Liebherr automatic central lubrication system <i>L528-1267/25345-;</i>	170-2
170.1.2	Liebherr central lubrication pump <i>L528-1267/25345-;</i>	170-6
170.1.3	Progressive distributor MX-F <i>L528-1267/25345-;</i>	170-10
190	Options	190-1
190.1	LiDAT	190-2
190.1.1	Overview of LiDAT <i>L528-1267/25345-;</i>	190-2
190.1.2	LiDAT on the machine <i>L528-1267/25345-;</i>	190-4
190.2	Weighing device (Liebherr) <i>L528-1267/25345-;</i>	190-8
200	Diagnosis	200-1
200.1	Malfunctions	200-2
200.1.1	Warning symbols	200-2
200.1.2	Service code indicator in the display	200-3
200.1.3	C service codes displayed in the LCD	200-4
200.2	Troubleshooting	200-7
200.2.1	Replacing fuses	200-7
200.2.1.1	Fuses in the battery compartment	200-7
200.2.1.2	Plug-in fuses on the relay and fuse board	200-8
200.2.1.3	Plug-in fuses for LiDAT	200-10

010 Introduction

Contents

010.1	Safety instructions	010-4
010.1.1	Information on these instructions	010-4
010.1.1.1	Representation of warning messages	010-4
010.1.1.2	Graphic symbols in these instructions	010-4
010.1.2	Intended use	010-5
010.1.2.1	Laws, rules, guidelines and safety regulations	010-5
010.1.2.2	Intended use	010-5
010.1.2.3	Foreseeable misuse	010-6
010.1.2.4	Operating conditions	010-6
010.1.2.5	Disposal	010-7
010.1.3	Description of staff	010-7
010.1.3.1	Personal protective equipment	010-7
010.1.3.2	Requirements for staff	010-8
010.1.3.3	Operating company	010-8
010.1.3.4	Operator	010-9
010.1.3.5	Maintenance staff	010-9
010.1.3.6	Refrigeration technician	010-10
010.1.3.7	Slinger	010-11
010.1.3.8	Spotter	010-12
010.1.4	Protective devices on the machine	010-12
010.1.4.1	Operator's cab	010-12
010.1.4.2	Roll over protective structure (ROPS)	010-13
010.1.4.3	Falling object protective structures (FOPS)	010-13
010.1.5	Emergency equipment on the machine	010-13
010.1.5.1	Emergency exit (standard)	010-13
010.1.5.2	Fire extinguisher (option)	010-14
010.1.6	Safe operation	010-14

	010.1.6.1	Intoxicants	010-14
	010.1.6.2	Dangerous fuels and operating fluids	010-14
	010.1.6.3	Transporting machine	010-15
	010.1.6.4	Access to machine	010-15
	010.1.6.5	Machine danger zone	010-16
	010.1.6.6	Visibility	010-16
	010.1.6.7	Protection against vibration	010-17
	010.1.6.8	Operation of machine	010-18
010.1.7		Safe maintenance	010-21
	010.1.7.1	Spare parts	010-21
	010.1.7.2	Heavy parts	010-21
	010.1.7.3	Regular checks	010-22
010.1.8		Modifications to the machine	010-22
	010.1.8.1	Modifications, add-ons and retrofittings	010-22
010.2		Special tools for maintenance and repair work	010-23
	010.2.1	Special tools, general	010-23
	010.2.2	Special tools for the diesel engine	010-24
	010.2.3	Special tools for Z kinematics lift cylinder	010-24
	010.2.4	Special tools for Z kinematics tilt cylinder	010-25
	010.2.5	Special tools for P kinematics lift cylinder	010-25
	010.2.6	Special tools for P kinematics tilt cylinder	010-25
	010.2.7	Special tools for steering cylinders	010-25
	010.2.8	Special tools for the electrical system	010-26
	010.2.9	Special tools for axles	010-26
	010.2.10	Special tools for the air conditioning system	010-27
	010.2.11	Special tools for cab glazing	010-27
	010.2.12	Special tools for the central lubrication system (Liebherr)	010-27
	010.2.13	Special tools for the central lubrication system (Groeneveld)	010-28
010.3		Standards and regulations	010-29
	010.3.1	Prestressing forces and tightening torques for bolts with metric standard and fine threads as per DIN ISO 261	010-29
	010.3.1.1	Range of application and purpose	010-29
	010.3.1.2	Other applicable documents	010-29
	010.3.1.3	Modifications and descriptions	010-30
	010.3.1.4	Tightening torques	010-30


010.3.2	<u>Liebherr standards for assembly instructions and tightening torques</u>	<u>010-36</u>
010.4	<u>Preservation guidelines</u>	<u>010-37</u>
010.4.1	<u>General information</u>	<u>010-37</u>
010.4.2	<u>Machine out of service for an unknown period of time</u>	<u>010-37</u>
010.4.3	<u>Putting the machine out of service</u>	<u>010-38</u>
010.4.3.1	<u>Out of service for up to 2 months</u>	<u>010-38</u>
010.4.3.2	<u>Out of service for up to 12 months</u>	<u>010-39</u>
010.4.3.3	<u>Out of service for longer than 12 months</u>	<u>010-40</u>
010.4.4	<u>Putting back into service</u>	<u>010-40</u>
010.4.4.1	<u>After being out of service for 2 months</u>	<u>010-40</u>
010.4.4.2	<u>After being out of service for 12 months</u>	<u>010-41</u>
010.4.4.3	<u>After being out of service for longer than 12 months</u>	<u>010-41</u>

010.1 Safety instructions

010.1.1 Information on these instructions

010.1.1.1 Representation of warning messages

Warning symbol

	Warning symbol warns of potential dangers. Obey all measures marked with this symbol to avoid injury or death.
---	--




Tab. 1: Warning symbol

Grading of warning messages

Grading of warning messages is defined by following signal words:





DANGER
WARNING
CAUTION
NOTICE

Definition of warning levels

	DANGER	Indicates an immediately hazardous situation which, if not avoided, will result in death or serious injury.
	WARNING	Indicates a hazardous situation which, if not avoided, could result in death or serious injury.
	CAUTION	Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
	NOTICE	Indicates a hazardous situation which, if not avoided, could result in property damage.

Tab. 2: Warning levels

010.1.1.2 Graphic symbols in these instructions

Symbol	Meaning
	Note Identifies useful information and tips.
	Precondition Identifies conditions for subsequent action steps.
	Action request Identifies action steps.
	Result Identifies results of one or more action steps.

LBH/11657/21/10/211-20191203_080456/en

Symbol	Meaning
—	List Identifies individual items of a list.

Tab. 3: Symbols

010.1.2 Intended use

010.1.2.1 Laws, rules, guidelines and safety regulations

To ensure safe operation:

- Ask work site manager for safety regulations at place of use.
- Adhere to safety regulations at place of use.
- Adhere to traffic regulations.
- Adhere to valid guidelines from insurers (for example employers' professional liability insurance companies, accident insurance et cetera).
- Avoid working methods that can endanger safety.
- Adhere to all intervals specified for recurrent checks and inspections in this operator's manual.

010.1.2.2 Intended use

Wheel loader is used to pick up, move and dump following materials:

- Soil
- Stones
- Broken rocks
- Bulk materials

This applies to a standard machine in normal operating conditions. Special applications are described in a separate options operator's manual.

To ensure intended use:

- Adhere to operator's manual.
- Adhere to maintenance intervals.
- Observe inspection and maintenance tasks.
- Adhere to specifications in the technical data.
- When using machine on public roads, make sure it complies with applicable national regulations.
- Only lift loads with intended working attachments (fork prongs, crane boom), which must be fitted and functioning.
- Make sure that machines used underground (mining and tunnel construction) are fitted with systems to reduce exhaust emissions (such as diesel particulate filters).
- Adhere to individual country's requirements for underground operation.
- For special uses use special working attachments and if necessary special safety equipment.
- Exclusively mount and use special working attachments with approval and as per stipulations of manufacturer of basic machine.
- Only use approved tyres.
- A suitably equipped workshop is absolutely essential for performing repair work.



Note

- ▶ Any other use or use beyond the stated use is improper use.

010.1.2.3 Foreseeable misuse

Do not use machine in following cases:

- Transport of persons without mounted and functioning safety equipment
- Lifting of persons without mounted and functioning safety equipment
- Driving with attached load
- Working in explosion hazard zones
- Working in contaminated environment without corresponding and necessary equipment
- Lifting of loads without suitable working attachment
- Pulling of loads (for example, containers, wagons, trailers) without suitable towing device
- Breaking rocks
- Hammering in posts



Note

- ▶ The manufacturer accepts no liability for damage caused by improper use.

010.1.2.4 Operating conditions

- Outdoors
- Fording depth is same as maximum obstacle height.
- Operate machine in an ambient temperature of -25 °C to 45 °C.
- In case of divergent ambient temperatures, contact Liebherr customer service.

Danger to life

Operation during thunderstorms or storms

- If possible stop operation before a thunderstorm or storm.
- Put working attachment on the ground in flattest position possible.
- Secure machine correctly.
- Close window.
- Shut off diesel engine.
- Set ignition key to **0**.
- Make sure there are no persons in area around machine.

Lightning strike

- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.

Contact with high voltage cable

- Do not move machine and working attachment.
- Remain in operator's cab.
- Do not leave machine until all components are voltage-free.
- Make sure that all persons stay away from the machine and the high voltage cable.
- Have voltage switched off.

010.1.2.5 Disposal

Danger to life

Unapproved disposal of gas containers and pressure vessels

- Before disposal, completely depressurise pressure vessel.
- Before disposal, professionally empty pressure vessel.
- Adhere to safety instructions of pressure vessel manufacturer.

Unapproved disposal of refrigerant

- Have refrigerant disposed of by refrigerant recycling point.
- Adhere to safety data sheet of refrigerant during disposal.

Environmental pollution

Unapproved disposal of machine

- Make sure that the individual elements of the machine are disposed of correctly after the service life.
- Dispose of elements of machine in line with valid country-specific waste disposal guidelines and relevant valid laws.
- Remove fuels, operating fluids and lubricants from all components before disposal.
- Collect and store fuels, operating fluids and lubricants in suitable containers before disposal.
- Adhere to instructions of relevant manufacturer when disposing of fuels, operating fluids and lubricants.
- Have fuels, operating fluids and lubricants disposed of by old oil recycling point.

010.1.3 Description of staff

010.1.3.1 Personal protective equipment

Operators, assistants and maintenance staff are responsible for the following:

- Wearing personal protective equipment
- Regular cleaning and care of protective equipment
- Immediate replacement of damaged parts of protective equipment

The protective equipment consists of following elements:

- Protective helmet
- Safety glasses
- Hearing protection
- Breathing equipment
- Protective gloves
- Warning clothing (reflective, in signal colour)
- Safety boots
- Special protective clothing
 - To prevent burns
 - To prevent freezing
 - To prevent acid burns
 - To prevent stabbing and cutting injuries

010.1.3.2 Requirements for staff

Staff meet the following requirements:

- The machine is operated, maintained and repaired exclusively by authorised and trained persons.
- All persons operating, maintaining or repairing the machine have the required minimum age.
- Staff training involves theoretical information (technology and safety) and practical training on the machine.
- Staff have read and understood the operator's manual and supplied documentation.
- Experienced staff continuously supervise following staff.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Staff agree to work in safety-aware and risk-aware manner.

010.1.3.3 Operating company

Responsibility

The operator is responsible for the following:

- The operator of the machine must ensure that no persons are in the operating area of the machine on the basis of a risk assessment conducted in respect of the operating site.
- If working attachments are used that deviate from the standard and result in limitations to the field of view, the operator must repeat the visual inspection.
- Make sure that exclusively trained staff operate the machine.
- Make sure that exclusively trained staff maintain the machine.
- If an electric motor is used, ensure that only a qualified and competent person connects the machine to the mains supply.
- If a machine with an “emergency actuation of parking brake” option is used, make sure that only qualified and authorised persons operate the machine.
- Check qualification of persons using the machine.
- Authorise activities of persons in handling the machine.
- Define competences and responsibilities for all persons involved in handling the machine.
- Have following staff continuously supervised by an experienced person.
 - Staff undergoing training
 - Staff undergoing education
 - Staff undergoing instruction
 - Staff undergoing a general apprenticeship
- Provide all persons tasked with handling the machine with the necessary protective equipment.
- Check safety-aware work of staff at regular intervals.
- Check danger-aware work of staff at regular intervals.
- Make sure that machine is operated in flawless, safe condition.
- If flaws affecting safety occur: Immediately decommission machine.
- Perform inspections of machine prescribed by Liebherr punctually.
- Perform nationally mandated inspections of machine punctually.
- Adhere to national legal specifications on provision of machines and tools by the employer (hazard assessment and risk assessment conducted by the operator).
- Make sure that no retrofitting is performed on machine without consultation of the manufacturer.
- Use original Liebherr spare parts wherever possible.

010.1.3.4 Operator

Responsibility

Operator is responsible for following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Wear personal protective equipment.
- Operate machine as intended.
- Avoid working methods that can endanger safety.
- Adhere to safety regulations at place of use.
- Maintain visual contact or voice contact with spotter.
- During operation, do not allow any other persons on machine.
- Report all changes to machine that affect safety to operating company.
- If it is no longer possible to work safely, stop operating the machine immediately.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The operator has following qualification and skills:

- Has completed the legally specified minimum age.
- Is physically and mentally capable of operating the machine safely.
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- Has the necessary authorisation for operation of machine.
- The operator has the necessary education (theoretical and practical) for the following:
 - Handling the machine type
 - Attaching
 - Spotting
 - Handling fire extinguishing equipment
- Knows all means of escape in an emergency.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.5 Maintenance staff

Responsibility

The maintenance staff are responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals for components
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain machine for safe and reliable function.
- Execute all maintenance tasks specified for maintenance staff in the maintenance and inspection schedule.

- Wear personal protective equipment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The maintenance staff have the following qualifications and skills:

- Are of the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Are able to estimate distance, height and gaps.
- Have the necessary authorisation for maintenance of the machine.
- Know the machine and the hazards.
- Know all procedures and precautions for maintenance.
- Have knowledge of handling special tools for maintenance and repair.
- Have special knowledge and experience handling hydraulic installations when working with hydraulic systems.
- Are not under any physical or mental impairment that limits one of the prescribed requirements.
- Are not under the influence of alcohol.
- Are not under the influence of drugs.

010.1.3.6 Refrigeration technician

Responsibility

The refrigeration technician is responsible for the following:

- Read the operator's manual.
- Read included documentation:
 - Operator's manuals of options
 - Operator's manuals from third party manufacturers
 - Additional instructions
- Maintain and repair machine for safe and reliable function.
- Execute all maintenance tasks and repair tasks specified for the refrigeration technician in the maintenance and inspection schedule.
- Isolate battery main switch of power supply system and secure it against switching on again.
- Clearly define and label working position.
- Wear personal protective equipment.
- Use tools suitable for the work deployment.
- Adhere to safety regulations at place of use.
- Report all changes to machine that affect safety to operating company.
- Only perform retrofittings of machine after consultation with manufacturer.
- Use original Liebherr spare parts wherever possible.

Requirement

The refrigeration technician has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of servicing the machine:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions

- Is able to estimate distance, height and gaps.
- The refrigeration technician has completed training that complies with the country-specific laws, standards and guidelines.
- The refrigeration technician has following skills:
 - Is able to assess work correctly.
 - Is able to recognise dangers.
 - Is able to take safety measures.
- Has knowledge and experience of the relevant field of activity.
- Knows the relevant national standards.
- Has the necessary authorisation for maintenance and repair of machine.
- Knows the machine and the hazards.
- Knows all procedures and precautions for maintenance.
- Has knowledge of handling special tools for maintenance and repair.
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.7 Slinger

Responsibility

Slinger is responsible for following:

- Wear personal protective equipment.
- Choose correct and undamaged slinging gear.
- Correctly attach slinging gear to load or lifting accessory.
- Correctly remove slinging gear from load or lifting accessory.
- Grant approval for movement or accompaniment.

Requirement

The slinger has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of slinging loads:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The slinger has following skills:
 - Is able to estimate mass distribution and load distribution.
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
- Has the necessary authorisation for attaching loads.
- The slinger has the necessary education (theoretical and practical) for the following:
 - Selecting the suitable slinging gear
 - Attaching slinging gear
 - Securing to prevent unintended disengaging of slinging gear
 - Avoiding damage to slinging gear
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.3.8 Spotter

Responsibility

The spotter is responsible for the following:

- Wear personal protective equipment.
- Forward signals from slinger to operator.
- If the spotter is the only person for this purpose: Give instructions to operator.
- The spotter must be in the field of view of operator or have voice contact with the operator.

Requirement

The spotter has following qualification and skills:

- Has completed the legally specified minimum age.
- Physically and mentally capable of spotting and providing signals:
 - Satisfactory eyesight
 - Satisfactory hearing ability
 - Quick reactions
 - Is able to estimate distance, height and gaps.
- The spotter has following skills:
 - Is able to operate radio units.
 - Is able to give clear instructions on radio units.
 - Is able to guide a load.
 - Is able to ensure safe movement of load and machine.
- Has the necessary authorisation for giving signal signs.
- The spotter has the necessary education (theoretical and practical) for the following:
 - Spotting
 - Applying all necessary signal signs
- Is not under any physical or mental impairment that limits one of the prescribed requirements.
- Is not under the influence of alcohol.
- Is not under the influence of drugs.

010.1.4 Protective devices on the machine

010.1.4.1 Operator's cab

Danger to life

Unapproved working method

- Put on safety belt before starting work.
- Make sure that changes in the operator's cab (for example installation of accessories) do not restrict the operator's workspace.

Injuries

Objects in the operator's cab

- Remove objects that are not necessary for the work from the operator's cab.
- Stow and fasten objects that are necessary for the work before starting.
- Make sure that objects carried do not protrude into the operator's workspace.

010.1.4.2 Roll over protective structure (ROPS)

Danger to life

Damaged falling object protective structures

- Do not put machine into service with damaged falling object protective structures.
- Do not put machine into service with deformed falling object protective structures.
- Do not use falling object protective structures with structural changes.
- Do not use repaired falling object protective structures.
- Do not perform welding on falling object protective structures.
- Do not cut or saw falling object protective structures.
- Do not drill falling object protective structures.

Exceeding of total weight

- Make sure that total weight of machine (see identification plate) is not exceeded.
- Make sure that the machine does not exceed the total weight with heavy working tools.
- Make sure that the machine does not exceed the total weight after changing the working attachment.
- Make sure that the machine does not exceed the total weight with add-ons or after retrofitting.

010.1.4.3 Falling object protective structures (FOPS)

Danger to life

Damaged falling object protective structures

- Do not put machine into service with damaged falling object protective structures.
- Do not put machine into service with deformed falling object protective structures.
- Do not use falling object protective structures with structural changes.
- Do not use repaired falling object protective structures.
- Do not perform welding on falling object protective structures.
- Do not cut or saw falling object protective structures.
- Do not drill falling object protective structures.

010.1.5 Emergency equipment on the machine

010.1.5.1 Emergency exit (standard)

Danger to life

Incorrect labelling

- Make sure that all information signs are present.
- Make sure that all information signs are legible.

Incorrect equipment

- Make sure that emergency hammer (option) is present.
- Make sure that position of emergency hammer (option) is known.

010.1.5.2 Fire extinguisher (option)**Danger to life****Incorrect behaviour**

- Make sure that all fastening points of fire extinguishers on the machine are known.
- Make sure that everyone is able to operate the fire extinguishers.
- Make sure that everyone knows local fire alarm options.
- Make sure that everyone knows the local fire-fighting possibilities.
- Before starting machine, unlock all locks of hoods and doors of machine.

010.1.6 Safe operation**010.1.6.1 Intoxicants****Danger to life****Physical and mental impairment**

- Make sure that no persons working on or with the machine are under the influence of drugs.
- Make sure that no persons working on or with the machine are under the influence of alcohol.
- Make sure that no persons working on or with the machine are under the influence of medication.
- Make sure that no persons working on or with the machine are overtired.
- Make sure that no persons working on or with the machine are exhausted.

010.1.6.2 Dangerous fuels and operating fluids**Injury****Incorrect handling**

- Adhere to safety instructions on handling oils, greases and chemical substances.
- In case of hot lubricants and fuels put on personal protective equipment.

Environmental damage**Incorrect disposal**

- Dispose of lubricants and fuels safely and in eco-friendly manner.
- Adhere to guidelines applicable to disposal.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com