



MASSEY FERGUSON

MF 9295 / 9296


Rotary Disc Header



SERVICE MANUAL

FROM MASSEY FERGUSON

Workshop Service Manual

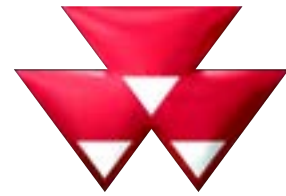

MASSEY FERGUSON

Rotary Disc Header

9295

9296



**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

Rotary Disc Header

1 General	1-1
1.1 General information	1-3
1.1.1 Introduction to this service manual	1-3
1.1.2 Units of measurement	1-3
1.1.3 Table of contents	1-3
1.1.4 Page numbers	1-3
1.1.5 Intended use	1-3
1.1.6 Proper disposal of waste	1-3
1.2 General safety	1-5
1.2.1 Safety symbol	1-5
1.2.2 Safety messages	1-5
1.2.3 Information messages	1-5
1.2.4 Safety signs	1-5
1.2.5 Safety and informational signs	1-6
1.2.6 Cylinder stops	1-8
1.2.7 Accumulator safety	1-8
1.2.8 A word to the technician	1-8
1.2.9 The service manual	1-9
1.3 Operation	1-10
1.3.1 Prepare for operation	1-10
1.3.2 General information	1-10
1.3.3 Personal protective equipment	1-11
1.3.4 Seat instructions	1-11
1.3.5 Shield and guards	1-12
1.3.6 Exhaust warning	1-12
1.3.7 Flying debris	1-13
1.3.8 Handrails	1-13
1.3.9 Agricultural chemicals	1-13
1.3.10 Travel on public roads	1-14
1.4 Maintenance	1-15
1.4.1 General maintenance information	1-15
1.4.2 Bolt torque values	1-16
1.4.3 Fire prevention and first aid	1-19
1.4.4 High pressure leaks	1-20
1.4.5 Tire safety	1-20
1.4.6 Replacement parts	1-21
1.4.7 Remove an eccentric locking collar	1-21
1.4.8 Install an eccentric locking collar	1-21
1.4.9 Remove a gib key	1-22
1.4.10 Install a gib key	1-23
1.5 Specifications	1-24
1.5.1 Dimensions and weights	1-24
1.5.2 Header specifications	1-24
1.5.3 Cutterbed specifications	1-24
1.5.4 Cutterbed bolt torque	1-24
1.5.5 Maximum roading speed	1-25
1.5.6 Conditioner specifications	1-25
1.5.7 Lubrication specifications	1-25
1.6 Machine identification	1-27
1.6.1 Machine identification	1-27
1.6.2 Serial number plate	1-27

1.6.3	Serial number description	1-27
1.7	Machine description	1-29
1.7.1	Description	1-29
1.7.2	Cutterbed	1-29
1.7.3	Conditioner	1-29
1.7.4	Swathboard	1-30
1.7.5	Forming shields	1-30
1.8	Component location	1-31
1.8.1	Component location	1-31
1.8.2	Component access	1-31
1.9	Troubleshooting	1-32
1.9.1	Header troubleshooting	1-32
1.9.2	Cutterbed troubleshooting	1-33
1.9.3	Conditioner troubleshooting	1-34
1.9.4	Crop conditioning and windrow formation	1-35
1.9.5	Cutoff quality	1-35
2	Drive system	2-1
2.1	Conditioner drive belt	2-3
2.1.1	Banded drive belt	2-3
2.1.2	Install a belt	2-3
2.1.3	Belt run-in procedure	2-4
2.2	Center cage spindle	2-6
2.2.1	Remove the center cage spindle	2-6
2.2.2	Disassemble the center cage spindle	2-6
2.2.3	Assemble the center cage spindle	2-7
2.2.4	Install the center cage spindle	2-8
2.3	Header drive gearbox - left	2-9
2.3.1	Header drive motor and gearbox - left side components	2-9
2.3.2	Special tools (header drive gearbox)	2-12
2.3.3	Remove the header drive gearbox - left	2-12
2.3.4	Disassemble the header drive gearbox - left	2-16
2.3.5	Examine the header drive gearbox	2-20
2.3.6	Assemble the header drive gearbox - left	2-21
2.3.7	Install the header drive gearbox - left	2-27
2.3.8	Adjust the header drive gearbox - left	2-33
2.4	Header drive gearbox - right (single conditioner)	2-36
2.4.1	Header drive motor and gearbox - right side components (single conditioner)	2-36
2.4.2	Special tools (header drive gearbox)	2-38
2.4.3	Remove the header drive gearbox - right (single conditioner)	2-38
2.4.4	Disassemble the header drive gearbox - right (single conditioner)	2-41
2.4.5	Examine the header drive gearbox	2-42
2.4.6	Assemble the header drive gearbox - right (single conditioner)	2-43
2.4.7	Install the header drive gearbox - right (single conditioner)	2-45
2.4.8	Adjust the header drive gearbox - right (single conditioner)	2-48
2.5	Header drive gearbox - right (double conditioner)	2-51
2.5.1	Header drive motor and gearbox - right side components (double conditioner)	2-51
2.5.2	Special tools (header drive gearbox)	2-54
2.5.3	Remove the header drive gearbox - right (double conditioner)	2-54
2.5.4	Disassemble the header drive gearbox - right, double conditioner machines	2-58
2.5.5	Examine the header drive gearbox	2-62
2.5.6	Assemble the header drive gearbox - right (double conditioner)	2-63
2.5.7	Install the header drive gearbox - right (double conditioner)	2-69
2.5.8	Adjust the header drive gearbox - right (single conditioner)	2-74
2.6	Conditioner drive tensioner	2-76
2.6.1	Header drive tensioner components	2-76

2.6.2	Disassemble the header drive tensioner	2-77
2.6.3	Examine the conditioner drive tensioner	2-77
2.6.4	Assemble the conditioner drive tensioner	2-78
3	Hydraulic system	3-1
3.1	General information	3-3
3.1.1	General hydraulic information	3-3
3.1.1.1	Hydraulic system	3-3
3.2	Header drive motor	3-4
3.2.1	Header drive motor components	3-4
3.2.2	Examine the case drain leakage	3-5
3.2.3	Remove the header drive motor	3-7
3.2.4	Disassemble the header drive motor	3-9
3.2.5	Assemble the header drive motor	3-16
3.2.6	Install the header drive motor	3-25
3.3	Conditioner roll cylinders	3-29
3.3.1	Conditioner roll cylinder components	3-29
3.3.2	Remove the conditioner roll cylinders	3-29
3.3.3	Disassemble the conditioner roll cylinder	3-30
3.3.4	Examine the conditioner roll cylinder	3-30
3.3.5	Assemble the conditioner roll cylinder	3-31
3.3.6	Install the conditioner roll cylinder	3-31
3.3.7	Adjust the pressure of the conditioner roll cylinders	3-32
3.4	Accumulator	3-33
3.4.1	Remove the accumulator	3-33
3.4.2	Discharge the accumulator	3-33
3.4.3	Charge the accumulator	3-34
3.4.4	Install the accumulator	3-34
4	Electrical system	4-1
4.1	Basic electrical troubleshooting	4-3
4.1.1	Basic troubleshooting procedures	4-3
4.1.2	Tools	4-4
4.1.3	Continuity check	4-4
4.1.4	Voltage check	4-5
4.2	Connectors	4-6
4.2.1	Examine a connector	4-6
4.2.2	Pins and sockets	4-6
4.2.3	Replace a Packard connector	4-7
4.2.4	Replace an AMP connector	4-8
4.2.5	Replace a Power Cord connector	4-8
4.2.6	Replace a Deutsch connector	4-8
4.3	Header speed sensor	4-10
4.3.1	Electrical sensor location	4-10
4.3.2	Adjust the electrical sensors	4-10
4.4	Lighting	4-11
4.4.1	Examine the lighting	4-11
5	Cutterbed	5-1
5.1	Discs	5-3
5.1.1	Discs	5-3
5.1.2	Disc maintenance	5-3
5.1.3	Remove an inner disc	5-3
5.1.4	Install an inner disc	5-4
5.1.5	Remove the outer disc	5-4
5.1.6	Install the outer disc	5-6

5.2 Knives	5-9
5.2.1 Knife wedging under disc	5-9
5.2.2 Knife inspection	5-9
5.2.3 Replace a knife	5-10
5.2.4 Knife hardware inspection	5-10
5.3 Cutterbed	5-12
5.3.1 Cutterbed	5-12
5.3.2 Cutterbed oil level	5-12
5.3.3 Change the cutterbed oil	5-12
5.3.4 Cutterbed inspection	5-14
5.3.5 Cutterbed components	5-15
5.3.6 Remove the cutterbed	5-16
5.3.7 Disassemble the cutterbed	5-18
5.3.8 Examine the cutterbed	5-19
5.3.9 Assemble the cutterbed	5-20
5.3.10 Examine the cutterbed for leaks	5-22
5.3.11 Install the cutterbed	5-23
5.4 Spindle gear assembly	5-26
5.4.1 Spindle gear assembly	5-26
5.4.2 Remove the spindle gear	5-26
5.4.3 Disassemble the spindle gear	5-27
5.4.4 Examine the spindle gear	5-27
5.4.5 Assemble the spindle gear	5-28
5.4.6 Install the spindle gear	5-29
5.5 Idler gear assembly	5-31
5.5.1 Idler gear assembly	5-31
5.5.2 Remove the idler gear	5-31
5.5.3 Disassemble the idler gear	5-33
5.5.4 Examine the idler gear	5-34
5.5.5 Assemble the idler gear	5-34
5.5.6 Install the idler gear	5-35
6 Conditioner	6-1
6.1 Helper roll	6-3
6.1.1 Helper roll components	6-3
6.1.2 Remove the helper roll	6-3
6.1.3 Install the helper roll	6-7
6.2 Auger strippers	6-12
6.2.1 Adjust the auger strippers	6-12
6.3 Drive shaft	6-13
6.3.1 Remove the drive shaft - slip tube	6-13
6.3.2 Install the drive shaft - slip tube	6-14
6.3.3 Remove the drive shaft - solid shaft	6-16
6.3.4 Install the drive shaft - solid shaft	6-16
6.4 U-joint	6-18
6.4.1 U-joint components	6-18
6.4.2 Remove the U-joints	6-18
6.4.3 Disassemble the U-joint	6-19
6.4.4 Assemble the U-joint	6-21
6.4.5 Install the U-joints	6-27
6.5 Belts	6-29
6.5.1 Belt maintenance	6-29
6.5.2 Replace the conditioner belt	6-29
6.5.3 Adjust the conditioner belt	6-30
6.6 Left conditioner gearbox	6-31
6.6.1 Conditioner gearbox lubrication	6-31

6.6.2	Remove the left conditioner gearbox	6-31
6.6.3	Conditioner gearbox components - left	6-31
6.6.4	Disassemble the left conditioner gearbox	6-32
6.6.5	Examine the conditioner gearbox	6-33
6.6.6	Assemble the left conditioner gearbox	6-34
6.6.7	Install the left conditioner gearbox	6-35
6.7	Right conditioner gearbox	6-36
6.7.1	Conditioner gearbox lubrication	6-36
6.7.2	Remove the right conditioner gearbox	6-36
6.7.3	Conditioner gearbox components - right	6-36
6.7.4	Disassemble the right conditioner gearbox	6-37
6.7.5	Examine the conditioner gearbox	6-38
6.7.6	Assemble the right conditioner gearbox	6-38
6.7.7	Install the right conditioner gearbox	6-39
6.8	Conditioner bearings	6-40
6.8.1	Remove a spherical bearing	6-40
6.8.2	Install a spherical bearing	6-41
6.8.3	Remove a bushing bearing	6-42
6.8.4	Install a bushing bearing	6-42
6.9	Rear conditioner - double conditioner only	6-44
6.9.1	Rear top conditioner - components (double conditioner)	6-44
6.9.2	Remove the rear top conditioner - double conditioner	6-45
6.9.3	Install the rear top conditioner roll - double conditioner	6-46
6.9.4	Rear bottom conditioner components - double conditioner	6-49
6.9.5	Remove the rear bottom conditioner - double conditioner	6-49
6.9.6	Install the rear bottom conditioner - double conditioner	6-51
6.10	Front conditioner	6-53
6.10.1	Front top conditioner - components	6-53
6.10.2	Remove the front top conditioner	6-54
6.10.3	Install the front top conditioner	6-55
6.10.4	Front bottom conditioner - components	6-56
6.10.5	Remove the front bottom conditioner	6-56
6.10.6	Install the front bottom conditioner	6-58
6.11	Conditioner adjustments	6-61
6.11.1	Examine the conditioner	6-61
6.11.2	Conditioner	6-61
6.11.3	Conditioner spacing	6-61
6.11.3.1	Adjust the conditioner roll spacing	6-61
6.11.4	Conditioner spacing indicator	6-62
6.11.4.1	Adjust the conditioner spacing indicator - double conditioner	6-62
6.11.4.2	Adjust the conditioner spacing indicator - single conditioner	6-63
6.11.5	Adjust the conditioner timing	6-63
6.11.6	Conditioner pressure	6-64
6.11.7	Adjust the conditioner pressure	6-64
6.12	Windrow forming shields	6-65
6.12.1	Adjust the windrow forming shields	6-65
6.12.2	Adjust the deflector	6-65
6.12.3	Adjust the windrow forming deck height	6-65
6.13	Swathboard	6-67
6.13.1	Swathboard	6-67
6.13.2	Adjust the swathboard	6-67
7	Diagrams	7-1
7.1	Reading wiring diagrams	7-3
7.1.1	Diagram numbers	7-3
7.1.2	Location grids	7-3
7.1.3	Wire breaks	7-4

7.2 Diagram symbols and abbreviations	7-6
7.2.1 Harness and connector identification	7-6
7.2.2 Splices	7-6
7.2.3 CAN signal	7-7
7.3 Electrical diagrams	7-8
7.3.1 Harness abbreviations	7-8
7.3.2 Wire colors	7-8
7.3.3 Main electrical diagram	7-9
7.4 Electrical tables	7-11
7.4.1 Circuit table	7-11
7.4.2 Connector function	7-13
7.4.3 Connector table	7-13
7.4.4 Tractor connector	7-14
7.5 Hydraulic schematic	7-16
7.5.1 Hydraulic schematic	7-17
8 Index	Index-1

1. General

1.1 General information	1-3
1.1.1 Introduction to this service manual	1-3
1.1.2 Units of measurement	1-3
1.1.3 Table of contents	1-3
1.1.4 Page numbers	1-3
1.1.5 Intended use	1-3
1.1.6 Proper disposal of waste	1-3
1.2 General safety	1-5
1.2.1 Safety symbol	1-5
1.2.2 Safety messages	1-5
1.2.3 Information messages	1-5
1.2.4 Safety signs	1-5
1.2.5 Safety and informational signs	1-6
1.2.6 Cylinder stops	1-8
1.2.7 Accumulator safety	1-8
1.2.8 A word to the technician	1-8
1.2.9 The service manual	1-9
1.3 Operation	1-10
1.3.1 Prepare for operation	1-10
1.3.2 General information	1-10
1.3.3 Personal protective equipment	1-11
1.3.4 Seat instructions	1-11
1.3.5 Shield and guards	1-12
1.3.6 Exhaust warning	1-12
1.3.7 Flying debris	1-13
1.3.8 Handrails	1-13
1.3.9 Agricultural chemicals	1-13
1.3.10 Travel on public roads	1-14
1.4 Maintenance	1-15
1.4.1 General maintenance information	1-15
1.4.2 Bolt torque values	1-16
1.4.3 Fire prevention and first aid	1-19
1.4.4 High pressure leaks	1-20
1.4.5 Tire safety	1-20
1.4.6 Replacement parts	1-21
1.4.7 Remove an eccentric locking collar	1-21
1.4.8 Install an eccentric locking collar	1-21
1.4.9 Remove a gib key	1-22
1.4.10 Install a gib key	1-23
1.5 Specifications	1-24
1.5.1 Dimensions and weights	1-24
1.5.2 Header specifications	1-24
1.5.3 Cutterbed specifications	1-24
1.5.4 Cutterbed bolt torque	1-24
1.5.5 Maximum roading speed	1-25
1.5.6 Conditioner specifications	1-25
1.5.7 Lubrication specifications	1-25
1.6 Machine identification	1-27
1.6.1 Machine identification	1-27
1.6.2 Serial number plate	1-27

1.6.3 Serial number description	1-27
1.7 Machine description	1-29
1.7.1 Description	1-29
1.7.2 Cutterbed	1-29
1.7.3 Conditioner	1-29
1.7.4 Swathboard	1-30
1.7.5 Forming shields	1-30
1.8 Component location	1-31
1.8.1 Component location	1-31
1.8.2 Component access	1-31
1.9 Troubleshooting	1-32
1.9.1 Header troubleshooting	1-32
1.9.2 Cutterbed troubleshooting	1-33
1.9.3 Conditioner troubleshooting	1-34
1.9.4 Crop conditioning and windrow formation	1-35
1.9.5 Cutoff quality	1-35

1.1 General information

1.1.1 Introduction to this service manual

This service manual gives information from engineering tests, operating data, and the latest service techniques at the time of publication. Read this service manual carefully before doing any service on the machine.

The photos and illustrations used in this service manual were current at the time of publication. Production changes can cause machines to vary from the photos and the illustrations. The manufacturer reserves the right to redesign and change machines as necessary without notification.



WARNING:

Some pictures in this manual show the machine with shields or guards removed to permit for a better view of the subject of the picture. All shields and guards must be in position before operating the machine.

Machine movement when in normal use determines right-hand and left-hand.

1.1.2 Units of measurement

Measurements are given in metric units followed by the equivalent in US units. Hardware sizes are given in millimeters for metric hardware and inches for US hardware.

1.1.3 Table of contents

This manual has a table of contents at the front. The table of contents shows the divisions. The individual divisions also have a table of contents.

1.1.4 Page numbers

All pages have two numbers, such as 01-25. The first number shows the division. The second number shows the page in the division.

Page numbers occur on the lower right-hand or lower left-hand corner of each page.

1.1.5 Intended use

This machine is designed solely for use in customary agricultural operations.

Do not use this machine for any application or purpose other than those described in this manual. The manufacturer accepts no liability for damage or injury resulting from misuse of this machine.

Compliance with the conditions of operation, service and repair as specified by the manufacturer constitute essential elements for the intended use of this machine.

This machine should be operated, serviced and repaired only by qualified persons familiar with its characteristics and familiar with the relevant safety rules and procedures.

All generally recognized safety regulations and road traffic regulations must be obeyed at all times.

Any unauthorized modifications performed on this machine will relieve the manufacturer of all liability for any resulting damage or injury.

1.1.6 Proper disposal of waste

Improper disposal of waste can pollute the environment and ecology. A few examples of potentially harmful equipment waste can include, but not limited to, items such as oil, fuel, coolant, brake fluid, filters, battery chemicals, tires, etc.

Use leak proof containers when draining fluids. Do not use food or beverage containers to collect waste fluids, as food or beverage container(s) may mislead someone into drinking from them.

Do not pour or spill waste onto the ground, down a drain, or into any water source.

Air conditioning refrigerants escaping into the air can damage the Earth's atmosphere. Government regulations may require a certified air conditioning service center to recover and recycle used air conditioning refrigerants.

Inquire with local environmental or recycling center on the proper way to recycle or dispose waste.

1.2 General safety

1.2.1 Safety symbol

The safety symbol tells you about a dangerous area!

Look for the safety symbol in this manual and on the machine. The safety symbols tell you that there is important safety instructions in the manual.



Fig. 1

1.2.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety symbol. Learn these safety messages and obey the recommended precautions and safety instructions.



DANGER:

If you do not obey the recommended precautions and safety instructions, DEATH OR INJURY will occur.



WARNING:

If you do not obey the recommended precautions and safety instructions, DEATH OR INJURY can occur.



CAUTION:

If you do not obey the recommended precautions and safety instructions, INJURY can possibly occur.



Fig. 2

1.2.3 Information messages

The words important and note are not related to personal safety, and are used to give information about the operation and servicing of the machine.

IMPORTANT: *Identifies special instructions or procedures which, if not followed, can cause damage to the machine, the process, or the area around the machine.*

NOTE: *Information to make procedures easier.*

1.2.4 Safety signs



WARNING:

Do not remove the safety signs. Replace safety signs that you cannot read, are damaged, or are missing. Clean the machine surface with a weak soap and water solution before you replace the safety signs. Replacement safety signs are available from your dealer.

Always make sure that safety signs are in the correct locations and that you can read the safety signs. Illustrations of safety sign locations are at in this section.

Keep the safety signs clean. If necessary, use a weak soap and water solution.

1.2.5 Safety and informational signs

Front view


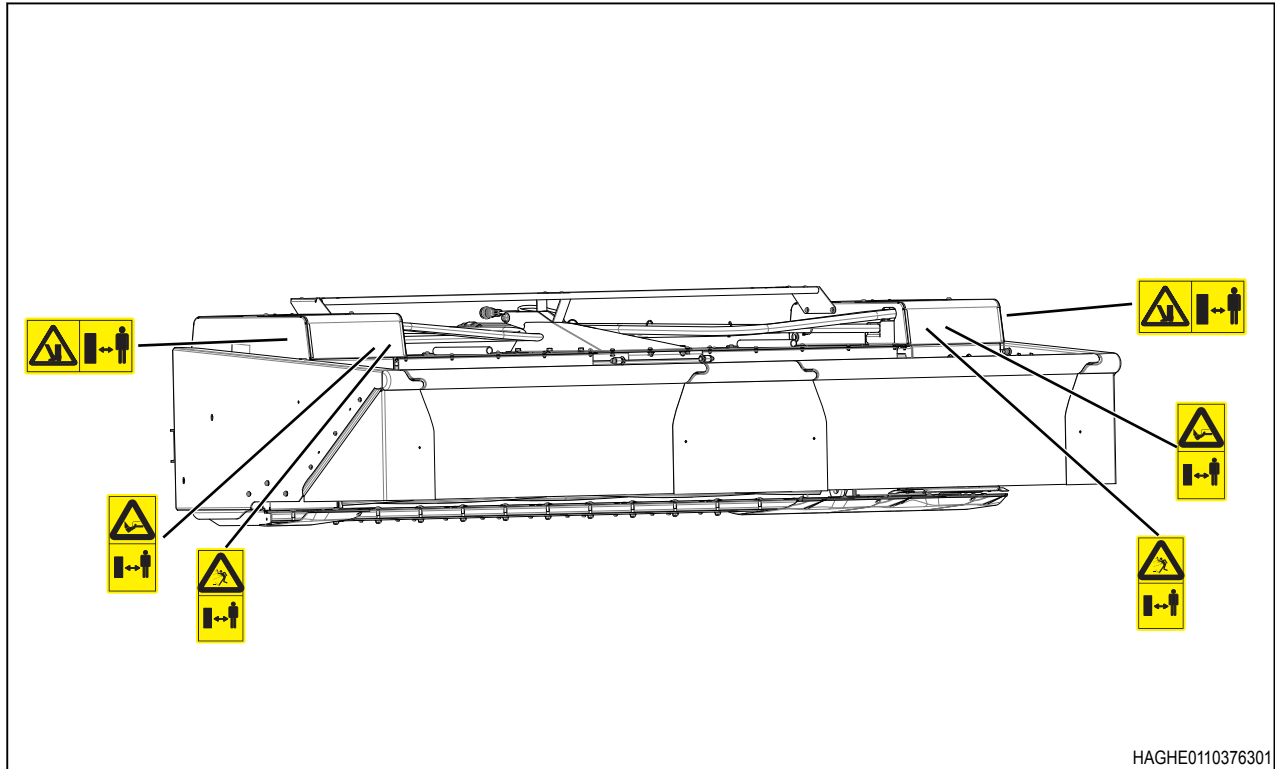


Fig. 3


Rear view

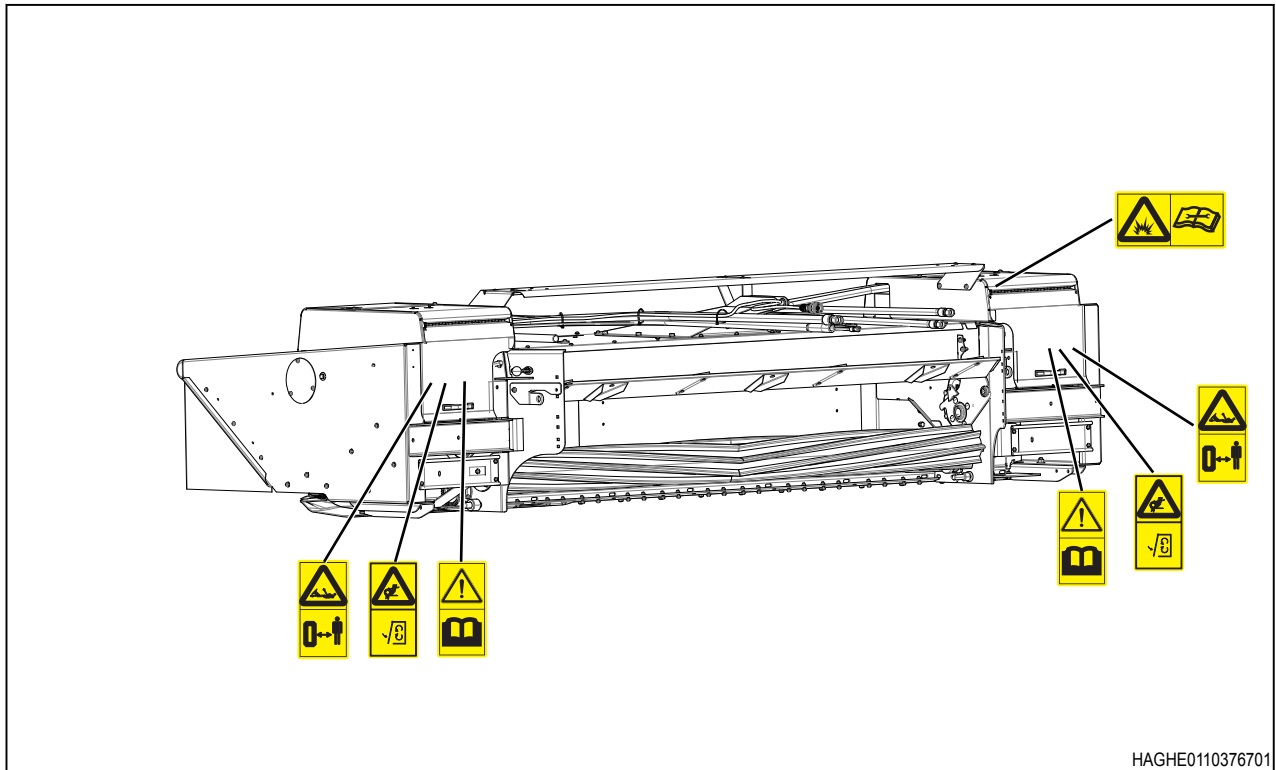

HAGHE0110376701

Fig. 4

Front view - reflectors

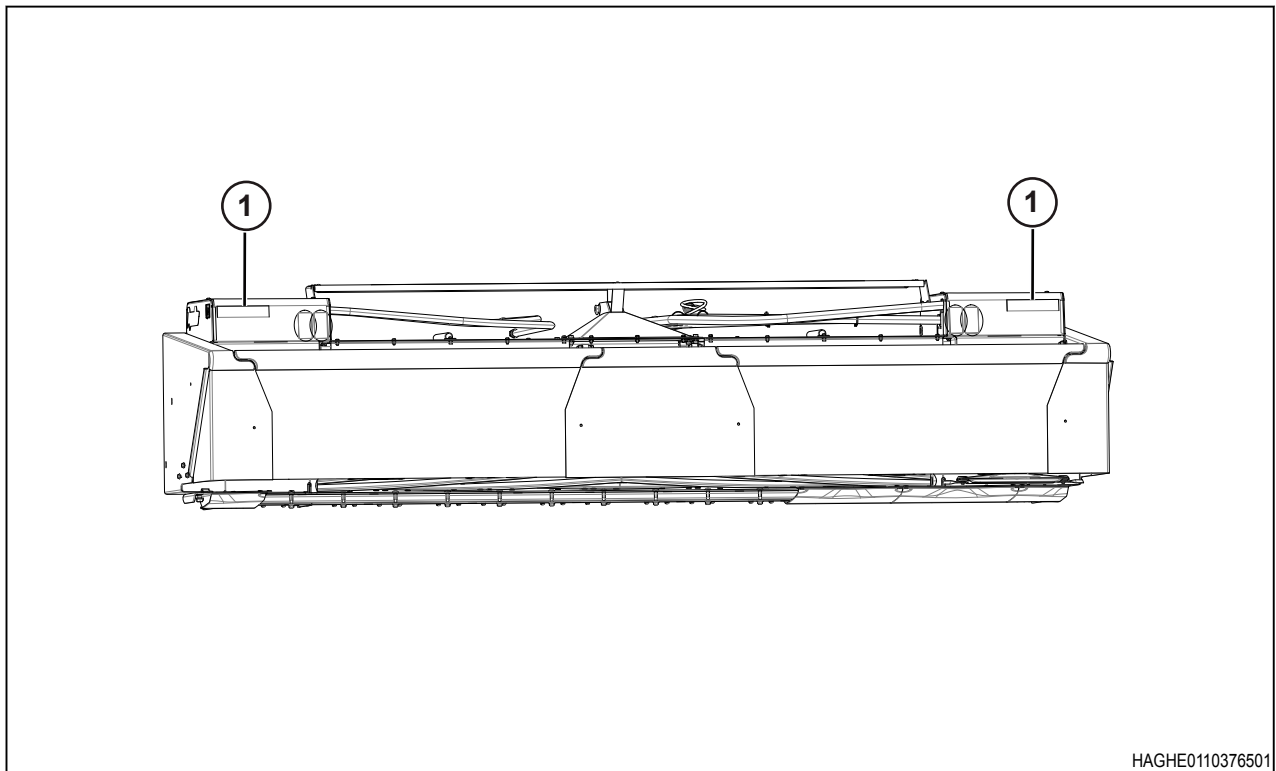

HAGHE0110376501

Fig. 5
(1) Yellow reflector

1.2.6 Cylinder stops

The windrower tractor does not have mechanical cylinder stops. The header down valve on the lift cylinder keeps the header from lowering.

1.2.7 Accumulator safety



DANGER:
An authorized dealer must charge or replace the accumulator.

The accumulator (1) is charged with dry nitrogen gas. Use only dry nitrogen when the accumulator is charged. Do not use air or oxygen or an explosion will occur.

Nitrogen gas, when released can cause freezing. Always wear protective gloves and glasses when around nitrogen.

Do not let the accumulator fall. A charged accumulator contains pressurized nitrogen. If the shut off valve breaks away from the accumulator, the nitrogen will make the accumulator move at a high rate of speed.

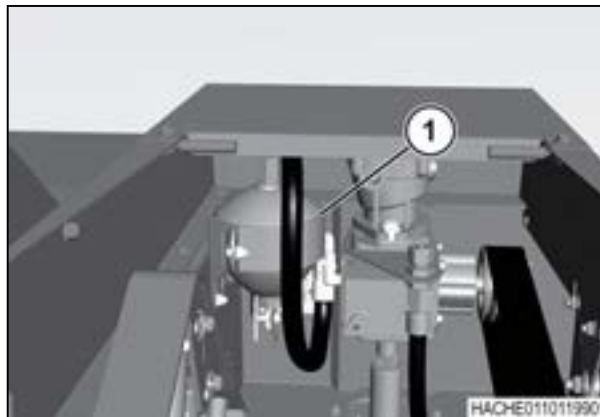


Fig. 6

1.2.8 A word to the technician

Read and understand the safety section in this service manual before operating or servicing the machine. Read and understand the safety sections in the manuals for all attachments before operating or servicing attachments. The technician has the key to safety. Good safety practices protect everyone.

Study the safety information in this service manual. Make the safety information a working part of the safety program. The safety information in this service manual applies specifically to this type of machine. Always do all other usual and customary safe working precautions. Remember - The technician has the responsibility for safety. Good safety practices can prevent serious injury or death.

The safety section points out some basic safety situations that can occur during the operation and maintenance of the machine. The safety section also suggests possible ways to deal with these situations. The safety section does not replace safety practices in other parts of this service manual.

Practice good safety to help prevent injury or death.

Learn how to operate the machine and how to use the controls correctly.



Fig. 7

Do not let other persons operate the machine without instruction and training.

Follow all safety precautions and instructions in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure the machine has the correct equipment needed by the local regulations.



WARNING:

An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines. If any attachments used on this equipment have a separate Operator Manual, see that manual for other important safety information.

1.2.9 The service manual

Read the table of contents and basic layout. Become familiar with all parts of this service manual. This service manual gives the technician very important information.

Machine movement when in normal use determines right-hand and left-hand.

This manual covers general safety practices for this machine.

The photos, illustrations, and data used in this manual were current at the time of printing. Inline production changes can make machines vary from the information in the service manual. The manufacturer reserves the right to redesign and change the machine as necessary without notification.



WARNING:

In some of the illustrations and photos used in this manual, shields or guards may have been removed for clarity. Never operate the machine with any shields or guards removed. If the removal of shields or guards is necessary to make a repair, they must be replaced before operation.

1.3 Operation

1.3.1 Prepare for operation

Read and understand the operating instructions and precautions in this manual before you operate or do servicing on the machine.

Make sure that you know and understand the positions and operations of all controls. Make sure that all controls are in neutral and the parking brake is applied before you start the machine.



WARNING:

If the engine is running and the parking brake is not applied, the machine will turn if the steering wheel is moved when the travel control lever is in neutral.

Make sure that all persons are a sufficient distance from your area of work before you start or operate the machine. Do checks on the controls and learn all controls in an area clear of persons and objects before you start work with the machine. Know the dimensions of the machine and have sufficient space available for operation. Do not operate the machine at high speeds around persons, buildings, other equipment, etc.

Always use correct procedures when you do tasks around and operate the machine. Do not let children or persons who do not know how to operate the machine operate the machine. Keep other persons away from your area of work. Do not let other persons ride on the machine.

Make sure that the machine is in the good mechanical condition. Make sure that the machine has the correct equipment as necessary by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability, and load characteristics of this equipment before you start.

1.3.2 General information

When parking, park the machine on a solid level surface and lower the header to the ground. Put all controls in neutral, and apply the parking brake. Stop the tractor engine and take the key with you.



WARNING:

Do not leave the machine unattended with the header raised. Lower the header fully before leaving the machine. A sudden loss of hydraulic pressure can cause the header to drop without warning.

Make sure the machine is in the proper operating condition according to the Operator Manual.

Always operate the machine with the control console turned on.

Do not dismount from moving machinery.

Stay off slopes too steep for operation.

Be aware of the size of the machine and have enough space available to allow for operation.

Stay off slopes too steep for operation. Keep the header as low as possible while going down hills. Never suddenly reverse the wheels to stop or back up.

Where possible avoid operating the machine near ditches, embankments, and holes. Reduce ground speed when operating on rough, slippery, or muddy surfaces and when turning or crossing slopes.

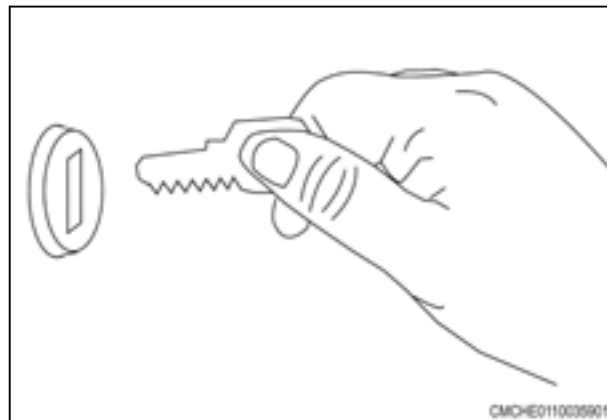


Fig. 8

Avoid contact with electrical power lines. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

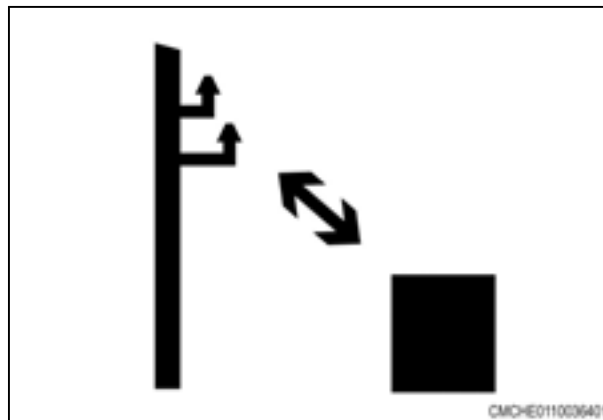


Fig. 9

1.3.3 Personal protective equipment

Put on all personal protective equipment (PPE) and protective clothes that are supplied to you or that are necessary for the conditions and by applicable laws. PPE includes equipment to prevent injury to your eyes, lungs, ears, head, hands and feet.

Always keep hands, feet, hair, and your clothes away from parts that move. Do not put on loose clothing, jewelry, watches, or other items that can tangle in parts that move. Tie up long hair that can also tangle in moving parts.

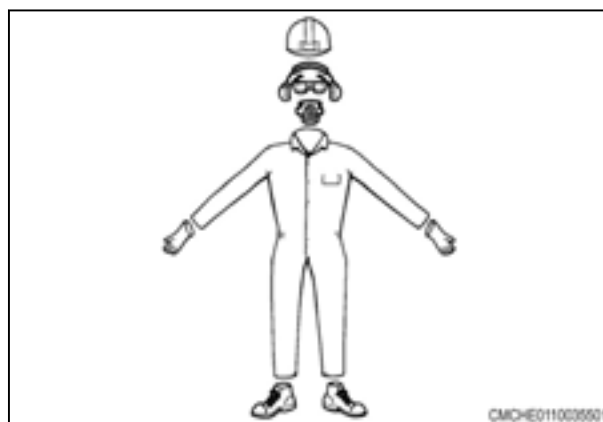


Fig. 10

1.3.4 Seat instructions

Put on the seat belt before you operate the machine. Always sit in the seat and have the seat belt on while you operate the machine. Replace the seat belts when they become worn or broken.

Do not use a seat belt loosely. Make sure that there is some tension on the seat belt. Do not wear the seat belt in a twisted condition or pinched between the structural parts of the seat.

Put on the seat belt if the instructional seat is used. Use the instructional seat only to train new operators or to find a problem. The instructional seat is only for short periods of use.

Do not let children use the instructional seat or be in the cab. Do not let other persons use the instructional seat or be in the cab.

Drive the machine at slower speed and on level ground when the instructional seat is used. Do not start, stop, or turn quickly when the instructional seat is used. Do not drive on highways or public roads when the instructional seat is used.

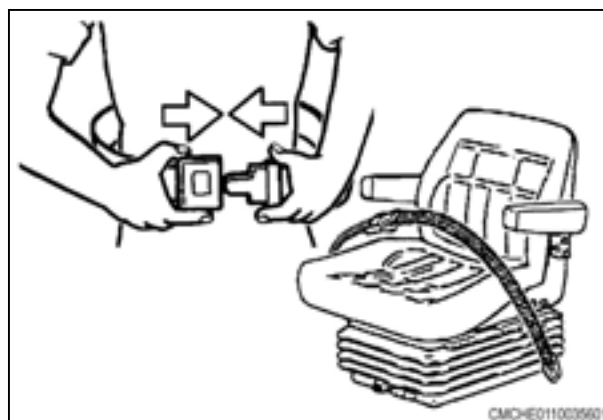


Fig. 11

1.3.5 Shield and guards

All shields and guards must be in the correct position and in good condition.

Do not open, remove, or put your hand behind shields while the engine is in operation. Belts and components that turn can cause entanglement, which can cause injury and death. Keep away from the components that turn.



Fig. 12

Do not operate the machine with the drive shaft shields open or removed. Entanglement in drive shafts that turn can cause injury or death. Keep away from the components that turn.

Make sure guards that turn are free.



Fig. 13

Do not make adjustments to the roll tension with the header engaged.

When you make adjustments to the roll pressure, stop the header. Lower the header to the ground and engage the parking brake. Set the engine to low idle.

1.3.6 Exhaust warning

Do not operate the engine in a closed building unless the exhaust is vented to the outside.

Do not tamper with or modify the exhaust system with unapproved extensions.

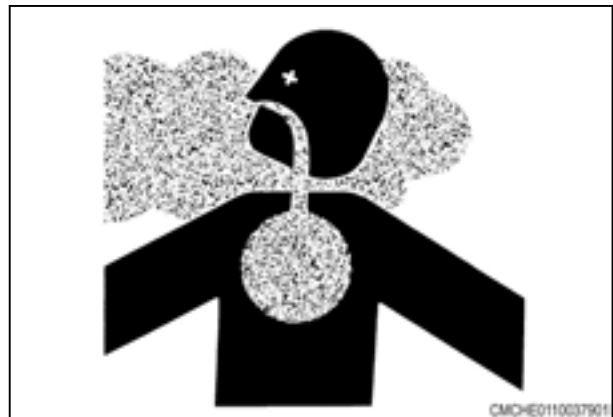


Fig. 14

1.3.7 Flying debris



WARNING:

Be careful when you operate along the side of a road or structures. Rocks and other materials can be thrown from the machine during operation and can cause injury. If there are rocks and unwanted objects in a field, tilt the header up. This will lift the knives and reduce other materials thrown by the knives.

Stay away from the machine during operation. Some materials can be thrown from the machine during operation and cause injury.



Fig. 15

1.3.8 Handrails

Point your body in the direction of the ladder and use the handrails when you are on the machine ladders.



Fig. 16

1.3.9 Agricultural chemicals

Agricultural chemicals are very dangerous. Incorrect procedures with fertilizer, fungicides, herbicides, insecticides and pesticides can cause injuries to plants, animals, soil and other persons property.

Always read and follow all manufacturers instructions before you open chemical containers.

Read and follow instructions each time you use a chemical.

Use the same precautions when you do adjustments, do servicing, clean or store the machine as used when you put chemicals into the hoppers or tanks.

Tell all persons who are near chemicals of the possible dangerous results and the safety precautions that are necessary.

Stay upwind and away from smoke from a chemical fire.

Keep or discard all chemicals that are not used as specified by the chemical manufacturer.

1.3.10 Travel on public roads

Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you travel on public roads.

Use good judgment when traveling on public roads. Maintain complete control of the machine at all times. Never coast down hills.

The maximum speed of farm equipment is governed by local regulations. Adjust travel speed to maintain control at all times. See the specifications for the maximum speed for this machine.

Familiarize yourself with and obey all road regulations that apply to your machine. Consult your local law enforcement agency for local regulations regarding movement of farm equipment on public roads. Use head lamps, flashing warning lamps, tail lamps and turn signals, day and night, unless prohibited by local law.

Make sure all the flashers are operating prior to driving on the road. Make sure reflectors are correctly installed, in good condition, and wiped clean. Make sure the Slow Moving Vehicle (SMV) emblem is clean, visible, and correctly mounted on the rear of the machine.

Always travel with the header as low as possible.

Be aware of other traffic on the road. Keep well over to your own side of the road and pull over, whenever possible, to let faster traffic pass.

Be aware of the overall width, length, height, and weight of the machine. Be careful when transporting the machine on narrow roads and across narrow bridges.

Watch for overhead wires and other obstructions. Avoid contact with electrical power lines. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

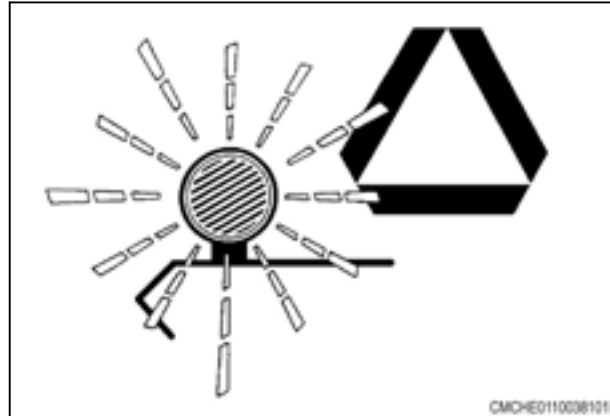


Fig. 17

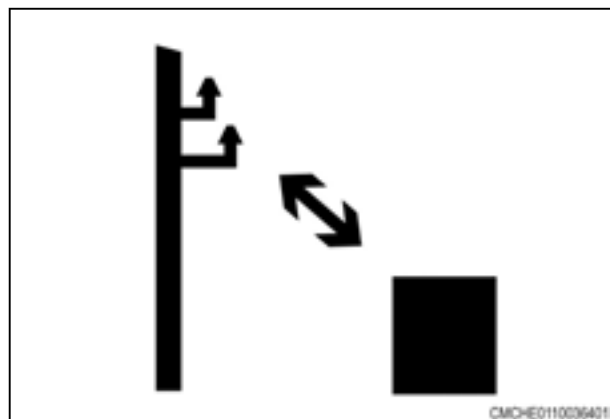


Fig. 18

1.4 Maintenance

1.4.1 General maintenance information

Before you do maintenance, lubricate, do servicing, clean, or make adjustments:

- Park the machine on a solid, level surface.
- Make sure that all the controls are in the neutral position and apply the parking brake.
- Make sure that the machine and the attachments are lowered to the ground.
- Stop the engine and take the key with you.
- Look and Listen! Make sure that all parts that move are stopped.
- Put chocks in front of and behind the wheels of the machine before you do work on or below the machine.

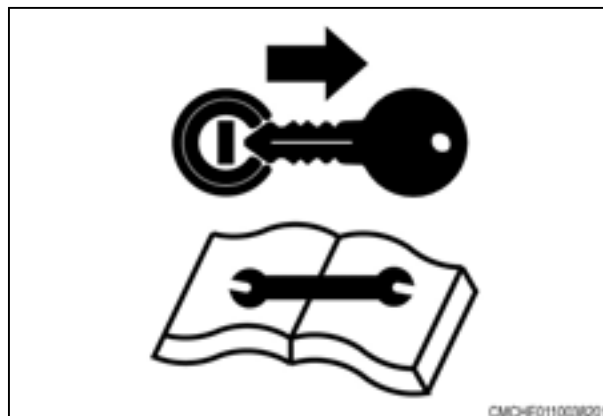


Fig. 19

After you do work on the machine, remove all tools from the machine.

Make sure that electrical connectors are clean before you connect them.

Do a check for loose, broken, missing, or damaged parts. Make sure that the machine is in good repair. Make sure that all guards and shields are in position.

Do not do the servicing, examine or adjust chains or belts while the engine is in operation.



Fig. 20

Do not operate the machine with the drive shaft shields open or removed. Entanglement in drive shafts that turn can cause injury or death.

Stay clear of components that turn.

Make sure that guards that turn can turn freely.

A loose yoke can come off a shaft and result in injury to persons or damage to the machine.

When you install a quick disconnect yoke, the spring activated locking pins must move freely and be in the groove on the shaft. Pull on the driveline to make sure that the quick disconnect yoke can not be pulled off the shaft.



Fig. 21

Remove spilled oil, antifreeze or fuel immediately from the steps, platform, and other access areas.

Keep all access areas clean of unwanted materials.



Fig. 22

When you do work on the machine, make sure that the header is lowered.

When it is necessary for the header to be in the up position, lift the header to the full up position, stop the engine, and take the key with you.

The header down valve on the windrower lift cylinder keeps the header from lowering.

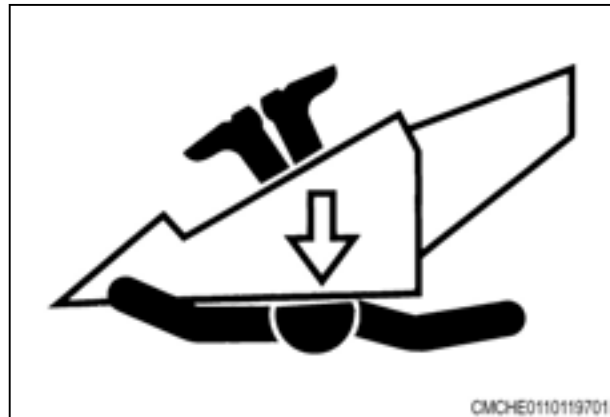



Fig. 23


1.4.2 Bolt torque values

All bolts used on this machine are grade 5 bolts unless specified. Always replace with grade 5 hardware except where higher grades are specified. All grade 5 bolts have three radial marks on the bolt head. Tighten all hardware according to the following charts unless specified differently in the manual.


SIZE	SUGGESTED ASSEMBLY TORQUE VALUES (STANDARD HARDWARE)											
	SAE GRADE 2 ASSEMBLY TORQUE				SAE GRADE 5 ASSEMBLY TORQUE				SAE GRADE 8 ASSEMBLY TORQUE			
	DRY		LUBE		DRY		LUBE		DRY		LUBE	
	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m
5/16"-18	11	15	8	11	17	23	13	18	25	34	18	24
5/16"-24	12	16	9	12	19	26	14	19	25	34	20	27
3/8"-16	20	27	15	20	30	41	23	31	45	61	35	47
3/8"-24	23	31	17	23	35	47	25	34	50	68	35	47
7/16"-14	30	41	24	33	50	68	35	47	70	95	55	75
7/16"-20	35	47	25	34	55	75	40	54	80	108	60	81
1/2"-13	50	68	35	47	75	102	55	75	110	140	80	108
1/2"-20	55	75	40	54	90	122	65	88	120	163	90	122
9/16"-12	65	88	50	68	110	149	80	108	150	203	110	149
9/16"-18	75	102	55	75	120	163	90	122	170	230	130	176
5/8"-11	90	122	70	95	150	203	110	149	220	298	170	230
5/8"-18	100	136	80	108	180	244	130	176	240	325	180	244
3/4"-10	160	217	120	163	260	353	200	271	380	515	280	380
3/4"-16	180	244	140	190	300	407	220	298	420	569	320	434
7/8"-9	140	190	110	149	400	542	300	407	600	813	460	624
7/8"-14	155	210	120	163	440	597	320	434	660	895	500	678
1"-8	220	298	160	217	580	786	440	597	900	1220	680	922
1"-12	240	325	170	230	640	868	480	651	1000	1356	740	1003
1-1/8"-7	300	407	220	298	800	1085	600	813	1280	1735	960	1302
1-1/8"-12	340	461	260	353	880	1193	660	895	1440	1952	1080	1464
1-1/4"-7	420	569	320	434	1120	1519	840	1139	1820	2468	1360	1844
1-1/4"-12	460	624	360	488	1240	1681	920	1247	2000	2712	1500	2034
1-3/8"-6	560	759	420	569	1460	1979	1100	1491	2380	3227	1780	2413
1-3/8"-12	640	868	460	624	1680	2278	1260	1708	2720	3688	2040	2766
1-1/2"-6	740	1003	560	759	1940	2630	1460	1979	3160	4284	2360	3200
1-1/2"-12	840	1139	620	841	2200	2988	1640	2224	3560	4827	2660	3606



GRADE 2
NO MARKS



GRADE 5
3 MARKS



GRADES 8
6 MARKS

HADHE0110351701

Fig. 24

SUGGESTED ASSEMBLY TORQUE VALUES (METRIC HARDWARE)												
SIZE	GRADE 8.8 ASSEMBLY TORQUE				GRADE 10.9 ASSEMBLY TORQUE				GRADE 12.9 ASSEMBLY TORQUE			
	DRY		LUBE		DRY		LUBE		DRY		LUBE	
	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m	Ft.-Lb.	N.m
M4	2	3	2	3	3	4	3	4	4	5	3	4
M5	4	5	4	5	6	8	5	7	7	9	6	8
M6	7	9	6	8	10	13	9	12	12	16	10	14
M8x1.25	16	22	15	21	23	31	21	29	28	38	26	35
M8x1	18	24	16	22	25	34	23	31	30	40	27	37
M10x1.5	32	44	30	40	45	61	42	57	55	74	50	68
M10x1.25	34	46	32	43	48	65	44	60	58	78	53	72
M10x1	37	50	34	46	52	70	47	64	62	84	57	77
M12x1.75	56	76	52	70	78	106	73	99	94	127	87	118
M12x1.5	58	79	55	74	82	111	76	103	98	133	91	124
M12x1.25	60	82	56	76	86	116	79	107	103	139	94	128
M14x2	88	120	82	111	124	168	116	157	149	202	139	188
M14x1.5	96	130	89	120	135	183	125	169	162	219	150	203
M16x2	138	187	128	173	193	262	179	243	232	314	215	291
M16x1.5	146	198	135	183	205	278	190	257	246	333	227	308
M18	190	258	176	239	267	362	248	336	319	433	297	402
M18x2	201	272	186	252	282	382	261	354	338	458	313	424
M18x1.5	212	287	195	264	297	403	274	372	356	483	328	445
M20x2.5	267	362	248	336	375	509	348	472	450	610	417	566
M20x2	281	381	260	352	395	535	364	494	473	641	437	592
M20x1.5	295	400	271	368	415	562	381	517	496	673	457	620
M22	363	492	336	456	510	691	472	640	611	828	565	766
M22x2	380	515	350	475	534	724	493	668	639	866	590	800
M22x1.5	396	537	364	494	557	755	512	694	667	904	613	831
M24x3	461	625	427	579	648	878	600	814	775	1051	719	975
M24x2	499	677	460	624	701	951	646	876	840	1139	774	1049
M24x1.5	519	704	476	646	729	989	670	908	873	1184	802	1088
M27	674	915	624	846	948	1285	877	1189	1135	1539	1050	1424
M27x2	726	984	668	905	1019	1382	937	1271	1221	1655	1123	1522
M30	918	1244	850	1152	1289	1748	1194	1619	1544	2094	1430	1939
M30x2	1009	1368	927	1257	1418	1922	1303	1766	1698	2302	1561	2116

HADHE0110351801

Fig. 25

1.4.3 Fire prevention and first aid

Be prepared for emergencies.

Keep a first aid kit available for use on small cuts and scratches.

Keep one or more fire extinguishers of the correct type. Examine fire extinguishers regularly as stated by the manufacturer. Make sure that the fire extinguishers are charged and in operating condition.

Crop material is flammable, there is a risk of fire. Use a water type fire extinguisher or other water source for a fire in crop.

For fires in material other than crop, such as oil or electrical components, use a dry chemical fire extinguisher with an ABC rating.

Keep fire extinguishers easy to access where fires can occur.

Frequently remove crop material from the machine and examine for components that are too hot. Do checks on the machine each day for noises that are not usual. Unusual noises can indicate a worn out component that can cause too much heat.

If flame cutting, welding, arc welding, or grinding is to be done on the machine or attachments, clear crop material and unwanted material from around the area. Make sure that the area below the work area is clear of flammable material because falling molten metal and sparks can cause ignition in the material.

If fire occurs, move upwind and away from the smoke from the fire.



Fig. 26



Fig. 27

1.4.4 High pressure leaks

Fluid that leaks from the hydraulic system or the fuel injection system is high pressure and is not easily seen. The fluid can go into the skin causing injury.

Fluid that is injected into the skin must be surgically removed immediately. If not removed immediately, infection and reaction can occur. Go immediately to a physician who knows about this type of injury.



Fig. 28

Use a piece of cardboard or wood to look for possible leaks. Do not use your bare hand. Wear leather gloves for hand protection and safety goggles for eye protection.

Remove all pressure before you loosen hydraulic lines. Lower equipment in the up position, close the accumulator valve, and stop the engine. Tighten all connections before applying pressure.

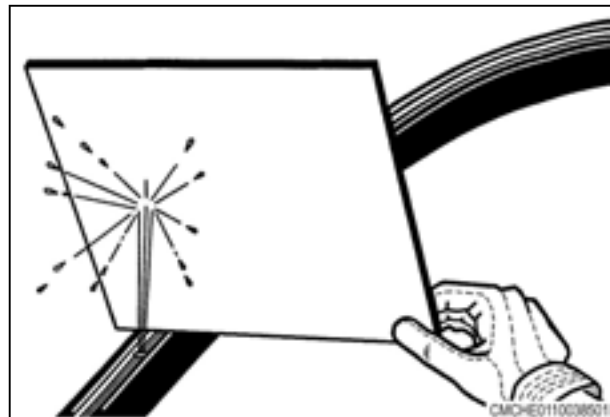


Fig. 29

1.4.5 Tire safety

Examine tires for cuts, bulges, and correct pressure. Replace worn or damaged tires. When tire service is needed, have a qualified tire mechanic service the tire. Tire changing can be very hazardous and must be done by qualified tire mechanic using proper tools and equipment. See the Specifications Section for the correct tire size.

Tire explosion and/or serious injury can result from over inflation. Do not exceed the tire inflation pressures. See the Specifications Section for the correct tire pressure.

Do not inflate a tire that is seriously under inflated or has been run flat. Have the tire examined by qualified tire mechanic.

Do not weld on the rim when a tire is installed. Welding will make an air/gas mixture that can cause an explosion and burn with high temperatures. This hazard applies to all tires, inflated or deflated. Removing air or breaking the bead is not enough. The tire must be completely removed from the rim prior to welding.



Fig. 30

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com