

620F, 622F, 625F, 630F, and 635F Cutting Platforms (Export Edition)

(Serial No. 815001 -)



JOHN DEERE

OPERATOR'S MANUAL

620F, 622F, 625F, 630F, and 635F
Cutting Platforms

OMHXE161169 ISSUE H0 (ENGLISH)



John Deere Harvester Works
Export Edition
PRINTED IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction the implement will travel when going forward.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

DX,IFC2A-19-03APR09


A Message to Our Customers

We appreciate the confidence placed in us by the purchase of this machine. To ensure that the machine performs at the highest level, countless hours were spent designing and testing, before this machine was produced. To achieve the maximum performance, it is

imperative that this machine is operated in accordance with the procedures outlined in this manual.


Information in this manual is divided into sections. The section names are identified in the table of contents and at the top of each page. Each section has a unique number and page count. Specific information within each section is organized into topics identified with bold headings.

The topic headings are listed in the table of contents with the section number and page number where the topic begins. Topics and information related to each topic are also referenced in the index along with the section and page number.

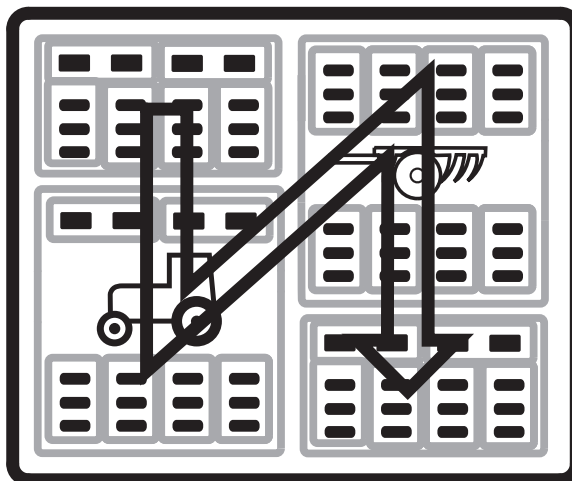

A100767—UN—07JUN18

The topic content flows down the left-hand side, then over and down the right-hand side, and repeats on the next page. Images precede the related text in the flow.

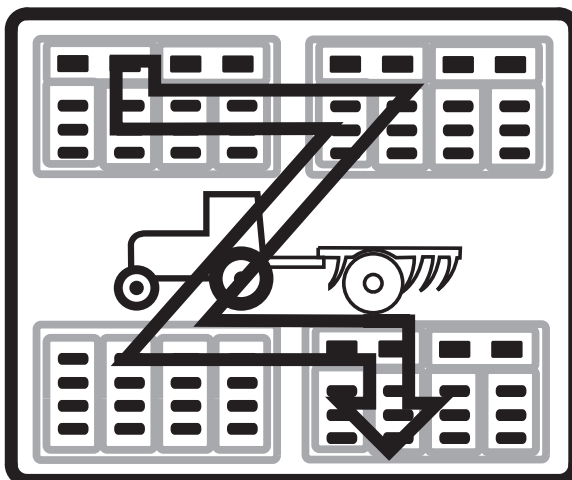

A100768—UN—07JUN18


The flow can divide both before and after the images and tables that span the width of a page.

Review this manual often to learn where to look for information.

Thanks again for purchasing this machine.

OUC6075,00049D4-19-08JUN18

Identification View

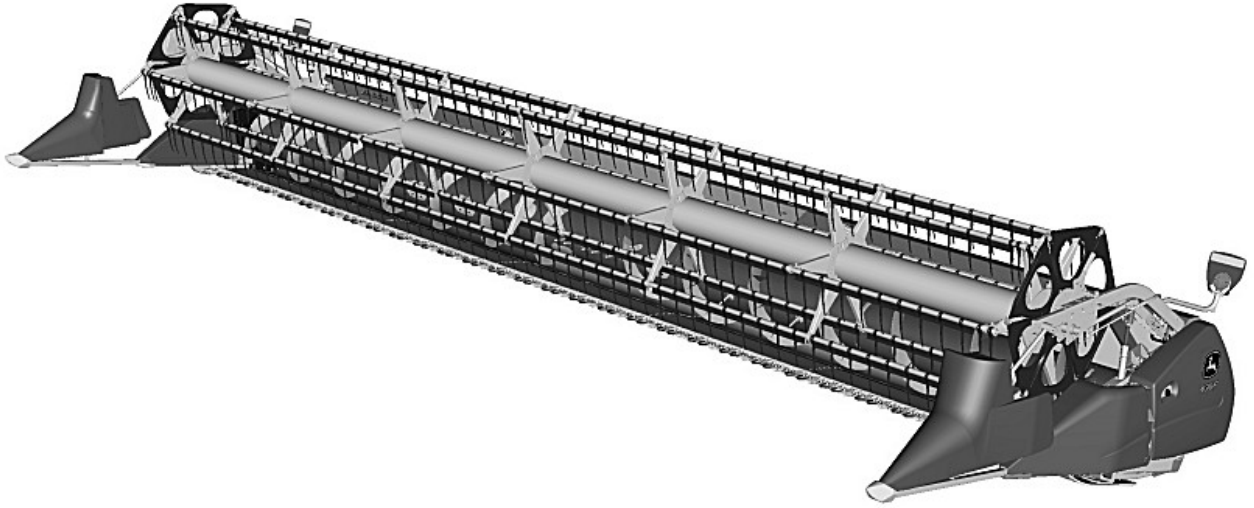

H107873—UN—16MAY13
SS43267,0000300-19-01NOV13

Contents

	Page		Page
Safety Features		Attaching Header to Feeder House	25-1
Header Safety Features	05-1	Detaching Header from Feeder House	25-4
Safety		Calibration and Settings	
Recognize Safety Information	10-1	When to Calibrate	30-1
Understand Signal Words	10-1	Calibration Error Codes	30-1
Follow Safety Instructions	10-1	Calibration Procedures	30-1
French and Spanish Safety Signs and Operator's Manual	10-1	Adjusting Feeder House Drop Rate and Sensitivity	30-1
Ballasting for Safe Ground Contact	10-2	Operating the Platform	
Parking and Leaving the Machine	10-2	Cutting Platform Operation	35-1
Prepare for Emergencies	10-2	Setting Backshaft Speed	35-1
Wear Protective Clothing	10-2	Armrest Functions	35-1
Stay Clear of Harvesting Units	10-3	Active Header Control Display—Features	35-2
Keep Hands Away From Knives	10-3	Description of Automatic Header Height Control Systems	35-2
Use Safety Lights and Devices	10-3	Operating HydraFlex™ Pressure—Flex Platforms	35-3
Transport Combine With Header Safely	10-3	Header Height Sensing – HYDRAFLEX Heads with Auxiliary Sensors	35-3
Road Transport Disconnect Switch	10-4	Operating Flex Platform in Rigid Mode	35-4
Practice Safe Maintenance	10-4	Auxiliary Sensor Arm Operating Positions	35-5
Remove Paint Before Welding or Heating	10-5	HydraFlex™ Pressure Manual Adjust Switch	35-6
Avoid Heating Near Pressurized Fluid Lines	10-5	Position Warning Lights for Field Operation	35-6
Avoid Contact With Moving Parts	10-5	Harvesting Soybeans—Flex Platforms	35-6
Stay Clear of Cutterbar When Rotating Auger	10-5	Harvesting Sorghum and Sunflowers in Dry Ground Conditions	35-6
Stay Clear of Rotating Drivelines	10-6	Harvesting Oats, Sorghum and Wheat in Damp or in Wet/Weedy Conditions (All Platforms)	35-6
Guards and Shields	10-6	Attachments and Options	
Avoid High-Pressure Fluids	10-6	Auger Flight Extensions (Attachment)	40-1
Service Accumulator Systems Safely	10-6	Auger Speed Increase or Decrease (Attachment)	40-1
Service Machines Safely	10-7	Attachment and Options	
Service Drive Belts Safely	10-7	Stubble Light	40-1
Protect Against High Pressure Spray	10-7	Spare Knife Storage (Optional)	40-1
Decommissioning — Proper Recycling and Disposal of Fluids and Components	10-7	Fine Serrated Knife (Optional)	40-2
Support Machine Properly	10-8	Knife Assemblies with Long-Short Sections (Optional)	40-2
Store Attachments Safely	10-8	Knife Drive Sheaves (Attachment)	40-2
Safety Signs		Reel Position Resume (Attachment)	40-2
Pictorial Safety Signs	15-1	Short Dividers (Attachment)	40-2
Replace Safety Signs	15-1	Low Stone Dam (Attachment or Option)	40-2
Operator's Manual	15-1	High Stone Dam (Attachment or Option)	40-2
Safety Stop	15-1	Raised Height Skid Shoes (Optional)	40-3
Header Entanglement	15-1	Adjustments — Flex Platform	
Cutterbar Movement	15-2	Bleeding HydraFlex™ System	45-1
Rotating Driveline	15-2		
Shields on Cutting Platform Drives	15-2		
Hydraulic Oil and Gas Under Pressure	15-2		
Transporting			
Transporting on Trailer	20-1		
Transporting on Combine	20-1		
Attaching and Detaching			
Rear Auger Stripper Extension Location	25-1		

Continued on next page


Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Contents

	Page		Page
Standard Perma-Glide Divider and Divider Point	45-2	Storage	
Height Adjustment of Perma-Glide Divider Assembly	45-2	End of Season Service	80-1
Side-to-Side Adjustment of Perma-Glide Divider Assembly	45-2	Beginning of Season Service	80-1
Adjustments — Auger and Stripper		Specifications	
Remove Knife Drive Belt From Drive Sheave	50-1	Specifications	85-1
Adjusting Auger Position	50-1	Dimensions/Weights	85-1
Adjusting Auger Height	50-2	EU Declaration of Conformity	85-1
Adjusting Auger Fore/Aft	50-3	Eurasian Economic Union	85-2
Adjusting Center Auger Finger Timing	50-3	Machine Design Life	85-2
Adjusting Rear Stripper	50-4	Unified Inch Bolt and Screw Torque Values	85-3
Adjusting Floor Stripper	50-5	Metric Bolt and Screw Torque Values	85-4
Adjusting Auger Chain	50-5	Identification Numbers	
Adjustments — Reel		Identification Numbers	90-1
Adjust Reel Fingers	55-1	Identification Plate	90-1
Adjusting Minimum Reel Height and Leveling Reel	55-1	Identification Plate Location	90-1
Adjusting Reel Fore/Aft and Lift Cylinders	55-2	Keep Proof of Ownership	90-1
Rephasing Reel Fore/Aft Cylinders	55-2	Keep Machines Secure	90-2
Rephasing Reel Lift Cylinders	55-2		
Bleeding the Reel Lift Cylinder System	55-2		
Adjusting Dial-A-Speed™ Reel Speed Ratio	55-3		
Adjusting Reel Speed Ratio Sensor	55-3		
Adjusting Reel Drive Gear	55-4		
Lubrication			
Grease	60-1		
Lubricant Storage	60-1		
Alternative and Synthetic Lubricants	60-1		
Mixing of Lubricants	60-1		
Lubrication and Maintenance			
Lubrication and Maintenance			
Care and Maintenance of belts	65-1		
Lubrication Interval Chart	65-1		
Every 50 Hours of Operation	65-1		
Every 200 Hours of Operation	65-2		
Every 400 Hours of Operation	65-2		
Service			
Hydraulic Cylinder Safety Stop	70-1		
Safe Cutting Platform Operation	70-1		
Reel Safety Stops	70-2		
Opening and Closing Right and Left-Hand Shields	70-2		
Remove and Install Knife Drive Belt	70-2		
Adjusting Knife Drive Belt Tension	70-3		
Replacing Cutterbar Knife	70-3		
Knife and Knife Drive Alignment	70-5		
Knife Hold-Down Clearance	70-7		
Replacing Knife Sections	70-7		
Replacing Auger Fingers and Retainers	70-8		
Stubble Light Bulb Replacement	70-9		
Header Warning Light Bulb Replacement	70-9		
Troubleshooting			
Cutting Platform	75-1		
Active Header Control	75-3		

Safety Features

Header Safety Features

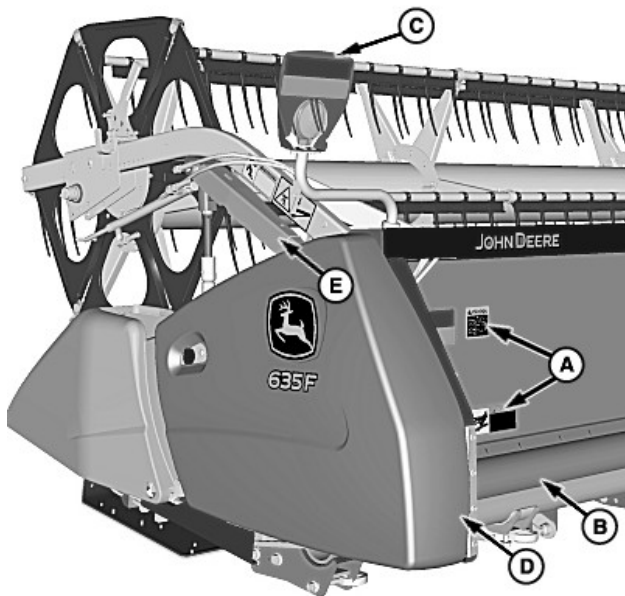

H94062—UN—19MAY09

- A—Safety Decals
- B—Drive Shaft Shield
- C—Warning Light
- D—Side Shield
- E—Cylinder Safety Stop (Reel Arms)

In addition to the safety features shown here, safety signs on the platform, and the safety messages and instructions in the operators manual contribute to the safe operation of this platform when combined with the care and concern of a capable operator.

SS43267,000011E-19-14SEP12

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

French and Spanish Safety Signs and Operator's Manual




TS201—UN—15APR13

French and Spanish versions of the operator's manual and safety signs are available for this machine through authorized John Deere dealers. See your John Deere dealer.

OOU6075,0004A7E-19-12DEC18

Ballasting for Safe Ground Contact

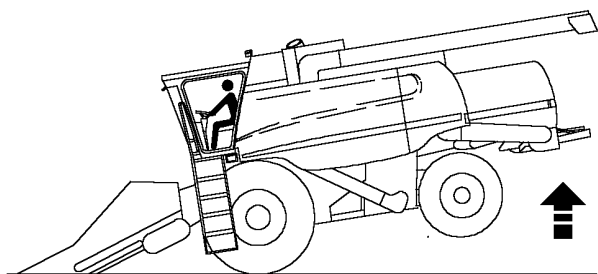

H51907—UN—10FEB99


Operating, steering and braking performance of combine can be considerably affected by heavy front end attachments which alter the center of gravity of the combine.

To maintain the necessary ground contact, ballast the combine at the rear end as necessary.

Observe the maximum permissible axle loads and total weights.

HX,AG,SF6782-19-05FEB99

Prepare for Emergencies

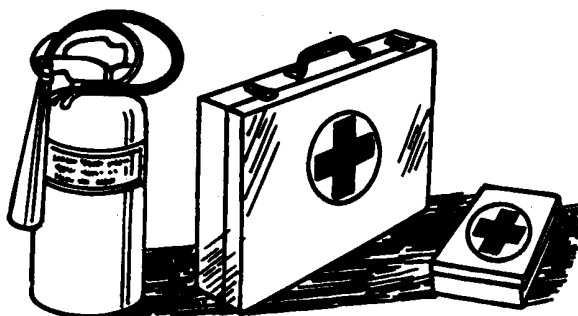

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Parking and Leaving the Machine

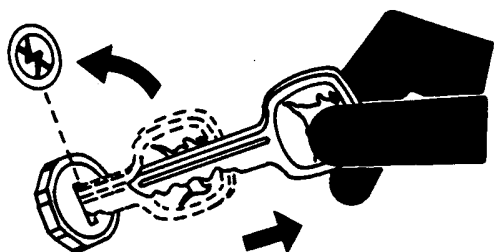

TS230—UN—24MAY89

Lower harvesting unit to the ground.


Before leaving machine, disengage harvesting unit and separator. Move multi-function lever to neutral position and shut OFF machine. Apply parking brake, remove key, and lock the operator's cab.

Never leave machine unattended as long as engine is running.

Never leave the operator's cab when driving.

OOU6075,0000AEB-19-11FEB14

Wear Protective Clothing

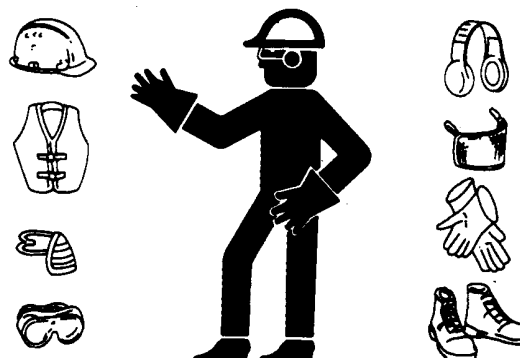

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR2-19-03MAR93

Stay Clear of Harvesting Units



ES118704—UN—21MAR95

Cutterbar, auger, reel and feed rolls cannot be completely shielded due to their function. Stay clear of these moving elements during operation. Always disengage main clutch, shut off engine, set parking brake and remove key before servicing or unlogging machine.

OOU6075,00009E5-19-28SEP10

Keep Hands Away From Knives




TS254—UN—23AUG88

Never attempt to clear obstructions in front of or on header unless separator is disengaged, parking brake is set, engine is shut off and key is removed.

Everyone must be clear of machine before starting engine.

OOU6075,00009E6-19-28SEP10

Use Safety Lights and Devices

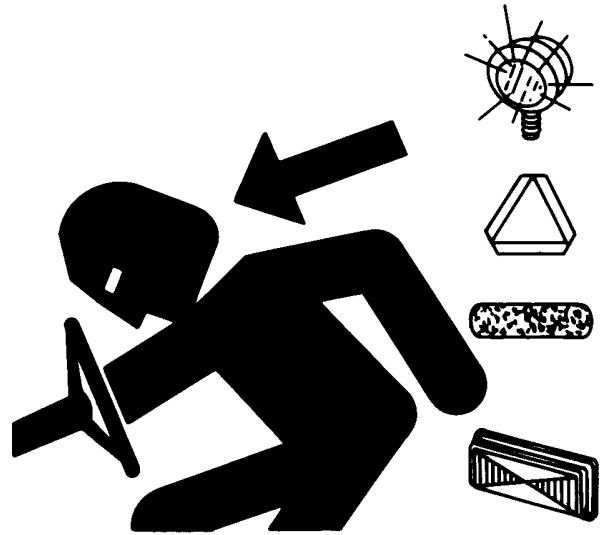


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX.FLASH-19-07JUL99

Transport Combine With Header Safely

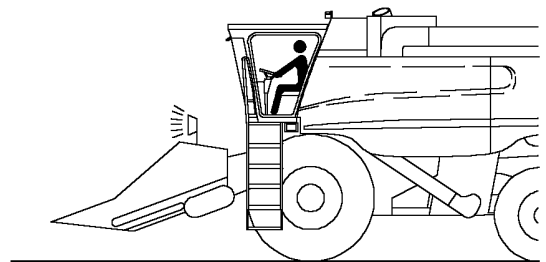

H51909—UN—07MAY99

Whenever possible avoid transporting on public roadways with the header attached.

If the combine must be transported with the header attached, make sure that the flashing warning lights on the header are operating and the reflective material is clean and visible.

The use of a spotter or pilot vehicle is recommended on busy, narrow or hilly roads and when crossing bridges.

Drive at a speed that is safe for conditions.

OUO6075.0000034-19-22JAN01

Practice Safe Maintenance

Road Transport Disconnect Switch



H121089—UN—15MAR17
Road Transport
Disconnect (Style A)



H117022—UN—28MAR16
Road Transport
Disconnect (Style B)

Road transport disconnect switch must be in road position when transporting machine on roadway.

When road transport disconnect switch is pressed, indicator light turns ON indicating switch is in road position. Road transport disconnect switch prevents the following functions:

- Header Height Resume
- Header Height Sensing
- Lateral Tilt
- Reel Raise/Lower and Reel Fore/Aft
- Unloading Auger
- Auger Swing
- Power Folding Auger (If Equipped)
- Separator Engage
- Header Engage
- Header Raise/Lower

After transporting machine on roadway and field operation is desired, press road transport disconnect switch for **two seconds**, allowing indicator light to turn OFF and allowing desired switch functions to operate again.

AZ06166.000018B-19-04APR17



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com