

6403 and 6603 Tractors

(Serial No. 0040000 -)



JOHN DEERE

OPERATOR'S MANUAL

6403 and 6603 Tractors

OMSU65875 ISSUE C2 (ENGLISH)

John Deere Mexico

Export Edition
PRINTED IN U.S.A.



Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing in the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

WARRANTY is provided as part of John Deere's support program for customers who operate and maintain their equipment as described in this manual. The warranty is explained on the warranty certificate or statement which you should have received from your dealer.

This warranty provides you the assurance that John Deere will back its products where defects appear within the warranty period. In some circumstances, John Deere also provides field improvements, often without charge to the customer, even if the product is out of warranty. Should the equipment be abused, or modified to change its performance beyond the original factory specifications, the warranty will become void and field improvements may be denied. Setting fuel delivery above specifications or otherwise overpowering machines will result in such action.

THE TIRE MANUFACTURER'S warranty supplied with your machine may not apply outside the U.S.

If you are not the original owner of this machine, it is in your interest to contact your local John Deere dealer to inform them of this unit's serial number. This will help John Deere notify you of any issues or product improvements.

DX,IFC1-19-03APR09

with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance

Contents

| | Page | | Page |
|--|--------|---|--------|
| General Information | | Service Cooling System Safely | 00A-16 |
| Product View | 00-1 | Service Accumulator Systems Safely | 00A-16 |
| Trademarks | 00-3 | Service Tires Safely | 00A-17 |
| Glossary of Terms | 00-3 | Service Front-Wheel Drive Tractor Safely | 00A-17 |
| Regions and Country Versions | 00-5 | Tightening Wheel Retaining Bolts/Nuts | 00A-17 |
| Machine Overview | 00-6 | Avoid High-Pressure Fluids | 00A-17 |
| | | Do Not Open High-Pressure Fuel System | 00A-18 |
| Safety Precautions | | Store Attachments Safely | 00A-18 |
| Recognize Safety Information | 00A-1 | Decommissioning — Proper Recycling and Disposal of Fluids and Components | 00A-18 |
| Understand Signal Words | 00A-1 | | |
| Follow Safety Instructions | 00A-1 | Safety Signs | |
| Prepare for Emergencies | 00A-1 | Replace Safety Signs | 00B-1 |
| Wear Protective Clothing | 00A-2 | Operator's Manual Safety Sign | 00B-1 |
| Protect Against Noise | 00A-2 | Riders Safety Sign | 00B-1 |
| Handle Fuel Safely—Avoid Fires | 00A-2 | ROPS in Normal Position Safety Sign | 00B-2 |
| Handle Starting Fluid Safely | 00A-2 | Use Seat Belt Safety Sign | 00B-2 |
| Fire Prevention | 00A-3 | | |
| In Case of Fire | 00A-3 | Controls and Instruments | |
| Avoid Static Electricity Risk When Refueling | 00A-4 | Front Console Controls | 10-1 |
| Keep ROPS Installed Properly | 00A-4 | Right-Hand Console Controls | 10-2 |
| Use Foldable ROPS and Seat Belt Properly | 00A-4 | Left-Hand Console Controls | 10-4 |
| Stay Clear of Rotating Drivelines | 00A-5 | Instrument Cluster | 10-5 |
| Use Steps and Handholds Correctly | 00A-5 | | |
| Read Operator's Manuals for ISOBUS Controllers | 00A-6 | Engine Operation | |
| Use Seat Belt Properly | 00A-6 | Before Starting the Engine | 20-1 |
| Operating the Tractor Safely | 00A-6 | Operate Key Switch | 20-1 |
| Avoid Backover Accidents | 00A-7 | Start the Engine | 20-2 |
| Limited Use in Forestry Operation | 00A-7 | Check Engine Indicator and Gauges | 20-3 |
| Operating the Loader Tractor Safely | 00A-8 | Cold Weather Start | 20-4 |
| Keep Riders Off Machine | 00A-8 | Change Engine Speed | 20-4 |
| Instructional Seat | 00A-8 | Recommended Engine Speeds and Operational Procedures | 20-5 |
| Use Safety Lights and Devices | 00A-9 | Stop the Engine | 20-5 |
| Transport Towed Equipment at Safe Speeds | 00A-9 | | |
| Use Caution on Slopes, Uneven Terrain, and Rough Ground | 00A-10 | Air Intake, Fuel, Coolant, and Exhaust Operation | |
| Freeing a Mired Machine | 00A-10 | Fill Fuel Tank | 30-1 |
| Avoid Contact with Agricultural Chemicals | 00A-11 | | |
| Handle Agricultural Chemicals Safely | 00A-11 | Electrical and Lighting Operation | |
| Handling Batteries Safely | 00A-12 | Use a Booster Battery or Charger | 40-1 |
| Avoid Heating Near Pressurized Fluid Lines | 00A-12 | Light Switch | 40-1 |
| Remove Paint Before Welding or Heating | 00A-13 | Use Headlights | 40-2 |
| Handle Electronic Components and Brackets Safely | 00A-13 | High Beam Indicator | 40-2 |
| Practice Safe Maintenance | 00A-13 | Use Work Lights—OOS | 40-2 |
| Avoid Hot Exhaust | 00A-14 | Use Work Lights—Cab | 40-3 |
| Clean Exhaust Filter Safely | 00A-14 | Use Tail Lights—OOS | 40-4 |
| Work in Ventilated Area | 00A-15 | Use Tail Lights—Cab | 40-4 |
| Support Machine Properly | 00A-15 | Use Warning Lights—OOS | 40-5 |
| Prevent Machine Runaway | 00A-15 | Use Warning Lights—Cab | 40-6 |
| Park Machine Safely | 00A-16 | Use Turn Signals—OOS | 40-6 |
| Transport Tractor Safely | 00A-16 | | |

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

Contents

| | Page | | Page |
|---|-------|---|-------|
| Use Turn Signals—Cab | 40-7 | Loader Joystick Functions | 70B-4 |
| Route the Cables | 40-8 | Match Tractor Power to Implement | 70B-5 |
| Use Dome Light | 40-8 | | |
| Seven-Pin Connector | 40-8 | | |
| Accessory Electrical Outlet | 40-9 | | |
| Drivetrain Operation | | | |
| Gear Selection | 50-1 | | |
| Transmission Operation | | | |
| Operate Transmission | 50A-1 | | |
| Shift Top Shaft Synchronizer (TSS) | | | |
| Transmission | 50A-2 | | |
| Stop Tractor | 50A-2 | | |
| MFWD and Front Axle Operation | | | |
| Operate MFWD | 50B-1 | | |
| Differential and Rear Axle Operation | | | |
| Differential Lock | 50C-1 | | |
| Power Take Off (PTO) Operation | | | |
| Reverse Switchable PTO Stub Shaft | 50D-1 | | |
| Attach PTO-Driven Implement | 50D-1 | | |
| Operate Tractor PTO | 50D-2 | | |
| Determine PTO Clutch Linkage Adjustment | | | |
| Procedure | 50D-3 | | |
| Steering and Brake Operation | | | |
| Steering Stop Adjustment—MFWD Only | 60-1 | | |
| Use Brakes | 60-2 | | |
| Hydraulics Operation | | | |
| Open Center Hydraulic System | 70-1 | | |
| Warm Hydraulic System Oil | 70-1 | | |
| Hitch and Drawbar Operation | | | |
| 3-Point Hitch Components | 70A-1 | | |
| Prepare Implement | 70A-1 | | |
| Rockshaft Control Levers | 70A-1 | | |
| Use Rockshaft Position Control | 70A-2 | | |
| Set Position Control Lever Stop | 70A-2 | | |
| Use Draft Control | 70A-2 | | |
| Adjust Rockshaft Rate-of-Drop | 70A-3 | | |
| Attach Implements to 3-Point Hitch | 70A-4 | | |
| Attach Implement with Telescoping Draft | | | |
| Links | 70A-5 | | |
| Adjust Hitch Side Sway | 70A-5 | | |
| Level Hitch | 70A-5 | | |
| Adjust Lateral Float | 70A-7 | | |
| Observe Drawbar Load Limitations | 70A-7 | | |
| Select Drawbar Length | 70A-7 | | |
| Use Swinging Drawbar | 70A-8 | | |
| Selective Control Valve Operation | | | |
| Connecting Cylinder Hoses | 70B-1 | | |
| Disconnect Cylinder Hoses | 70B-1 | | |
| Reconnect Pressurized Hoses | 70B-2 | | |
| Use Correct Hose Tips | 70B-2 | | |
| SCV Control Levers and Couplers | 70B-3 | | |
| Operate SCV Control Levers | 70B-3 | | |
| SCV Spool Options Chart | 70B-4 | | |
| | | Wheels and Tires Operation | |
| | | Check Implement-to-Tire Clearance | 80-1 |
| | | Tire Sidewall Information | 80-1 |
| | | Select Tire Inflation Pressure | 80-4 |
| | | Tire Inflation Pressure Guidelines | 80-5 |
| | | Check Tire Inflation Pressure | 80-5 |
| | | Front and Rear Tire Combinations — 2WD | 80-6 |
| | | Front and Rear Tire Combinations — MFWD | 80-6 |
| | | Selecting Front Tire Rolling Direction | 80-6 |
| | | Tighten Wheel/Axle Hardware Correctly | 80-6 |
| | | Tighten Bolts—Adjustable Front Axle | 80-7 |
| | | Tighten Bolts—Front Axle, MFWD | 80-7 |
| | | Tighten Bolts—Rear Axle | 80-7 |
| | | Tread Settings—Adjustable Front Axle, 2WD | 80-8 |
| | | Tread Settings—MFWD Axle | 80-9 |
| | | Tread Settings—Multi-Position Rear Wheels | |
| | | (Steel Disks) | 80-9 |
| | | Adjust Front Wheel Tread—2WD | 80-10 |
| | | Check Toe-In—Front Axle, 2WD | 80-11 |
| | | Adjust Toe-In—Front Axle, 2WD | 80-11 |
| | | Check Toe-In—MFWD Axle | 80-11 |
| | | Adjust Toe-In—MFWD Axle | 80-12 |
| | | Front Fender Adjustment—MFWD Only | 80-12 |
| | | Ballasting | |
| | | Plan for Maximum Productivity | 80A-1 |
| | | Select Ballast Carefully | 80A-1 |
| | | Determine Maximum Rear Ballast | 80A-1 |
| | | Determine Maximum Front Ballast | 80A-1 |
| | | Match Ballast to Load Work | 80A-1 |
| | | Ballast Limitations | 80A-1 |
| | | Ballast the Tractor | 80A-2 |
| | | Use Cast Iron Weights | 80A-2 |
| | | Use Liquid Weight | 80A-2 |
| | | Use Implement Codes | 80A-2 |
| | | Additional Equipment Operation | |
| | | Additional Equipment Operation | 80B-1 |
| | | Ag Precision Technology | 80B-1 |
| | | Operator Station Operation | |
| | | Operating Foldable ROPS – If Equipped | 90-1 |
| | | Operator's Manual Storage Compartment | 90-1 |
| | | Using Seat Belt | 90-2 |
| | | Adjusting Seat | 90-2 |
| | | Adjusting Steering Wheel | 90-3 |
| | | Using Emergency Exit | 90-3 |
| | | Opening Windows | 90-3 |
| | | Opening Door | 90-4 |
| | | Inside Rear View Mirror and Sun Visor | 90-4 |
| | | Adjusting Blower Speed | 90-5 |
| | | Controlling Temperature | 90-5 |
| | | Deicing, Demisting or Defrosting Windshield | 90-5 |
| | | Optimizing A/C and Heater Performance | 90-6 |
| | | Operating Windshield Wiper and Washer | 90-6 |
| | | Operating Rear Window Wiper and Washer | 90-7 |
| | | Radio | 90-7 |
| | | Radio with Compact Disc Player | 90-8 |
| | | Operating Compact Disc Player – If | |
| | | Equipped | 90-8 |
| | | Setting Clock – If Equipped | 90-9 |

| | Page | | Page |
|---|--------|--|--------|
| Using Monitor Mounts | 90-9 | | |
| Transport and Storage | | Engine Maintenance | |
| Operator Training Required | 100-1 | Observe Engine Operation Closely | 220-1 |
| Observe Maximum Travel Speeds | 100-1 | Break-In Service | 220-1 |
| Driving on Public Roads | 100-1 | Engine Idle Speed Check | 220-1 |
| Driving Tractor on Roads | 100-3 | Engine Valve Adjustment | 220-2 |
| Transporting on Carrier | 100-4 | Opening and Closing the Hood | 220-2 |
| Towing the Tractor | 100-4 | Use Correct Lubricant | 220-2 |
| Use Caution on Hillsides | 100-4 | Check Engine Oil Level | 220-2 |
| Place Tractor in Storage | 100-5 | Change Engine Oil and Filter | 220-3 |
| Remove Tractor from Storage | 100-6 | Engine Oil Filter Change (with Loader Frames) | 220-3 |
| Using High Pressure Washers | 100-6 | | |
| Maintenance Intervals | | Air Intake, Fuel, Coolant, and Exhaust Maintenance | |
| Important Considerations | 200-1 | Air Cleaner Service | 230-1 |
| Practice Safe Maintenance | 200-1 | Air Cleaner Element Inspection | 230-1 |
| Maintenance Interval Chart | 200-2 | Air Cleaner Element Storage | 230-1 |
| Service Tractor Safely | 200-3 | Clean Air Cleaner Element—Primary and Secondary | 230-1 |
| Observe Service Intervals | 200-3 | Replace Air Cleaner Element—Primary and Secondary | 230-2 |
| Service Daily Before Start-Up | 200-4 | Check Air Intake System | 230-4 |
| Additional Service Information | 200-4 | Check Air Filter Restriction Indicator | 230-4 |
| | | Check Unloader Valve Condition | 230-4 |
| Fuels, Lubricants, and Coolants | | Tighten Hose and Hose Clamp | 230-5 |
| Handle Fuel Safely—Avoid Fires | 200A-1 | Clean Engine Crankcase Vent Tube | 230-6 |
| Handle Fluids Safely—Avoid Fires | 200A-1 | Do Not Modify Fuel System | 230-6 |
| Handling and Storing Diesel Fuel | 200A-1 | Drain Water and Sediment from Fuel Filter | 230-6 |
| Cold Weather Operation | 200A-1 | Check Fuel Filter Water Separator | 230-6 |
| Hot Weather Operation | 200A-2 | Drain Water and Sediment from Fuel Tank | 230-7 |
| Fuel Cleanliness | 200A-2 | Replace Final Fuel Filter and Primary Fuel Filter/Water Separator | 230-7 |
| Diesel Fuel | 200A-2 | Bleed Fuel System | 230-8 |
| Lubricity of Diesel Fuel | 200A-3 | Engine Cooling System Components | 230-9 |
| Testing Diesel Fuel | 200A-3 | Check Coolant Level | 230-9 |
| Alternative and Synthetic Lubricants | 200A-3 | Check Cooling System for Leaks | 230-10 |
| Lubricant Storage | 200A-3 | Flush Cooling System | 230-10 |
| Diesel Engine Break-In Oil — Non-Emissions Certified and Certified Tier 1, Tier 2, Tier 3, Stage I, Stage II, and Stage III | 200A-3 | Clean Front Grille and Cooling Package Components | 230-10 |
| Extended Diesel Engine Oil Service Intervals — Non-Emissions Certified and Certified Tier 1 and Stage I | 200A-4 | | |
| Diesel Engine Oil — Non-Emissions Certified and Certified Tier 1 and Stage I | 200A-5 | Electrical and Lighting Maintenance | |
| Diesel Engine Oil — Tier 2 and Stage II | 200A-5 | Electrical Service Precautions | 240-1 |
| Oil Filters | 200A-6 | Use a Booster Battery | 240-1 |
| Diesel Engine Coolant (engine with wet sleeve cylinder liners) | 200A-6 | Adjust Alternator/Fan Belt—OOS | 240-2 |
| Liquid Coolant Conditioner | 200A-7 | Inspect and Adjust Alternator/Fan Belt—Cab | 240-2 |
| Transmission and Hydraulic Oil | 200A-7 | Replace Alternator/Fan Belt—OOS | 240-3 |
| Use Correct Transmission/Hydraulic Filter Element | 200A-8 | Replace Fan/Alternator/AC Compressor Belt —Cab | 240-3 |
| MFWD Axle and Wheel Hub Oil | 200A-8 | Access Battery | 240-4 |
| Multipurpose Extreme Pressure (EP) Grease .. | 200A-8 | Clean and Check Battery | 240-4 |
| | | Charge Battery | 240-4 |
| | | Clean Battery | 240-5 |
| | | Check Battery Condition | 240-5 |
| | | Remove Battery | 240-5 |
| | | Battery Replacement Specifications | 240-6 |
| | | Service Battery | 240-6 |
| | | Fuses Location—OOS | 240-6 |
| | | Fuses Location—Cab | 240-7 |
| | | Load Center Fuses and Relays—OOS | 240-8 |
| | | Load Center Fuses and Relays—Cab | 240-10 |
| | | Fusible Link Location | 240-11 |
| | | Starter Wiring Connection | 240-11 |
| | | Handle Halogen Light Bulbs Safely | 240-12 |
| | | Adjust Headlights | 240-12 |
| As Required Maintenance | | | |
| As Required Service Record | 200B-1 | | |
| Wash Machine After Unloading | 200B-1 | | |
| Controls and Instruments Maintenance | | | |
| Clutch Pedal Free Travel Adjustment | 210-1 | | |
| Clutch Pedal Considerations | 210-1 | | |

Contents

| | Page | | Page |
|--|--------|--|--------|
| Aim Headlights | 240-12 | Additional Equipment Maintenance | |
| Replace Headlight Bulb | 240-13 | Additional Equipment Maintenance | 280B-1 |
| Replace Warning Light Bulb—Cab | 240-14 | Front Loader Mounting Bracket — 6403 | |
| Replace Warning Light Bulb—OOS | 240-14 | Tractor | 280B-1 |
| Replace Worklight Bulb—OOS | 240-14 | Front Loader Mounting Bracket — 6603 | |
| Replace Worklight Bulb—Cab | 240-15 | Tractor | 280B-2 |
| Replace Tail Light Bulb—OOS | 240-16 | | |
| Replace Tail Light Bulb—Cab | 240-16 | Operator Station Maintenance | |
| Replace Dome Light Bulb—Cab | 240-17 | Keep Cab Protection System Installed | |
| | | Properly | 290-1 |
| Drive Train Maintenance | | Roll Over Protective Structure (ROPS) | |
| Check Neutral Start System | 250-1 | Maintenance or Replacement | 290-1 |
| | | Inspect Seat Belt | 290-2 |
| Transmission Maintenance | | Replace Cab Air Filters | 290-2 |
| Check Transmission/Hydraulic System Oil | | Service Air Conditioner (Cab) | 290-3 |
| Level | 250A-1 | Adjust Hand Throttle Friction | 290-4 |
| Drain Transmission/Hydraulic Oil | 250A-1 | | |
| Fill Transmission/Hydraulic Oil | 250A-2 | Troubleshooting | |
| Replace Transmission/Hydraulic Oil Filter | 250A-2 | Engine Troubleshooting | 300-1 |
| Apply Grease to Universal Joint (Shift Lever) .. | 250A-2 | Transmission | 300-4 |
| | | Hydraulic System | 300-4 |
| MFWD and Front Axle Maintenance | | Brakes | 300-5 |
| Lubricate Front Axle Pivot Pins | 250B-1 | Rockshaft and 3-Point Hitch | 300-5 |
| Lubricate MFWD Shaft | 250B-1 | Electrical System Troubleshooting | 300-6 |
| Pack Front Wheel Bearings (2WD) | 250B-1 | Heater and A/C System Troubleshooting— | |
| Clean MFWD Axle Breather | 250B-1 | Cab | 300-7 |
| Check MFWD Axle Oil Level | 250B-2 | Wipers, Flood Lights, Dome Light, and Radio | |
| Check MFWD Wheel Hub Oil Level | 250B-2 | Troubleshooting—Cab | 300-9 |
| Change MFWD Axle Oil | 250B-2 | | |
| Change MFWD Wheel Hub Oil | 250B-3 | On-Board Diagnostics | |
| | | On-Board Diagnostic (OBD) Tool—Not | |
| Differential and Rear Axle Maintenance | | Equipped | 300A-1 |
| Lubricate Rear Axle Bearings | 250C-1 | | |
| | | Specifications | |
| Power Take Off (PTO) Maintenance | | Machine Specifications | 400-1 |
| Lubricate PTO Stub Shaft | 250D-1 | Certificate – OCIMA | 400-3 |
| | | Machine Dimensions and Weights | 400-4 |
| Steering and Brake Maintenance | | Turning Radius for MFWD 6403 Tractors | 400-7 |
| Lubricate Steering Linkage | 260-1 | Turning Radius for MFWD 6603 Tractors | 400-7 |
| Brake Pedal Free Travel Adjustment | 260-1 | Turning Radius for 2WD 6603 and | |
| | | 6403 Tractors | 400-8 |
| Hydraulics Maintenance | | Ground Speeds—TSS Transmission | 400-8 |
| Hydraulics Maintenance | 270-1 | Metric Bolt and Screw Torque Values | 400-9 |
| Warm Hydraulic System Oil | 270-1 | Unified Inch Bolt and Screw Torque Values | 400-10 |
| | | | |
| Hitch and Drawbar Maintenance | | Identifications Numbers | |
| Lubricate 3-Point Hitch Lift Links | 270A-1 | Product Identification Number | 400A-1 |
| | | Identification Plates | 400A-1 |
| Selective Control Valve Maintenance | | Record Tractor Serial Number | 400A-2 |
| Check Selective Control Valve | 270B-1 | Record MFWD Front Axle Serial Number | 400A-2 |
| | | Record Engine Serial Number | 400A-2 |
| Wheels and Tires Maintenance | | Record Transmission Serial Number | 400A-3 |
| Service Tires Safely | 280-1 | Cab Serial Number | 400A-3 |
| Loose Hardware Inspection | 280-1 | | |
| Tire Checks | 280-1 | Certification and Warranty | |
| Tubeless Tire Repair | 280-1 | Limited Battery Warranty | 400B-1 |
| | | | |
| Ballasting Maintenance | | Service Records | |
| Measure Wheel Slip—Manually | 280A-1 | Every 10 Hour Service Record | 500-1 |
| Install Rear Cast Iron Weights | 280A-1 | Every 50 Hour Service Record | 500-1 |
| Ballasting Front End for Transport | 280A-2 | Flrst 100 Hour Service Record | 500-1 |
| | | Every 125 Hour Service Record | 500-2 |
| | | Every 250 Hour Service Record | 500-2 |

Contents

| | Page |
|--|-------|
| Every 500 Hour Service Record | 500-2 |
| Every 1000 Hour Service Record | 500-3 |
| Every 2000 Hour Service Record | 500-3 |
| Pre-Delivery Inspection | |
| Notes on Pre-Delivery Inspection | 600-1 |
| Service Procedure | 600-1 |
| Copy for Owner | 600-2 |
| Copy for Dealer | 600-3 |

General Information

Product View

NOTE: Tractor shown may have optional equipment.



6603, Cab

APY16606—UN—24DEC19



6603, OOS

APY16605—UN—24DEC19



6403, Cab

APY16608—UN—23DEC19



6403, OOS

APY16607—UN—23DEC19

General Information

Trademarks

| Trademarks | |
|---------------|------------------------------|
| AutoTrac™ | Trademark of Deere & Company |
| Bio Hy-Gard™ | Trademark of Deere & Company |
| Break-In™ | Trademark of Deere & Company |
| Cool-Gard™ | Trademark of Deere & Company |
| CoolScan™ | Trademark of Deere & Company |
| Grease-Gard™ | Trademark of Deere & Company |
| GreenStar™ | Trademark of Deere & Company |
| Hy-Gard™ | Trademark of Deere & Company |
| Oilscan™ | Trademark of Deere & Company |
| Plus-50™ | Trademark of Deere & Company |
| PowrReverser™ | Trademark of Deere & Company |
| Roll-Gard™ | Trademark of Deere & Company |
| SERVICEGARD™ | Trademark of Deere & Company |
| Teflon™ | Trademark of DuPont Company |
| Torq-Gard™ | Trademark of Deere & Company |
| Quik-Tatch™ | Trademark of Deere & Company |
| StarFire™ | Trademark of Deere & Company |

SM27053,00005BA-19-19APR18

Glossary of Terms


| ITEM | ABBREVIATION | DESCRIPTION |
|--|--------------|---|
| Accessory | ACC | Secondary electrical system |
| Air Conditioning | A/C | System used for cooling the air in the cab |
| Alternating Current | AC | Electrical current that reverses its direction at regularly recurring intervals |
| Agricultural Management System | AMS | Used with automatic guidance system |
| AutoTrac™ Universal | ATU | Automatic guidance system |
| Battery | Bat | A device used to furnish electrical current |
| Brakes | BR | Abbreviation |
| Charge Air Cooler | CAC | A device used for cooling compressed intake air |
| Clockwise | CW | Direction in which the hands of a clock rotate |
| Cold Cranking Amperes | CCA | Battery's measured capability to perform during cold-weather operation |
| Counterclockwise | CCW | Direction opposite the rotation of the hands of a clock |
| Direct Current | DC | Electrical current flowing in one direction only |
| Fixed Open Operator Station | FOOS | Abbreviation |
| Forward | FWD | Direction of movement |
| Forward-Neutral-Reverse | FNR | Abbreviation |
| Gallons per Minute | gpm | Amount of fluid displaced over a period of one minute |
| Ground Drive Power Take-Off | GD PTO | Abbreviation |
| GreenStar™ Display | GSD | Abbreviation |
| Heating, Ventilating, and Air Conditioning | HVAC | Abbreviation |
| High-Intensity Discharge Light | HID | Abbreviation |
| High-Pressure Common Rail | HPCR | Abbreviation |
| Housing | Hsg | Abbreviation |
| Ignition | IGN | Control for starting and stopping the tractor |
| Inside Diameter | ID | Abbreviation |
| International Standards Organization | ISO | Standards organization |

General Information

| ITEM | ABBREVIATION | DESCRIPTION |
|-------------------------------------|-----------------|--|
| Joint Industry Council Organization | JIC | Standards organization |
| Left-Hand | LH or L-H | Abbreviation |
| Liquid Crystal Display | LCD | A technology used for displaying information |
| Manifold Air Pressure | MAP | Air Pressure measured at engine air intake |
| Mechanical | Mech or MECH | Abbreviation |
| Mechanical Front Wheel Drive | MFWD | A mechanically powered front axle |
| Negative | Neg (-) | Electrical Ground Circuit |
| Number | No. | Abbreviation |
| Nitrogen Oxide | NOx | Engine emission |
| O-ring Face Seal | ORFS or ORS | A type of seal used in hydraulic connections |
| Original Equipment Manufacturer | OEM | Abbreviation |
| Outside Diameter | OD | Abbreviation |
| Open Operator Station | OOS | Abbreviation |
| Performance Monitor | Perf Mon or PrF | Abbreviation |
| Positive | Pos (+) | Charged part of an electrical circuit |
| Potentiometer | POT | A device used to vary electrical voltage |
| Power Take-Off | PTO | Abbreviation |
| Power Train Reverser | PTR | Computerized system used to control power reverse transmission functions |
| Pressure Control Valve | PCV | Valve used to control pressure within a system |
| Pressure Regulating Valve | PRV | A device used to regulate pressure in a system |
| Product Identification Number | PIN | Serial number relating to tractor identification |
| Pulse-Width-Modulation | PWM | Method of controlling electrical signals |
| Region 2 | R2 | European Region |
| Region 4 | R4 | North American Region |
| Reverse | Rev | Direction of movement |
| Revolutions per Minute | rpm | Abbreviation |
| Right-Hand | RH or R-H | Abbreviation |
| Rockshaft | RS | Abbreviation |
| Roll-Over Protective Structure | ROPS | Abbreviation |
| Selective Control Valve | SCV | Device used to control remote hydraulic functions |
| Slow Moving Vehicle | SMV | Warning sign on the rear of the tractor |
| Society of Automotive Engineers | SAE | Engineering Standards Organization |
| Specification | Spec | Abbreviation |
| Switch | SW | Abbreviation |
| Tachometer | Tach | Abbreviation |
| Tail Light | TL | Abbreviation |
| Temperature | Temp | Abbreviation |
| Three-Point Hitch | 3PT | Abbreviation |
| Transmission | Trans | Abbreviation |
| Transient Voltage Protection | TVP | An electrical device used to protect a circuit from voltage surge |
| User Interface Module | UIM | Abbreviation |
| Voltage (Volts) | V | Abbreviation |
| Voltage Detector | V Det | Abbreviation |
| Warning Lamp | WL | Abbreviation |
| Without | W/O | Abbreviation |
| Wide-Open Throttle | WOT | Full throttle |
| Two-Wheel Drive | 2WD | Vehicle where only one pair of wheels is powered |

SM27053,00005BB-19-17APR18

Regions and Country Versions

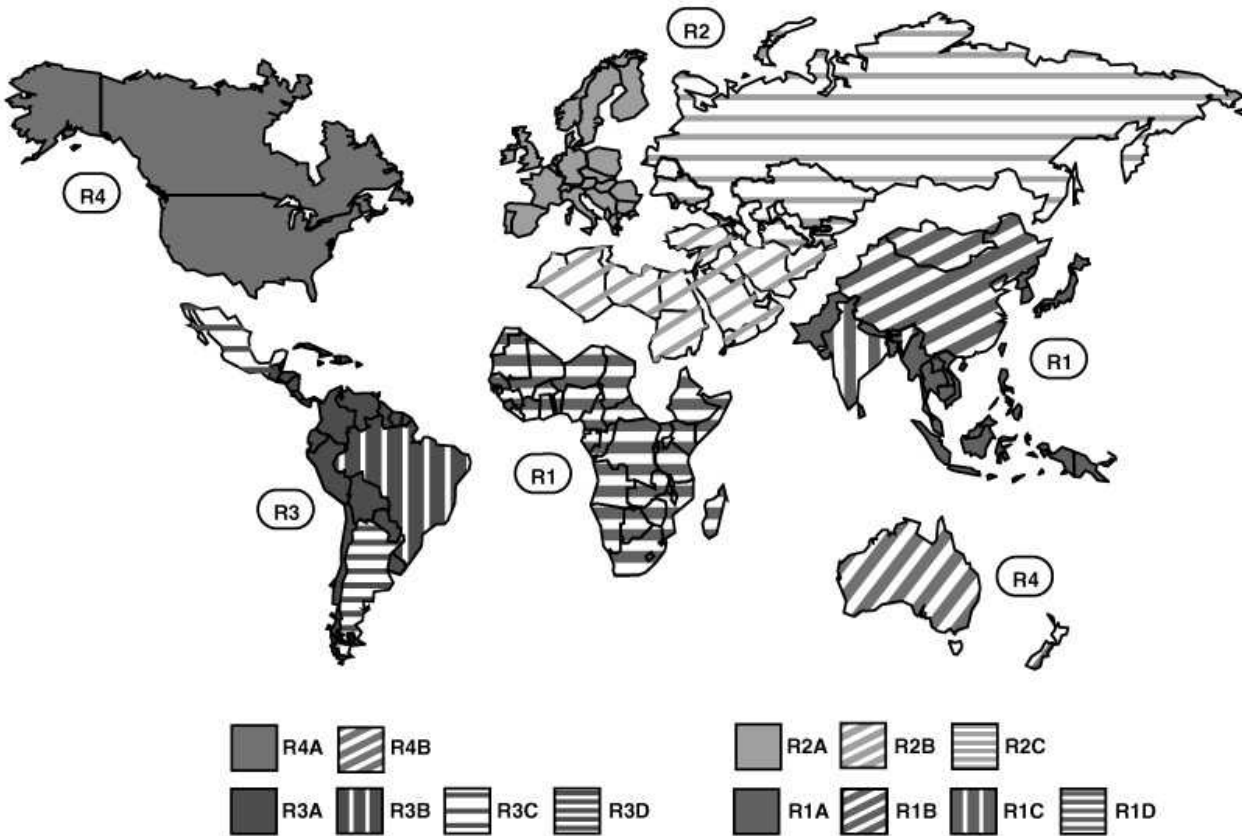

Region Map

RXA0150915—UN—01FEB16

- R1—Asia and Sub-Saharan Africa
- R1A—Far East, Sri Lanka, and Pakistan
- R1B—China
- R1C—India
- R1D—Sub-Saharan Africa
- R2—Europe, North Africa, Mid East, CIS
- R2A—European Union (EU 28+)
- R2B—North Africa and North Middle East (NANME)
- R2C—Common Wealth of Independent States (CIS)

- R3—Central and South America
- R3A—Latin America (JDLA)
- R3B—Brazil
- R3C—Mexico
- R3D—Argentina
- R4—North America
- R4A—USA and Canada
- R4B—Oceania (Australia and New Zealand)

Regions 1, 2, and 3 equipment is traditionally manufactured with Economic Commission for Europe (ECE) features or systems.


Region 4 equipment is traditionally manufactured with Society of Automotive Engineers (SAE) features or systems.

Drive and signal lighting, traffic signs, safety signs, and braking features are some of the systems that differ between ECE and SAE. For example, Text-Free (pictorial only) safety signs are used for ECE while Text with Picture safety signs are used on SAE. Use information above, if equipment information is identified by regions, countries, trade federations, industry standards, or governmental regulations.

NOTE: Australia and New Zealand (R4B) are available as either region 4 and/or region 2 configurations, only using text-free safety signs.

SM27053,00005BC-19-12APR18

Machine Overview

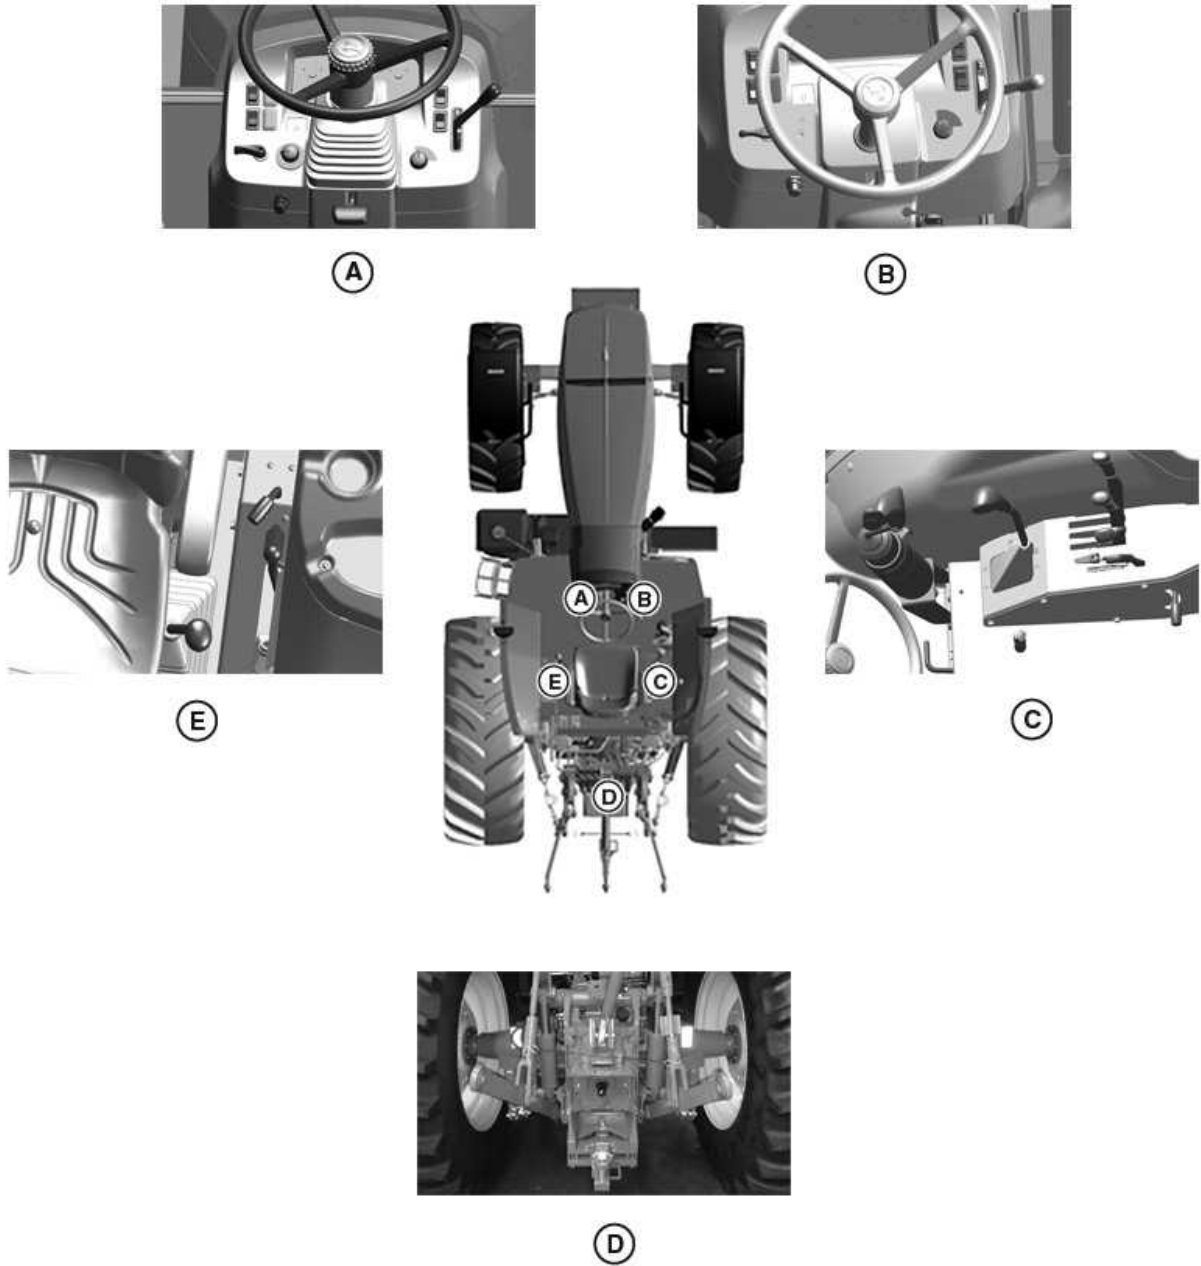

Machine Overview

APY00856—UN—14MAY18

A—Front Console Controls—Cab
B—Front Console Controls—OOS
C—Right-hand Side Controls

D—Rear Implement Interface
E—Left-hand Side Controls

IMPORTANT: Read this manual carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages. (See your John Deere dealer to order.)

Review manual sections for Controls and Instruments identification, Steering and Brakes, Transmission, and Transportation before operation on the road or in the field.

Operating the Machine Introduction:

- Sit in operator's seat and fasten seat belt.
- Start engine. (See Engine Operation section.)
- Turn on lights or signals as required. (See Electrical and Lighting Operation section.)
- Operate transmission to move machine. (See Transmission Operation section.)
- Use steering and brakes as required. (See Steering and Brake Operation section.)
- Activate features and implements as required. (See Operational sections.)

CAUTION: The tractor is not designed for use in flooded fields, as is the case with rice crops.

Preliminary Overview:

Use the following list as a reminder to inspect items before operation. Detailed operation and service information is available in Operational and Maintenance sections.

- Review manual and machine for safety information and safety signs.
- Review manual for proper operation, adjustment, and service.
- Review manual for engine and drivetrain operations. (throttles, brakes, steering, transmission gears, MFWD, and Differential Lock.)
- Review manual for control devices (hitch, hydraulic, and electrical).
- Review manual for regular lubrication points and intervals.
- Check for visual signs of leak damage, failures, and flats.
- Prepare machine hardware, fuel, fluids, lubricants, air, and daily maintenance.
- Check and prepare implements or attachments according to implement or attachment Operator's Manuals.

Using this Manual:


The information provided in this manual is divided into

sections. The sections are organized by typical machine features or functional systems (Engine, Electrical, Hydraulic, Transmission, and so on). These sections are identified at the top of each page. Specific information within each section is organized into modules. These modules are enclosed in boxes, and the main modules are identified by a heading at the top left. Page numbers identify the section, as well as the number of the page in the section.

By reviewing this manual frequently, you will learn which section to turn to for specific information. For example, the Safety information is covered at the beginning, and the Operation of all features and systems are covered in the first half of the manual. In addition, Maintenance Intervals are in the middle of the manual, the Maintenance of all the features and systems are covered in the second half of the manual, and the Specifications are covered at the end.

A detailed table of contents appears before Safety information, and there is an alphabetical index at the very end of the manual.

The Operator's Manual content flows as sequential reading down one column of text and graphic then over to the top of the next column as shown.

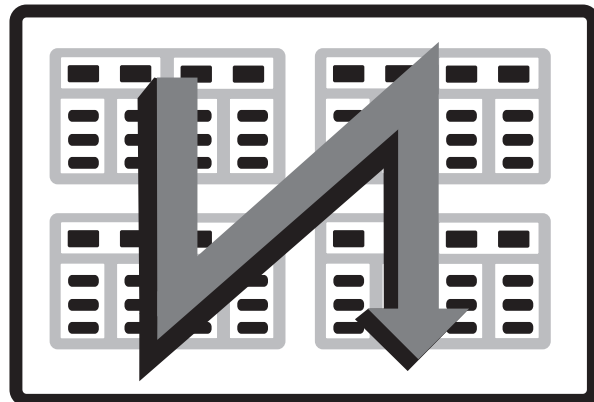


Sequential Reading

W28329—UN—18OCT17

EKPQ1SQ,00035EC-19-09SEP21

Safety Precautions

Recognize Safety Information

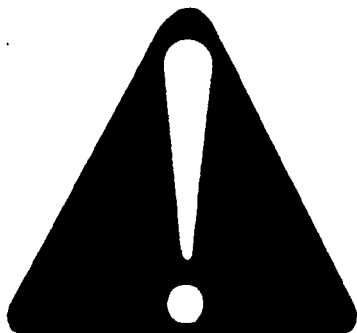

T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.


WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Prepare for Emergencies

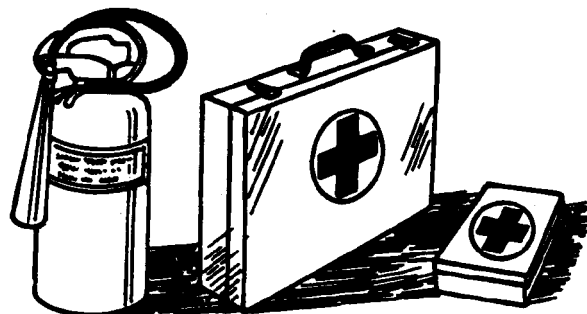

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Wear Protective Clothing

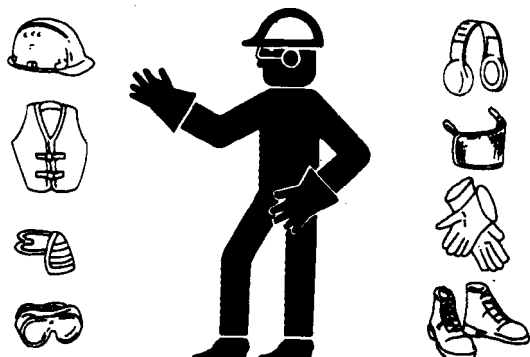

TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX.WEAR2-19-03MAR93

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.


Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX.FIRE1-19-12OCT11

Protect Against Noise

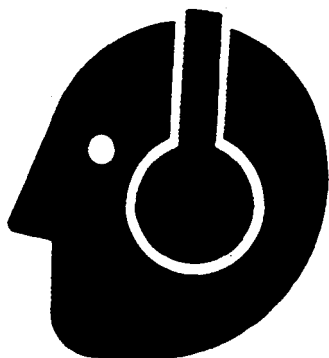

TS207—UN—23AUG88

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX.NOISE-19-03OCT17

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.
- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION-19-12OCT11

In Case of Fire



TS227—UN—15APR13

CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

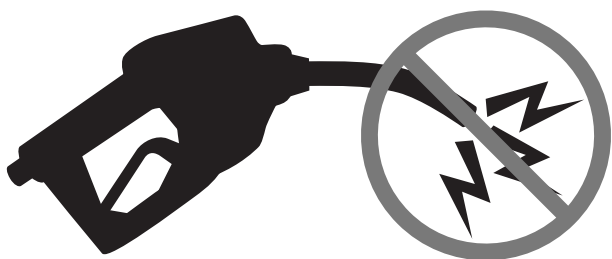

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

Keep ROPS Installed Properly

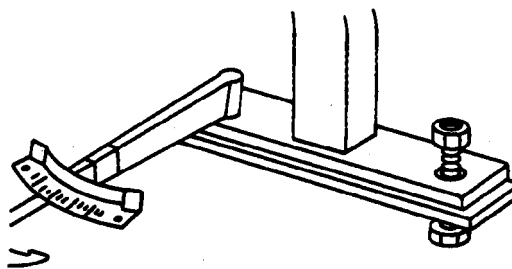

TS212—UN—23AUG88

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.


The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

DX,ROPS3-19-12OCT11

Use Foldable ROPS and Seat Belt Properly

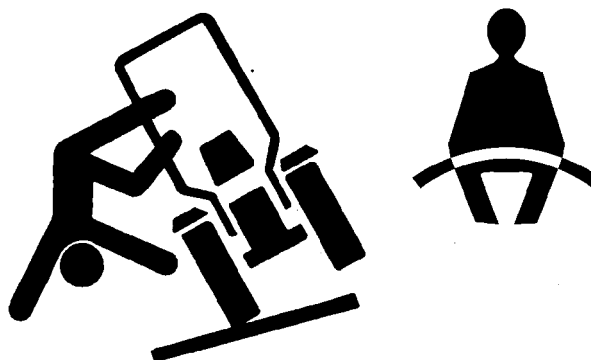

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
 - Hold the latch and pull the seat belt across the body.
 - Insert the latch into the buckle. Listen for a click.
 - Tug on the seat belt to make sure that the belt is securely fastened.

Safety Precautions


- Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. **DO NOT USE** a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

DX,FOLDROPS-19-22AUG13

Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

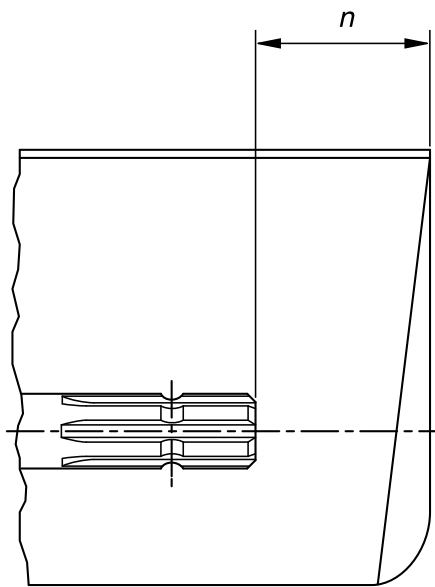

H96219—UN—29APR10

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off drivshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making

adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.


Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/ Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

| PTO Type | Diameter | Splines | $n \pm 5 \text{ mm (0.20 in.)}$ |
|----------|---------------------|---------|---------------------------------|
| 1 | 35 mm (1.378 in.) | 6 | 85 mm (3.35 in.) |
| 2 | 35 mm (1.378 in.) | 21 | 85 mm (3.35 in.) |
| 3 | 45 mm (1.772 in.) | 20 | 100 mm (4.00 in.) |
| 4 | 57.5 mm (2.264 in.) | 22 | 100 mm (4.00 in.) |

DX,PTO-19-28FEB17

Use Steps and Handholds Correctly

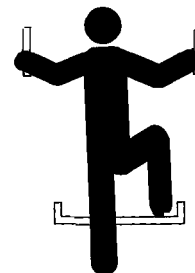

T133468—UN—15APR13

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease

or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

DX,WW,MOUNT-19-12OCT11


Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer. Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

NOTE: ISOBUS refers to the ISO Standard 11783

DX,WW,ISOBUS-19-15JUL15

Use Seat Belt Properly

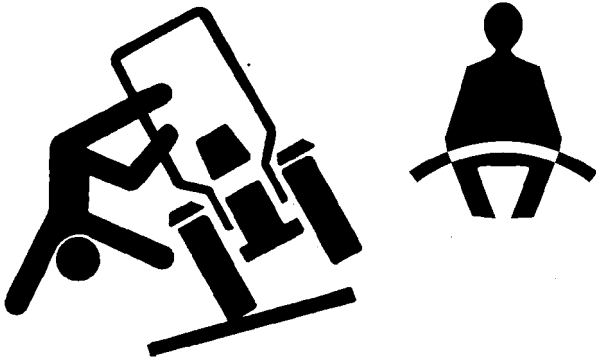

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage,

such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1-19-22AUG13

Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/ attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual

brakes, or operating around hazards on rough ground or steep slopes.

- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor

- Crushing and pinching during hitching

DX,WW,TRACTOR-19-08MAY19

Avoid Backover Accidents



PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10


Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY-19-12OCT11

Operating the Loader Tractor Safely

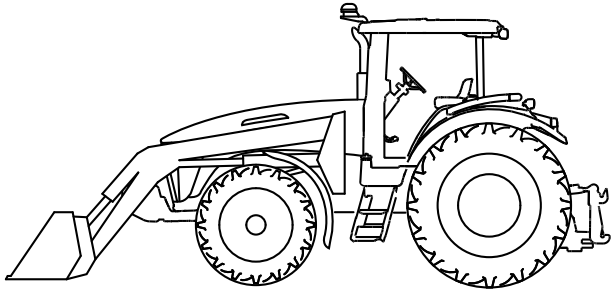

TS1692—UN—09NOV09

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.

Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.


Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and claspers).

Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER-19-18SEP12

Keep Riders Off Machine

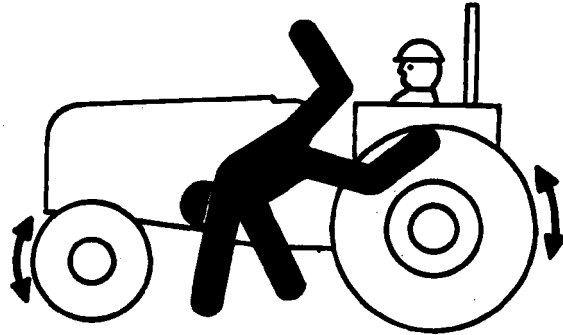

TS290—UN—23AUG88

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

DX,RIDER-19-03MAR93

Instructional Seat




TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

Use Safety Lights and Devices

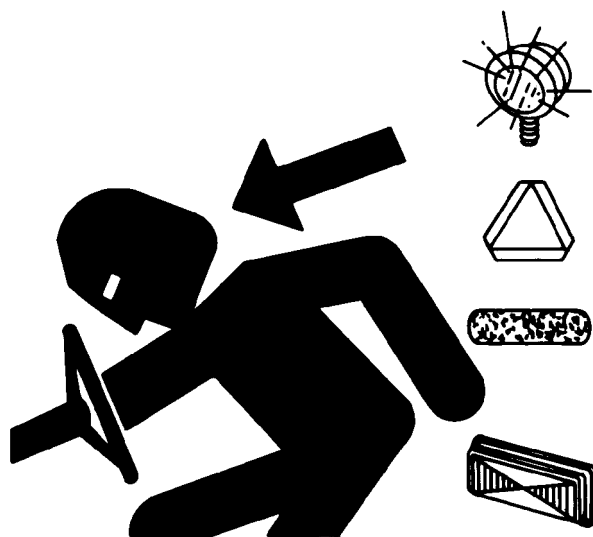


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX.FLASH-19-07JUL99

Transport Towed Equipment at Safe Speeds

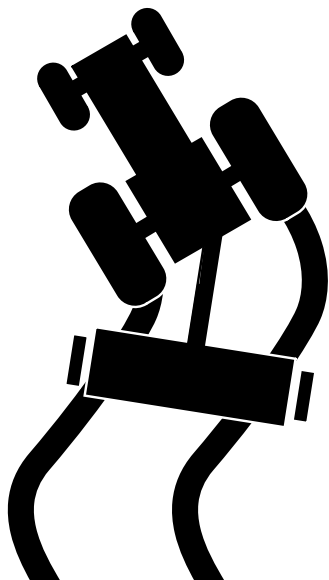

TS1686—UN—27SEP06

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).


Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX.TOW1-19-28FEB17

Use Caution on Slopes, Uneven Terrain, and Rough Ground

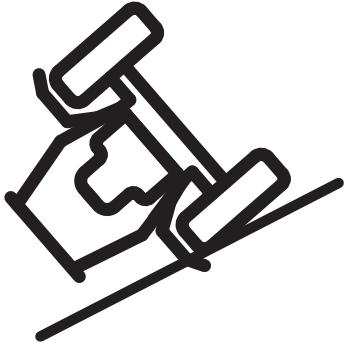

RXA0103437—UN—01JUL09

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in.


Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE-19-28FEB17

Freeing a Mired Machine

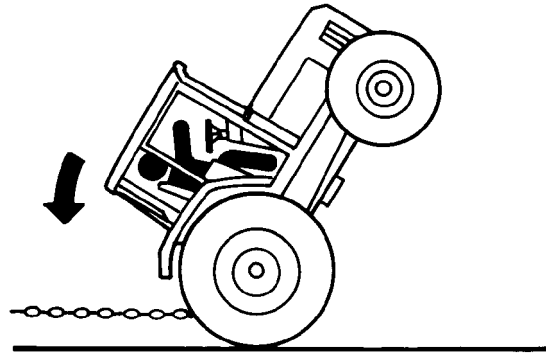

TS1645—UN—15SEP95



TS263—UN—23AUG88

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.


Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

DX,MIREDD-19-07JUL99

Avoid Contact with Agricultural Chemicals

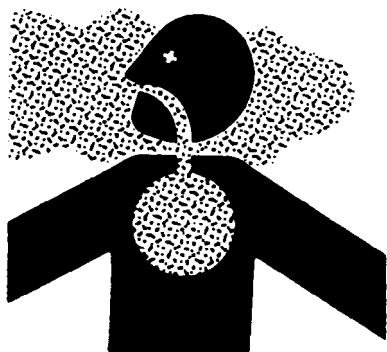

TS220—UN—15APR13



TS272—UN—23AUG88


This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.


Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

DX,CABS-19-25MAR09

Handle Agricultural Chemicals Safely

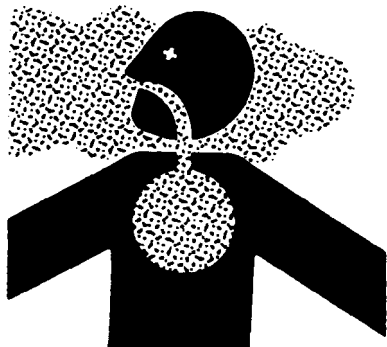

TS220—UN—15APR13

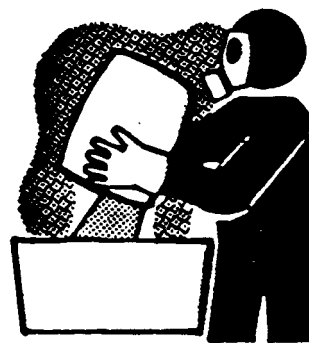

A34471

A34471—UN—11OCT88

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
 - Chemicals labeled '**Danger**': Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
 - Chemicals labeled '**Warning**': Less toxic. Generally require use of goggles, gloves, and skin protections.
 - Chemicals labeled '**Caution**': Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.
- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.
- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse


empty containers and puncture or crush containers and dispose of properly.

DX,WW,CHEM01-19-24AUG10

Handling Batteries Safely



TS204—UN—15APR13

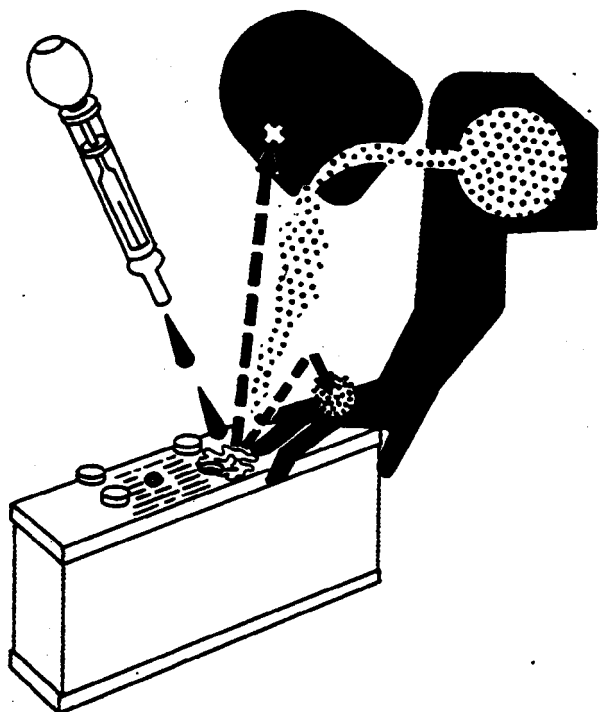

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and

strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10

Avoid Heating Near Pressurized Fluid Lines




TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

Remove Paint Before Welding or Heating

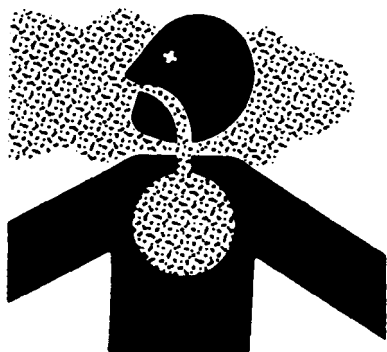

TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT-19-24JUL02

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic

components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed.

Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.

On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

Avoid Hot Exhaust



RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.


Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


Clean Exhaust Filter Safely



TS227—UN—15APR13

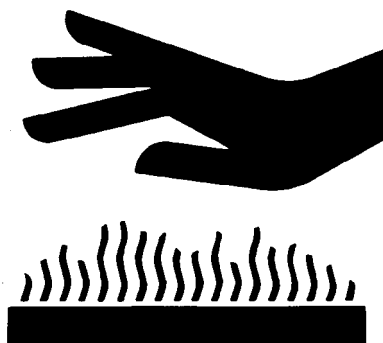

TS271—UN—23AUG88

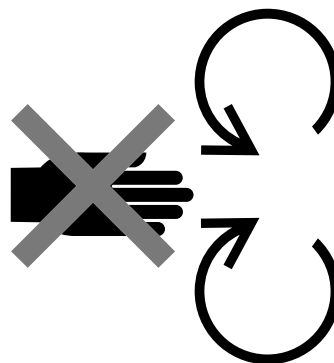

TS1693—UN—09DEC09



TS1695—UN—07DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine

Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

DX,EXHAUST,FILTER-19-12JAN11

Work In Ventilated Area




TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

Support Machine Properly

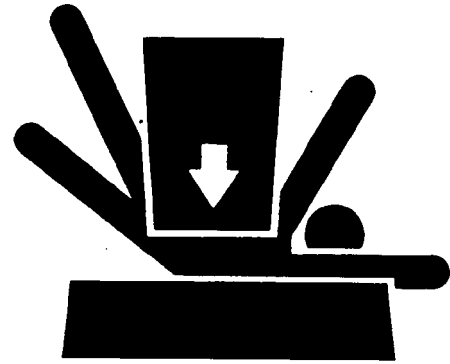

TS229—UN—23AUG88



Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load. Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

Prevent Machine Runaway

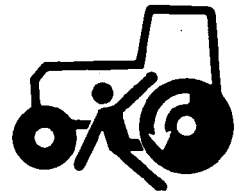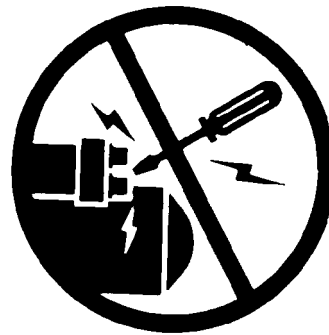

TS177—UN—11JAN89


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS1-19-29SEP98

Park Machine Safely

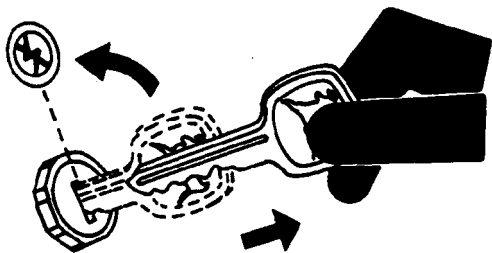


TS230—UN—24MAY89

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

DX,PARK-19-04JUN90

Service Cooling System Safely

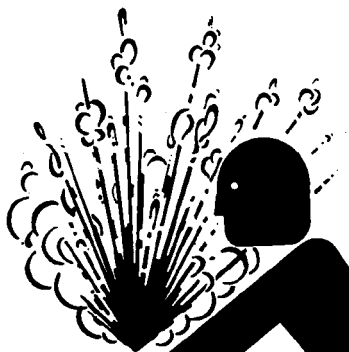


TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

DX,WW,COOLING-19-19AUG09

Transport Tractor Safely

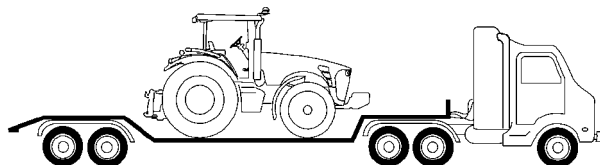

RXA0103709—UN—01JUL09

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

DX,WW,TRANSPORT-19-19AUG09

Service Accumulator Systems Safely



TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com