 


Operator's Manual

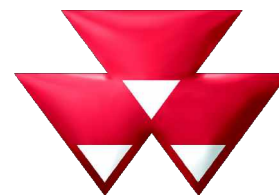

MASSEY FERGUSON

9800 VE Planter

9816 VE

9824 VE



**CALIFORNIA
Proposition 65 Warning**

WARNING: Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, or other reproductive harm.

WARNING: Battery posts, terminals and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer, birth defects, or other reproductive harm. Wash hands after handling.

Congratulations on your selection of an AGCO® Product. We believe you have exercised excellent judgment in the purchase of your AGCO® machine. We are most appreciative of your patronage.

Your Dealer has performed the pre-delivery service on your new machine.

He will discuss with you the operating and maintenance instructions given in this manual, and instruct you in the correct and varied applications of this machine. Call on him at any time when you have a question or need equipment related to the use of your machine.

We recommend that you carefully read this entire manual before operating the machine. Also, time spent in becoming fully acquainted with its performance features, adjustments, and maintenance schedules will be repaid in a long and satisfactory life of the product.

This equipment is covered by a written warranty which will be provided to you by your AGCO® Dealer at time of purchase.

AGCO® reserves the right to make changes or add improvements to its products at any time without incurring any obligation to make such changes to products manufactured previously. AGCO®, or its dealers, accept no responsibility for variations which may be evident in the actual specifications of its products and the statements and descriptions contained in this publication.

9800 VE Planter

1 Safety	9
1.1 Introduction	11
1.1.1 Safety alert symbol	11
1.1.2 Safety messages	11
1.1.3 Informational messages	11
1.1.4 Safety signs	11
1.1.5 A word to the operator	12
1.1.6 This manual	13
1.2 Operation	14
1.2.1 Prepare for operation	14
1.2.2 General information	14
1.2.3 Personal protective equipment	15
1.2.4 Seat instructions	15
1.2.5 Shield and guards	16
1.2.6 Exhaust warning	16
1.2.7 Flying debris	17
1.2.8 Handrails	17
1.2.9 Agricultural chemicals	17
1.3 Travel on public roads	18
1.4 Maintenance	20
1.4.1 General maintenance information	20
1.4.2 Fire prevention and first aid	21
1.4.3 High pressure leaks	22
1.4.4 Tire safety	23
1.4.5 Replacement parts	23
1.4.6 D-ring	24
1.5 Safety and informational signs	25
1.5.20 Slow Moving Vehicle (SMV) sign	31
1.5.21 Reflector location	32
1.6 Cylinder stops	33
1.6.1 Wheel lift cylinder stops	33
1.6.2 Transport pins	33
2 Introduction	35
2.1 Introduction	37
2.1.1 Units of measurement	37
2.1.2 Replacement parts	37
2.1.3 Intended use	37
2.1.4 Proper disposal of waste	37
2.2 Machine identification	38
2.2.1 Serial number plate	38
2.2.2 Serial number description	38
2.3 Main machine components	40
3 Operation	41
3.1 Connecting the planter to the tractor	45
3.1.1 Preparing the tractor	45
3.1.2 Connecting the 3-point linkage	45
3.1.3 Connecting the drawbar hitch	47
3.1.4 Connecting the hydraulic hoses	47

3.1.5	Adjusting the remote valve flow	48
3.1.6	Installing the hydraulic pump, if equipped	48
3.1.7	Hitch height	49
3.1.7.1	Setting the 3-point linkage height	49
3.1.7.2	Setting the drawbar hitch height	50
3.2	Disconnecting the planter from the tractor	51
3.3	Preparing the machine for operation	53
3.4	Frame control box operation	54
3.5	Folding and unfolding the planter	55
3.5.1	Folding the machine	55
3.5.2	Unfolding the machine	57
3.6	Roading the machine	60
3.6.1	Preparing to road the machine	60
3.6.2	Safety precautions	60
3.6.3	Lamp operation	60
3.7	Field operation	62
3.7.1	Operating in the field	62
3.7.2	Checking the seed population	63
3.7.3	Finishing the field	63
3.8	Seed	65
3.8.1	Seed lubricant	65
3.9	Seed meter	66
3.9.1	Seed meter components	66
3.9.2	Crop kits	67
3.9.2.1	Crop setup guide	67
3.9.2.2	Replacing a crop kit	71
3.9.3	Checking the disc shims	75
3.9.4	Removing a seed meter	78
3.9.5	Installing a seed meter	79
3.9.6	Assembling the meter to the hopper	81
3.10	SpeedTube™	83
3.10.1	Yearly maintenance	83
3.10.2	SpeedTube™ crop change	83
3.10.3	Change from SpeedTube™ to seed tube	83
3.10.4	SpeedTube™ inspection	84
3.10.5	Replace the belt	89
3.11	Seed meter vacuum	92
3.11.1	Vacuum settings	92
3.11.2	Vacuum motor operation	92
3.12	Central fill air pressure	93
3.12.1	Adjusting the central fill air pressure	93
3.13	Seed removal	94
3.13.1	Removing seed from the central fill system	94
3.14	Row units	96
3.14.1	Gauge wheels	96
3.14.2	Adjusting the seed depth	96
3.14.3	Checking the seed depth	96
3.15	Closing wheels	98
3.15.1	Dual wheel down pressure	99
3.15.2	Single wheel down pressure	99
3.15.3	Closing wheel spacing and offset	99
3.15.3.1	Adjusting the closing wheel spacing and offset	100
3.15.4	Centering the closing wheels	100
3.16	Markers	101
3.16.1	Marker operation	101

3.16.2	Marker shear bolt	101
3.16.3	Adjusting the marker disc	102
3.16.4	Adjusting the marker arm length	102
3.16.4.1	Marker arm length	103
3.17	Liquid fertilizer	104
3.17.1	Filling the liquid fertilizer tank	104
3.17.2	Checking the fertilizer application rate	105
3.17.3	Cleaning the strainer screen	105
3.17.4	Preparing for night storage	105
3.17.5	Preparing for one to two week storage - permitted method	106
3.17.6	Preparing for one to two week storage - better method	106
3.17.7	Preparing for winter storage	107
3.18	Liquid fertilizer pumps	108
3.18.1	Piston pump	108
3.18.1.1	Piston pump rate chart	108
3.18.1.2	Piston pump slide chart	109
3.18.1.3	Setting the piston pump	110
3.18.1.4	Starting the pump	110
3.18.1.5	Checking the tire pressure	110
3.18.1.6	Adjusting the down pressure of the fertilizer transmission	111
3.18.2	Centrifugal pump	111
3.18.2.1	Priming the centrifugal pump	111
3.19	Liquid fertilizer distribution	112
3.19.1	Flow divider	112
3.19.2	Boom distribution	112
3.19.2.1	Changing the orifices	112
3.19.2.2	Nozzle orifice chart	113
3.20	Liquid fertilizer openers	116
3.20.1	Fertilizer opener adjustments	116
3.20.2	Adjusting the double disc opener	116
3.20.3	Adjusting the single disc opener depth	117
3.20.4	Adjusting the fertilizer opener spacing	117
3.20.5	Adjusting the single opener disc swivel	118
3.20.6	Adjusting the single spring tension	118
3.21	ISOBUS fertilizer electronics	120
3.21.1	Software icon descriptions	120
3.21.2	Symbol icons	124
3.21.2.1	Accumulator data	125
3.21.3	Main work screen	125
3.21.3.1	Configuring the main work screen	126
3.21.3.2	Work screen data	126
3.21.4	Terminal information	133
3.21.5	Master switch	133
3.21.5.1	External master switch	134
3.21.5.2	Terminal master switch	134
3.21.6	Implement lift switch, if equipped	134
3.21.6.1	Enabling the implement lift switch	135
3.21.6.2	Adjusting the master switch timeout	135
3.21.7	Transferring data	136
3.21.8	Module information screen	137
3.21.9	Hydraulic/electric fertilizer pump setup example	137
3.21.9.1	Setting the product	137
3.21.9.2	Liquid flow calibration	138
3.21.9.3	Configuring the channel setup - liquid flow	139
3.21.9.4	Calibrating the channel - liquid flow	139
3.21.9.5	Doing the 100% catch test	141
3.21.9.6	Doing the partial catch test	142

3.21.9.7	Doing the nozzle flow meter test	142
3.21.10	Planter setup	142
3.21.10.1	Configuring the channel setup - liquid flow	143
3.21.10.2	Activating more than one channel	144
3.21.10.3	Calibrating the channel valve	144
3.21.10.4	Configuring the speed setup	145
3.21.10.5	Configuring the speed source	145
3.21.10.6	Linking channels	146
3.21.10.7	Configuring the physical layout	146
3.21.11	Changing a product setting	147
3.21.12	Product setup screen - preset method enabled	148
3.21.13	Product setup screen - preset method disabled	149
3.21.14	Ground speed setup	150
3.21.14.1	Configuring the speed source	153
3.21.15	Module configuration	154
3.21.16	Diagnostics	155
3.21.17	Alarms	157
3.21.17.1	Alarm history	157
3.21.17.2	Alarm detail	158
3.21.17.3	Clearing the alarm history	158
3.21.17.4	Alarm list	158
3.21.18	Accumulator screen	168
4	Maintenance	171
4.1	Service schedule	173
4.2	Checklists	174
4.2.1	Beginning of the day	174
4.2.2	End of the day	174
4.2.3	Beginning of the season	174
4.2.4	Storage	174
4.3	Lubrication points	176
4.3.1	Sealed bearings	176
4.3.2	Row unit lubrication points	176
4.3.3	Frame lubrication points	176
4.3.4	Tongue lubrication points	178
4.3.5	3-point linkage lubrication points	179
4.3.6	Drawbar hitch lubrication points	179
4.3.7	Marker lubrication points	180
4.3.8	Wheel pivot lubrication points	181
4.3.9	Fertilizer piston pump	182
4.3.9.1	Single piston pump lubrication	182
4.3.9.2	Double piston pump lubrication	183
4.4	Seed meter	184
4.4.1	Yearly maintenance	184
4.4.2	Checking the disc shims	184
4.4.3	Replacing the vacuum seal	186
4.5	Hydraulic	188
4.5.1	Changing the hydraulic oil and filter	188
4.5.2	Cleaning the hydraulic oil coolers	189
4.6	Wheel bearings	190
4.6.1	Lubricating the wheel bearings	190
4.6.2	Replacing the wheel bearings	190
4.6.3	Adjusting the wheel bearings	192
4.7	Row unit	194
4.7.1	Adjusting the gauge wheel to opener clearance	194
4.7.2	Calibrating the gauge wheel depth	194
4.7.3	Removing the gauge wheels	195

4.7.4	Installing the gauge wheels	195
4.7.5	Replacing the opener disc bearings	196
4.7.6	Replacing the opener discs	197
4.7.7	Setting the opener disc contact	199
4.7.8	Removing the seed tubes	200
4.7.9	Installing the seed tubes	201
4.7.10	Replacing the tube guard	201
4.7.11	Adjusting the tube clip	201
4.8	Seed sensors	203
4.8.1	Cleaning the seed sensors	203
4.8.2	Testing the seed sensors	203
4.8.3	Replacing the seed sensors	204
4.9	Switches	205
4.9.1	Frame height limit switch	205
4.9.1.1	Adjusting the frame height limit switch	205
4.9.2	Marker position switch	206
4.10	Electronic controls	207
4.10.1	General electronic maintenance	207
4.10.2	Electrical system overview	208
4.10.3	Status lamp for the single row module and vDrive module	211
5	Troubleshooting	213
5.1	Low vacuum	215
5.2	vSet 2 troubleshooting	216
5.3	Hydraulic troubleshooting	218
5.4	Planter troubleshooting	220
5.5	Single disc fertilizer opener troubleshooting	224
5.6	Liquid fertilizer pumps	226
5.6.1	Centrifugal pump troubleshooting	226
5.6.2	Electric pump troubleshooting	226
6	Specifications	229
6.1	Specifications	231
6.1.1	Frame specifications	231
6.1.2	Tire specifications	231
6.1.3	Machine dimensions	232
6.1.4	Marker specifications	232
6.1.5	Row unit specifications	232
6.1.6	Hydraulic system specifications	233
6.1.7	Shear pin specifications	233
6.1.8	Approximate shipping weight	233
6.1.9	Special bolt torques	233
6.1.10	Tractor requirement	234
7	Accessories	237
7.1	Accessories	239
7.1.1	Stroke control segments kit	239
7.1.2	Closing wheel kits	239
7.1.2.1	Single rubber wheel	239
7.1.2.2	Angled dual rubber wheels	239
7.1.2.3	Angled dual cast iron wheels	240
7.1.3	Attachments mounted on the row unit linkage	240
7.1.3.1	Disc furrower attachment	240
7.1.3.2	Bed leveler	240
7.1.3.3	Spring tines	241
7.1.3.4	Adjusting the row unit linkage attachments	241

7.1.4	Row unit mounted tillage	242
7.1.4.1	Row unit-mounted tillage coulter	242
7.1.4.2	Coulter with residue manager	242
7.1.4.3	Residue manager	242
7.1.4.4	Trashmaster attachment	243
7.1.4.5	Floating residue manager	243
7.1.5	Frame mounted tillage	243
7.1.5.1	Frame-mounted tillage coulter	243
7.1.5.2	Coulter with residue manager	244
7.1.5.3	Strip/ridge till discs	244
7.1.5.4	Stabilizing coulter	244
7.1.6	Coulter disc blades	244
7.1.7	Liquid fertilizer kit	246
7.1.8	Fertilizer Openers Kit	247
7.1.8.1	Double-disc fertilizer opener	247
7.1.8.2	Single-disc fertilizer opener	247
7.1.9	Tow hitch kit	247
7.1.10	Drive wheel mud scraper kit	248
7.1.11	Gauge wheel mud scraper kit	248
7.1.12	Weight kit	248
7.1.13	Marker kit	249
7.1.14	Safety and instructional sign replacement	249
8	Assembly	251
8.1	Assembly safety	253
8.2	Assembling the machine	254
8.2.1	Priming the hydraulic circuits	254
8.2.2	Removing the cover from the SMV emblem	255
8.2.3	Radar	256
8.2.4	Assembling the hydraulic pump	256
8.2.5	Filling the hydraulic tank	257
8.3	Checklists	258
8.3.1	Pre-delivery checklist	258
8.3.2	Delivery checklist	258
9	Index	259

1. Safety

1.1 Introduction	11
1.1.1 Safety alert symbol	11
1.1.2 Safety messages	11
1.1.3 Informational messages	11
1.1.4 Safety signs	11
1.1.5 A word to the operator	12
1.1.6 This manual	13
1.2 Operation	14
1.2.1 Prepare for operation	14
1.2.2 General information	14
1.2.3 Personal protective equipment	15
1.2.4 Seat instructions	15
1.2.5 Shield and guards	16
1.2.6 Exhaust warning	16
1.2.7 Flying debris	17
1.2.8 Handrails	17
1.2.9 Agricultural chemicals	17
1.3 Travel on public roads	18
1.4 Maintenance	20
1.4.1 General maintenance information	20
1.4.2 Fire prevention and first aid	21
1.4.3 High pressure leaks	22
1.4.4 Tire safety	23
1.4.5 Replacement parts	23
1.4.6 D-ring	24
1.5 Safety and informational signs	25
1.5.1 Danger - Crushing hazard	27
1.5.2 Warning - Crushing hazard	27
1.5.3 Warning - Crushing hazard	27
1.5.4 Danger - Electrical hazard	27
1.5.5 Danger - Electrical hazard	28
1.5.6 Warning - Chemical ingestion hazard	28
1.5.7 Warning - Fall hazard	28
1.5.8 Warning - Chemical ingestion hazard	28
1.5.9 Danger - Chemical	29
1.5.10 Warning - Shut off engine	29
1.5.11 Warning - High pressure	29
1.5.12 Warning - Operators manual	29
1.5.13 Speed sign	30
1.5.14 Warning - Crushing hazard	30
1.5.15 Warning - Crushing hazard	30
1.5.16 Warning - Crushing hazard	30
1.5.17 Warning - Shearing hazard	31
1.5.18 Warning - PTO speed	31
1.5.19 Danger - Entanglement hazard	31
1.5.20 Slow Moving Vehicle (SMV) sign	31
1.5.21 Reflector location	32
1.6 Cylinder stops	33
1.6.1 Wheel lift cylinder stops	33
1.6.2 Transport pins	33

1.1 Introduction

1.1.1 Safety alert symbol

The safety alert symbol means Attention! Become Alert! Your Safety Is Involved!

Look for the safety alert symbol both in this manual and on safety signs on this machine. The safety alert symbol will direct your attention to information that involves your safety and the safety of others.

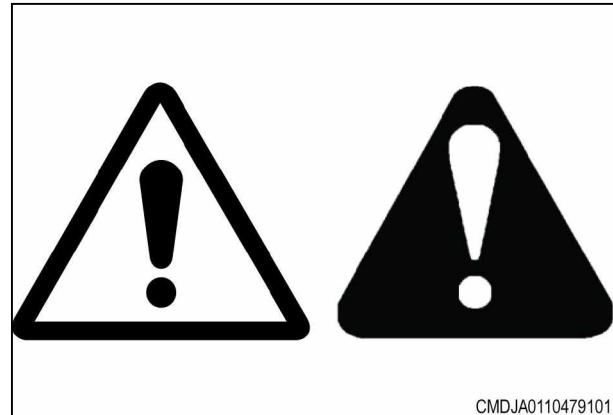 


Fig. 1

1.1.2 Safety messages

The words DANGER, WARNING or CAUTION are used with the safety alert symbol. Learn to recognize these safety alerts and follow the recommended precautions and safety practices.



DANGER:
Indicates an imminently hazardous situation that, if not avoided, will result in **DEATH OR VERY SERIOUS INJURY.**



WARNING:
Indicates a potentially hazardous situation that, if not avoided, could result in **DEATH OR SERIOUS INJURY.**



CAUTION:
Indicates a potentially hazardous situation that, if not avoided, may result in **MINOR INJURY.**



Fig. 2

1.1.3 Informational messages

The words important and note are not related to personal safety, but are used to give additional information and tips for operating or servicing this equipment.

IMPORTANT: *Identifies special instructions or procedures which, if not strictly observed, could result in damage to or destruction of the machine, process, or its surroundings*

NOTE: *Identifies points of particular interest for more efficient and convenient repair or operation.*

1.1.4 Safety signs



WARNING:
Do not remove or obscure safety signs. Replace any safety signs that are not readable or are missing. Replacement signs are available from your dealer in the event of loss or damage. The actual location of the safety signs is illustrated at the end of this section.

Keep signs clean by wiping off regularly. Use a mild soap and water solution if necessary.

If parts have been replaced or a used machine has been purchased, make sure all safety signs are present and in the correct location and can be read. Illustrations of safety sign locations are located at the rear of this section.

Replace any safety signs that can not be read, are damaged, or are missing. Clean the machine surface thoroughly with a mild soap and water solution before replacing signs. Replacement safety signs are available from your dealer.

1.1.5 A word to the operator

It is your responsibility to read and understand the safety section in this manual and the manual for all attachments before operating this machine. Remember you are the key to safety. Good safety practices not only protect you, but also the people around you.

Study the content in this manual and make the content a working part of your safety program. Keep in mind that this safety section is written only for this type of machine. Practice all other usual and customary safe working precautions, and above all remember - safety is your responsibility. You can prevent serious injury or death.

This safety section is intended to point out some of the basic safety situations that may be encountered during the normal operation and maintenance of your machine. This section also suggests possible ways of dealing with these situations. This section is not a replacement for other safety practices featured in other sections of this manual.

Personal injury or death may result if these precautions are not followed.

Learn how to operate the machine and how to use the controls properly.

Do not let anyone operate the machine without instruction and training.

For your personal safety and the personal safety of others, follow all safety precautions and instructions found in the manuals and on safety signs affixed to the machine and all attachments.

Use only approved attachments and equipment.

Make sure your machine has the correct equipment needed by the local regulations.

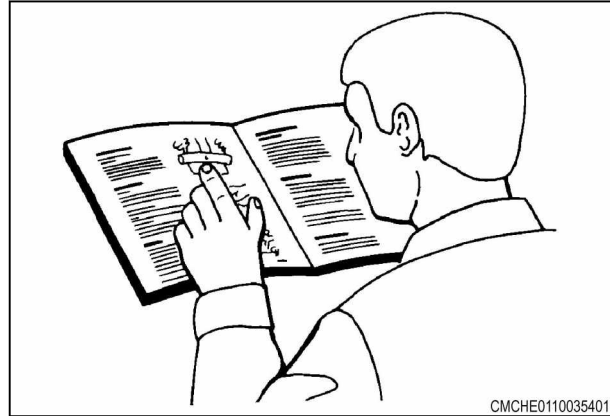 


Fig. 3



WARNING:

An operator should not use alcohol or drugs which can affect their alertness or coordination. An operator on prescription or 'over the counter' drugs needs medical advice on whether or not they can properly operate machines.



CAUTION:
If any attachments used on this equipment have a separate Operator Manual, see that manual for other important safety information.

1.1.6 This manual

This manual covers general safety practices for this machine. The operator manual must always be kept with the machine.

Right-hand and left-hand, as used in this manual, are determined by facing the direction the machine will travel when in use.

The photos, illustrations, and data used in this manual were current at the time of printing, but due to possible in-line production changes, your machine can vary slightly in detail. The manufacturer reserves the right to redesign and change the machine as necessary without notification.



WARNING:
In some of the illustrations and photos used in this manual, shields or guards may have been removed for clarity. Never operate the machine with any shields or guards removed. If the removal of shields or guards is necessary to make a repair, they must be replaced before operation.

1.2 Operation

1.2.1 Prepare for operation

Read and understand all operating instructions and precautions in this manual before operating or servicing the machine.

Make sure you know and understand the positions and operations of all controls. Make certain all controls are in neutral and the park brake is applied before starting the machine.

Make certain all people are well away from your area of work before starting and operating the machine. Check and learn all controls in an area clear of people and obstacles before starting your work. Be aware of the machine size and have enough space available to allow for operation. Never operate the machine at high speeds in crowded places.

Emphasize the importance of using correct procedures when working around and operating the machine. Do not let children or unqualified persons operate the machine. Keep others, especially children, away from your area of work. Do not permit others to ride on the machine.

Make sure the machine is in the proper operating condition as stated in the Operator Manual. Make sure the machine has the correct equipment required by local regulations.

All equipment has a limit. Make sure you understand the speed, brakes, steering, stability and load characteristics of this machine and the tractor before you start.

1.2.2 General information

When parking, park the machine and the tractor on a solid level surface. put all controls in neutral and apply the tractor park brake. Stop the tractor engine and take the key with you.

Make sure the tractor and implement are in the proper operating condition according to the operator manuals. Make sure the tractor brakes and the machine brakes are adjusted correctly.

The tractor must have enough weight and braking capacity, especially when operating on roads and terrain that is not even. Use a tractor of recommended size and weight to tow the machine. See the machine specifications for the minimum tractor size and weight.

Tractor must be equipped with rollover protective structure (ROPS) and a seat belt. use seat belt during operation.

Do not dismount from moving machinery.

Always operate the machine with the terminal turned on.

Never start the tractor with the PTO engaged or terminal turned on.

Stay off slopes too steep for operation.

Where possible avoid operating the machine near ditches, embankments, and holes. Reduce ground speed when operating on rough, slippery, or muddy surfaces and when turning or crossing slopes.

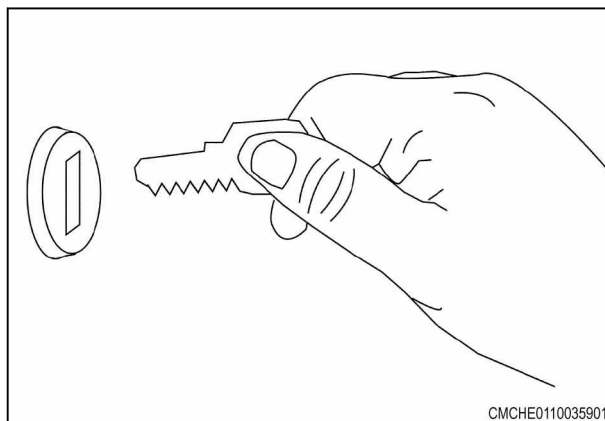 


Fig. 4

Be aware of the size of the machine and have enough space available to allow for operation.

Always lower the machine when not in use and relieve the pressure in the hoses and cylinders.

Do not stand between the tractor and the implement to install the hitch pin when the tractor engine is running.

Avoid contact with electrical power lines. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

Watch for overhead wires or other obstructions when raising the markers, and when moving the machine with the markers raised.

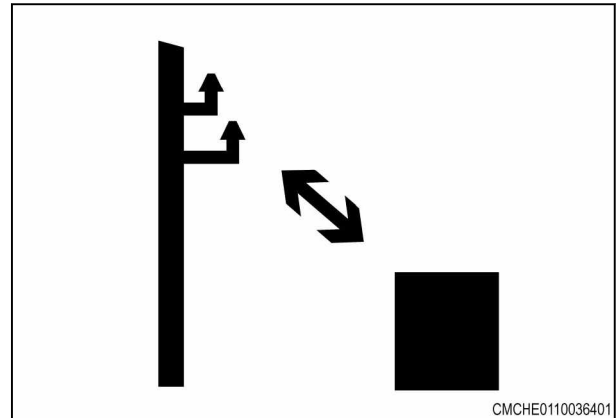 


Fig. 5

1.2.3 Personal protective equipment

Wear all personal protective equipment (PPE) and protective clothing issued to you or called for by job conditions and country/local regulations. PPE includes, but is not limited to, equipment to protect eyes, lungs, ears, head, hands and feet when operating, servicing, or repairing equipment.

Always keep hands, feet, hair, and clothing away from moving parts. Do not wear loose clothing, jewelry, watches, or other items that could entangle in moving parts. Tie up long hair that can also entangle in moving parts.

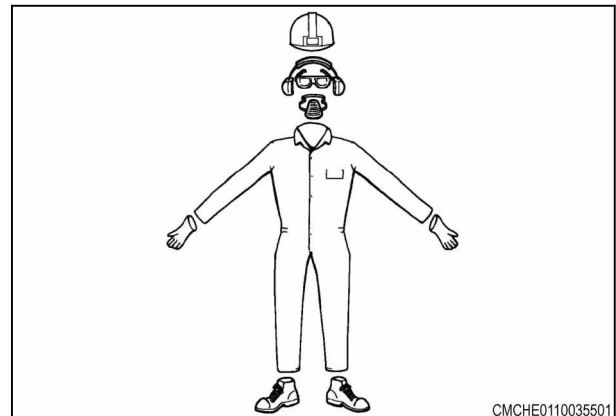 


Fig. 6

1.2.4 Seat instructions

Securely fasten the seat belt before operating the machine. Always remain seated and have the seat belt fastened while operating the machine. Replace the seat belts when they become worn or broken.

Never wear a seat belt loosely or with slack in the belt system. Never wear the seat belt in a twisted condition or pinched between the seat structural members.

When using the instructional seat, if equipped, securely fasten the seat belt. The instructional seat is to be used only to train new operators or diagnose a problem. The instructional seat is only intended for short periods of use. Extra riders,

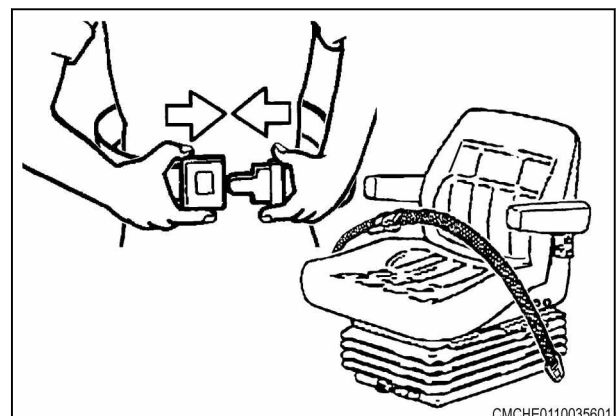 


Fig. 7

especially children, are not permitted on the machine.

When the instructional seat is used the machine must be driven at a slower speed and on level ground. Avoid quick starts, stops, and sharp turns. Avoid driving on highways or public roads.

1.2.5 Shield and guards

All shields and guards must be in the correct operating position and in good condition.

Do not open, remove, or reach around shields while the engine is operating. Entanglement in rotating belts and components can cause serious injury or death. Stay clear of rotating components.



Fig. 8

Do not operate the machine with the drive shaft shields open or removed. Entanglement in rotating drive shafts can cause serious injury or death. Stay clear of rotating components.

Make sure rotating guards turn freely.



Fig. 9

1.2.6 Exhaust warning

Never operate the engine in a closed building unless the exhaust is vented outside.

Do not tamper with or modify the exhaust system with unapproved extensions.

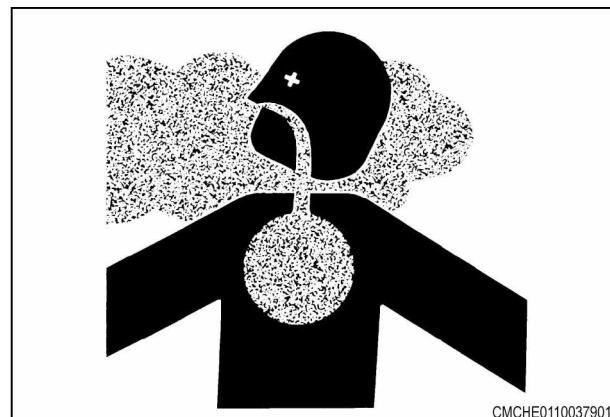 


Fig. 10

1.2.7 Flying debris



WARNING:
Be careful when operating along the side of a road or building. Rocks or other debris can be thrown from the machine during operation possibly resulting in injury.

Never stand near the machine during operation. Debris can be thrown from the machine during operation possibly resulting in injury.



Fig. 11

1.2.8 Handrails

Face the ladder and use the handrails when getting on or off the machine.



Fig. 12

1.2.9 Agricultural chemicals

Agricultural chemicals can be very hazardous. Improper use of fertilizer, fungicides, herbicides, insecticides and pesticides can injure people, plants, animals, soil and other people's property.

Always read and follow all manufacturers' instructions before opening any chemical container.

Even if you think you know the instructions, read and follow instructions each time you use a chemical.

Use the same precautions when adjusting, servicing, cleaning or storing the machine as used when installing chemicals into the hoppers or tanks.

Inform anyone who comes in contact with chemicals of the potential hazards involved and the safety precautions required.

Stand upwind and away from smoke from a chemical fire.

Store or dispose of all unused chemicals only in a manner as specified by the chemical manufacturer.

1.3 Travel on public roads

Make sure you understand the speed, brakes, steering, stability, and load characteristics of this machine before you travel on public roads.

Use good judgment when traveling on public roads. Maintain complete control of the machine at all times. Never coast down hills.

The maximum speed of farm equipment is governed by local regulations. Adjust travel speed to maintain control at all times. See the specifications for the maximum speed for this machine.

Make sure the tractor is in the proper operating condition according to the tractor operator manual. Make sure the tractor brakes and the machine brakes, if equipped, are adjusted correctly. The tractor must have enough weight and braking capacity, especially when operating on roads and terrain that is not even. To achieve proper braking capacity, use tractor of recommended size and weight to tow the machine. See the machine specifications for the minimum tractor weight.

Familiarize yourself with and obey all road regulations that apply to your machine. Consult your local law enforcement agency for local regulations regarding movement of farm equipment on public roads. Use head lamps, flashing warning lamps, tail lamps and turn signals, day and night, unless prohibited by local law.

Make sure all the flashers are operating prior to driving on the road. Make sure reflectors are correctly installed, in good condition, and wiped clean. Make sure the Slow Moving Vehicle (SMV) emblem is clean, visible, and correctly mounted on the rear of the machine.

Be aware of other traffic on the road. Keep well over to your own side of the road and pull over, whenever possible, to let faster traffic pass.

Be aware of the overall width, length, height, and weight of the machine. Be careful when transporting the machine on narrow roads and across narrow bridges.

If equipped, always install the safety transport chain between the implement and the tractor drawbar.

- Use a safety transport chain with a strength rating equal to or more than the gross weight of the towed machines.
- Connect the safety transport chain to the tractor drawbar and use a retainer on the hitch pin.
- Supply only enough slack in the safety transport chain to permit turning.
- Do not use the safety transport chain as a tow chain for towing.

Install the marker lockup pins before transporting or parking the machine.

Install the wheel cylinder lockup channels before transporting or parking the machine.

Vertical fold models: Always install the wing lockup pins before transporting or parking the machine.

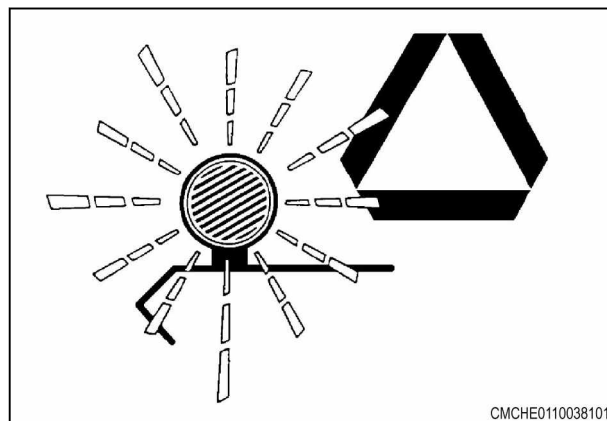 


Fig. 13

Watch for overhead wires and other obstructions. Avoid contact with electrical power lines. Contact with electrical power lines can cause electrical shock, resulting in very serious injury or death.

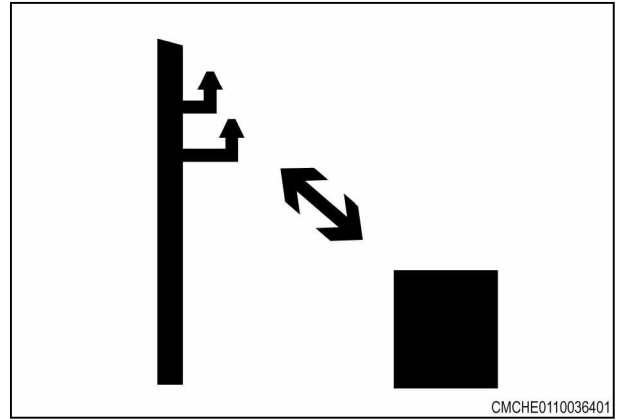 


Fig. 14

1.4 Maintenance

1.4.1 General maintenance information

Before doing any unplugging, lubricating, servicing, cleaning, or adjusting:

- Park the machine on a solid level surface.
- Disengage the tractor power take-off.
- Make sure all controls are in the neutral position and apply the park brake.
- Make sure all implements and attachments have been lowered to the ground.
- Stop the engine and take the key with you.
- Look and Listen! Make sure all moving parts have stopped.
- Put blocks in front of and behind the wheels of the machine before working on or under the machine.

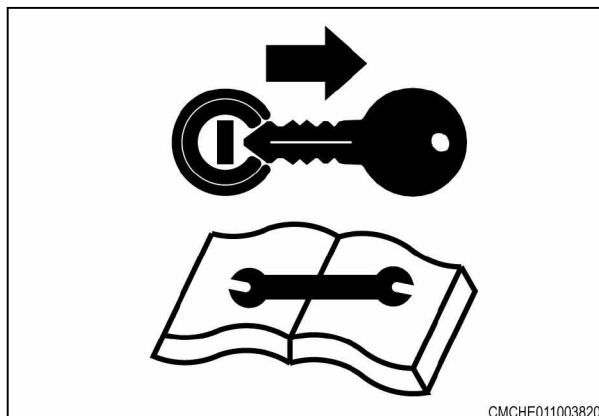 


Fig. 15

Do not leave the tractor or implement unattended with the engine running.

Do not pull crop or any other object from the machine while the machine engine is running. Moving parts can pull you in faster than you can move away.

Check all nuts and bolts periodically for tightness, especially wheel mounting hardware.

Do not attempt to service or adjust the machine until all moving parts have stopped.

Check all nuts and bolts periodically for tightness, especially wheel mounting hardware.

Be aware of the size of parts when doing service work. Never stand under or near a part being moved with lifting equipment.

After unplugging, lubricating, servicing, cleaning, or adjusting the machine make sure all tools and equipment have been removed.

Make sure electrical connectors are clean and free of dirt or grease before connecting.

Check for loose, broken, missing, or damaged parts. Make sure the machine is in good repair. Make sure all guards and shields are in position.

Always raise implement, shut off tractor engine, apply the parking brake, shift to park position (or neutral) remove the key and install the cylinder stops channels before working around the machine.

Avoid working under the machine. However, if it becomes unavoidable to do so, make sure the machine is securely blocked and the cylinder lockup channels are in position.

When working around discs, be careful to not get cut on sharp edges.

Never service, check or adjust drive chains or belts while the engine is running.

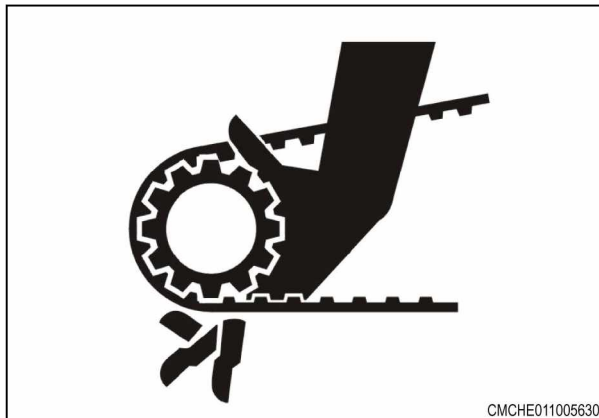 


Fig. 16

Do not operate the machine with the drive shaft shields open or removed. Entanglement in rotating drive shafts can cause serious injury or death.

Stay clear of rotating components.

Make sure rotating guards turn freely.

A loose yoke can slip off a shaft and result in injury to persons or damage to the machine.

When installing a quick disconnect yoke, the spring activated locking pins must slide freely and be seated in the groove on the shaft. Pull on the driveline to make sure the quick disconnect yoke can not be pulled off the shaft.

Remove spilled oil, antifreeze or fuel immediately from the steps, platform, and other access areas.

Keep all access areas clean and free of obstructions.



Fig. 17



Fig. 18

1.4.2 Fire prevention and first aid

Be prepared for emergencies.

Keep a first aid kit handy for treatment of minor cuts and scratches.

Always carry one or more fire extinguishers of the correct type. Check fire extinguishers regularly as instructed by the manufacturer. Make sure fire extinguishers are properly charged and in operating condition.

Due to the nature of the crops this machine will operate in, the risk of fire is of concern. Use a water type fire extinguisher or other water source for a fire in crop.

For fires involving anything other than crop, such as oil or electrical components, use a dry chemical fire extinguisher with an ABC rating.

Mount fire extinguishers within easy reach of where fires can occur.

Frequently remove accumulated crop material from the machine and check for overheated components. Check the machine daily for any noises that are not normal. Such noises could indicate a failed component that can cause excess heat.

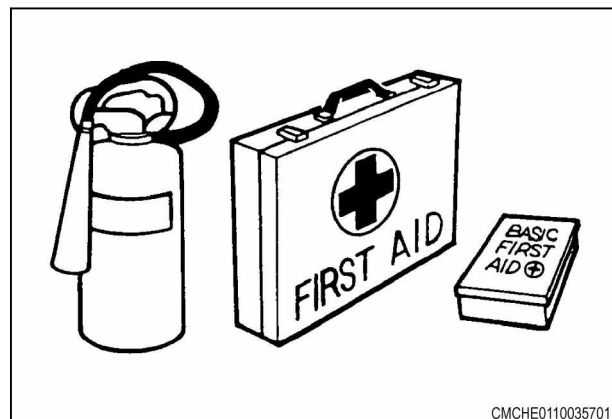 


Fig. 19

If any flame cutting, welding, or arc welding is to be done on the machine or attachments, make sure to clear any crop material or debris from around the area. Make sure the area below the work area is clear of any flammable material as falling molten metal or sparks can ignite the material.

If fire occurs stand upwind and away from smoke from the fire.

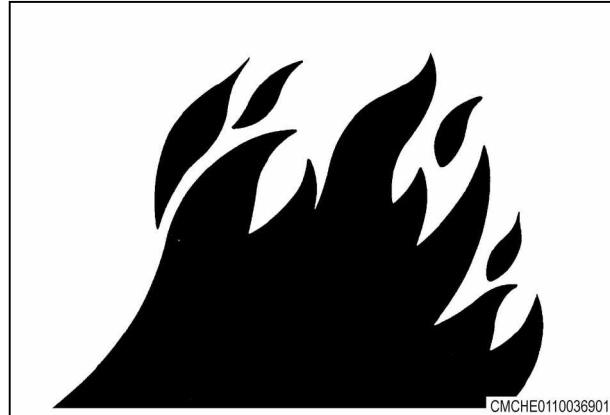 


Fig. 20

1.4.3 High pressure leaks

Fluid leaking from the hydraulic system or the fuel injection system under high pressure can be very hard to see. The fluid can go into the skin causing serious injury.

Fluid injected into the skin must be surgically removed within a few hours. If not removed immediately, serious infection or reaction can develop. Go immediately to a doctor who knows about this type of injury.



Fig. 21

Use a piece of cardboard or wood to search for possible leaks. Do not use your bare hand. Wear leather gloves for hand protection and safety goggles for eye protection.

Relieve all pressure before loosening any hydraulic lines. Relieve the pressure by lowering raised equipment, shutting off accumulator valve, if equipped, and shutting off the engine. Tighten all connections securely before applying pressure.

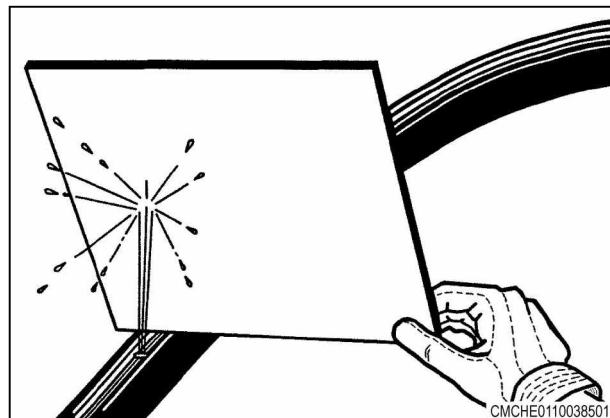 


Fig. 22

1.4.4 Tire safety

Check tires for cuts, bulges, and correct pressure. Replace worn or damaged tires. When tire service is needed, have a qualified tire mechanic service the tire. Tire changing can be very hazardous and must be done by qualified tire mechanic using proper tools and equipment. See the Specifications Section for the correct tire size.

Tire explosion and/or serious injury can result from over inflation. Do not exceed the tire inflation pressures. See the Specifications Section for the correct tire pressure.

Do not inflate a tire that is seriously under inflated or has been run flat. Have the tire checked by qualified tire mechanic.

Do not weld on the rim when a tire is installed. Welding will make an air/gas mixture that can cause an explosion and burn with high temperatures. This danger applies to all tires, inflated or deflated. Removing air or breaking the bead is not enough. The tire must be completely removed from the rim prior to welding.

When preparing a calcium chloride solution for fluid ballast the tractor tires, never pour water onto the calcium chloride. A chlorine gas can be generated which is poisonous and explosive. This can be avoided by slowly adding calcium chloride flakes to water and stirring until they are dissolved.

When seating tire beads onto rims, never exceed 2.4 bar (35 psi) or the maximum inflation pressure specified on the tire. Inflation beyond this maximum pressure may break the bead, or even the rim, with explosive force.

Lower the machine to the ground before removing a wheel for tire repair.



Fig. 23

CMCHE0110039401

1.4.5 Replacement parts

Where replacement parts are necessary for periodic maintenance and servicing, genuine replacement parts must be used to restore your equipment to original specifications.

The manufacturer will not accept responsibility for installation of unapproved parts and/or accessories and damages as a result of their usage.

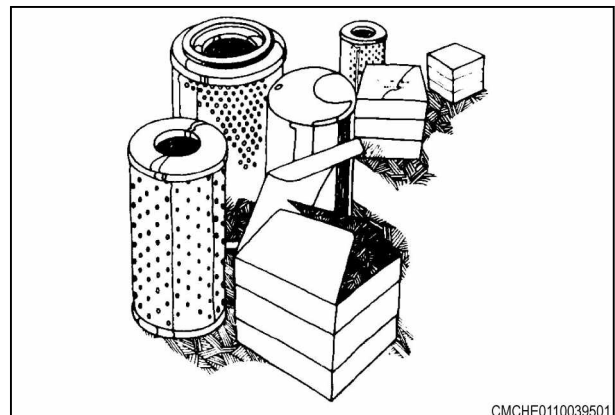 


Fig. 24

CMCHE0110039501

1.4.6 D-ring

The D-ring is used for production only. Do not lift from the D-ring (1).


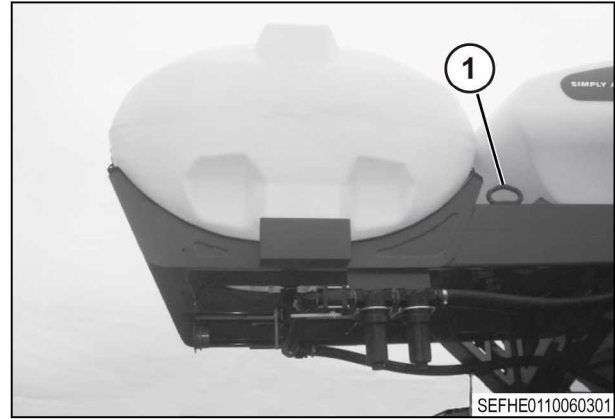 


Fig. 25


1.5 Safety and informational signs

 The safety signs are shown for all options and configurations. Your machine can be different.

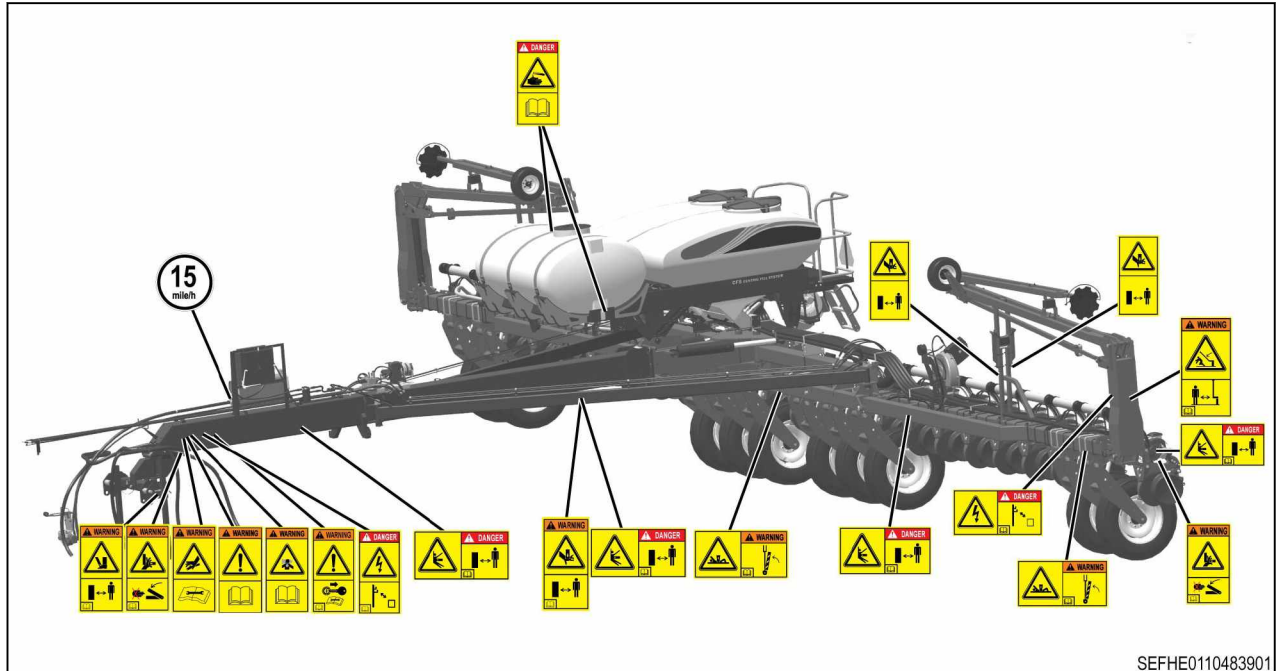

SEFHE0110483901

 Fig. 26 The left-hand side of the machine

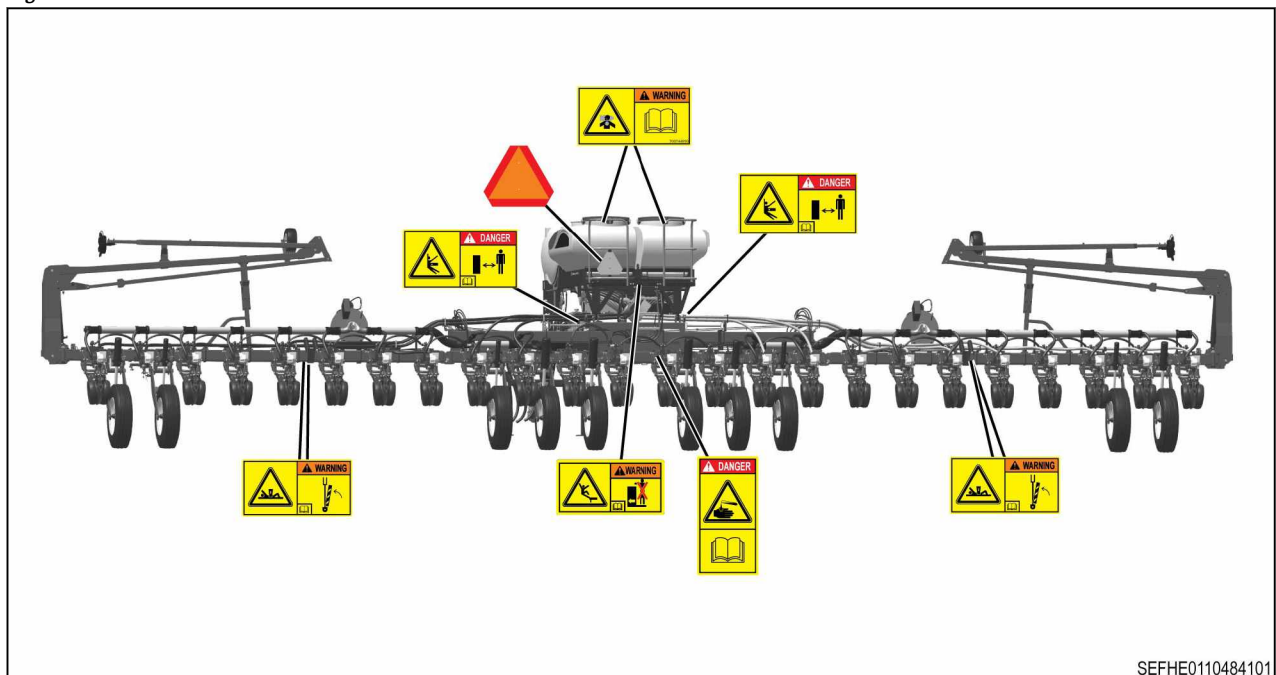

SEFHE0110484101

Fig. 27 The rear view of the machine

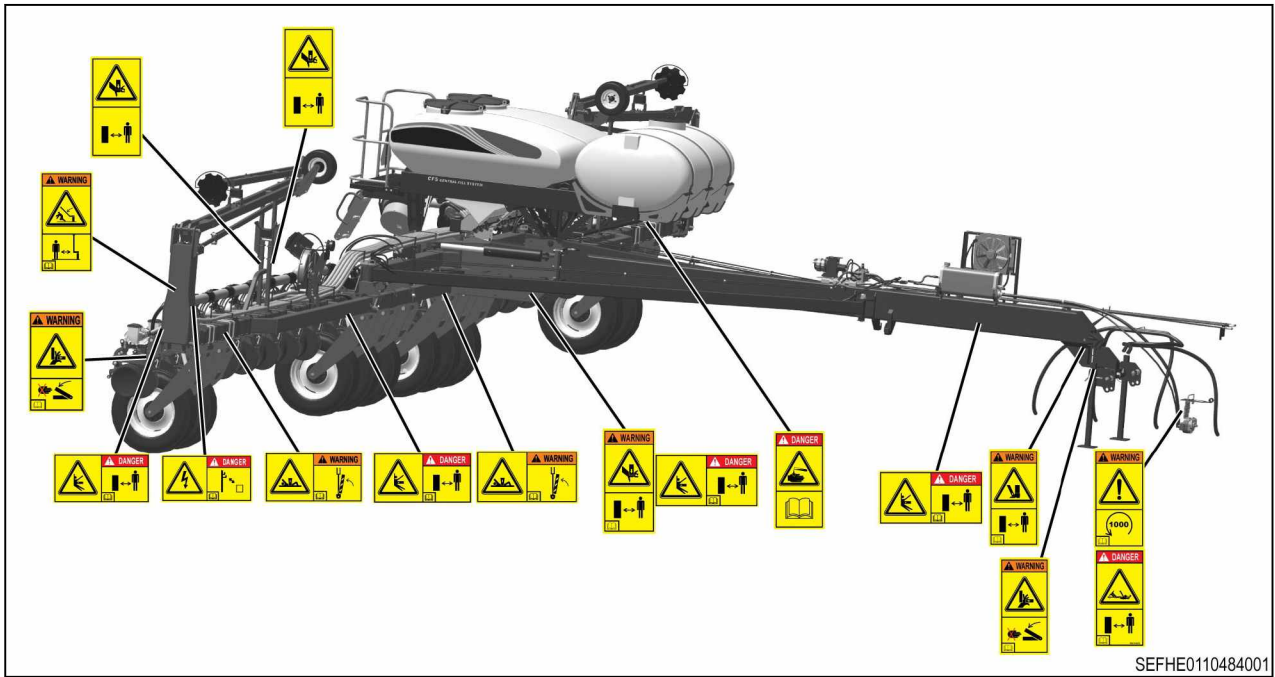 


Fig. 28 The right-hand view of the machine

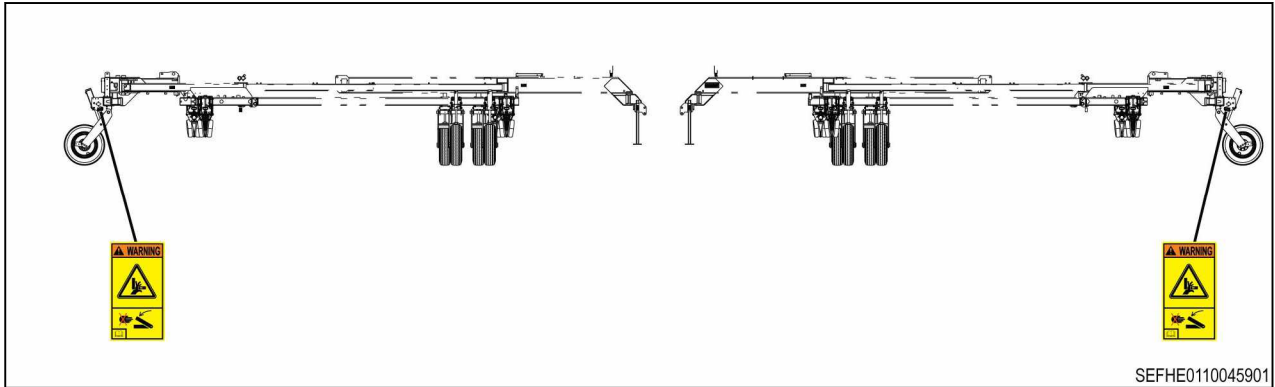 


Fig. 29 The right-hand and left-hand view of the machine folded
Residue manager

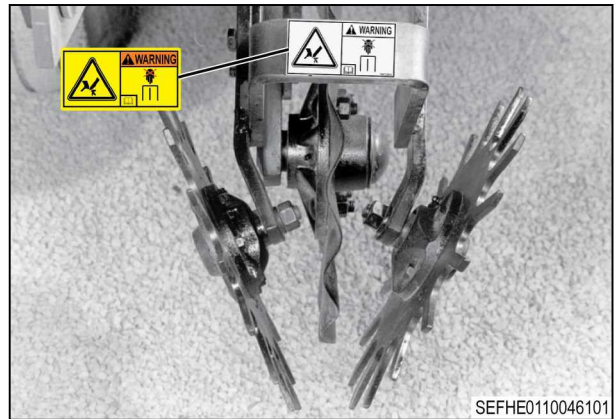 




Fig. 30


1.5.1 Danger - Crushing hazard

Danger - Crushing hazard	
 <p>CMFH0110041101</p>	<p>Crushing hazard - planter frame movement.</p> <p>Stay clear of this area while engine and machine are operating.</p>


1.5.2 Warning - Crushing hazard

Warning - Crushing hazard	
 <p>CMFH0110041301</p>	<p>Crushing hazard, planter frame drop.</p> <p>Install lift cylinder lockups before working on the machine.</p>


1.5.3 Warning - Crushing hazard

Warning - Crushing hazard	
 <p>CMFH0110041201</p>	<p>Foot crushing hazard, part may lower without warning.</p> <p>Stay clear of this area.</p>


1.5.4 Danger - Electrical hazard

Danger - Electrical hazard	
 <p>CMFH0110042301</p>	<p>Electrical shock/electrocution hazard, markers.</p> <p>Keep clear of overhead electrical powerlines.</p>


1.5.5 Danger - Electrical hazard

Danger - Electrical hazard	
 CMFH0110042101	<p>Electrical shock/electrocution hazard, markers. Keep clear of overhead electrical powerlines.</p>


1.5.6 Warning - Chemical ingestion hazard

Warning - Chemical ingestion hazard	
 CMFH0110042601	<p>Chemical ingestion hazard, lungs - opening the cover. Refer to the Operator's Manual and the chemical manufacturer's instructions.</p>


1.5.7 Warning - Fall hazard

Warning - Fall hazard	
 CMFH0110042701	<p>Falling off hazard. Do not ride on the machine when it is operating or moving.</p>


1.5.8 Warning - Chemical ingestion hazard

Warning - Chemical ingestion hazard	
 CMFH0110041501	<p>Chemical ingestion hazard, lungs - opening the cover. Refer to the Operator's Manual and the chemical manufacturer's instructions.</p>


1.5.9 Danger - Chemical

Danger - Chemical	
 <p>CMFH0110219701</p>	<p>Chemical hazard - risk of personal injury</p> <p>Read the Operator Manual for safety information and operating instructions before operating the machine.</p>


1.5.10 Warning - Shut off engine

Warning - Shut off engine	
 <p>CMFH0110041801</p>	<p>General safety alert.</p> <p>Shut off engine and remove key and make sure all components have stopped rotating before performing maintenance or repair work.</p>


1.5.11 Warning - High pressure

Warning - High pressure	
 <p>CMFH0110041701</p>	<p>Escaping fluid under pressure can penetrate the skin and cause serious injury.</p> <p>See the maintenance manual for proper servicing procedures. Shut off engine, remove key and relieve pressure before performing maintenance or repair work.</p>



1.5.12 Warning - Operators manual

Warning - Operators manual	
 <p>CMFH0110041601</p>	<p>General safety alert.</p> <p>Read and understand the Operator's Manual before operating the machine.</p>


1.5.13 Speed sign

Speed sign	
 CMFH0110042001	The maximum transport speed of the machine is 25 kph (15 mph).


1.5.14 Warning - Crushing hazard

Warning - Crushing hazard		
 CMFH0110041901	Crushing/shearing hazard - fingers and hand. Stay clear of this area while engine and machine are operating.	 CMFH0110042401

1.5.15 Warning - Crushing hazard

Warning - Crushing hazard	
 CMFH0110042201	Crushing hazard - row marker drop. Stay clear of area around row marker when engine is running.

1.5.16 Warning - Crushing hazard

Warning - Crushing hazard	
 CMFH0110041401	Crushing/shearing hazard - fingers and hand. Stay clear of this area while engine and machine are operating.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com