



**SANY**


Quality Changes the World

# Crawler Hydraulic Excavator

**SY195C-9**

**SY205C-9**

**SY215C-9**

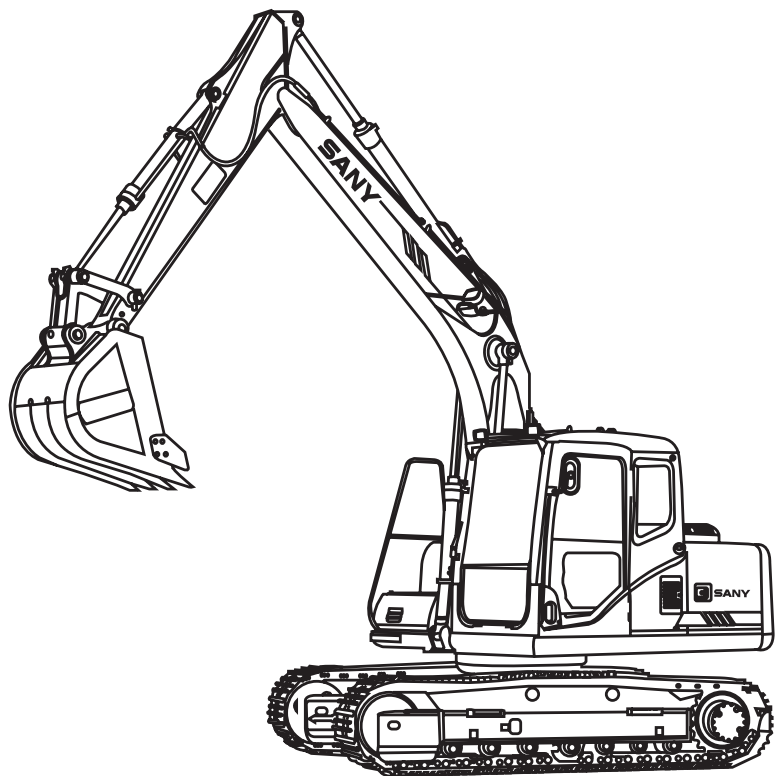

**Shop Manual**

# **SANY**

## **SY195/205/215C9**

### **Crawler Hydraulic Excavator**

#### **Shop Manual**

- Compiled for experienced technicians, this shop manual aims to provide technical information required for maintenance and repair of the machine.
- Work equipment or optional components not available locally may be included in this shop manual. Consult authorized Sany dealers for information on these parts and components. Material or technical specification is subject to change without prior notice.
- SY195C9, SY205C9 and SY215C9 excavators employ MITSUBISHI 6D34TL-20 engine. Information on the engine is in Chapter 9.



## **WARNING**

**Read and follow the safety precautions and instructions in this manual and on the machine decals. Failure to do so may cause serious injury, death or property damage.**

---

# Table of Contents

## 1 Introduction

1.1 How to Read the Shop Manual.....	1-3
1.2 Terms for Maintenance Standard.....	1-6
1.3 Handling Electrical and Hydraulic Components.....	1-9
1.3.1 Points to remember when handling electric components .....	1-9
1.3.2 Points to remember when handling hydraulic equipment .....	1-18
1.4 Hose Connector.....	1-20
1.4.1 Type of hose connector.....	1-21
1.4.2 Hose connector tightening torque table .....	1-21
1.4.3 Connection of O-rings.....	1-22
1.5 Table of Standard Tightening Torques .....	1-23
1.6 Type of Bolts .....	1-24
1.7 Tightening Sequence .....	1-24
1.8 Maintenance of Half Flanges .....	1-25
1.8.1 Table of tightening torques for half flange bolts .....	1-25
1.9 Conversion Table .....	1-26

## 2 Shop Safety

2.1 Hazard Alert Information .....	2-3
2.2 General Shop Safety .....	2-6
2.2.1 Rules and shop behavior .....	2-7
2.2.2 Housekeeping .....	2-7
2.2.3 Shop Liquids Storage.....	2-8
2.2.4 Cleaning Parts .....	2-8
2.2.5 Jacking Up the Machine.....	2-9
2.2.6 Electrical Dangers.....	2-9
2.2.7 Removing Attachments.....	2-10
2.2.8 Cleaning the Machine .....	2-10
2.2.9 Using the Correct Tools.....	2-10
2.2.10 Hoisting a Load .....	2-11
2.2.11 Appropriate Working Apparel .....	2-12
2.2.12 Safety Partners .....	2-12
2.2.13 Two people when engine running .....	2-13
2.2.14 Driving Pins.....	2-13
2.2.15 Aligning Parts or Components .....	2-14

2.2.16	Fire Extinguisher and Emergency Exits .....	2-14
2.2.17	Personal Protective Equipment.....	2-14
2.2.18	Running the Machine .....	2-15
2.2.19	Accumulator .....	2-16
2.2.20	Adding Fluids to a System .....	2-16
2.2.21	Track Recoil Springs .....	2-17
2.2.22	High-Pressure Fluid Lines.....	2-17
2.2.23	Safe Work Preparations.....	2-18
2.2.24	Mounting and Dismounting .....	2-19
2.2.25	Battery Hazards .....	2-20
2.2.26	Jump-Start Safety .....	2-21
2.2.27	Disconnecting the System Power .....	2-21
2.2.28	Lockout/tagout .....	2-22
2.2.29	Sequence of Procedures .....	2-22
2.2.30	Chemical hazard .....	2-24
2.2.31	Material Safety Data Sheets (MSDS) .....	2-24
2.3	Precautions for sling work and giving signals.....	2-25

### 3 Specifications

3.1	Dimensions .....	3-3
3.2	Working Ranges .....	3-4
3.3	Technical Specifications.....	3-5
3.3.1	Engine.....	3-5
3.3.2	Swing motor .....	3-5
3.3.3	Control valve .....	3-5
3.3.4	Travel motor .....	3-6
3.4	Weight Table .....	3-7
3.5	Recommended Oil, Fuel and Coolant.....	3-8
3.6	Capacity Table .....	3-9
3.7	Engine Performance Curve .....	3-10

### 4 Structure and Function

4.1	Engine and Cooling System .....	4-3
4.1.1	Engine-related parts.....	4-3
4.1.2	Radiator and intercooler.....	4-4
4.2	Power Train.....	4-5
4.2.1	Power transmission system .....	4-5
4.2.2	Final drive assembly .....	4-6

4.2.3	Swing machinery.....	4-10
4.2.4	Swing bearing .....	4-12
4.3	Undercarriage and Frame.....	4-13
4.3.1	Track frame and recoil spring.....	4-13
4.3.2	Idler .....	4-15
4.3.3	Carrier roller .....	4-17
4.3.4	Track roller .....	4-18
4.3.5	Track shoe .....	4-19
4.3.6	Triple grouser shoe .....	4-23
4.4	Hydraulic System, Part 1 .....	4-24
4.4.1	Hydraulic equipment layout.....	4-24
4.4.2	Hydraulic tank and filter .....	4-26
4.4.3	Hydraulic pump .....	4-27
4.4.4	Pilot pump .....	4-34
4.4.5	Regulator .....	4-35
4.4.5.1	Control mechanism makeup .....	4-37
4.4.5.2	Adjustment of the regulator .....	4-38
4.4.5.3	Operation .....	4-40
4.5	Hydraulic System, Part 2 .....	4-43
4.5.1	Control valve .....	4-43
4.5.2	Operating principle.....	4-46
4.5.2.1	When spool is in neutral position .....	4-46
4.5.2.2	Travel .....	4-48
4.5.2.3	Arm.....	4-49
4.5.2.4	Boom.....	4-54
4.5.2.5	Bucket.....	4-57
4.5.2.6	Swing .....	4-59
4.5.2.7	Option .....	4-61
4.5.2.8	Travel straight .....	4-62
4.5.2.9	Lock valve function .....	4-63
4.5.2.10	Main relief valve function .....	4-65
4.5.2.11	Port relief valve function.....	4-66
4.5.3	Section view.....	4-70
4.6	Hydraulic System, Part 3 .....	4-81
4.6.1	Swing motor .....	4-81
4.6.2	Swing holding brake.....	4-83
4.6.3	Relief valve portion .....	4-84
4.6.4	Reverse prevention valve .....	4-86

4.6.4.1	Operation drawing.....	4-86
4.6.4.2	Explanatory drawing of effects.....	4-87
4.6.5	Center swivel joint.....	4-89
4.6.6	Travel motor.....	4-91
4.6.6.1	Operation of components.....	4-93
4.6.7	Valve control system.....	4-105
4.6.8	Pilot valve.....	4-107
4.6.8.1	Work equipment and swing pilot valve.....	4-107
4.6.8.2	Travel PPC valve.....	4-111
4.6.9	Solenoid valve.....	4-115
4.6.10	Accumulator.....	4-116
4.6.11	Pilot oil filter.....	4-117
4.6.12	Pump oil pressure sensor.....	4-118
4.6.13	Hydraulic cylinder.....	4-119
4.6.14	Work equipment.....	4-121
4.7	Air Conditioning System.....	4-127
4.7.1	A/C components layout drawing.....	4-128
4.7.2	Control panel.....	4-129
4.7.3	Circuit diagram.....	4-130
4.7.4	Refrigeration principle.....	4-132
4.7.4.1	Refrigeration cycle diagram.....	4-132
4.7.4.2	Heating cycle diagram.....	4-132
4.7.5	Compressor.....	4-133
4.7.6	Clutch.....	4-135
4.7.8	Condenser.....	4-136
4.7.7	Expansion valve.....	4-136
4.7.9	Evaporator.....	4-137
4.7.10	Receiver tank.....	4-137
4.7.11	Pressure switch.....	4-138
4.7.12	Fresh air sensor.....	4-139
4.7.13	Refrigerant.....	4-139
4.7.14	Compressor oil.....	4-158
4.8	Engine Control.....	4-159
4.8.1	System operation.....	4-160
4.8.2	Components.....	4-161
4.8.2.1	Fuel control dial.....	4-161
4.8.2.2	Controller.....	4-163
4.9	Electrical Control System.....	4-165

4.9.1 Control function.....	4-165
4.9.2 Machine control system diagram .....	4-166
4.9.3 Engine and pump composite control function .....	4-168
4.9.4 Pump control function .....	4-172
4.9.4.1 Electrical positive flow control .....	4-173
4.9.4.2 Constant power control .....	4-176
4.9.5 Valve control function.....	4-178
4.9.5.1 Bucket flow control.....	4-179
4.9.5.2 Swing priority control.....	4-180
4.9.6 Duo travel speed control .....	4-181
4.9.7 Engine preheating/overheating alarm .....	4-183
4.9.7.1 Engine preheating.....	4-184
4.9.7.2 Engine overheating alarm .....	4-185
4.9.8 Engine oil under–pressure alarm .....	4-185
4.9.9 Auto deceleration/acceleration control .....	4-186
4.9.10 Engine speed calibration function .....	4-188
4.9.11 Electrical Components .....	4-190
4.9.11.1 Pump pressure sensor .....	4-190
4.9.11.2 Pilot pressure sensor .....	4-191
4.9.11.3 Engine speed sensor .....	4-192
4.9.11.4 Coolant temperature sensor.....	4-193
4.9.11.5 Fuel level sensor .....	4-194
4.9.11.6 Oil pressure switch.....	4-195
4.10 Monitoring System.....	4-196
4.10.1 Machine monitor .....	4-197
4.10.2 Monitor functions.....	4-198
4.10.3 Monitor operation.....	4-201

## 5 Standard Values

5.1 Standard Values of Engine - related Parts.....	5-3
5.2 Standard Values of Chassis-related Parts .....	5-4

## 6 Testing and Adjusting

6.1 Engine Speed - Test and Calibrate .....	6-3
6.1.1 Testing .....	6-3
6.1.2 Adjusting .....	6-3
6.2 Exhaust Gas Color - Test.....	6-5
6.3 Valve Clearance - Adjust.....	6-7



6.3.1 Testing.....	6-7
6.3.2 Adjusting .....	6-9
6.4 Compression Pressure - Measure .....	6-10
6.5 Fuel Injection Timing - Test and Adjust .....	6-12
6.5.1 Testing.....	6-12
6.5.2 Adjusting .....	6-14
6.6 Engine Oil Pressure - Measure.....	6-16
6.7 Engine Speed Sensor - Adjust.....	6-18
6.8 A/C Compressor Belt Tension - Test and Adjust .....	6-19
6.8.1 Testing .....	6-19
6.8.2 Adjusting .....	6-19
6.9 Swing Bearing Clearance - Measure .....	6-21
6.10 Track Tension - Test and Adjust .....	6-23
6.10.1 Testing.....	6-23
6.10.2 Adjusting .....	6-24
6.11 Hydraulic Pressure in Hydraulic Circuits - Test and Adjust .....	6-25
6.11.1 Measuring .....	6-25
6.11.2 Adjusting.....	6-27
6.12 Control Circuit Oil Pressure - Test and Adjust.....	6-29
6.12.1 Testing.....	6-29
6.12.2 Adjusting .....	6-30
6.13 Solenoid Valve Output Pressure - Measure.....	6-31
6.14 Pilot Valve Output Pressure - Measure.....	6-33
6.15 Pilot Valves (Work Equipment and Swing) - Adjust .....	6-35
6.16 Work Equipment Hydraulic Drift - Test.....	6-36
6.17 Residual Pressure in Hydraulic Circuit - Release .....	6-39
6.18 Oil Leakage - Measure .....	6-40
6.19 Air in Each Component - Bleed.....	6-45

## 7 Troubleshooting

7.1 Points to Remember When Troubleshooting .....	7-3
7.2 Troubleshooting Procedures.....	7-5
7.3 Connector Location and Electrical Circuit Diagram .....	7-8
7.3.1 Connector location layout .....	7-12
7.3.2 Electrical element circuit diagram (cab circuit).....	7-18
7.3.3 Electrical control circuit diagram (engine circuit).....	7-20
7.3.4 Electrical control circuit diagram (sensor and solenoid valve circuit).....	7-22
7.3.5 SWP type connector .....	7-23

7.3.6 A/AMP type connector .....	7-24
7.3.7 DT type connector .....	7-25
7.4 Failure Symptoms and Troubleshooting Codes.....	7-26
7.5 Troubleshooting with an Event Code .....	7-28
7.6 Troubleshooting of Electrical System (E - Mode).....	7-63
7.7 Troubleshooting of Hydraulic and Mechanical Systems (H - Mode).....	7-93

## 8 Disassembly and Assembly

8.1 How to Read This Manual .....	8-3
8.1.1 Removing and Installing an Assembly .....	8-3
8.1.2 Disassembling and assembling an assembly .....	8-3
8.1.3 Special tools.....	8-3
8.2.1 The symbols used in this section .....	8-4
8.2 Operating Precautions .....	8-4
8.3 Start Motor AS - Remove and Install .....	8-8
8.3.1 Removal.....	8-8
8.3.2 Installation.....	8-8
8.4 Injection Pump AS - Remove and Install .....	8-9
8.4.1 Removal.....	8-9
8.4.2 Installation.....	8-11
8.5 Engine Front Seal - Remove and Install.....	8-13
8.5.1 Removal.....	8-13
8.5.2 Installation.....	8-13
8.6 Engine Rear Seal - Remove and Install.....	8-14
8.6.1 Removal.....	8-14
8.6.2 Installation.....	8-15
8.7 Cylinder Head AS - Remove and Install .....	8-16
8.7.1 Removal.....	8-16
8.7.2 Installation.....	8-20
8.8 Radiator AS - Remove and Install.....	8-22
8.8.1 Removal.....	8-22
8.8.2 Installation.....	8-25
8.9 Engine and Hydraulic Pump AS - Remove and Install .....	8-26
8.9.1 Removal.....	8-26
8.9.2 Installation.....	8-32
8.10 Final Drive AS - Remove and Install.....	8-33
8.10.1 Removal.....	8-33
8.10.2 Installation.....	8-34

8.11 Final Drive AS - Disassemble and Assemble .....	8-35
8.11.1 Disassembly .....	8-35
8.11.2 Assembly .....	8-39
8.12 Swing Motor and Swing Drive AS - Remove and Install .....	8-44
8.12.1 Removal .....	8-44
8.12.2 Installation .....	8-45
8.13 Swing Motor and Swing Drive AS - Disassemble and Assemble.....	8-46
8.13.1 Disassembly .....	8-46
8.13.2 Assembly .....	8-51
8.14 Idler AS - Disassemble and Assemble .....	8-56
8.14.1 Disassembly .....	8-56
8.14.2 Assembly .....	8-57
8.15 Sprocket - Remove and Install.....	8-60
8.15.1 Removal .....	8-60
8.15.2 Installation .....	8-60
8.16 Track AS - Remove and Install .....	8-61
8.16.1 Removal .....	8-61
8.16.2 Installation .....	8-63
8.17 Swing Bearing AS - Remove and Install .....	8-64
8.17.1 Removal .....	8-64
8.17.2 Installation .....	8-65
8.18 Swing Platform AS - Remove and Install .....	8-66
8.18.1 Removal .....	8-66
8.18.2 Installation .....	8-69
8.19 Swivel Joint AS - Remove and Install .....	8-70
8.19.1 Removal .....	8-70
8.19.2 Installation .....	8-72
8.20 Swivel Joint AS - Disassemble and Assemble .....	8-73
8.20.1 Disassembly .....	8-73
8.20.2 Assembly .....	8-74
8.21 Hydraulic Tank AS - Remove and Install.....	8-75
8.21.1 Removal .....	8-75
8.21.2 Installation .....	8-77
8.22 Control Valve AS - Remove and Install .....	8-78
8.22.1 Removal .....	8-78
8.22.2 Installation .....	8-82
8.23 Hydraulic Pump AS - Remove and Install .....	8-83
8.23.1 Removal .....	8-83

8.23.2 Installation.....	8-87
8.24 Middle Oil Seal (Hydraulic Pump Input Shaft)- Remove and Install .....	8-88
8.24.1 Removal.....	8-88
8.24.2 Installation.....	8-88
8.25 Pilot Valve AS (Work Equipment) - Disassemble and Assemble .....	8-89
8.25.1 Assembly.....	8-89
8.26 Pilot Valve AS (Travel) - Disassemble and Assemble.....	8-91
8.26.1 Assembly.....	8-91
8.27 Hydraulic Cylinder AS - Disassemble and Assemble.....	8-92
8.27.1 Disassembly.....	8-93
8.27.2 Assembly.....	8-98
8.28 Work Equipment AS - Remove and Install.....	8-103
8.28.1 Removal.....	8-103
8.28.2 Installation.....	8-105
8.29 Air Conditioner AS - Remove and Install.....	8-106
8.29.1 Removal.....	8-106
8.29.2 Installation.....	8-110
8.30 Counterweight AS - Remove and Install.....	8-111
8.30.1 Removal.....	8-111
8.30.2 Installation.....	8-112
8.31 Cab AS - Remove and Install.....	8-113
8.31.1 Removal.....	8-113
8.31.2 Installation.....	8-117
8.32 Cab Window Glass – Disassemble and Assemble.....	8-118
8.32.1 Removal.....	8-119
8.32.2 Installation.....	8-123
8.33 Front Window AS - Disassemble and Assemble.....	8-136
8.33.1 Disassemble .....	8-136
8.33.2 Assemble .....	8-139
8.34 Monitor - Remove and Install.....	8-144
8.34.1 Removal.....	8-144
8.34.2 Installation.....	8-144
8.35 Controller AS - Remove and Install.....	8-145
8.35.1 Removal.....	8-145
8.35.2 Installation.....	8-145
8.36 Radio .....	8-146
8.36.1 Structure .....	8-146
8.36.2 Removal.....	8-147

8.36.3	Installation.....	8-148
8.36.4	Connector model and wiring .....	8-148
8.37	Battery .....	8-149
8.37.1	Structure .....	8-149
8.37.2	Removal.....	8-150
8.37.3	Installation.....	8-151
8.37.4	Replacement.....	8-151
8.38	Start Switch.....	8-152
8.38.1	Structure .....	8-152
8.38.2	Removal.....	8-153
8.39	Fuse Box.....	8-155
8.39.1	Removal.....	8-155
8.40	Wiper .....	8-156
8.40.1	Structure .....	8-156
8.40.2	Working principle .....	8-156
8.40.3	Removal.....	8-157
8.40.5	Installation.....	8-158
8.40.4	Angle adjustment of wiper arm.....	8-158
8.41	Relay.....	8-159
8.41.1	Engine relays .....	8-159
8.41.2	Other relays .....	8-160
8.42	Sensor .....	8-163
8.43	Connector Terminals - Insert and Remove .....	8-165
8.43.1	Insertion .....	8-165
8.43.2	Removal.....	8-166

## 9 Engine

9.1	General.....	9-3
9.1.1	Terms and standard .....	9-3
9.1.2	Engine serial No. and name plate.....	9-5
9.2	Engine Assembly .....	9-6
9.2.1	Specifications.....	9-6
9.2.2	Structure and operating principle .....	9-7
9.2.2.1	Structure layout.....	9-7
9.2.2.2	Valve mechanism.....	9-8
9.2.2.3	Cylinder head gasket .....	9-9
9.2.2.4	Water director.....	9-9
9.2.2.5	Connecting rod.....	9-10

9.2.2.6	Piston .....	9-10
9.2.2.7	Timing gear .....	9-11
9.2.3	Troubleshooting .....	9-12
9.2.4	General inspection and adjustment .....	9-13
9.2.4.1	Compression pressure – measure .....	9-13
9.2.4.2	Valve clearance – inspect and adjust .....	9-16
9.2.5	Cylinder head & valve mechanism .....	9-18
9.2.5.1	Pre-disassembling work .....	9-21
9.2.5.2	Disassembling method .....	9-21
9.2.5.3	Inspecting method .....	9-22
9.2.5.4	Assembling method .....	9-22
9.2.6	Rocker arm and bracket .....	9-25
9.2.6.1	Inspecting method .....	9-26
9.2.6.2	Installation procedure .....	9-27
9.2.7	Cylinder head .....	9-28
9.2.7.1	Disassembling method .....	9-32
9.2.7.2	Inspecting method .....	9-32
9.2.7.3	Assembling method .....	9-38
9.2.8	Piston, connecting rod and cylinder bushing .....	9-39
9.2.8.1	Pre-disassembling work .....	9-41
9.2.8.2	Inspecting method .....	9-42
9.2.8.3	Assembling Method .....	9-46
9.2.9	Piston and connecting rod .....	9-49
9.2.9.1	Disassembling method .....	9-51
9.2.9.2	Inspecting method .....	9-51
9.2.9.3	Assembling method .....	9-54
9.2.10	Flywheel .....	9-55
9.2.10.1	Pre-disassembling inspection .....	9-57
9.2.10.2	Disassembling method .....	9-57
9.2.10.3	Assembling method .....	9-57
9.2.11	Timing gear .....	9-59
9.2.11.1	Disassembling procedure .....	9-61
9.2.11.2	Inspecting method .....	9-62
9.2.11.3	Assembling method .....	9-63
9.2.12	Camshaft .....	9-64
9.2.12.2	Pre-disassembling work .....	9-66
9.2.12.1	Disassembling method .....	9-66
9.2.12.3	Inspecting method .....	9-67

9.2.12.4 Assembling method.....	9-68
9.2.13 Crankshaft and crankcase .....	9-69
9.2.13.1 Pre-disassembling inspection .....	9-72
9.2.13.2 Disassembling method.....	9-73
9.2.13.3 Inspecting method.....	9-73
9.2.13.4 Assembling method.....	9-77
9.2.14 Camshaft bushing .....	9-81
9.2.14.2 Inspecting procedure .....	9-83
9.2.14.1 Camshaft bushing – replace .....	9-83
9.2.14.3 Assembling method.....	9-87
9.3 Lubricating System .....	9-88
9.3.1 Specifications.....	9-88
9.3.2 Structure and operating principle .....	9-89
9.3.2.1 Lubricating system layout .....	9-89
9.3.2.2 Engine oil pump .....	9-90
9.3.2.3 Oil cooler and oil filter .....	9-91
9.3.2.4 Lubrication of parts .....	9-94
9.3.3 Troubleshooting .....	9-99
9.3.4 General inspection and adjustment .....	9-100
9.3.4.1 Oil filter element – replace .....	9-100
9.3.4.2 Engine oil – replace .....	9-102
9.3.4.3 Oil pressure – measure.....	9-103
9.3.5 Oil pan, primary oil filter and injection pipe .....	9-105
9.3.5.1 Assembling method.....	9-106
9.3.6 Oil pump.....	9-107
9.3.6.1 Inspecting method.....	9-108
9.3.6.2 Assembling method.....	9-109
9.3.7 Engine oil filter .....	9-110
9.3.8 Engine oil cooler .....	9-112
9.3.8.1 Inspecting method.....	9-114
9.3.9 Engine oil cooler, oil filter .....	9-115
9.3.9.1 Disassembling method.....	9-117
9.3.9.2 Inspecting method.....	9-117
9.3.9.3 Assembling method.....	9-118
9.4 Fuel Supply and Engine Control.....	9-119
9.4.1 Specifications.....	9-119
9.4.2 Structure and operating principle .....	9-120
9.4.2.1 Fuel system (fuel flow diagram).....	9-120

9.4.2.2	Fuel tank .....	9-121
9.4.2.3	Fuel tank attachment circuit.....	9-123
9.4.2.4	Fuel filter .....	9-125
9.4.2.5	Injection pump.....	9-126
9.4.2.6	Governor .....	9-129
9.4.2.7	Fuel feed pump .....	9-130
9.4.2.8	Automatic advance unit.....	9-132
9.4.2.9	Fuel injector .....	9-133
9.4.3	Troubleshooting .....	9-134
9.4.4	General inspection and adjustment .....	9-136
9.4.4.1	Injection timing – inspect and adjust.....	9-136
9.4.4.2	Air in fuel system – release .....	9-140
9.4.4.3	Fuel filter – replace .....	9-141
9.4.5	Fuel filter .....	9-142
9.4.5.1	Disassembling method.....	9-143
9.4.5.2	Assembling method.....	9-144
9.4.6	Primary fuel filter (revolving type) .....	9-145
9.4.7	Secondary fuel filter (revolving type).....	9-147
9.4.8	Injection pump.....	9-149
9.4.8.1	Disassembling method.....	9-152
9.4.8.2	Assembling method.....	9-152
9.4.9	Fuel injector .....	9-154
9.4.9.1	Pre-disassembling inspection .....	9-156
9.4.9.2	Disassembling method.....	9-158
9.4.9.3	Cleaning method.....	9-158
9.4.9.4	Inspecting method.....	9-159
9.4.9.5	Assembling method.....	9-160
9.5	Cooling System.....	9-161
9.5.1	Specifications.....	9-161
9.5.2	Structure and operating principle .....	9-161
9.5.2.1	Cooling system (coolant flow diagram).....	9-161
9.5.2.2	Thermostat.....	9-162
9.5.2.3	Water pump.....	9-163
9.5.3	Troubleshooting .....	9-164
9.5.4	General inspection and adjustment .....	9-165
9.5.4.1	Belt tension – inspect and adjust .....	9-165
9.5.4.2	Inspect: Belt crack and damage.....	9-167
9.5.4.3	Replace coolant and clean cooling system.....	9-169



9.5.4.4	Release air in the cooling system .....	9-172
9.5.4.5	Leak inspection .....	9-172
9.5.5	Radiator, engine oil cooler and intercooler .....	9-173
9.5.5.1	Inspecting method.....	9-174
9.5.6	Fan and belt .....	9-176
9.5.7	Water pump .....	9-177
9.5.7.1	Disassembling method.....	9-179
9.5.7.2	Inspecting method.....	9-179
9.5.7.3	Assembling method.....	9-180
9.5.7.4	Post-installation inspection .....	9-181
9.5.8	Thermostat.....	9-182
9.5.8.1	Inspecting method.....	9-184
9.6	Air Intake and Exhaust System.....	9-185
9.6.1	Specifications.....	9-185
9.6.2	Structure and operating principle .....	9-185
9.6.2.1	Air filter .....	9-185
9.6.2.2	Turbocharger.....	9-186
9.6.3	Troubleshooting .....	9-187
9.6.4	Air filter .....	9-188
9.6.4.1	Cleaning procedure.....	9-189
9.6.4.2	Inspecting method.....	9-190
9.6.5	Turbocharger.....	9-191
9.6.5.1	Assembling method.....	9-192
9.6.5.2	Pre-disassembling work.....	9-194
9.6.5.3	Disassembling method.....	9-195
9.6.5.4	Post-disassembling work .....	9-195
9.6.5.5	Inspecting method.....	9-196
9.6.5.6	Assembling method.....	9-197
9.6.5.7	Post-assembling work.....	9-197
9.6.6	Intake manifold.....	9-198
9.6.7	Exhaust manifold .....	9-199
9.6.8	Exhaust pipe and muffler .....	9-200
9.7	Electrical System .....	9-201
9.7.1	Specifications.....	9-201
9.7.2	Structure and operating principle .....	9-202
9.7.2.1	Start motor .....	9-202
9.7.2.2	Alternator.....	9-203
9.7.3	Circuit diagram.....	9-204

9.7.3.1 Alternator with a neutral diode .....	9-204
9.7.4 Troubleshooting .....	9-208
9.7.4.1 Power source and charging .....	9-208
9.7.4.2 Engine startup, preheating and shutdown .....	9-209
9.7.5 Switches.....	9-210
9.7.5.1 Thermostat switch.....	9-210
9.7.5.2 Inspection of engine oil pressure switch .....	9-210
9.7.6 Dust indicator and heating plug .....	9-211
9.7.6.1 Inspection of dust indicator .....	9-211
9.7.6.2 Inspection of heating plug.....	9-211
9.7.7 Start motor .....	9-212
9.7.7.1 Pre-disassembling work.....	9-216
9.7.7.2 Disassembling method.....	9-216
9.7.7.3 Inspecting method.....	9-219
9.7.7.4 Assembling method.....	9-225
9.7.7.5 Post-assembling inspection .....	9-227
9.7.8 Alternator.....	9-230
9.7.8.1 Inspecting method.....	9-231
9.7.8.2 Disassembling method.....	9-237
9.7.8.3 Inspecting method.....	9-239
9.7.8.4 Assembling method.....	9-241
9.7.10 Pre-heating system.....	9-241
9.7.9 Safety relay.....	9-241

## 10 System Schematics

10.1 Hydraulic System Diagram .....	10-3
10.2 Air-Conditioning Electrical Circuit Diagram .....	10-4
10.3 Fuse Box Relay .....	10-5
10.4 Control Switches and Monitor Electrical Diagram .....	10-6
10.5 Operator Cab Electrical Circuit Diagram.....	10-7
10.6 Chassis Electrical Circuit Diagram.....	10-8





# Introduction

## 1 Introduction

1.1 How to Read the Shop Manual.....	1-3
1.2 Terms for Maintenance Standard.....	1-6
1.3 Handling Electrical and Hydraulic Components.....	1-9
1.4 Hose Connector.....	1-20
1.5 Table of Standard Tightening Torques .....	1-23
1.6 Type of Bolts .....	1-24
1.7 Tightening Sequence .....	1-24
1.8 Maintenance of Half Flanges .....	1-25
1.9 Conversion Table.....	1-26

** WARNING**

Read and understand all safety precautions and instructions in this manual before reading any other manuals provided with this machine and before operating or servicing the machine. Also read the safety information on machine decals before performing any operations. Failure to do so can cause machine damage, personal injury or death.

---

# 1 INTRODUCTION

## 1.1 How to Read the Shop Manual

### 1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

#### **Introduction**

This section provides an overview of what is covered in the rest of this manual and how to use this manual.

#### **Shop Safety**

This section covers basic shop safety information relating to this equipment. It also describes what the hazard alerts mean that are used throughout the manual.

#### **Specifications**

Technical specification of work equipment and optional parts are given in this section.

#### **Structure and function**

This section explains the structure and function of each component. It helps the reader to get a better understanding of the machine structure, and also serves as a reference for troubleshooting.

#### **Standard Values**

This section explains the standard values for a new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard

values in testing and adjusting and to judge parts in troubleshooting.

### **Testing and adjusting**

This section details the inspection before and after repair work as well as the adjustment during inspection and repair work. Troubleshooting table that involves "Fault" and "Cause" are also included in this section.

### **Troubleshooting**

This section explains the way to detect faulty parts and the method to repair them. This section is divided into the following parts: Electrical system, Engine, Hydraulic and mechanical system and Monitoring system.

### **Disassembly and assembly**

This section explains the procedures as well as precautions for removing, installing, disassembling and assembling of each component.

### **Engine**

This section explains the disassembling and assembling of engine components. Detailed information on the cooling system, lubricating system, electrical system and the alternator is also provided in this section.

### **System Schematics**

This section provides hydraulic circuit diagrams and electrical circuit diagrams.

## **2. Revision and distribution**

Any additions, revisions, or other change of notices will be sent to Sany distributors. Get the most up-to-date information before you start any work.

### **3. Units**

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.



## 1.2 Terms for Maintenance Standard

The maintenance standard values necessary for judgment of products and parts are described by the following terms.

### 1. Standard size and tolerance


- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the "standard size" and the range of difference from the standard size is called the "tolerance".
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.

### Example

Standard size	Tolerance
120	-0.022
	-0.126

NOTE: The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)]. Example) 120 (-0.022/-0.126)

- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them.

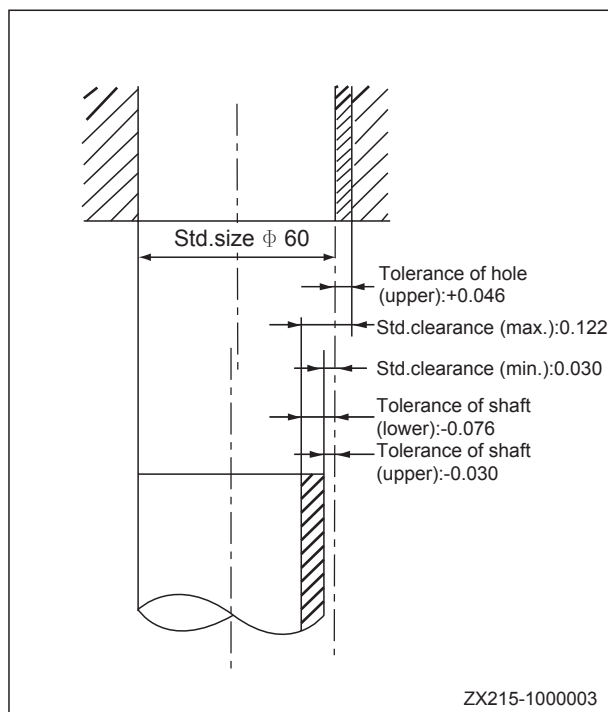

**Example**

Standard size	Tolerance	
	Shaft	Hole
φ60	-0.030	+0.046
	-0.076	0

**2. Standard clearance and standard value**

- The clearance made when new parts are assembled is called the "standard clearance", which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- A value of performance and function of new products or equivalent is called the "standard value", which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

**3. Standard interference**

- When the size of a hole is smaller than the size of a shaft because of the standard size and tolerance, the difference between these sizes is called the "interference".
- The range (A – B) from the difference (A) between the minimum size of the shaft and the maximum size of the shaft to the difference (B) between the maximum size of the shaft and the minimum size of the hole is the "standard interference".
- After repairing or replacing some parts, measure the size of their hole and shaft and check that the interference is in the standard range.

#### 4. Repair limit and allowable value

- The size of a part changes due to wear and deformation while it is used. The limit of changed size is called the "repair limit".
- If a part is worn to the repair limit must be replaced or repaired.
- The performance and function of a product lowers while it is used. A value below which the product can be used without causing a problem is called the "allowable value".
- If a product is worn to the allowable value, it must be checked or repaired. Since the permissible value is estimated from various tests or experiences in most cases, however, it must be judged after considering the operating condition and customer's requirement.

#### 5. Clearance limit

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the "clearance limit".
- If the clearance between the parts exceeds the clearance limit, they must be replaced or repaired.

#### 6. Interference limit

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the "interference limit".
- The interference limit shows the repair limit of the part of smaller tolerance.
- If the interference between the parts exceeds the interference limit, they must be replaced or repaired.

## 1.3 Handling Electrical and Hydraulic Components


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct "operation", "maintenance and inspection", "troubleshooting", and "repairs" must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on "Handling electric components" and "Handling hydraulic equipment" (particularly gear oil and hydraulic oil).

### 1.3.1 Points to remember when handling electric components

#### 1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.


Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

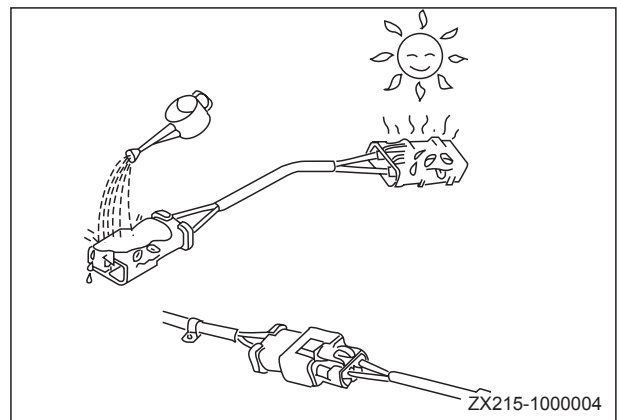

## 2. Main failures occurring in wiring harness


### 1) Defective contact of connectors (defective contact between male and female)

Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidation of the contact surfaces.

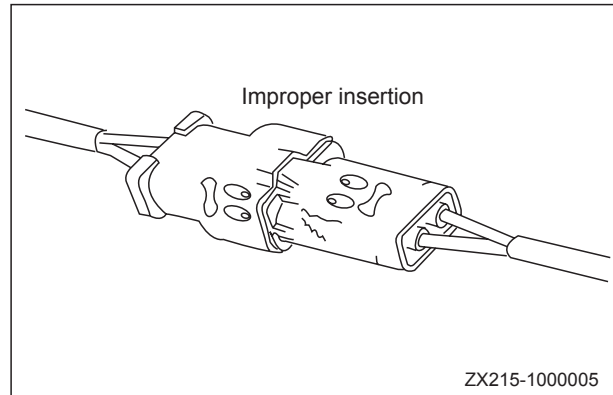


### 2) Defective crimping or soldering of connectors

The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

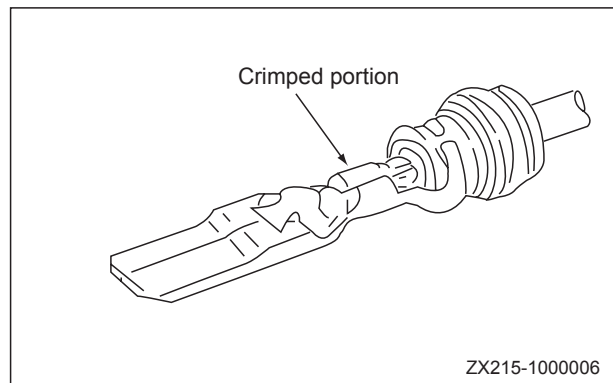


### 3) Disconnections in wiring

If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the crimping of the connector may separate, or the soldering may be damaged, or the wiring may be broken.

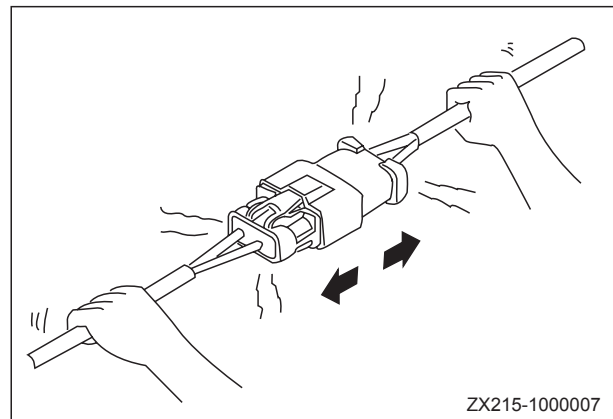


## 4) High-pressure water entering connector

The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not splash water over the connector. The connector is designed to prevent water from entering, but at the same time, if water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

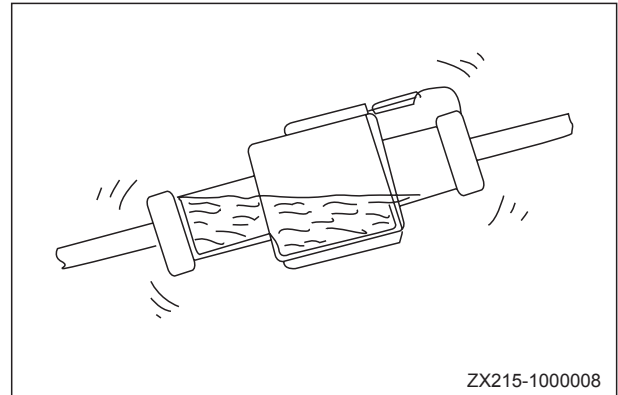

## 5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact. If there is oil or grease stuck to the connector, wipe it off with a dry cloth or blow it dry with compressed air and spray it with a contact restorer.

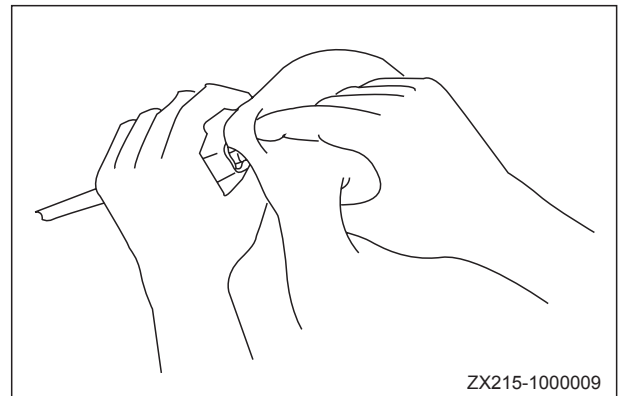

## NOTE:

- When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- If there is oil or water in the compressed air, the contacts will become even dirtier, so remove the oil and water from the compressed air completely before cleaning with compressed air.

### 3. Removing, installing, and drying connectors and wiring harnesses

#### 1) Disconnecting connectors




- a. Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors. For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

NOTE: Never pull with one hand.

- b. When removing from clips


- Both of the connector and clip have stoppers, which are engaged with each other when the connector is installed.
- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.

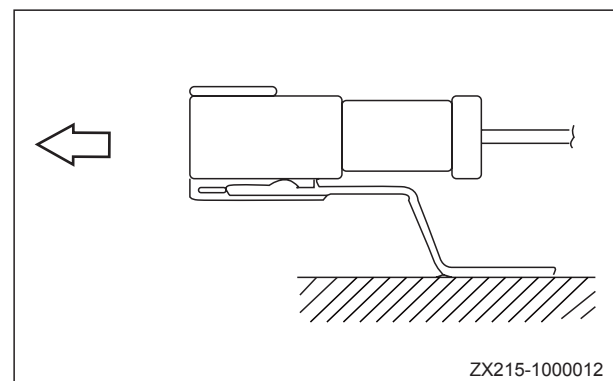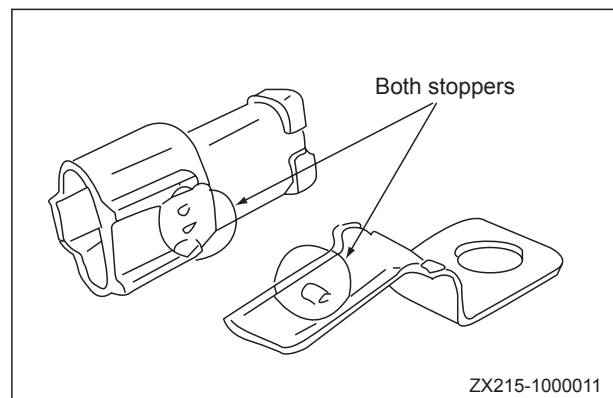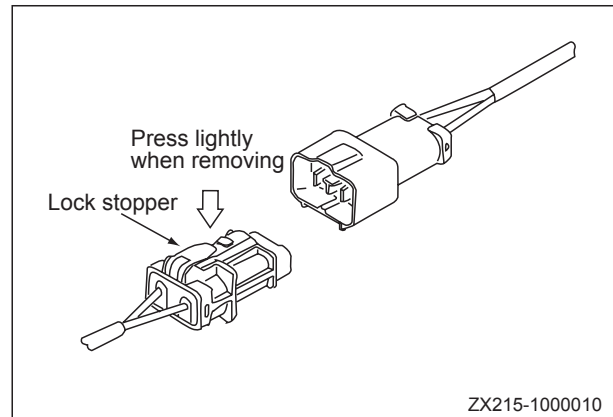

c. Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

NOTE: If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

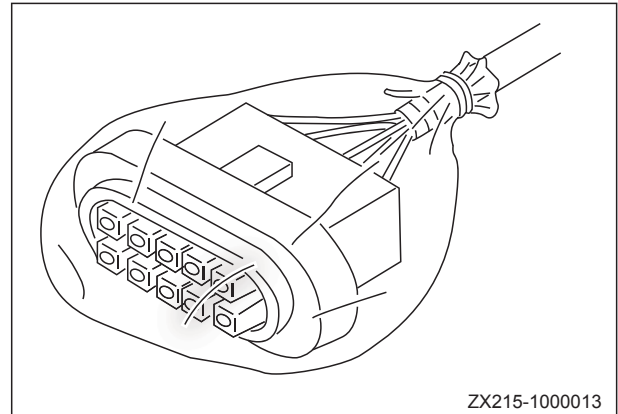

2) Connecting connectors


a. Check the connector visually

Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).

Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.

Check that there is no damage or breakage to the outside of the connector.

NOTE: If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.

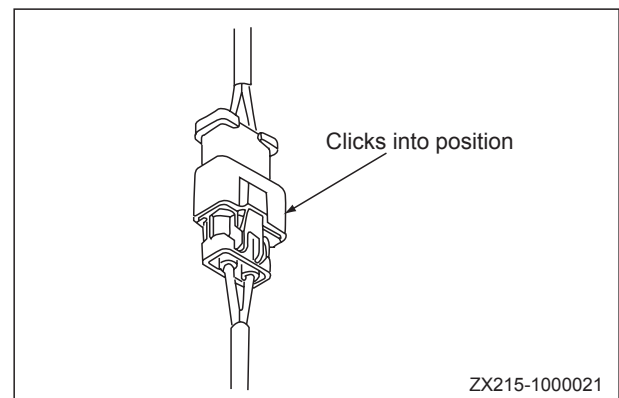




NOTE: If there is any damage or breakage, replace the connector.


- b. Fix the connector securely.

Align the position of the connector correctly, and then insert it securely. For connectors with lock stopper, push in the connector until the stopper clicks into position.

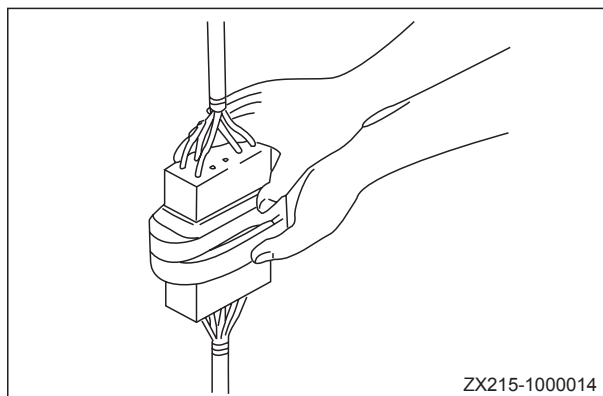

- c. Correct any protrusion of the boot and any misalignment of the wiring harness.

For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.

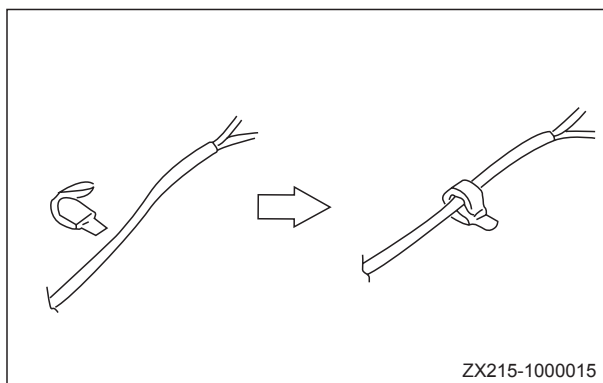


NOTE: If the connector cannot be corrected easily, remove the clamp and adjust the position.

- If the connector clamp has been removed, be sure to return it to its original position. Check also that there are no loose clamps.

### 3) Connecting DT connectors

Since the DT 8-pin and 12-pin heavy duty wire connectors have 2 latches respectively, push them in until they click 2 times.

- Male connector: 1
- Female connector: 2
- Normal locking state (Horizontal): a, b, d
- Incomplete locking state (Diagonal): c

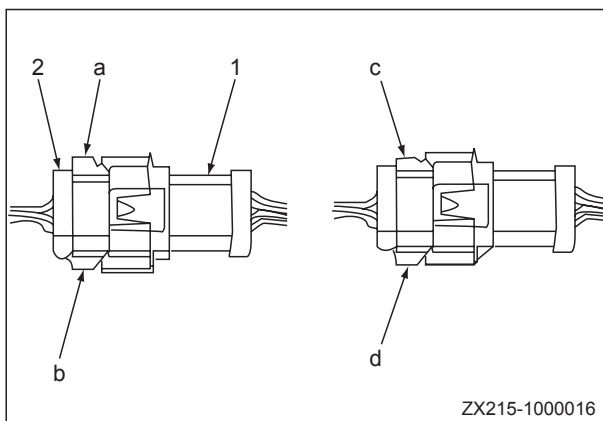

## 4) Drying wiring harness

If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing it in water or using steam. If the connector must be washed in water, do not use high-pressure water or steam directly on the wiring harness. If water gets directly on the connector, do as follows.

- a. Disconnect the connector and wipe off the water with a dry cloth.

NOTE: If the connector is blown dry with compressed air, there is the risk that oil in the air may cause defective contact, so remove all oil and water from the compressed air before blowing with air.

- b. Dry the connector with a dryer.




If water gets inside the connector, use a dryer to dry the connector.

NOTE: Hot air from the dryer can be used, but regulate the time that the hot air is used in order not to make the connector or related parts too hot, as this will cause deformation or damage to the connector.

- c. Carry out a continuity test on the connector.


After drying, leave the wiring harness disconnected and carry out a continuity test to check for any short circuits between pins caused by water.

NOTE: After completely drying the connector, blow it with contact restorer and reassemble.

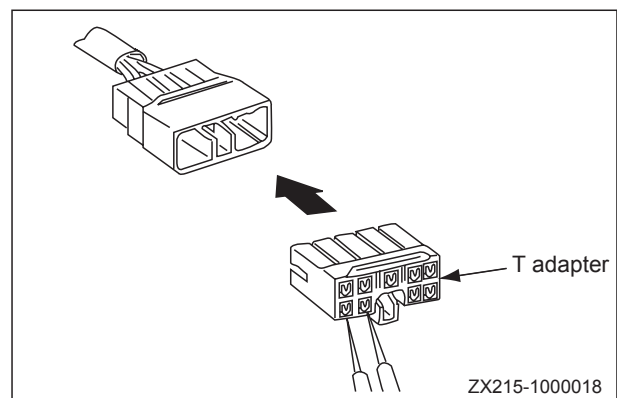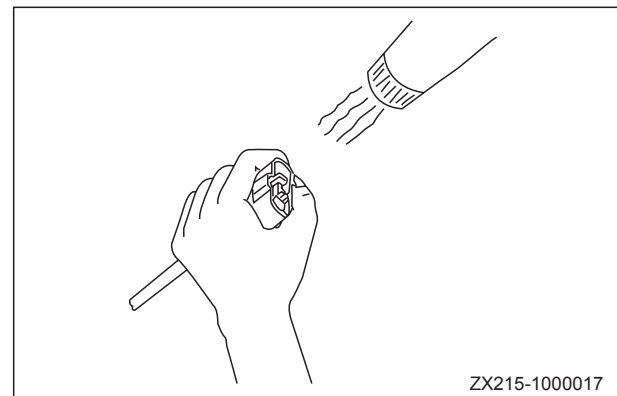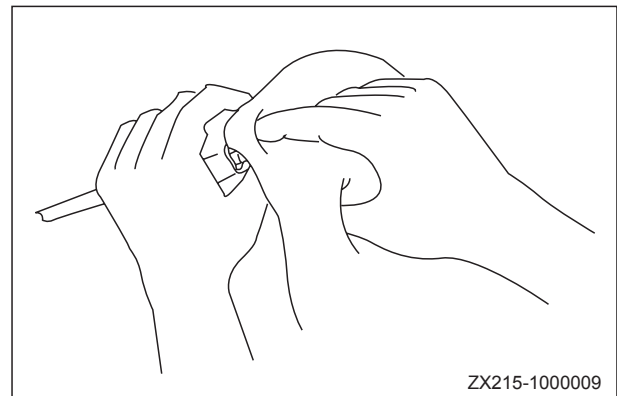

#### 4. Handling the integrated control monitor

1) The controller contains a microcomputer and an electronic control circuits. They control all of the electronic circuits on the machine, so be extremely careful when handling the integrated control monitor.

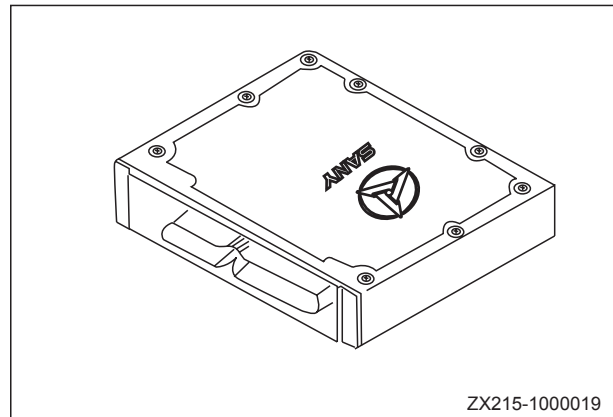


2) Do not place objects on the controller.

3) Cover the control connectors with tape or a vinyl bag. Never touch the connector contacts with your hand.


4) Do not leave it where it may be exposed to rain.

5) Do not place the controller on oil, water, or soil, or in any hot place, even for a short time.

6) Precautions for arc welding

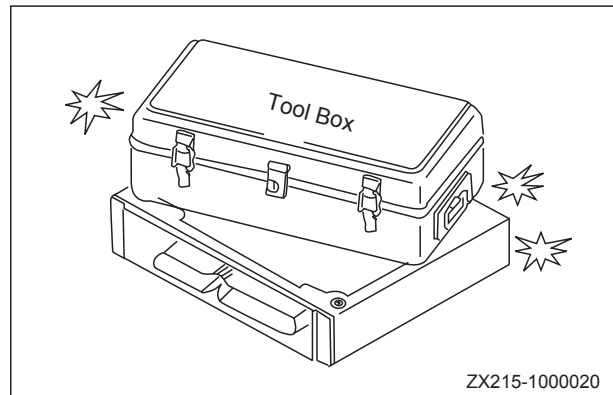

When welding on the controller, disconnect all wiring harness connectors connected to the controller. Fit an arc welding ground close to the welding point.

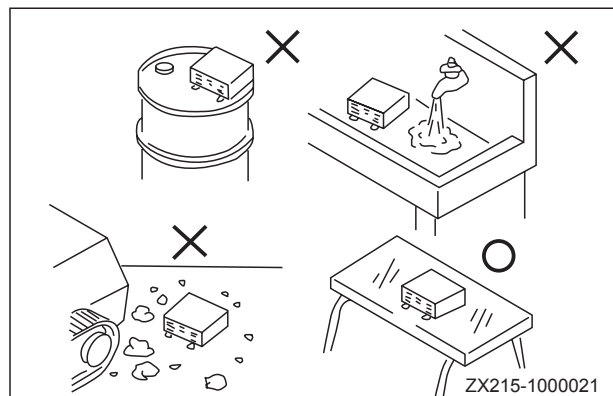

### 5. Points to remember when troubleshooting electric circuits

- 1) Always turn the power OFF before disconnecting or connecting connectors.
- 2) Before carrying out troubleshooting, check that all the related connectors are properly inserted.

NOTE: Disconnect and connect the related connectors several times to check.

- 3) Always connect any disconnected connectors before going on to the next step.

NOTE: If the power is turned ON with the connectors still disconnected, unnecessary abnormality displays will be generated.

- 4) When carrying out troubleshooting of circuits (measuring the voltage, resistance, continuity, or current), move the related wiring and connectors several times and check that there is no change in the reading of the tester.

NOTE: If there is any change, there is probably defective contact in that circuit.

### 1.3.2 Points to remember when handling hydraulic equipment

With the increase in pressure and precision of hydraulic equipment, the most common cause of failure is dirt (foreign material) in the hydraulic circuit. When adding hydraulic oil, or when disassembling or assembling hydraulic equipment, it is necessary to be particularly careful.

#### 1. Be careful of the operating environment



Avoid adding hydraulic oil, replacing filters, or repairing the machine in rain or high winds, or places where there is a lot of dust.

#### 2. Disassembly and maintenance work in the field

If disassembly or maintenance work is carried out on hydraulic equipment in the field, there is danger of dust entering the equipment. It is also difficult to check the performance after repairs, so it is desirable to use unit exchange. Disassembly and maintenance of hydraulic equipment should be carried out in a specially prepared dust-proof workshop, and the performance should be checked with special test equipment.

#### 3. Sealing openings

After any piping or equipment is removed, the openings should be sealed with caps, tapes, or vinyl bags to prevent any dirt or dust from entering. If the opening is left open or is blocked with a rag, there is danger of dirt entering or of the surrounding area being made dirty by leaking oil so never do this. Do not simply drain oil out onto the ground, but collect it and ask the customer to dispose of it, or take it back with you for disposal.

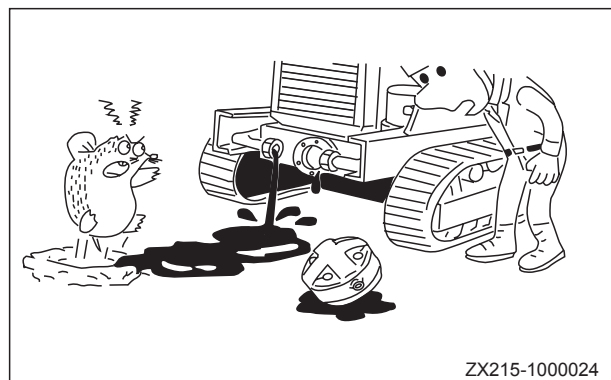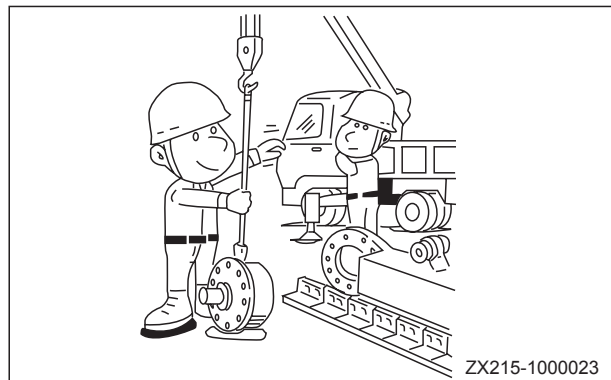

#### 4. Do not let any dirt or dust get in during refilling operations



Be careful not to let any dirt or dust get in when refilling with hydraulic oil. Always keep the oil filler and the area around it clean, and also use clean pumps and oil containers. If an oil cleaning device is used, it is possible to filter out the dirt that has collected during storage, so this is an even more effective method.

#### 5. Change hydraulic oil when the temperature is high

When hydraulic oil or other oil is warm, it flows easily. In addition, the sludge can also be drained out easily from the circuit together with the oil, so it is best to change the oil when it is still warm. When changing the oil, as much as possible of the old hydraulic oil must be drained out. (Drain the oil from the hydraulic tank; also drain the oil from the filter and from the drain plug in the circuit.) If any old oil is left, the contaminants and sludge in it will mix with the new oil and will shorten the life of the hydraulic oil.


#### 6. Flushing operations

After disassembling and assembling the equipment, or changing the oil, use flushing oil to remove the contaminants, sludge, and old oil from the hydraulic circuit. Normally, flushing is carried out twice: primary flushing is carried out with flushing oil, and secondary flushing is carried out with the specified hydraulic oil.

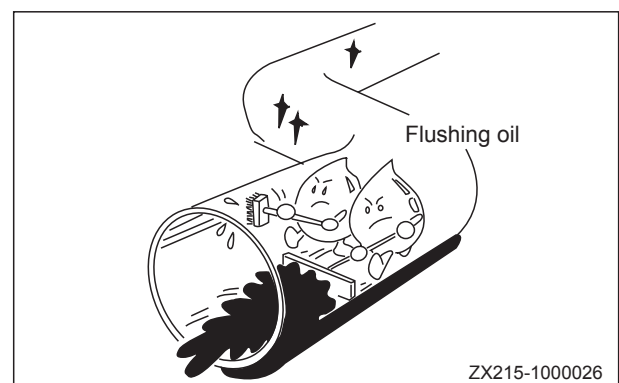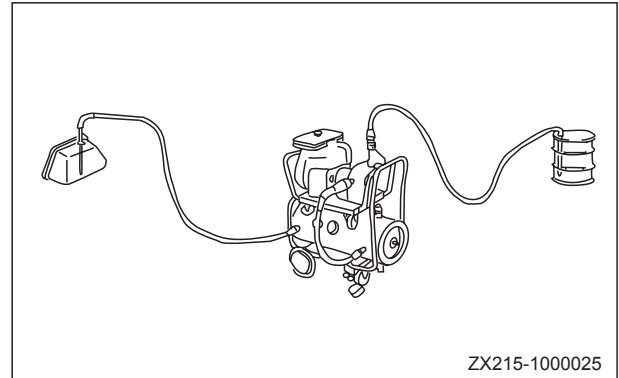


## 7. Cleaning operations

After repairing the hydraulic equipment (pump, control valve, etc.) or when running the machine, carry out oil cleaning to remove the sludge or contaminants in the hydraulic oil circuit. The oil cleaning equipment is used to remove the ultra fine (about 3  $\mu$ ) particles that the filter built in the hydraulic equipment cannot remove, so it is an extremely effective device.

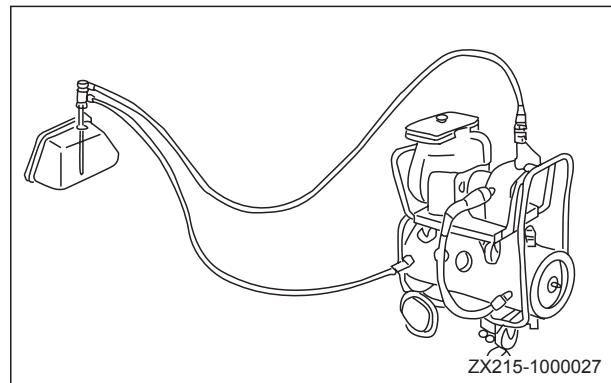

## 1.4 Hose Connector


Hose connector is used to connect hoses with a small diameter. The metal sealing surface (4) of the joint (1) must be in close contact with the metal sealing surface (5) of the hose (2) to seal pressurized oil.

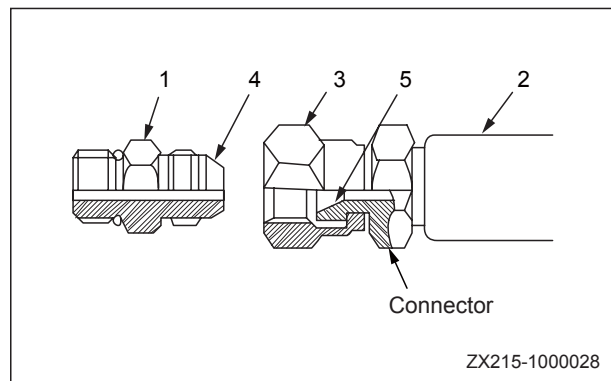

### NOTICE

- **Do not over-tighten the nut (3). Excessive force applied on the metal sealing surface (4) and (5) may cause the joint (1) to break. Be sure to tighten nut (3) according to technical specifications.**
- **Scratches or other damages on sealing surface (4) and (5) may cause leaks at the joint. Be extremely careful not to damage the sealing surfaces during connecting and disconnecting work.**

## 1.4.1 Type of hose connector

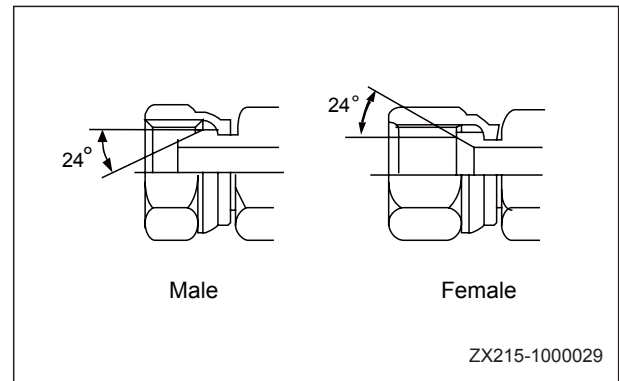

## 1.4.2 Hose connector tightening torque table

Type	Wrench size mm	Wrench size mm	Tightening torque
	Connecting nut	Hose joint	N·m(kgf·m,lbf·ft)
24° Male	19	19	59(6,44)
	22	22	98(10,72)
	27	27	118(12,87)
	36	36	235(24,173)
	41	41	295(30,218)
	50	50	490(50,361)
	60	60	670(68,494)
	70	70	980(100,723)
24° Female	19	17	44(4.5,32)
	22	19	59(6,44)
	27	22	118(12,87)
	36	30, 32	235(24,173)
	41	36	295(30,218)
	50	46	490(50,361)

**NOTICE**

- The torque values listed in the table are intended for general application.
- Do not use torque values listed in this table when different torque values are specified for a special purpose.



This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)