



FENDT 826 S4

841/00101-05000
WAM841XXX00F05001-99999



PARTS CATALOG

CONTENT

TABLE OF CONTENT	2
ENGINE, FUEL AND EXHAUST SYSTEM	3
CRANKCASE	6
SET OF GASKETS MOTOR	15
ENGINE MOUNTINGS	16
ENGINE BEARINGS	17
TRANSMITTER	18
CRANKCASE BREATHER	20
FRONT COVER	22
TRANSMITTER	24
GEARCASE	26
ADAPTER HOUSING	29
FEMALE	31
ENGINE MOUNTING	32
VALVE COVER	33
CYLINDER HEAD	35
ROCKER ARM	36
CYLINDER HEAD	37
HEAD GASKET	40
VALVE DRIVE	41
CAMSHAFT	42
PISTON	43
CONNECTING ROD	45
CRANKSHAFT	46
MAIN BEARING	47
CRANKSHAFT V-BELT PULLEY	48
ADAPTER DISC V-BELT PULLEY	50
FLYWHEEL	51
FLYWHEEL COVER	54
OIL PAN	55
OIL FILLER	56
FILLER CAP	57
OIL COOLER BOX	58

OIL FILTER	59
OIL COOLER	60
OIL COOLER BOX	61
COOL.WATER PIPING	63
EXHAUST BEND	64
EXHAUST BEND CONTROL PIPE	68
TURBO-SUPERCHARGER	69
COMPENSATOR	72
TURBO-SUPERCHARGER	74
COOL.WATER PIPING	75
CONNECTING PIPE	77
CHARGE AIR COOLER	78
FLEXIBLE CONNECTION HOSE	79
HEATING-FLANGE	80
RELAY HEATING-FLANGE	81
ELECTRIC WIRING	82
ELECTRIC WIRING SHIELD CAP	84
ELECTRIC WIRING	85
CONSOLE FUEL FILTER	86
FUEL FILTER	87
FUEL LINES	88
FUEL PUMP	90
HIGH-PRESSURE PUMP	92
INJECTOR	95
HIGH-PRESSURE ACCUM..	96
METERING UNIT	98
FUEL PRESSURE LINES	100
CHARGED AIR	101
CHARGED AIR BRACKET	103
CHARGE AIR ELBOW	105
EGR-MODULE	107
WATER PUMP	109
WATER PUMP V-BELT PULLEY	110
WATER PUMP FIXING PARTS	111
WATER PUMP CONNECTING SOCKET	112
THERMOSTAT HOUSING	113

THERMOSTAT HOUSING FIXING PARTS	115
V-BELT BELT DRIVE REAR	116
V-BELT BELT DRIVE FRONT	117
GUIDE PULLEY BELT DRIVE REAR	118
TENSION ROLLER BELT DRIVE REAR	119
TENSION ROLLER GUIDE PULLEY	120
FAN SUPPORT	121
FAN SUPPORT FIXING PARTS	124
FUEL LINES	125
PREFILTER	126
FUEL TANK	127
FUEL TANK SUPPORT	128
WATER COOLED RADIATOR LOW TEMPERATURE	129
WATER COOLED RADIATOR	130
WATER COOLED RADIATOR SEAL	131
EXPANSION TANK	132
COOL. WATER PIPING WATER COOLED RADIATOR	133
COOL. WATER PIPING HEATING CONNECTION	134
COOL. WATER PIPING WATER COOLED RADIATOR	137
COOL. WATER PIPING	138
AIR FILTER	139
AIR FILTER BULKHEAD	140
BOOST INTERCOOLING	141
SILENCER	142
EXHAUST BEND	144
EXHAUST BRAKE	145
EXHAUST AFTER-TREATMENT	146
EXHAUST AFTER-TREATMENT PARTICLE FILTER	147
EXHAUST AFTER-TREATMENT TANK ADBLUE	149
EXHAUST AFTER-TREATMENT SUPPLY UNIT	150
EXHAUST AFTER-TREATMENT PIPING	151
SPEED CONTROL	152
VISCO FAN	153
VISCO FAN REVERSIBLE FAN	154
ENGINE PRE-HEATER	156
AXLES	157

AXLES	157
AXLE BRIDGE 755/137	158
AXLE BRIDGE 755/140	159
DRIVE 755/137.....	160
DRIVE 755/140.....	161
JOINT HOUSING 755/137	162
JOINT HOUSING 755/140	163
JOINT SHAFTS 755/137.....	164
JOINT SHAFTS 755/140.....	165
PLANETARY DRIVE 755/137	166
PLANETARY DRIVE 755/140	167
STEERING CYLINDER.....	168
PIPES STEERING CYL.....	169
STEERING CYL.GUARD 755/137	170
STEERING CYL.GUARD 755/140	171
PROPELLER SHAFT DUAL CIRCUIT BRAKE.....	172
SHAFT PROTECTION DUAL CIRCUIT BRAKE.....	173
PROPELLER SHAFT SINGLE CIRCUIT BRAKE.....	174
SHAFT PROTECTION SINGLE CIRCUIT BRAKE.....	175
SPRING ASSEMBLY.....	176
SENSOR SWING ANGLE.....	177
TUBES FR.AXLE SPRING FRONT	178
TUBES FR.AXLE SPRING MIDDLE.....	179
SPRING CYLINDER	180
VALVE INSTALLATION SUPPORT BRACKET	181
VALVE INSTALLATION FSC.....	182
VALVE INSTALLATION	183
CHASSIS.....	184
CHASSIS FRONT PLATE.....	185
FRONT WEIGHT CARRIER LOADING WEIGHT.....	186
HOOP GUARD.....	187
FRONT WEIGHT CARRIER LOADING WEIGHT.....	188
STEERING SYSTEM	189
STEERING WHEEL.....	190
STEERING COLUMN	191
MOUNTING UNIT.....	196

STEERING UNIT	206
VALVE UNIT	207
DRIVE TRAIN SYSTEM	208
DRIVE TRAIN SYSTEM	208
04-0031 PIPES BRAKE SYSTEM	208
GEARBOX-HOUSING	210
REAR AXLE HOUSING	211
REAR AXLE COVER	212
OIL LEVEL INDICATOR	213
DIFFERENTIAL	214
FINAL DRIVE	216
DISC BRAKE	219
FOOT BRAKE ACTUATING	220
BRAKE VALVE	223
SELECTOR VALVE	224
BRAKE VALVE	225
BRAKE HYDRAULIC	226
VALVE UNIT	227
ADAPTER PLATE	230
PIPES BRAKE SYSTEM	231
CONTROL VALVE	233
PIPES BRAKE SYSTEM	234
HAND BRAKE VALVE	241
HAND PRIMER	242
PIPES BRAKE SYSTEM	243
CLUTCH ACTUATING	245
VIBRATION DAMPER	246
GEAR	247
SUSPENSION EL	248
DUCT PLATE VALVES	250
ADJUSTING DEVICE	251
PIPELINES TRANSMISSION	253
PIPING GEAR	254
BEVEL DRIVE	255
GROUP GEAR SHIFTING	256
SHIFTING	257

ENGINE P.T.O.....	258
PUMP DRIVE	262
LUBE OIL PUMP	263
PUMP INSTALLATION	264
GEAR PUMP.....	265
GEAR BOX LUBRICATION	266
GEAR BOX LUBRICATION INTERIOR	267
VALVE UNIT	268
PIPE DIAGNOSTICS.....	269
OIL COOLER	270
VALVE UNIT	271
PIPES DIFF.LOCK FR.....	272
FRONT P.T.O. DRIVE.....	273
FRONT P.T.O. CLUTCH.....	274
FRONT P.T.O. TRANSMISSION.....	275
FRONT P.T.O. HOUSING.....	276
FRONT P.T.O.....	277
FRONT WHEEL DRIVE CONSTANT.....	278
FRONT WHEEL DRIVE	279
PUMP INSTALLATION	282
COMPRESSED AIR SYSTEM.....	283
COMPRESSED AIR SYSTEM.....	283
05-0021 DUOMATIC CLUTCH.....	283
AIR PRESSER	284
AIR PRESSER TYRE PRESSURE CONTROL SYSTEM.....	285
PRESSURE PIPE.....	286
PRESSURE PIPE TYRE PRESSURE CONTROL SYSTEM.....	287
AIR DRIER	288
AIR DRIER TYRE PRESSURE CONTROL SYSTEM.....	290
AIR TANK	291
ADDITIONAL PARTS	293
AIR TANK	297
FITTINGS.....	298
BRAKE-ARMATURES INST.....	299
DOUBLE PIPE BRAKE.....	303
DUOMATIC CLUTCH	304

DOUBLE PIPE BRAKE ITALY.....	306
AIR BRAKE SINGLE.....	307
TYRE PRESSURE CONTROL SYSTEM VALVE COMPONENTS.....	309
TYRE PRESSURE CONTROL SYSTEM LINES.....	310
TYRE PRESSURE CONTROL SYSTEM VALVES.....	312
TYRE PRESSURE CONTROL SYSTEM PIPELINES.....	314
HYDRAULIC SYSTEM.....	318
HYDRAULIC SYSTEM.....	318
06-0029 CENTER PIECE.....	318
HYDRAULIC SYSTEM.....	319
06-0064 3/4" COUPLING SLEEVE 1.4.....	319
JOINTS AND GASKETS PLUMBING ASSEMBLY.....	321
PISTON PUMP.....	322
PUMP INSTALLATION.....	324
PIPES BASIC CIRCUIT.....	325
PIPES BASIC CIRCUIT CONTROL PIPE.....	326
PIPES BASIC CIRCUIT RETURN FLOW.....	328
PIPES BASIC CIRCUIT.....	329
PIPES BASIC CIRCUIT PISTON PUMP.....	332
PIPES BASIC CIRCUIT SINGLE CIRCUIT BRAKE.....	333
PIPES BASIC CIRCUIT DUAL CIRCUIT BRAKE.....	334
PIPES HD.TRAIL.BRAKE.....	335
PIPES HD.TRAIL.BRAKE CONTROL PIPE.....	336
TRAILER BRAKE VALVE.....	338
PIPES POWER-LIFT SOUBLE ACTING.....	340
PIPES POWER-LIFT SINGLE ACTING.....	341
TUBE LOWER LINKS.....	342
PIPES-WITH OIL COOL.....	343
PIPES HYDR. STEERING.....	345
PIPES HYDR. STEERING REVERSE DRIVING IMPLEMENT.....	346
ROTARY LEADTHROUGH REVERSE DRIVING IMPLEMENT.....	348
PIPES EL.HYDR.STEER.....	349
CENTER PIECE.....	350
VALVE INSTALLATION.....	354
DIRECTIONAL C. VALVE 100L/MIN.....	355
DIRECTIONAL C. VALVE 140L/MIN.....	356

DIRECTIONAL C. VALVE 170L/MIN.	360
DIRECTIONAL C. VALVE HYDR.CONN. D.A.FRONT	362
END PLATE BACK AND LEFT SIDE	364
END PLATE RIGHT HAND	365
CONTROL VALVE SOUBLE ACTING	366
VALVE UNIT SOUBLE ACTING	369
CONTROL VALVE SINGLE ACTING	370
SPACER	373
CONTROL VALVE FRONT POWER LIFT	374
COUPLING SLEEVE 1.1/1.4	378
1/2" COUPLING SLEEVE 1.1/1.4	379
COUPLING SLEEVE 1.2/1.5	380
1/2" COUPLING SLEEVE 1.2/1.5	381
COUPLING SLEEVE 1.3/1.6	382
1/2" COUPLING SLEEVE 1.3/1.6	383
COVER ASSEMBLY 1/2" COUPLING SLEEVE	384
3/4" COUPLING SLEEVE 1.4	385
COVER ASSEMBLY 3/4" COUPLING SLEEVE	386
5/8" FFC COUPLER 1.1/1.4	387
5/8" FFC COUPLER 1.2/1.5	388
5/8" FFC COUPLER 1.3/1.6	389
COVER ASSEMBLY 5/8" FFC COUPLER	390
ADDITIONAL PARTS 5/8" FFC COUPLER	391
MULTI-COUPLING 5/8" COUPLER PLUG	392
5/8" COUPLER PLUG	393
ADDITIONAL PARTS FEMALE COUPLER	394
LEAK OIL LINE LEVER COUPLING	395
COUPLING SLEEVE	399
LEAK OIL LINE	401
VALVE INSTALLATION CENTER	402
VALVE UNIT CENTER	403
RETURFLOW REAR	404
HYDR. CONNECT	405
EXT.PLESS.CONNECTION	406
HYDR.CONN. D.A.FRONT	407
BOTTLE	411

RETURN FLOW FRONT.....	412
ELECTRICAL SYSTEM.....	413
ELECTRICAL SYSTEM.....	413
07-0030 CABLE LOOM MOTOR 1476681.....	413
ALTERNATOR RIGHT HAND.....	415
ALTERNATOR LEFT HAND.....	417
HEADLIGHT.....	418
HEADLIGHT LED.....	419
LIGHTING FRONT.....	420
LIGHTING.....	421
LIGHTS ENTRY.....	423
LIGHTING CATSEYE.....	424
LICENCE PLATE HOLDER.....	425
CONTROL PART.....	426
CENTRAL ELECTRIC SYSTEM.....	427
SWITCH DRIVERS CAB.....	429
IGNITION SWITCH ID-MODULE.....	430
IGNITION SWITCH IMMOBILIZER SYSTEM.....	431
COLUMN ASSEMB.SWITCH.....	432
SWITCH MOTOR.....	433
TRANSMITTER MOTOR.....	434
TRANSMITTER EXHAUST AFTER-TREATMENT.....	435
SWITCH.....	436
TRANSMITTER GEAR.....	437
CABLE LOOM.....	438
CABLE LOOM MOTOR.....	439
CABLE LOOM GEAR.....	447
CABLE LOOM DRIVERS CAB.....	449
CABLE LOOM.....	451
CABLE LOOM CABIN ROOF.....	452
CABLE LOOM CAMERA.....	453
DISCONNECTION POINTS.....	454
SOCKET F. IMPLEMENTS.....	459
CABLE LOOM EXTERNAL COUNTER.....	460
REVERSE BEEPER.....	461
SOCKET FOR ABS.....	462

BATTERY DISCONNECT RELAY	463
BATTERY INSTALLATION	464
STARTER INSTALLATION	465
STARTER INSTALLATION FIXING PARTS	466
STARTER INSTALLATION COVER SHEET	467
STARTER INSTALLATION SCREENING SHEET	468
SOCKET FRONT	469
SOCKET REAR	470
ADDITIONAL LIGHTING	471
WORK LAMP CABIN-ROOF FRONT	472
WORKING LIGHT CABIN-ROOF FRONT	474
WORK LAMP INDICATOR BRACKET	475
WORK LAMP CABIN-ROOF REAR	479
WORK LAMP REAR LIGHT CARRIER	481
SIGNAL LIGHT	483
SIGNAL LIGHT LED	484
EXTENDET VEHICLE WIDTH LIGHTING	485
EXTENDET VEHICLE WIDTH LIGHTS	486
EXTENDET VEHICLE WIDTH SIGNALING PANELS	487
DISPLAY	488
TERMINAL 7"	489
TERMINAL 10,4"	491
RADAR SENSOR	492
ELECTRONIC BOX	493
CONTROL	494
ARM REST	495
COMFORT SYSTEM	497
TACHOGRAPH	498
CONTROL UNIT MOTOR	499
CAB	500
CABIN FRAME	504
HANDRAIL	505
COLUMN PANELLING	506
ROOF	507
ROOF COATING	508
ROOF HATCH	509

COATING	511
DOOR.....	513
DOOR LOCK.....	515
SIDE PANE RIGHT HAND	516
WINDSCREEN.....	517
REAR WINDOW PANE.....	518
FLAP.....	520
FLOOR COVERING.....	521
COATING.....	523
DRIVERS-CABIN OUTFIT	526
CELL PHONE SUPPORT BRACKET.....	529
REAR VIEW MIRROR.....	530
SUN VISOR.....	533
WINDSHIELD WIPER FRONT	534
WINDSHIELD WIPER REAR.....	535
WINDSCREEN WASH-INST FRONT.....	536
WINDSCREEN WASH-INST REAR	537
INTERIOR LIGHTING	538
RADIO INSTALLATION KIT.....	539
HANDS-FREE SPEAKING.....	540
TUBES HEATING.....	541
HEATER.....	542
AERATION	543
FILTER RETAINER	545
HOUSING	546
INSULATION.....	547
PIPELINES DRIVER SEAT	548
PIPING DRIVER SEAT.....	549
BODY.....	550
BODY CLADDING.....	551
BODY.....	552
BODY CLADDING	553
SEAT BRACKET	554
TURNING BRACKET	556
SEAT BRACKET	557
PASSENGER SEAT	558

ARM SUPPORT	560
DRIVER SEAT	561
OPERATOR SEAT.....	562
DRIVER SEAT	563
COMPRESSOR	564
SEAT SPRING ASSY	565
SERVICE PACKAGE.....	568
SAFETY BELT OPERATOR SEAT.....	569
OPERATOR SEAT.....	571
DRIVER SEAT	573
SEAT SPRING ASSY	578
OPERATOR SEAT.....	584
DRIVER SEAT	588
OPERATOR SEAT.....	589
SEAT SPRING ASSY	590
AIR CONDITIONING AND HEATING SYSTEM	593
COMPRESSOR	594
TUBES F.REFRIG.FLUID.....	595
CONDENSER.....	596
EVAPORATOR.....	597
CHASSIS	598
CHASSIS.....	598
10-0037 BOTTOM HITCH ASSY.....	598
TRACTOR HOOD	599
SIDE PART	600
LATCHING.....	601
LOCKING KIT.....	602
HOOD SUPPORT	603
FRONT GRILL	604
SIDE PANELLING	605
TOOL BOX	606
TOOL SET.....	608
TOOLBAR.....	609
TRAILER HITCH "CUNA".....	610
PTO GUARD.....	612
TRAILER HITCH.....	613

REMOTE CONTROL	617
BALL TYPE CLEVIS	618
RETAINER	619
BALL TYPE CLEVIS	620
FORCED STEERING	621
BALL TYPE CLEVIS LONG	622
FORCED STEERING	623
PITON FIX	624
BOTTOM HITCH ASSY	625
CHASSIS	627
DRAWBAR AND HITCH CAT 4	628
DRAWBAR AND HITCH CAT 3	630
DRAWBAR AND HITCH	631
DRAWBAR AND HITCH CRANKED	632
BOTTOM HITCH ASSY	633
BOTTOM HITCH ASSY HOOK	636
BOTTOM HITCH ASSY	637
ENTRY LEFT	639
ENTRY RIGHT	640
BASE FOR FRAME	642
LABELING	647
WARNING PLATE	651
BASE	652
INSULATION BASE	654
WHEELS	656
FRONT DISC WHEELS	657
FRONT DISC WHEELS TYRE PRESSURE CONTROL SYSTEM	658
DISC WHEELS REAR	659
DISC WHEELS REAR TYRE PRESSURE CONTROL SYSTEM	661
ADJUST. FRONT WHEELS	662
ADJUST. FRONT WHEELS 15 X 34	663
ADJUSTAB.REAR WHEELS	664
ADJUSTAB.REAR WHEELS 16 X 50	665
MUDGUARD FRONT	666
ADAPTOR	668
MUDGUARD REAR	669

SPLASH-GUARD	671
MUDGUARD ENLARGEMENT	672
WHEEL HUB	675
IMPLEMENT LIFT SYSTEM FRONT	677
CHASSIS FRONT POWER LIFT	678
SENSOR	679
CYLINDER LEFT HAND	680
CYLINDER RIGHT HAND	681
TUBE SINGLE ACTING	682
TUBE SOUBLE ACTING	684
VALVE UNIT SOUBLE ACTING	686
TUBE SOUBLE ACTING	687
VALVE UNIT	689
LOWER LINKS	690
UPPER LINK	691
LOADING WEIGHT	692
ADDITIONAL WEIGHT	693
CARRIER	694
HITCH LOADING WEIGHT	695
LOADING WEIGHT	696
IMPLEMENT LIFT SYSTEM REAR	698
POWER LIFT	699
DOUBLE ACTING HYDRAULIC CYLINDER LEFT HAND	700
DOUBLE ACTING HYDRAULIC CYLINDER RIGHT HAND	702
OIL TANK	704
DRAFT PIN	705
SENSOR	706
EL.HD.REMOTE CONTROL	707
LIFT ARMS	708
SUPPORT	710
SUPPORT HYDRAULIC	712
UPPER LINK	713
HYDR. UPPER LINK 90MM	714
HYDR. UPPER LINK 120MM	716
HYDR. UPPER LINK CLAMPING PARTS	717
LINK HOLDER	718

LOWER LINKS	720
BALL RETAINER	722
FRONT/REAR LOADERS	723
FRONT/REAR LOADERS	723
14-0024 DAMPING	723
CONSOLE	724
CARRIER CONSOLE	725
MOUNTING BRACKET	726
HOIST	727
JACK ASSEMBLY	728
REVERSING LEVER	729
DUMPING CYLINDER	730
PARALLELOGR.MOUNTING	731
LIFT CYLINDER	732
FAST COUPL.FRAME MECHANICAL	733
FAST COUPL.FRAME HYDRAULIC	734
CYLINDER LATCHING	735
VALVE UNIT FAST COUPL.FRAME	736
PIPING LIFT ARM	737
PIPING PARALLELOGRR	738
VALVE UNIT	739
VALVE UNIT 3RD HYDR. CIRCUIT	740
VALVE UNIT 3/4. HYDR. CIRCUIT	741
EQUIPMENT 3RD HYDR. CIRCUIT	742
EQUIPMENT 4TH HYDR. CIRCUIT	743
EQUIPMENT 3RD HYDR. CIRCUIT	744
EQUIPMENT 4TH HYDR. CIRCUIT	745
MULTI-COUPLING EQUIPMENT	746
DAMPING	747
SOLENOID VALVE DAMPING	748
CONNECTING PIPE	749
MULTI-COUPLING	750
MULTI-COUPLING CONNECTING PIPE	751
MULTI-COUPLING TRACTOR MOUNTED	752
ELECTRICAL EQUIPMENT FRONTENDLOADER MOUNTED	753
ELECTRICAL EQUIPMENT TRACTOR MOUNTED	754

CONTROL PART	755
ELECTRICAL EQUIPMENT LIGHTING	756
PALLET FORK	757
UNIVERSAL SCOOP	758
HEAVY GOODS BUCKET	759
LIGHT GOODS BUCKET	761
SILAGE BUCKET 1800	762
SILAGE BUCKET 2200	763
HYDRAULIC EQUIPMENT SILAGE GRAPPLE	764
HYDR. CYLINDER SILAGE GRAPPLE	765
MANURE FORK	766
BALE GRAB	767
HYDRAULIC EQUIPMENT BALE GRAB	768
HYDR. CYLINDER BALE GRAB	769
BALE FORK	770
PRECISION FARMING SYSTEMS	771
CABLE LOOM VARIOGUIDE	772
BASE STATION	773
DATA TRANSFER VARIO-DOC	774
DATA TRANSFER VARIO-GUIDE LIGHT	775
VARIOGUIDE TOPCON	776
VARIOGUIDE NOVATEL	778
VARIOGUIDE TRIMBLE	779
AGCO CONNECTIVITY MODULE (ACM)	780
ACCESSORIES	781
EMERGENCY PACK	782
WHEEL WEDGE MOUNTING	783
SPACER RING REAR AXLE SHAFT	784
FLANGE LOADING WEIGHT	785
LOADING WEIGHT TAIL WHEEL	786

Page Number	Page Title	Page Reference
01-000-TOC	ENGINE, FUEL AND EXHAUST SYSTEM	01-000-TOC
02-000-TOC	AXLES	02-000-TOC
03-000-TOC	STEERING SYSTEM	03-000-TOC
04-000-TOC	DRIVE TRAIN SYSTEM	04-000-TOC
05-000-TOC	COMPRESSED AIR SYSTEM	05-000-TOC
06-000-TOC	HYDRAULIC SYSTEM	06-000-TOC
07-000-TOC	ELECTRICAL SYSTEM	07-000-TOC
08-000-TOC	CAB	08-000-TOC
09-000-TOC	AIR CONDITIONING AND HEATING SYSTEM	09-000-TOC
10-000-TOC	CHASSIS	10-000-TOC
11-000-TOC	WHEELS	11-000-TOC
12-000-TOC	IMPLEMENT LIFT SYSTEM FRONT	12-000-TOC
13-000-TOC	IMPLEMENT LIFT SYSTEM REAR	13-000-TOC
14-000-TOC	FRONT/REAR LOADERS	14-000-TOC
15-000-TOC	PRECISION FARMING SYSTEMS	15-000-TOC
16-000-TOC	ACCESSORIES	16-000-TOC

Fendt			F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)			F841000
ENGINE, FUEL AND EXHAUST SYSTEM			Page01-000-TOC
Page Number	Page Title	Page Reference	
01-0001	CRANKCASE UP TO ENGINE S/N 11630955	1973593	
01-0002	CRANKCASE FROM - UP TO ENGINE S/N 11630956 - 11703295	1973607	
01-0003	CRANKCASE FROM - UP TO ENGINE S/N 11703296 - 12299951	1973637	
01-0004	CRANKCASE FROM ENGINE S/N 12299952	2591495	
01-0005	CRANKCASE BLANKING PARTS	1370245	
01-0006	CRANKCASE PISTON COOL.NOZZLE	1370541	
01-0007	CRANKCASE LOCKING PLUG	1370794	
01-0008	CRANKCASE BLANKING PARTS	1371074	
01-0009	CRANKCASE BLANKING PARTS FROM ENGINE S/N 12163402	2594660	
01-0010	SET OF GASKETS - MOTOR	1371717	
01-0011	ENGINE MOUNTINGS	1489645	
01-0012	ENGINE BEARINGS	1488619	
01-0013	TRANSMITTER ENGINE SPEED EDC	1372097	
01-0014	TRANSMITTER ENGINE SPEED FASTENINGS	1373109	
01-0015	CRANKCASE BREATHER	1373749	
01-0016	CRANKCASE BREATHER BREATHER TUBE	1485663	
01-0017	FRONT COVER INTEGRATED OIL PUMP	1387311	
01-0018	FRONT COVER FASTENINGS	1387642	
01-0019	TRANSMITTER ENGINE SPEED EDC	1387959	
01-0020	TRANSMITTER ENGINE SPEED EDC FASTENINGS ENGINE NUMBER <-- 11578682 --> 19999999	1477763	
01-0021	GEARCASE	1388284	
01-0022	GEARCASE FROM ENGINE S/N 12331698	2594444	
01-0023	GEARCASE LOCKING PLUG	2577617	
01-0024	ADAPTER HOUSING	1388681	
01-0025	ADAPTER HOUSING FASTENINGS	1393193	
01-0026	FEMALE FLANGE HOUSING/GEAR CASE	1393565	
01-0027	ENGINE MOUNTING	1393922	
01-0028	VALVE COVER ENGINE NUMBER <-- 11474430 --> 12442827	1394786	
01-0029	VALVE COVER ENGINE NUMBER <-- 12442828	2307064	
01-0030	CYLINDER HEAD TEMP. TRANSMITTER EDC	1394291	
01-0031	ROCKER ARM	1395439	

Fendt			F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)			F841000
ENGINE, FUEL AND EXHAUST SYSTEM			Page01-000-TOC
Page Number	Page Title	Page Reference	
01-0032	CYLINDER HEAD UP TO ENGINE S/N 11474429	1395913	
01-0033	CYLINDER HEAD FROM - UP TO ENGINE S/N 11474430 - 11864951	2004637	
01-0034	CYLINDER HEAD FROM ENGINE S/N 11864952	2006580	
01-0035	HEAD GASKET	1396315	
01-0036	VALVE DRIVE	1396725	
01-0037	CAMSHAFT	1397143	
01-0038	PISTON UP TO ENGINE S/N 12134597	1397569	
01-0039	PISTON FROM ENGINE S/N 12134598	2591846	
01-0040	CONNECTING ROD	1398003	
01-0041	CRANKSHAFT	1398445	
01-0042	MAIN BEARING	1400001	
01-0043	CRANKSHAFT - V-BELT PULLEY BELT DRIVE REAR	1400694	
01-0044	CRANKSHAFT - V-BELT PULLEY BELT DRIVE FRONT	1479405	
01-0045	ADAPTER DISC - V-BELT PULLEY	1480480	
01-0046	FLYWHEEL	1401164	
01-0047	FLYWHEEL FASTENINGS	1401642	
01-0048	FLYWHEEL LOCKING PLUG	1402128	
01-0049	FLYWHEEL COVER	1486688	
01-0050	OIL PAN	1402559	
01-0051	OIL FILLER	1403124	
01-0052	FILLER CAP OIL DIPSTICK	1403634	
01-0053	OIL COOLER BOX OIL PRESS. TRANSMITT	1404152	
01-0054	OIL FILTER	1404678	
01-0055	OIL COOLER	1405146	
01-0056	OIL COOLER BOX BLANKING PARTS	1405754	
01-0057	OIL COOLER BOX GASKET FASTENINGS	1406304	
01-0058	COOL.WATER PIPING OIL COOLER BOX	1406862	
01-0059	EXHAUST BEND SENDER EXHAUST TEMPERATURE ENGINE -->11857467	1426417	
01-0060	EXHAUST BEND ENGINE <--11857468	1921523	
01-0061	EXHAUST BEND FASTENINGS	1426991	
01-0062	EXHAUST BEND CONTROL PIPE	1427873	
01-0063	EXHAUST BEND - CONTROL PIPE FROM ENGINE S/N 11899504	2006668	
01-0064	TURBO-SUPERCHARGER TOP	1428467	
01-0065	TURBO-SUPERCHARGER LUBE OIL LINE	1429699	
01-0066	TURBO-SUPERCHARGER OIL RETURN TUBE	1430334	
01-0067	COMPENSATOR UP TO ENGINE S/N 11953049	1430956	

Fendt			F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)			Page01-000-TOC
ENGINE, FUEL AND EXHAUST SYSTEM			
Page Number	Page Title	Page Reference	
01-0068	COMPENSATOR FROM ENGINE S/N 11953050	2181178	
01-0069	TURBO-SUPERCHARGER LOWER	1431586	
01-0070	COOL.WATER PIPING TURBO CHARGER LOWER UP TO ENGINE S/N 11669986	1432224	
01-0071	COOL.WATER PIPING TURBO CHARGER LOWER FROM ENGINE S/N 11669987	1974685	
01-0072	CONNECTING PIPE INTERCOOLER ENGINE	1432902	
01-0073	CHARGE AIR COOLER INTERCOOLER ENGINE	1433606	
01-0074	FLEXIBLE CONNECTION HOSE INTERCOOLER	1434298	
01-0075	HEATING-FLANGE	1435201	
01-0076	RELAY - HEATING-FLANGE	1435706	
01-0077	ELECTRIC WIRING RELAY GRID HEATER	1436352	
01-0078	ELECTRIC WIRING RELAY ALTERNATOR	1437692	
01-0079	ELECTRIC WIRING - SHIELD CAP	1438394	
01-0080	ELECTRIC WIRING FASTENINGS	2594573	
01-0081	CONSOLE - FUEL FILTER	1439146	
01-0082	FUEL FILTER	1439889	
01-0083	FUEL LINES RETURN FLOW FCU	1440621	
01-0084	FUEL LINES PRESSURE TRANSDUCER FUEL	1441355	
01-0085	FUEL PUMP	1442097	
01-0086	FUEL PUMP FASTENINGS	1442862	
01-0087	HIGH-PRESSURE PUMP	1443620	
01-0088	HIGH-PRESSURE PUMP FASTENINGS	1444410	
01-0089	HIGH-PRESSURE PUMP ROLLER TAPPET	1445209	
01-0090	INJECTOR	1445991	
01-0091	HIGH-PRESSURE ACCUM. SENSOR HIGH PRESSURE PRESSURE RELIEF VALVE UP TO ENGINE S/N 11474429	1446781	
01-0092	HIGH-PRESSURE ACCUM. SENSOR HIGH PRESSURE PRESSURE RELIEF VALVE FROM ENGINE S/N 11474430	1972741	
01-0093	METERING UNIT	1447603	
01-0094	METERING UNIT FASTENINGS	1448409	
01-0095	FUEL PRESSURE LINES	1449223	
01-0096	CHARGED AIR SENSOR BUST PRESSUR INTERCOOLER TEMPERATURE ENGINE NUMBER --> 11569883	1449843	

Fendt			F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)			Page01-000-TOC
ENGINE, FUEL AND EXHAUST SYSTEM			
Page Number	Page Title	Page Reference	
01-0097	CHARGED AIR SENSOR BUST PRESSUR INTERCOOLER TEMPERATURE ENGINE NUMBER <-- 11578682	1450673	
01-0098	CHARGED AIR - BRACKET UP TO ENGINE S/N 11474429	1451549	
01-0099	CHARGED AIR - BRACKET FROM ENGINE S/N 11474430	2006800	
01-0100	CHARGE AIR ELBOW	1452392	
01-0101	CHARGE AIR ELBOW PRESSURE TRANSDUCER BACK PRESSURE	1453260	
01-0102	EGR-MODULE UP TO ENGINE S/N 11630955	1933047	
01-0103	EGR-MODULE FROM ENGINE S/N 11630956	1975649	
01-0104	WATER PUMP	1455073	
01-0105	WATER PUMP - V-BELT PULLEY	1455989	
01-0106	WATER PUMP - FIXING PARTS	1457064	
01-0107	WATER PUMP - CONNECTING SOCKET	1459814	
01-0108	THERMOSTAT HOUSING ENGINE NUMBER <-- 11559051	1461332	
01-0109	THERMOSTAT HOUSING HOSE CONNECTION BLANKING PARTS	1462292	
01-0110	THERMOSTAT HOUSING - FIXING PARTS	1514642	
01-0111	V-BELT - BELT DRIVE REAR	1463512	
01-0112	V-BELT - BELT DRIVE FRONT	1466265	
01-0113	GUIDE PULLEY - BELT DRIVE REAR	1467240	
01-0114	TENSION ROLLER - BELT DRIVE REAR	1468426	
01-0115	TENSION ROLLER - GUIDE PULLEY BELT DRIVE FRONT	1469454	
01-0116	FAN SUPPORT UP TO ENGINE S/N 11870488	1470456	
01-0117	FAN SUPPORT FROM - UP TO ENGINE S/N 11870489 - 12203421	2006606	
01-0118	FAN SUPPORT FROM ENGINE S/N 12203422	2594486	
01-0119	FAN SUPPORT - FIXING PARTS	1321543	
01-0120	FUEL LINES	1262315	
01-0121	PREFILTER	1262327	
01-0122	FUEL TANK	1262375	
01-0123	FUEL TANK SUPPORT	1262343	
01-0124	WATER COOLED RADIATOR - LOW TEMPERATURE CONSOLE	1268527	
01-0125	WATER COOLED RADIATOR	1268732	
01-0126	WATER COOLED RADIATOR - SEAL	1267076	
01-0127	EXPANSION TANK	1266867	
01-0128	COOL. WATER PIPING - WATER COOLED RADIATOR	1266927	
01-0129	COOL. WATER PIPING - HEATING CONNECTION TANK ADBLUE <-- 841/0101 --> 841/1175	1279434	
01-0130	COOL. WATER PIPING - HEATING CONNECTION TANK ADBLUE <-- 841/1176	1938359	
01-0131	COOL. WATER PIPING - WATER COOLED RADIATOR EXPANSION TANK	1283250	
01-0132	COOL. WATER PIPING	1283742	
01-0133	AIR FILTER	1287135	
01-0134	AIR FILTER - BULKHEAD CLEAN AIR TUBE	1289775	
01-0135	BOOST INTERCOOLING	1264277	

Fendt


FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)

F841000


ENGINE, FUEL AND EXHAUST SYSTEM

Page01-000-TOC

 Page Number	Page Title	Page Reference
01-0136	SILENCER UP TO MACHINE S/N WAM841XXX00F07085	1291977
01-0137	SILENCER FROM MACHINE S/N WAM841XXX00F07086	2502039
01-0138	EXHAUST BEND	1323522
01-0139	EXHAUST BRAKE	1329241
01-0140	EXHAUST AFTER-TREATMENT CATHAL. CONVERTER	1333538
01-0141	EXHAUST AFTER-TREATMENT - PARTICLE FILTER	1333720
01-0142	EXHAUST AFTER-TREATMENT - PARTICLE FILTER SENDER CLAMPING PARTS	1333909
01-0143	EXHAUST AFTER-TREATMENT - TANK ADBLUE	1331400
01-0144	EXHAUST AFTER-TREATMENT - SUPPLY UNIT	1329859
01-0145	EXHAUST AFTER-TREATMENT - PIPING FROM - UP TO MACHINE S/N	1335185
01-0146	SPEED CONTROL	1335447
01-0147	VISCO FAN	1335842
01-0148	VISCO FAN - REVERSIBLE FAN PNEUMATIC BOOTH SUSPENSION	1976429
01-0149	VISCO FAN - REVERSIBLE FAN MECHANICAL SUSPENSION	1976448
01-0150	ENGINE PRE-HEATER	1519008

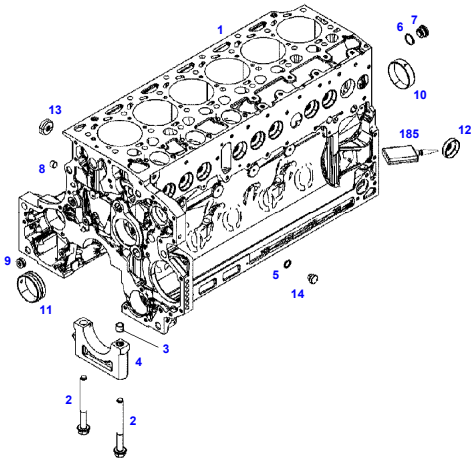


Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					Page01-0001
CRANKCASE					
Item	Part Number	Qty	Description Comments	Technical Specification	
			UP TO ENGINE S/N 11630955		
	72608626	1	ENGINE UP TO MACHINE S/N WAM841XXX00F07000	TTCD6.1L6	
1	72613033	1	CRANKCASE INCLUDES ITEMS 2-14		
2	72416467	14	HEXAGONAL HEAD BOLT		
3	72344342	14	ADAPTER BUSH		
4			NOT AVAILABLE IN SINGLE PARTS		
5	72456134	2	SEALING WASHER	DIN 7603 D14X20-CU-VERZINNT	
6	72439874	1	SEALING WASHER		
7	72455559	1	PLUG SCREW		
8	72429347	2	SCREW	M14X1,5	
9	72431135	1	LOCKING PLUG		
10	72613035	6	BEARING BUSHING		
11	72491822	1	BEARING BUSHING		
12	72325325	9	CORE HOLE PLUG		
13	72325326	6	CORE HOLE PLUG		
14	72315799	2	PLUG	DIN 7604 AM14X1,5-A3L	
185	72381391	1	THREADLOCKER	LOCTITE 243 10ML	

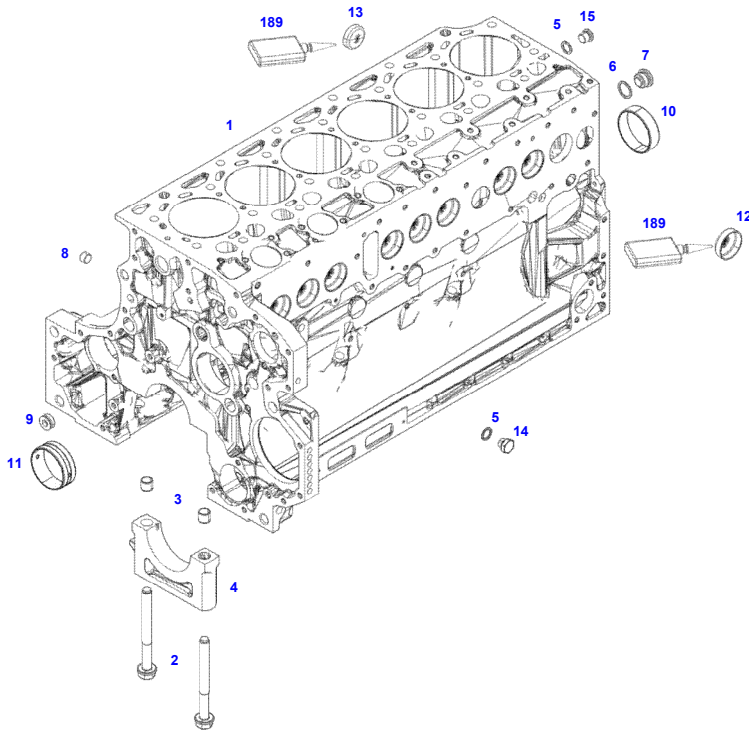 

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					Page01-0002
Item	Part Number	Qty	Description Comments	Technical Specification	
			FROM - UP TO ENGINE S/N 11630956 - 11703295		
	72608626	1	ENGINE UP TO MACHINE S/N WAM841XXX00F07000	TTCD6.1L6	
1	72625853	1	CRANKCASE INCLUDES ITEMS 2-15		
2	72416467	14	HEXAGONAL HEAD BOLT		
3	72344342	14	ADAPTER BUSH		
4			NOT AVAILABLE IN SINGLE PARTS		
5	72456134	2	SEALING WASHER	DIN 7603 D14X20-CU-VERZINNT	
6	72439874	1	SEALING WASHER		
7	72455559	1	PLUG SCREW		
8	72429347	2	SCREW	M14X1,5	
9	72431135	1	LOCKING PLUG		
10	72613035	6	BEARING BUSHING		
11	72491822	1	BEARING BUSHING		
12	72325325	9	CORE HOLE PLUG		
13	72325326	6	CORE HOLE PLUG		
14	72315799	2	PLUG	DIN 7604 AM14X1,5-A3L	
15	72315438	1	PLUG SCREW	DIN 908 M14X1,5-ST	
189	72381391	1	THREADLOCKER	LOCTITE 243 10ML	

 F061053




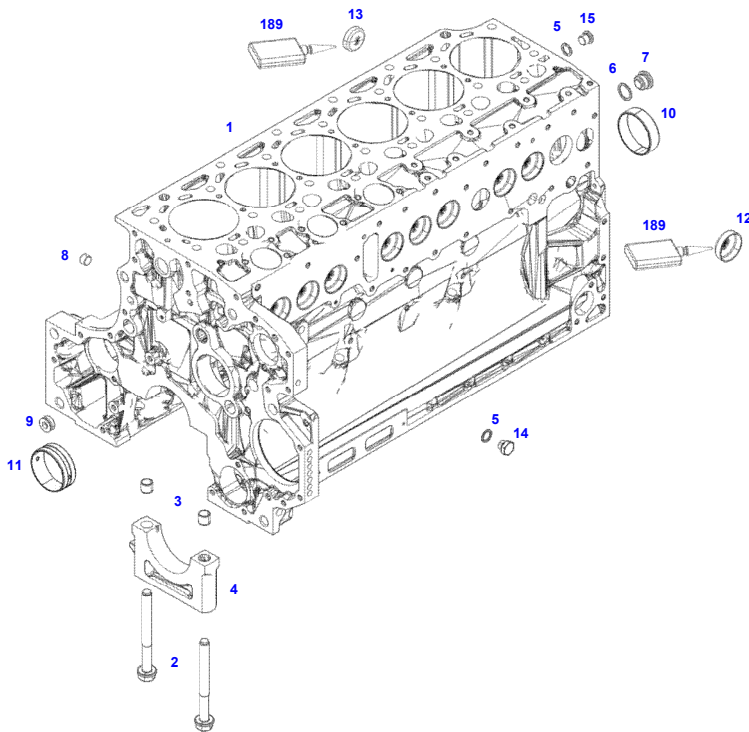

Fendt				F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)				Page01-0003
CRANKCASE				
Item	Part Number	Qty	Description Comments	Technical Specification
			FROM - UP TO ENGINE S/N 11703296 - 12299951	
	72608626	1	ENGINE UP TO MACHINE S/N WAM841XXX00F07000	TTCD6.1L6
1	72625854	1	CRANKCASE INCLUDES ITEMS 2-15	
2	72416467	14	HEXAGONAL HEAD BOLT	
3	72344342	14	ADAPTER BUSH	
4			NOT AVAILABLE IN SINGLE PARTS	
5	72456134	2	SEALING WASHER	DIN 7603 D14X20-CU-VERZINNT
6	72439874	1	SEALING WASHER	
7	72455559	1	PLUG SCREW	
8	72429347	2	SCREW	M14X1,5
9	72431135	1	LOCKING PLUG	
10	ACP0152940	6	FEMALE BEARING	
11	ACP0152930	1	FEMALE BEARING	
12	72325325	9	CORE HOLE PLUG	
13	72325326	6	CORE HOLE PLUG	
14	72315799	2	PLUG	DIN 7604 AM14X1,5-A3L
15	72315438	1	PLUG SCREW	DIN 908 M14X1,5-ST
189	72381391	1	THREADLOCKER	LOCTITE 243 10ML

 F061053




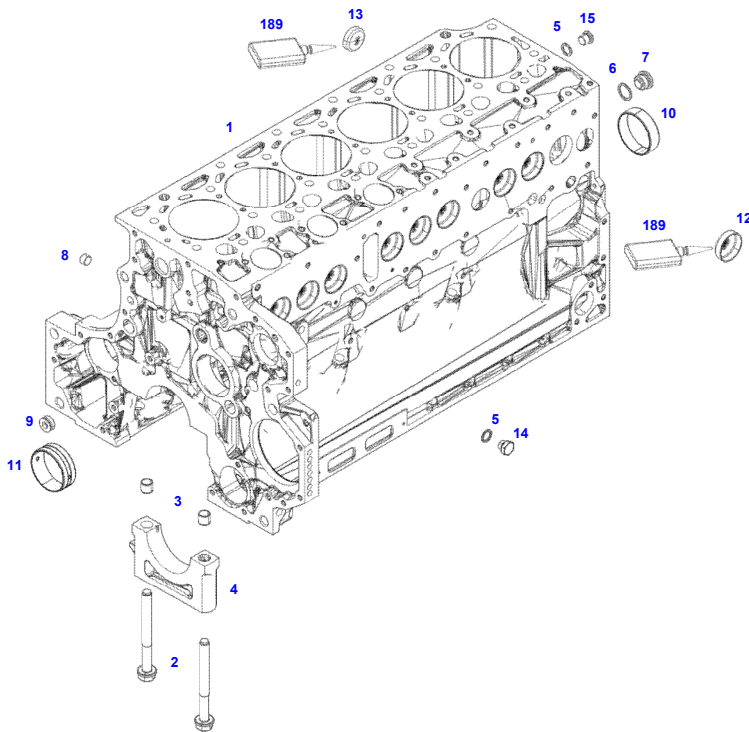

F061053




Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					Page01-0004
CRANKCASE					
Item	Part Number	Qty	Description Comments	Technical Specification	
			FROM ENGINE S/N 12299952		
	72649946	1	ENGINE FROM MACHINE S/N WAM841XXX00F07001	TTCD6.1L6	
1	72625854	1	CRANKCASE INCLUDES ITEMS 2-15		
2	72416467	14	HEXAGONAL HEAD BOLT		
3	72344342	14	ADAPTER BUSH		
4			NOT AVAILABLE IN SINGLE PARTS		
5	72456134	2	SEALING WASHER	DIN 7603 D14X20-CU-VERZINNT	
6	72439874	1	SEALING WASHER		
7	72455559	1	PLUG SCREW		
8	72429347	2	SCREW	M14X1,5	
9	72431135	1	LOCKING PLUG		
10	ACP0152940	6	FEMALE BEARING		
11	ACP0152930	1	FEMALE BEARING		
12	72325325	9	CORE HOLE PLUG		
13	72325326	6	CORE HOLE PLUG		
14	72315799	2	PLUG	DIN 7604 AM14X1,5-A3L	
15	72315438	1	PLUG SCREW	DIN 908 M14X1,5-ST	
189	72381391	1	THREADLOCKER	LOCTITE 243 10ML	

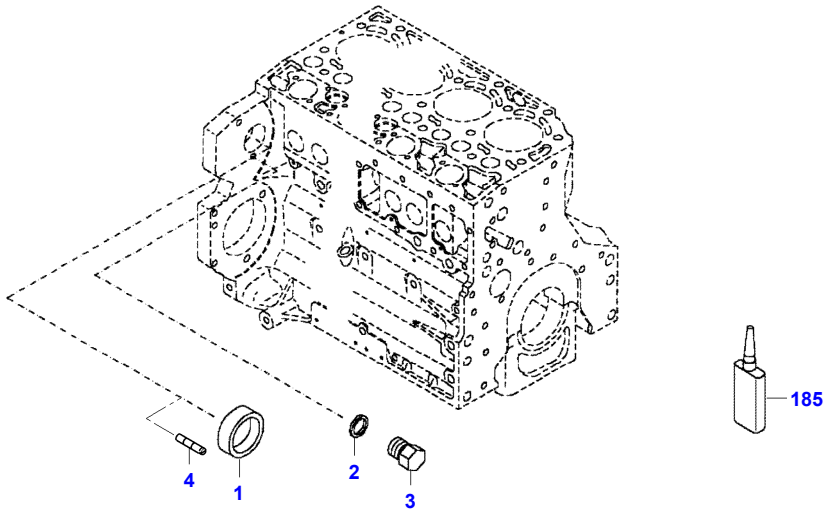 



5786967-M-1

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
CRANKCASE					Page01-0005
Item	Part Number	Qty	Description Comments	Technical Specification	
BLANKING PARTS					
1	72627515	1	CORE HOLE PLUG UP TO ENGINE NUMBER 11982739	DIN 7603 A10X13,5-CU	
	72628071	1	CAP COVER FROM ENGINE S/N 11982740		
2	72315088	2	SEALING WASHER		
3	72323677	2	PLUG		
4	72631860	2	THREADED PIN UP TO ENGINE S/N 12473099		
	72657969	2	PLUG SCREW FROM ENGINE S/N 12473100		
185	72325403	1	SAFE LOCK AGENT UP TO ENGINE NUMBER 11982739		
	72493900	1	INSTALLATION AIDS FROM ENGINE S/N 11982740		

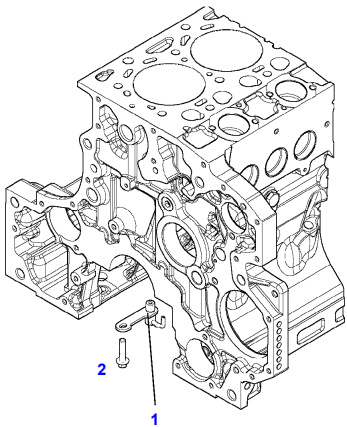 


041197


Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
CRANKCASE					Page01-0006
Item	Part Number	Qty	Description Comments	Technical Specification	
PISTON COOL.NOZZLE					
1	72613036	6	PISTON COOLING JET		
2	72605244	6	HEXAGONAL HEAD BOLT	M8X35	

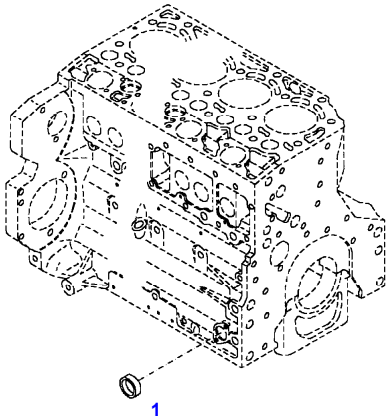  

Fendt				F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)				
CRANKCASE				Page01-0007
Item	Part Number	Qty	Description Comments	
LOCKING PLUG				
1	72325326	1	CORE HOLE PLUG UP TO ENGINE NUMBER 11982739	
	72628072	1	CAP COVER FROM ENGINE S/N 11982740	
185	72325403	1	SAFE LOCK AGENT UP TO ENGINE NUMBER 11982739	
	72493900	1	INSTALLATION AIDS FROM ENGINE S/N 11982740	

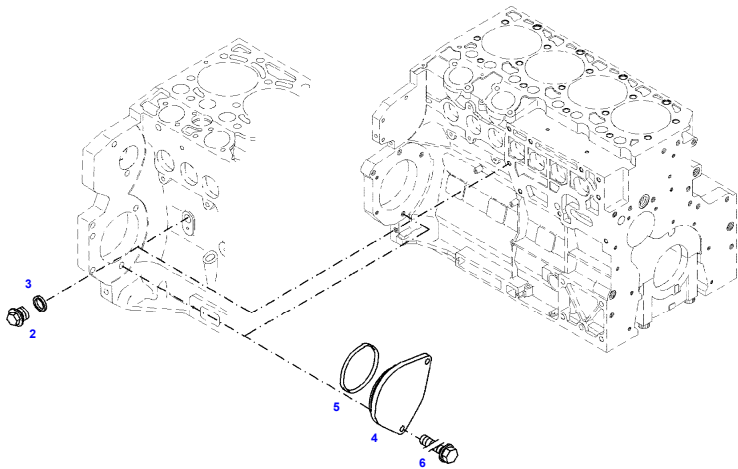 


Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					Page01-0008
CRANKCASE					
Item	Part Number	Qty	Description Comments	Technical Specification	
BLANKING PARTS					
2	72315799	1	PLUG NOT NEEDED WITH AIR BRAKE	DIN 7604 AM14X1,5-A3L	
3	72439867	1	SEALING WASHER NOT NEEDED WITH AIR BRAKE	DIN7603-14X18-CU-VERZ	
4	72431648	1	COVER NOT NEEDED WITH AIR BRAKE		
5	72416472	1	SEAL 96X4MM NOT NEEDED WITH AIR BRAKE		
6	72438057	1	HEXAGONAL HEAD BOLT NOT NEEDED WITH AIR BRAKE UP TO 2017-08	M10X20	
	72657640	1	HEXAGONAL HEAD BOLT NOT NEEDED WITH AIR BRAKE FROM 2017-09	M10X16	

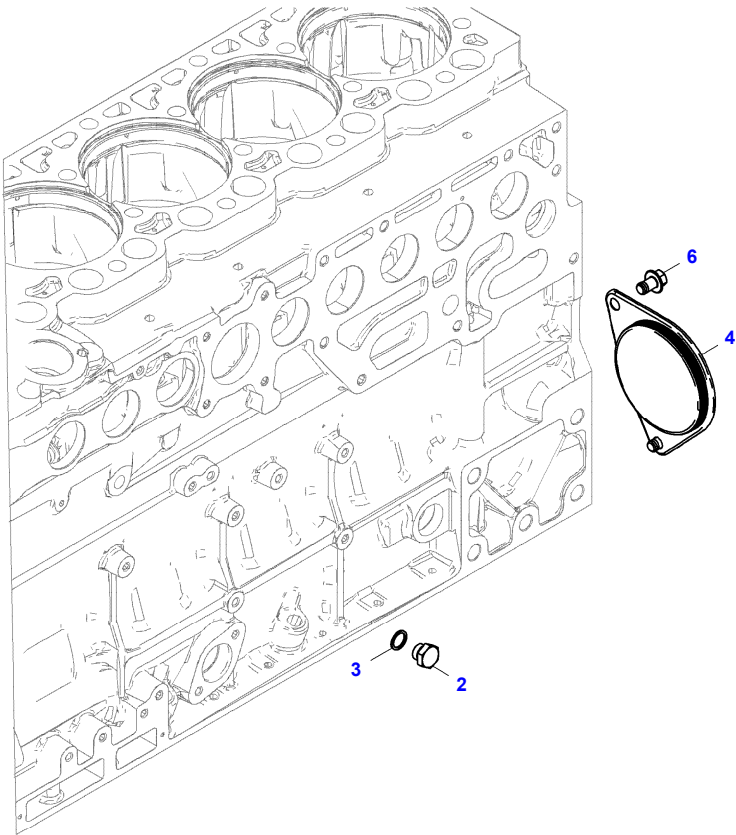 


25548786-M-1


Item	Part Number	Qty	Description Comments	Technical Specification
BLANKING PARTS FROM ENGINE S/N 12163402				
2	72631866	1	PLUG SCREW NOT NEEDED WITH AIR BRAKE	
3	72439867	1	SEALING WASHER NOT NEEDED WITH AIR BRAKE	DIN7603-14X18-CU-VERZ
4	72657732	1	COVER NOT NEEDED WITH AIR BRAKE	
6	72657640	2	HEXAGONAL HEAD BOLT	M10X16

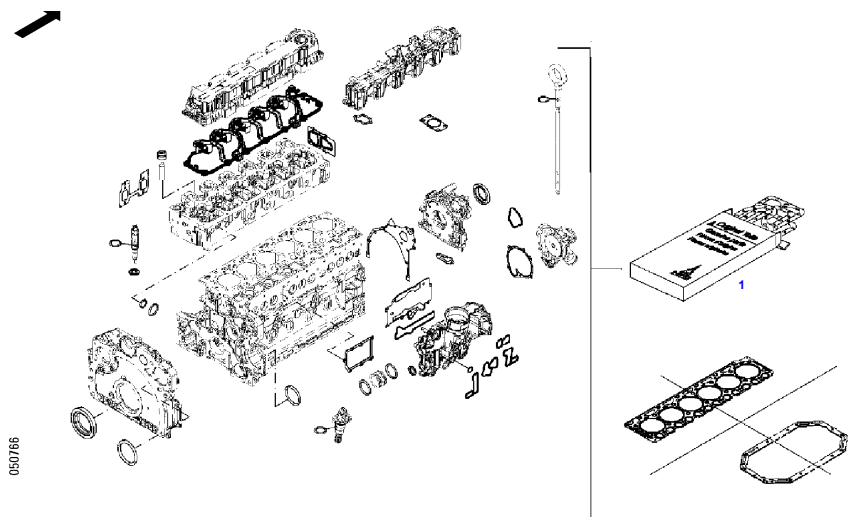 


Fendt				F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)				Page01-0010
SET OF GASKETS - MOTOR				
Item	Part Number	Qty	Description	
			Comments	
1	72613037	1	SEAL KIT	
			WITHOUT CYLINDER HEAD GASKET	

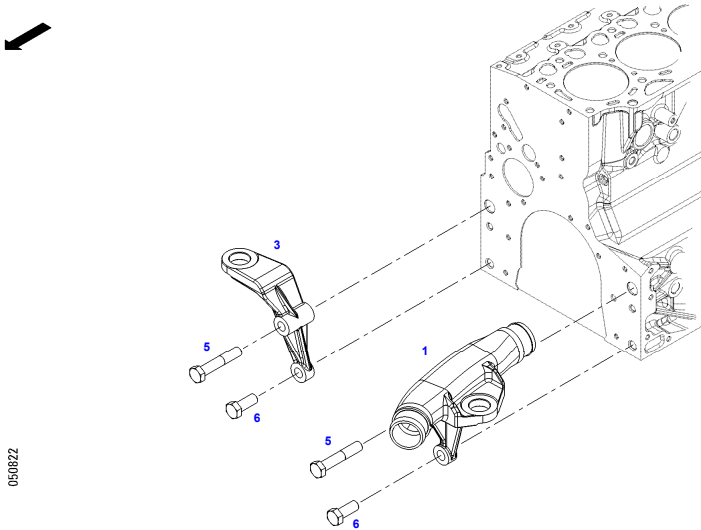 

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
ENGINE MOUNTINGS					Page01-0011
Item	Part Number	Qty	Description	Technical Specification	
1	72609225	1	HOLDER LEFT	L	
3	72481061	1	ENGINE MOUNT RIGHT		
5	72374294	2	HEXAGONAL HEAD BOLT	DIN 931-M16X85 GWA-10.9	
6	72418408	2	HEXAGONAL HEAD BOLT	DIN 933 M16X40 GWA-10.9	

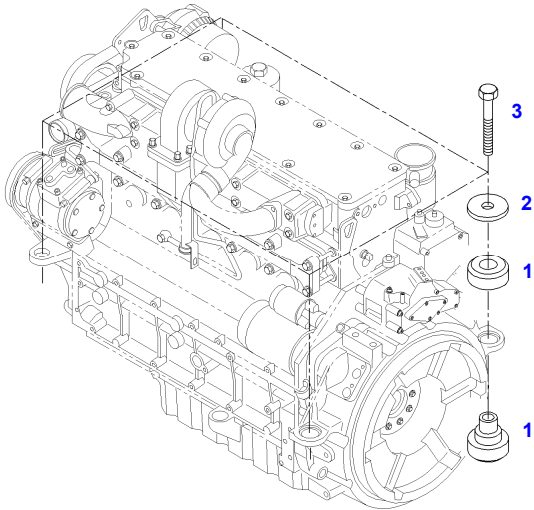 


Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
ENGINE BEARINGS					Page01-0012
Item	Part Number	Qty	Description	Technical Specification	
			Comments		
1	72609235	4	ENGINE SUSPENSION		
2	72318110	4	DISC		
3	72315563	4	HEXAGONAL HEAD BOLT	DIN 931 M12X80-8.8A3L	

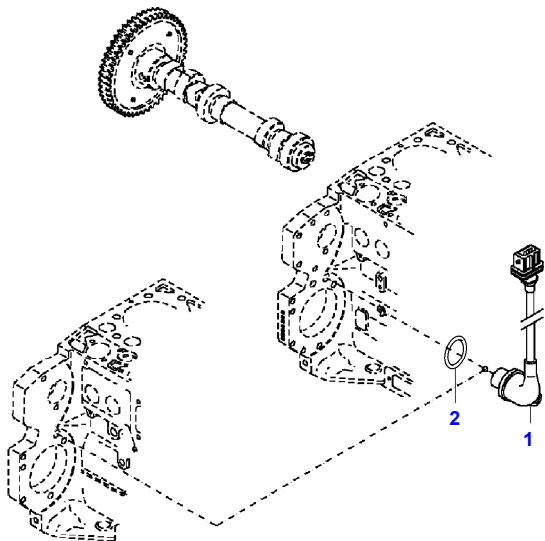 

Item	Part Number	Qty	Description	Comments
ENGINE SPEED				
EDC				
1	72436871	1	TRANSMITTER	ENGINE SPEED EDC UP TO ENGINE NUMBER 11933623
	72626758	1	TRANSMITTER	
			ENGINE SPEED	EDC FROM ENGINE S/N 11933624
			EDC	
2	72628348	1	O-RING	




 5788543-M-1

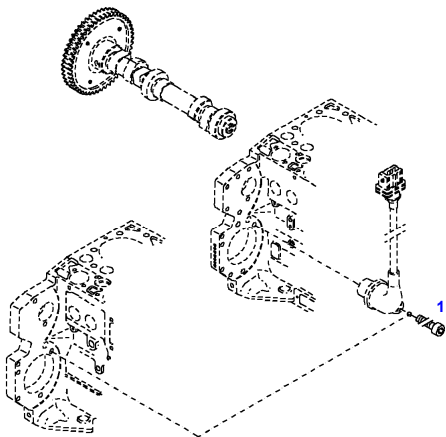


035317


Fendt					
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					F841000
TRANSMITTER					Page01-0014
Item	Part Number	Qty	Description Comments	Technical Specification	
			ENGINE SPEED FASTENINGS		
1	72315460	1	SOCKET HEAD BOLT	DIN 912 M6X16-8.8	

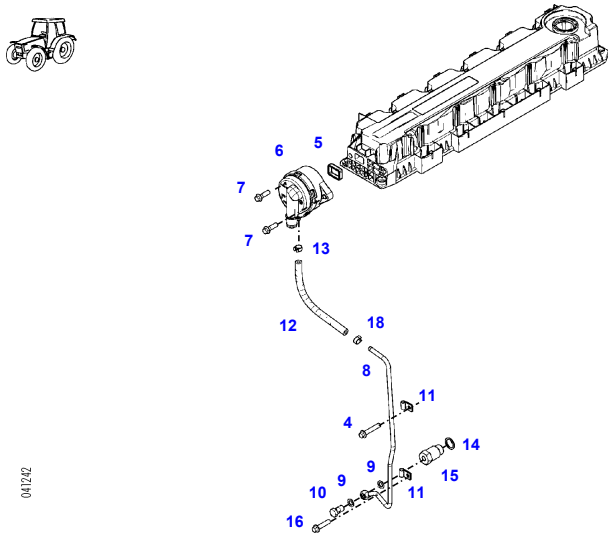 

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					Page01-0015
CRANKCASE BREATHER					
Item	Part Number	Qty	Description	Technical Specification	
			Comments		
4	72325453	1	HEXAGONAL HEAD BOLT		
			M8X50		
5	72455795	1	SEAL		
6	72437250	1	BREATHER		
			><5		
7	72325293	2	HEXAGONAL HEAD BOLT	M8X30	
			M8X30		
8	72495347	1	OIL RETURN LINE		
			><9-13		
9	72439873	2	SEALING WASHER		
10	72323517	1	BANJO BOLT		
11	72425772	2	PIPE CLAMP		
12	72495349	1	RUBBER HOSE		
13	72479013	1	HOSE CLIP		
14	72439874	1	SEALING WASHER		
15	72425770	1	LOCK VALVE		
16	72325457	1	HEXAGONAL HEAD BOLT		
			M8X40		
18	72479013	1	HOSE CLIP		

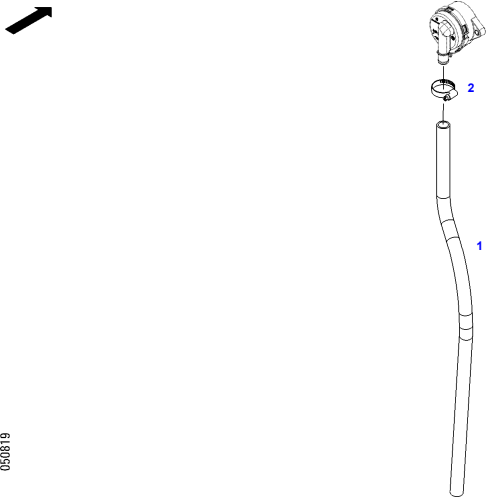 


Fendt				F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)				
CRANKCASE BREATHER				Page01-0016
Item	Part Number	Qty	Description Comments	
BREATHER TUBE				
1	72614567	1	HOSE SUPERSESSION	
	72437755	1	HOSE SERIES EXECUTION NO LONGER AVAILABLE	
2	72311167	1	HOSE CLIP	

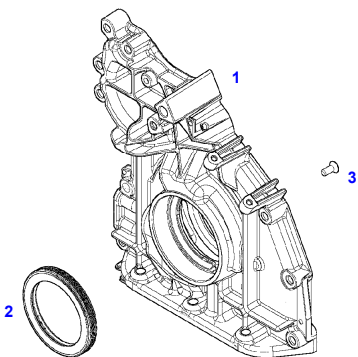 


041199

Fendt				F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)				
FRONT COVER				Page01-0017
Item	Part Number	Qty	Description Comments	
INTEGRATED OIL PUMP				
1	72648947	1	CRANKCASE END COVER INTEGRATED OIL PUMP ><2,3	
2	72479487	1	SHAFT SEAL	
3	72416228	8	COUNTERSUNK CAPSCREW M6X16	

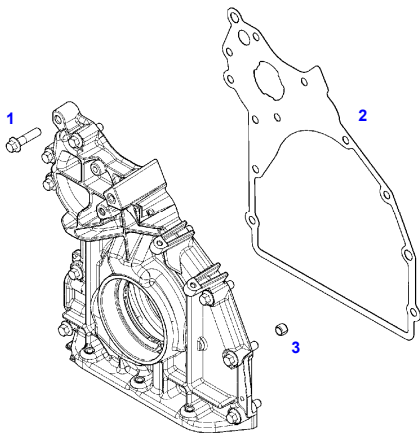 

041243

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
FRONT COVER					Page01-0018
Item	Part Number	Qty	Description Comments	Technical Specification	
FASTENINGS					
1	72605244	12	HEXAGONAL HEAD BOLT M8X35	M8X35	
2	72486511	1	SEAL		
3	72325352	1	TENSIONER BUSHING		

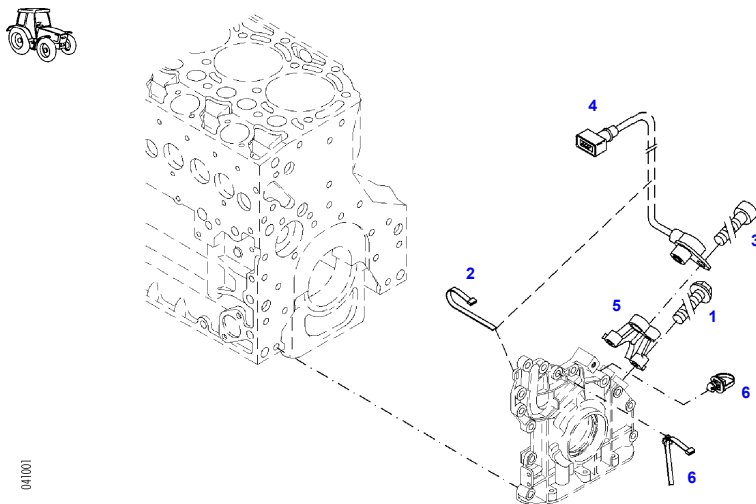 

Fendt					F841000
FENDT 826 S4 (841/00101-05000) (WAM841XXX00F05001-99999)					
TRANSMITTER					Page01-0019
Item	Part Number	Qty	Description Comments	Technical Specification	
			ENGINE SPEED EDC		
1	72436834	2	HEXAGONAL HEAD BOLT M6X30		
2	72416001	1	RETAINING STRAP		
3	72315460	1	SOCKET HEAD BOLT	DIN 912 M6X16-8.8	
4	72436872	1	TRANSMITTER ENGINE SPEED EDC		
5	72494073	1	RETAINER		
6	72455561	2	RETAINING STRAP		

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**