


480C Forklift

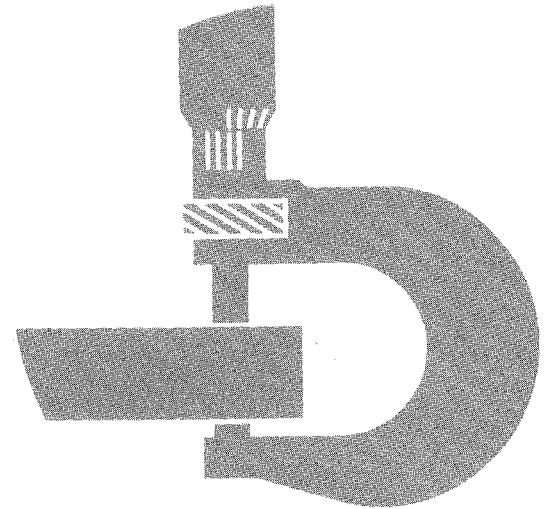

TECHNICAL MANUAL

480C FORKLIFT TECHNICAL MANUAL TM-1249 (JUN-81)

SECTION AND GROUP CONTENTS

SECTION I - GENERAL INFORMATION

- Group I - Contents and Index
- Group II - Introduction and Safety Information
- Group III - General Specifications
- Group IV - Lubrication

SECTION 01 - WHEELS

- Group 0110 - Powered Wheels and Fastenings
- Group 0120 - Non-Powered Wheels and Fastenings

SECTION 02 - AXLES AND SUSPENSION SYSTEMS

- Group 0230 - Non-Powered Wheel Axles
- Group 0250 - Axle Shafts, Bearings and Reduction Gears

SECTION 03 - TRANSMISSION

- Group 0300 - Removal and Installation
- Group 0315 - Controls
- Group 0350 - Gears, Shafts, Bearings and Power Shift Clutch
- Group 0360 - Hydraulic System

SECTION 04 - ENGINE

- Group 0400 - Removal and Installation
- Group 0401 - Crankshaft and Main Bearings
- Group 0402 - Camshaft and Valve Actuating Means
- Group 0403 - Connecting Rods and Pistons
- Group 0404 - Cylinder Block

SECTION 04 - ENGINE - Continued

- Group 0407 - Oiling System
- Group 0409 - Cylinder Head and Valves
- Group 0413 - Fuel Injection System
- Group 0414 - Intake Manifold
- Group 0415 - Engine Balancer
- Group 0417 - Water Pump
- Group 0418 - Thermostats, Housing and Piping
- Group 0420 - Fuel Filter
- Group 0421 - Fuel Transfer Pump
- Group 0422 - Starting Motor and Fastenings
- Group 0433 - Flywheel, Housing and Fastenings

SECTION 05 - ENGINE AUXILIARY SYSTEMS

- Group 0505 - Cold Weather Starting Aids
- Group 0510 - Cooling Systems
- Group 0515 - Speed Controls
- Group 0520 - Intake System
- Group 0530 - External Exhaust Systems
- Group 0560 - External Fuel Supply Systems

SECTION 07 - TRACTION CLUTCH

- Group 0715 - Controls
- Group 0752 - Elements

SECTION 09 - STEERING SYSTEM

- Group 0960 - Hydraulic System

All information, illustrations and specifications contained in this technical manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice. Wherever applicable, specifications and design information are in accordance with SAE and ICED standards.

COPYRIGHT® 1981
DEERE & COMPANY
Moline, Illinois
All rights reserved
A JOHN DEERE ILLUSTRATION

T30J1 01 100881

SECTION AND GROUP CONTENTS - CONTINUED

SECTION 10 - SERVICE BRAKES

- Group 1011 - Active Elements
- Group 1060 - Hydraulic System

SECTION 11 - PARKING-EMERGENCY BRAKES

- Group 1111 - Active Elements
- Group 1115 - Controls Linkage

SECTION 16 - ELECTRICAL SYSTEMS

- Group 1671 - Batteries, Support and Cables
- Group 1672 - Alternator, Regulator and Charging-System Wiring
- Group 1673 - Lighting System
- Group 1674 - Wiring Harness and Switches
- Group 1676 - Instruments and Indicators

SECTION 17 - FRAME, CHASSIS, OR SUPPORTING STRUCTURE

- Group 1740 - Frame Installation
- Group 1749 - Chassis Weights

SECTION 18 - OPERATOR'S STATION

- Group 1810 - Operator Enclosure

SECTION 19 - SHEET METAL AND STYLING

- Group 1910 - Hood or Engine Enclosure

SECTION 21 - MAIN HYDRAULIC SYSTEM

- Group 2160 - Hydraulic System

SECTION 45 - FORKLIFTS

- Group 4503 - Forks
- Group 4512 - Masts
- Group 4560 - Hydraulic System

SECTION 90 - SYSTEM TESTING

- Group 9005 - General Information - Seven Basic Steps of Diagnosis and Testing
- Group 9010 - Engine
- Group 9015 - Electrical System
- Group 9020 - Power Train
- Group 9025 - Hydraulic System

SECTION 99 - SPECIAL TOOLS

ALPHABETICAL INDEX

A		Crankshaft and Main Bearings	0401-01
Adjust Clutch Disconnect Lever	0715-04	Crankshaft Gear	0401-08
Adjust Parking Brake	1111-10	Crankshaft Rotation Direction	9010-04
Air Cleaner	0520-01	Cylinder Block	0404-01
Air Filter Element	0520-01	Cylinder Head and Valves	0409-01
Air Filter Restriction Indicator	1676-01	Cylinder, Lift	4560-53
Air Filter Restriction Indicator Test	9010-20	Cylinder, Mast	4512-09
Axle Assembly, Non-Powered	0230-15	Cylinders, Sideshift	4560-43
Axle Housing	0250-03	Cylinder, Steering	0960-21
Axle Shaft	0250-10	Cylinder, Tilt	4560-34
B		D	
Battery	1671-02	Differential Drive Shaft	
Bleed Air From Lift Cylinder	4560-65	Cone Point Adjustment	0350-29
Bleed Brake Hydraulic System	1060-15	Differential Drive Shaft Preload	
Bleed Fuel System	0400-23	Adjustment	0350-33
Brake Disk	1011-01	Differential Housing Backlash	
Brake Pedal and Equilizing		Adjustment	0350-37
Valve Adjustment	9025-50	Differential Housing Preload	
Brake Valve	1060-02	Adjustment	0350-37
Brake Valve, Test	9025-47	Differential Lock Assembly	0350-20
C		Differential Lock Linkage	
Camshaft and Valve Actuating Means	0402-01	Adjustment	9020-26
Charging Circuit Testing	9015-04	Drop Retarder, Lift Cylinder	4560-66
Chassis Weights	1749-01	E	
Circuit Breaker	1674-02	Element, Hydraulic Oil Filter	4560-32
Clutch Assembly	0752-02	Electrical System, Diagnose Malfunctions	9015-04
Clutch Control Valve, Test	9025-53	Electrical System Short Test	9015-09
Clutch Disconnect Lever, Adjustment	0715-04	Electrical System Testing	9015-01
Clutch Disconnect Lever Adjustment	9020-27	Electrical System, Tests	9015-04
Clutch Disconnect Linkage	0715-01	Charging Circuit	9015-14
Clutch Fork	0715-01	Instruments and Indicators	9015-17
Clutch Fork Shaft	0715-02	Lighting Circuit	9015-15
Clutch Housing (Reverser)	0300-20	Miscellaneous Accessories	9015-19
Cold Weather Starting Aids	0505-01	Starting Circuit	9015-10
Compression Pressure, Test	9010-13	System Short	9015-09
Connecting Rods and Pistons	0403-01	Engine Auxiliary Systems	0505-01
Control Valve	4560-12	Engine Balancer	0415-01
Control Valve Linkage	4560-26	Engine Coolant Heater	0505-01
Cooling System Test	9010-13	Engine Coolant Temperature Sender	1676-02
Cooling Systems	0510-01	Engine, Diagnose Malfunctions	9010-06
Counterweights	1749-02	Engine Oil Pressure Indicator Switch	1676-02
Countershaft Bearing Support,		Engine Oil Pressure Test	9010-13
Transmission	0350-14	Engine Removal and Installation	0400-05
		Engine System Testing	9010-01

Continued on next page

ALPHABETICAL INDEX - Continued

Engine Test

Compression Pressure 9010-13
 Engine oil Pressure 9010-13
 Cooling System 9010-13
 Fuel Transfer Pump Pressure 9010-14
 Air Filter Restriction Indicator 9010-20
 External Fuel Supply Systems 0560-01

F

Fast Idle Adjustment 9010-16
 Filter, Hydraulic Oil 4560-31
 Flasher 1673-02
 Flywheel Housing and Fastenings 0433-01
 Forks 4503-01
 Forklift Functions, Test 9035-35
 Forklift Hydraulics 4560-01
 Forklift Hydraulics, Diagnose
 Malfunctions 9025-21
 Forklifts 4503-01
 Fuel Filter 0420-01
 Fuel Injection System 0413-01
 Fuel Sender 1676-02
 Fuel Tank 0560-01
 Fuel Transfer Pump 0421-01
 Fuel Transfer Pump Pressure Test 9010-14

G

Gauges 1676-01
 Gears, Shafts, Bearings and Power
 Shift Clutch, Transmission 0350-01
 General Information 9005-01
 General Specification I-III-01

H

Headlights 1673-01
 Hoop 1910-01
 Hood Supports 1910-02
 Horn Switch 1674-01
 Hour Meter 1676-01
 Hub 0230-03
 Hydraulic Brakes, Diagnose Malfunctions .. 9025-25
 Hydraulic Pump Using Flow Meter, Test ... 9025-28
 Hydraulic Pump Using Orifice, Test 9025-30
 Hydraulic System Testing 9025-02
 Hydraulics, Forklift 4560-01
 Hydraulic Oil Filter 4560-31
 Hydraulic Oil Filter Element 4560-32
 Hydraulic Pump 2160-03
 Hydraulic Pump Drive 2160-11
 Hydraulic System, Main 2160-01

I

Indicator Lights 1676-01
 Injection Pump Timing Advance
 Adjustment 9010-18
 Instruments and Indicators
 Testing 9015-17
 Intake Manifold 0414-01
 Intake System 0520-01

J, K

Key Switch 1674-01

L

Lift Cylinder 4560-53
 Lift Cylinder Drop Retarder 4560-66
 Lift Cylinders For Leakage, Test 9035-39
 Light Switch 1673-02
 Light, Tail/Flood 1673-01
 Lighting Circuit Testing 9015-15
 Lights, Warning 1673-01
 Linkage, Control Valve 4560-26
 Lubricants I-IV-02
 Lubrication Information I-IV-01

M

Main Hydraulic System 2160-01
 Masts 4512-01
 Measure and Adjust Valves 0402-08
 Miscellaneous Accessories Testing 9015-19
 Miscellaneous Components, Engine 0400-06

N

Neutral Start Switch 1674-02
 Non-Powered Axle Assembly 0230-15
 Non-Powered Wheels and Fastenings 0120-01

O

Oiling System 0407-01
 Operation of Priority Valve, Test 9025-44
 Operator Enclosure 1810-01
 Operator's Station 1810-01
 Overhead Guard 1810-01

P

Parking Brake Adjustment 9020-26
 Parking Brake Band Assembly 1111-03
 Parking Brake Drum 1111-05
 Parking Brake Indicator Switch 1676-02
 Parking Brake Linkage 1115-01

Continued on next page

ALPHABETICAL INDEX - Continued

Parking Brake Pedal 1115-01
 Parking Brake Pedal Assembly 1115-03
 Parking Brake Shaft 1111-01
 Parking-Emergency Brakes Active
 Elements 1111-01
 Parking-Emergency Brakes Controls
 Linkage 1115-01
 Pilot Bearing 0752-05
 Planet Pinion Carrier Assembly 0250-07
 Platform 1810-05
 Power Train, Diagnose Malfunctions 9020-20
 Power Train System Testing 9020-02
 Powered Wheels and Fastenings 0110-01
 Priority Valve 4560-10

Q, R

Radiator 0510-01
 Rear Oil Seal and Wear Ring 0401-11
 Removal and Installation, Engine 0400-05
 Remove Engine 0400-06
 Reverser Accumulator (Shift Trace), Test . 9025-55
 Reverser Control Valve 0360-10
 Reverser Hydraulics, Diagnose
 Malfunctions 9025-26
 Reverser Lever Linkage Adjustment 9020-26
 Reverser System Pressure, Test 9025-51
 Roller Carriage, Mast 4512-06
 Rollers, Mast 4512-10

S

Safety Information I-II-02
 Seat Support 1810-06
 Service Brakes Active Elements 1011-01
 Service Brakes Hydraulic System 1060-01
 Sheave, Mast 4512-07
 Shifter Shafts, Transmission 0350-06
 Shifters, Transmission 0350-13
 Side Shields 1910-01
 Sideshift Cylinder For Leakage, Test 9025-40
 Sideshift Cylinders 4560-43
 Slow Idle Adjustment 9010-14
 Special Tools
 Alternator 1672-01
 Axle Shaft, Bearings and Reduction
 Gears 0250-01
 Camshaft and Valve Actuating Means . 0402-01
 Charging System Wiring 1672-01
 Connecting Rods and Pistons 0403-01
 Crankshaft and Main Bearings 0401-01
 Cylinder Block 0404-01
 Cylinder Head and Valves 0409-01
 Electrical System Testing 9015-01

Engine balancer 0415-01
 Engine Removal and Installation 0400-05
 Engine System Testing 9010-01
 Frame Installation 1740-01
 Gears, Shafts, Bearings and Power
 Shift Clutch, Transmission 0350-01
 Hydraulic System 4560-01
 Hydraulic System, Main 2160-01
 Hydraulic System Testing 9025-02
 Masts 4512-01
 Non-Powered Wheels and Fastenings . 0120-01
 Non-Powered Wheel Axles 0230-01
 Oiling System 0407-01
 Parking-Emergency Brakes Active
 Elements 1111-01
 Powered Wheels and Fastenings 0110-01
 Regulator 1672-01
 Service Brakes Hydraulic System 1060-01
 Starting Motor and Fastenings 0422-01
 Steering Hydraulics 0960-01
 Traction Clutch Elements 0752-01
 Transmission 0300-03
 Transmission Hydraulic System 0360-01
 Water Pump 0417-01
 Specifications
 Alternator 1672-01
 Axle Housing 0250-01
 Axle Shaft 0250-02
 Balancer Shaft 0415-01
 Battery 1671-01
 Brake Line 0300-04
 Brake Valve 1060-01
 Camshaft 0402-04
 Clutch Control Valve Test 9025-04
 Clutch Fork 0715-01
 Clutch Housing (Reverser) Installation . 0300-05
 Clutch Plate 0752-01
 Connecting Rod and Piston 0403-01
 Control Valve 4560-01
 Control Valve, Transmission 0350-06
 Cooling Systems 0510-01
 Counterweight 1749-01
 Countershaft Bearing Support 0350-04
 Crankshaft and Main Bearings 0401-01
 Cylinder Block 0404-02
 Cylinder Head and Valve 0409-01
 Cylinder Liner 0404-01
 Differential Bearing Quill 0350-03

Continued on next page

T5011 05 180881

ALPHABETICAL INDEX - Continued

Differential Drive Shaft	0350-02	Timing Gear Train	0402-05
Differential Housing Backlash	0350-03	Toe-In	0230-02
Differential Housing Preload	0350-02	Transmission and Axle	0300-03
Differential Lock Linkage	0300-04	Transmission Cover	0350-05
Drive Housing	0350-04	Transmission Drive Shaft	0350-03
Engine Installation	0400-05	Transmission Oil Filter	0360-04
Engine Test	9010-02	Transmission Oil Filter Relief Valve	0360-04
Flywheel	0752-02	Transmission Oil Pump	0360-01
Flywheel and Flywheel Housing	0433-01	Transmission Pump Test (Flow Meter)	9025-05
Fork	4503-01	Under Frame	1740-01
Forklift Functions Leakage Test (Orifice)	9025-03	Valve Lift and Valve Clearance	0402-01
Fuel Injection System	0413-01	Water Pump	0417-01
Hydraulic Pump	2160-01	Wheel Hub	0230-01
Hydraulic Pump Drive	2160-01	Speed Control Linkage Adjustment	9010-17
Hydraulic Pump Test (Flow Meter)	9025-02	Speed Controls	0515-01
Hydraulic Pump Test (Orifice)	9025-02	Speed Controls Links	0515-01
Masts	4512-01	Speed Control Lever	0515-02
Non-Powered Axle	0230-02	Speed Control Pedal	0515-01
Non-Powered Wheels and Fastenings	0120-01	Speed-of-Shift Adjustment	9025-55
Oiling System	0407-01	Spindle and Knuckle	0230-05
Overhead Guard	1810-01	Starting Aid Adapter	0505-04
Parking-Emergency Brakes Controls Linkage	1115-01	Starting Aid Nozzle	0505-02
Powered Wheels and Fastenings	0110-01	Starting Circuit Testing	9015-10
Reverser Accumulator Test	9025-04	Starting Motor and Fastenings	0422-01
Reverser Brake Housing Assembly	0350-06	Steering Column	0960-05
Reverser Clutch Assembly	0350-06	Steering Cylinder	0960-21
Reverser Clutch Pack Assembly	0350-06	Steering Cylinder Bushings	0960-29
Reverser Control Valve	0360-01	Steering Cylinder For Leakage, Test	9025-43
Reverser Planetary	0350-05	Steering System, Diagnose Malfunctions ..	9025-24
Reverser System Pressure Test	9025-04	Steering System Relief Valve	4560-06
Right Differential Housing Cover	0350-02	Steering System Relief Valve, Test	9025-45
Rocker Arm Assembly	0402-02	Steering Valve	0960-09
Shifter Shaft, Transmission	0350-01	Steering Valve For Leakage, Test	9025-40
Sideshift Cylinder	4560-02	Switch, Engine Oil Pressure Indicator	1676-02
Spindle and Knuckle	0230-01	Switch, Horn	1674-01
Starting Motor	0422-01	Switch, Key	1674-01
Steering Column	0960-01	Switch, Light	1673-02
Steering Cylinder	0960-02	Switch, Neutral Start	1674-02
Steering Cylinder Bushings	0960-03	Switch, Parking Brake Indicator	1676-02
Steering System Relief Valve Test	9025-03	System Relief Valve, Test	9025-23
Steering Valve	0960-02		
Steering Valve Leakage Test	9025-03		
Switches	1674-01		
System Relief Valve Test	9025-03		
Thermostat	0418-01		
Tie Rod	0230-02		
Timing Gear Cover	0402-03		

T

Tail/Flood Light	1673-01
Thermostats	0418-01
Throw-Out Bearing Carrier	0715-01

Continued on next page

ALPHABETICAL INDEX - Continued

Tie Rod 0230-10
 Tilt Cylinder 4560-34
 Tilt Cylinder Bushings 4560-42
 Tilt Cylinders for Leakage,
 Test 9025-39
 Timing Gear Cover 0402-15
 Timing Gear Train 0402-25
 Traction Clutch 0715-01
 Traction Clutch Control 0715-01
 Traction Clutch Elements 0752-01
 Transmission 0300-03
 Transmission and Axle Assembly 0300-07
 Transmission Controls 0315-01
 Transmission Drive Shaft 0350-18
 Transmission Drive Shaft End
 Play Adjustment 0350-42
 Transmission Gears, Shafts and
 Power Shift Clutch 0350-01
 Transmission Hydraulic System 0360-01
 Transmission Oil Filter 0360-25
 Transmission Oil Filter
 Relief Valve 0360-28
 Transmission Oil Pump 0360-04
 Transmission Oil Pump Inlet
 Screen 0360-31
 Transmission Pump Using Flow
 Meter, Test 9025-56
 Trunnion Bar, Mast 4512-11

U, V

Valve, Brake 1060-02
 Valve, Control 4560-12
 Valve, Priority 4560-10
 Valve, Relief Steering System 4560-06
 Valve, Steering 0960-09
 Voltage Regulator 1672-16

W

Warning Lights 1673-01
 Water Pump 0417-01

X, Y, Z

INTRODUCTION AND SAFETY INFORMATION

INTRODUCTION


This technical manual is part of a twin concept of service.

FOS Manuals - for reference**Technical Manuals - for actual service**

The two kinds of manuals work as a team to give you both the general background and technical details of shop service.

Fundamentals of Service (FOS) Manuals cover basic theory of operation, fundamentals of troubleshooting, general maintenance, and basic types of failures and their causes. FOS Manuals are for training new personnel and for reference by experienced technicians.

Technical Manuals are concise service guides for a specific machine. Technical manuals are on-the-job guides containing only the vital information needed by an experienced service technician.

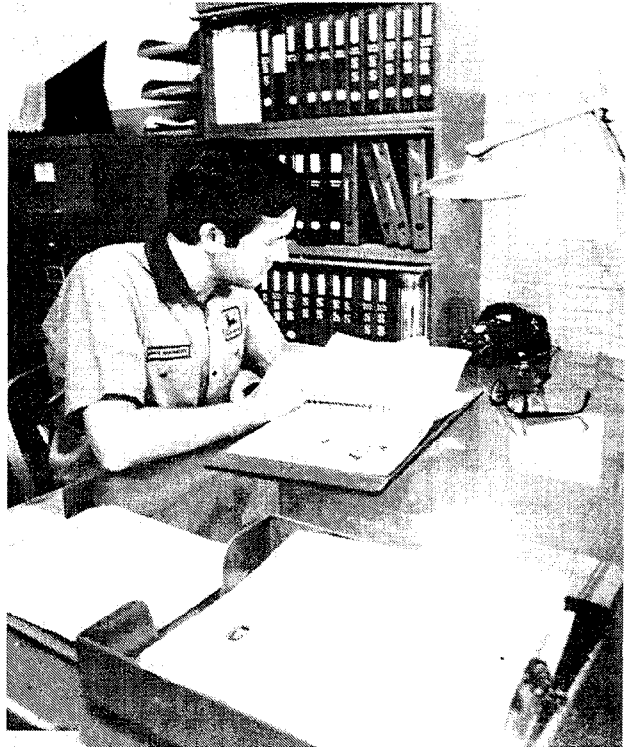

Some features of this technical manual:

- John Deere ILLUSTRATION format emphasizing more detailed pictures and a minimum use of words.
- Detailed repair procedures outlined in individual sections.
- System diagnostic testing detailed in separate section.
- Table of contents of all sections at the front of the manual and a listing of all groups and headings at the front of each section.
- Special tools and specifications listed at the front of each group they are used in.
- Special tools illustrated in numerical order at end of manual.
- Alphabetical listing of all major components, specifications, and special tools.
- General specifications, lubricating requirements, and a summation of safety rules.

This technical manual was planned and written for you - an experienced service technician. Keep it in a permanent binder in the shop where it is handy. Refer to it when you need to know correct service procedures or specifications.

Using the technical manual as a guide will reduce error and costly delay. It will also assure you the best in finished service work.



SAFETY AND YOU




CAUTION: This safety symbol is used for important safety messages. When you see this symbol, follow the safety message to avoid personal injury.



45A:T61389 T30:1 I102 280581


Be prepared for an accident or fire.
Know where the first aid kit and fire extinguisher are.
Know how to use them.
Know where to get help.

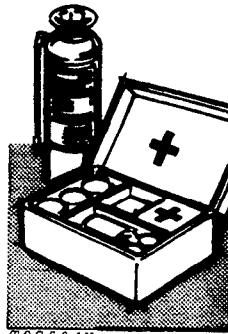

T27504N

45A:T27504 N T30:1 I103 280581

Wear safety equipment.

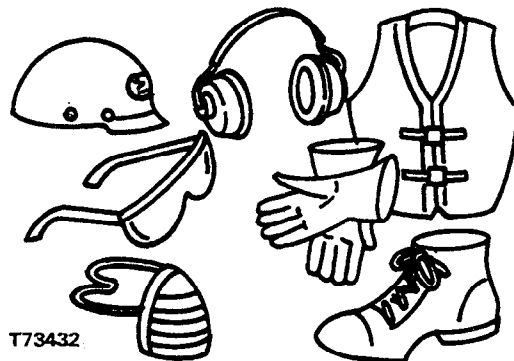

T73432

45A:T73432 T30:1 I104 280581

Wear fairly tight clothing.




T45672

45A:T45672 T30:1 I105 280581



CAUTION: Escaping fluid under pressure can have sufficient force to penetrate the skin, causing serious injury. Before disconnecting lines, be sure connections are tight and lines, pipes and hoses are not damaged. Use a piece of cardboard or wood, rather than hands, to search for leaks.

If injured by escaping fluid, see a doctor at once. Serious infection or reaction can develop if proper medical treatment is not administered immediately.

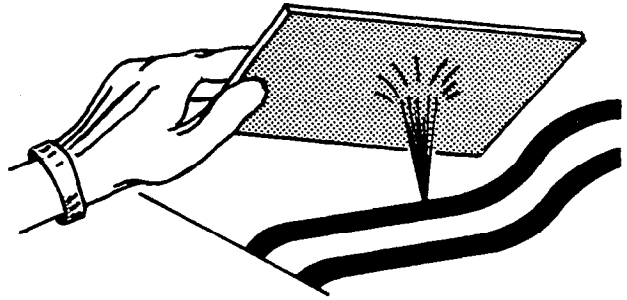


45A:T80991 T30:1 1106 280581

KEEP SHOP AND STORAGE AREA CLEAN

Maintenance area should be well-ventilated.

Keep maintenance area clean and dry.

Store flammable materials in a cool and well-ventilated area out of reach of unauthorized personnel.

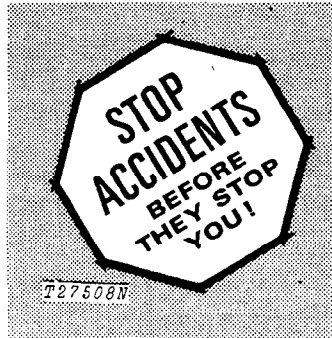

45A:T27508 N T09:1 1107 280581

FOLLOW SAFE WORKING CONDITIONS

Do not work on the equipment unless you are approved to do so. Then be sure you know the correct procedure.

Do not work on equipment while it is being operated.

Keep hands away from moving parts.

When the engine is running, do not work on equipment unless the procedure is approved.

If you must work on the machine with the engine running, ALWAYS USE TWO service technicians. One must be at the controls. The other must be within sight of the operator.

Put a support under all raised equipment.

If the machine is parked on a slope, use blocks to hold it in place.

Do not lift heavy parts by yourself. Use a hoist or jack.

TAKE CARE! WATCH OUT FOR OTHER PEOPLE IN THE AREA.


When you drill, grind or hammer metal, wear safety glasses.

X WRONG



T32709N

RIGHT

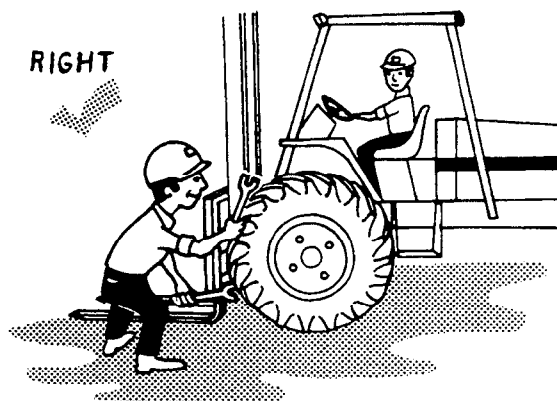

45A:T32709 N, T81390 T30:1 I108 070781

OBSERVE SERVICE PRECAUTIONS

Keep ALL equipment free of dirt and oil.

Clean oil, grease, mud, ice or snow from the operator's station, steps and hand rail.

Do not remove the radiator cap unless the engine is cool. First, loosen the cap slowly to the stop. Then release all pressure in the cooling system before you remove the cap.


Check the exhaust system regularly for leaks.

Release hydraulic pressure before you work on the hydraulic system.

When you check hydraulic pressure, be sure to use the correct test gauge.

Before you work on the fuel system, close the fuel shutoff valve.

Before you work on the electrical system, or make major repairs, disconnect the battery ground strap.

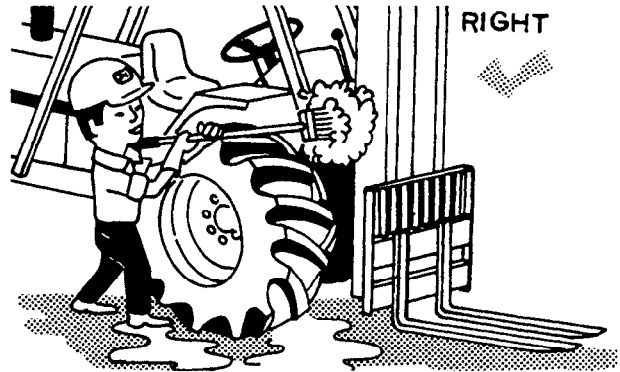


45A:T81391 T30:1 1109 280501

Put blocks under forks if you must work on raised mast or carriage.

Before you work on hydraulic system, release hydraulic pressure.

Before you overhaul the forklift or work on the electrical system, disconnect the battery.

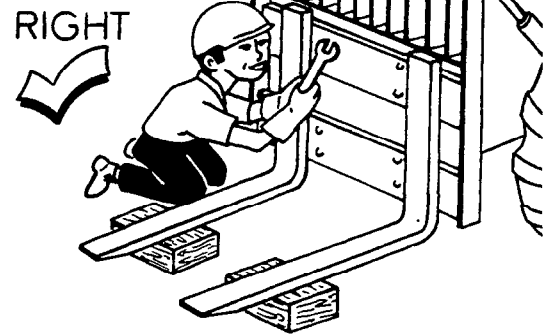

45A:T81392 T30:1 1110 280581

CHECK SAFETY EQUIPMENT ON MACHINE

All protective parts (shields, guards, ROPS, etc.) should be in good condition and fastened in place.

Check for leaks in all systems:


Air intake system

Engine oil system

Transmission-hydraulic system

Fuel system

Cooling system

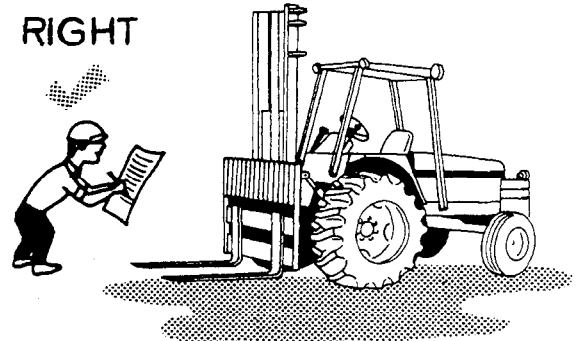

45A:T81393 T30:1 1111 280581

AVOID EXPLOSIONS OR FIRE


Do not smoke while you fill the fuel tank.

Do not smoke while you work with material that will start on fire easily.

Stop the engine before you fill the fuel tank.

Do not fill fuel tank if engine is hot.

Do not use gasoline or diesel fuel for cleaning parts. Use solvents that will not start on fire.

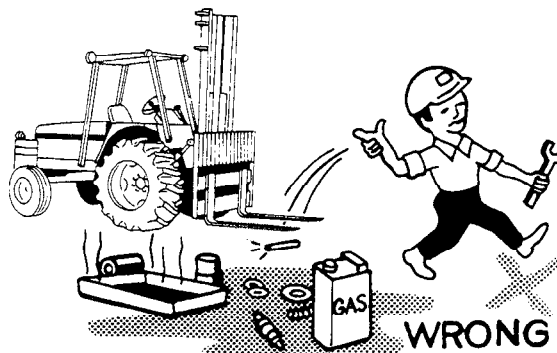

45A-T81374 T30:1 1112 280501


OBSERVE BATTERY PRECAUTIONS

Do not put metal objects across terminals to check the battery charge.

When you charge a battery, be sure there is enough ventilation.

Keep sparks and flames away from batteries.

Do not smoke near battery.

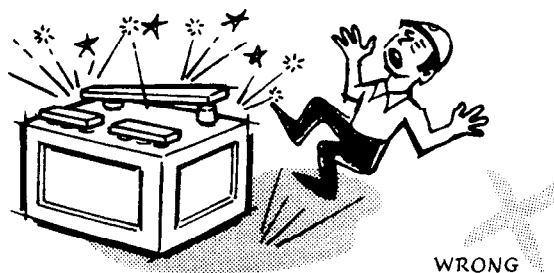

45A-T27506 T30:1 1113 280581

480C FORKLIFT

(Specifications and design subject to change without notice. Wherever applicable, specifications are in accordance with ICED and SAE Standards. Except where otherwise noted, these specifications are based on a unit equipped with 16.9-24 drive tires, 11L-15 steering tires, pallet fork, and standard equipment.)

Power (@2200 engine rpm):

	SAE	DIN
Gross	56 hp (42 kW)	
Net	52 hp (39 kW)	55 PS

Net engine flywheel power is for an engine equipped with fan, air cleaner, water pump, lubricating oil pump, fuel pump, alternator, and muffler. Gross engine power is without fan. Flywheel power ratings are under SAE standard conditions of 500 ft. altitude and 85°F. temperature and DIN 70 020 standard conditions of 760 mm Hg barometer (sea level) and 20°C. temperature.

Engine: John Deere 4-cylinder diesel, valve-in-head, 4-stroke cycle

Bore and stroke 4.02 x 4.33 in. (102 x 110 mm)
 Piston Displacement 219 cu. in. (3.589 L)
 Compression ratio 16.2 to 1
 Max. torque @ 1 400 rpm 142 lb-ft (193 N-m)
 (22.1 kg-m)

NACC or AMA (U.S. Tax) horsepower 25.65

Main bearings 5
 Lubrication Pressure system w/full-flow filter
 Cooling Pressurized w/thermostat and
 fixed bypass

Fan Suction

Air cleaner Dry

Electrical system 12 volt w/alternator

Battery (12 volt) Reserve capacity: 110 minutes

Clutch Disconnect ... Hand operated, single 10 in.
 (254 mm) plate

Transmission 8-speed transmission
 w/hydraulically actuated no-clutch direction reverser.

Gear:	Travel Speeds:			
	mph		km/h	
	Fwd.	Rev.	Fwd.	Rev.
1	1.6	1.4	2.6	2.3
2	2.3	2.0	3.7	3.2
3	3.5	3.0	5.6	4.8
4	4.8	4.1	7.7	6.6
5	6.3	5.4	10.1	8.7
6	9.0	7.8	14.5	12.6
7	13.5	11.6	21.7	18.7
8	18.7	16.1	30.1	25.9

Final Drives Inboard, planetary

Brakes Hydraulically actuated, wet-disk.
 Foot-operated individually or simultaneously.

Steering Power (hydrostatic)

Turning radius (brake
 applied w/o fork) 10 ft. 10 in. (3.30 m)

Turning clearance (brake
 applied w/o fork) 22 ft. 6 in. (6.86 m)

Wheel rotation, max. left to max. right 3 turns

General Specifications

Tires:

Drive

16.9-24, 8 ply rating, R4
19.5L-24, 8 ply rating,
R4, low profile,
tubeless

Steering

11L-15, 8 ply rating, F3
7.50/8.00-16,
10 ply rating, F3

Wheel Tread (front and rear) 62 in. (1.58 m)

Dimensions:

Overall width 6 ft. 7 in. (2.01 m)
Ground clearance, min. 1 ft. 2 in. (356 mm)
Reach from center line of
drive wheels to front of
fork carriage 2 ft. 8 in. (813 mm)

Capacities:	U.S.	Imp.	Liters
Cooling system	3.0 gal.	2.5 gal.	11.4
Fuel tank	19.5 gal.	16.3 gal.	73.8
Engine lubrication, including filter	1.5 gal.	1.3 gal.	5.7
Hydraulic system ...	12.5 gal.	10.4 gal.	47.3

SAE Operating Weight (w/required counterweights):
14 ft., 6000-lb capacity11,440 lb. (5190 kg)
21 ft. 6 in., 5000-lb. capacity ...11,310 lb. (5129 kg)
28 ft., 5000-lb. capacity12,160 lb. (5513 kg)

Shipping Weight:

Two 4-ft. (1.22 m) 5000-lb.
(2268 kg) pallet tines 350 lb. (159 kg)
Two 4-ft. (1.22 m), 6000-lb.
(2722 kg) pallet tines 425 lb. (193 kg)

Additional Standard Equipment:


Electric hour meter
Under-hood muffler w/extension and rain cap
Cold weather starting aid
Overhead guard
Hand throttle
Foot throttle
Differential lock
Fenders
Fuel filter
Key switch safety start
Antifreeze
Fuel gauge
Oil pressure indicator light
Alternator charge indicator light
Coolant temperature gauge
Appropriate counterweight
Lights
Transistorized voltage regulator
Horn
Air cleaner restriction indicator

Special Equipment:

Engine coolant heater
Vandal protection
Load backrest extension
Parking brake

T301 1115 290581

General Specifications

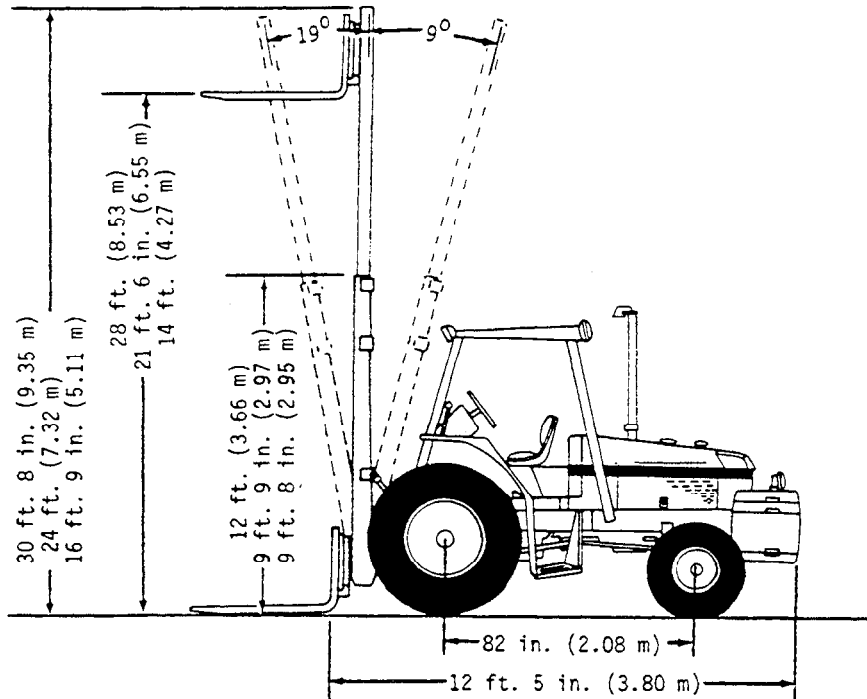

Operating Information	Maximum Lifting Height					
	14 ft. (4.27 m)			21 ft. 6 in. (6.55 m)		28 ft. (8.53 m)
Max. lift capacity*	4000 lb. (1815 kg)	6000 lb. (2722 kg)	Standard and free lift	5000 lb. (2268 kg)	4000 lb. (1815 kg)	5000 lb. (2268 kg)
Lift Capacity at full height*	4000 lb. (1815 kg)	6000 lb. (2722 kg)		2500 lb. (1134 kg)	2500 lb. (1134 kg)	1000 lb. (454 kg)
Side-shift . . . 3 in. (76 mm) to right and left of center	Yes			Yes		No
Rate of lift @ 2200 engine rpm (max. load)	52 fpm (15.9 m/min)			76 fpm (23.2 m/min)		76 fpm (23.2 m/min)
Rate of lift @ 2200 engine rpm (empty)	55 fpm (16.8 m/min)			86 fpm (26.3 m/min)		86 fpm (26.3 m/min)
Rate of drop (max. load)	29 fpm (8.8 m/min)			54 fpm (16.5 m/min)		54 fpm (16.5 m/min)
Rate of drop (empty)	33 fpm (10.1 m/min)			68 fpm (20.7 m/min)		68 fpm (20.7 m/min)

*Measured at 24 in. (610 mm) from heel of fork with load centered

General Specifications

GENERAL INFORMATION

When you service the forklift, check the periodic service chart on the left fender. See copy of chart below. The 480C operator's manual has details for forklift service.

PERIODIC SERVICES
REFER TO OPERATOR'S MANUAL FOR DETAILED INFORMATION

INTERVAL HOURS	ITEM NO.	COMPONENTS	SERVICE POINTS	DESCRIPTION OF SERVICE	CAPACITY OR MEASUREMENT	APPROVED SERVICE MATERIAL
10 OR DAILY	1	AIR CLEANER*	1	CHECK UNLOADER VALVE, RESTRICTION INDICATOR AND CLEAN ELEMENT AS REQUIRED	OPERATOR'S MANUAL	
	2	TRANSMISSION	1	CHECK OIL LEVEL	TO TOP MARK WITH DIPSTICK RESTING ON TOP OF FILLER TUBE	HY GARD OR EQUIVALENT
	3	RADIATOR	1	CHECK COOLANT LEVEL, DRAIN AND REFILL - SPRING AND FALL	MIDWAY BETWEEN CORE AND FILLER NECK	OPERATOR'S MANUAL
	4	FUEL FILTER	1	REPLACE AS REQUIRED	OPERATOR'S MANUAL	
	5	MAST SPROCKET BEARINGS	4	LUBRICATE	SEVERAL SHOTS	SAE MPG
	6	STEER AXLE AND STEERING CYLINDER	6	LUBRICATE	SEVERAL SHOTS	SAE MPG
	7	ENGINE OIL	1	CHECK LEVEL	BETWEEN MARKS ON DIPSTICK	SEE OIL CHART
	8	STEER WHEELS	2	SERVICE ONLY WHEN UNIT IS BEING OPERATED IN EXTREME WET AND MUDDY CONDITIONS	OPERATOR'S MANUAL	
	9	MAST PIVOTS AND TRUNION BAR**	3	LUBRICATE FITTINGS	2 SHOTS	SAE MPG
	10	CAPSCREWS AND BOLTS		CHECK FOR TIGHTNESS	OPERATOR'S MANUAL	
50	11	TIRES	4	CHECK AIR PRESSURE	OPERATOR'S MANUAL	
	12	TRANSMISSION AND HYDRAULIC SYSTEM	2	REPLACE 2 FILTER ELEMENTS (BREAK-IN ONLY)	OPERATOR'S MANUAL	
100	13	BATTERY	1	CHECK ELECTROLYTE LEVEL AND TERMINALS	TO BOTTOM OF FILLER NECK REMOVE ANY CORROSION	DISTILLED WATER
	14	CARRIAGE CHAIN		LUBRICATE	BRUSH ON	ENGINE OIL
	15	SPARK ARRESTING MUFFLER		CLEAN	OPERATOR'S MANUAL	
	16	MAST CHANNEL	2	LUBRICATE	SEVERAL SHOTS	SAE MPG
	17	TILT CYLINDER PIVOT PINS	4	LUBRICATE	BRUSH	ENGINE OIL
	18	CONTROL LEVERS	6	LUBRICATE	TRACE	ENGINE OIL
200	19	ENGINE OIL AND FILTER	1	DRAIN, REFILL AND REPLACE FILTER	SEE CHART BELOW	SEE OIL CHART
	20	CARRIAGE CHAIN	2	CHECK TENSION	OPERATOR'S MANUAL	
	21	FAN BELT	1	CHECK TENSION	3/4 INCH (19 mm) FLEX WITH 20 LB (90 N) FORCE	OPERATOR'S MANUAL
	22	FUEL TANK SLUMP	1	DRAIN SEDIMENT AND WATER	OPERATOR'S MANUAL	
500	23	HYDRAULIC FILTER	1	REPLACE	OPERATOR'S MANUAL	
	24	AIR INTAKE HOSES	2	CHECK CONNECTIONS	OPERATOR'S MANUAL	
	25	FUEL FILTER	1	REPLACE ELEMENT	OPERATOR'S MANUAL	
1000	26	DRIVE AXLE BEARINGS	2	CLEAN, GLASS BOWL, LUBRICATE BEARINGS	8 SHOTS	SAE MPG
	27	TRANSMISSION FILTER	1	REPLACE ELEMENT	OPERATOR'S MANUAL	
	28	CRANKCASE VENT TUBE	1	REMOVE AND CLEAN	OPERATOR'S MANUAL	DIESEL FUEL
	29	ENGINE VALVE TAPPETS	1	ADJUST CLEARANCE	OPERATOR'S MANUAL	OPERATOR'S MANUAL
	30	ENGINE SPEEDS	1	CHECK SPEEDS	OPERATOR'S MANUAL	
	31	STEER WHEEL BEARINGS	2	CLEAN, REPACK AND ADJUST	OPERATOR'S MANUAL	SAE MPG
	32	STARTER	1	LUBRICATE WICKS	SATURATE WICKS	10W 30 OIL
33	TRANSMISSION	2	DRAIN AND REFILL, CLEAN INTAKE SCREEN	12.5 GAL (47.3 L)	HY GARD OR EQUIVALENT	

ENGINE OIL

AIR TEMP	JOHN DEERE TORO GARD SUPREME OIL	SINGLE VISCOSITY OIL API SERVICE CO/SC	MULTI VISCOSITY OIL API SERVICE CO/SE
ABOVE 32°F (0°C)	SAE 30	SAE 30	NOT RECOMMENDED
32°F TO 10°F (0°C TO 23.3°C)	SAE 10W 20	SAE 10W	SAE 10W 20 SAE 10W 30
BELOW 10°F (23.3°C)	SAE 5W 20	SAE 5W	SAE 5W 20

* REPLACE ELEMENT ANNUALLY OR AS REQUIRED WITH JO FILTER
** LUBRICATE MAST PIVOT POINTS EVERY 5 HOURS UNDER ADVERSE CONDITIONS

WHEN FORKLIFT IS USED DURING PREVAILING AIR TEMPERATURES BELOW -10°F (-23°C), CHANGE OIL AFTER EVERY 100 HOURS OF OPERATION OR EVERY 6 WEEKS OF INTERMITTENT OPERATION, WHICHEVER OCCURS FIRST

CAPACITIES

ITEM	U.S. MEASURE	METRIC
FUEL TANK	19.5 GAL	74 L
COOLING SYSTEM	12 QT	11.5 L
ENGINE CRANKCASE	6 QT	5.7 L
TRANSMISSION REFILL QUANTITY	12.5 GAL	47.3 L

LUBRICANTS

Engine Oils

Use John Deere TORQ-GARD SUPREME® engine oil.

Use John Deere TORQ-GARD SUPREME SAE 10W-20 oil or equivalent during the first 100 hours of operation for break-in.

Oils other than TORQ-GARD SUPREME should have one of the following specifications.

SINGLE VISCOSITY OILS

API Service CD/SC
MIL-L-2104C
Series 3

MULTI-VISCOSITY OILS

API Service CC/SE
MIL-L-46152

Transmission-Hydraulic Oils

Use John Deere HY-GARD® Transmission and Hydraulic Oil (J20A) or an equivalent.

Greases

Use John Deere Multi-Purpose Grease or equivalent for all grease fittings and front wheel bearings.

Storing Lubricants

Store lubricants in clean containers in an area protected from dust, moisture and other contamination.

When you handle lubricants, use clean containers.

Oils and Air Temperature

SAE ENGINE OILS			
Air Temperature	John Deere TORQ-GARD SUPREME Oil	Other Oils	
		Single Viscosity Oil	Multi-Viscosity Oil
Above 32°F (0°C)	30	30	Not recommended.
32° to -10°F (0° to -23°C)	10W-20	10W	10W-30
Below -10°F (-23°C)	5W-20	5W	5W-20

If you use SAE 5W-20 or SAE 5W oil, your engine may use more oil. Check the oil level often.

45A:T80330 T30:1 IV18 290581

Section 01 WHEELS

CONTENTS

GROUP 0110 - POWERED WHEELS AND FASTENINGS

Special Tools	0110-01
Wheel Specifications	0110-01
Remove Wheel Assembly	0110-01
Remove Tire	0110-03
Install Tire	0110-03
Install Wheel Assembly	0110-05

GROUP 0120 - NON-POWERED WHEEL AND FASTENINGS

Special Tools	0120-01
Wheel Specifications	0120-01
Remove Wheel Assembly	0120-01
Remove Tire	0120-03
Install Tire	0120-03
Install Wheel Assembly	0120-05

T30;0100 01 260581

SPECIAL TOOLS


NOTE: Order tools from your SERVICE-GARD™ Catalog, unless otherwise indicated.

Number	Name	Use
D-05019ST	Heavy Duty Wheel Lift	Remove and install wheels
D-24206WK	Shop Stand	Support the unit while removing wheels

T30:0110 01 210481

WHEEL SPECIFICATION

- 1. Cap screws torque(576 N·m) 425 lb-ft

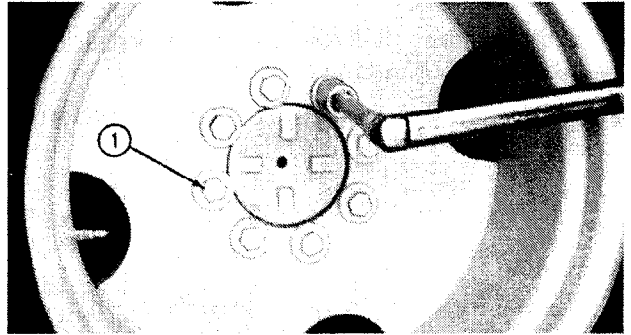


46A:T86629 T30:0110 02 210481

REMOVE WHEEL ASSEMBLY




CAUTION: A drive forklift wheel weighs approximately (121 kg) 267 lbs.

1. Loosen cap screws before lifting the wheel off the ground.

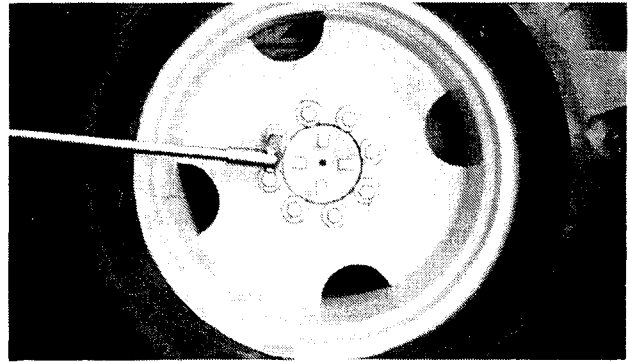


46A:T80630 T30:0110 03 210481

2. Lift the wheel off the ground using a service jack or hoist of at least (907 kg) 2-ton capacity.
3. Put a shop stand (1) such as D-24206WK under the axle housing.

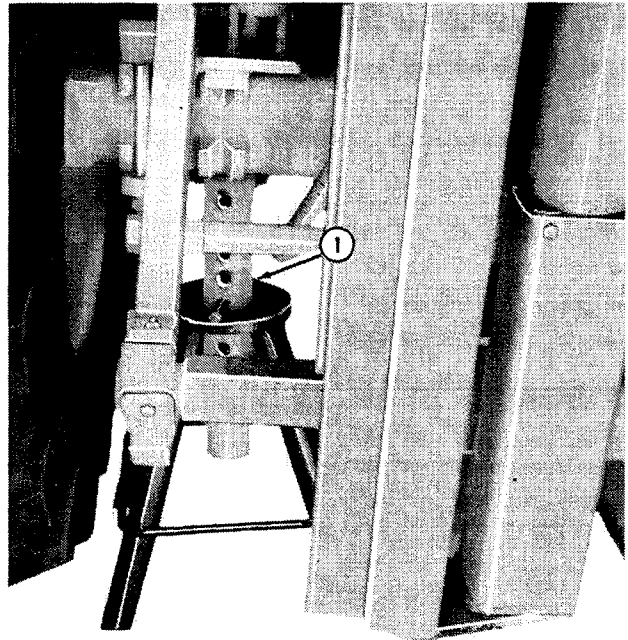

46A:T80631 T30:0110 04 210481

4. Put the D-05019ST Wheel Lift (1) under wheel. Fasten safety chain around the upper portion of tire.
5. Remove the cap screws (2). Pull wheel assembly away from axle.
6. Inspect all parts for damage; replace parts as necessary.

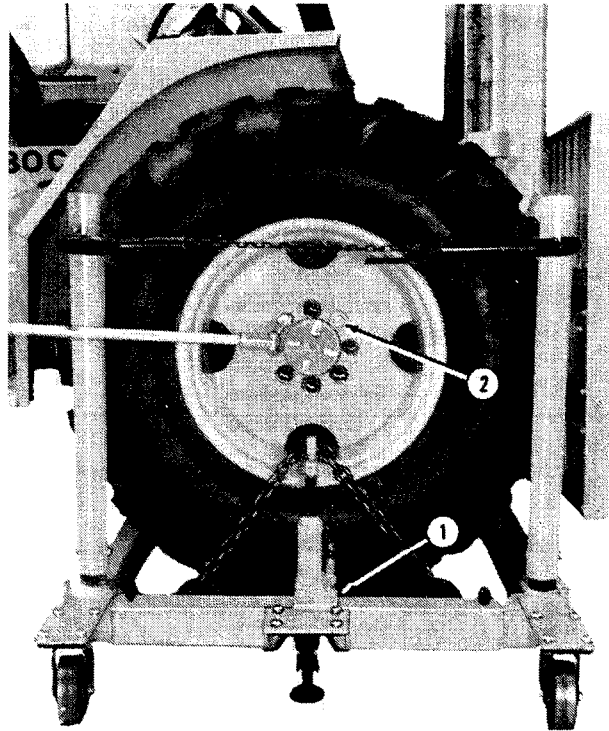

46A:T80632 T30:0110 05 210481

REMOVE TIRE


1. The tire can be removed without removing the wheel from the forklift. See the John Deere Off-The-Road Tire Maintenance Manual to remove the tire from the wheel.



CAUTION: Failure to follow proper procedures when demounting a tire from a wheel or rim can produce an explosion which may result in serious bodily injury. DO NOT attempt to demount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by a qualified tire repair service.

T30:0110 06 210481

2. Always completely deflate the tire by removing the valve core (1) from valve before attempting any demounting operation. Check the valve stem by running a probe through it to make sure the valve stem is not plugged. Remove valve nut (2).
3. Inspect all parts for damage; replace parts as necessary.

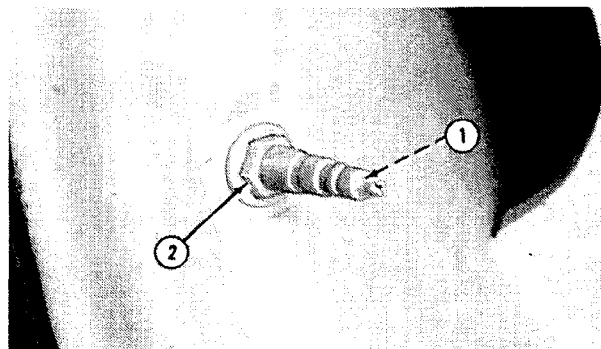

46A:T80633 T30:0110 07 210481

INSTALL TIRE

CAUTION: Failure to follow proper procedures when mounting a tire on a wheel or rim, can produce an explosion which may result in serious bodily injury. DO NOT attempt to mount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by a qualified tire repair service.


NOTE: See the John Deere Off-The-Road Tire Maintenance Manual to mount the tire on the wheel.

T30:0110 09 210401

1. Make sure all parts are clean and free from rust or grease before assembly.
2. To prevent slipping of the wheel under load, the inside and outside of wheel (1) must be free of paint, rust, oil, grease, dirt or other foreign material before installation.
3. Install valve stem (2) in rim base and tighten valve core housing finger tight.

CAUTION: Serious bodily injury can occur from explosion when mounting and inflating tires if safe procedures are not followed.


4. Before mounting tire on rim, add soap lubricant to beads of the tire (3).

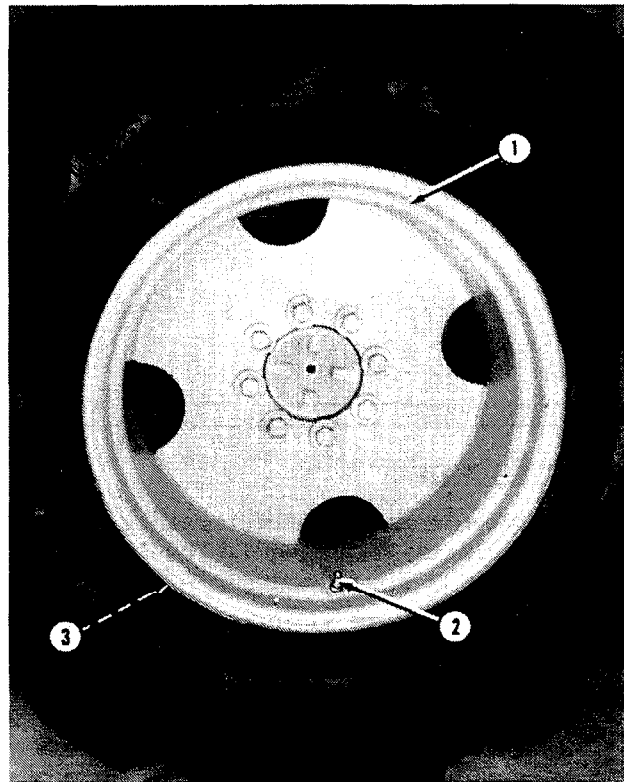

46A780634 T30:0110 09 210401

Powered Wheels and Fastenings

5. Clear the area of all persons.
6. Use a pressure regulating valve (1) with clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of the tire while inflating.
7. Use only recommended air pressure. Pressure over this limit can cause an explosion.
8. Add air until side flange of tire slides out against the rim.

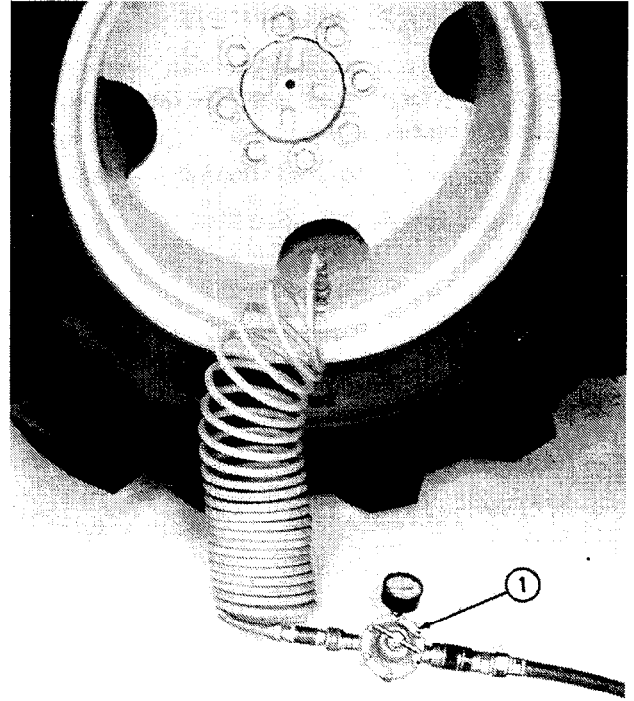

46A/T80635 T30;0110 10 210481


Tire Size	Type	Ply Rating	Operating Pressure
16.9-24	R-4	8	(190 ± 20 kPa)(1.9 ± 0.2 bar) 28 ± 3 psi
19.5L-24	R-4	8	(170 ± 10 kPa)(1.6 ± 0.1 bar) 24 ± 2 psi

9. Check air pressure in both drive tires with an accurate gauge having (10 kPa) (0.01 bar) or 1 psi graduations. Be sure that tire pressures are equal for both drive tires.

T30;0110 11 210481

INSTALL WHEEL ASSEMBLY

1. Thoroughly clean the cap screws, washers, and the tapped holes in the flanged axle. Use compressed air to dry all parts and tapped holes.
2. Install the wheel using a D-05019ST Wheel Lift (1).
3. Install cap screws (2).

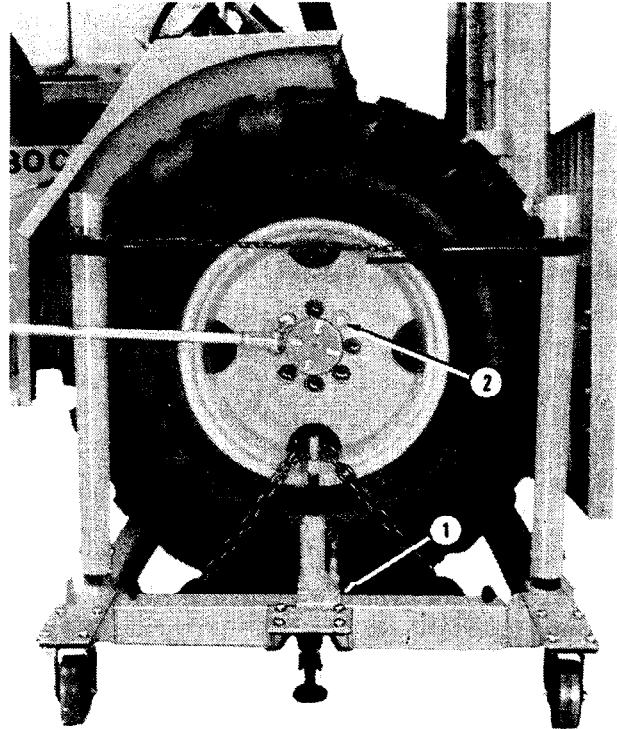


46A/T80632 T30;0110 12 210481

4. Tighten cap screws to (285 N·m) 210 lb-ft.
5. Lower the forklift to the ground.

IMPORTANT: If a power wrench is used, be sure that the cap screws are engaged to prevent stripping. Operate the wrench slowly to prevent thread damage.

6. Cross tighten the cap screws to (576 N·m) 425 lb-ft.

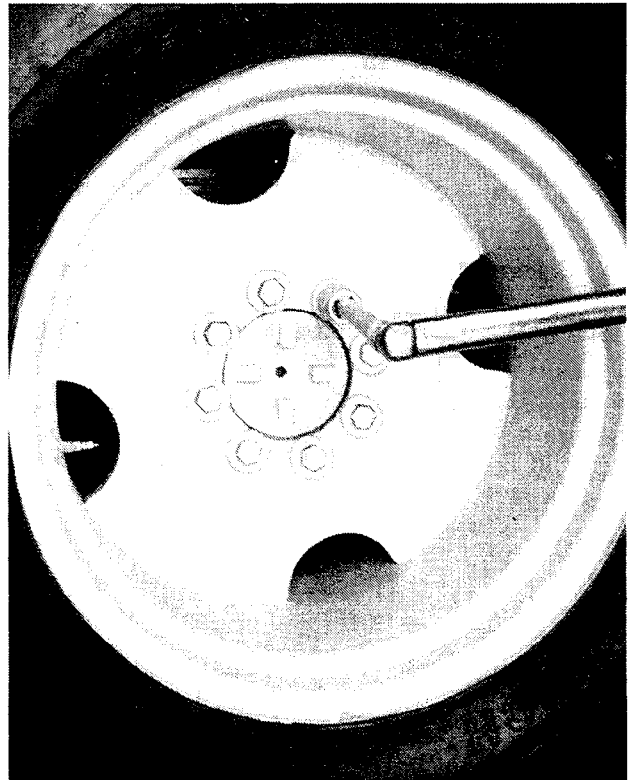

46A/T80636 T30;0110 13 210481

Group 0120

NON-POWERED WHEELS AND FASTENINGS

SPECIAL TOOLS


NOTE: Order tools from your SERVICE-GARD™ Catalog, unless otherwise indicated.

Number	Name	Use
D-01182AA	Shop Stand	Support the unit while removing wheels.

T30:0120 01 210481

WHEEL SPECIFICATION

1. Cap screws torque .. (136 ± 14 N·m) 100 ± 10 lb-ft

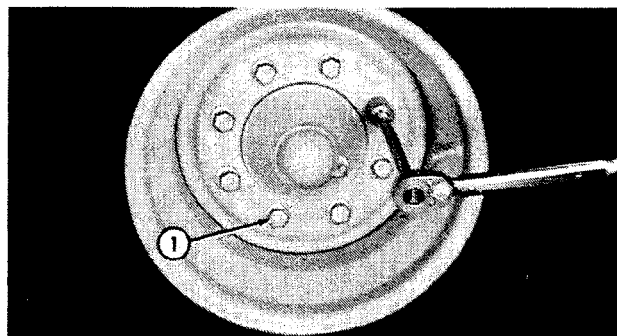


46A:T80637 T30:0120 02 210481

REMOVE WHEEL ASSEMBLY


⚠ CAUTION: A front forklift wheel weighs approximately (27 kg) 60 lbs.

1. Loosen cap screws before lifting the wheel off the ground.

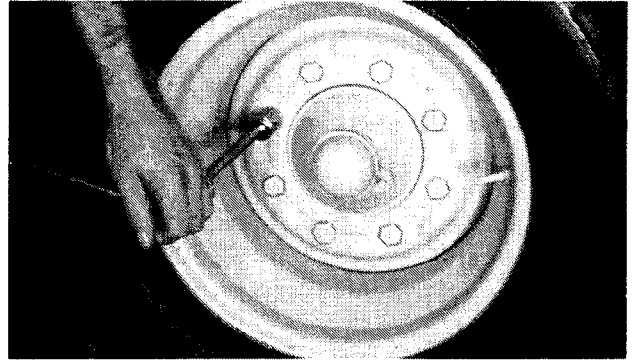

46A:T80638 T30:0120 03 210481

2. Lift the wheel off the ground using a service jack or hoist of at least (907 kg) 2-ton capacity.
3. Put a shop stand such as D-01182AA under the axle.

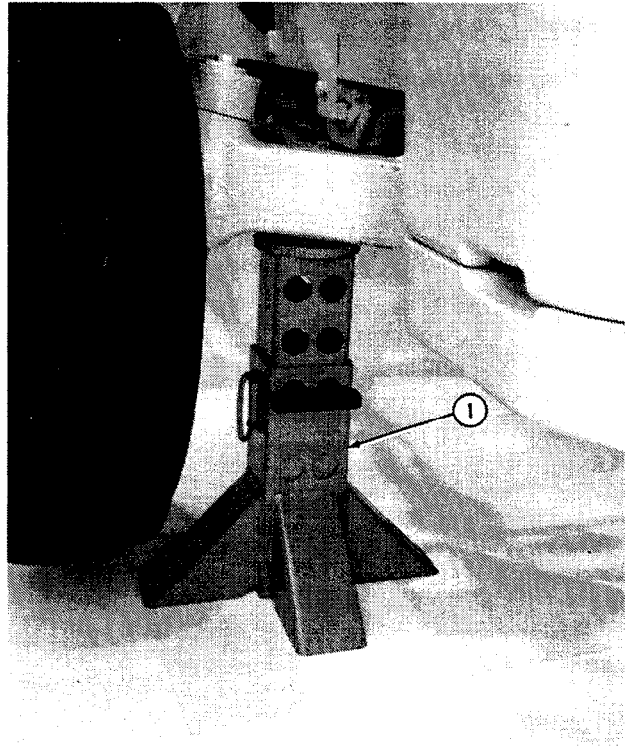

46A:T80639 T30:0120 04 210481

4. Remove the cap screws. Pull wheel assembly away from wheel hub.
5. Inspect all parts for damage; replace parts as necessary.



46A:T80640 T30:0120 05 210481


REMOVE TIRE

1. The tire can be removed without removing the wheel from the forklift. See the John Deere Off-The-Road Tire Maintenance Manual to remove the tire from the wheel.

CAUTION: Failure to follow proper procedures when demounting a tire from a wheel or rim can produce an explosion which may result in serious bodily injury. DO NOT attempt to demount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by a qualified tire repair service.

T30:0120 06 210481

2. Always completely deflate the tire by removing the valve core (1) from valve before attempting any demounting operation. Check the valve stem by running a probe through it to make sure the valve stem is not plugged. Remove valve nut (2).
3. Inspect all parts for damage; replace parts as necessary.

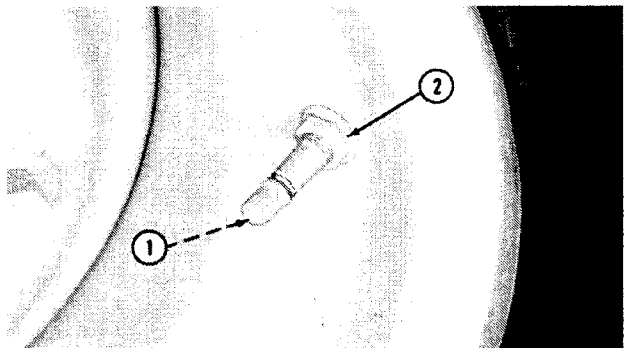

46A:T80641 T30:0120 07 210481

INSTALL TIRE

⚠ CAUTION: Failure to follow proper procedures when mounting a tire on a wheel or rim, can produce an explosion which may result in serious bodily injury. **DO NOT** attempt to mount a tire unless you have the proper equipment and experience to perform the job safely. Have it done by a qualified tire repair service.

NOTE: See the John Deere Off-The-Road Tire Maintenance Manual to mount the tire on the wheel.

1. Make sure all parts are clean and free from rust or grease before assembly.


T30:0120 08 210461

2. To prevent slipping of the wheel under load, the inside and outside of wheel (1) must be free of paint, rust, oil, grease, dirt or other foreign material before installation.

3. Install valve stem (2) in rim base and tighten valve core housing finger tight.

⚠ CAUTION: Serious bodily injury can occur from explosion when mounting and inflating tires if safe procedures are not followed.


4. Before mounting tire on rim, add soap lubricant to beads of the tire (3).

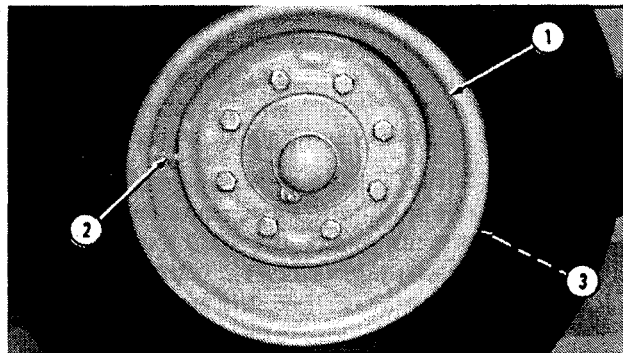

46A:T60642 T30:0120 09 210481

Non-Powered Wheels and Fastenings

5. Clear the area of all persons.
6. Use a pressure regulating valve (1) with clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of the tire while inflating.
7. Use only recommended air pressure. Pressure over this limit can cause an explosion.
8. Add air until side flange of tire slides out against the rim.

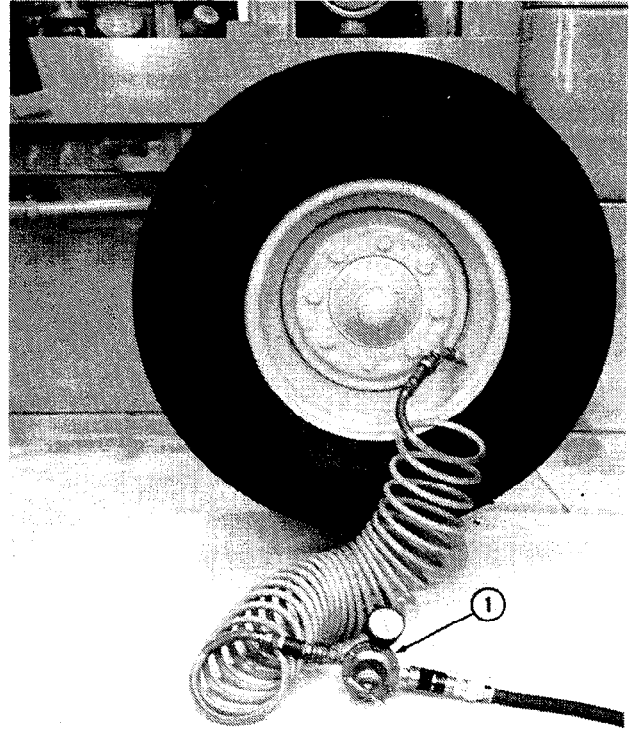

46A:T80667 T30:0120 10 210481

Tire Size	Type	Ply Rating	Operating Pressure
7.50-16	F-3	10	(410 ± 40 kPa)(4.1 ± 0.4 bar) 60 ± 6 psi
11L-15	F-3	8	(300 ± 30 kPa)(3 ± 0.2 bar) 44 ± 4 psi

9. Check air pressure in both front tires with an accurate gauge having (10 kPa) (0.01 bar) or 1 psi graduations. Be sure that tire pressures are equal for both tires.

T30:0120 11 210481

INSTALL WHEEL ASSEMBLY

1. Thoroughly clean the cap screws and the tapped holes in the wheel hub. Use compressed air to dry all parts and tapped holes.
2. Install the wheel.




46A:T80640 T30:0120 12 210481

3. Install and tighten cap screws to (68 ± 7 N·m) 50 ± 5 lb-ft.
4. Lower the forklift to the ground.

IMPORTANT: If a power wrench is used, be sure that the cap screws are engaged to prevent stripping. Operate the wrench slowly to prevent thread damage.

5. Cross tighten the cap screws to (136 ± 14 N·m) 100 ± 10 lb-ft.

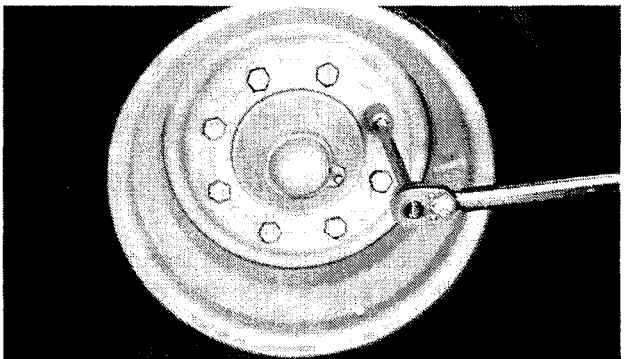

46A:T80668 T30:0120 13 210481

Section 02

AXLES AND SUSPENSION SYSTEMS

CONTENTS

GROUP 0230 - NON-POWERED WHEEL AXLES

Special Tools	0230-01
Spindle and Knuckle Specifications	0230-01
Wheel Hub Specification	0230-01
Toe-In Specification	0230-02
Tie Rod Specifications	0230-02
Non-Powered Axle Specifications	0230-02
Remove Hub Assembly	0230-03
Disassemble Hub	0230-04
Remove Spindle and Knuckle Assembly	0230-05
Install Spindle and Knuckle Assembly	0230-06
Adjust for Spindle and Knuckle Endplay	0230-07
Assemble Hub	0230-08
Install Hub Assembly	0230-08
Adjust Wheel Hub Assembly	0230-09
Remove Tie Rod	0230-10
Install Tie Rod	0230-12
Adjust Toe-In	0230-13
Remove Non-Powered Axle Assembly	0230-15
Disassemble Non-Powered Axle Assembly	0230-18
Assemble Non-Powered Axle Assembly	0230-19
Install Non-Powered Axle Assembly	0230-21

GROUP 0250 - AXLE SHAFT, BEARINGS AND REDUCTION GEARS

Special Tools	0250-01
Axle Housing Specifications	0250-01
Axle Shaft Specifications	0250-02
Remove Axle Housing	0250-03
Remove Planet Pinion Carrier Assembly	0250-07
Disassemble Planet Pinion Carrier	0250-08
Assemble Planet Pinion Carrier	0250-09
Remove Axle Shaft	0250-10
Disassemble and Inspect Axle Shaft	0250-12
Assemble Axle Shaft	0250-13
Disassemble and Inspect Axle Housing	0250-14
Assemble Axle Housing	0250-15
Install and Adjust Axle Shaft	0250-16
Install Axle Housing	0250-19

SPECIAL TOOLS


NOTE: Order tools from your SERVICE-GARD™ Catalog, unless otherwise indicated.

Number	Name	Use
D-01045AA	Bushing, Bearing and Seal Driver Set	To install bushings, bearing cups and oil seal cup.
D-01047AA	17½ and 30-Ton Puller Set	To remove axle pivot pin.
D-24206WK	Shop Stand	Supports the unit.

T30:0230 72 180681


SPINDLE AND KNUCKLE SPECIFICATIONS

1. Cap screws torque(230 N·m)
170 lb-ft

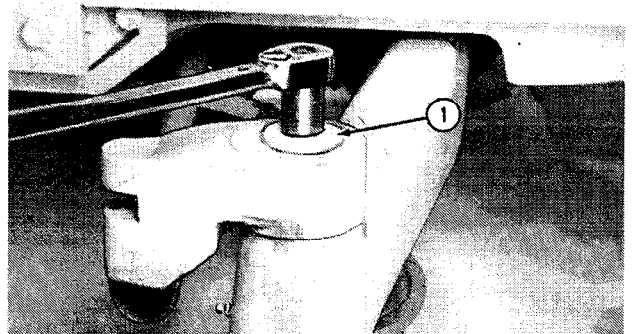

47A:T80769 T30:0230 73 180681


2. Install washers to get an end play of (0.13 to 0.14 mm)
0.005 to 0.045 in.

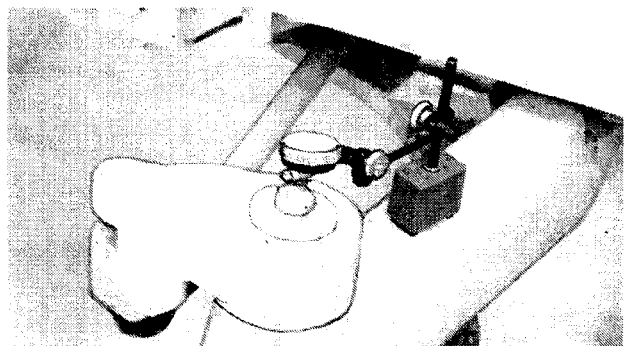

47A:T80770 T30:0230 74 180681

WHEEL HUB SPECIFICATION

1. Slotted nuts torque(47 N·m)
35 lb-ft

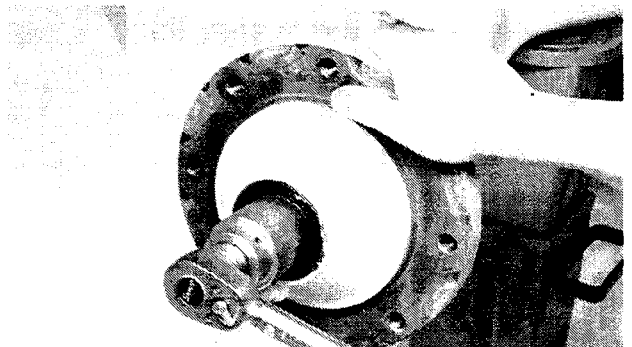


47A:T80772 T30:0230 75 180681

Non-Powered Wheel Axles

TOE-IN SPECIFICATION


- 1. The distance between the front marks must be $(6.5 \pm 3 \text{ mm})$ $0.25 \pm 0.12 \text{ in.}$ less than the distance between the rear marks.

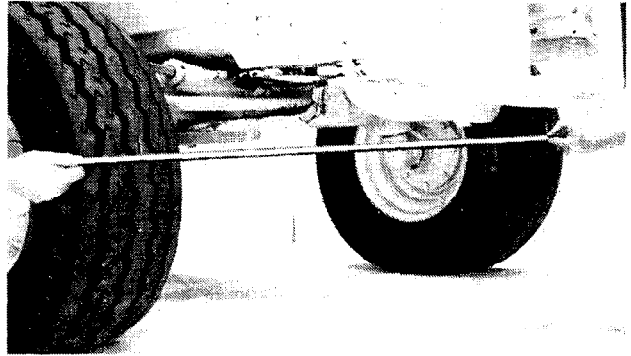

47A:T80811 T30:0230 78 180681


TIE ROD SPECIFICATIONS

- 1. Nuts torque(75 N·m)
55 lb-ft

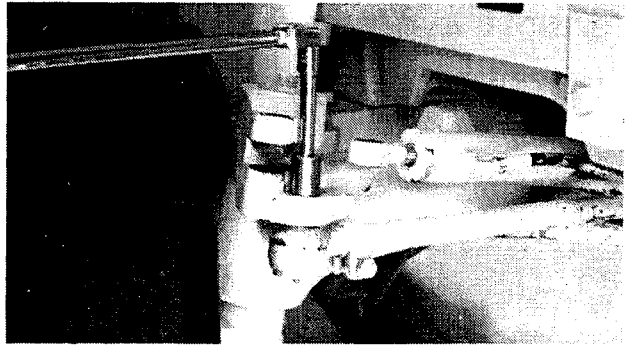

47A:T80808 T30:0230 76 180681


- 2. Cap screw torque (54 +7 -0 N·m)
40 +5 -0 lb-ft

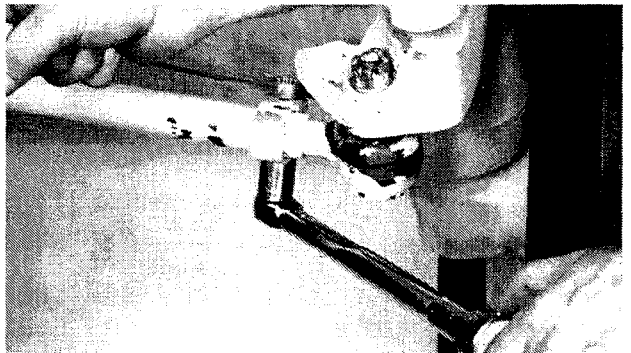

47A:T80933 T30:0230 77 180681

NON-POWERED AXLE SPECIFICATIONS

- 1. Cap screw and nut torque(298 N·m)
220 lb-ft
- 2. Install shims to get $(0.00 \text{ to } 0.38 \text{ mm})$ $0.000 \text{ to } 0.015 \text{ in.}$ of play.

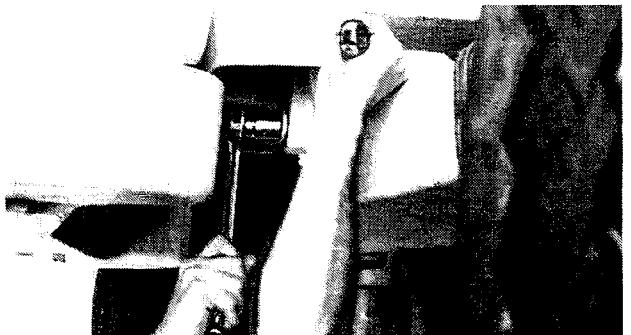

47A:T82056 T30:0230 79 180681

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com