

8RT Series Tractors (Serial No. 923001-) North American Edition H0



JOHN DEERE

OPERATOR'S MANUAL

8RT Series Tractors (Serial No.
923001-) North American Edition

OMRE597236 ISSUE H0 (ENGLISH)

CALIFORNIA

Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

WARNING

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.

Additional Proposition 65 Warnings can be found in this manual.

John Deere Waterloo Works

North American Edition
PRINTED IN U.S.A.

Introduction

Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine when you sell it.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE PRODUCT IDENTIFICATION NUMBERS (P.I. N.) in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for an agreed upon period, schedule an after-sale inspection with your John Deere dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its

particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.

REGISTER USED PRODUCTS. If you purchased used John Deere products from an authorized John Deere dealer, the warranty registration information was updated by the dealer and requires no further information on your part.

If you purchased any used John Deere product from an auction, through a trader or from a farmer, please register it now. John Deere and John Deere dealers value their customer's safety and satisfaction. Your local John Deere dealer is best equipped and anxious to provide you superior levels of support for your machine. Please enter your product details and your address online, using the John Deere website corresponding to your country. Then select the dealer of your choice.

RW29387,00000CC-19-22JUL19

Emissions Performance and Tampering

Operation and Maintenance

The engine, including the emissions control system, shall be operated, used, and maintained in accordance with the instructions provided in this manual to maintain the emissions performance of the engine within the requirements applicable to the engine's category/certification.

Tampering

No deliberate tampering with or misuse of the engine emissions control system shall take place; in particular with regard to deactivating or not maintaining an exhaust gas recirculation (EGR) or a DEF dosing system. Tampering with an engine's emissions control system will void the European Union (EU) type approval and applicable emissions-related warranties.

DX,EMISSIONS,PERFORM-19-12JAN18

Trademarks

Trademarks	
AccuDepth™	Trademark of Deere and Company
ActiveCommand Steering (ACS™)	Trademark of Deere and Company
ActiveSeat™	Trademark of Deere and Company
AirCushion™	Trademark of Deere and Company
AMBLYGON™	Trademark of Kluber Lubrication
AMPSEAL 16™	Trademark of Tyco Electronics
Apex™	Trademark of Delphi International

Introduction

Trademarks	
Apple CarPlay®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
AutoLoad™	Trademark of Deere and Company
AutoPowr™	Trademark of Deere and Company
AutoQuad™	Trademark of Deere and Company
AutoTrac™	Trademark of Deere and Company
Avdel™	Trademark of Avdel UK Limited
Bio Hy-Gard™	Trademark of Deere and Company
Bluetooth®	Trademark of Bluetooth SIG
Break-In™	Trademark of Deere and Company
CINCH™	Trademark of Cinch Inc.
ClimaTrak™	Trademark of Deere and Company
ComfortCommand™	Trademark of Deere and Company
ComfortGard™	Trademark of Deere and Company
CommandARM™	Trademark of Deere and Company
CommandCenter™	Trademark of Deere and Company
CommandPRO™	Trademark of Deere and Company
CommandView™	Trademark of Deere and Company
Cool-Gard™	Trademark of Deere and Company
CoolScan™	Trademark of Deere and Company
CPC™	Trademark of AMP Incorporated
Cummins®	Trademark of Cummins Inc.
DEUTSCH™	Trademark of Deutsch Company
DURABUILT™	Trademark of Camoplast Inc.
e18™	Trademark of Deere and Company
e23™	Trademark of Deere and Company
Efficiency Manager™	Trademark of Deere and Company
FieldCruise™	Trademark of Deere and Company
Field Doc™	Trademark of Deere and Company
GreenStar™	Trademark of Deere and Company
Hy-Gard™	Trademark of Deere and Company
HydraCushion™	Trademark of Deere and Company
ILS™ (Independent-Link Suspension)	Trademark of Deere and Company
iPhone®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iPod®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iPod Touch®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
iTEC™	Trademark of Deere and Company
IVT™	Trademark of Deere and Company
JDLink™	Trademark of Deere and Company
John Deere FarmSight™	Trademark of Deere and Company
Loctite™	Trademark of Henkel Corporation
MATE-N-LOC™	Trademark of AMP Incorporated
METRIMATE™	Trademark of AMP Incorporated
METRI-PACK™	Trademark of Delphi Packard Electric Systems
NEVER-SEEZ™	Trademark of Bostik-Findley Inc.
Oilscan™	Trademark of Deere and Company
PLUS-50™	Trademark of Deere and Company
PowerShift™	Trademark of Deere and Company
PowerTech™	Trademark of Deere and Company
PowerZero™	Trademark of Deere and Company
PowrQuad™	Trademark of Deere and Company

Introduction

Trademarks	
PowrQuad™ PLUS	Trademark of Deere and Company
QUICK METAL™	Trademark of Henkel Corporation
Quik-Tatch™	Trademark of Deere and Company
Service ADVISOR™	Trademark of Deere and Company
SERVICEGARD™	Trademark of Deere and Company
Siri®	iPhone and Siri are trademarks of Apple Inc., registered in the U.S. and other countries. Apple CarPlay is a trademark of Apple Inc.
SiriusXM™	Trademark of Sirius XM Radio Inc
StarFire™	Trademark of Deere and Company
STC™	Trademark of Aeroquip Corporation
StellarSupport™	Trademark of Deere and Company
SUMITOMO™	Trademark of Sumitomo Corporation
TEFLON™	Trademark of DuPont Co.
TLS™ (Triple-Link Suspension)	Trademark of Deere and Company
TouchSet™	Trademark of Deere and Company
Weather Pack™	Trademark of Packard Electric
YAZAKI™	Trademark of Yazaki Corporation

RX33672,0000DEE-19-09JAN20

Contents

	Page		Page
Glossary		Service Front-Wheel Drive Tractor Safely	05-17
Glossary of Terms	00-1	Tightening Wheel Retaining Bolts/Nuts	05-17
Safety		Avoid High-Pressure Fluids	05-18
Recognize Safety Information	05-1	Do Not Open High-Pressure Fuel System	05-18
Understand Signal Words	05-1	Store Attachments Safely	05-18
Follow Safety Instructions	05-1	Decommissioning — Proper Recycling and	
Prepare for Emergencies	05-1	Disposal of Fluids and Components	05-18
Wear Protective Clothing	05-2	Safety Signs	
Protect Against Noise	05-2	Operator's Manual	05A-1
Handle Fuel Safely—Avoid Fires	05-2	Transport, ROPS, and Seat Belt	05A-1
Handle Starting Fluid Safely	05-2	Instructional Seat (If Equipped)	05A-2
Fire Prevention	05-3	Track Accumulators	05A-2
In Case of Fire	05-3	Trash Build-Up	05A-2
Avoid Static Electricity Risk When Refueling	05-4	Engine Block Heater (If Equipped)	05A-3
Keep ROPS Installed Properly	05-4	Quick-Hitch (If Equipped)	05A-3
Use Foldable ROPS and Seat Belt Properly	05-4	Rear PTO Shield (If Equipped)	05A-3
Stay Clear of Rotating Drivelines	05-5	Vehicle Overview	
Use Steps and Handholds Correctly	05-5	8RT Series Tractor	10-1
Read Operator's Manuals for ISOBUS		Engine Operation	
Controllers	05-6	Engine Settings—Access	20-1
Use Seat Belt Properly	05-6	Engine Settings	20-1
Operating the Tractor Safely	05-6	Engine Settings—Engine Power	20-3
Avoid Backover Accidents	05-7	Engine Settings—Engine Set Speed	20-4
Limited Use in Forestry Operation	05-7	Engine Settings—Max Engine Speed	20-4
Operating the Loader Tractor Safely	05-8	Engine Settings—Exhaust Filter System	
Keep Riders Off Machine	05-8	Overview	20-5
Instructional Seat	05-8	Engine Settings—AUTO Exhaust Filter	
Use Safety Lights and Devices	05-9	Cleaning	20-6
Use a Safety Chain	05-9	Engine Settings—Disable AUTO Exhaust	
Transport Towed Equipment at Safe Speeds	05-9	Filter Cleaning	20-7
Use Caution on Slopes, Uneven Terrain, and		Engine Settings—Parked Filter Cleaning	20-7
Rough Ground	05-10	Required Machine Stop Warning	20-9
Freeing a Mired Machine	05-10	Engine Fuel System and Power Rating	20-9
Avoid Contact with Agricultural Chemicals	05-11	Battery Disconnect Switch	20-10
Handle Agricultural Chemicals Safely	05-11	Start the Engine	20-10
Handling Batteries Safely	05-12	Run the Engine	20-11
Avoid Heating Near Pressurized Fluid Lines	05-13	Stop the Engine	20-11
Remove Paint Before Welding or Heating	05-13	Restart Engine That Has Run Out of Fuel	20-12
Handle Electronic Components and Brackets		Reduce Fuel Consumption	20-12
Safely	05-13	Battery Booster or Charger	20-12
Practice Safe Maintenance	05-14	Cold Weather Operation	
Avoid Hot Exhaust	05-14	Cold Weather Starting—Without Starting Aid	20A-1
Clean Exhaust Filter Safely	05-14	Cold Weather Starting—With Starting Aid	20A-1
Work In Ventilated Area	05-15	Change Starting Fluid Canister	20A-1
Support Machine Properly	05-15	Auxiliary Heaters Use	20A-2
Prevent Machine Runaway	05-16		
Park Machine Safely	05-16		
Transport Tractor Safely	05-16		
Service Cooling System Safely	05-16		
Service Accumulator Systems Safely	05-17		
Service Tires Safely	05-17		

Continued on next page

Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.

	Page		Page
Emissions Equipment		Manage Paired Bluetooth® Devices	30D-3
Aftertreatment Indicators Overview	20B-1	Phone Operation	30D-4
Selective Catalytic Reduction (SCR) System		Contact List	30D-5
Overview	20B-3	Recent Calls	30D-6
Diesel Particulate Filter (DPF) Service	20B-4	Clear Favorites and Call History	30D-6
Front Console		Intelligent Total Equipment Control (iTEC™)	
Front Console	30-1	CommandARM™ Control Functions	40-1
Adjust Steering Wheel and Column	30-1	CommandCenter™ Pages Descriptions and Functions	40-1
Operate Horn	30-1	Status Area	40-2
Operate Wipers and Washers	30-1	All Sequence Page	40-2
Key Switch	30-2	Add New Sequence	40-2
Operate Turn Signals	30-2	Sequence Step Status	40-3
Pedals	30-2	Edit or Remove Sequence	40-3
Operate Lights	30-3	Sequence Sets Page	40-4
Corner Post Display		Perform Sequence	40-5
Corner Post Display	30A-1	Recommendations (AutoLearn)	40-5
CommandARM™ Controls		iTEC Functions—IVT™/AutoPowr™	
CommandARM™	30B-1	Transmission	40-6
CommandARM™ Hitch Controls	30B-1	iTEC™ Functions—Efficiency Manager™	40-6
CommandARM™ SCV Control Levers	30B-2	Tractor-Implement Automation (TIA)	
CommandARM™ PTO Control Levers	30B-2	Tractor-Implement Automation (TIA)	40A-1
CommandARM™ Climate, Radio, and Lighting Controls	30B-2	Activate Tractor-Implement Automation (TIA) Equipment	40A-1
Push-To-Talk (PTT)	30B-4	Tractor-Implement Automation (TIA) — Status Page	40A-2
CommandARM™ Controls—Left Side	30B-4	Operate Tractor-Implement Automation (TIA)	40A-2
CommandARM™ Joystick	30B-6	PTO Requirements	40A-2
CommandARM™ Navigation Bar	30B-6	SCV Requirements	40A-3
Adjust CommandARM™ Position	30B-8	IVT™/AutoPowr™ Requirements	40A-3
CommandCenter™		IVT™/AutoPowr™ with CommandPRO™	
Generation 4 Display	30C-1	Joystick Requirements	40A-4
Machine Settings Overview	30C-1	PowerShift™ Transmission Requirements	40A-5
Automation Status Overview	30C-3	AutoTrac™ Guidance Requirements	40A-5
Navigate Generation 4 CommandCenter™	30C-3	Rear Hitch Requirements	40A-5
Compatible Displays	30C-4	Drive Strategy Requirements	40A-6
Power Display On and Off	30C-4	Drivetrain	
Change Pages and Values	30C-4	Drivetrain Overview	50-1
Factory and Service ADVISOR™ Installed		Brakes	
Onscreen Help	30C-5	Trailer Brake System Settings—Access	50A-1
Radar Calibration	30C-5	Trailer Brake System Settings	50A-1
Slip Calibration	30C-5	Trailer Brake System Settings—Brake Gain	50A-2
Steering Settings—Access	30C-6	Trailer Brake System Settings—Pre-Brake Offset	50A-2
Steering Settings	30C-6	Trailer Brake System Settings—Trailer Brake Test	50A-3
Steering Settings—Manual Steering Sensitivity	30C-7	Trailer Brake System Settings—Advanced	50A-3
Steering Settings—Advanced	30C-7	Brake Use	50A-3
Controls Setup	30C-7	AutoClutch	50A-4
Automation Status	30C-8	Hydraulic Trailer Brakes	50A-5
Install Video Display Camera	30C-8	Transmission - General Information	
CommandCenter™ Audio and Phone		Transmission Settings—Access Advanced	50B-1
External Sources	30D-1	Transmission Settings—Advanced	50B-1
Select Audio Source with Generation 4 CommandCenter™	30D-1	Warm-Up Transmission-Hydraulic System	50B-3
AM, FM, Weather Channel Home Page	30D-1	Backup Alarm	50B-4
USB Home Page	30D-2	e23™ Transmission	
Bluetooth® Home Page	30D-2	Operate Transmission—e23™	50D-1
Auxiliary Home Page	30D-2		
Pair Bluetooth® Device to Generation 4 CommandCenter™	30D-3		

	Page		Page
Shift Transmission—e23™	50D-2	PTO Settings	60A-1
e23™ Set Speeds and Efficiency Manager™	50D-4	PTO Settings—Advanced	60A-2
e23™ Transmission Settings—Access	50D-5	PTO Settings—Engagement Rate	60A-2
e23™ Transmission Settings	50D-5	PTO Settings—Rear PTO Cruise	60A-3
e23™ Transmission Settings—Mode	50D-7	PTO Settings—Auto Disengage	60A-3
e23™ Transmission Settings—Custom	50D-7	Operate PTOs	60A-4
e23™ Transmission Settings—Droop	50D-7	External PTO Switches	60A-4
e23™ Transmission Settings—ECO	50D-8	Select Correct Engine Speed	60A-5
e23™ Transmission Settings—Max Speeds	50D-8		
IVT™/AutoPowr™ Transmission		Rear PTO	
Operate Transmission—IVT™	50E-1	Rear PTO Shield	60C-1
Shift Transmission—IVT™	50E-2		
IVT™ Set Speeds	50E-5	Rear Hitch	
IVT™ Transmission Settings—Access	50E-6	Hitch Lift Capacities	60E-1
IVT™ Transmission Settings	50E-6	Rear Hitch Settings—Access	60E-1
IVT™ Transmission Settings—Mode	50E-8	Rear Hitch Settings	60E-1
IVT™ Transmission Settings—Pedal Mode	50E-8	Rear Hitch Settings—Upper Limit	60E-3
IVT™ Transmission Settings—Custom	50E-8	Rear Hitch Settings—Drop Rate	60E-3
IVT™ Transmission Settings—Droop	50E-9	Rear Hitch Settings—Raise Rate	60E-3
IVT™ Transmission Settings—ECO	50E-9	Rear Hitch Settings—Load Depth	60E-4
IVT™ Transmission Settings—Max Speeds	50E-10	Rear Hitch Settings—Slip Sensitivity	60E-4
		Rear Hitch Settings—Position	60E-5
IVT™/AutoPowr™ Transmission with		Rear Hitch Settings—Advanced	60E-6
CommandPRO™ Joystick		Rear Hitch Settings—Position Control	60E-6
Operate Transmission—IVT™ with		Rear Hitch Settings—Draft Control	60E-6
CommandPRO™ Joystick	50F-1	Hitch Control Lever Adjustments	60E-7
Shift Transmission—IVT™ with		Hitch Depth Set Point	60E-8
CommandPRO™ Joystick	50F-1	Float Operation	60E-8
CommandPRO™ Joystick	50F-2	Hitch Components	60E-8
CommandPRO™ Joystick—Acceleration/ Deceleration Response	50F-4	Rear Hitch Remote Switches	60E-9
CommandPRO™ Joystick—Enable Set Speeds	50F-4	Draft Link Storage Position	60E-9
CommandPRO™ Joystick—Adjust Travel Direction	50F-5	Hitch Manual Lowering	60E-9
CommandPRO™ Joystick—Stopping	50F-5	Correct Center Link Position	60E-10
CommandPRO™ Joystick—Operating on Hillsides	50F-6	Using Sway Blocks	60E-10
CommandPRO™ Transmission Settings— Access	50F-6	Attach Implement to Quick-Hitch	60E-10
CommandPRO™ Transmission Settings	50F-6	Adjusting Implement Level	60E-11
CommandPRO™ Transmission Settings— Mode	50F-8	Adjust Lateral Float	60E-12
CommandPRO™ Transmission Settings— Custom	50F-8	Detaching Implement from Quick-Hitch	60E-12
CommandPRO™ Transmission Settings— Droop	50F-9	Converting Category 4N/3 Convertible Quick-Hitch Lower Hooks	60E-13
CommandPRO™ Transmission Settings— Minimum Engine Speed	50F-9	Converting Category 4N/3 Convertible Quick-Hitch Upper Hook	60E-13
CommandPRO™ Transmission Settings— Set Speeds	50F-10		
CommandPRO™ Transmission Settings— Shuttle Shift Speeds	50F-10	Drawbar	
CommandPRO™ Transmission Settings— Speed Limits	50F-11	Drawbar Load Limitations	60F-1
		Scraper Applications	60F-1
PTO, Hitch, and Drawbar		Calculate Static Vertical Drawbar Load	60F-2
Attaching PTO-Driven Implement	60-1	Calculate Vertical Drawbar Load Distance Behind Rear Axle	60F-2
PTO, Hitch, and SCV Remote Switches	60-1	Adjust Drawbar Length, Height, and Side-to- Side	60F-2
Implement Guidelines	60-2		
PTO - General Information		Hydraulics - General Information	
PTO Settings—Access	60A-1	Hydraulic System Overview	70-1
		Selective Control Valves	
		SCV Settings—Access	70A-1
		SCV Settings	70A-1
		SCV Settings—Standard Mode	70A-3
		SCV Settings—Independent Mode	70A-3
		SCV Settings—Feature Mode	70A-4
		SCV Settings—Flow Adjustment	70A-4
		SCV Settings—Time Adjustment	70A-5

	Page		Page
SCV Settings—Advanced	70A-5	Mirrors	
SCV Settings—Activating Independent Mode ..	70A-6	Adjust Mirrors	90A-1
SCV Settings—Automation	70A-6		
SCV Settings—Assignment	70A-6	Lights	
SCV Settings—Flow Adjustment Sensitivity	70A-7	Light Identification	90C-1
SCV Control Lever Adjustments	70A-7	Lights Settings—Access	90C-1
Total SCV Flow	70A-8	Lights Settings	90C-2
Operate SCVs with CommandARM™		Lights Settings—Field Lights Presets	90C-3
Joystick	70A-9	Lights Settings—Hood/Belt Line Lights	90C-3
CommandARM™ Joystick—Layout and		Lights Settings—Advanced	90C-3
Joystick Lever Functions	70A-10	Hazard and Extremity Lights	90C-4
		Beacon Light	90C-4
		7-Pin Outlet	90C-4
Hydraulic Connections			
Connect/Disconnect Hydraulic Hoses	70B-1	Accessories	
Component Identification and Location	70B-2	Right-Hand Side Console	90D-1
Using Load-Sensing Hydraulic System—		CommandARM™ Storage	90D-1
Power-Beyond	70B-2	Right-Hand Front Corner Post	90D-2
Examples Using Load-Sensing Hydraulic		Left-Hand Rear Corner Post	90D-2
System—Power-Beyond	70B-3	Right-Hand Rear Corner Post	90D-3
Using Hydraulic Spray Pumps	70B-4	Refrigerator and Cool/Storage Box	90D-3
Using Hydraulic Motor Return	70B-5	Sunshade	90D-4
Using Hydraulic Motor Case Drain	70B-5	Storage Compartments	90D-4
Implement Connection Example 1—		Monitor Bracket Mounts	90D-4
Pressure Control Valve Applications		Emergency Exit	90D-5
(Grain Drills or Air Seeders with Constant		Install Business Band/Citizens Band (CB)	
Down-Pressure System)	70B-6	Antenna and/or Radio	90D-6
Implement Connection Example 2—Motor		Mount StarFire™ Receiver	90D-7
Application Using Motor Case Drain	70B-7	Mount RTK (Real-Time Kinematic) Radio	90D-7
Implement Connection Example 3—Motor		Implement Connector	90D-8
Application Using SCV Retract and		RS232 Serial Communication Connection	90D-9
Auxiliary Motor Return	70B-8		
Implement Connection Example 4—Planter		HVAC	
with Vacuum Motor and Return Line to		HVAC Settings—Access	90E-1
SCV Using Motor Return Tip	70B-9	HVAC Settings	90E-1
Implement Connection Example 5—Planter		HVAC Settings—Climate Control Automation ..	90E-2
with Vacuum Motor, Return Line to Motor		HVAC Settings—Set Temperature	90E-2
Return and Lift Assist	70B-10	HVAC Settings—Air Flow Mode	90E-3
Implement Connection Example 6—Planter		HVAC Settings—Fan Speed	90E-3
with Vacuum Motor and Return Line to		HVAC Settings—Air Conditioning	90E-3
Motor Return	70B-11		
Using Implements Requiring Large Volumes		Performance Ballasting	
of Oil	70B-11	General Ballasting Information	100-1
		General Guidelines	100-1
TouchSet™ Depth Control		General Weight Split Guidelines	100-2
TouchSet™ Depth Control Settings and		Ballast Options	100-2
Adjustments	70C-1	Measure Slip	100-3
Connect/Disconnect the Implement Position		Quik-Tatch™ Weight Use	100-4
Connector	70C-1	Idler Weight Use	100-4
		Mounted Spray Tank Use	100-5
Laser Scraper Control		Calculate Tractor Ballast Package	100-6
Laser Scraper—Scrapers Equipped with		Unballasted Tractor Weight Chart	100-8
Scraper Control Unit	70D-1	Implement and Tractor Codes	100-8
Tracks - General Information		Transport	
General Track Use Guidelines	80-1	Driving Tractor on Roads	110-1
Tracks Service	80-1	Transporting	110-1
		Towing Loads	110-2
Seats		Tow Tractor	110-2
Adjust Air Seat	90-1	Tow Mode	110-3
Operator Presence Sensor	90-3	Come Home Mode	110-3
Adjust Instructional Seat	90-4	Emergency Brake Steering	110-4
		Carrier Transport	110-4

	Page		Page
Freeing a Mired Tractor	110-5	Identify Tractor Engine Emissions Status	210-1
Fuel, Lubricants, and Coolant - General Information		Open Hood	210-1
Determine Tractor Engine Type	200-1	Access Battery Compartment	210-1
Minimizing the Effect of Cold Weather on Diesel Engines	200-1	Remove Cab Rear Panel	210-2
Oil Filters	200-2	Jack Up the Tractor - Lifting Points and Support Stand Placement	210-3
Fuel		Service and Connect STC® (Snap-to-Connect) Fittings	210-4
Diesel Fuel	200A-1	High-Pressure Washer Use	210-5
Supplemental Diesel Fuel Additives	200A-1	Do Not Modify Fuel System	210-5
Biodiesel Fuel	200A-2	Bleed Fuel System	210-5
Lubricity of Diesel Fuel	200A-3	Identify Zinc-Flake Coated Fasteners	210-5
Handling and Storing Diesel Fuel	200A-3	Unified Inch Bolt and Screw Torque Values	210-6
Fill Fuel Tank	200A-3	Metric Bolt and Screw Torque Values	210-7
Testing Diesel Fuel	200A-4	Service - Break-In (100 Hours or Less)	
Fuel Filters	200A-4	Perform Break-In Services	210A-1
Diesel Exhaust Fluid (DEF)		Perform Track Systems Break-In	210A-1
Diesel Exhaust Fluid (DEF) — Use in Selective Catalytic Reduction (SCR) Equipped Engines	200B-1	Service - Record Charts	
Storing Diesel Exhaust Fluid (DEF)	200B-1	Service Record Chart Overview	210B-1
Refilling Diesel Exhaust Fluid (DEF) Tank	200B-2	Service Interval Chart	210B-1
Fill DEF Tank	200B-2	Service Record Chart	210B-2
Testing Diesel Exhaust Fluid (DEF)	200B-3	Service - Clean	
Disposal of Diesel Exhaust Fluid (DEF)	200B-3	Access DEF Tank Drain Plug	220A-1
Engine Oil		Cleaning Diesel Exhaust Fluid (DEF) Tank	220A-1
Diesel Engine Oil Service Interval for Operation at High Altitude	200C-1	Tractor Exterior	220A-1
John Deere Break-In Plus™ Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-1	Air Intake Valve	220A-2
Diesel Engine Oil — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V	200C-1	Clean Display	220A-2
Engine Oil and Filter Service Intervals — Interim Tier 4, Final Tier 4, Stage IIIB, Stage IV, and Stage V Engines	200C-2	Clean Seat	220A-2
Engine Coolant		Engine Cooling System	220A-3
Diesel Engine Coolant (engine with wet sleeve cylinder liners)	200D-1	Dual Beam Radar Sensor	220A-3
Operating in Warm Temperature Climates	200D-1	Suspension Compressor Filter, Compressor, and Air Bag	220A-4
Water Quality for Mixing with Coolant Concentrate	200D-2	Hydraulic Oil Suction Screen	220A-4
Testing Coolant Freeze Point	200D-2	Service - Check	
Disposing of Coolant	200D-3	Windshield Washer Fluid Level	220B-1
Other Lubricants		Engine Coolant Level	220B-1
Mixing of Lubricants	200E-1	Coolant Freeze Point	220B-1
Alternative and Synthetic Lubricants	200E-1	Water Separator	220B-2
Lubricant Storage	200E-1	Optional Fuel Water Separator (If Equipped)	220B-2
Transmission and Hydraulic Oil	200E-1	Engine and Exhaust Compartments	220B-2
Mid-Frame Roller Oil	200E-2	Air Conditioning System	220B-3
Gear Oil	200E-2	Engine Water Pump Weep Hole - Final Tier 4/Stage V Engine	220B-3
Multipurpose Extreme Pressure (EP) Grease	200E-2	Fuel Tank Sump	220B-4
Corn Head Grease	200E-3	Engine Oil Level	220B-4
Service - General Information		Transmission-Hydraulic Oil Level	220B-5
Service Sections Overview	210-1	Cab Suspension Components	220B-5
Service Tasks Performed As Required	210-1	Engine Air Intake System—Final Tier 4/Stage V Engine	220B-6
		Seat Belts	220B-7
		Auxiliary Drive Belt and Drive Belt Tensioner	220B-7
		Track Tension	220B-8
		Tread Settings	220B-10
		Track Adjustment	220B-10
		Align Track	220B-13
		Walking Beam Bumper Stops	220B-14
		Drive Wheel Hub Housing Oil Level	220B-15
		Mid-Rollers Oil Level	220B-15
		Idler Wheel Hub Oil Level	220B-15
		Mid-Rollers, Drive, and Idler Wheels	220B-15

Track Wear	220B-16
Trash Build-Up	220B-17
Walking Beam Air Suspension System	220B-17
Drive Wheel And Walking Beam Settings— Narrow Tread	220B-18
Drive Wheel And Walking Beam Settings— Standard and Wide Tread	220B-19
Engine Valve Clearance	220B-20
NEUTRAL Start System	220B-20
Transmission PARK System	220B-20

Service - Tighten

Drive Wheel, Drive Wheel Sleeve, Wedges, Idler, and Mid-Roller Cap Screws	220C-1
--	--------

Service - Change

Engine Oil and Filter	220D-1
Fuel Filters	220D-1
Optional Fuel Water Separator Filter Element (If Equipped)	220D-2
Cab Recirculation Air Filter	220D-3
Cab Fresh Air Filter	220D-4
Engine Primary and Secondary Air Filters	220D-4
Transmission-Hydraulic Oil and Filters	220D-5
Fuel Tank Vent Filter	220D-7
SCV Pilot Valve Filter	220D-7
Auxiliary Drive Belt	220D-7
Chain Drive Oil	220D-9
Walking Beam Bumper Stops	220D-9
Front Suspension Air Compressor Inlet Filter	220D-10
Steering Filter	220D-10
Differential Oil	220D-11
IVT™/AutoPowr™ and e23™ Transmissions— Hydraulic Oil	220D-11
DEF Tank Vent Filter	220D-12
Access In-Line DEF Filter	220D-13
Change Diesel Exhaust Fluid (DEF) In-Line Filter	220D-13
Access DEF Dosing Unit Filter	220D-15
Change Diesel Exhaust Fluid (DEF) Dosing Unit Filter	220D-16
Transmission Torsional Damper	220D-17
Engine Crankshaft Damper	220D-17
Engine Coolant	220D-17
Remove and Install Track	220D-20

Service - Lubricate

Rear Hitch	220E-1
Draft Link Support Shaft Bushing	220E-1
Track Tension Cylinders	220E-1

Service - Electrical

Service - Electrical Overview	220F-1
Welding Near Electronic Control Units	220F-1
Keep Electronic Control Unit Connectors Clean	220F-1
Compressed Air Use	220F-2
High-Pressure Washers Use	220F-2
Disconnect Battery	220F-2
Service Batteries and Connectors	220F-2
Access Load Center Fuses	220F-3
Access Front Load Center	220F-4
Access Master Fuses	220F-5

Access Implement Power Relay Module Fuses	220F-6
Handle Halogen Light Bulbs Safely	220F-7
Change Halogen Bulbs	220F-7
Change Front LED Headlight Assembly	220F-7
Aim Halogen Headlights	220F-9
Aim LED Headlights	220F-9
Aim Headlights	220F-9
Change Auxiliary Driving Light	220F-11
Change Wrap-Around Cab Light	220F-11
Change Cab Roof Light	220F-12
Change Rear Fender Light—Rear Indicator	220F-12
Change Extremity Light—Cab	220F-12
Change Cab Dome Light	220F-13

Troubleshooting - Procedures

Perform Troubleshooting Process	300A-1
Engine	300A-1
Transmission	300A-4
Hydraulic System	300A-5
Hitch	300A-6
Selective Control Valve (SCV)	300A-8
TouchSet Depth Control	300A-8
Electrical System	300A-9
Operator Enclosure	300A-11
Steering System	300A-12

Troubleshooting - Diagnostic Trouble Codes (DTC)

STOP, Service, and Information Alerts on CommandCenter™	300B-1
Access Diagnostic Trouble Codes	300B-1

Service - Storage

Place Tractor in Storage	400-1
Remove Tractor from Storage	400-1

Specifications

Engine	500A-1
Capacities	500A-1
Hydraulic System	500A-2
Transmission and Power Train	500A-2
Hitch, Drawbar, and PTO	500A-3
Electrical System	500A-3
Integrated Technology	500A-3
Overall Dimensions	500A-4
Ground Speeds—e23™ Transmission	500A-5
Ground Speeds—IVT™/AutoPowr™ Transmission	500A-6
Limited Battery Warranty	500A-6
Emissions Control System Certification Label	500A-7
EPA Non-road Emissions Control Warranty Statement—Compression Ignition	500A-8
CARB Non-road Emissions Control Warranty Statement—Compression Ignition	500A-9
Required Emission-Related Information	500A-17
Carbon Dioxide Emissions (CO ₂)	500A-18

Identification Numbers

Identification Plates	500B-1
Product Identification Number (PIN)	500B-1
Engine Serial Number	500B-1
Cab Serial Number	500B-2

	Page
Transmission Serial Number	500B-2
Track Serial Numbers	500B-2
Keep Proof of Ownership	500B-3
Keep Machines Secure	500B-3
Change of Ownership	
Subsequent Ownership	600A-1
Predelivery	
Predelivery Checklist	700-1
Delivery Checklist and Certificate	700-3

Glossary

Glossary of Terms

ITEM	ABBREVIATION	DESCRIPTION
Agriculture Tractor	[AG]	Tractor primary application
Scraper Tractor	[Scraper]	Tractor primary application
Air Conditioning	A/C	System used for conditioning the air in the cab
Automatic PowerShift™	APS	Transmission feature
Controller Area Network	CAN	A communication system linking on-board electronics
Cold Cranking Amperes	CCA	Refers to a battery's capability to perform during cold-weather operation
Chassis Control Unit	CCU	Computerized system for tractor monitoring
Diesel Exhaust Fluid	DEF	Abbreviation
Diesel Particulate Filter	DPF	Filter that prevents ash and soot from entering the atmosphere
Diagnostic Trouble Codes	DTC	Codes that inform the operator of stop, service, or information alerts
Economy Mode	ECO	Abbreviation
Engine Control Unit	ECU	Abbreviation
Engine Revolutions Per Minute	erpm	Abbreviation
Gallons per Minute	gpm	Fluid flow measured over a period of 1 minute
Global Positioning System	GPS	Abbreviation
Heavy Duty	HD	Abbreviation
High Intensity Discharge	HID	Type of Xenon working light used for front lighting
Heating Ventilating Air Conditioning	HVAC	Abbreviation
International Standards Organization	ISO	Abbreviation
Liters per Minute	L/min	Fluid flow measured over a period of 1 minute
Light Emitting Diode	LED	Abbreviation
Mechanical Front Wheel Drive	MFWD	Powered front axle which is driven mechanically from the transmission
Product Identification Number	PIN	Serial number relating to tractor identification
PowerShift™ Transmission	PST	Abbreviation
IVT™/AutoPowr™ Transmission Control Unit	PTI	Abbreviation
Power Take-Off	PTO	Abbreviation
PowerShift™ Transmission Control Unit	PTP	Computerized system used to control IVT transmission shift functions
Roll-Over Protective Structure	ROPS	Abbreviation
Right-Hand	RH	Abbreviation
Revolutions per Minute	rpm	Abbreviation
Society of Automotive Engineers	SAE	Engineering Standards Organization
Selective Control Valve	SCV	Device used to control remote hydraulic functions

RX32825,000179D-19-11NOV19

Safety

Recognize Safety Information



T81389—UN—28JUN13

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

DX,ALERT-19-29SEP98

Understand Signal Words



▲ WARNING

▲ CAUTION

TS187—19—30SEP88

DANGER; The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

WARNING; The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

CAUTION; The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL-19-05OCT16

Follow Safety Instructions



TS201—UN—15APR13

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.


Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ-19-16JUN09

Prepare for Emergencies

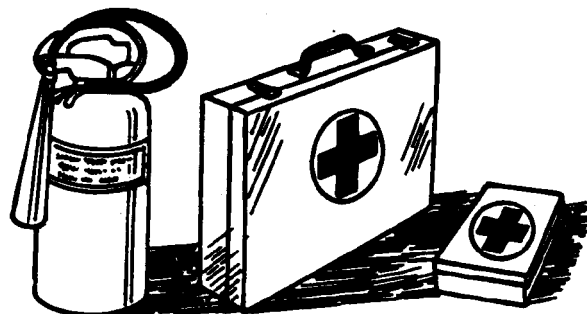

TS291—UN—15APR13


Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

DX,FIRE2-19-03MAR93

Wear Protective Clothing

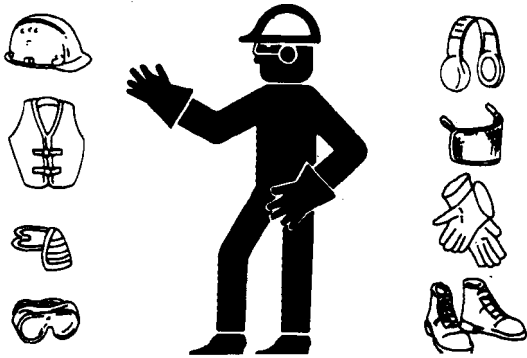


TS206—UN—15APR13

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

DX,WEAR2-19-03MAR93

Protect Against Noise

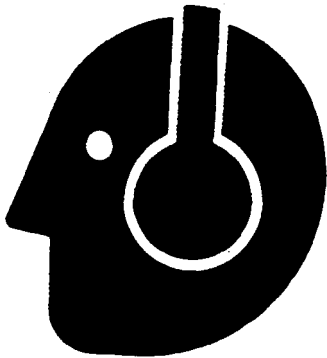

TS207—UN—23AUG88

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

Always wear hearing protection. Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.

DX,NOISE-19-03OCT17

Handle Fuel Safely—Avoid Fires



TS202—UN—23AUG88

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.

Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1-19-12OCT11

Handle Starting Fluid Safely



TS1356—UN—18MAR92

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.

DX,FIRE3-19-14MAR14

Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.
- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION-19-12OCT11

In Case of Fire



TS227—UN—15APR13

CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:


1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

DX,FIRE4-19-22AUG13

Avoid Static Electricity Risk When Refueling



RG22142—UN—17MAR14

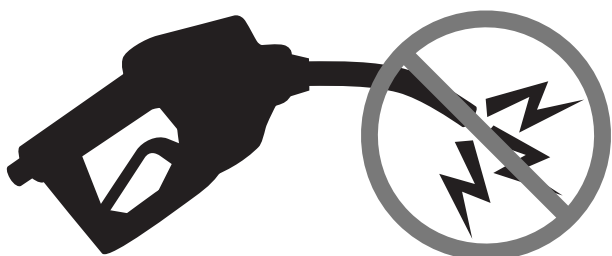

RG21992—UN—21AUG13

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.


Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

DX,FUEL,STATIC,ELEC-19-12JUL13

Keep ROPS Installed Properly

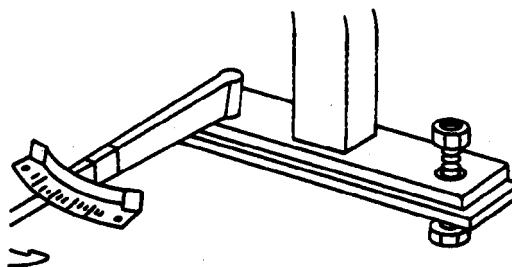

TS212—UN—23AUG88

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.


The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

DX,ROPS3-19-12OCT11

Use Foldable ROPS and Seat Belt Properly

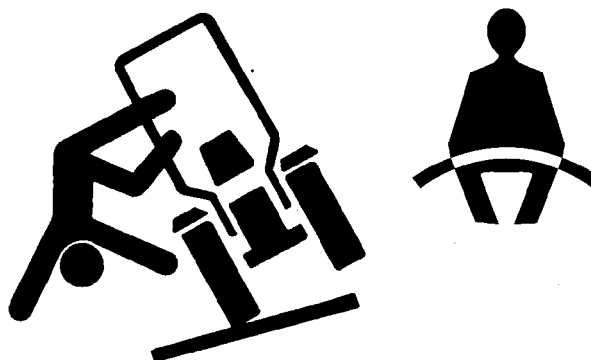

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
 - Hold the latch and pull the seat belt across the body.
 - Insert the latch into the buckle. Listen for a click.
 - Tug on the seat belt to make sure that the belt is securely fastened.


- Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. **DO NOT USE** a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

DX,FOLDROPS-19-22AUG13

Stay Clear of Rotating Drivelines



TS1644—UN—22AUG95

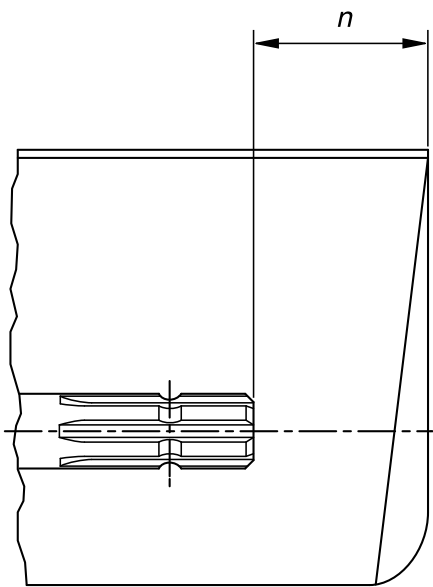

H96219—UN—29APR10

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making

adjustments, connections, or cleaning out PTO driven equipment.

Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.


Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/ Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO-19-28FEB17

Use Steps and Handholds Correctly

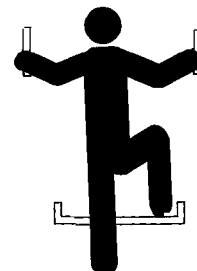

T133468—UN—15APR13

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease

or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

DX,WW,MOUNT-19-12OCT11


Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer. Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

NOTE: ISOBUS refers to the ISO Standard 11783

DX,WW,ISOBUS-19-15JUL15

Use Seat Belt Properly

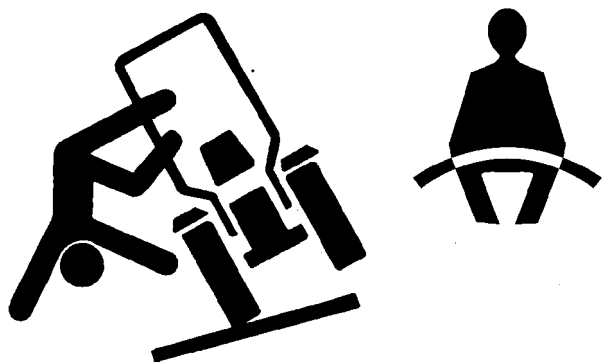

TS1729—UN—24MAY13

Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage,

such as cuts, fraying, extreme or unusual wear, discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.

DX,ROPS1-19-22AUG13

Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- Operators must be mentally and physically capable of accessing the operator's station and/or controls, and operating the machine properly and safely.
- Never operate machine when distracted, fatigued, or impaired. Proper machine operation requires the operator's full attention and awareness.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/ attachments, such as front loaders.
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pickup hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with a seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual

brakes, or operating around hazards on rough ground or steep slopes.

- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

Heated and Ventilated Operator's Seat

- An overheated seat heater can cause a burn injury or damage to the seat. To reduce the risk of burns, use caution when using the seat heater for extended periods of time, especially if the operator cannot feel temperature change or pain to the skin. Do not place objects on the seat, such as a blanket, cushion, cover, or similar item, which can cause the seat heater to overheat.

Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.
- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral, and securely engage park mechanism, including the park pawl and park brake. In addition, if the tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors are:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor

- Crushing and pinching during hitching

DX,WW,TRACTOR-19-08MAY19

Avoid Backover Accidents



PC10857XW—UN—15APR13

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.

DX,AVOID,BACKOVER,ACCIDENTS-19-30AUG10


Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY-19-12OCT11

Operating the Loader Tractor Safely

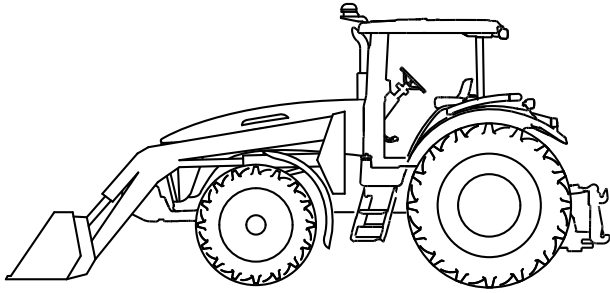

TS1692—UN—09NOV09

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.

Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.


Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and claspers).

Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER-19-18SEP12

Keep Riders Off Machine

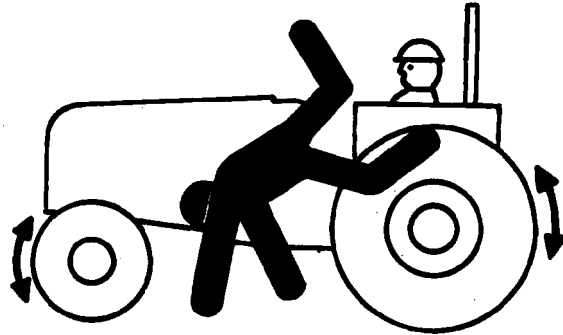

TS290—UN—23AUG88

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

DX,RIDER-19-03MAR93

Instructional Seat




TS1730—UN—24MAY13

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

DX,SEAT,NA-19-22AUG13

Use Safety Lights and Devices

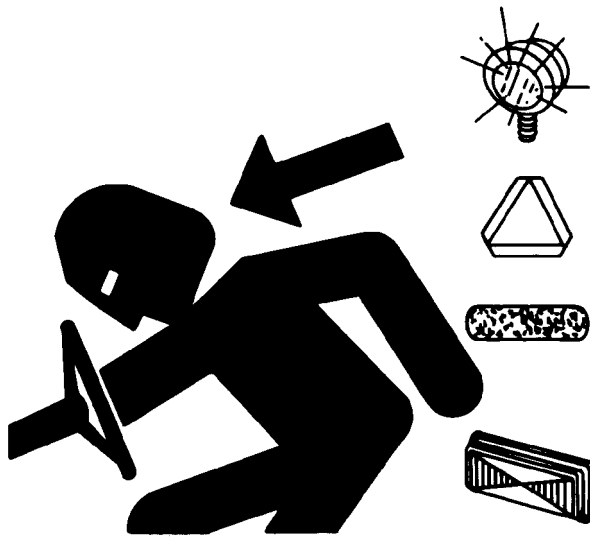


TS951—UN—12APR90

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

DX,FLASH-19-07JUL99

Use a Safety Chain

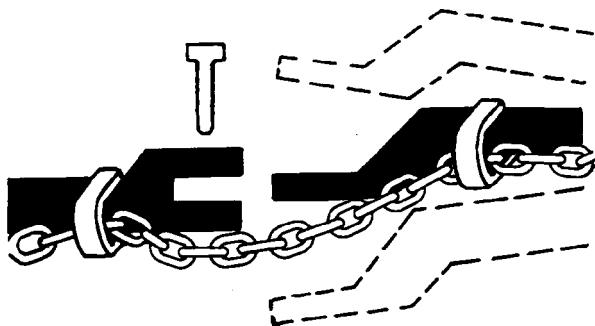

TS217—UN—23AUG88

A safety chain will help control drawn equipment should it accidentally separate from the drawbar.


Using the appropriate adapter parts, attach the chain to the tractor drawbar support or other specified anchor location. Provide only enough slack in the chain to permit turning.

See your John Deere dealer for a chain with a strength

rating equal to or greater than the gross weight of the towed machine. Do not use safety chain for towing.

DX,CHAIN-19-03MAR93

Transport Towed Equipment at Safe Speeds

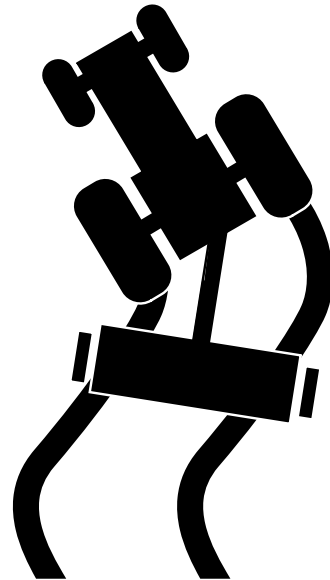

TS1686—UN—27SEP06

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components

Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.

Implements without brakes: Do not transport at speeds greater than 32 km/h (20 mph).


Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.
- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX,TOW1-19-28FEB17

Use Caution on Slopes, Uneven Terrain, and Rough Ground

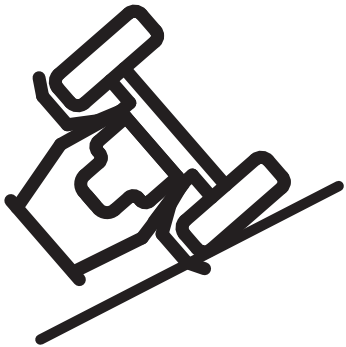

RXA0103437—UN—01JUL09

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.

Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in


Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE-19-28FEB17

Freeing a Mired Machine

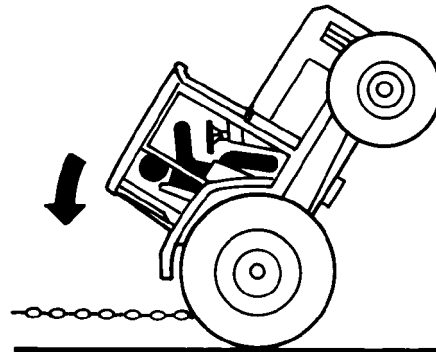

TS1645—UN—15SEP95



TS263—UN—23AUG88

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.


If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not


hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

DX,MIRE-19-07JUL99

Avoid Contact with Agricultural Chemicals

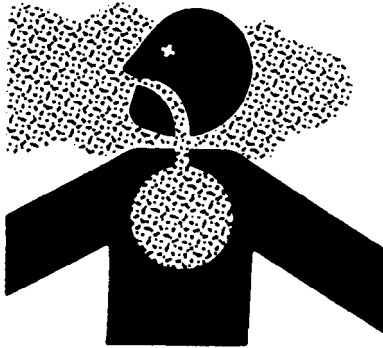

TS220—UN—15APR13

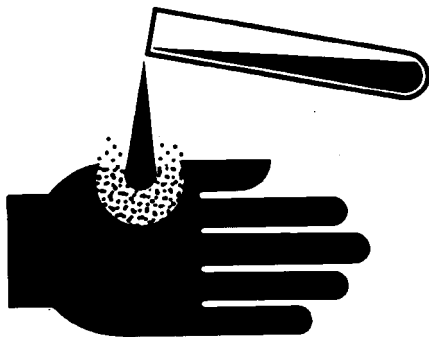

TS272—UN—23AUG88


This enclosed cab does not protect against inhaling vapor, aerosol or dust. If pesticide use instructions require respiratory protection, wear an appropriate respirator inside the cab.

Before leaving the cab, wear personal protective equipment as required by the pesticide use instructions. When re-entering the cab, remove protective equipment and store either outside the cab in a closed box or some other type of sealable container or inside the cab in a pesticide resistant container, such as a plastic bag.

Clean your shoes or boots to remove soil or other contaminated particles prior to entering the cab.

DX,CABS-19-25MAR09

Handle Agricultural Chemicals Safely

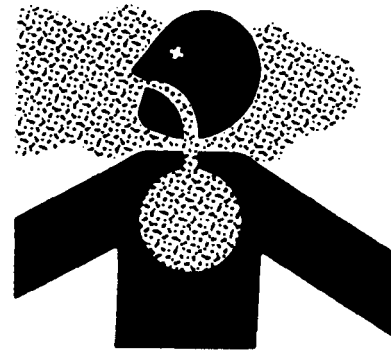

TS220—UN—15APR13



A34471

A34471—UN—11OCT88

Chemicals used in agricultural applications such as fungicides, herbicides, insecticides, pesticides, rodenticides, and fertilizers can be harmful to your health or the environment if not used carefully.

Always follow all label directions for effective, safe, and legal use of agricultural chemicals.

Reduce risk of exposure and injury:

- Wear appropriate personal protective equipment as recommended by the manufacturer. In the absence of manufacturer's instructions, follow these general guidelines:
 - Chemicals labeled **'Danger'**: Most toxic. Generally require use of goggles, respirator, gloves, and skin protection.
 - Chemicals labeled **'Warning'**: Less toxic. Generally require use of goggles, gloves, and skin protections.
 - Chemicals labeled **'Caution'**: Least toxic. Generally require use of gloves and skin protection.
- Avoid inhaling vapor, aerosol or dust.
- Always have soap, water, and towel available when working with chemicals. If chemical contacts skin, hands, or face, wash immediately with soap and water. If chemical gets into eyes, flush immediately with water.
- Wash hands and face after using chemicals and before eating, drinking, smoking, or urination.


- Do not smoke or eat while applying chemicals.
- After handling chemicals, always bathe or shower and change clothes. Wash clothing before wearing again.
- Seek medical attention immediately if illness occurs during or shortly after use of chemicals.
- Keep chemicals in original containers. Do not transfer chemicals to unmarked containers or to containers used for food or drink.
- Store chemicals in a secure, locked area away from human or livestock food. Keep children away.
- Always dispose of containers properly. Triple rinse empty containers and puncture or crush containers and dispose of properly.

DX,WW,CHEM01-19-24AUG10

Handling Batteries Safely



TS204—UN—15APR13

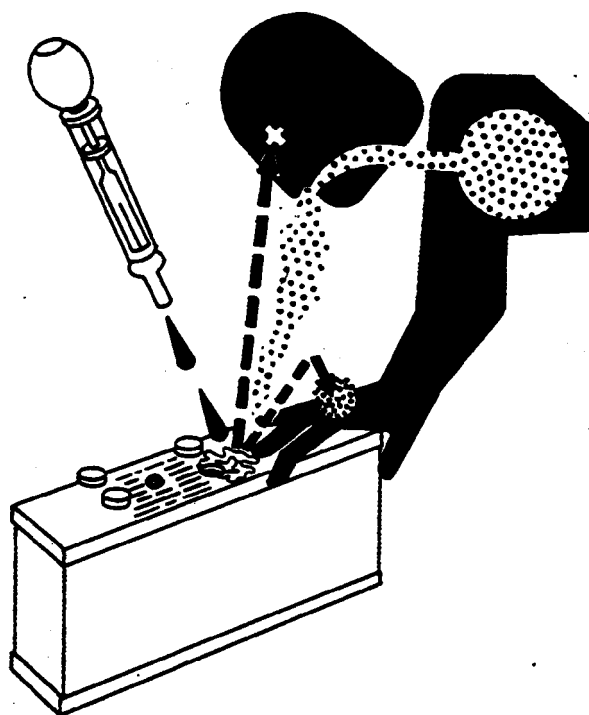

TS203—UN—23AUG88

Battery gas can explode. Keep sparks and flames away from batteries. Use a flashlight to check battery electrolyte level.

Never check battery charge by placing a metal object across the posts. Use a voltmeter or hydrometer.

Always remove grounded (-) battery clamp first and replace grounded clamp last.

Sulfuric acid in battery electrolyte is poisonous and strong enough to burn skin, eat holes in clothing, and cause blindness if splashed into eyes.

Avoid hazards by:

- Filling batteries in a well-ventilated area
- Wearing eye protection and rubber gloves
- Avoiding use of air pressure to clean batteries
- Avoiding breathing fumes when electrolyte is added
- Avoiding spilling or dripping electrolyte
- Using correct battery booster or charger procedure.

If acid is spilled on skin or in eyes:

1. Flush skin with water.
2. Apply baking soda or lime to help neutralize the acid.
3. Flush eyes with water for 15—30 minutes. Get medical attention immediately.

If acid is swallowed:

1. Do not induce vomiting.
2. Drink large amounts of water or milk, but do not exceed 2 L (2 qt.).
3. Get medical attention immediately.

WARNING: Battery posts, terminals, and related accessories contain lead and lead compounds, chemicals known to the State of California to cause cancer and reproductive harm. **Wash hands after handling.**

DX,WW,BATTERIES-19-02DEC10

Avoid Heating Near Pressurized Fluid Lines



TS953—UN—15MAY90

Flammable spray can be generated by heating near pressurized fluid lines, resulting in severe burns to yourself and bystanders. Do not heat by welding, soldering, or using a torch near pressurized fluid lines or other flammable materials. Pressurized lines can accidentally burst when heat goes beyond the immediate flame area.

DX,TORCH-19-10DEC04

Remove Paint Before Welding or Heating



TS220—UN—15APR13

Avoid potentially toxic fumes and dust.

Hazardous fumes can be generated when paint is heated by welding, soldering, or using a torch.

Remove paint before heating:

- Remove paint a minimum of 100 mm (4 in.) from area to be affected by heating. If paint cannot be removed, wear an approved respirator before heating or welding.
- If you sand or grind paint, avoid breathing the dust. Wear an approved respirator.
- If you use solvent or paint stripper, remove stripper with soap and water before welding. Remove solvent or paint stripper containers and other flammable material from area. Allow fumes to disperse at least 15 minutes before welding or heating.

Do not use a chlorinated solvent in areas where welding will take place.

Do all work in an area that is well ventilated to carry toxic fumes and dust away.

Dispose of paint and solvent properly.

DX,PAINT-19-24JUL02

Handle Electronic Components and Brackets Safely



TS249—UN—23AUG88

Falling while installing or removing electronic components mounted on equipment can cause serious injury. Use a ladder or platform to easily reach each mounting location. Use sturdy and secure footholds and handholds. Do not install or remove components in wet or icy conditions.

If installing or servicing a RTK base station on a tower or other tall structure, use a certified climber.

If installing or servicing a global positioning receiver mast used on an implement, use proper lifting techniques and wear proper protective equipment. The mast is heavy and can be awkward to handle. Two people are required when mounting locations are not accessible from the ground or from a service platform.

DX,WW,RECEIVER-19-24AUG10

Practice Safe Maintenance



TS218—UN—23AUG88

Understand service procedure before doing work. Keep area clean and dry.

Never lubricate, service, or adjust machine while it is moving. Keep hands, feet, and clothing away from power-driven parts. Disengage all power and operate controls to relieve pressure. Lower equipment to the ground. Stop the engine. Remove the key. Allow machine to cool.

Securely support any machine elements that must be raised for service work.

Keep all parts in good condition and properly installed. Fix damage immediately. Replace worn or broken parts. Remove any buildup of grease, oil, or debris.


On self-propelled equipment, disconnect battery ground cable (-) before making adjustments on electrical systems or welding on machine.

On towed implements, disconnect wiring harnesses from tractor before servicing electrical system components or welding on machine.

Falling while cleaning or working at height can cause serious injury. Use a ladder or platform to easily reach each location. Use sturdy and secure footholds and handholds.

DX,SERV-19-28FEB17

Avoid Hot Exhaust

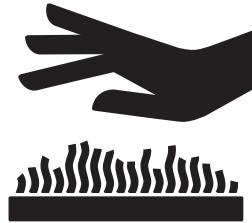

RG17488—UN—21AUG09

Servicing machine or attachments with engine running can result in serious personal injury. Avoid exposure and skin contact with hot exhaust gases and components.

Exhaust parts and streams become very hot during operation. Exhaust gases and components reach temperatures hot enough to burn people, ignite, or melt common materials.

DX,EXHAUST-19-20AUG09


Clean Exhaust Filter Safely



TS227—UN—15APR13



TS271—UN—23AUG88

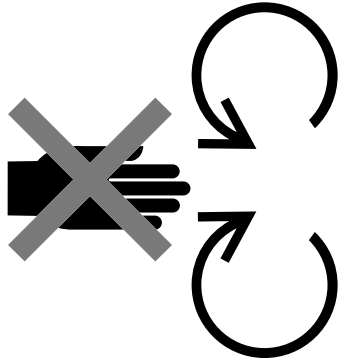

TS1693—UN—09DEC09



TS1695—UN—07DEC09

During exhaust filter cleaning operations, the engine may run at elevated idle and hot temperatures for an extended period of time. Exhaust gases and exhaust filter components reach temperatures hot enough to burn people, or ignite or melt common materials.

Keep machine away from people, animals, or structures which may be susceptible to harm or damage from hot exhaust gases or components. Avoid potential fire or explosion hazards from flammable materials and vapors near the exhaust. Keep exhaust outlet away from people and anything that can melt, burn, or explode.

Closely monitor machine and surrounding area for smoldering debris during and after exhaust filter cleaning.

Adding fuel while an engine is running can create a fire or explosion hazard. Always stop engine before refueling machine and clean up any spilled fuel.

Always make sure that engine is stopped while hauling machine on a truck or trailer.

Contact with exhaust components while still hot can result in serious personal injury.

Avoid contact with these components until cooled to safe temperatures.

If service procedure requires engine to be running:

- Only engage power-driven parts required by service procedure
- Ensure that other people are clear of operator station and machine


Keep hands, feet, and clothing away from power-driven parts.

Always disable movement (neutral), set the parking brake or mechanism and disconnect power to attachments or tools before leaving the operator's station.

Shut off engine and remove key (if equipped) before leaving the machine unattended.

DX,EXHAUST,FILTER-19-12JAN11

Work In Ventilated Area

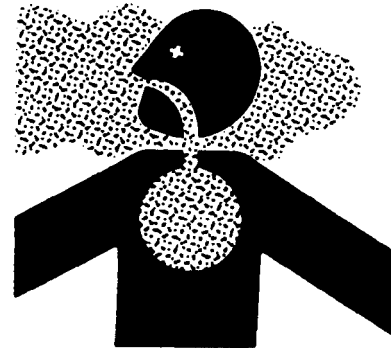


TS220—UN—15APR13

Engine exhaust fumes can cause sickness or death. If it is necessary to run an engine in an enclosed area, remove the exhaust fumes from the area with an exhaust pipe extension.

If you do not have an exhaust pipe extension, open the doors and get outside air into the area.

DX,AIR-19-17FEB99

Support Machine Properly

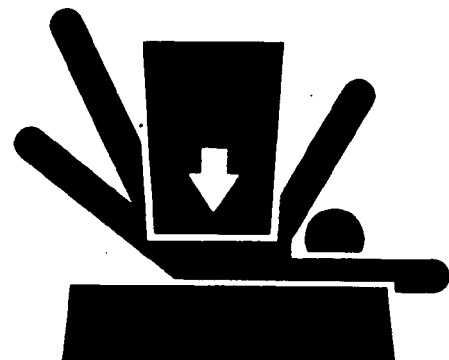

TS229—UN—23AUG88

Always lower the attachment or implement to the ground before you work on the machine. If the work requires that the machine or attachment be lifted, provide secure support for them. If left in a raised position, hydraulically supported devices can settle or leak down.

Do not support the machine on cinder blocks, hollow tiles, or props that may crumble under continuous load.

Do not work under a machine that is supported solely by a jack. Follow recommended procedures in this manual.

When implements or attachments are used with a machine, always follow safety precautions listed in the implement or attachment operator's manual.

DX,LOWER-19-24FEB00

Prevent Machine Runaway



TS177—UN—11JAN89


Avoid possible injury or death from machinery runaway.

Do not start engine by shorting across starter terminals. Machine will start in gear if normal circuitry is bypassed.

NEVER start engine while standing on ground. Start engine only from operator's seat, with transmission in neutral or park.

DX,BYPAS1-19-29SEP98

Park Machine Safely

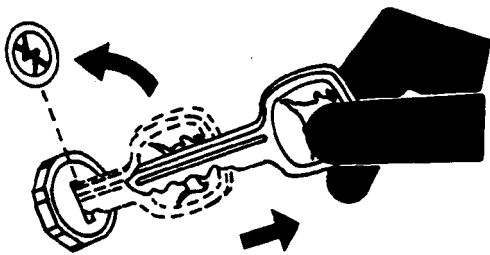


TS230—UN—24MAY89

Before working on the machine:

- Lower all equipment to the ground.
- Stop the engine and remove the key.
- Disconnect the battery ground strap.
- Hang a "DO NOT OPERATE" tag in operator station.

DX,PARK-19-04JUN90

Transport Tractor Safely

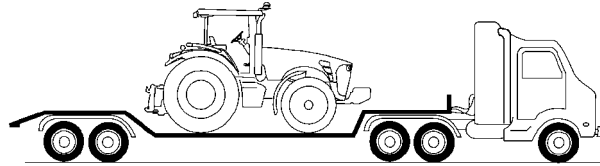

RXA0103709—UN—01JUL09

A disabled tractor is best transported on a flatbed carrier. Use chains to secure the tractor to the carrier. The axles and tractor frame are suitable attachment points.

Before transporting the tractor on a low-loader truck or flatbed rail wagon, make sure that the hood is secured over the tractor engine and that doors, roof hatch (if equipped) and windows are properly closed.

Never tow a tractor at a speed greater than 10 km/h (6 mph). An operator must steer and brake the tractor under tow.

DX,WW,TRANSPORT-19-19AUG09

Service Cooling System Safely



TS281—UN—15APR13

Explosive release of fluids from pressurized cooling system can cause serious burns.

Shut off engine. Only remove filler cap when cool enough to touch with bare hands. Slowly loosen cap to first stop to relieve pressure before removing completely.

DX,WW,COOLING-19-19AUG09

Service Accumulator Systems Safely



TS281—UN—15APR13

Escaping fluid or gas from systems with pressurized accumulators that are used in air conditioning, hydraulic, and air brake systems can cause serious injury. Extreme heat can cause the accumulator to burst, and pressurized lines can be accidentally cut. Do not weld or use a torch near a pressurized accumulator or pressurized line.

Relieve pressure from the pressurized system before removing accumulator.

Relieve pressure from the hydraulic system before removing accumulator. Never attempt to relieve hydraulic system or accumulator pressure by loosening a fitting.

Accumulators cannot be repaired.

DX,WW,ACCLA2-19-22AUG03

Service Tires Safely



RXA0103438—UN—11JUN09

Explosive separation of a tire and rim parts can cause serious injury or death.

Do not attempt to mount a tire unless you have the proper equipment and experience to perform the job.

Always maintain the correct tire pressure. Do not inflate the tires above the recommended pressure. Never weld or heat a wheel and tire assembly. The heat can cause an increase in air pressure resulting in a tire explosion. Welding can structurally weaken or deform the wheel.


When inflating tires, use a clip-on chuck and extension hose long enough to allow you to stand to one side and NOT in front of or over the tire assembly. Use a safety cage if available.

Check wheels for low pressure, cuts, bubbles, damaged rims, or missing lug bolts and nuts.

Wheels and tires are heavy. When handling wheels and tires use a safe lifting device or get an assistant to help lift, install, or remove.

DX,WW,RIMS-19-28FEB17

Service Front-Wheel Drive Tractor Safely

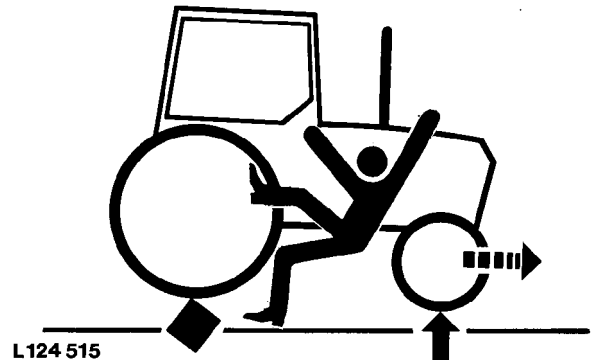


L124 515

L124515—UN—06AUG94

When servicing front-wheel drive tractor with the rear wheels supported off the ground and rotating wheels by engine power, always support front wheels in a similar manner. Loss of electrical power or transmission hydraulic system pressure will engage the front driving wheels, pulling the rear wheels off the support if front wheels are not raised. Under these conditions, front drive wheels can engage even with switch in disengaged position.

DX,WW,MFWD-19-19AUG09

Tightening Wheel Retaining Bolts/Nuts

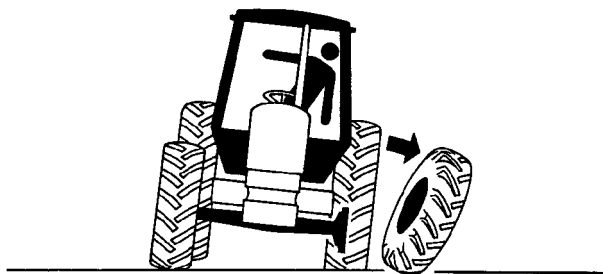


L124 516

L124516—UN—03JAN95

Torque wheel retaining bolts/nuts at the intervals specified in section Break-In Period and Service.

DX,WW,WHEEL-19-12OCT11

Avoid High-Pressure Fluids

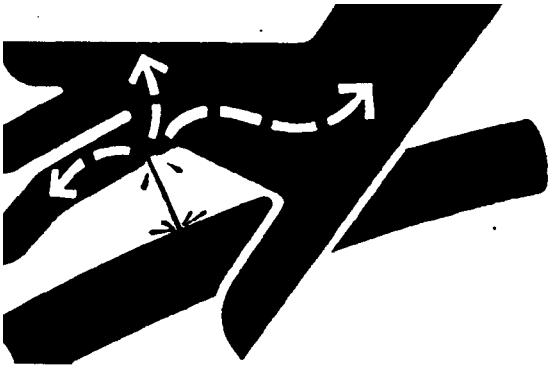

X9811—UN—23AUG88

Inspect hydraulic hoses periodically – at least once per year – for leakage, kinking, cuts, cracks, abrasion, blisters, corrosion, exposed wire braid or any other signs of wear or damage.

Replace worn or damaged hose assemblies immediately with John Deere approved replacement parts.

Escaping fluid under pressure can penetrate the skin causing serious injury.

Avoid the hazard by relieving pressure before disconnecting hydraulic or other lines. Tighten all connections before applying pressure.

Search for leaks with a piece of cardboard. Protect hands and body from high-pressure fluids.

If an accident occurs, see a doctor immediately. Any fluid injected into the skin must be surgically removed within a few hours or gangrene may result. Doctors unfamiliar with this type of injury should reference a knowledgeable medical source. Such information is available in English from Deere & Company Medical Department in Moline, Illinois, U.S.A., by calling 1-800-822-8262 or +1 309-748-5636.

DX,FLUID-19-12OCT11

Do Not Open High-Pressure Fuel System



TS1343—UN—18MAR92

High-pressure fluid remaining in fuel lines can cause serious injury. Do not disconnect or attempt repair of fuel

lines, sensors, or any other components between the high-pressure fuel pump and nozzles on engines with High Pressure Common Rail (HPCR) fuel system.

Only technicians familiar with this type of system can perform repairs. (See your John Deere dealer.)

DX,WW,HPCR1-19-07JAN03

Store Attachments Safely




TS219—UN—23AUG88

Stored attachments such as dual wheels, cage wheels, and loaders can fall and cause serious injury or death.

Securely store attachments and implements to prevent falling. Keep playing children and bystanders away from storage area.

DX,STORE-19-03MAR93

Decommissioning — Proper Recycling and Disposal of Fluids and Components

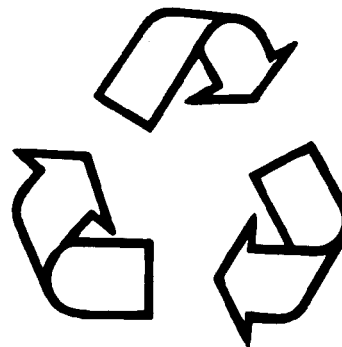

TS1133—UN—15APR13

Safety and environmental stewardship measures must be taken into account when decommissioning a machine and/or component. These measures include the following:

- Use appropriate tools and personal protective equipment such as clothing, gloves, face shields or glasses, during the removal or handling of objects and materials.
- Follow instructions for specialized components.

This as a preview PDF file from **best-manuals.com**



Download full PDF manual at **best-manuals.com**