



# 5065E and 5075E Tractors



## OPERATOR'S MANUAL 5065E and 5075E Tractors OMSU37534 ISSUE B8 (INGLÉS)

CALIFORNIA  
Proposition 65 Warning

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects, and other reproductive harm.

If this product contains a gasoline engine:

**⚠ WARNING**

The engine exhaust from this product contains chemicals known to the State of California to cause cancer, birth defects or other reproductive harm.

The State of California requires the above two warnings.  
Additional Proposition 65 Warnings can be found in this manual.

**Industrias John Deere Argentina S.A.**  
Argentina Edition  
PRINTED IN U.S.A.



# Introduction

## Foreword

READ THIS MANUAL carefully to learn how to operate and service your machine correctly. Failure to do so could result in personal injury or equipment damage. This manual and safety signs on your machine may also be available in other languages (see your John Deere dealer to order).

THIS MANUAL SHOULD BE CONSIDERED a permanent part of your machine and should remain with the machine.

MEASUREMENTS in this manual are given in both metric and customary U.S. unit equivalents. Use only correct replacement parts and fasteners. Metric and inch fasteners may require a specific metric or inch wrench.

RIGHT-HAND AND LEFT-HAND sides are determined by facing the direction of forward travel.

WRITE TRACTOR SERIAL (CHASSIS) NUMBER in the Specification or Identification Numbers section. Accurately record all the numbers to help in tracing the machine should it be stolen. Your dealer also needs these numbers when you order parts. File the identification numbers in a secure place off the machine.

SETTING FUEL DELIVERY BEYOND PUBLISHED factory specifications or otherwise overpowering will result in loss of warranty protection for this machine.

BEFORE DELIVERING THIS MACHINE, your dealer performed a predelivery inspection. After operating for the first 100 hours, schedule an after-sale inspection with your dealer to ensure best performance.

THIS TRACTOR IS DESIGNED SOLELY for use in customary agricultural or similar operations ("INTENDED USE"). Use in any other way is considered as contrary to the intended use. The manufacturer accepts no liability for damage or injury resulting from this misuse, and these risks must be borne solely by the user. Compliance with and strict adherence to the conditions of operation, service and repair as specified by the manufacturer also constitute essential elements for the intended use.

THIS TRACTOR SHOULD BE OPERATED, serviced and repaired only by persons familiar with all its particular characteristics and acquainted with the relevant safety rules (accident prevention). The accident prevention regulations, all other generally recognized regulations on safety and occupational medicine and the road traffic regulations must be observed at all times. Any arbitrary modifications carried out on this tractor will relieve the manufacturer of all liability for any resulting damage or injury.



Continued on next page

AK50421,000025C -19-12MAY15-1/3

PY19063—UN—24SEP13

Introduction

AK50421,000025C -19-12MAY15-2/3



*NOTE: Tractors shown may have optional equipment.*

AK50421,000025C -19-12MAY15-3/3

PY22892 —UN—12MAY15



# Contents

Page	Page
<b>Safety</b>	
Recognize Safety Information .....	05-1
Understand Signal Words .....	05-1
Follow Safety Instructions .....	05-1
Prepare for Emergencies .....	05-2
Wear Protective Clothing .....	05-2
Protect Against Noise .....	05-2
Handle Fuel Safely—Avoid Fires .....	05-3
Handle Starting Fluid Safely .....	05-3
Fire Prevention .....	05-3
In Case of Fire .....	05-4
Avoid Static Electricity Risk When Refueling .....	05-4
Keep ROPS Installed Properly .....	05-5
Use Foldable ROPS and Seat Belt Properly .....	05-5
Stay Clear of Rotating Drivelines .....	05-6
Use Steps and Handholds Correctly .....	05-6
Read Operator's Manuals for ISOBUS Controllers .....	05-7
Use Seat Belt Properly .....	05-7
Operating the Tractor Safely .....	05-8
Avoid Backover Accidents .....	05-9
Limited Use in Forestry Operation .....	05-9
Operating the Loader Tractor Safely .....	05-9
Keep Riders Off Machine .....	05-10
Instructional Seat .....	05-10
Use Safety Lights and Devices .....	05-10
Transport Towed Equipment at Safe Speeds ...	05-11
Use Caution on Slopes, Uneven Terrain, and Rough Ground .....	05-12
Freeing a Mired Machine .....	05-12
Avoid Contact with Agricultural Chemicals .....	05-13
Handle Agricultural Chemicals Safely .....	05-14
Handling Batteries Safely .....	05-15
Avoid Heating Near Pressurized Fluid Lines ...	05-15
Remove Paint Before Welding or Heating .....	05-16
Handle Electronic Components and Brackets Safely .....	05-16
Practice Safe Maintenance .....	05-17
Avoid Hot Exhaust .....	05-17
Clean Exhaust Filter Safely .....	05-18
Work In Ventilated Area .....	05-19
Support Machine Properly .....	05-19
Prevent Machine Runaway .....	05-19
Park Machine Safely .....	05-20
Transport Tractor Safely .....	05-20
Service Cooling System Safely .....	05-20
Service Accumulator Systems Safely .....	05-21
Service Tires Safely .....	05-21
Service Front-Wheel Drive Tractor Safely .....	05-21
Tightening Wheel Retaining Bolts/Nuts .....	05-22
Avoid High-Pressure Fluids .....	05-22
Do Not Open High-Pressure Fuel System .....	05-22
Store Attachments Safely .....	05-23
Decommissioning — Proper Recycling and Disposal of Fluids and Components .....	05-23
<b>Safety Signs</b>	
Pictorial Safety Signs .....	10-1
Operator's Manual .....	10-1
Riders .....	10-1
ROPS in Normal Position .....	10-2
Use Seat Belt .....	10-3
Prevent Machine Runaway .....	10-3
<b>Controls and Instruments</b>	
Tractor Controls .....	15-1
Instrument Panel .....	15-3
<b>Lights</b>	
Light Switch Positions .....	20-1
Use Headlights .....	20-1
Use High Beam Indicator .....	20-2
Use Tail Lights .....	20-2
Use Turn Signals .....	20-3
Use Hazard Lights .....	20-4
Use Flood Lamp .....	20-5
Seven Terminal Outlet .....	20-6
<b>Operator's Platform</b>	
Operate Foldable ROPS .....	25-1
Select Seat Position—Standard Seat .....	25-2
Adjust Ride Comfort .....	25-2
<b>Break-In Period</b>	
Observe Engine Operation Closely .....	30-1
Break-In Service .....	30-1
<b>Prestarting Checks</b>	
Daily Service Before Starting Engine .....	35-1
<b>Operating the Engine</b>	
Before Starting the Engine .....	40-1

Continued on next page

*Original Instructions. All information, illustrations and specifications in this manual are based on the latest information available at the time of publication. The right is reserved to make changes at any time without notice.*

COPYRIGHT © 2018  
DEERE & COMPANY  
Moline, Illinois  
All rights reserved.  
A John Deere ILLUSTRATION™ Manual  
Previous Editions  
Copyright © 2014, 2015

Page	Page		
Start the Engine.....	40-2	Use Swinging Drawbar.....	65-1
Check Engine Indicators and Gauges.....	40-3	Adjustable Drawbar.....	65-2
Change Engine Speeds.....	40-4	Proper Use of Drawbar.....	65-2
Recommended Engine Speeds and Operating Procedures.....	40-5	Stay Clear of Rotating Drivelines.....	65-2
Working With Speed/Hour Meter.....	40-6	Attach PTO-Driven Implement.....	65-3
Engines with Turbocharger.....	40-6	Operate Tractor PTO.....	65-3
Stop the Engine.....	40-6	Operate Tractor Dual PTO (If equipped).....	65-4
Use Booster Battery.....	40-7	Adjust PTO Clutch Operating Rod.....	65-5
<b>Driving the Tractor</b>		<b>Ballast</b>	
Operator Training Required.....	50-1	Plan for Maximum Productivity.....	70-1
Reduce Fuel Consumption.....	50-1	Use Proper Ballast.....	70-1
Driving on Public Roads.....	50-3	Select Ballast Carefully.....	70-1
Operate Transmission.....	50-5	Match Ballast to Load Work.....	70-1
Shifting Transmission.....	50-5	Check for Correct Ballast.....	70-2
Select a Gear.....	50-5	Measure Wheel Slip (Manually).....	70-2
Use Brakes.....	50-6	Ballast Limitations.....	70-3
Use Differential Lock.....	50-6	Ballast Front End for Transport.....	70-3
Operate Mechanical Front Wheel Drive.....	50-7	Ballast Two-Wheel Drive Tractors.....	70-3
Stopping Tractor (With Park Brake).....	50-8	Ballast MFWD-Equipped Tractors.....	70-3
Stop the Tractor (With Park Pawl).....	50-9	Determine Maximum Rear Ballast.....	70-4
Loader Fixation Points (If Equipped).....	50-10	Determine Maximum Front Ballast.....	70-4
<b>Rockshaft and 3-Point Hitch</b>		Use Cast Iron Weights.....	70-4
Match Tractor Power to Implement.....	55-1	Install Rear Cast Iron Weights.....	70-5
3-Point Hitch Components.....	55-1	Use Liquid Weight.....	70-6
Rockshaft Control Levers.....	55-1	Draining the Tires.....	70-7
Set Position Control Lever Stop.....	55-2	Use Implement Codes.....	70-7
Using Rockshaft Position Control.....	55-3	<b>Wheels, Tires and Treads</b>	
Use Draft Control.....	55-4	Service Tires Safely.....	75-1
Adjust Rockshaft Rate-of-Drop/ Implement lock.....	55-5	Check Implement-to-Tire Clearance.....	75-1
Prepare Implement.....	55-5	Check Tire Inflation Pressure.....	75-2
Position Center Link.....	55-6	Tire Inflation Pressure Chart.....	75-2
Attach Implements to 3-Point Hitch.....	55-7	Tighten Wheel/Axle Hardware Correctly.....	75-2
Adjust Hitch Side Sway Chain.....	55-8	Tighten Bolts—Adjustable Front Axle.....	75-3
Leveling the Hitch.....	55-8	Tighten Nuts—MFWD Axle.....	75-3
Adjust Lateral Float.....	55-9	Tighten Bolts—Rear Axle.....	75-4
Adjust Rockshaft Lever Friction - JD Rockshaft.....	55-9	Observe Rear Wheel Tread Width Limitations.....	75-4
Warm Hydraulic System Oil.....	55-10	Tread Settings—Multi-Position Rear Wheels.....	75-5
<b>Remote Hydraulic Cylinders</b>		Tread Settings—Adjustable Front Axle.....	75-7
Use Correct Hose Tips.....	60-1	Tread Setting—Multi-Position MFWD Wheels.....	75-8
Control Lever and Coupler Identification—If Equipped.....	60-1	Adjust Front Axle Tread Width.....	75-9
Connect Hoses.....	60-1	Check Toe-In.....	75-10
Connect Single-Acting Cylinder.....	60-3	Adjust Toe-In—Two-Wheel Drive Tractor.....	75-11
Correct Reversed Cylinder Response.....	60-3	Check Toe-In (MFWD Tractor).....	75-11
Neutral Lever Position.....	60-3	Adjust Toe-In (MFWD Tractor).....	75-12
Extend/Retract Cylinder.....	60-4	Set MFWD Steering Stops Turning Radius.....	75-12
Disconnect Hoses.....	60-4	Mount Tires.....	75-13
<b>Drawbar and PTO</b>		Use Correct Tire Combinations.....	75-13
Observe Drawbar / Wagon Hitch Load Limitations.....	65-1	Tire Compatibility Chart.....	75-14
		<b>Transporting</b>	
		Use Safety Lights and Devices.....	80-1
		Use a Safety Chain.....	80-1
		Driving Tractor on Roads.....	80-2
		Transport on Carrier.....	80-4
		Tow Tractor.....	80-4

Continued on next page

Page	Page
<b>Fuels, Lubricants, and Coolant</b>	
Handle Fuel Safely—Avoid Fires.....	85-1
Handle Fluids Safely—Avoid Fires.....	85-1
Fuel Storage.....	85-1
Cold Weather Operation.....	85-2
Diesel Fuel.....	85-2
Handle and Storing Diesel Fuel.....	85-2
Bio-Diesel Fuel.....	85-3
Fill Fuel Tank.....	85-3
Alternative and Synthetic Lubricants.....	85-4
Lubricant Storage.....	85-4
Diesel Engine Oil.....	85-4
Oil Filters.....	85-5
Diesel Engine Coolant.....	85-5
Liquid Coolant Conditioner.....	85-6
Anti-Chatter Transmission/Hydraulic Oil.....	85-6
Use Correct Hydraulic-Transmission Filter Element.....	85-7
Gear Oil.....	85-7
Grease.....	85-8
<b>Lubrication and Maintenance</b>	
Avoid Heating Near Pressurized Fluid Lines.....	90-1
Clean Vehicle of Hazardous Pesticides.....	90-1
Observe Service Intervals.....	90-1
Use Correct Lubricant.....	90-1
Break-In Service.....	90-2
Service Intervals.....	90-2
<b>Service—10 Hours</b>	
Check Engine Oil Level.....	95-1
Check Coolant Level.....	95-2
Drain Water and Sediment From Fuel Tank and Fuel Filter.....	95-3
Lubricate as Necessary.....	95-3
<b>Service—50 Hours</b>	
Check Transmission-Hydraulic System Oil Level.....	100-1
Check MFWD Axle Oil Level.....	100-1
Clean and Check Battery.....	100-2
Inspect All Tires.....	100-2
Lubricate Front Axle Pivot Pin(s).....	100-3
Lubricate Steering Spindles.....	100-3
Inspect Tractor for Loose Hardware.....	100-4
<b>Service—100 Hours</b>	
Change Engine Oil and Filter.....	105-1
<b>Service—250 Hours</b>	
Service Air Cleaner.....	110-1
Inspect and Adjust Alternator/Fan Belt.....	110-1
Lubricate 3-Point Hitch.....	110-1
Check Neutral Start System.....	110-2
Check and Adjust Clutch Pedal Free Play.....	110-2
<b>Service—500 Hours</b>	
Replace Fuel Filter.....	115-1
<b>Service—600 Hours</b>	
Change Oil in MFWD Axle (If Equipped).....	120-1
Clean Engine Crankcase Vent Tube.....	120-2
Pack Front Wheel Bearings (Adjustable Front Axle).....	120-2
Check Hoses and Hose Clamps for Tightness ..	120-3
Lubricate Rear Axle Bearings.....	120-4
Check Engine Idle Speeds.....	120-4
Check Front Axle Pivot Pin.....	120-4
<b>Service—1000 Hours</b>	
Change Transmission-Hydraulic Oil and Filter.....	125-1
Clean Transmission-Hydraulic Pickup Screen ..	125-1
<b>Service—1100 Hours</b>	
Check and Replace Water Separator Bowl .....	121-1
<b>Service—Annually</b>	
Change Engine Oil and Filter.....	130-1
Replace Air Cleaner Elements.....	130-1
<b>Service—2 Years/2000 Hours</b>	
Flush Cooling System.....	135-1
<b>Service—As Required</b>	
Service Air Cleaner.....	140-1
Adjust Throttle Friction.....	140-1
<b>Service</b>	
Service Tractor Safely.....	145-1
Work In Ventilated Area.....	145-1
Clean Vehicle of Hazardous Pesticides.....	145-1
Engine Break-In Oil.....	145-2
Use High-Pressure Washers.....	145-2
Additional Service Information.....	145-2
Open Hood.....	145-3
Remove Hood.....	145-3
Air Intake System Components.....	145-4
Service Air Cleaner at Regular Intervals .....	145-4
Check Air Intake System.....	145-4
Remove Primary Air Cleaner Element.....	145-5
Clean Primary Element.....	145-5
Wash Primary Element.....	145-6
Inspect Element.....	145-6
Store Element.....	145-6
Replace Alternator/Fan Belt.....	145-7
Fuel System Components - Inline Pump .....	145-7
Fuel System Components - Rotary Pump.....	145-8
Do Not Modify Fuel System.....	145-8
Bleeding Fuel System - Inline Pump .....	145-9

Continued on next page

Page	Page		
Bleeding Fuel System - Rotary Pump .....	145-9	Keep Proof of Ownership .....	165-3
Bleed Fuel System At Fuel Injection Nozzles ..	145-10	Keep Machines Secure .....	165-3
Engine Cooling System Components .....	145-11		
Cleaning Grille, Screens, Radiator and Oil Cooler .....	145-12	<b>Lubrication Maintenance Record Charts</b>	
Flush Cooling System.....	145-12	50, 250, 500 Hour Service Chart.....	170-1
Winterize Cooling System .....	145-12	600 Hour Service Chart.....	170-2
Prevent Battery Explosions .....	145-13	1000, 1200 Hour Service Chart.....	170-3
Observe Electrical Service Precautions .....	145-13	Annual Service Chart.....	170-4
Battery Access.....	145-14	2000 Hour Service Chart .....	170-5
Remove Battery.....	145-14	As Required Service Chart .....	170-6
Service Battery .....	145-14		
Charge Battery .....	145-15	<b>John Deere Service</b>	
Battery Replacement Specifications.....	145-15	John Deere Parts.....	180-1
Connect Starter Wiring .....	145-15	The Right Tools.....	180-1
Connect Alternator Wiring .....	145-16	Well Trained Technician.....	180-1
Locate Fusible Link.....	145-16	Prompt Service .....	180-2
Locate Fuses .....	145-16		
Fuse Size and Function.....	145-17		
Aim Headlights .....	145-18		
Adjust Headlights.....	145-18		
Replace Headlight Bulb .....	145-19		
Replace Tail Light and Warning Light Bulbs ...	145-20		
Replace Flood Lamp Bulb .....	145-20		
Check Tires .....	145-20		
Tubeless Tire Repair .....	145-20		
Keep ROPS Installed Properly .....	145-21		
<b>Troubleshooting</b>			
Engine Troubleshooting.....	150-1		
Transmission Troubleshooting.....	150-4		
Hydraulic System Troubleshooting .....	150-5		
Brakes Troubleshooting.....	150-5		
Rockshaft and Quick-Coupler 3-Point Hitch Troubleshooting .....	150-6		
Remote Hydraulic Cylinders Troubleshooting ..	150-7		
Electrical System Troubleshooting .....	150-8		
<b>Tractor Storage</b>			
Tractor Storage.....	155-1		
Removing Tractor From Storage .....	155-3		
<b>Specifications</b>			
John Deere 5065E Tractor .....	160-1		
John Deere 5075E Tractor .....	160-3		
Ground Speeds .....	160-4		
Metric Bolt and Screw Torque Values.....	160-5		
Unified Inch Bolt and Screw Torque Values.....	160-6		
<b>Identification Numbers</b>			
Identification Plates .....	165-1		
Record Tractor Serial Number.....	165-1		
Record Front Axle (2-WD) Serial Number .....	165-1		
Record Mechanical Front Wheel Drive (MFWD) Serial Number - If Equipped .....	165-1		
ROPS Serial Number .....	165-2		
Record Engine Serial Number.....	165-2		
Record Transmission Serial Number.....	165-2		




# Safety

## Recognize Safety Information

This is a safety-alert symbol. When you see this symbol on your machine or in this manual, be alert to the potential for personal injury.

Follow recommended precautions and safe operating practices.

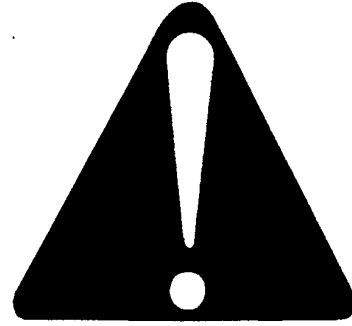

DX,ALERT -19-29SEP98-1/1

T81389 —UN—28JUN13

## Understand Signal Words

**DANGER;** The signal word DANGER indicates a hazardous situation which, if not avoided, will result in death or serious injury.

**WARNING;** The signal word WARNING indicates a hazardous situation which, if not avoided, could result in death or serious injury.

**CAUTION;** The signal word CAUTION indicates a hazardous situation which, if not avoided, could result in minor or moderate injury. CAUTION may also be used to alert against unsafe practices associated with events which could lead to personal injury.

A signal word—DANGER, WARNING, or CAUTION—is used with the safety-alert symbol. DANGER identifies the most serious hazards. DANGER or WARNING safety signs are located near specific hazards. General



precautions are listed on CAUTION safety signs. CAUTION also calls attention to safety messages in this manual.

DX,SIGNAL -19-05OCT16-1/1

TS187 —19—30SEP88


## Follow Safety Instructions

Carefully read all safety messages in this manual and on your machine safety signs. Keep safety signs in good condition. Replace missing or damaged safety signs. Be sure new equipment components and repair parts include the current safety signs. Replacement safety signs are available from your John Deere dealer.

There can be additional safety information contained on parts and components sourced from suppliers that is not reproduced in this operator's manual.

Learn how to operate the machine and how to use controls properly. Do not let anyone operate without instruction.

Keep your machine in proper working condition. Unauthorized modifications to the machine may impair the function and/or safety and affect machine life.

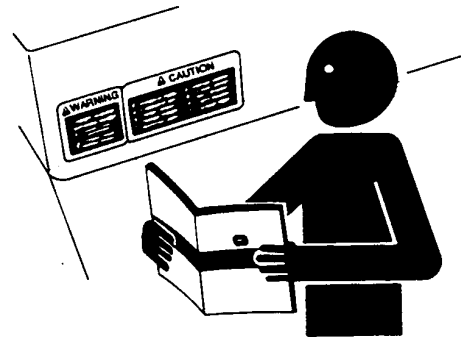

If you do not understand any part of this manual and need assistance, contact your John Deere dealer.

DX,READ -19-16JUN09-1/1


TS201 —UN—15APR13

### Prepare for Emergencies

Be prepared if a fire starts.

Keep a first aid kit and fire extinguisher handy.

Keep emergency numbers for doctors, ambulance service, hospital, and fire department near your telephone.

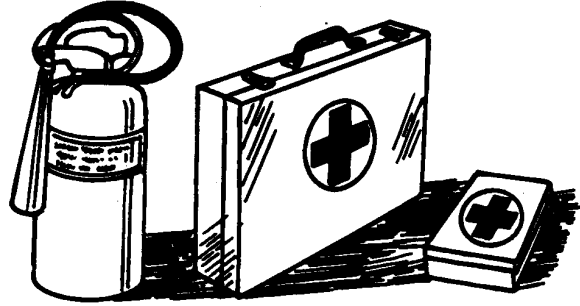


TS291 —UN—15APR13

DX,FIRE2 -19-03MAR93-1/1

### Wear Protective Clothing

Wear close fitting clothing and safety equipment appropriate to the job.

Operating equipment safely requires the full attention of the operator. Do not wear radio or music headphones while operating machine.

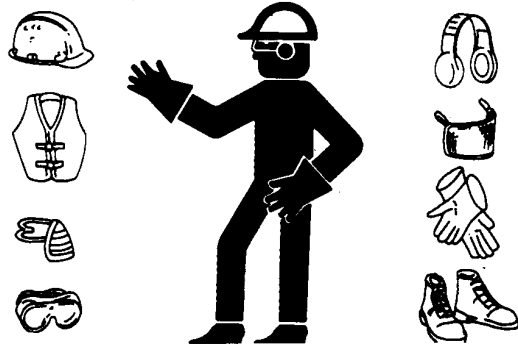

TS206 —UN—15APR13

DX,WEAR2 -19-03MAR93-1/1

### Protect Against Noise

There are many variables that affect the sound level range, including machine configuration, condition and maintenance level of the machine, ground surface, operating environmental, duty cycles, ambient noise, and attachments.

Exposure to loud noise can cause impairment or loss of hearing.

**Always wear hearing protection.** Wear a suitable hearing protective device such as earmuffs or earplugs to protect against objectionable or uncomfortable loud noises.



TS207 —UN—23AUG88

DX,NOISE -19-03OCT17-1/1

### Handle Fuel Safely—Avoid Fires

Handle fuel with care: it is highly flammable. Do not refuel the machine while smoking or when near open flame or sparks.

Always stop engine before refueling machine. Fill fuel tank outdoors.

Prevent fires by keeping machine clean of accumulated trash, grease, and debris. Always clean up spilled fuel.

Use only an approved fuel container for transporting flammable liquids.

Never fill fuel container in pickup truck with plastic bed liner. Always place fuel container on ground before refueling. Touch fuel container with fuel dispenser nozzle before removing can lid. Keep fuel dispenser nozzle in contact with fuel container inlet when filling.



Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.

DX,FIRE1 -19-12OCT11-1/1

TS202 —UN—23AUG88

### Handle Starting Fluid Safely

Starting fluid is highly flammable.

Keep all sparks and flame away when using it. Keep starting fluid away from batteries and cables.

To prevent accidental discharge when storing the pressurized can, keep the cap on the container, and store in a cool, protected location.

Do not incinerate or puncture a starting fluid container.

Do not use starting fluid on an engine equipped with glow plugs or an air intake heater.



DX,FIRE3 -19-14MAR14-1/1

TS1356 —UN—18MAR92

### Fire Prevention

To reduce the risk of fire, your tractor should be regularly inspected and cleaned.

- Birds and other animals may build nests or bring other flammable materials into the engine compartment or onto the exhaust system. The tractor should be inspected and cleaned prior to the first use each day.
- A build up of grass, crop material and other debris may occur during normal operation. This is especially true when operating in very dry conditions or conditions where airborne crop material or crop dust is present. Any such build up must be removed to ensure proper machine function and to reduce the risk of fire. The tractor must be inspected and cleaned periodically throughout the day.
- Regular and thorough cleaning of the tractor combined with other routine maintenance procedures listed in the

Operator's Manual greatly reduce the risk of fire and the chance of costly downtime.

- Do not store fuel container where there is an open flame, spark, or pilot light such as within a water heater or other appliance.
- Check fuel lines, tank, cap, and fittings frequently for damage, cracks or leaks. Replace if necessary.

Follow all operational and safety procedures posted on the machine and the Operator's Manual. Be careful of hot engine and exhaust components during inspection and cleaning. Before carrying out any inspection or cleaning, always shut OFF the engine, place the transmission in PARK or set parking brake, and remove the key. Removal of the key will prevent others from starting the tractor during inspection and cleaning.

DX,WW,TRACTOR,FIRE,PREVENTION -19-12OCT11-1/1

## In Case of Fire

### CAUTION: Avoid personal injury.

Stop machine immediately at the first sign of fire. Fire may be identified by the smell of smoke or sight of flames. Because fire grows and spreads rapidly, get off the machine immediately and move safely away from the fire. Do not return to the machine! The number one priority is safety.

Call the fire department. A portable fire extinguisher can put out a small fire or contain it until the fire department arrives; but portable extinguishers have limitations. Always put the safety of the operator and bystanders first. If attempting to extinguish a fire, keep your back to the wind with an unobstructed escape path so you can move away quickly if the fire cannot be extinguished.

Read the fire extinguisher instructions and become familiar with their location, parts, and operation before a fire starts. Local fire departments or fire equipment distributors may offer fire extinguisher training and recommendations.

If your extinguisher does not have instructions, follow these general guidelines:



1. Pull the pin. Hold the extinguisher with the nozzle pointing away from you, and release the locking mechanism.
2. Aim low. Point the extinguisher at the base of the fire.
3. Squeeze the lever slowly and evenly.
4. Sweep the nozzle from side-to-side.

TSS27—UN—15APR13

DX,FIRE4 -19-22AUG13-1/1


## Avoid Static Electricity Risk When Refueling

The removal of sulfur and other compounds in Ultra-Low Sulfur Diesel (ULSD) fuel decreases its conductivity and increases its ability to store a static charge.

Refineries may have treated the fuel with a static dissipating additive. However, there are many factors that can reduce the effectiveness of the additive over time.

Static charges can build up in ULSD fuel while it is flowing through fuel delivery systems. Static electricity discharge when combustible vapors are present could result in a fire or explosion.

Therefore, it is important to ensure that the entire system used to refuel your machine (fuel supply tank, transfer pump, transfer hose, nozzle, and others) is properly grounded and bonded. Consult with your fuel or fuel system supplier to ensure that the delivery system is in compliance with fueling standards for proper grounding and bonding practices.

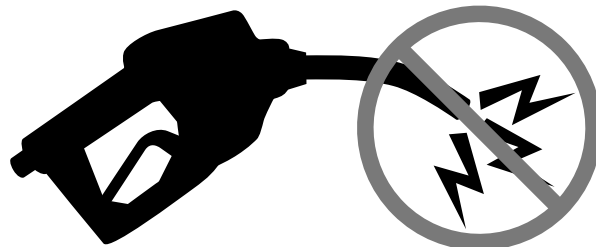

RG22142—UN—17MAR14

RG21992—UN—21AUG13

DX,FUEL,STATIC,ELEC -19-12JUL13-1/1


### Keep ROPS Installed Properly

Make certain all parts are reinstalled correctly if the roll-over protective structure (ROPS) is loosened or removed for any reason. Tighten mounting bolts to proper torque.

The protection offered by ROPS will be impaired if ROPS is subjected to structural damage, is involved in an overturn incident, or is in any way altered by welding, bending, drilling, or cutting. A damaged ROPS should be replaced, not reused.

The seat is part of the ROPS safety zone. Replace only with John Deere seat approved for your tractor.

Any alteration of the ROPS must be approved by the manufacturer.

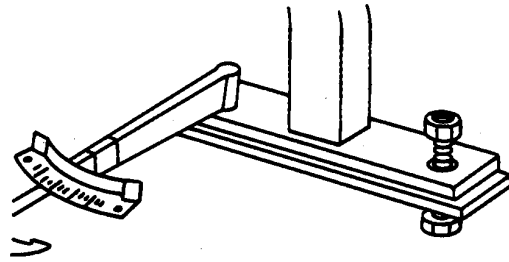


DX,ROPS3 -19-12OCT11-1/1

TSS212—UN—23AUG88

### Use Foldable ROPS and Seat Belt Properly

Avoid crushing injury or death during rollover.

- If this machine is equipped with a foldable rollover protective structure (ROPS), keep the ROPS in the fully extended and locked position. USE a seat belt when you operate with a ROPS in the fully extended position.
  - Hold the latch and pull the seat belt across the body.
  - Insert the latch into the buckle. Listen for a click.
  - Tug on the seat belt to make sure that the belt is securely fastened.
  - Snug the seat belt across the hips.
- If this machine is operated with the ROPS folded (for example, to enter a low building), drive with extreme caution. DO NOT USE a seat belt with the ROPS folded.
- Return the ROPS to the raised, fully extended position as soon as the machine is operated under normal conditions.

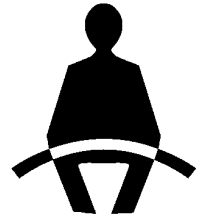

DX,FOLDROPS -19-22AUG13-1/1

TS1729—UN—24MAY13

### Stay Clear of Rotating Drivelines

Entanglement in rotating driveline can cause serious injury or death.

Keep tractor master shield and driveline shields in place at all times. Make sure rotating shields turn freely.

Only use power take-off driveshafts with adequate guards and shields.

Wear close fitting clothing. Stop the engine and be sure that PTO driveline is stopped before making adjustments, connections, or cleaning out PTO driven equipment.


Do not install any adapter device between the tractor and the primary implement PTO driveshaft that will allow a 1000 rpm tractor shaft to power a 540 rpm implement at speeds higher than 540 rpm.

Do not install any adapter device that results in a portion of the rotating implement shaft, tractor shaft, or the adapter to be unguarded. The tractor master shield shall overlap the end of the splined shaft and the added adaptor device as outlined in the table.

The angle at which the primary implement PTO driveshaft can be inclined may be reduced depending on the shape and size of the tractor master shield and the shape and size of the guard of the primary implement PTO driveshaft.

Do not raise implements high enough to damage the tractor master shield or guard of primary implement PTO driveshaft. Detach the PTO driveline shaft if it is necessary to increase implement height. (See Attching/Detaching PTO Driveline)

When using Type 3/4 PTO, inclination and turning angles may be reduced depending on type of PTO master shield and coupling rails.

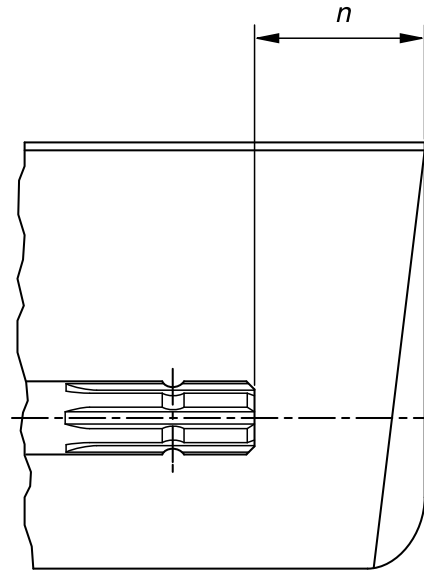

PTO Type	Diameter	Splines	$n \pm 5 \text{ mm (0.20 in.)}$
1	35 mm (1.378 in.)	6	85 mm (3.35 in.)
2	35 mm (1.378 in.)	21	85 mm (3.35 in.)
3	45 mm (1.772 in.)	20	100 mm (4.00 in.)
4	57.5 mm (2.264 in.)	22	100 mm (4.00 in.)

DX,PTO -19-28FEB17-1/1


TS1644—UN—22AUG95

H96219—UN—29APR10

### Use Steps and Handholds Correctly

Prevent falls by facing the machine when getting on and off. Maintain 3-point contact with steps, handholds, and handrails.

Use extra care when mud, snow, or moisture present slippery conditions. Keep steps clean and free of grease or oil. Never jump when exiting machine. Never mount or dismount a moving machine.

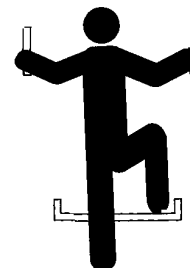

DX,WW,MOUNT -19-12OCT11-1/1

T133488—UN—15APR13

## Read Operator's Manuals for ISOBUS Controllers

In addition to GreenStar™ Applications, this display can be used as a display device for any ISOBUS Controller that meets ISO 11783 standard. This includes capability to control ISOBUS implements. When used in this manner, information and control functions placed on the display are provided by the ISOBUS Controller and are the responsibility of the ISOBUS Controller manufacturer.

*GreenStar is a trademark of Deere & Company*

Some of these functions could pose a hazard to either the operator or a bystander. Read the Operator's Manual provided by the ISOBUS Controller manufacturer and observe all safety messages in manual and on ISOBUS Controller product prior to use.

*NOTE: ISOBUS refers to the ISO Standard 11783*

DX,WW,ISOBUS -19-15JUL15-1/1

## Use Seat Belt Properly


Avoid crushing injury or death during rollover.

This machine is equipped with a rollover protective structure (ROPS). USE a seat belt when you operate with a ROPS.

- Hold the latch and pull the seat belt across the body.
- Insert the latch into the buckle. Listen for a click.
- Tug on the seat belt latch to make sure that the belt is securely fastened.
- Snug the seat belt across the hips.

Replace entire seat belt if mounting hardware, buckle, belt, or retractor show signs of damage.

Inspect seat belt and mounting hardware at least once a year. Look for signs of loose hardware or belt damage, such as cuts, fraying, extreme or unusual wear,

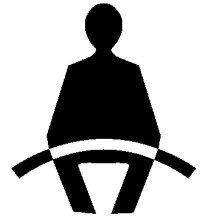

discoloration, or abrasion. Replace only with replacement parts approved for your machine. See your John Deere dealer.



DX,ROPS1 -19-22AUG13-1/1

TS1729 —UN—24MAY13

## Operating the Tractor Safely

You can reduce the risk of accidents by following these simple precautions:

- Use your tractor only for jobs it was designed to perform, for example, pushing, pulling, towing, actuating, and carrying a variety of interchangeable equipment designed to conduct agricultural work.
- This tractor is not intended to be used as a recreational vehicle.
- Read this operator's manual before operating the tractor and follow operating and safety instructions in the manual and on the tractor.
- Follow operation and ballasting instructions found in the operator's manual for your implements/attachments, such as front loaders
- Follow the instructions outlined in the operator's manual of any mounted or trailed machinery or trailer. Do not operate a combination of tractor-machine or tractor-trailer unless all instructions have been followed.
- Make sure that everyone is clear of machine, attached equipment, and work area before starting engine or operation.
- Stay clear of the three-point linkage and pick-up hitch (if equipped) when controlling them.
- Keep hands, feet, and clothing away from power-driven parts.

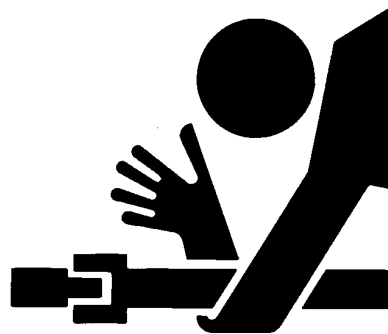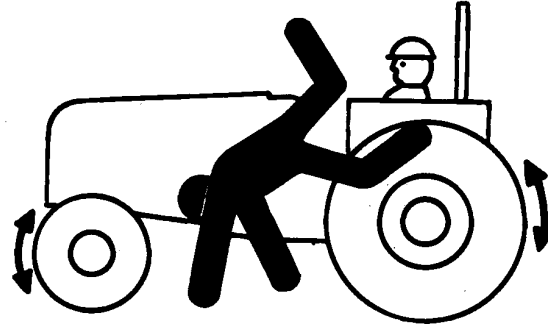

### Driving Concerns

- Never get on or off a moving tractor.
- Complete any required training prior to operating vehicle.
- Keep all children and nonessential personnel off tractors and all equipment.
- Never ride on a tractor unless seated on a John Deere approved seat with seat belt.
- Keep all shields/guards in place.
- Use appropriate visual and audible signals when operating on public roads.
- Move to side of road before stopping.
- Reduce speed when turning, applying individual brakes, or operating around hazards on rough ground or steep slopes.
- Stability degrades when attached implements are at high position.
- Couple brake pedals together for road travel.
- Pump brakes when stopping on slippery surfaces.
- Regularly clean fenders and fender valances (mud flaps) if installed. Remove dirt before driving on public roadways.

### Towing Loads

- Be careful when towing and stopping heavy loads. Stopping distance increases with speed and weight of towed loads, and on slopes. Towed loads with or without brakes that are too heavy for the tractor or are towed too fast can cause loss of control.

- Consider the total weight of the equipment and its load.
- Hitch towed loads only to approved couplings to avoid rearward upset.

### Parking and Leaving the Tractor

- Before dismounting, shut off SCVs, disengage PTO, stop engine, lower implements/attachments to ground, place implement/attachment control devices in neutral and securely engage park mechanism, including the park pawl and park brake. In addition, if tractor is left unattended, remove key.
- Leaving transmission in gear with engine off will NOT prevent the tractor from moving.
- Never go near an operating PTO or an operating implement.
- Wait for all movement to stop before servicing machinery.

### Common Accidents

Unsafe operation or misuse of the tractor can result in accidents. Be alert to hazards of tractor operation.

The most common accidents involving tractors:

- Tractor rollover
- Collisions with motor vehicles
- Improper starting procedures
- Entanglement in PTO shafts
- Falling from tractor
- Crushing and pinching during hitching

DX,WWW,TRACTOR -19-28FEB17-1/1

TS290 —UN—23AUG88

TS276 —UN—23AUG88



### Avoid Backover Accidents

Before moving machine, be sure that all persons are clear of machine path. Turn around and look directly for best visibility. Use a signal person when backing if view is obstructed or when in close quarters.

Do not rely on a camera to determine if personnel or obstacles are behind the machine. The system can be limited by many factors including maintenance practices, environmental conditions, and operating range.



PC10857XW—UN—15APR13

DX,AVOID,BACKOVER,ACCIDENTS -19-30AUG10-1/1

### Limited Use in Forestry Operation

The intended use of John Deere tractors when used in forestry operations is limited to tractor-specific applications like transport, stationary work such as log splitting, propulsion, or operating implements with PTO, hydraulic, or electrical systems.

These are applications where normal operation does not present a risk of falling or penetrating objects. Any forestry

applications beyond these applications, such as forwarding and loading, requires fitment of application-specific components including Falling Object Protective Structure (FOPS) and/or Operative Protective Structures (OPS). Contact John Deere dealer for special components.

DX,WW,FORESTRY -19-12OCT11-1/1

### Operating the Loader Tractor Safely

When operating a machine with a loader application, reduce speed as required to ensure good tractor and loader stability.

To avoid tractor rollover and damage to front tires and tractor, do not carry load with your loader at a speed over 10 km/h (6 mph).

To avoid tractor damage do not use a front loader or a sprayer tank if the tractor is equipped with a 3 Meter Front Axle.


Never allow anyone to walk or work under a raised loader.

Do not use loader as a work platform.

Do not lift or carry anyone on loader, in bucket, or on implement or attachment.

Lower loader to ground before leaving operators station.

The Rollover Protective Structure (ROPS) or cab roof, if equipped, may not provide sufficient protection from load

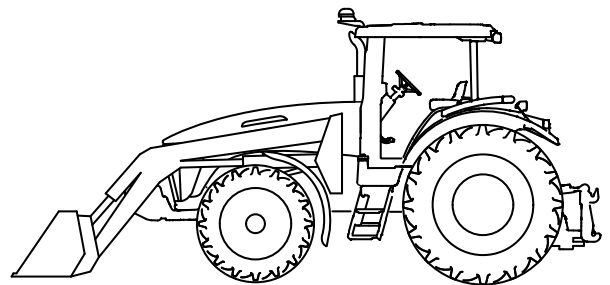

TS1692—UN—09NOV09

falling onto the operators station. To prevent loads from falling onto the operators station, always use appropriate implements for specific applications (that is, manure forks, round bale forks, round bale grippers, and clammers).


Ballast tractor in accordance to Ballast Recommendations in PREPARE TRACTOR section.

DX,WW,LOADER -19-18SEP12-1/1

### Keep Riders Off Machine

Only allow the operator on the machine. Keep riders off.

Riders on machine are subject to injury such as being struck by foreign objects and being thrown off of the machine. Riders also obstruct the operator's view resulting in the machine being operated in an unsafe manner.

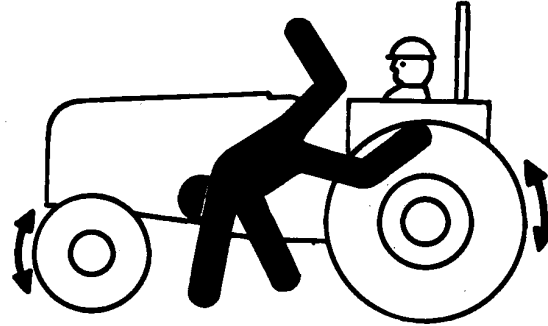


TSS290 —UN—23AUG88

DX,RIDER -19-03MAR93-1/1

### Instructional Seat

The instructional seat, if so equipped, has been provided only for training operators or diagnosing machine problems.

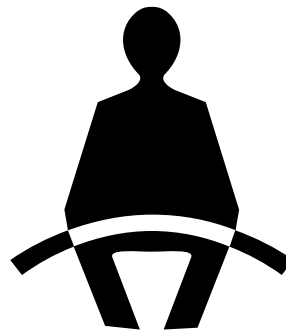


TSS1730 —UN—24MAY13

DX,SEAT,NA -19-22AUG13-1/1

### Use Safety Lights and Devices

Prevent collisions between other road users, slow moving tractors with attachments or towed equipment, and self-propelled machines on public roads. Frequently check for traffic from the rear, especially in turns, and use turn signal lights.

Use headlights, flashing warning lights, and turn signals day and night. Follow local regulations for equipment lighting and marking. Keep lighting and marking visible, clean, and in good working order. Replace or repair lighting and marking that has been damaged or lost. An implement safety lighting kit is available from your John Deere dealer.

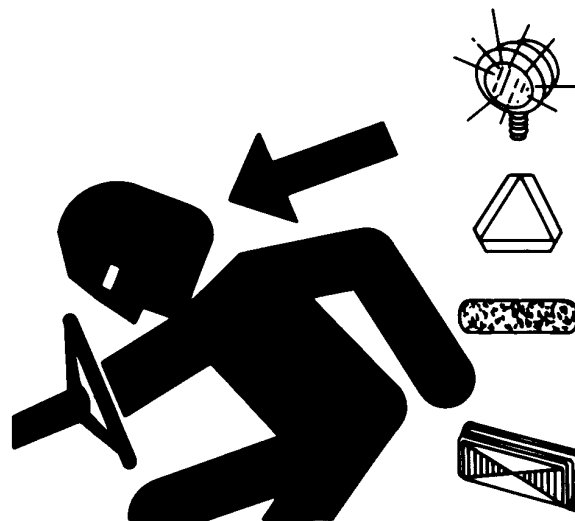

TSS951 —UN—12APR90

DX,FLASH -19-07JUL99-1/1

## Transport Towed Equipment at Safe Speeds

Do not exceed the maximum transport speed. This towing unit may be capable of operating at transport speeds that exceed the maximum allowable transport speed for towed implements.

Before transporting a towed implement, determine from signs on the implement or information provided in the implement's operator manual the maximum transport speed. Never transport at speeds that exceed the implement's maximum transport speed. Exceeding the implement's maximum transport speed can result in:

- Loss of control of the towing unit/implement combination
- Reduced or no ability to stop during braking
- Implement tire failure
- Damage to the implement structure or its components


Implements shall be equipped with brakes if the maximum fully loaded weight is greater than 1500 kg (3307 lbs) and greater than 1.5 times the weight of the towing unit.

**Example: Implement mass is 1600 kg (3527 lbs) and towing unit mass is 1600 kg (3527 lbs), example implement is not required to have brakes.**

**Implements without brakes:** Do not transport at speeds greater than 32 km/h (20 mph).

### Implements with brakes:

- If the manufacturer does not specify a maximum transport speed, do not tow at speeds greater than 40 km/h (25 mph).
- When transporting at speeds up to 40 km/h (25 mph) the fully loaded implement must weigh less than 4.5 times the towing unit weight.

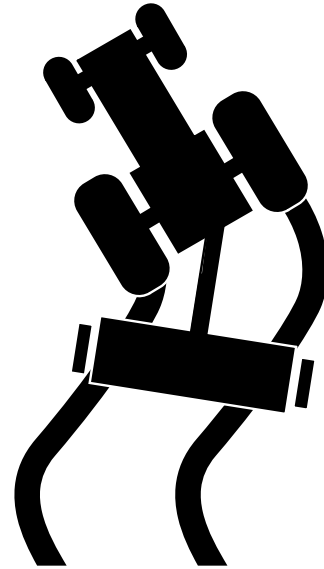

- When transporting at speeds between 40—50 km/h (25—31 mph) the fully loaded implement must weigh less than 3.0 times the towing unit weight.

When towing a trailer, become familiar with the braking characteristics and ensure the compatibility of the tractor/trailer combination in regard to the deceleration rate.

DX.TOW1 -19-28FEB17-1/1

TS1686—UN—27SEP06

### Use Caution on Slopes, Uneven Terrain, and Rough Ground

Avoid holes, ditches, and obstructions which cause the tractor to tip, especially on slopes. Avoid sharp uphill turns.

Driving forward out of a ditch, mired condition, or up a steep slope could cause the tractor to tip over rearward. Back out of these situations if possible.


Danger of overturn increases greatly with narrow tread setting, at high speed.

Not all conditions that can cause a tractor to overturn are listed. Be alert for any situation in which stability may be compromised.

Slopes are a major factor related to loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on all slopes requires extra caution.

Uneven terrain or rough ground can cause loss-of-control and tip-over accidents, which can result in severe injury or death. Operation on uneven terrain or rough ground requires extra caution.

Never drive near the edge of a gully, drop-off, ditch, steep embankment, or a body of water. The machine could suddenly roll over if a wheel goes over the edge or the ground caves in

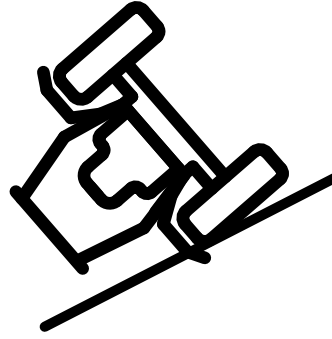

RXA0109437 —UN—01JUL09

Choose a low ground speed so you will not have to stop or shift while on a slope.

Avoid starting, stopping, or turning on a slope. If the tires lose traction, disengage the PTO and proceed slowly, straight down the slope.

Keep all movement on slopes slow and gradual. Do not make sudden changes in speed or direction, which could cause the machine to roll over.

DX,WW,SLOPE -19-28FEB17-1/1


### Freeing a Mired Machine

Attempting to free a mired machine can involve safety hazards such as the mired tractor tipping rearward, the towing tractor overturning, and the tow chain or tow bar (a cable is not recommended) failing and recoiling from its stretched condition.

Back your tractor out if it gets mired down in mud. Unhitch any towed implements. Dig mud from behind the rear wheels. Place boards behind the wheels to provide a solid base and try to back out slowly. If necessary, dig mud from the front of all wheels and drive slowly ahead.

If necessary to tow with another unit, use a tow bar or a long chain (a cable is not recommended). Inspect the chain for flaws. Make sure all parts of towing devices are of adequate size and strong enough to handle the load.

Always hitch to the drawbar of the towing unit. Do not hitch to the front pushbar attachment point. Before moving, clear the area of people. Apply power smoothly to take up the slack: a sudden pull could snap any towing device causing it to whip or recoil dangerously.

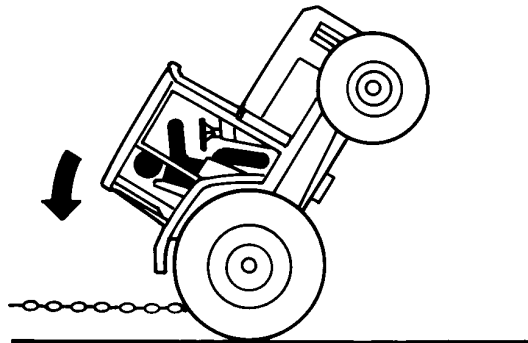

TS1645 —UN—15SEP95



TS263 —UN—23AUG88

DX,MIREDD -19-07JUL99-1/1

This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)