

B300


B-Series



Bobcat®

Service Manual

(S/N 573111001 & Above)

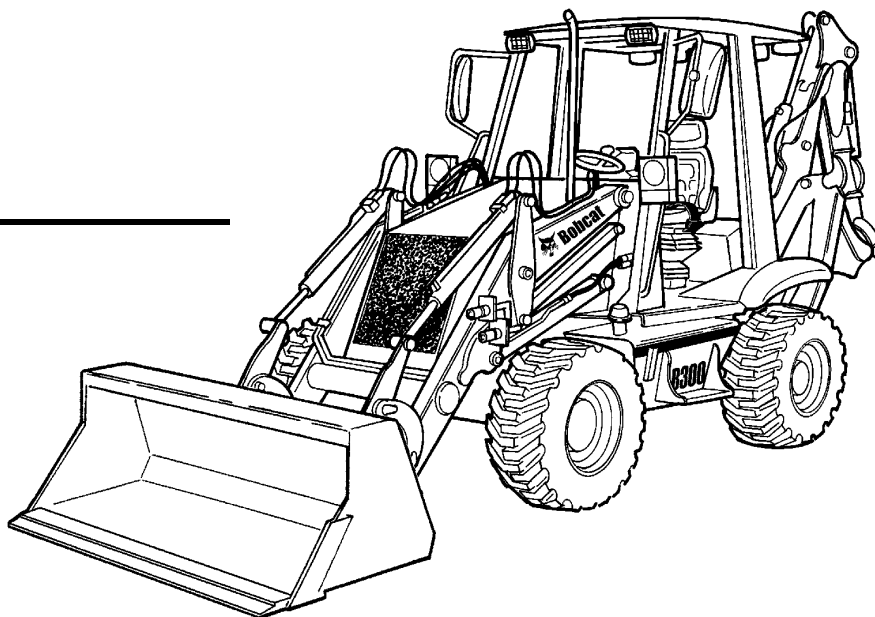

Doosan purchased Bobcat Company from Ingersoll-Rand Company in 2007. Any reference to Ingersoll-Rand Company or use of trademarks, service marks, logos, or other proprietary identifying marks belonging to Ingersoll-Rand Company in this manual is historical or nominative in nature, and is not meant to suggest a current affiliation between Ingersoll-Rand Company and Bobcat Company or the products of either.

IR Ingersoll Rand
Compact Vehicle Technologies
Printed in U.S.A.

MAINTENANCE SAFETY




WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.


W-2003-0903



Safety Alert Symbol: This symbol with a warning statement, means: "Warning, be alert! Your safety is involved!" Carefully read the message that follows.

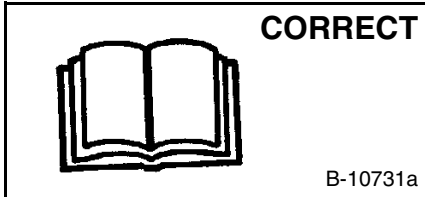


⚠ Never service the Bobcat Loader Backhoe without instructions.

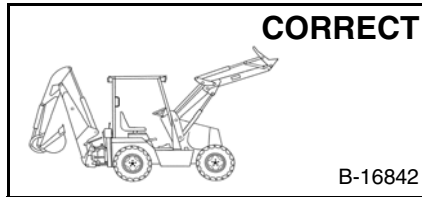


⚠ Always use an approved lift arm support device when servicing the loader backhoe with the lift arms raised. Replace the lift arm support device if damaged or missing.

⚠ Disconnecting or loosening any hydraulic tubeline, hose, fitting component, or part failure can cause lift arms or backhoe boom to drop.

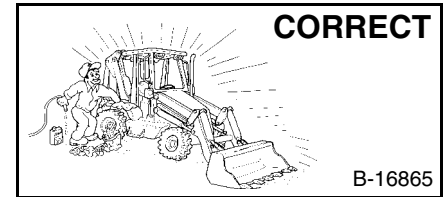


⚠ Cleaning and maintenance are required daily.

⚠ NEVER modify equipment or add attachments not approved by Bobcat.

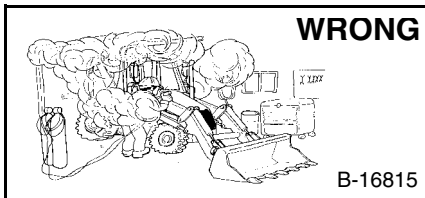


⚠ Have good ventilation when welding or grinding painted parts.

⚠ Wear dust mask when grinding painted parts. Toxic dust and gas can be produced.

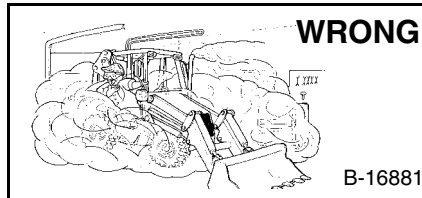


⚠ Vent exhaust to outside when engine must be run for service.

⚠ Exhaust system must be tightly sealed. Exhaust fumes can kill without warning.

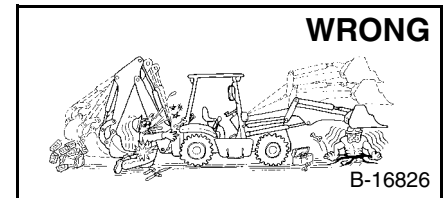

⚠ Never work on loader backhoe with lift arms raised unless supported by an approved lift arm support device.

⚠ Always lower the backhoe bucket to the ground before doing any maintenance.

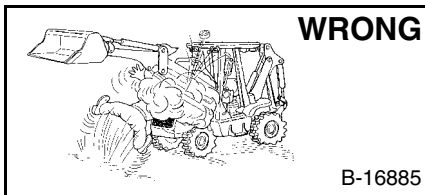


⚠ Stop, cool and clean engine of flammable materials before checking fluids.

⚠ Never service or adjust machine with the engine running unless instructed to do so in the manual.

⚠ Avoid contact with leaking hydraulic fluid or diesel fuel under pressure. It can penetrate the skin or eyes.

⚠ Never fill fuel tank with engine running, while smoking or when near open flame.

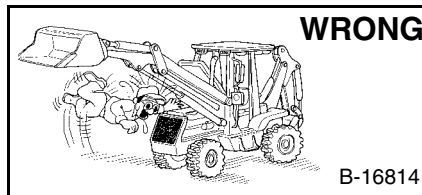

⚠ Keep body, jewelry and clothing away from moving parts, electrical contact, hot parts and exhaust.

⚠ Wear eye protection to guard from battery acid, compressed springs, fluids under pressure and flying debris when engines are running or tools are used.

⚠ Use eye protection approved for type of welding.

⚠ Keep engine cover closed except for service. Close and latch engine cover before operating the loader backhoe.



⚠ Lead-acid batteries produce flammable and explosive gases.

⚠ Keep arcs, sparks, flames and lighted tobacco away from batteries.

⚠ Batteries contain acid which burns eyes or skin on contact. Wear protective clothing. If acid contacts body, flush well with water. For eye contact flush well and get immediate medical attention.

Maintenance procedures which are given in the Operation & Maintenance Manual can be performed by the owner/operator without any specific technical training. Maintenance procedures which are **not** in the Operation & Maintenance Manual must be performed **ONLY BY QUALIFIED BOBCAT SERVICE PERSONNEL**. Always use **genuine Bobcat replacement parts**.



Bobcat®

ALPHABETICAL INDEX

AIR CLEANER	70-01	HYDRAULIC FILTER	20-01
AIR CLEANER SERVICE	10-01	HYDRAULIC FILTER HOUSING	20-01
ALTERNATOR	60-01	HYDRAULIC FLUID RESERVOIR	20-01
ALTERNATOR BELT	10-01	HYDRAULIC SYSTEM INFORMATION	20-01
APPROVED LIFT ARM SUPPORT DEVICE	10-01	HYDRAULIC/HYDROSTATIC FLUID	
ARM CYLINDER	20-01	SPECIFICATIONS	SPEC-01
ARM	50-01	HYDRAULIC/HYDROSTATIC SYSTEM	10-01
AXLE AND DIFFERENTIAL (FRONT)	40-01	HYDROSTATIC DRIVE MOTOR	30-01
AXLE AND DIFFERENTIAL (REAR)	40-01	HYDROSTATIC PUMP	30-01
AXLES (FRONT AND REAR)	10-01	HYDROSTATIC SYSTEM INFORMATION	30-01
AXLE TOE-IN	10-01	HYDROSTATIC PUMP TESTING	30-01
BACKHOE CONTROL VALVE	20-01	INSTRUMENT PANEL	60-01
BATTERY	60-01		
BOB-TACH	50-01	LIFT ARMS	50-01
BOB-TACH HAND LEVER	10-01	LIFT CYLINDER	20-01
BOOM	50-01	LIFTING AND BLOCKING THE	
BOOM CYLINDER	20-01	LOADER BACKHOE	10-01
BOOM LOCK PIN	10-01	LOADER SPECIFICATIONS	SPEC-01
BRAKE PEDAL ASSEMBLY	40-01	LOADER BACKHOE TORQUE	SPEC-01
BUCKET	50-01	LOADER CONTROL VALVE	20-01
BUCKET CYLINDER	20-01	LUBRICATING THE LOADER BACKHOE	10-01
BUCKET POSITIONING LINK	50-01		
		MAIN RELIEF VALVE	20-01
CAB LIGHTS	60-01	MASTER CYLINDER	20-01
CENTER FLOOR PANEL	50-01	MUFFLER	70-01
CONVERSIONS	SPEC-01		
		OIL COOLER	30-01
DRIVE COUPLER	70-01	OPERATOR CANOPY	50-01
DRIVESHAFT	40-01	OPERATOR SEAT	50-01
DROP BOX	40-01		
		PARKING BRAKE	40-01
ELECTRICAL SYSTEM INFORMATION	60-01	PARKING BRAKE HOUSING	40-01
ENCLOSED CAB	50-01	PORT RELIEF VALVE	
ENGINE	70-01	(BACKHOE CONTROL VALVE)	20-01
ENGINE COMPONENTS AND TESTING	70-01	PORT RELIEF VALVE	
ENGINE COOLING SYSTEM	10-01	(LOADER CONTROL VALVE)	20-01
ENGINE COVER	10-01, 50-01		
ENGINE LUBRICATION SYSTEM	10-01	OIL COOLER/RADIATOR	70-01
ENGINE SIDE COVERS	50-01	REAR AXLE	40-01
ENGINE SPECIFICATIONS	SPEC-01	RECONDITIONING THE ENGINE	70-01
ENGINE SPEED CONTROL	70-01		
		SERVICE BRAKE	40-01
FENDER	50-01	SERVICE SCHEDULE	10-01
FLOOR PANELS	50-01	STABILIZER	50-01
FLYWHEEL	70-01	STABILIZER CYLINDER	20-01
FLYWHEEL HOUSING	70-01	STEERING ANGLE ADJUSTMENT	
FRONT AXLE	40-01	(FRONT AXLE)	40-01
FRONT LIGHTS	60-01	STEERING ANGLE ADJUSTMENT (REAR AXLE)	40-01
FUEL LEVEL SENDER	60-01	STEERING CYLINDER (FRONT & REAR)	20-01
FUEL SYSTEM	10-01	STEERING PUMP	20-01
FUEL TANK	50-01	STEERING VALVE	20-01
		STARTER	60-01
GEAR PUMP	20-01	SWING CYLINDER	20-01
GRILL	50-01		
GRILL FRAME	50-01		

ALPHABETICAL INDEX (CONT'D)

SWING FRAME	50-01
TILT CYLINDER	20-01
TIRE MAINTENANCE	10-01
TORQUE SPECIFICATIONS FOR BOLTS.....	SPEC-01
TOWING THE LOADER BACKHOE	10-01
TRANSPORTING THE LOADER BACKHOE.....	10-01
TRAVEL PEDAL	70-01
TROUBLESHOOTING.....	70-01
TURN INDICATOR LIGHTS (FRONT).....	60-01
TURN INDICATOR LIGHTS (REAR).....	60-01
X-CHANGE™	50-01

CONTENTS

FOREWORD.....	II
SAFETY INSTRUCTIONS	V
SERIAL NUMBER LOCATION	IX
DELIVERY REPORT.....	X
LOADER BACKHOE IDENTIFICATION	XI
SAFETY AND MAINTENANCE.....	10-01
HYDRAULIC SYSTEM	20-01
HYDROSTATIC SYSTEM.....	30-01
DRIVE SYSTEM	40-01
MAIN FRAME	50-01
ELECTRICAL SYSTEM AND ANALYSIS	60-01
ENGINE SERVICE	70-01
SPECIFICATIONS.....	SPEC-01

**SAFETY &
MAINTENANCE**

**HYDRAULIC
SYSTEM**

**HYDROSTATIC
SYSTEM**

**DRIVE
SYSTEM**

MAIN FRAME

**ELECTRICAL
SYSTEM &
ANALYSIS**

**ENGINE
SERVICE**


SPECIFICATIONS

FOREWORD


This manual is for the Bobcat loader mechanic. It provides necessary servicing and adjustment procedures for the Bobcat loader and its component parts and systems. Refer to the Operation & Maintenance Manual for operating instructions, Starting procedure, daily checks, etc.

A general inspection of the following items must be made after the loader has had service or repair:


1. Check that ROPS mounting hardware is tightened and is Bobcat approved.

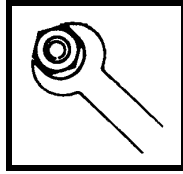

2. The seat belt must be correctly installed, functional and in good condition.

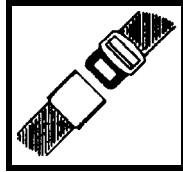

3. Check lift arm support device, replace if damaged.

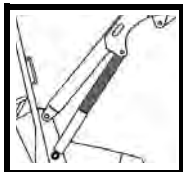

4. Machine signs must be legible and in the correct location.




5. Foot pedal must return to neutral.




6. Check for correct function of the work lights




7. The parking brake must function correctly.

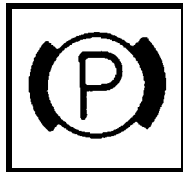


8. Enclosure door latches must open and close freely.

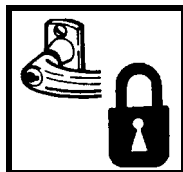


9. Bob-Tach wedges and linkages must function correctly and be in good condition.

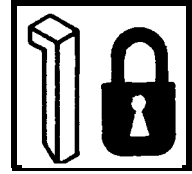


10. Safety treads must be in good condition.

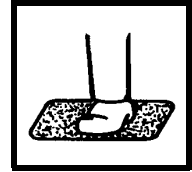


11. Check for correct function of indicator lamps (Optional on some models).

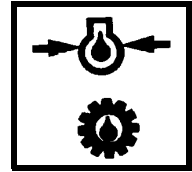

12. Check hydraulic fluid level, engine oil level and fuel supply.

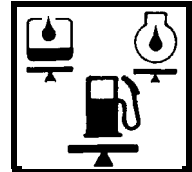


13. Inspect for fuel, oil or hydraulic fluid leaks.

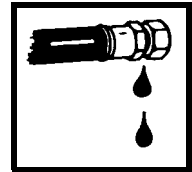


14. Lubricate the loader backhoe.




15. Check the condition of the battery and cables.

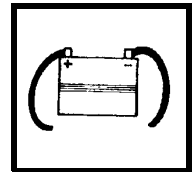

16. Inspect the air cleaner for damage or leaks. Check the condition of the element.

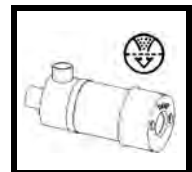


17. Check the electrical charging system.

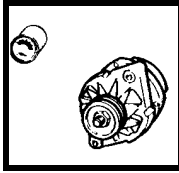

20. Operate the loader and check all functions.




18. Check tires for wear and pressure.

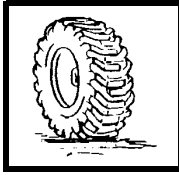


21. Check for any field modification not completed.



19. Inspect for loosen or broken parts or connections.

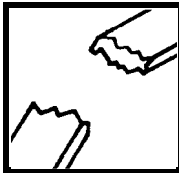

22. Recommend to the owner that all necessary corrections be made before the machine is returned to service.

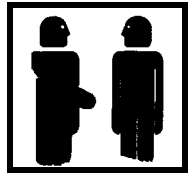

**CALIFORNIA
PROPOSITION 65 WARNING**

Diesel engine exhaust and some of its constituents are known to the State of California to cause cancer, birth defects and other reproductive harm.



Bobcat®

SAFETY INSTRUCTIONS



Safety Alert Symbol

This symbol with a warning statement means:
“Warning, be alert! Your safety is involved!”
Carefully read the message that follows.



WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0903



WARNING

Warnings on the machine and in the manuals are for your safety. Failure to obey warnings can cause injury or death.

W-2044-1285

IMPORTANT

This notice identifies procedures which must be followed to avoid damage to the machine.

I-2019-0284

The following publications provide information on the safe use and maintenance of the Bobcat machine and attachments:

- The Delivery Report is used to assure that complete instructions have been given to the new owner and that the machine is in safe operating condition.
- The Operation & Maintenance Manual delivered with the machine or attachment contains operating information as well as routine maintenance and service procedures. It is a part of the machine and can be stored in a container provided on the machine. Replacement Operation & Maintenance Manuals can be ordered from your Bobcat dealer.
- Machine signs (decals) instruct on the safe operation and care of your Bobcat machine or attachment. The signs and their locations are shown in the Operation & Maintenance Manual. Replacement signs are available from your Bobcat dealer.
- An Operator's Handbook fastened to the operator cab. It's brief instructions are convenient to the operator. The handbook is available from your dealer in an English edition or one of many other languages. See your Bobcat dealer for more information on translated versions.
- The AEM Safety Manual delivered with the machine gives general safety information.
- The Service Manual and Parts Manual are available from your dealer for use by mechanics to do shop-type service and repair work.
- The Loader Backhoe Operator Training Course is available through your local dealer or at www.training.bobcat.com or www.bobcat.com. This course is intended to provide rules and practices of correct operation of the Loader Backhoe.
- The Loader Backhoe Safety Video is available from your Bobcat dealer or at www.training.bobcat.com or www.bobcat.com.

SI LB-0206 SM

SAFETY INSTRUCTIONS (CONT'D)

The dealer and owner/operator review the recommended uses of the product when delivered. If the owner/operator will be using the machine for a different application(s) he or she must ask the dealer for recommendations on the new use.



Call Before You Dig

1-888-258-0808

When you call, you will be directed to a location in your state/city for information about buried lines (telephone, cable TV, water, sewer, gas, etc.)

SAFETY INSTRUCTIONS (CONT'D)

Fire Prevention

The machine and attachments have components that are at high temperature under normal operating conditions. The primary source of high temperatures is the engine and exhaust system. The electrical system, if damaged or incorrectly maintained, can be a source of arcs or sparks.


Flammable debris (leaves, straw, etc.) must be removed regularly. If flammable debris is allowed to accumulate, it will increase fire hazard. Clean often to avoid this accumulation. Flammable debris in the engine compartment is a potential hazard.

The spark arrestor muffler is designed to control the emission of hot particles from the engine and exhaust system, but the muffler and the exhaust gases are still hot.

- Do not use the machine where exhaust, arcs, sparks or hot components can contact flammable material, explosive dust or gases.
- The operator cab, engine compartment, and engine cooling system must be inspected every day and cleaned if necessary to prevent fire hazard and overheating.
- Check all electrical wiring and connections for damage. Keep the battery terminals clean and tight. Repair or replace any damaged part.
- Check fuel and hydraulic tubes, hoses and fittings for damage and leakage. Never use open flame or bare skin to check for leaks. Tighten or replace any parts that show leakage. Always clean fluid spills. Do not use gasoline or diesel fuel for cleaning parts. Use commercial nonflammable solvents.
- Do not use ether or starting fluids on any engine which has glow plugs. These starting aids can cause explosion and injure you or bystanders.
- Always clean the machine, disconnect the battery, and disconnect the wiring from the controllers before welding. Cover rubber hoses, battery and all other flammable parts. Keep a fire extinguisher near the machine when welding. Have good ventilation when grinding or welding painted parts. Wear a dust mask when grinding painted parts. Toxic dust or gas can be produced.
- Stop the engine and let it cool before adding fuel. **NO SMOKING!**

- Use the procedure in the Operation & Maintenance Manual for connecting the battery and for jump starting.
- Use the procedure in the Operation & Maintenance Manual for cleaning the spark arrestor muffler (if equipped).

Figure 1

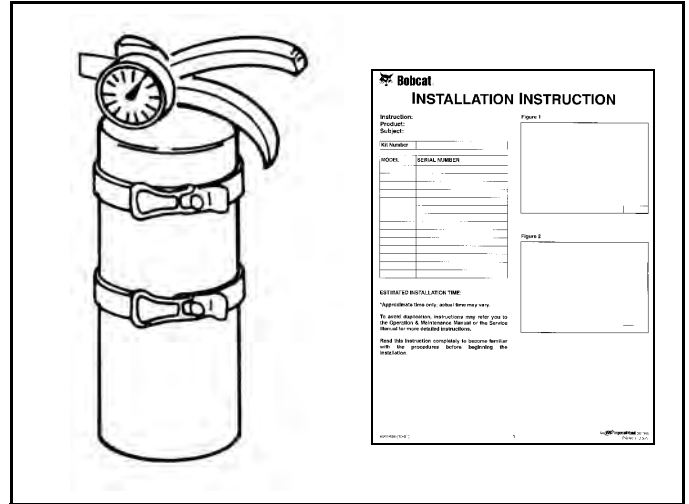

- Know where fire extinguishers and first aid kits are located and how to use them. Fire extinguishers are available from your Bobcat dealer [Figure 1].




Bobcat®

SERIAL NUMBER LOCATION

Always use the serial number of the loader backhoe when requesting service information or when ordering parts. Early or later models (identification made by serial number) may use different parts, or it may be necessary to use a different procedure in doing a specific service operation.

Loader Backhoe Serial Number

Figure 1

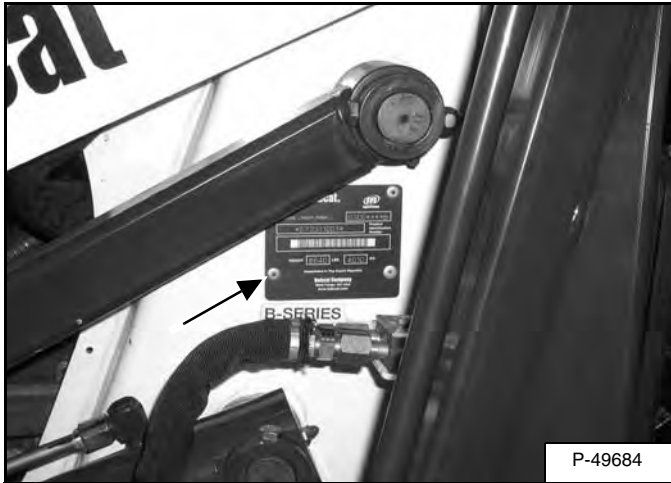

The loader backhoe serial number plate is located under the loader lift arm on the left side [Figure 1].


Explanation of loader Serial Number:

XXXX	XXXXX
Model 1.-Model/ Engine Combination	Model 2.-Production Sequence (Series)

1. The four digit Model/Engine Combination Module number identifies the model number and engine combination.
2. The five digit Production Sequence Number identifies the order which the loader is produced.

Engine Serial Number

Figure 2

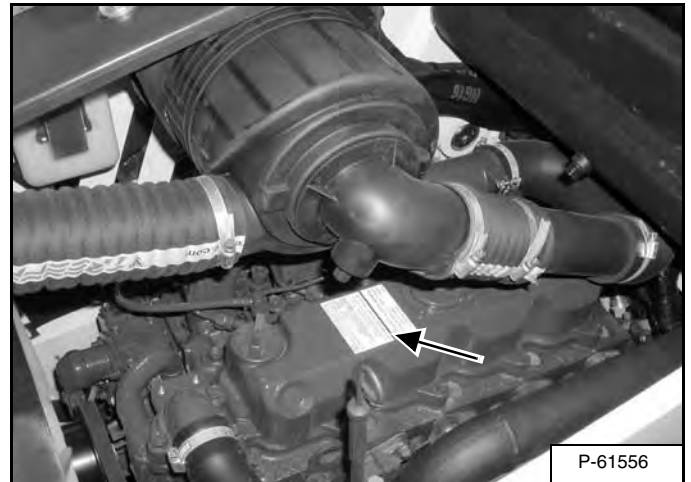

The engine serial number is located on the valve cover at the front of the engine [Figure 2].


DELIVERY REPORT

Figure 3

The diagram shows a form layout for a delivery report. It includes a title 'DELIVERY REPORT' at the top right, a 'WARNING' section, and various text entry areas represented by horizontal lines. A reference number 'B-16315' is located in the bottom right corner of the form area.

The Delivery Report must be filled out by the dealer and signed by the owner or operator when the Bobcat loader backhoe is delivered. An explanation of the form must be given to the owner. Make sure it is filled out completely [Figure 3].

LOADER BACKHOE IDENTIFICATION

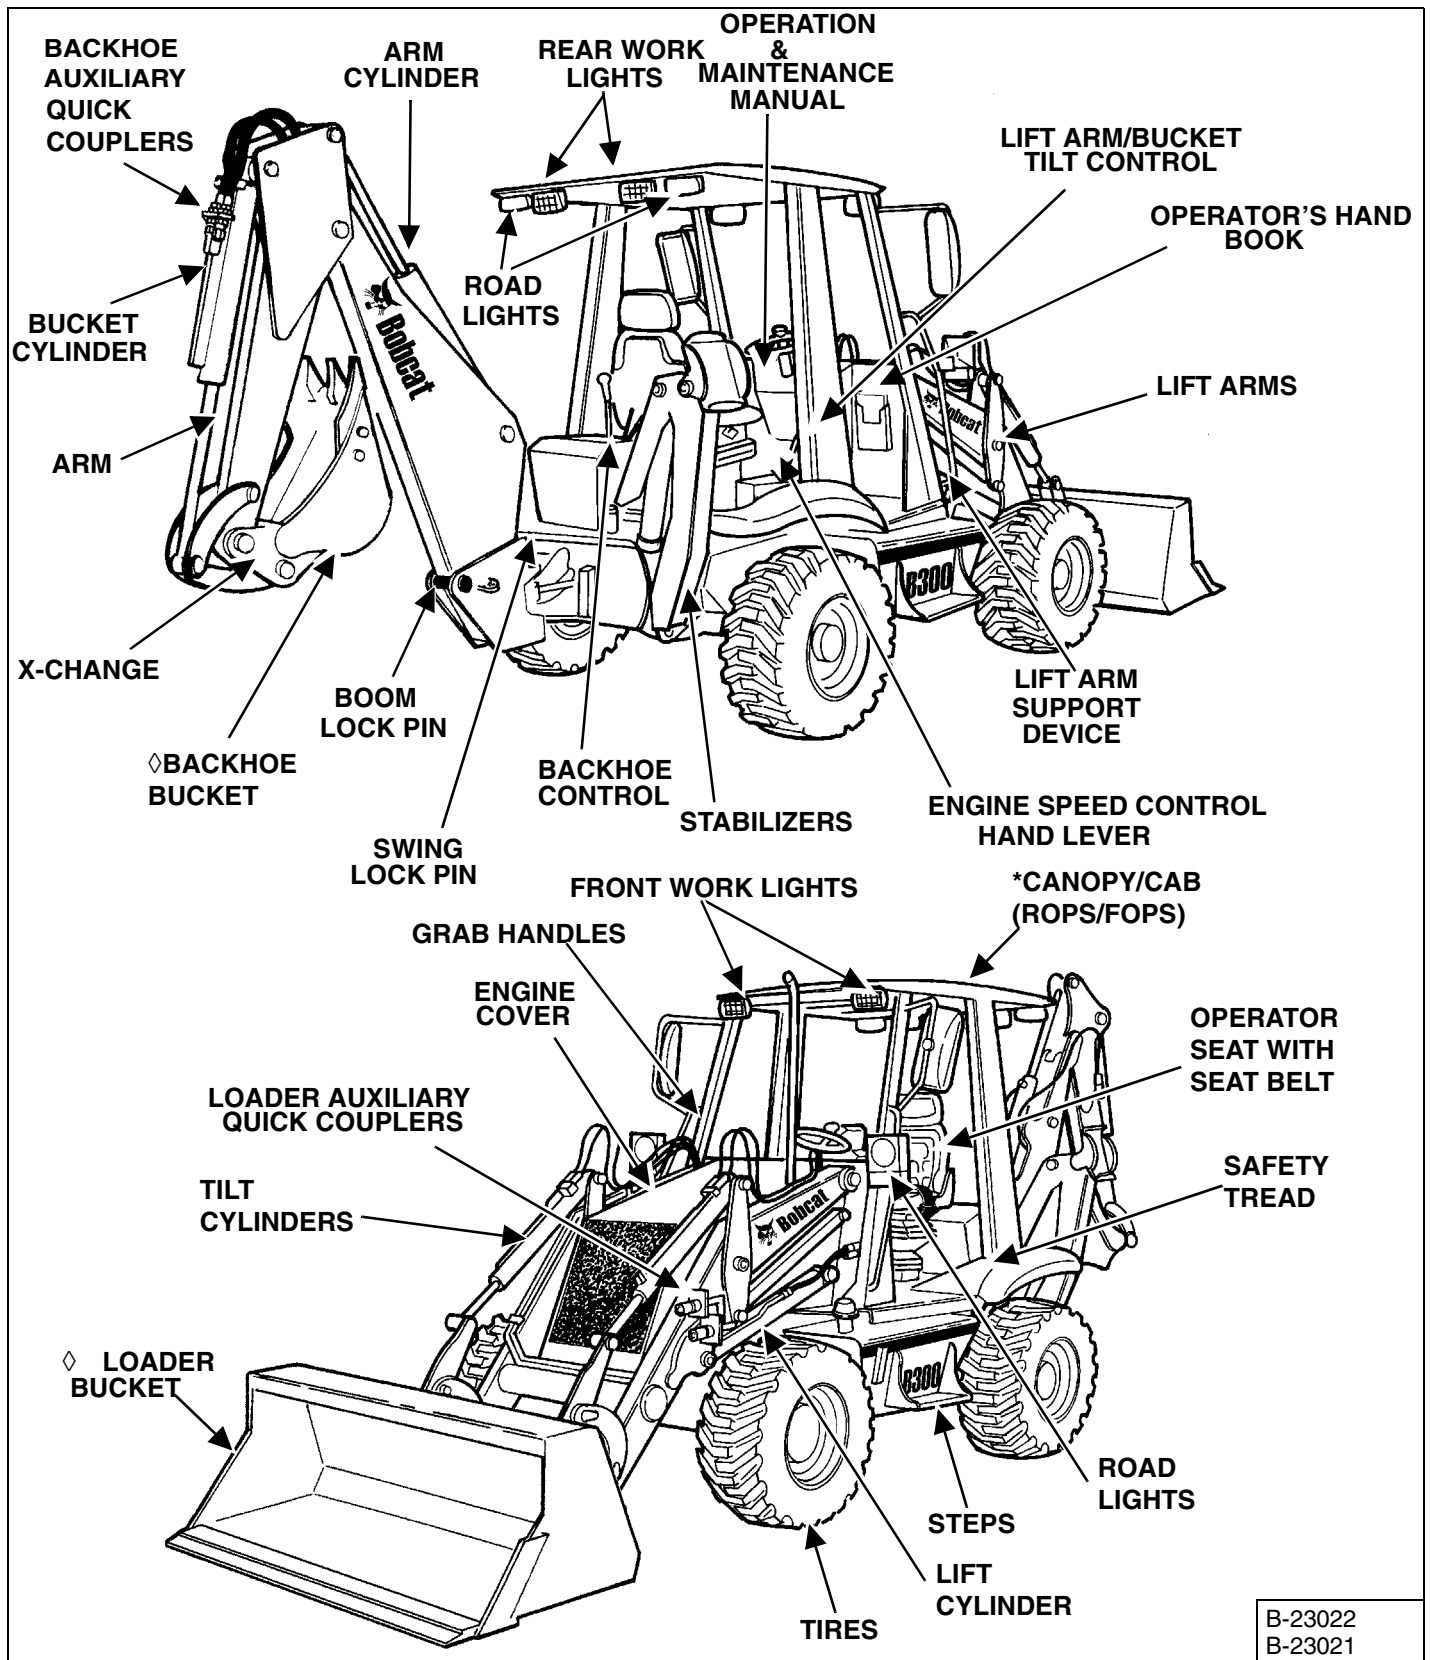

◇ BUCKET - Several different buckets and other attachments are available for the Bobcat loader backhoe.
 * Roll Over Protective Structure (ROPS) per ISO 3471 and Falling Object Protective Structure (FOPS) per ISO 3449, Level I and Level II.



Bobcat®

SAFETY AND MAINTENANCE

AIR CLEANER SERVICE 10-80-1
 Replacing The Filter. 10-80-1

ALTERNATOR BELT 10-160-1
 Adjusting The Alternator Belt 10-160-1

APPROVED LIFT ARM SUPPORT DEVICE 10-20-1
 Installing The Approved Lift Arm Support Device 10-20-1
 Removing The Approved Lift Arm Support Device 10-20-2

AXLES (FRONT AND REAR) 10-130-1
 Checking Oil Level (Front Axle) 10-130-2
 Checking Oil Level (Planetary Carrier) 10-130-1
 Checking Oil Level (Rear Axle) 10-130-2
 Draining Oil (Front Axle) 10-130-2
 Draining Oil (Planetary Carrier) 10-130-1
 Draining Oil (Rear Axle) 10-130-2

AXLE TOE-IN 10-60-1
 Procedure 10-60-1

BOB-TACH HAND LEVER 10-150-1
 Inspection And Maintenance 10-150-1

BOOM LOCK PIN 10-140-1
 Engaging And Disengaging The Pin 10-140-1

ENGINE COOLING SYSTEM 10-90-1
 Checking Coolant Level 10-90-1
 Cleaning The Cooling System 10-90-1
 Coolant Replacement 10-90-1

ENGINE COVER. 10-30-1

ENGINE LUBRICATION SYSTEM 10-110-1
 Checking Engine Oil 10-110-1
 Oil Chart. 10-110-1
 Replacing The Oil And Filter 10-110-2

FUEL SYSTEM 10-100-1
 Filling The Fuel Tank 10-100-1
 Fuel Filter. 10-100-1
 Fuel Specifications. 10-100-1
 Removing Air From The Fuel System 10-100-3

Continued On Next Page

SAFETY AND MAINTENANCE

HYDRAULIC/HYDROSTATIC SYSTEM	10-120-1
Checking And Adding Fluid	10-120-1
Cleaning The Oil Cooler/Radiator	10-120-3
Replacing Hydraulic Fluid	10-120-6
Replacing Hydraulic/Hydrostatic Filter	10-120-3
LIFTING AND BLOCKING THE LOADER BACKHOE	10-10-1
Procedure	10-10-1
LUBRICATING THE LOADER BACKHOE	10-170-1
SERVICE SCHEDULE	10-70-1
Chart	10-70-1
TIRE MAINTENANCE	10-180-1
Mounting	10-180-1
Tire Pressure	10-180-1
Wheel Nuts	10-180-1
TOWING THE LOADER BACKHOE	10-50-1
Procedure	10-50-1
TRANSPORTING THE LOADER BACKHOE	10-40-1
Procedure	10-40-1

LIFTING AND BLOCKING THE LOADER BACKHOE


Procedure

WARNING

Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.

W-2003-0199

Figure 10-10-1

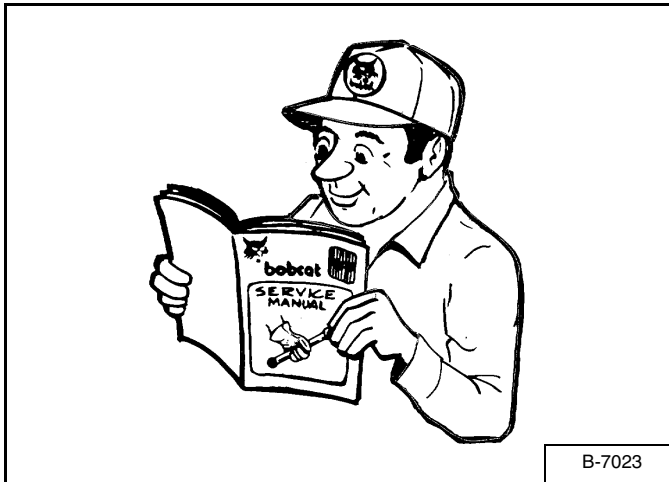

Read the removal and installation, disassembly and assembly, etc., completely to become familiar with the procedure before beginning [Figure 10-10-1].

Always park the loader backhoe on a level surface.


Stop the engine.

WARNING

Put jackstands under the front and rear axle before running the engine for service. Failure to use jackstands can allow the machine to fall or move and cause injury or death.

W-2461-0303

Figure 10-10-2

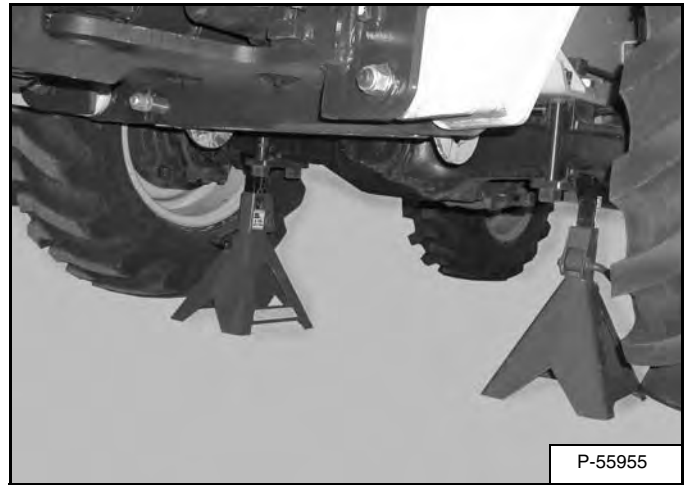

Lift the rear of the loader backhoe and install jackstands [Figure 10-10-2].

Figure 10-10-3



NOTE: Loader lift arms are raised for photo clarity.

Lift the front of the loader backhoe and put jackstands under the axle [Figure 10-10-3].

Note: Make sure the jackstands do not touch the tires.



Bobcat®

APPROVED LIFT ARM SUPPORT DEVICE

Maintenance and service work can be done with the lift arms lowered. If the lift arms are raised, use the following procedures to install and remove the approved lift arm support device:

WARNING

Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598

WARNING


Service lift arm support device if damaged or if parts are missing. Using a damaged lift arm support or with missing parts can cause lift arms to drop causing injury or death.

W-2271-1197

Installing The Approved Lift Arm Support Device

Remove the bucket or attachment from the loader.


Figure 10-20-1

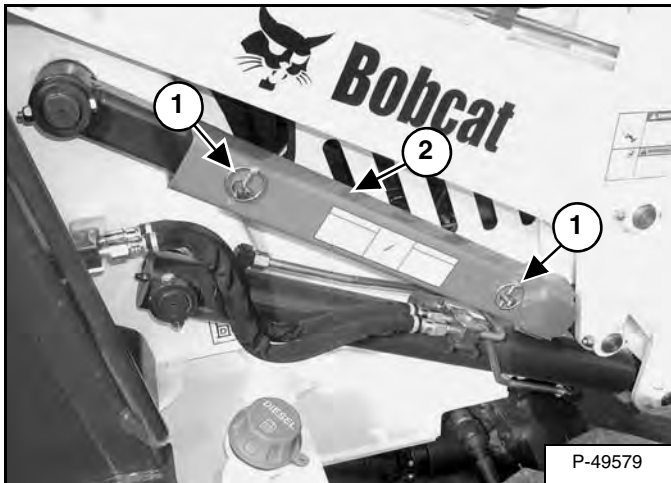

Remove the two pins (Item 1) and remove the approved lift arm support device (Item 2) [Figure 10-20-1] from the storage position.


Start the engine and raise the lift arms fully. Stop the engine.

Figure 10-20-2

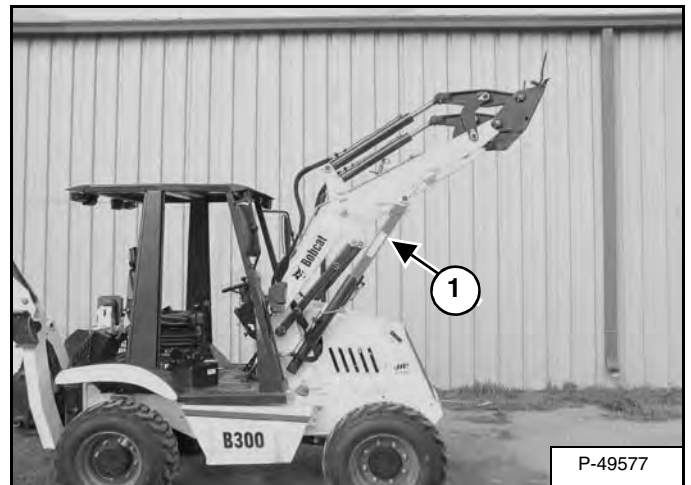

Install the approved lift arm support device (Item 1) [Figure 10-20-2] over the lift cylinder rod.

Figure 10-20-3

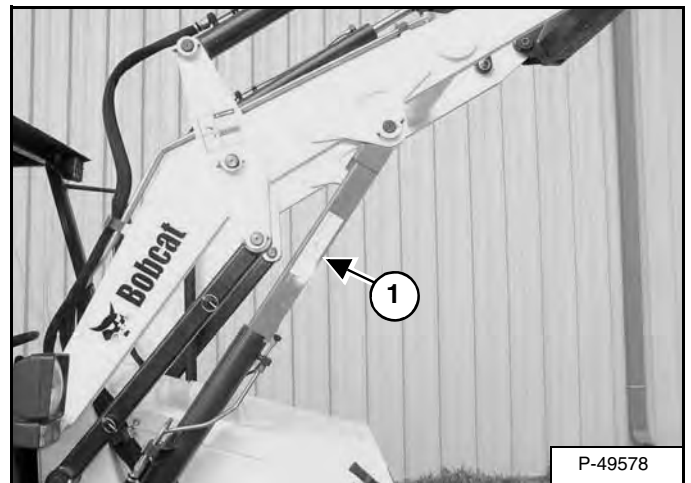


Lower the lift arms slowly until the approved lift support device (Item 1) [Figure 10-20-3] is held securely.

APPROVED LIFT ARM SUPPORT DEVICE (CONT'D)

Removing The Approved Lift Arm Support Device

Figure 10-20-4

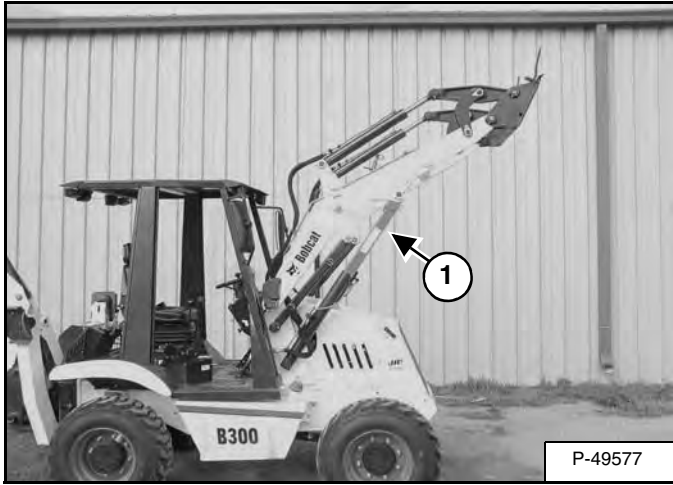


Start the engine and raise the lift arms approximately 2 inches (51 mm). Stop the engine.

Remove the approved lift arm support device (Item 1) [Figure 10-20-4].

Lower the lift arms fully.


Figure 10-20-5

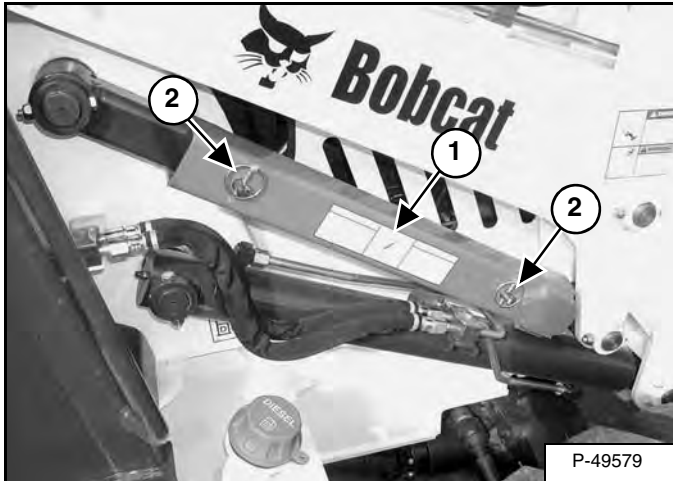

Put the approved lift arm support (Item 1) in the storage position. Install the two retaining pins (Item 2) [Figure 10-20-5].


ENGINE COVER

Figure 10-30-1

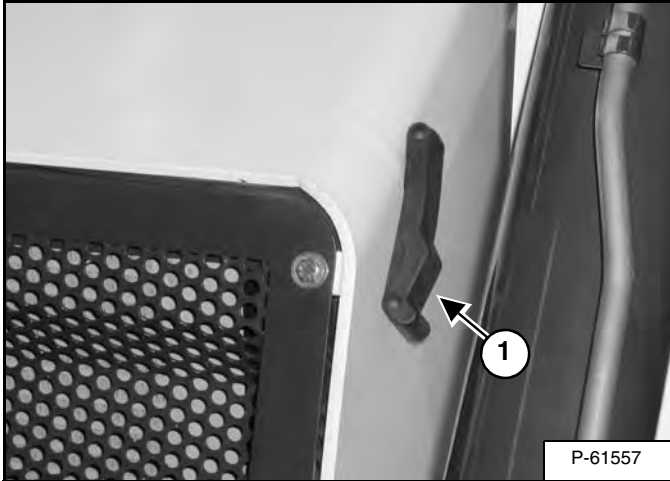


Open the latch (Item 1) [Figure 10-30-1] on each side of the engine cover.

Figure 10-30-2

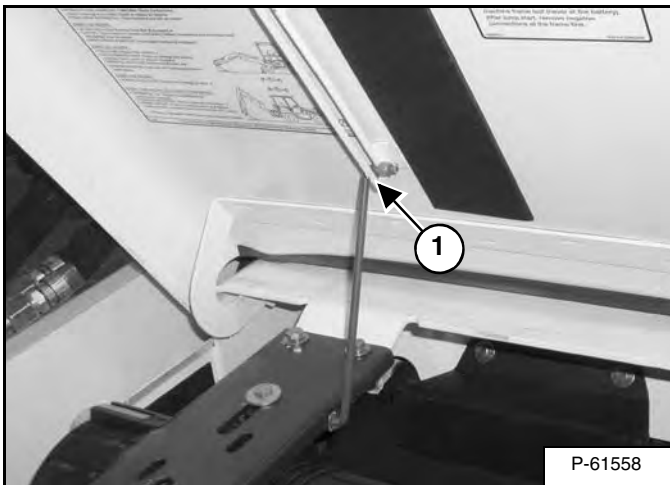

Raise the engine cover until the support rod (Item 1) [Figure 10-30-2] is in the locked position.

Figure 10-30-3

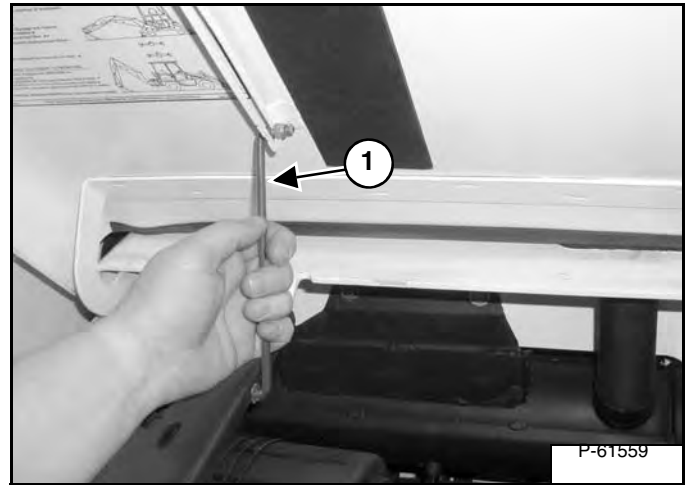

To lower the engine cover, raise the engine cover and pull the support rod (Item 1) [Figure 10-30-3] forward.

Lower the engine cover.

Close the latch (Item 1) [Figure 10-30-1] on each side of the engine cover.



Bobcat®

TRANSPORTING THE LOADER BACKHOE

Procedure



Adequately designed ramps of sufficient strength are needed to support the weight of the machine when loading onto a transport vehicle. Wood ramps can break and cause personal injury.

W-2058-0494

Be sure the transport and towing vehicles are of adequate size and capacity. (See LOADER SPECIFICATIONS on Page SPEC-10-1.)

Figure 10-40-1



The rear of the trailer must be blocked or supported (Item 1) [Figure 10-40-1] when loading or unloading the loader backhoe to prevent the front end of the trailer from raising up.

Use the following procedure to secure the loader backhoe to the transport vehicle to prevent the loader backhoe from moving during sudden stops or when going up or down slopes.

- Lower the loader bucket.
- Lower the backhoe bucket.
- Place the Travel Direction Control Lever in neutral.
- Stop the engine.

TRANSPORTING THE LOADER BACKHOE (CONT'D)

Procedure (Cont'd)

Figure 10-40-2



- Install chains at the rear of the machine [Figure 10-40-2], front of the machine [Figure 10-40-3] and at the backhoe [Figure 10-40-4].
- Fasten each end of the chain to the transport vehicle.

NOTE: For height restrictions the boom lock pin and swing lock pin must not be engaged when transporting the loader backhoe on a trailer. The backhoe boom must be lowered onto the trailer bed and chained

Figure 10-40-3


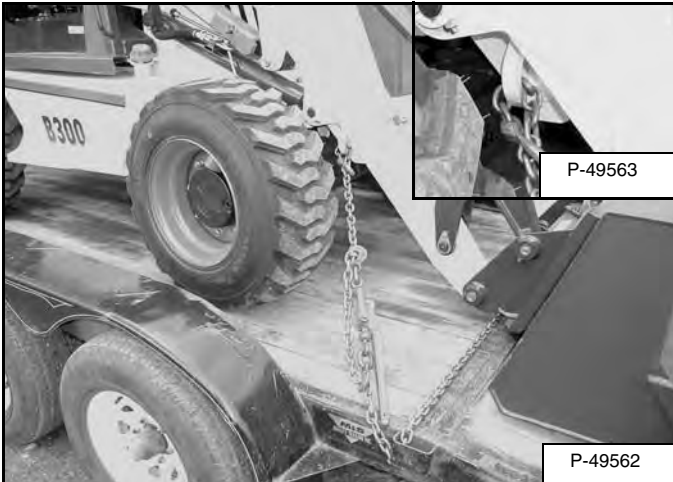


Figure 10-40-4

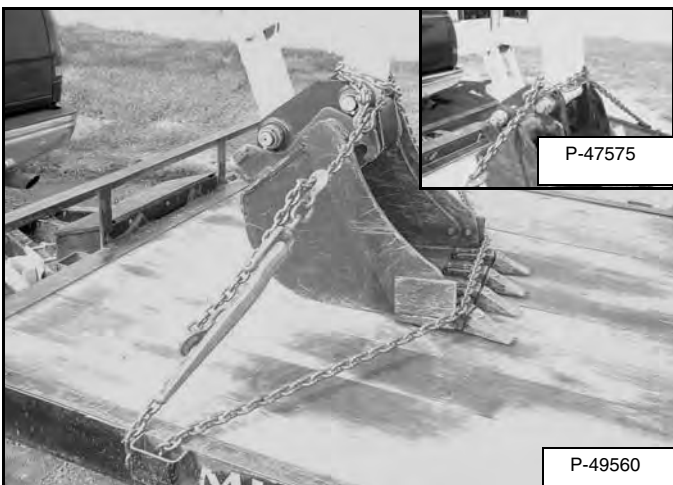


TOWING THE LOADER BACKHOE

Procedure


Place blocks in front and behind rear wheels.

Figure 10-50-1

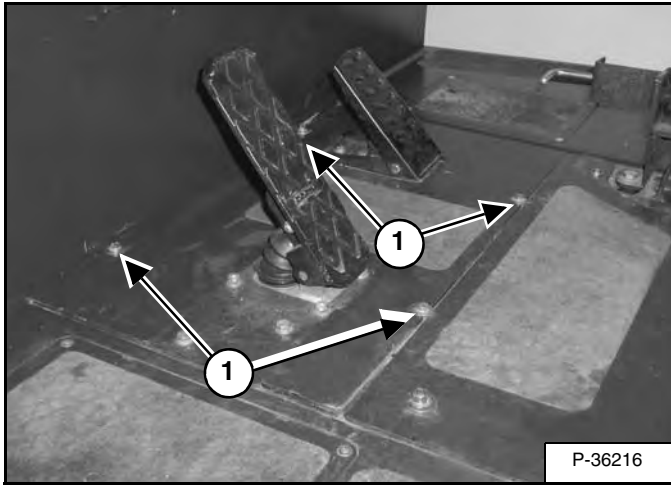


Remove the four mounting bolts (Item 1) [Figure 10-50-1].

Figure 10-50-2

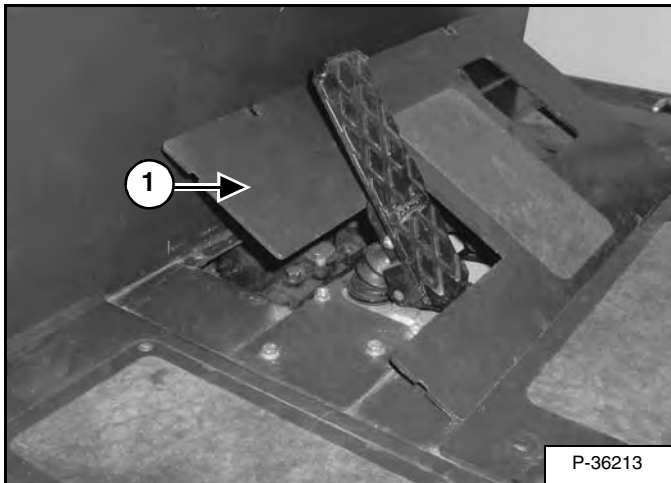


Remove the cover (Item 1) [Figure 10-50-2].

Figure 10-50-3

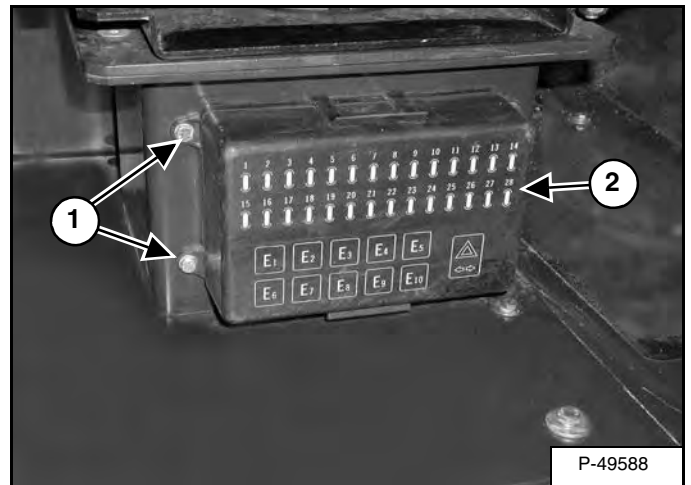

Remove the four bolts (Item 1) and remove the fuse box assembly (Item 2) [Figure 10-50-3].

Figure 10-50-4

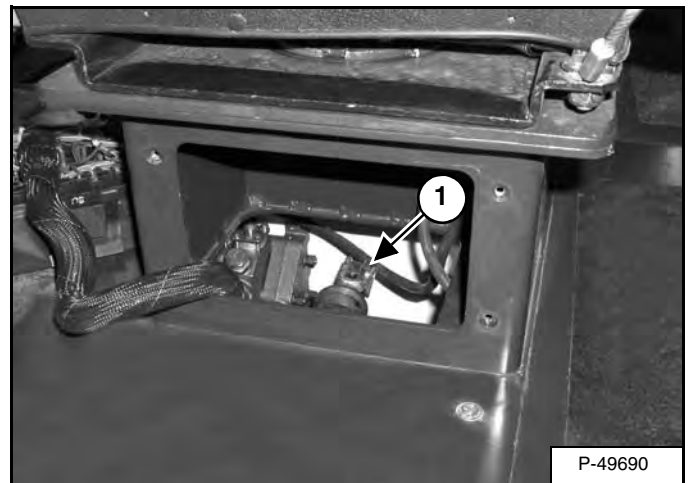


Locate the brake cylinder linkage (Item 1) [Figure 10-50-4] inside the seat housing above the rear axle.

TOWING THE LOADER BACKHOE (CONT'D)


Procedure (Cont'd)

Figure 10-50-5

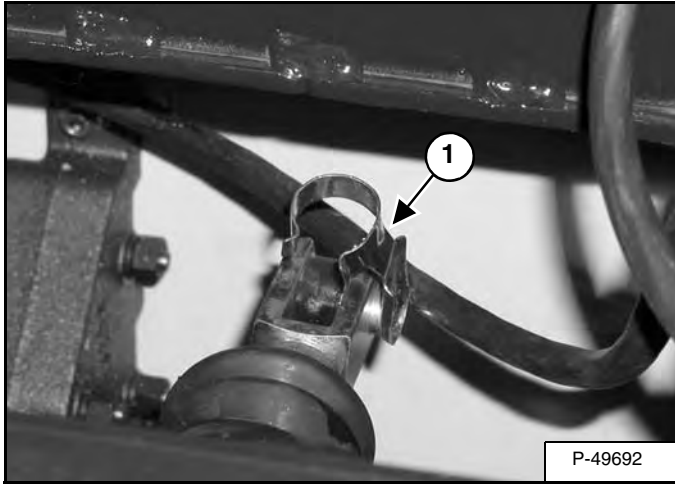

Rotate the pin (Item 1) [Figure 10-50-5] up and remove from brake cylinder.

Figure 10-50-6

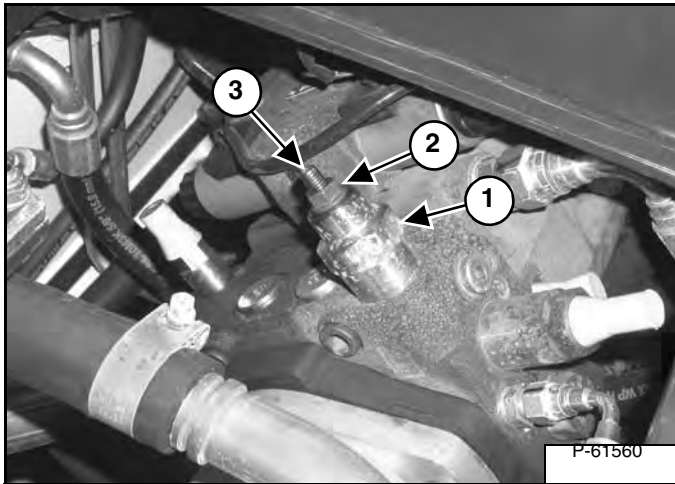


Locate the tow valve (Item 1) [Figure 10-50-6] on the top of the hydrostatic pump.

Loosen the nut (Item 2) [Figure 10-50-6].

Turn the screw (Item 3) [Figure 10-50-6] out exactly four turns.

Figure 10-50-7

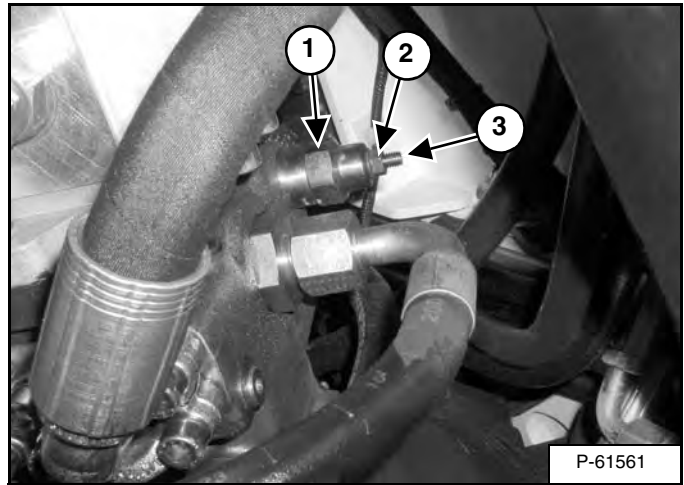

Locate the tow valve (Item 1) [Figure 10-50-7] on the bottom side of the hydrostatic pump.

Loosen the nut (Item 2) [Figure 10-50-7].

Turn the screw (Item 3) [Figure 10-50-7] out exactly four turns.

To prevent damage to the loader backhoe hydrostatic system, the loader backhoe must be towed only a short distance at a low speed. (Example: Moving the loader backhoe onto a transport vehicle.)

The towing chain (or cable) must be rated at 1-1/2 times the weight of the loader. (See LOADER SPECIFICATIONS on Page SPEC-10-1.)

NOTE: Be sure to retighten the tow valves and connect the parking brake linkage before operating the loader backhoe after towing.

AXLE TOE-IN

Procedure


Raise the lift arms and install the approved lift arm support device. (See Installing The Approved Lift Arm Support Device on Page 10-20-1.)



Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598

Figure 10-60-1

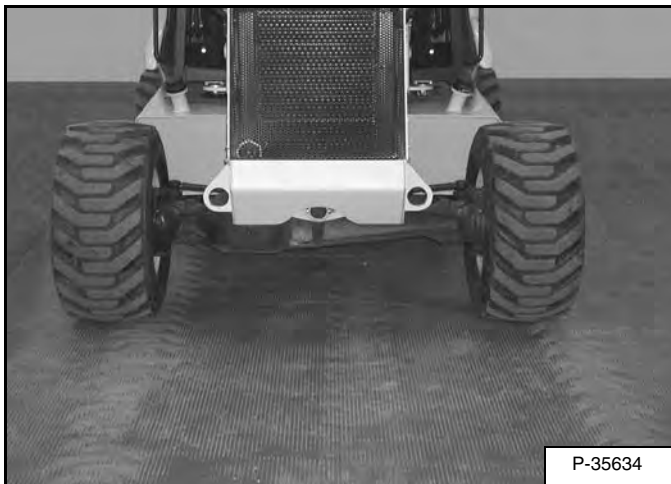

The front axle and rear axle toe-in adjustment procedure are the same. The front axle toe-in procedure is shown.


Turn the steering wheel until the front wheels are positioned as shown [Figure 10-60-1].

Figure 10-60-2



Measure the exposed part of the cylinder rod on each side of the steering cylinder housing making sure they are the same length [Figure 10-60-2].

Figure 10-60-3

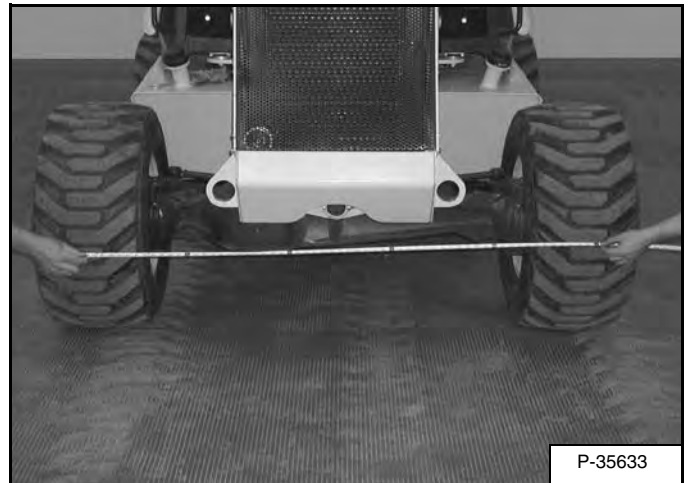


Measure the distance between the center lines on the front of the tires and compare it to the measurement taken from the center lines on the backside of the tires [Figure 10-60-3]. The measurement must be equal.

AXLE TOE-IN (CONT'D)

Procedure (Cont'd)

Figure 10-60-4

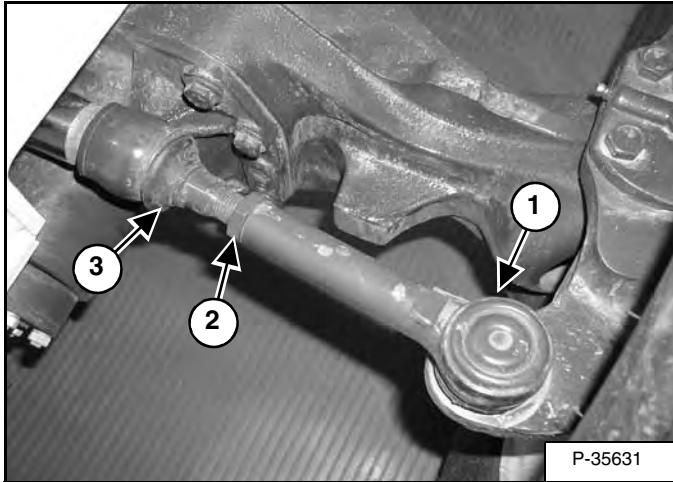


If measurement is not the same, adjust both tie rod ends (Item 1) by loosening both jam nuts (Item 2), loosen or tighten the track rod (Item 3) [Figure 10-60-4] of both tie rods until the measurement is the same.

SERVICE SCHEDULE

Chart

Maintenance work must be done at regular intervals. Failure to do so will result in excessive wear and early failures. The service schedule is a guide for correct maintenance of the Bobcat Loader Backhoe.

 WARNING	<p>Instructions are necessary before operating or servicing machine. Read and understand the Operation & Maintenance Manual, Operator's Handbook and signs (decals) on machine. Follow warnings and instructions in the manuals when making repairs, adjustments or servicing. Check for correct function after adjustments, repairs or service. Untrained operators and failure to follow instructions can cause injury or death.</p> <p style="text-align: right;">W-2003-0199</p>
--	---

SERVICE SCHEDULE		HOURS					
		8-10	50	100	250	500	● 1000
ITEM	SERVICE REQUIRED						
Engine Oil	Check the engine oil level and add as needed. Do not overfill.						
Hydraulic Fluid	Check hydraulic fluid level and add as needed.						
Fuel Filter	Remove trapped water (if equipped with a water separator).						
Brake Fluid	Check brake fluid level and add as needed.						
Engine Air System	Check condition indicator and empty dust cup as needed. Check for leaks and damaged components.						
Engine Cooling System	Clean debris from oil cooler, radiator & grill. Check coolant level.						
Lift Arms, Cyl., Bob-Tach Pivot Pins, Wedges, Etc.	Lubricate all machinery pivots with multi-purpose lithium based grease. See illustrations.						
X-Change™ System	Check for loose or damaged parts. Torque X-Change™ bolts to 130 ft.-lb. (177 N•m) (If Equipped with Bolt On X-Change)						
Tires	Check for wear, damage and ensure proper size and inflation pressure.						
Seat Belt	Check the condition of seat belt and mounting hardware. Repair or replace as needed.						
Mirrors	Clean and adjust as necessary						
Steering valve	Check and adjust wheel alignment as required.						
Safety Signs and Safety Treads	Check for and replace any damaged and/or signs (decals) and safety treads.						
Operator Canopy/Cab (ROPS/FOPS)	Check the fastening bolts, washers and nuts. Check the condition of the canopy/cab.						
Indicators and Lights	Check for correct operation of all indicators and lights.						
Parking Brake	Check operation and have dealer adjust if required.						
PRESS TO DRIVE System	Check for proper function.						
Backup Alarm	Check operation. Alarm must sound when moving in the reverse direction. Repair or replace as required.						
Operator Area	Clean brake pedal, engine speed control pedal and footrest area.						
General	Repair broken or loose parts. Check engine area and keep clean of flammable material.						
Hydraulic Fluid, Hoses and Tubelines	Check fluid level & add as needed. Check for damage and leaks. Repair or replace as needed.						
Front & Rear Differential	Check oil level. Add oil as needed.						
Wheel Nuts	Check for loose wheel nuts and tighten to 140 ft.-lb. (190 N•m) torque.	†					
Inline Fuel Filter	Replace inline filter (if equipped).		■				
Battery	Check battery for damage. Check cables, connections and electrolyte level. Add distilled water as needed.						
Spark Arrestor Muffler	Empty the spark chamber (if equipped).						
Fan/Alternator Belt	Check for damage and adjust tension as needed.		■				
Fuel Filter	Replace filter element.						
Steering King Pins	Lubricate with multi-purpose lithium based grease.						
Engine Oil and Filter	Replace oil & filter. Use CD or better grade oil and Bobcat filter.		■				
Hydraulic Oil Filter	Replace the filter element.		■				

† Check wheel nut torque every 8 hours for the first 24 hours.

● Or every 12 months.

■ Service at the first 50 hours, then as scheduled.



Bobcat®

AIR CLEANER SERVICE

Replacing The Filter

OUTER FILTER

See SERVICE SCHEDULE on Page 10-70-1 for the correct service interval.

Raise the loader lift arms and install the Approved Lift Arm Support Device. (See Installing The Approved Lift Arm Support Device on Page 10-20-1).



Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598


Remove the engine side cover from the right side. (See Removal And Installation on Page 50-60-1.)

Figure 10-80-1




Slide the fastener (Item 1) [Figure 10-80-1] out.

Figure 10-80-2

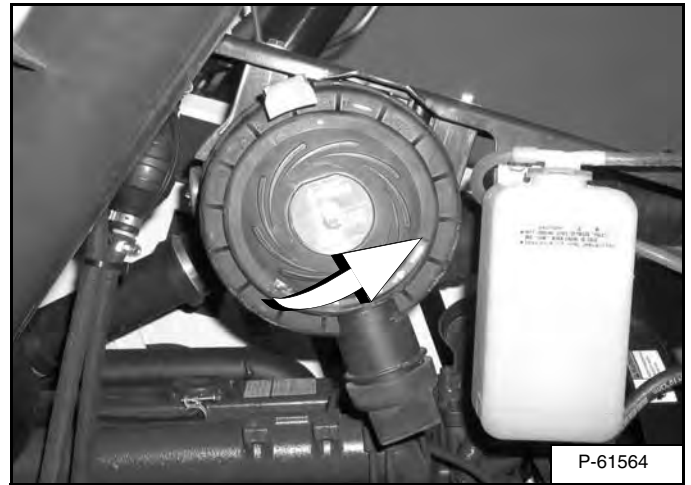

Rotate the air cleaner cover counterclockwise [Figure 10-80-2].

Figure 10-80-3

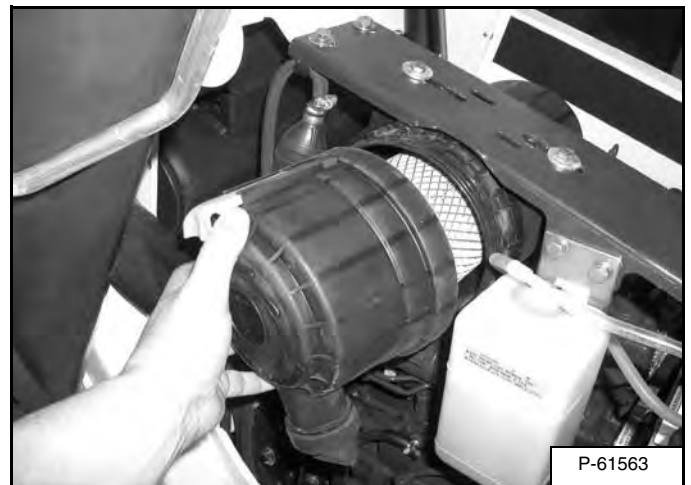

Remove the air cleaner cover [Figure 10-80-3].

AIR CLEANER SERVICE (CONT'D)


Replacing The Filter (Cont'd)

Figure 10-80-4



Remove the filter [Figure 10-80-4].

Figure 10-80-5

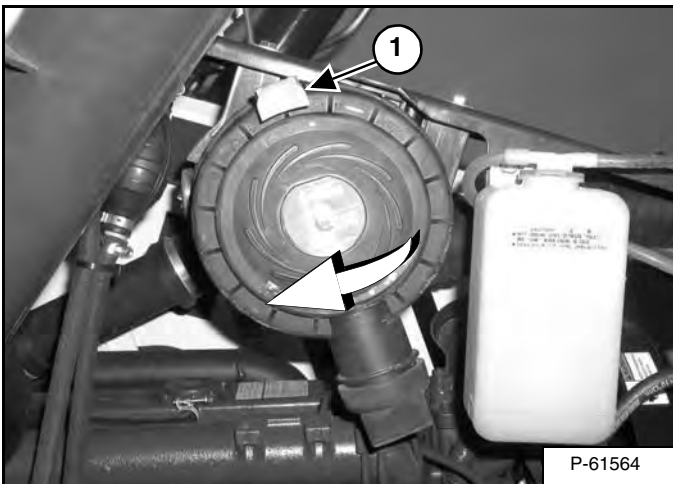


Rotate the cover clockwise and slide the fastener (Item 1) [Figure 10-80-5] in.

INNER FILTER

Remove the outer filter.

NOTE: Make sure all sealing surfaces are free of dirt and debris.

Figure 10-80-6

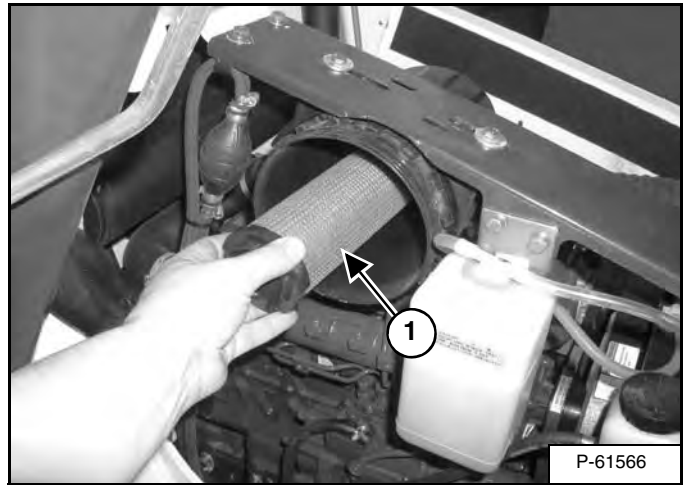

Remove the inner filter (Item 1) [Figure 10-80-6] and install new filter.

Install the outer filter.

Install the air cleaner cover.


ENGINE COOLING SYSTEM

Check the coolant level every day before starting the engine for the work shift to prevent overheating, loss of performance or engine damage.

NOTE: Allow the cooling system and engine to cool before servicing the cooling system.

Cleaning The Cooling System

Figure 10-90-1

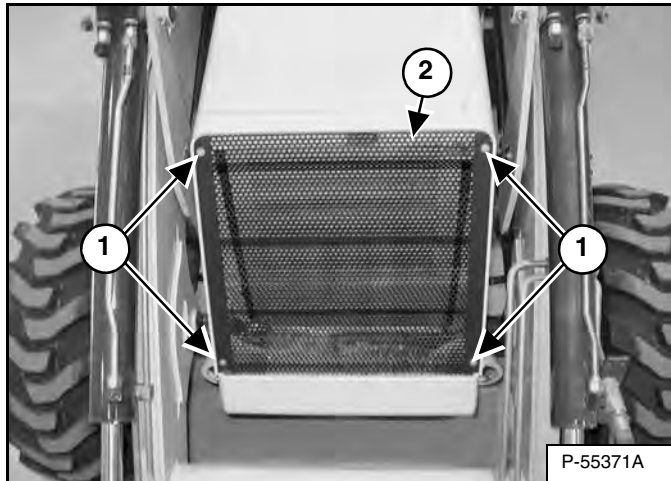


Use low air pressure or water pressure to clean the radiator/oil cooler. Be careful not to damage the radiator fins while cleaning.

If necessary, remove the four bolts (Item 1) and remove the grill screen (Item 2) [Figure 10-90-1] for easier access for cleaning the radiator. Reinstall the grill screen when finished.

Checking Coolant Level

Figure 10-90-2

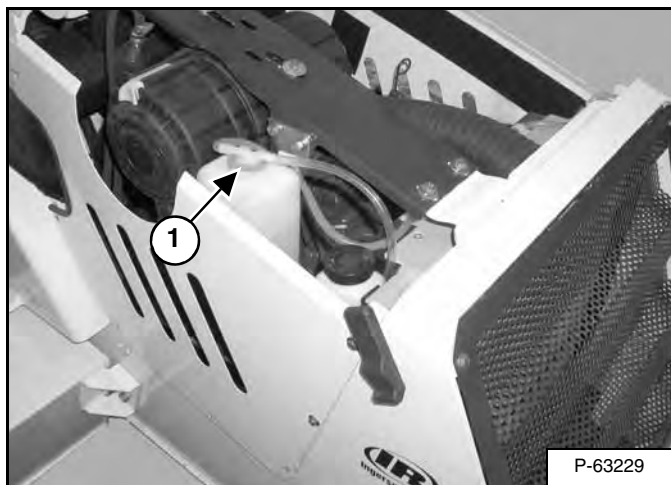

Open the engine cover. (See ENGINE COVER on Page 10-30-1.)

Check the coolant level in the coolant recovery tank (Item 1) [Figure 10-90-2].

The coolant level must be between the full and low marks on the side of the coolant recovery tank when the engine is cold.

NOTE: The loader backhoe is factory filled with Propylene glycol. Do Not mix propylene glycol with ethylene glycol. Always mix coolant in a separate container before adding to the coolant system.

Coolant Replacement

See SERVICE SCHEDULE on Page 10-70-1 for the correct service interval.

! WARNING

AVOID BURNS

Do not remove radiator cap when the engine is hot. You can be seriously burned.

I-2066-0395

! WARNING

Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598

Raise the lift arms and install an Approved Lift Arm Support Device. (See APPROVED LIFT ARM SUPPORT DEVICE on Page 10-20-1.)


Stop the engine, open the engine cover.

Remove the engine side cover from the right side. (See Removal And Installation on Page 50-60-1.)

ENGINE COOLING SYSTEM (CONT'D)

Coolant Replacement (Cont'd)

Figure 10-90-3

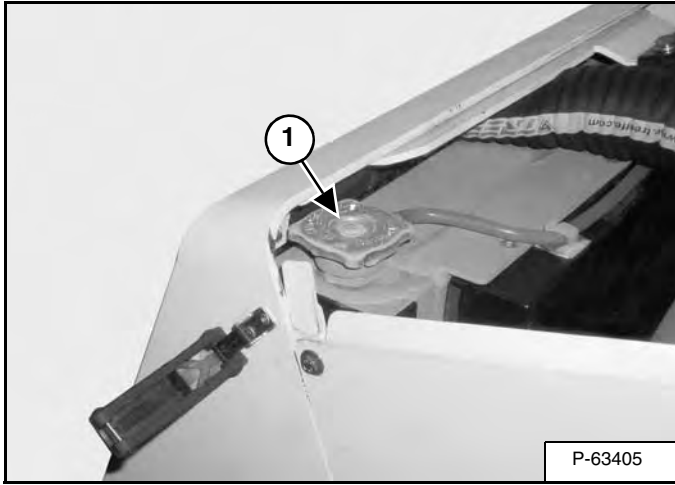

When the engine is cool, loosen and remove the radiator cap (Item 1) [Figure 10-90-3].


Remove the right engine side cover.

Figure 10-90-4



Open the radiator drain valve (Item 1) [Figure 10-90-4] at the right side of the radiator. Drain the coolant into a container.

Figure 10-90-5

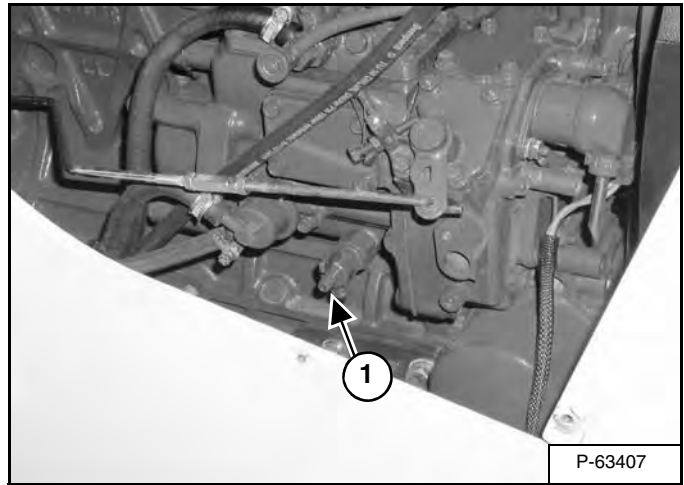

Open the engine block drain valve (Item 1) [Figure 10-90-5] and drain the coolant into a container.

Recycle or dispose of coolant in an environmentally safe manner.

Mix the coolant in a separate container. (See Capacities on Page SPEC-10-4.)

NOTE: The loader backhoe is factory filled with Propylene glycol. DO NOT mix propylene glycol with ethylene glycol.

Premixed the coolant; 47% water and 53% Propylene glycol.

One gallon and one pint (4,3 L) of Propylene glycol mixed with one gallon (3,8 L) of water is the correct mixture of coolant to provide a -34° F (-37° C) freeze protection.

Use a refractometer to check the condition of Propylene glycol in your cooling system.

Fill the radiator with the premixed coolant until it is full. Install the radiator cap.

Fill the coolant recovery tank to the full mark.

Run the engine at idle speed for about 5-10 minutes to remove the air from the cooling system.

Stop the engine. Check the coolant level in the coolant recovery tank and add coolant as needed.

FUEL SYSTEM

Fuel Specifications

Use only clean, high quality diesel fuel, Grade No. 2 or Grade No. 1.

The following is one suggested blending guideline which should prevent fuel gelling during freezing temperature:

Temp. F° (C°)	No. 2	No. 1
Above +15° (-9°)	100%	0%
Down to -20° (-29°)	50%	50%
Below -20° (-29°)	0%	100%

Contact your fuel supplier for local recommendations.


Filling The Fuel Tank



Stop and cool the engine before adding fuel. **NO SMOKING!** Failure to obey warnings can cause an explosion or fire.


W-2063-0887

Figure 10-100-1

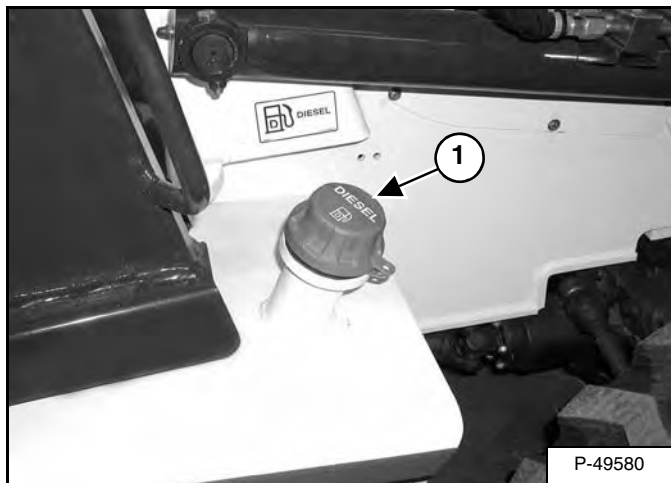

Remove the fuel fill cap (Item 1) [Figure 10-100-1].

Figure 10-100-2

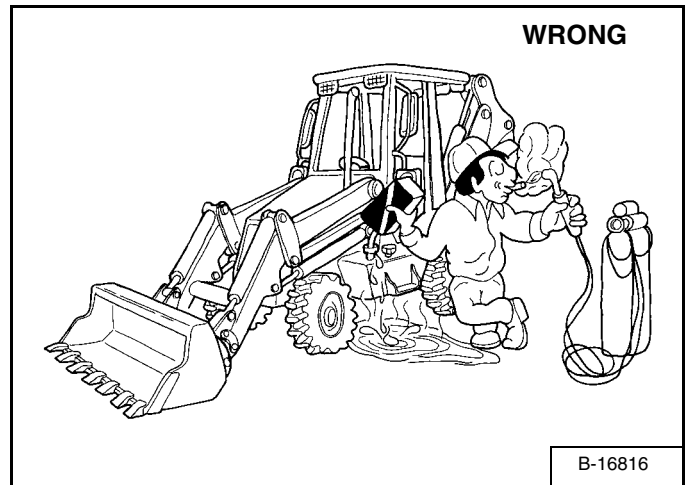

Use a clean, approved safety container to add fuel of the correct specifications. Add fuel only in an area that has free movement of air and no open flames or sparks. **NO SMOKING!** [Figure 10-100-2]

Install and tighten the fuel fill cap (Item 1) [Figure 10-100-1].

Fuel Filter

See SERVICE SCHEDULE on Page 10-70-1 for the correct service interval.

Raise the lift arms and install an approved lift arm support device. (See APPROVED LIFT ARM SUPPORT DEVICE on Page 10-20-1.)



Never work on a machine with the lift arms up unless the lift arms are secured by an approved lift arm support device. Failure to use an approved lift arm support device can allow the lift arms or attachment to fall and cause injury or death.

W-2059-0598

Open the engine cover. (See ENGINE COVER on Page 10-30-1.)


Remove the seven bolts and remove the right side engine cover.

FUEL SYSTEM (CONT'D)

Fuel Filter (Cont'd)

Replacing The Spin On Element

Figure 10-100-3

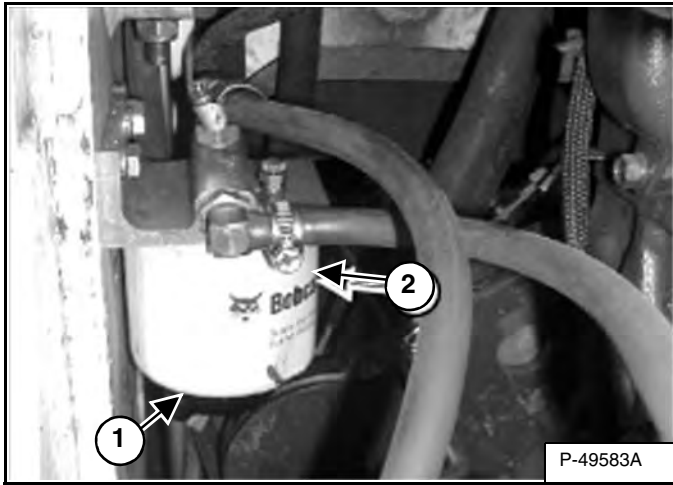

Loosen the drain (Item 1) [Figure 10-100-3] at the bottom of the filter element to remove water from the filter.

Replacing The Spin On Element

Remove the filter element (Item 2) [Figure 10-100-3].

Clean the area around the filter housing. Put clean oil on the seal of the new filter element. Install the fuel filter, and hand tighten.

Remove the air from the fuel system. (See Removing Air From The Fuel System on Page 10-100-3.)


WARNING

Always clean up spilled fuel or oil. Keep heat, flames, sparks or lighted tobacco away from fuel and oil. Failure to use care around combustibles can cause explosion or fire which can result in injury or death.

W-2103-1285


Replacing The In-line Fuel Filter

Figure 10-100-4

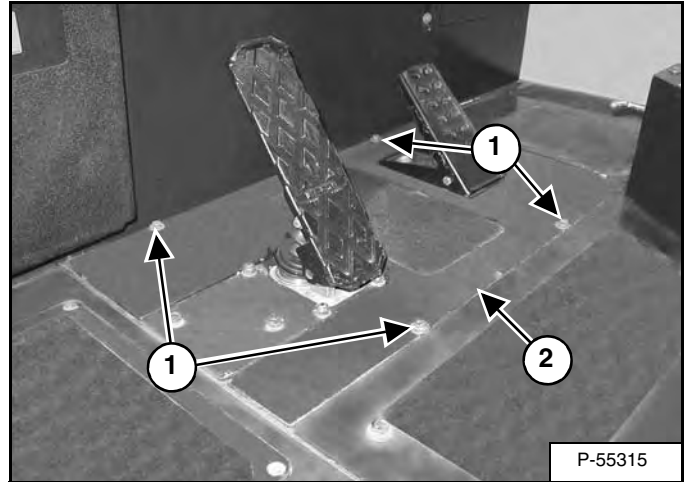

Remove the four bolts (Item 1) and remove the front floor plate (Item 2) [Figure 10-100-4].

Figure 10-100-5

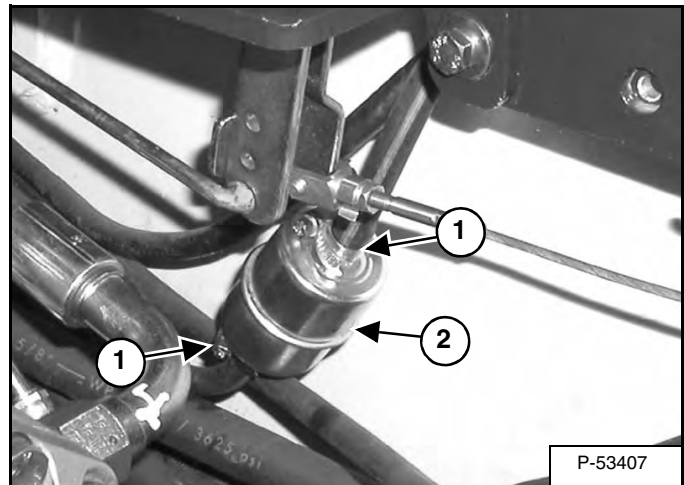

Loosen the two hose clamps (Item 1) and remove the in-line fuel filter (Item 2) [Figure 10-100-5].

Install a new in-line fuel filter.

Tighten the two hose clamps.

Reinstall the front floor panel.

Remove the air from the fuel system (See Removing Air From The Fuel System on Page 10-100-3.)

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com