

**NEW HOLLAND**

**18HB**

**21HB**

**25HB**

**30HB**

**36HB**

**SERVICE  
MANUAL**



**SERVICE**

# **18HB, 21HB, 25HB, 30HB, 36HB SERVICE MANUAL CONTENTS**

**SECTION 00 - GENERAL INFORMATION**

**SECTION 35 - HYDRAULICS**

**SECTION 55 - ELECTRICAL**

**SECTION 58 - ATTACHMENTS**

**SECTION 90 - DECALS**

The sections used through out all New Holland product Service manuals may not be used for each product. Each Service manual will be made up of one or several books. Each book will be labeled as to which sections are in the overall Service manual and which sections are in each book.

The sections listed above are the sections utilized for the 18HB, 21HB, 25HB, 30HB and 36HB.

---

# COMPLETE CONTENTS

## SECTION 00 - GENERAL INFORMATION

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
	Precautionary Statements .....	2
	Safety .....	3
	General Safety .....	4
	Operating and Maintenance Safety .....	5
	Hydraulic Safety .....	5
	Welding Safety .....	5
	Before Transporting .....	6
	Transport Safety .....	6
	Transporting Checks .....	7
	Towing Restrictions on Public Roads .....	7
	Windrower Mounting .....	7
	Windrower Header .....	8
	Principal Components .....	8
	Product Identification Number (PIN) .....	9
	Ballast System .....	9
	Single Swath .....	10
	Double Swath .....	11
	HB Series Swather Delivery Kits .....	12
	Single Swath Delivery .....	12
	Double Swath Delivery .....	12
	Header Hydraulic Drive System .....	13
	Ecology and the Environment .....	14
	Helpful Hints .....	14
	International Symbols .....	15
	Minimum Hardware Tightening Torques .....	16
	Installation of Adjustable Fittings in Straight Thread O-ring Bosses .....	18
	Standard Torque Data for Hydraulic Tubes and Fittings .....	18
	Pipe Thread Fitting Torque .....	19
	Installation of O-ring Flat Faced Fittings .....	19
	Hydraulic Fitting Torque .....	20

---

## SECTION 00 - GENERAL INFORMATION

### Chapter 2 - Specifications

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Specifications .....	2
	Headers .....	2
	Options .....	2

## SECTION 35 - HYDRAULICS

### Chapter 1 - Draper Drive

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Draper Drive .....	2
	Hydraulic Schematic Symbols .....	2
	Fore and Aft .....	5
	Hydraulic Schematic Symbols .....	5
	Knife Drive .....	8
	Hydraulic Schematic Symbols .....	8
	Reel Drive .....	11
	Hydraulic Schematic Symbols .....	11
	Reel Lift .....	14
	Hydraulic Schematic Symbols .....	14
	Upper Tube Hydraulics .....	18
	Hydraulic Schematic Symbols .....	18

---

## SECTION 35 - HYDRAULICS

### Chapter 2 - Windrower Headers

#### CONTENTS

Section	Description	Page
	Single Reel Lift Circuit .....	2
	Double Reel Lift Circuit .....	2
	Single Reel Lift 36 Foot .....	2

## SECTION 35 - HYDRAULICS

### Chapter 3 - Schematics and Troubleshooting

#### CONTENTS

Section	Description	Page
	Troubleshooting .....	2
	Hydraulic Problems .....	2
	Oil Overheating .....	2
	Hydraulic System Tests .....	3
	Relief Valve .....	3
	Knife Circuit .....	3
	High Pressure Readings .....	4
	Draper Circuit Operation and Testing .....	4
	Draper Motor Circuit .....	5
	Reel Motor Circuit .....	5
	Low Pressure Readings .....	5
	Knife Relief Pressure Adjustment .....	5

---

## SECTION 35 - HYDRAULICS

### Chapter 4 - Pumps, Motors and Flow Dividers

#### CONTENTS

Section	Description	Page
	Description of Operation .....	2
	Hydraulic Motors .....	2
	Parker Motor .....	4
	White Motor .....	5
	Eaton Motor .....	6
	White (Roller Stator) Hydraulic Motor Seal Replacement .....	7
	Reverser Motor .....	7
	Removal .....	7
	Disassembly .....	7
	Assembly .....	11
	Hydraulic Manifold Block .....	15
	Removal .....	15
	Disassembly .....	16
	Assembly and Installation .....	16
	Flow Divider .....	17
	Removal .....	17
	Installation .....	18
	Draper Flow Control .....	19
	Removal .....	19
	Installation .....	19
	Cartridge .....	20
	Pressure Vent .....	21
	Removal .....	21
	Disassembly .....	21
	Assembly .....	22
	Installation .....	22

---

# SECTION 35 - HYDRAULICS

## Chapter 5 - Reel Lift

### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation .....	2
	Purging Air From Reel Positioning Systems .....	2
	Bleeding Slave Cylinders .....	2
	Purging Air From Reel Fore/Aft Systems .....	2
	Troubleshooting .....	3
	Troubleshooting Charts .....	3
	Hydraulic Cylinders .....	7
	Overhaul .....	9
	Hydraulic Cylinders - Removal .....	9
	Reel Fore/Aft .....	9
	Reel Lift Master Cylinder .....	9
	Reel Lift Slave Cylinder .....	9
	All Cylinders .....	10
	Disassembly .....	10
	Assembly .....	11
	Hydraulic Cylinders - Installation .....	13
	Reel Fore/Aft .....	13
	Reel Lift Master Cylinder .....	14
	Reel Lift Slave Cylinder .....	14

---

## SECTION 55 - ELECTRICAL

### Chapter 1 - Windrower Headers

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation .....	2
	Electrical System .....	2
	Lights .....	5
	Remote Speed Control .....	6
	Sickle Drive Speed Sensor .....	6
	Sensor To Pulse Wheel Adjustment .....	6
	Automatic Reel Speed Control .....	7

## SECTION 58 - ATTACHMENTS

### Chapter 1 - Drivelines - Knife Drive

#### CONTENTS

<b>Section</b>	<b>Description</b>	<b>Page</b>
	Description of Operation and Overhaul .....	3
	Knife Drive .....	3
	Removal .....	4
	Replacement .....	5
	All Cutting Systems .....	7
	Knife .....	7
	Removal .....	7
	Installation .....	7
	Schumacher Cutting System .....	8
	Guards .....	8
	Sections .....	8
	Replacement .....	8
	New Holland Cutting System .....	9



---

## SECTION 58 - ATTACHMENTS

### Chapter 1 - Drivelines - Knife Drive (Continued)

#### CONTENTS

Section	Description	Page
	Knife Hold-Down Clips .....	9
	Adjustment .....	9
	Replacement .....	9
	Cutter Bar Shimming - NH System .....	10
	All Guards to Left of Center Guard .....	10
	Center Guard .....	10
	All Guards to Right of Center Guard .....	10
	Guards .....	11
	Guard Alignment .....	12
	All Cutting Systems .....	12
	Knife Drive/Knife Head .....	12
	Replacement .....	12
	Schumacher Cutting System Only Knife Head .....	13
	Attachment .....	13
	Connector Bar .....	13
	Attachment .....	13
	Schumacher Overlap Kit .....	14
	Inspection and Replacement .....	14
	New Holland Cutting System Only .....	15
	Connector Bar .....	15
	Installation .....	15
	Knife Head .....	15
	Installation .....	15
	Overlap Tail .....	16
	Installation .....	16
	Draper Splicing .....	17
	Hydraulic Double Swath .....	19

---

## SECTION 58 - ATTACHMENTS

### Chapter 2 - Feeding Components - Draper Decks

#### CONTENTS

Section	Description	Page
	Description of Operation and Overhaul .....	2
	Main Draper Decks .....	3
	Tracking .....	3
	Disassembly .....	5
	Assembly .....	8

## SECTION 90 - DECALS

### Chapter 1 - Decals

#### CONTENTS

Section	Description	Page
	Safety Decals .....	2

## SECTION 00 - GENERAL INFORMATION

### Chapter 1 - General Information

#### CONTENTS

Section	Description	Page
	Precautionary Statements .....	2
	Safety .....	3
	General Safety .....	4
	Operating and Maintenance Safety .....	5
	Hydraulic Safety .....	5
	Welding Safety .....	5
	Before Transporting .....	6
	Transport Safety .....	6
	Transporting Checks .....	7
	Towing Restrictions on Public Roads .....	7
	Windrower Mounting .....	7
	Windrower Header .....	8
	Principal Components .....	8
	Product Identification Number (PIN) .....	9
	Ballast System .....	9
	Single Swath .....	10
	Double Swath .....	11
	HB Series Swather Delivery Kits .....	12
	Single Swath Delivery .....	12
	Double Swath Delivery .....	12
	Header Hydraulic Drive System .....	13
	Ecology and the Environment .....	14
	Helpful Hints .....	14
	International Symbols .....	15
	Minimum Hardware Tightening Torques .....	16
	Installation of Adjustable Fittings in Straight Thread O-ring Bosses .....	18
	Standard Torque Data for Hydraulic Tubes and Fittings .....	18
	Pipe Thread Fitting Torque .....	19
	Installation of O-ring Flat Faced Fittings .....	19
	Hydraulic Fitting Torque .....	20

# PRECAUTIONARY STATEMENTS

## PERSONAL SAFETY

Throughout this manual and on machine decals, you will find precautionary statements (“**DANGER**”, “**WARNING**”, and “**CAUTION**”) followed by specific instructions. These precautions are intended for the personal safety of you and those working with you. Please take the time to read them.

---

 **DANGER** 

---

This word “**DANGER**” indicates an immediate hazardous situation that, if not avoided, will result in death or serious injury. The color associated with Danger is RED.

M1169

---

 **WARNING** 

---

This word “**WARNING**” indicates a potentially hazardous situation that, if not avoided, could result in death or serious injury. The color associated with Warning is ORANGE.

M1170

---

 **CAUTION** 

---

This word “**CAUTION**” indicates a potentially hazardous situation that, if not avoided, may result in minor or moderate injury. It may also be used to alert against unsafe practices. The color associated with Caution is YELLOW.

M1171

---

**FAILURE TO FOLLOW THE “DANGER”, “WARNING”, AND “CAUTION” INSTRUCTIONS MAY RESULT IN DEATH OR SERIOUS BODILY INJURY.**

## MACHINE SAFETY

The precautionary statement (“**NOTICE**”) is followed by specific instructions. This statement is intended for machine safety.

**NOTICE:** The word “**NOTICE**” is used to inform the reader of something he needs to know to prevent minor machine damage if a certain procedure is not followed.

## INFORMATION

**NOTICE:** Instructions used to identify and present supplementary information.

# SAFETY

## PRECAUTIONARY STATEMENTS

A careful operator is the best operator. Most accidents can be avoided by observing certain precautions. To help prevent accidents, read the following precautions before operating this equipment. Equipment should be operated only by those who are responsible and instructed to do so.

Carefully review the procedures given in this manual with all operators. It is important that all operators be familiar with and follow safety precautions.

1. When transporting the machine on public roads, make sure the machine has lights in compliance with ASAE S279.13 standard and the machine is in compliance with all local road regulations.
2. Before operating the unit, be sure that it is assembled correctly and in good operating condition.
3. If machine maintenance work, repairs or adjustments must be done in the field, they should be done at a spot where the ground is firm and level. Turn off the tractor and apply the parking brake. Use the proper tools and wear suitable protection (safety goggles, work gloves, etc.).
4. If any maintenance work, repairs or adjustments are done which require disassembly, always make sure that everything is re-assembled or retightened as it had been prior to making repairs or adjustments.
5. Follow the schedule provided for maintenance. By following these suggestions, it will be possible to keep the machine operating safely and efficiently, to the benefit of the user.
6. General checking of bolts, security pins and split pins must be carried out initially after the first 8 hours of use. Subsequently, check every 50 hours and whenever the machine is laid up for extended periods.
7. Before applying pressure to the system, be sure all connections are tight and that hoses and connections are not damaged.
8. Fluid under pressure can have sufficient force to penetrate the skin, causing serious personal injury. Always protect the skin and eyes from escaping fluid under pressure. If injured by escaping fluid, obtain medical assistance at once. Serious infection or reaction can develop if medical treatment is not administered immediately.
9. Do not weld on wheels. Welding on wheels may cause high stress and a wheel failure.
10. Do not weld on wheels with a mounted tire. Welding on wheels with a mounted tire may cause the tire to burst, causing serious injury or death.
11. Before leaving the cab, engage the parking brake, shut down the engine, and wait for all moving parts to stop.
12. Always keep bystanders away from machine during operation. Rotating elements may cause serious bodily injury.
13. Do not attempt to remove material from the draper header while it is in operation. Shut off the tractor and allow all rotating parts to stop before leaving the tractor.
14. Be sure the tractor header lift locks are engaged before working on or around a raised header.
15. Engage the lift locks or lower the header to the ground before performing any maintenance or lubrication.
16. Replace any damage knives or knife hardware immediately to prevent an accident.
17. Always wear heavy canvas or leather gloves when working with the knife.
18. Always engage the reel lift cylinder locks and header lift locks before working under or around a raised reel. Do not rely on the windrower hydraulic system for support. A rupture or a leak in any part of the system will allow the table to lower if the proper stops are not in place.
19. When mounting to a windrower, make sure the ends of the lift arms are securely in the mounting brackets under the header. Failure to do so could allow the header to fall or slide off the arms, causing damage to the header or personal injury.

## GENERAL SAFETY

YOU are responsible for the safe operation and maintenance of your model HB Series draper header. YOU must ensure that you and anyone else who is going to operate, maintain or work around the draper header be familiar with the operating and maintenance procedures and related safety information contained in this manual.

Remember YOU are the key to safety. Good safety practices not only protect you, but also the people around you. Make these practices a working part of your safety program. Most accidents can be prevented. Do not risk injury or death by ignoring good safety practices.

Review the operating instructions for this header at least once a year per OSHA regulations 1928.57. Know the meaning and location of each decal before operating the draper header.

Watch for this symbol in this manual and on the draper header:



It will draw your attention to hazards that could cause injury or death.

1. Keep the hydraulic pump, gearbox and motors clean of all chaff and straw to prevent any possibility of fire.
2. Carry a multipurpose fire extinguisher in the machine in case of fire and know how to use it. Check the extinguisher regularly and keep it maintained.

3. Provide a first aid kit in the cab for emergencies and know how to use it.
4. Wear appropriate protective gear.
  - A hard hat
  - Protective shoes with slip resistant soles
  - Protective glasses or goggles
  - Leather gloves
  - Hearing protection
  - Respirator or filter mask
5. Do not allow any one to ride on the header while it is in motion.
6. Make certain that the park brake is engaged, and the power unit is in neutral before starting the engine.
7. Clear the area of bystanders, especially small children before starting the power unit.
8. Do not allow anyone to operate the header who has not been instructed in how to operate the machine.
9. All operators should familiarize themselves with the safety section in the power unit operator's manual.
10. Some pictures or illustrations may not show protective shields in place. Make certain that all protective shields are in place before operating the machines.

## OPERATING AND MAINTENANCE SAFETY

1. STOP the power unit, engage the parking brake, place the power unit in neutral, remove the key, and wait for all movement to stop before leaving the cab.
2. Either lower both the table and reel or raise the header to its full height and use platform locks before leaving the power unit or servicing the header. If working under reel, use reel cylinder locks. A sudden loss of hydraulic pressure could cause the header and reel to fall.
3. NEVER operate the power unit and the header while tired, sick, or impaired.
4. DANGER, DO NOT stand between the power unit and the header while raising or lowering the header.
5. Do not operate the header in crowded or confined areas.
6. Ensure that all the pressure is released from the hydraulic lines before repairing. Replace or repair damaged hoses immediately.
7. Care should be taken when maintaining the knife. The sickle sections are very sharp and can easily cause injury. Use heavy leather or canvas gloves when working with the knife.

## HYDRAULIC SAFETY

Release all the pressure from the hydraulic lines before making any repairs. Replace or repair damaged hoses immediately.



## WARNING



**Hydraulic oil leaking under pressure can penetrate the skin and cause infection or other injury.**

### To Prevent Personal Injury:

- Relieve all hydraulic pressure, before disconnecting fluid lines.
- Before applying pressure, make sure all connections are tight and components are in good condition.
- Never use your hand to check for suspected leaks under pressure. Use a piece of cardboard or wood for this purpose.
- If injured by leaking fluid, seek medical attention immediately.

**Failure to comply could result in death or serious injury.**

M587A


## WELDING SAFETY

DO NOT weld on wheels. Welding on wheels may cause high stress and wheel failure.

DO NOT weld on wheels with a mounted tire. Welding on wheels with a mounted tire may cause the tire to burst, causing serious injury or death.

## BEFORE TRANSPORTING


1. Do a complete walk-around visual check to be sure there are no loose parts or components.
2. Check wheel bolts to make sure they are tight.
3. Check transport tire pressure. Recommended pressure is 3.4 bar (50 psi) for 225/75R15 radials.
4. Check spindle and hitch lockpins to make sure they are in place and securely fastened.
5. Do a visual check of all hoses to make sure they are securely tied so they will not pinch or drag during transporting.
6. Be sure hitch tongue and safety chain are fastened securely to the header and to the transporting vehicle.
7. Hand check all reel mounting, reel drive, and adapter assembly bolts to be sure no bolts/nuts are loose.

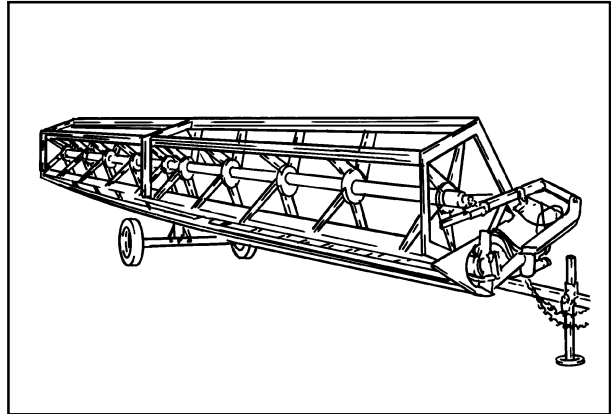

1

## TRANSPORT SAFETY

1. Transport the header with the SMV (Slow Moving Vehicle) sign, 1, displayed on the rear of the header and use your hazard lights if the laws permit. Check local road laws before transporting.
2. When transporting the header on the road, be aware of the width of the header.
3. For long distance transporting, put the header into full transport.
4. Remove crop dividers and divider pipes.
5. Do not transport the machine at night, at dawn, or at dusk.
6. Do not exceed 32 km/h (20 mph) during transport.

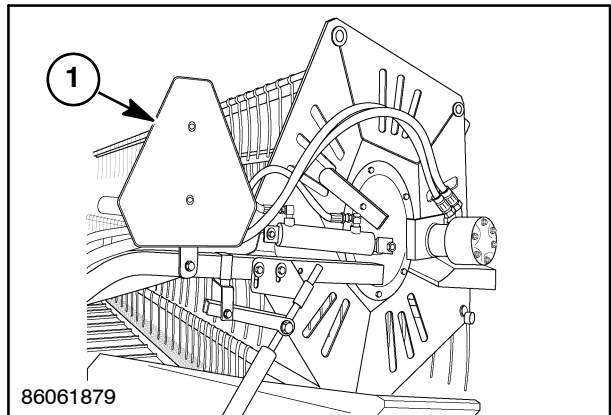

86061879

2



## TRANSPORTING CHECKS

1. If you are towing your header to a distant destination, stop after the first 5 - 10 kilometers (3 - 6 miles) and check to make sure the wheel bolts are tight and the wheel hubs are not hot. Make periodic checks 50 - 60 km (30 - 35 miles) if towing the header long distances.
2. Check the hitch bolt and safety chain periodically to make sure they are secure.

## Towing Restrictions on Public Roads

Check with local and state authorities and follow all regulations concerning towed equipment on public roads.

Do not tow equipment, such as a draper header, that does not have brakes:

- at speeds over 32 km/h (20 mph); or
- that when fully loaded weighs more than 1.5 ton (3300 lb) and more than 1.5 times the weight of the towing unit.

## WINDROWER MOUNTING

These mounting instructions will help you mount your HB draper header onto the windrower in a safe and easy manner. Follow the instructions in the given order, or possible difficulties may arise.

### Windrower Terminology:

Front - Cab end of windrower

Rear - Engine end of windrower


Left and Right - As seen when sitting in the driver's seat, facing the header.

### Header Terminology:

Front - Cutter bar side

Rear - Windrower attaching side

Left and Right - As seen when sitting in the driver's seat facing the header when mounted on the windrower or standing at the back of the header facing toward the cutter bar.

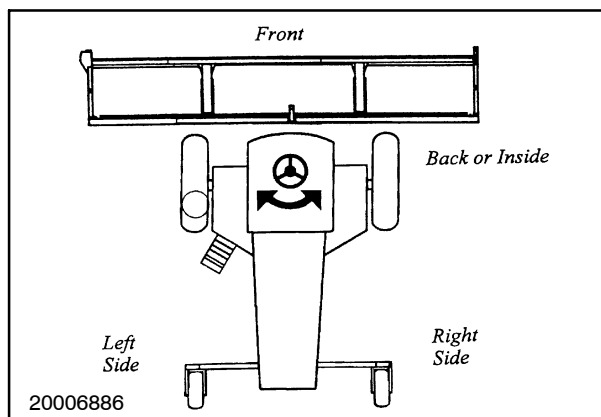

## WINDROWER HEADER


The HB draper header used with a windrower consists of the main components listed below. The hydraulic pressure to run the header comes from the header drive pump of the windrower. A hydraulic motor powers the epicycle knife drive to cut the crop. The reel lays the crop onto the drapers. The drapers carry the crop to the opening of the header to create a windrow.

When in field position, flotation is achieved through the use of the hydraulic flotation on the windrower and optional caster gauge wheels on the header.

### Principal Components

1. Cutter Bar
2. Reel
3. Drapers
4. Knife Drive
5. Transport Axle

**NOTICE:** The HB draper header cannot be used on HW300, HW320, HW340 or prior model windrowers.

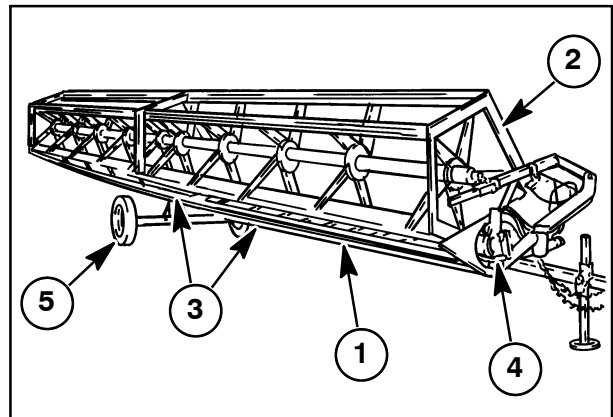

**PRODUCT IDENTIFICATION NUMBER (PIN)**

The PIN is stamped on a metal tag, 1, located on the back of the upper frame, on the left hand side of the header.

The PIN will give the following information:

1. The first two numbers give the length in feet.
2. The next two letters represent the swather model.
3. The next two numbers represent the year built.

Example:


36WS091234

36 = thirty-six feet long

WS = swather model

09 = built in 2009


1234 = sequential numbering

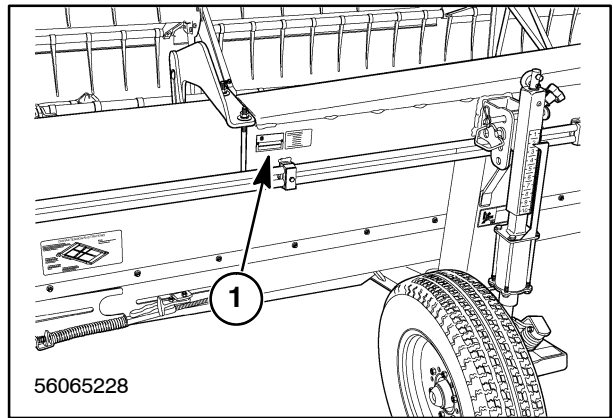

5

**BALLAST SYSTEM**

The HB Series Draper Header is equipped with steel plates, 1, attached to one end of the header to act as a ballast for the other side. This ballasting helps balance the draper for the flotation system on the Windrower.

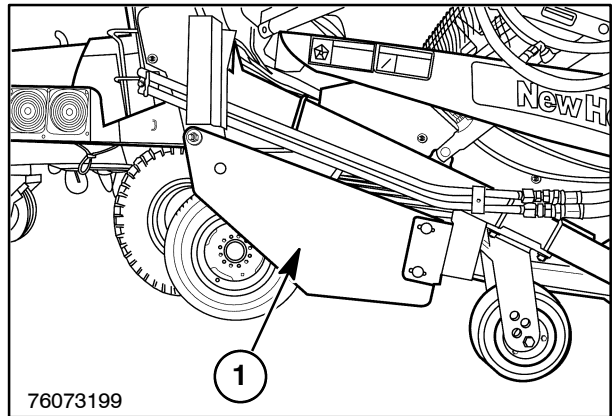

6

**SECTION 00 - GENERAL INFORMATION - CHAPTER 1**

**Single Swath**

<b>Table Condition</b>	<b>Number of Plates</b>	<b>Counter-weight Side</b>
Single knife drive w/out transport		
18 FT	n/a	n/a
21 FT	4	Left
25 FT	0	Right
30 FT	0	Right
36 FT	0	Right

<b>Table Condition</b>	<b>Number of Plates</b>	<b>Counter-weight Side</b>
Double knife drive w/out transport		
18 FT	n/a	n/a
21 FT	0	Left
25 FT	0	Left
30 FT	0	Left
36 FT	0	Left

<b>Table Condition</b>	<b>Number of Plates</b>	<b>Counter-weight Side</b>
Single knife drive with transport		
18 FT	n/a	n/a
21 FT	0	Right
25 FT	0	Right
30 FT	0	Right
36 FT	0	Right

<b>Table Condition</b>	<b>Number of Plates</b>	<b>Counter-weight Side</b>
Double knife drive with transport		
18 FT	1	Left
21 FT	n/a	n/a
25 FT	0	Left
30 FT	3	Left
36 FT	1	Left

**NOTICE:** n/a = not available

This as a preview PDF file from [best-manuals.com](http://best-manuals.com)



Download full PDF manual at [best-manuals.com](http://best-manuals.com)