


580C LOADER BACKHOE TABLE OF CONTENTS AND SERVICE MANUAL INTRODUCTION


SERIES/SECTION	SECTION NO.	FORM NO.
10 GENERAL		
General Engine Specification		
207 Diesel Engine	1010	9-79315
Detailed Engine Specifications		
207 Diesel Engine	1026	9-78685
Maintenance and Lubrication	1050	9-66015
Torque Charts	1051	8-42200
Noise Control	1052	9-66015
 20 ENGINES		
Engine Diagnosis	2001	9-78875
Engine Tune Up	2002	9-78825
Cylinder Head, Valve Train and Camshaft	2015	9-78836
Crankshaft, Bearings, Flywheel and Oil Seals	2035	9-78866
Oil Pump	2045	9-78885
Stall Checks, Engine Removal and Installation, and Radiator	2050	9-66015
Air Cleaner and Spark Arresting Muffler	2051	9-66015
Ether Injection	2053	9-66015
Cooling System	2055	9-78816
Cylinder Block, Sleeves, Pistons and Rods	2125	9-78845
Engine Lubrication	2555	9-78985
 30 FUEL SYSTEM		
Fuel Filters	3010	9-78785
Fuel Injection Pump	3012	9-78795
Fuel Injectors	3013	9-78807
Engine Controls, Fuel Lines and Fuel Tank	3052	9-66015
 40 HYDRAULICS		
Hydraulic Diagrams, Maintenance, Troubleshooting and Pressure Checks	4002	9-66015
Hydraulic Pump	4005	9-66015
Loader Control Valve	4007	9-66015
Three-Point Hitch Control Valve	4034	9-66015
Loader, Backhoe and Three-Point Hitch Cylinders	4090	9-66015
Backhoe Control Valve	4107	9-66015
Stabilizer Control Valve	4109	9-66015
Boom Lock System	4121	9-66015
 50 STEERING		
Hydraulic Diagram, Troubleshooting and Pressure Check	5002	9-66015
Steering Pump	5005	9-66015
Steering Control Valve	5007	9-66015
Steering Cylinders	5010	9-66015
Front Axle	5021	9-66016

SERIES/SECTION	SECTION NO.	FORM NO.
60 POWER TRAIN		
Power Shuttle Operation, Oil Flow Diagrams, Troubleshooting and Maintenance	6202	9-66015
Power Shuttle and Torque Converter	6210	9-66016
Shuttle Controls (Power and Mechanical)	6211	9-66015
Transaxle Removal and Installation	6212	9-66015
Transaxle and Differential Lock	6214	9-79237
Drive Shaft	6222	9-66015
Wheels and Tires	6229	9-66015
Clutch and Pressure Plate	6406	9-66015
Two Speed Mechanical Shuttle	6410	9-79117
70 BRAKES		
Brakes (Pedals to Transaxle)	7106	9-66016
Self Adjusting Differential Brakes	7122	9-79246
80 ELECTRICAL		
Troubleshooting	8002	9-66015
Wiring Diagrams	8003	9-66015
Instrument Panel and Instrument Cluster	8004	9-66015
Battery	8005	9-66015
Starter and Starter Solenoid	8006	9-66015
Nippondenso Starter	8006A	9-66015
Alternator	8007	9-66015
Electrical Accessories	8015	9-66016
90 MOUNTED EQUIPMENT		
Loader	9010	9-66015
Three-Point Hitch	9033	9-66015
ROPS Cab and Canopy	9061	9-66015
Backhoe	9100	9-66016

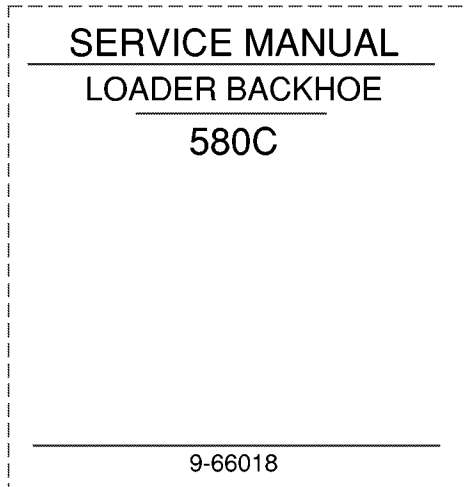


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

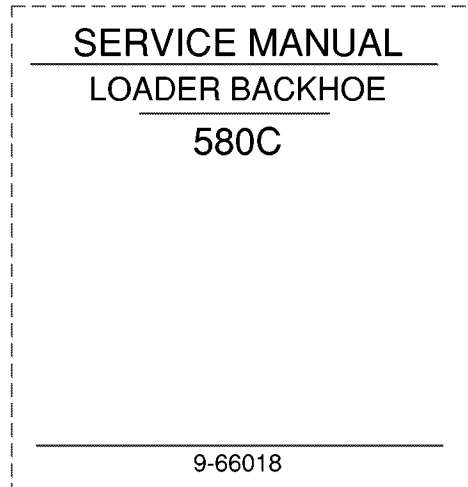


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

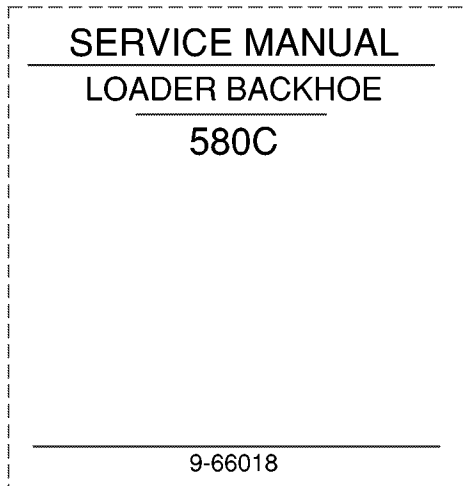

1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

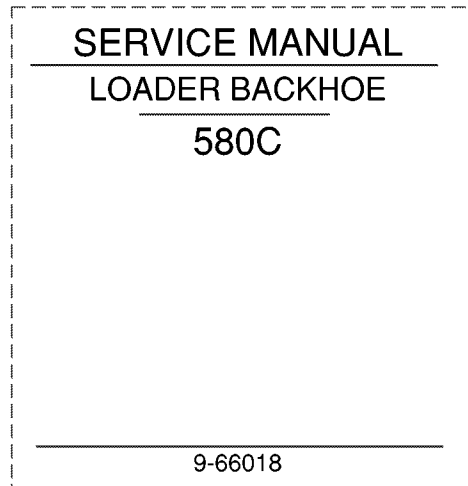


1. Trim along dashed line.
2. Slide into pocket on Binder Spine.

TYPE 1-4

Section 1010

GENERAL ENGINE SPECIFICATIONS 580C TRACTORS

THE MODEL AND ENGINE SERIAL NUMBER IS STAMPED ON A PLATE LOCATED ON THE RIGHT SIDE OF THE ENGINE BELOW THE CRANKING MOTOR.

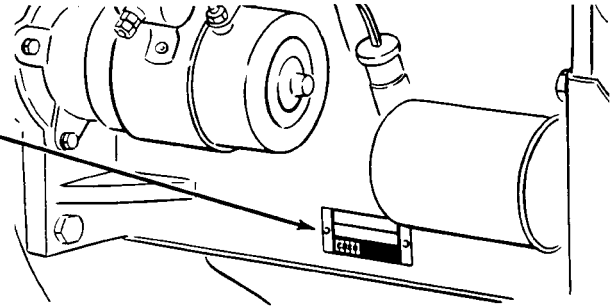

DIESEL ENGINES

General

Type	Case Open Chamber, 4 Cylinder, 4 Stroke Cycle, Valve-in-Head
Firing Order	1-3-4-2
Bore	4 Inches
Stroke	4-1/8 Inches
Piston Displacement	207 Cubic Inches
Compression Ratio	16.5 to 1
No Load Governed Speed	2230 to 2270 RPM
Rated Engine Speed	2100 RPM
Engine Idling Speed	700 to 750 RPM
*Valve Tappet Clearance (Exhaust)	(Hot and Cold) .014 Inch
(Intake)	(Hot and Cold) .012 Inch

*Hot Settings Are Made After the Engine Has Operated At Thermostat Controlled Temperature For At Least Fifteen Minutes.

Piston and Connecting Rods

Rings per Piston	3
Number of Compression Rings	2
Number of Oil Rings	1
Type Pins	Full Floating Type
Type Bearing	Replaceable Precision, Steel Back, Copper-Lead or Aluminum Alloy Liners

Main Bearings

Number of Bearings	5
Type Bearings	Replaceable Precision Steel Back, Copper-Lead or Aluminum Alloy Liners

Engine Lubricating System

Crankcase Capacity (Without Filter)	6 Quarts
(With Filter Change)	7 Quarts
Oil Pressure	50 to 70 Pounds with Engine Warm and Operating at Rated Engine Speed
Type System	Pressure and Spray Circulation
Oil Pump	Gear Type
Oil Filter	Full Flow Spin on Type

Fuel System

Fuel Injection Pump	Roosa-Master
Pump Timing	8 Degrees Before Top Dead Center
Fuel Injectors	Pencil Type (Opening Pressure 2800 PSI)
Fuel Transfer Pump	Vane Type, Integral Part of Injection Pump
Governor	Variable Speed, Fly-Weight Centrifugal Type, Integral Part of Injection Pump
Fuel Filters	Full Flow Spin on Type

Section

1026

DETAILED SPECIFICATIONS

207 Diesel Engines

FRACTION to DECIMAL to MILLIMETER CONVERSION TABLE

Fraction	Decimal	MM	Fraction	Decimal	MM	Fraction	Decimal	MM
1/64	.0156	0.397	23/64	.3593	9.128	45/64	.7031	17.859
1/32	.0312	0.794	3/8	.3750	9.525	23/32	.7187	18.256
3/64	.0468	1.191	25/64	.3906	9.922	47/64	.7343	18.653
1/16	.0625	1.587	13/32	.4062	10.319	3/4	.7500	19.050
5/64	.0781	1.984	27/64	.4218	10.716	49/64	.7656	19.447
3/32	.0937	2.381	7/16	.4375	11.113	25/32	.7812	19.844
7/64	.1093	2.778	29/64	.4531	11.509	51/64	.7968	20.240
1/8	.1250	3.175	15/32	.4687	11.906	13/16	.8125	20.637
9/64	.1406	3.572	31/64	.4843	12.303	53/64	.8281	21.034
5/32	.1562	3.969	1/2	.5000	12.700	27/32	.8437	21.431
11/64	.1718	4.366	33/64	.5156	13.097	55/64	.8593	21.828
3/16	.1875	4.762	17/32	.5312	13.494	7/8	.8750	22.225
13/64	.2031	5.159	35/64	.5468	13.890	57/64	.8906	22.622
7/32	.2187	5.556	9/16	.5625	14.287	29/32	.9062	23.019
15/64	.2343	5.953	37/64	.5781	14.684	59/64	.9218	23.415
1/4	.2500	6.350	19/32	.5937	15.081	15/16	.9375	23.812
17/64	.2656	6.747	39/64	.6093	15.478	61/64	.9531	24.209
9/32	.2812	7.144	5/8	.6250	15.875	31/32	.9687	24.606
19/64	.2968	7.541	41/64	.6406	16.272	63/64	.9843	25.003
5/16	.3125	7.937	21/32	.6562	16.669	1	1.0000	25.400
21/64	.3281	8.334	43/64	.6718	17.065			
11/32	.3437	8.731	11/16	.6875	17.462			

INCH to MILLIMETER CONVERSION TABLE

Inch	MM	Inch	MM	Inch	MM	Inch	MM
1	25.400	6	152.000	10	254.000	60	1,524.000
2	50.800	7	177.800	20	508.000	70	1,778.000
3	76.200	8	203.200	30	762.000	80	2,032.000
4	101.600	9	228.600	40	1,016.000	90	2,286.000
5	127.000	10	254.000	50	1,270.000	100	2,540.000

TABLE OF CONTENTS

RUN-IN INSTRUCTIONS	3,4
DETAILED ENGINE SPECIFICATIONS	5-10
Cylinder Sleeves	5
Piston	5
Piston Rings	5,6
Piston Pin	6
Connecting Rod	6
Crankshaft	6,7
Camshaft	7
Valve Push Rod Lifters	7
Gear Train	8
Oil Pump	8
Cylinder Head	8
Intake Valve	8
Exhaust Valve	9
Intake and Exhaust Valve Guides	9
Valve Spring	9
Rocker Arm Assembly	10
SPECIAL TORQUES	10
GENERAL TORQUE SPECIFICATION TABLE	11

RUN-IN-INSTRUCTIONS

Engine Lubrication

When the engine rebuild is complete, fill the engine crankcase with Case HDM oil and install new engine oil filter. **NOTE:** If Case HDM oil is not used, use only a Series 3 DS or CD Service Classification oil that has the proper viscosity rating for prevailing air temperature. Refer to vehicle Operator's Manual.

After the first 20 hours of operation, change the engine oil while the engine is hot and replace the engine oil filter. **DO NOT DRAIN OIL UNTIL THE ENGINE HAS BEEN OPERATED 20 HOURS.**

Change the engine oil and filter at the recommended intervals thereafter as outlined in the Operator's Manual.

Break-In Procedure for Rebuilt Engines (With a Dynamometer)

The following procedure must be implemented when using a PTO dynamometer to break-in the engine. The dynamometer will insure control of the engine load at each speed and will eliminate over stressing new parts during break-in.

During the break-in, continually check the oil pressure, coolant level, and coolant temperature.

STEP	TIME	ENGINE SPEED	DYNAMOMETER SCALE LOAD*
1	**10 Minutes	1000 RPM	None
2	**10 Minutes	1800 RPM	None
3	20 Minutes	1800 RPM	1/3
4	20 Minutes	1800 RPM	1/2
5	***30 Minutes	100 RPM below rated speed	3/4
6	Retorque the cylinder head bolts using the procedure described in Section 2015 of this service manual.		

*Based upon normal dynamometer scale load at rated speed for the particular vehicle model. Reduce this scale load as indicated.

**The most ideal break-in procedure would be to constantly vary the throttle between 750 to 1000 RPM for the first 10 minutes and from 1000 RPM to 1800 RPM for the next 10 minutes. The purpose of this changing RPM is to vary the lubrication and coolant flow.

***30 minutes at 3/4 load is a minimum amount of time the engine should be run. It is recommended that whenever possible the engine (especially turbocharged diesels) should be run for four (4) hours or more at the above speed and load before checking the full engine horsepower or before using the engine for heavy field work.

Break-In Procedure for Rebuilt Engines (Without a Dynamometer)

STEP	TIME	ENGINE SPEED	LOAD
1	*10 Minutes	1000 RPM	None
2	*10 Minutes	1800 RPM	None
3	30 Minutes	2/3 Rated RPM	Light Load
4	1 Hour	Full RPM (not over 2000 RPM)	80 to 90%
5	Retorque the cylinder head bolts using the procedure described in Section 2015 of this service manual.		

*If engine must then run at or near full load to operate the machine - for first hour remove load and run at high idle for a few minutes at 15 minute intervals.

Run-In Procedure (Agricultural Tractors)

For the first 8 hours of field operation stay one gear lower than normal. For the next 12 hours DO NOT "lug" the engine. Prevent "lugging" by shifting to a lower gear. The engine must not be "lugged" below its Rated Engine RPM during the early hours of life.

Run-In Procedure (Construction Equipment)

For the first 8 hours, operate the engine at full throttle maintaining a normal load. DO NOT baby the engine, but avoid prolonged converter or hydraulic stall. Engine must not be "lugged" below its Rated Engine RPM (Do not exceed 10 seconds of stall).

Run-In Procedure (Power Units)

For the first 1/2 hour, operate engine at 2/3 rated RPM with a light load or no load. For the next (1) hour, run engine at 80 to 90% load at rated RPM (but not over 2000 RPM). Then full load and rated RPM as required in application.

DETAILED ENGINE SPECIFICATIONS

Cylinder Sleeves

	U.S. Value	Metric Value
Type	Replaceable, Wet	
Material	Chrome Plated Steel	
I.D. of sleeve	4.000 to 4.0010"	101.600 to 101.625mm
Maximum Serviceable Limit	4.0020"	101.651mm
Sleeve out-of-round (installed in block)001" max.	.025mm max.
Taper (installed in block)002" max.	.051mm max.
Clearance to bottom of piston skirt, 90° to piston pin0040 to .0060"	.102 to .152mm
Maximum Serviceable Limit0080"	.203mm

Piston

Type	Cam ground	
Material	Aluminum Alloy	
O.D. at bottom of skirt, 90° to piston pin	3.9950 to 3.9960"	101.473 to 101.498mm
Minimum Serviceable Limit	3.9940"	101.448mm
I.D. of piston pin bore including wear	1.2500 to 1.2508"	31.750 to 31.770mm
Width of 1st ring groove	Keystone Type	
Width of 2nd ring groove097 to .098"	2.464 to 2.489mm
Maximum Serviceable Limit100"	2.540mm
Width of 3rd ring groove1885 to .1895"	4.788 to 4.813mm
Maximum Serviceable Limit1915"	4.864mm

Piston Rings

No. 1 Compression	Moly Faced Keystone	
End gap in 4.000 I.D. (101.600mm I.D.) sleeve015 to .025"	.381 to .635mm
Maximum Serviceable Limit035"	.889mm
Width	Not Measurable	
Side Clearance	Not Measurable	
No. 2 Compression	Rectangular Grooved Back	
End gap in 4.000 I.D. (101.600mm I.D.) sleeve013 to .023"	.330 to .584mm
Maximum Serviceable Limit033"	.838mm
Side clearance0035 to .0050"	.089 to .127mm
Maximum Serviceable Limit008"	.203mm

Piston Rings (Cont'd.)

U.S. Value

Metric Value

No. 3 Oil Control Ring	Two Piece	
End gap in 4.000 I.D. (101.600mm I.D.) sleeve013 to .023"	.330 to .584mm
Maximum Serviceable Limit033"	.838mm
Side clearance0020 to .0035"	.051 to .089mm
Maximum Serviceable Limit005"	.127mm

Piston Pin

Type	Full Floating	
O.D. of pin	1.2495 to 1.2498"	31.737 to 31.745mm
Fit in piston0002 to .0010"	.005 to .025mm
Fit in rod bushing0004 to .0015"	.010 to .038mm

Connecting Rod

Bushing	Replaceable Bronze	
Bushing I.D. installed (ream to size)	1.2502 to 1.2504"	31.755 to 31.760mm
Maximum Serviceable Limit	1.2510"	31.775mm
Bearing liners	Replaceable	
Journal I.D. without bearing liners	2.4002 to 2.4007"	60.965 to 60.978mm
Bearing oil clearance0010 to .0040"	.025 to .102mm
Undersize bearings for service002,.010,.020,.030"	.051,.254,.508,.762mm
Side clearance005 to .011"	.127 to .279mm

Crankshaft

Type	Hardened Steel Balanced	
Main bearing liners	Replaceable	
End play, center main bearing cap001 to .015"	.025 to .381mm
Center main bearing thrust surface thickness1025 to .1045"	2.603 to 2.654mm
Connecting rod journal std. O.D.	2.2480 to 2.2490"	57.099 to 57.125mm
.002" (.051mm) O.D. undersize, grind to	2.2460 to 2.2470"	57.048 to 57.074mm
.010" (.254mm) O.D. undersize, grind to	2.2380 to 2.2390"	56.845 to 56.871mm
.020" (.508mm) O.D. undersize, grind to	2.2280 to 2.2290"	56.591 to 56.617mm
.030" (.762mm) O.D. undersize, grind to	2.2180 to 2.2190"	56.337 to 56.363mm
Connecting rod journal maximum taper001"	.025mm
Journals out-of-round0005"	.013mm
Undersize main bearing liners for service002,.010,.020,.030"	.051,.254,.508,.762mm
Main bearing oil clearance0012 to .0042"	.031 to .107mm

Crankshaft (Cont'd.)

	U.S. Value	Metric Value
Main bearing journal std. O.D.	2.8730 to 2.8740"	72.974 to 73.000mm
.002" (.051mm) O.D. undersize, grind to	2.8710 to 2.8720"	72.923 to 72.949mm
.010" (.254mm) O.D. undersize, grind to	2.8630 to 2.8640"	72.720 to 72.746mm
.020" (.508mm) O.D. undersize, grind to	2.8530 to 2.8540"	72.466 to 72.492mm
.030" (.762mm) O.D. undersize, grind to	2.8430 to 2.8440"	72.212 to 72.238mm
Main bearing journal bore I.D. without liners	3.066 to 3.067"	77.876 to 77.902mm
Main journal width between cheeks:		
2nd & 4th	1.185 to 1.189"	30.099 to 30.201mm
3rd	1.374 to 1.377"	34.900 to 34.976mm
5th	1.745 to 1.755"	44.323 to 44.577mm
Connecting rod journals width between cheeks	1.3105 to 1.3145"	33.287 to 33.388mm

Camshaft

Type	Hardened Iron Parabolic	
Bushings	5, Replaceable	
Bushing Lubrication:		
Front Bushing	Pressure lubricated from oil pump.	
Intermediate Bushing	Gravity Flow lubricated	
Rear Bushing	Pressure lubricated with rear oil metering.	
Oil clearance002 to .007"	.051 to .178mm
I.D. of bushing installed	1.752 to 1.753"	44.501 to 44.526mm
Maximum Serviceable Limit	1.755"	44.577mm
Bushing width:		
1st (front)	1.213 to 1.223"	30.810 to 31.064mm
2nd, 3rd and 4th490 to .500"	12.446 to 12.700mm
5th (rear)	1.213 to 1.223"	30.810 to 31.064mm
O.D. of each bearing surface	1.749 to 1.750"	44.425 to 44.450mm
Minimum Serviceable Limit	1.748"	44.399mm
Thrust washer thickness147 to .149"	3.734 to 3.785mm
Minimum Serviceable Limit	Maintain end clearance	
Camshaft end play	Taken up by thrust washer	
Camshaft end clearance003 to .007"	.076 to .178mm

Valve Push Rod Lifters

Material	Hardened Steel	
Type	Mushroom	
O.D. of lifter stem5605 to .5610"	14.237 to 14.249mm
I.D. of block bore, including wear5625 to .5650"	14.287 to 14.351mm

Gear Train

U.S. Value

Metric Value

Backlash:

Crankshaft gear to camshaft gear0002 to .006"	.005 to .152mm
Camshaft gear to idler gear0004 to .006"	.010 to .152mm
Idler gear to fuel pump gear0005 to .007"	.013 to .178mm
Crankshaft gear to oil pump gear002 to .008"	.051 to .203mm
Crankshaft gear to fuel pump gear0005 to .019"	.013 to .483mm
O.D. of idler gear shaft	1.3745 to 1.3755"	34.912 to 34.938mm
Minimum Serviceable Limit	1.3740"	34.900mm
I.D. of idler gear with bushing	1.376 to 1.377"	34.950 to 34.976mm
Maximum Serviceable Limit	1.377"	34.976mm
Idler gear thrust washer shims005,.006,.007,.009"	.127,.152,.178,.229mm
Idler gear end play003"	.076mm

Oil Pump

Positive displacement pump	Gear Type	
Backlash, pump gear to crankshaft gear002 to .008"	.051 to .203mm
Drive gear to pump body maximum clearance0035 to .010"	.089 to .254mm
Pump gears to body radial maximum clearance002 to .008"	.051 to .203mm
Pump gears to pump cover maximum clearance0015 to .008"	.038 to .203mm
Oil pressure	50 to 70 PSI	344.74 to 482.63 kPa
Relief valve spring:		
Free length	2.125"	53.975mm
Compressed 1.44" (36.58mm)	18 to 19 lbs.	8.16 to 8.62 kg

Cylinder Head

Warpage006" max.	.152mm max.
---------------	------------	-------------

Intake Valve

Tappet clearance (COLD and HOT)012"	.305mm
Face angle	44°	44°
Face run-out002" max.	.051mm max.
Length	6.339 to 6.364"	161.011 to 161.646mm
O.D. of stem3409 to .3419"	8.659 to 8.684mm
Minimum Serviceable Limit3399"	8.634mm
O.D. of head	1.599 to 1.609"	40.615 to 40.869mm
Seat angle	45°	45°
Seat contact width0704 to .1057"	1.788 to 2.685mm
Seat run-out002" max.	.051mm max.

Exhaust Valve

	U.S. Value	Metric Value
Tappet clearance (HOT and COLD)014"	.356mm
Face angle	44°	44°
Face run-out002" max.	.051mm max.
O.D. of head	1.398 to 1.408"	35.509 to 35.763mm
O.D. of stem3399 to .3409"	8.634 to 8.659mm
Minimum Serviceable Limit3389"	8.608mm
Length	6.340 to 6.364"	161.036 to 161.646mm
Insert seat angle	45°	45°
Seat contact width0608 to .0962"	1.544 to 2.443mm
Seat run-out002" max.	.051mm max.
Insert height2475 to .2525"	6.286 to 6.413mm
O.D. of insert	1.4495 to 1.4505"	36.817 to 36.843mm
I.D. of insert	1.245 to 1.255"	31.623 to 31.877mm

Intake Valve Guides

Length	3.250"	82.550mm
O.D.6565 to .6575"	16.675 to 16.700mm
I.D. (installed and reamed)3429 to .3439"	8.710 to 8.735mm
Maximum Serviceable Limit3449"	8.760mm
Protrusion above cylinder head875"	22.225mm
Valve stem clearance in guide001 to .003"	.025 to .076mm
Maximum Serviceable Limit004"	.102mm

Exhaust Valve Guides

Length	3.125"	79.375mm
O.D.6565 to .6575"	16.675 to 16.702mm
I.D. (installed and reamed)3429 to .3439"	8.710 to 8.735mm
Maximum Serviceable Limit3449"	8.761mm
Protrusion above cylinder head875"	22.225mm
Valve stem clearance in guide002 to .004"	.051 to .102mm
Maximum Serviceable Limit005"	.127mm

Valve Spring

Free length	2.375"	60.325mm
Total coils	8.25	
Wire diameter162"	4.115mm
I.D.958 to .978"	24.333 to 24.841mm
Compressed to 1.521" (38.633mm) (valve open)	110 to 118 lbs.	49.90 to 53.52 kg.
Compressed to 1.875" (47.625mm) (valve closed)	53 to 59 lbs.	24.04 to 26.76 kg.

Rocker Arm Assembly

U.S. Value

Metric Value








O.D. of shaft622 to .623"	15.799 to 15.824mm
I.D. of arm bore624 to .626"	15.850 to 15.900mm
Shaft spring:		
Free length	2.5"	63.500mm
Compressed to 1.75" (44.450mm)	7.5 to 8.5 lbs.	3.40 to 3.86 kg.
Lubrication	Engine oil, camshaft metering	
Shaft oil holes	Toward valve side of engine. Shaft cannot be rotated.	

SPECIAL TORQUES**Engine**

Camshaft nut	80 to 90 ft. lbs.	109 to 122 Nm
Camshaft thrust plate mtg. bolts	17 to 20 ft. lbs.	23 to 27 Nm
Connecting rod nuts	45 to 50 ft. lbs.	61 to 68 Nm
Crankshaft main bearing bolts	90 to 100 ft. lbs.	122 to 136 Nm
Crankshaft pulley nut	125 to 135 ft. lbs.	169 to 183 Nm
Cylinder head bolts (Gr. 8,12 pt. hd.)	105 to 115 ft. lbs.	122 to 137 Nm
Cylinder head stud nuts (1/2")	95 to 105 ft. lbs.	129 to 142 Nm
Cylinder head valve cover stud (3/8")	35 to 42 ft. lbs.	48 to 57 Nm
Cylinder head valve cover stud (1/2")	80 to 96 ft. lbs.	108 to 130 Nm
Cylinder head valve cover stud nuts (3/8")	4 to 6 ft. lbs.	5 to 8 Nm
Engine oil filter	Install until gasket contacts filter head, then hand tighten 1/2 turn. Loosen filter approximately one full turn and retighten until gasket contact is made, then hand tighten an additional 1/2 to 3/4 turn.	
Exhaust manifold stud nut	25 to 30 ft. lbs.	34 to 41 Nm
Fan mounting bolts	17 to 20 ft. lbs.	23 to 27 Nm
Flywheel to crankshaft bolts	65 to 70 ft. lbs.	88 to 95 Nm
Fuel pump drive gear nut	40 to 50 ft. lbs.	54 to 68 Nm
Idler gear journal mounting bolts	35 to 42 ft. lbs.	47 to 57 Nm
Intake manifold stud nut	30 to 35 ft. lbs.	41 to 48 Nm
Oil pan capscrews (stamped steel)	10 to 12 ft. lbs.	14 to 16 Nm
Oil pan drain plug	29 to 31 ft. lbs.	39 to 42 Nm
Oil pan to seal retainer	15 to 20 ft. lbs.	20 to 27 Nm
Oil pump cover capscrews	9 to 11 ft. lbs.	12 to 15 Nm
Oil pump suction tube nut	95 to 105 ft. lbs.	129 to 142 Nm
Oil seal retainer bolts	12 to 15 ft. lbs.	16 to 20 Nm
Rocker arm bracket bolts	25 to 30 ft. lbs.	34 to 41 Nm
Timing gear cover mounting bolts	25 to 30 ft. lbs.	34 to 41 Nm
Water pump body bolts	35 to 42 ft. lbs.	48 to 57 Nm

GENERAL TORQUE SPECIFICATION TABLE (Revised 2-74)
USE THE FOLLOWING TORQUES WHEN SPECIAL TORQUES ARE NOT GIVEN

NOTE: These values apply to fasteners as received from supplier, dry, or when lubricated with normal engine oil. They do not apply if special graphited or moly-disulphide greases or other extreme pressure lubricants are used. This applies to both UNF and UNC threads.

SAE Grade No.		2				5				8 *			
Bolt head identification marks as per grade NOTE: Manufacturing Marks Will Vary						  				  			
		Torque		Torque		Torque		Torque					
Bolt Size		Foot Pounds		Newton-Meters		Foot Pounds		Newton-Meters		Foot Pounds		Newton-Meters	
Inches	Millimeters	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.	Min.	Max.
1/4	6.35	5	6	6.8	8.13	9	11	12.2	14.9	12	15	16.3	20.3
5/16	7.94	10	12	13.6	16.3	17	20.5	23.1	27.8	24	29	32.5	39.3
3/8	9.53	20	23	27.1	31.2	35	42	47.5	57.0	45	54	61.0	73.2
7/16	11.11	30	35	40.7	47.4	54	64	73.2	86.8	70	84	94.9	113.9
1/2	12.70	45	52	61.0	70.5	80	96	108.5	130.2	110	132	149.2	179.0
9/16	14.29	65	75	88.1	101.6	110	132	149.2	179.0	160	192	217.0	260.4
5/8	15.88	95	105	128.7	142.3	150	180	203.4	244.1	220	264	298.3	358.0
3/4	19.05	150	185	203.3	250.7	270	324	366.1	439.3	380	456	515.3	618.3
7/8	22.23	160	200	216.8	271.0	400	480	542.4	650.9	600	720	813.6	976.3
1	25.40	250	300	338.8	406.5	580	696	786.5	943.8	900	1080	1220.4	1464.5
1-1/8	25.58					800	880	1084.8	1193.3	1280	1440	1735.7	1952.6
1-1/4	31.75					1120	1240	1518.7	1681.4	1820	2000	2467.9	2712.0
1-3/8	34.93					1460	1680	1979.8	2278.1	2380	2720	3227.3	3688.3
1-1/2	38.10					1940	2200	2630.6	2983.2	3160	3560	4285.0	4827.4

* Thick nuts must be used with Grade 8 bolts

NOTE: CASE CORPORATION reserves the right to make improvements in design or changes in specifications at any time without incurring any obligation to install them on units previously sold.

Section 1050

MAINTENANCE AND LUBRICATION

C. E. Div. 9-66015

February 1976

PRINTED IN U.S.A.

FLUIDS AND LUBRICANTS

COMPONENTS	CAPACITY		SPECIFICATIONS
	U.S.	Metric	
Fuel tank	22 gallons	83 liters	Refer to Operator's Manual.
Engine crankcase Without filter change	6 quarts	5.7 liters	Case HDM oil Engine oil, class CD, Above 32° F (0° C) SAE 30 10°-50° F (-12°-10° C) . . . SAE 20W Below 32° F (0° C) SAE 10W
With filter change	7 quarts	6.6 liters	
Hydraulic system (approx.) Loader/backhoe	30 gallons	113 liters	Case TCH Fluid Alternate oil Engine oil, SD or CA Above 32° F (0° C) SAE 10W Below 32° F (0° C) SAE 5W Type C-2 transmission/hydraulic fluid such as Tenneco Hytrans Fluid.
Loader only	21 gallons	79 liters	
Loader/three point hitch	25 gallons	94 liters	
Reservoir refill	17 gallons	64 liters	
Power shuttle and converter	8 quarts	7.6 liters	Case TCH Fluid.
Power steering system Reservoir refill	3 quarts 1 quart	2.8 liters 0.9 liter	Case TCH Fluid.
Mechanical shuttle	2 quarts	1.9 liters	Case TCH Fluid.
Transaxle	20 quarts	19 liters	Case FDL gear lubricant or lubri- cant meeting API-GL-4, specification Above 0° F (-18° C) SAE 90 Below 0° F (-18° C) SAE 80
Grease fittings	As required		No. 2 moly disulfide grease.
Front wheel bearings	As required		No. 2 moly disulfide grease.
Cooling system	21 quarts	19.8 liters	Mix ethylene glycol type antifreeze and water for lowest anticipated temperature.
Battery	As required		Add colorless, odorless drinking water.
Brake master cylinders	As required		DOT 3 brake fluid.

MAINTENANCE CHART

NOTE: This chart is based on maximum service intervals. If operating in severe working conditions, service more often.

INTERVAL	SERVICE	INSTRUCTIONS
Run-in period. Every two hours until stable	Torque front and rear wheel bolts to 115-130 foot-pounds (157-176 N m). Torque transaxle mounting bolts to 250-300 foot-pounds (339-407 N m). Torque swing cylinder trunnion plate mounting bolts to 520-640 foot-pounds (732-867 N m). Torque drive shaft cap screws to 20-24 foot-pounds (27-32 N m).	
Run-in period after first 20 hours	Change engine oil and filter. Change hydraulic oil filter. Check fan belt tension.	Section 4002 Section 8007
Every 10 hours of operation or daily, whichever occurs first	Grease loader pivot points. Grease backhoe pivot points. Grease extendable dipper, if so equipped. Grease three point hitch, if so equipped. Grease front axle pivot. Grease front axle king pins. Grease power shuttle bellcrank. Check engine oil level. Check hydraulic oil level. Check radiator coolant level. Clean air cleaner dust cup. Check power shuttle oil level (if so equipped). Check the machine and the ground under it for signs of leaks. Check injection pump sediment bowl for water. If bowl has water, drain fuel tank, first stage fuel filter and sediment bowl.	Section 2051 Section 6202

INTERVAL	SERVICE	INSTRUCTIONS
Every 100 hours of operation	Change engine oil. Grease rear axle bearings. Grease seat post. Grease brake pedals and shaft bearings on power shuttle machines. Grease brake pedals and clutch shaft on mechanical shuttle machines. Check tire condition and pressure. Check battery fluid level. Check transaxle oil level. Check mechanical shuttle oil level. Check power steering oil level. Clean spark arresting muffler if so equipped.	Section 6229 Section 8005 Section 2051
Every 200 hours of operation	Change engine oil filter. Check fan belt tension.	Section 2555 Section 8007
Every 500 hours of operation	Grease universal joints. Lubricate hydraulic pump shaft. Replace fuel filters. Check brake master cylinder fluid level. Repack front wheel bearings. Inspect Roll-Over Protection Structure. Change hydraulic oil filter. Clean hydraulic reservoir breather.	Section 4005 Section 3010 Section 5021 Section 9061 Section 4002 Section 4002
Every 1000 hours of operation or once a year, whichever occurs first	Change hydraulic oil. Change power shuttle oil, if so equipped. Replace power steering oil filter. Change mechanical shuttle oil, if so equipped. Change transaxle oil. Clean transaxle breather.	Section 4002 Section 6202 Section 5005

INTERVAL	SERVICE	INSTRUCTIONS
Every 2000 hours of operation or once a year, whichever occurs first	Drain, flush and refill cooling system.	Section 2050
As required	<p>After a wheel has been removed and installed, check bolt torque every two hours until stable.</p> <p>Service air filter element whenever restriction warning light remains on with engine running at full throttle.</p> <p>Change hydraulic oil filter whenever restriction warning light remains lit.</p>	<p>Section 2051</p> <p>Section 4002</p>

1051

TORQUE CHARTS


TABLE OF CONTENTS


Torque Specifications - U.S. Hardware	1051-2
Torque Specifications - Steel Hydraulic Fittings	1051-3

Written In *Clear
And
Simple
English*

TORQUE SPECIFICATIONS - U.S. HARDWARE

Use the torques in this chart when special torques are not given. These torques apply to fasteners with both UNC and UNF threads as received from suppliers, dry, or when lubricated with engine oil. Not applicable if special graphites, moly-disulfide greases, or other extreme pressure lubricants are used.

Grade 5 Bolts, Nuts, and Studs			
			
Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	9-11	12-15	1.2-1.5
5/16 in 7.9 mm	17-21	23-28	2.4-2.9
3/8 in 9.5 mm	35-42	48-57	4.8-5.8
7/16 in 11.1 mm	54-64	73-87	7.5-8.8
1/2 in 12.7 mm	80-96	109-130	11.1-13.3
9/16 in 14.3 mm	110-132	149-179	15.2-18.2
5/8 in 15.9 mm	150-180	203-244	20.8-24.9
3/4 in 19.0 mm	270-324	366-439	37.3-44.8
7/8 in 22.2 mm	400-480	542-651	55.3-66.4
1.0 in 25.4 mm	580-696	787-944	80.2-96.2
1-1/8 in 28.6 mm	800-880	1085-1193	111-122
1-1/4 in 31.8 mm	1120-1240	1519-1681	155-171
1-3/8 in 34.9 mm	1460-1680	1980-2278	202-232
1-1/2 in 38.1 mm	1940-2200	2631-2983	268-304

Grade 8 Bolts, Nuts, and Studs			
			
Size	Pound-Feet	Newton metres	Kilogram metres
1/4 in 6.4 mm	12-15	16-20	1.7-2.1
5/16 in 7.9 mm	24-29	33-39	3.3-4.0
3/8 in 9.5 mm	45-54	61-73	6.2-7.5
7/16 in 11.1 mm	70-84	95-114	9.7-11.6
1/2 in 12.7 mm	110-132	149-179	15.2-18.2
9/16 in 14.3 mm	160-192	217-260	22.1-26.5
5/8 in 15.9 mm	220-264	298-358	30.4-36.5
3/4 in 19.0 mm	380-456	515-618	52.5-63.0
7/8 in 22.2 mm	600-720	814-976	83.0-99.5
1.0 in 25.4 mm	900-1080	1220-1465	124-149
1-1/8 in 28.6 mm	1280-1440	1736-1953	177-199
1-1/4 in 31.8 mm	1820-2000	2468-2712	252-277
1-3/8 in 34.9 mm	2380-2720	3227-3688	329-376
1-1/2 in 38.1 mm	3160-3560	4285-4827	437-492

TORQUE SPECIFICATIONS - STEEL HYDRAULIC FITTINGS

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	Kilogram metres
37 Degree Flare Fittings				
1/4 in 6.4 mm	7/16-20	6-12	8-16	0.8-1.7
5/16 in 7.9 mm	1/2-20	8-16	11-21	1.1-2.2
3/8 in 9.5 mm	9/16-18	10-25	14-33	1.4-3.5
1/2 in 12.7 mm	3/4-16	15-42	20-56	2.1-5.8
5/8 in 15.9 mm	7/8-14	25-58	34-78	3.5-8.0
3/4 in 19.0 mm	1-1/16-12	40-80	54-108	5.5-11.1
7/8 in 22.2 mm	1-3/16-12	60-100	81-135	8.3-13.9
1.0 in 25.4 mm	1-5/16-12	75-117	102-158	10.4-16.2
1-1/4 in 31.8 mm	1-5/8-12	125-165	169-223	17.3-22.8
1-1/2 in 38.1 mm	1-7/8-12	210-250	285-338	29.0-34.6

Tube OD Hose ID	Thread Size	Pound- Feet	Newton metres	Kilogram metres
Straight Threads with O-ring				
1/4 in 6.4 mm	7/16-20	12-19	16-25	1.7-2.6
5/16 in 7.9 mm	1/2-20	16-25	22-33	2.2-3.5
3/8 in 9.5 mm	9/16-18	25-40	34-54	3.5-5.5
1/2 in 12.7 mm	3/4-16	42-67	57-90	5.8-9.3
5/8 in 15.9 mm	7/8-14	58-92	79-124	8.0-12.7
3/4 in 19.0 mm	1-1/16-12	80-128	108-174	11.1-17.8
7/8 in 22.2 mm	1-3/16-12	100-160	136-216	13.8-22.1
1.0 in 25.4 mm	1-5/16-12	117-187	159-253	16.2-25.9
1-1/4 in 31.8 mm	1-5/8-12	165-264	224-357	22.8-36.5
1-1/2 in 38.1 mm	1-7/8-12	250-400	339-542	34.6-55.3

Split Flange Mounting Bolts			
Size	Pound- Feet	Newton metres	Kilogram metres
5/16-18	15-20	20-27	2.1-2.8
3/8-16	20-25	26-33	2.8-3.5
7/16-14	35-45	47-61	4.7-6.2
1/2-13	55-65	74-88	7.6-9.0
5/8-11	140-150	190-203	19.4-20.7

Section 1052

NOISE CONTROL

NOISE PROTECTION


J I Case provides noise abatement kits that may be factory or field installed. Each kit is made up of an acoustical foam material. This material must be kept clean and intact to maintain the proper level of noise protection.

Cleaning

If the padding becomes contaminated with surface dust or dirt, hose down with water. Steam clean parts that have become contaminated with oil or grease. Squeeze out the excess water.

If the padding is saturated with oil or grease and does not clean up, replace the contaminated part.

Replacement

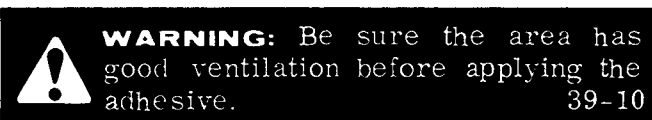

When installing padding make sure the metal surfaces are clean of all oil, grease, excessive rust and traces of old material. It is very important that the new piece cover the same area as the old one.

Use a brand name contact cement according to manufacturer's instructions to hold padding in place.

Checking Noise Protection

The laws of some cities, states or provinces may require that your machine be checked and certified for a maximum noise

level. Be sure to check with local authorities to determine what the requirements are.

Listed below are checks that must be performed to insure continuing noise protection.

1. Check that all exterior parts and sheet metal fasteners are tight. All rattles close to the operator's area must be eliminated.
2. Check that all sealing and barrier materials are whole and intact. A small hole can admit a large amount of noise.
3. Check noise isolators such as engine mounts, rubber shock mounts, hydraulic tube isolators, etc. Replace if defective.
4. Check that the full throttle - no load engine speed is checked with an accurate tachometer. The engine speed must be within the limits as listed in Section 1010.
5. Check the full range of engine speed for resonance (loud, undampened vibration). To check, increase the engine speed from low idle to full throttle slowly. If excessive resonance is found, eliminate the vibration of the suspected part.

NOTE: For your general information, see the SAE recommended practice on sound levels and measurements. Refer to SAE J919a, J87 and J88 in the SAE Handbook.

Section 2001

**ENGINE DIAGNOSIS
188 and 207 Diesel Engines**

GENERAL INFORMATION

Before making any repairs or adjustments on an engine, a mechanic or technician must properly diagnose the trouble.

Locating the trouble and repairing it is only part of the job, a technician must find and eliminate the cause of the trouble as well. Too many repairs are made with no thought to removing the causes that made the repair necessary.

For any engine to start or perform properly, three main requirements must be present:

1. FUEL
2. COMPRESSION
3. COMBUSTION

When any of these requirements are not present or limited by some mechanical reason, the engine will not start and will fail to operate properly throughout the power range.


FUEL. Fuel system problems can be present anywhere from the fuel tank, through the filters and injection pump as well as the injectors. Correct injection pump timing is important in the overall fuel system performance.

COMPRESSION. Compression on an engine is related to the "breathing function". Proper compression is affected by the air cleaner condition, muffler restriction, valve condition and operation including proper valve adjustment, cylinder head gaskets, condition of sleeves, rings, pistons, camshaft, and camshaft timing.

COMBUSTION. Combustion is the result of adequate compression to develop enough heat in the air charge on the compression stroke to fire the fuel being injected into the engine cylinders. Proper spray pattern and atomization of the fuel by the injector is very important. Timing the fuel injection pump to the engine to a precise degree BTDC is a vital requirement for proper combustion.

The engine diagnosis contained in the following pages covers many trouble symptoms, the causes, and what will be necessary to repair or eliminate the problem. Under each symptom are listed the most common and reoccurring problems progressing to the not so common problems. Locate your problem symptom in the diagnosis chart and refer to the pages listed for the probable causes and remedies.

ENGINE DIAGNOSIS CHART

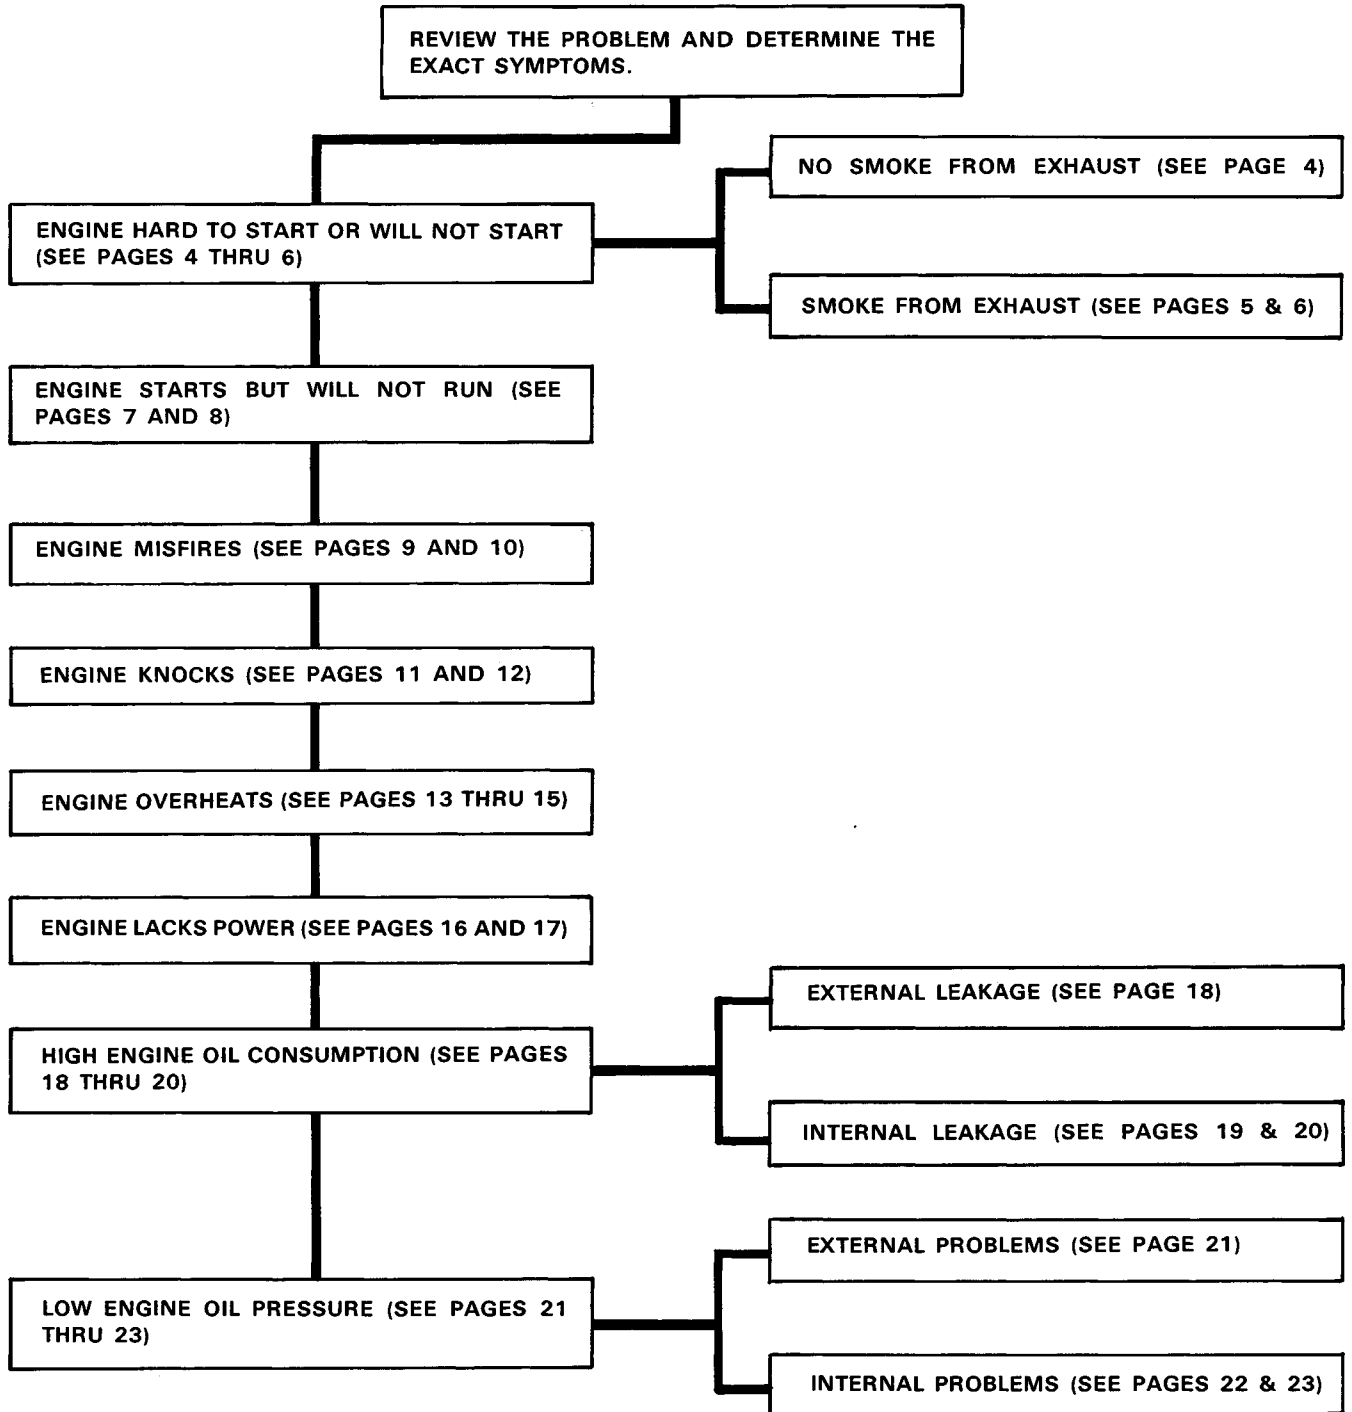

ENGINE HARD TO START OR WILL NOT START

No Smoke From Exhaust

1. Fuel Shut-Off Not Open Completely.

Improper cable adjustment, damaged cable, cable slipping in clamps, misadjusted or inoperative solenoid will not completely return fuel shut-off lever to open position. Check lever to be sure it is opening completely. A partially opened lever limits the amount of fuel to the injection pump and results in low engine horsepower.

2. Final Air Filter Plugged

A dirty filter will cause rich fuel mixture and low engine power. Check filter restriction indicator and service final air filter if required.

3. Slow Cranking Speed

Starter must crank engine 200 to 300 RPM in order to ignite the diesel fuel. Check engine RPM while cranking. If cranking is slow, check starter amperage draw to help determine the following defective areas: batteries, cables, solenoid and starting motor.

Slow cranking speed can be caused by the following internal and external engine defects: scuffing and scoring of pistons and sleeves, improper crankshaft or camshaft end play, defective rod or crank bearings, oil pump, water pump, hydraulic pump or air compressor.

4. Fuel Supply Shut-Off or No Fuel

Check that fuel tank shut-off valve is open. Check fuel supply in tank.

5. Air In Fuel System

Bleed fuel system until fuel flows steadily with no bubbles. Check for air leaks at fittings between tank and fuel pump.

6. Camshaft Damaged

A sheared key in the cam drive gear or a broken cam shaft will throw valve timing out of sequence affecting engine operation. Remove cylinder head cover and check valve timing in reference to crankshaft timing marks with a dial indicator.

7. Fuel Injection Nozzle Not Seated In Head.

A nozzle that is not seated in the cylinder head will let compression leak by and not produce enough heat to fire the injected fuel. Check for damaged nozzle gasket or seals, loose nozzle, or broken stud.

8. Fuel Line Plugged

A fuel line plugged with dirt will not let fuel through to the injection pump. Remove line at fuel filters and check for fuel flow through line.

9. Clogged Fuel Filter

Check and service fuel filters.

10. Wrong Fuel or Contaminated Fuel

Wrong fuel (low centane) or contaminated fuel (water and dirt) can cause the engine not to run or to have pre-combustion, causing serious damage to the engine. Drain fuel tank and re-fill with correct fuel.

11. Sticking Rack Control

A sticking rack control will not let the fuel injection pump accept any fuel.

12. Piston Rings Worn

As piston rings become worn, they lose tension and ability to seal and wipe lubrication oil off cylinder walls. Take a compression test to determine piston ring condition. If readings are low, squirt a small amount of oil into the cylinder and retest. If compression comes up because the oil helps the rings seal, it will be necessary to install new piston rings and possibly sleeve and pistons.

13. Injection Pump Malfunction

A malfunctioning injection pump will usually under-fuel the engine. Adjust or replace the injection pump. A common cause is a sheared key on the injection pump drive, preventing fuel to be delivered to injectors. Adjust or replace the injection pump.

ENGINE HARD TO START OR WILL NOT START

Smoke From Exhaust

1. Slow Cranking Speed

Starter must crank engine 200 to 300 RPM in order to ignite the diesel fuel. Check engine RPM while cranking. If cranking is slow, check starter amperage draw to help determine the following problem areas: batteries, cables, solenoid, and starting motor.

Slow cranking speed can be caused by the following internal and external engine defects: scuffing and scoring of pistons and sleeves, improper crankshaft or camshaft end play defective rod or crank bearings, oil pump, water pump, hydraulic pump or air compressor.

2. Fuel Shut-Off Not Open Completely.

Improper cable adjustment, damaged cable, cable slipping in clamps, misadjusted or inoperative solenoid will not completely return fuel shut-off lever to open position. Check lever to be sure it is opening completely. A partially opened lever limits the amount of fuel to the injection pump and results in low engine horsepower.

3. Low Compression

Low compression on several cylinders, makes the engine hard to start and rough running, also does not generate enough heat to properly fire on all cylinders. Make a compression test on the engine.

4. Final Air Filter Plugged

A dirty filter will cause rich fuel mixtures and low engine power. Check filter restriction indicator and service final air filter if required.

5. Fuel Injection Nozzles Malfunctioning

Low cracking pressure, improper spray pattern, or plugged spray orifice will affect proper combustion in engine cylinders. Remove and test the fuel injection nozzles.

6. Engine Timing Incorrect

Combustion will not occur in the cylinder at the correct moment (degrees BTDC) if the engine timing is incorrect. This can cause pre-combustion and serious damage to the engine. Check for proper engine timing.

7. Piston Rings Worn

As piston rings become worn, they lose tension and ability to seal and wipe lubricating oil off cylinder walls. Take a compression test to determine piston ring condition. If readings are low, squirt a small amount of oil into the cylinder and retest. If compression comes up because the oil helps the rings seal, it will be necessary to install new piston rings and possibly sleeve and pistons.

8. Valve Push Rods Bent

Bent push rods will affect valve operation and not allow cylinders to get a full charge of fuel and air, or not exhaust properly. This can usually be distinguished by excessive valve tappet noise. Remove cylinder cover and check for bent push rods.

9. Clogged Fuel Filter

Check and service fuel filters.

10. Fuel Injection Nozzle Not Seated In Head

A nozzle that is not seated in the cylinder head will let compression leak by and not produce enough heat to fire the injected fuel. Check for damaged nozzle gasket or seals, loose nozzle, or broken stud.

11. Tune-up Specifications Wrong

Check engine and unit serial number plates for correct specifications when performing engine tune-up.

12. Piston and Sleeves Scuffed and Scored

Scuffing starts as a very small surface disturbance of torn out metal particle. This helps break down lubrication which increases heat and spreads the scuffing to adjacent areas. Scuffing and scoring are caused by malfunctioning of the lubrication system or cooling system, incorrect timing, pre-combustion, lugging or overloading, improperly fitting parts and improper break-in procedure. Remove piston assemblies and inspect.

ENGINE HARD TO START OR WILL NOT START

Smoke From Exhaust (Cont'd)

13. Cylinder Head Gasket Blown

A blown cylinder head gasket will cause one or two cylinders to lose power and cause an engine to miss. Compression leaking into the water system can also cause the cooling system pressure to rise and blow engine coolant out the radiator overflow. Take a compression test to help determine a defective head gasket, or remove radiator cap, run engine and check for gas bubbles rising in coolant at radiator opening.

14. Piston Ring Installation Faulty or Broken Rings

At times, piston rings are installed wrong, upside down, wrong size, overlapping of expanders, or expanders are cut on three piece oil rings. Be sure to carefully read the instructions before installing piston rings. Damaged rings can cause scoring of the piston sleeves and cause the engine to use oil.

15. Valves Sticking

Sticking valves can be caused by improper replacement of valve guides, no lubrication, rust vapors, bent valves, or carbon. A sticking valve will cause an engine miss and the valve could also hit the piston causing internal damage.

16. Wrong Fuel or Contaminated Fuel

Wrong fuel (low cetane) or contaminated fuel (water and dirt) can cause the engine not to run or to have pre-combustion, causing serious damage to the engine. Drain fuel tank and refill with correct fuel.

17. Injection Pump Malfunction

A malfunctioning injection pump will usually under-fuel the engine. A common cause is a sheared key on the injection pump drive, preventing fuel to be delivered to injectors. Adjust or replace the injection pump or parts as required.

18. Fuel Injection Line Cracked.

A cracked, chaffed or damaged fuel injector line will allow the fuel to escape externally and not inject fuel into the cylinder. This will cause an engine miss and low horsepower. Leaking fuel from a damaged injector line can easily be seen.

ENGINE STARTS BUT WILL NOT RUN

1. Fuel Shut-Off Not Open Completely

Improper cable adjustment, damaged cable, cable slipping in clamps, misadjusted or inoperative solenoid will not completely return fuel shut-off lever to open position. Check lever to be sure it is opening completely. A partially opened lever limits the amount of fuel to the injection pump and results in low engine horsepower.

2. Final Air Filter Plugged

A dirty filter will cause rich fuel mixtures and low engine power. Check filter restriction indicator and service final air filter if required.

3. Air In Fuel System

Bleed fuel system until fuel flows steady with no air bubbles. Check for air leaks at fittings between fuel tank and injection pump.

4. Low Fuel Supply

Check fuel supply in tank and refill if necessary.

5. Injection Pump Rack Control Sticking

A sticking rack control will not allow the fuel injection pump to accept any fuel.

6. Low Compression

Low compression on several cylinders, makes the engine hard to start and rough running, also does not generate enough heat to properly fire on all cylinders. Make a compression test on the engine.

7. Valve Push Rods Bent

Bent push rods will affect valve operation and not allow cylinders to get a full charge of fuel and air, or not exhaust properly. This can usually be distinguished by excessive valve tappet noise. Remove cylinder cover and check for bent push rods.

8. Camshaft Damaged

A sheared key in the cam drive gear or a broken camshaft will throw valve timing out of sequence, affecting engine operation. Remove cylinder cover and check valve timing in reference to crankshaft timing marks with a dial indicator.

9. Wrong Fuel or Contaminated Fuel

Wrong fuel (low centane) or contaminated fuel (water and dirt) can cause the engine not to run or to have pre-combustion, causing serious damage to the engine. Drain fuel tank and refill with correct fuel.

10. Clogged Fuel Filter

Check and service fuel filters.

11. Fuel Injection Nozzles Malfunctioning

Low cracking pressure, improper spray pattern, or plugged spray orifice will affect proper combustion in engine cylinders. Remove and test the fuel injection nozzles.

12. Cylinder Head Gasket Blown

A blown cylinder head gasket will cause one or two cylinders to lose power and cause an engine to miss. Compression leaking into the water system can also cause the cooling system pressure to rise and blow engine coolant out the radiator overflow. Take a compression test to help determine a defective head gasket, or remove radiator cap, run engine and check for gas bubbles rising in coolant at radiator opening.

13. Piston Rings Worn

As piston rings become worn, they lose tension and ability to seal and wipe lubricating oil off cylinder walls. Take a compression test to determine piston ring condition. If readings are low, squirt a small amount of oil into the cylinder and retest. If compression comes up because the oil helps the rings seal, it will be necessary to install new piston rings and possibly sleeve and pistons.

ENGINE STARTS BUT WILL NOT RUN (Cont'd)

14. Valves Sticking

Sticking valves can be caused by improper replacement of valve guides, no lubrication, rust vapors, bent valves, or carbon. A sticking valve will cause an engine miss and the valve could also hit the piston causing internal damage.

15. Injection Pump Malfunction

A malfunctioning injection pump will usually under-fuel the engine. A common cause is a sheared key on the injection pump drive, preventing fuel to be delivered to injectors. Adjust or replace the injection pump or parts as required.

16. Fuel Injector Line Cracked

A cracked, chaffed or damaged fuel injector line will allow the fuel to escape externally and not inject fuel into the cylinder. This will cause an engine miss and low horsepower. Leaking fuel from a damaged injector line can easily be seen.

17. Injection Pump Timing Incorrect

A fuel injection pump timed at wrong degrees, wrong stroke, or marks moved on pulley, will inject fuel into the cylinders at the wrong time, causing rough running, pre-combustion, low horsepower and other damage to the engine. Check for proper pump timing.

ENGINE MISFIRES

Low and High RPM

1. Wrong Fuel or Contaminated Fuel

Wrong fuel (low centane) or contaminated fuel (water and dirt) can cause the engine not to run or to have pre-combustion, causing serious damage to the engine. Drain fuel tank and re-fill with correct fuel.

2. Valve Push Rods Bent

Bent push rods will affect valve operation and not allow cylinders to get a full charge of fuel and air, or not exhaust properly. This can usually be distinguished by excessive valve tappet noise. Remove cylinder cover and check for bent push rods.

3. Fuel Injection Nozzles Malfunctioning

Low cracking pressure, improper spray pattern or plugged orifice will affect proper combustion in engine cylinders. Isolate faulty injector nozzle and remove.

4. Fuel Injection Nozzle Not Seated in Head

A fuel injection nozzle that is not seated in the cylinder head will let compression leak by and the cylinder does not produce enough heat to fire the injected diesel fuel. A damaged nozzle gasket or seals, loose nozzle, or broken stud can cause the nozzle not to be seated correctly.

5. Cylinder Head Gasket Blown

A blown cylinder head gasket will cause one or two cylinders to loose power and cause an engine to miss. Compression leaking into the water system can also cause the cooling system pressure to rise and blow engine coolant out the radiator overflow. Take a compression test to help determine a defective head gasket, or remove radiator cap, run engine and check for gas bubbles rising in coolant at radiator opening.

6. Low Compression

Low compression on several cylinders, makes the engine hard to start and rough running, also does not generate enough heat to properly fire on all cylinders. Make a compression test on the engine.

7. Fuel Injection Line Cracked

A cracked, chaffed or damaged fuel injector line will allow fuel to escape externally and inject fuel into the cylinder. This will cause an engine miss and low horsepower. Leaking fuel from a damaged injector line can easily be seen.

8. Injection Pump Malfunction.

A malfunctioning injection pump will usually under-fuel the engine. A common cause is a sheared key on the injection pump drive, preventing fuel to be delivered to injectors. Adjust or replace the injection pump or parts as required.

9. Injection Pump Timing Incorrect

A fuel injection pump timed at wrong degrees, wrong stroke, or marks moved on pulley, will inject fuel into the cylinders at the wrong time, causing rough running, pre-combustion, low horsepower and other damage to the engine. Check for proper pump timing.

10. Intake Manifold Gasket Damaged

A damaged intake manifold gasket can reduce the manifold pressure and cause an insufficient air-fuel mixture in the cylinders and result in low power.

11. Cylinder Head or Sleeve Cracked

A cracked head or sleeve will usually let engine coolant into the engine. This will cause an engine miss or pressure rise in the cooling system depending on how bad the leak is. Low coolant level, oil level, engine missing, and blowing water out the exhaust are evidence that coolant is getting into the engine combustion chambers.

ENGINE MISFIRES

Low and High RPM (Cont'd)

12. Valves Damaged

Damaged valves are caused by wear, improper grinding, hitting the pistons, wrong adjustment, loose seat, or broken valve spring. Defective valves can usually be heard through the intake or exhaust manifold. A low reading compression test usually indicates defective valves.

13. Valve Spring Worn (High RPM)

Weak valve springs will allow the valves to float at high speed. Broken valve springs will not close valve completely and valve could hit the piston doing internal engine damage. Always check and test valve springs when doing a valve job. Damping coils on spring should be assembled against the cylinder head.

14. Operating Temperature Low

The engine was designed for and will only develop full horsepower within its correct operating temperature range. Low operating temperature can result from a malfunctioning thermostat. Do not remove thermostat during the summer. Maintain 50% of permanent anti-freeze all year for more efficient operation.

15. Engine Pre-combustion

Pre-combustion is the igniting of the fuel before the normal compression point occurs. This can cause severe knocking and engine power loss. High temperature and pressure from pre-combustion will cause other serious internal damage to the engine. The following are causes of pre-combustion:

- A. Valves operating at higher than normal temperature because of excessive guide clearance or improper seal with valve seats.
- B. Hot spots caused by an inefficient or damaged cooling system.
- C. Injection nozzles set at incorrect cracking pressure.
- D. Sharp edges in combustion chamber.
- E. Timing incorrect.
- F. Excessive lugging of engine.
- G. Defective injection pump.
- H. Wrong or contaminated fuel.

16. Valves Sticking

Sticking valves can be caused by improper replacement of valve guides, no lubrication, rust vapors, bent valves or carbon. A sticking valve will cause an engine miss and the valve could also hit the piston causing internal damage.

17. Bent Connecting Rod

A bent connecting rod will cause piston slap from scoring due to misalignment. The engine will run rough because of incomplete combustion and emit white exhaust smoke from the bad cylinder. Remove engine oil pan and inspect connecting rods for alignment. A comparison of piston heights at Top Dead Center with cylinder head removed may quickly indicate a bent rod condition. A difference of .020 inch in connecting rod can cause a noticeable miss at low RPM and cold engine conditions.

18. Tune-up Specifications Incorrect

Check engine and unit serial number plates for correct specifications when performing engine tune-up.

ENGINE KNOCKS

Low and High RPM

1. Engine Timing Incorrect

Combustion will not occur in the cylinder at the correct moment (degrees BTDC) if the engine timing is incorrect. This can cause pre-combustion and serious damage to the engine. Check for proper engine timing.

2. Flywheel Loose (Low RPM)

A loose flywheel will chuck or pound at low speed making the engine sound like it has a loose connecting rod. As speed increases, the knock will go away. Replace flywheel if badly worn.

3. Engine Pre-combustion

Pre-combustion is the igniting of the fuel before the normal compression point occurs. This can cause severe knocking and engine power loss. High temperature and pressure from pre-combustion will cause other serious internal damage to the engine. The following are causes of pre-combustion:

- A. Valves operating at higher than normal temperature because of excessive guide clearance or improper seal with valve seats.
- B. Hot spots caused by an inefficient or damaged cooling system.
- C. Injection nozzles set at incorrect cracking pressure.
- D. Sharp edges in combustion chamber.
- E. Timing incorrect.
- F. Excessive lugging of engine.
- G. Defective injection pump.
- H. Wrong or contaminated fuel.

4. Rod Bearing Worn

A rod bearing going bad will have a sharp metallic sound which will increase as RPM increases. When the cylinder with the bad knock is grounded by cracking the injector line, the knock will stop or decrease considerably. Remove the engine oil pan and check rods with plasti-gauge.

5. Main Bearing Worn

A worn main bearing will have a thudding sound and increased engine vibration. Both symptoms will increase as engine speed increases. By grounding out (cracking injector line) the problem cylinder, the thudding sound will stop or decrease but the vibration will remain. Remove engine oil pan and check main bearing clearance with plasti-gauge. Also, low oil pressure can be the result of worn main bearings and excessive oil clearance.

6. Piston and Sleeves Scuffed and Scored

Scuffing starts as a very small surface disturbance of torn out metal particles. This helps break down lubrication which increases heat and spreads the scuffing to adjacent areas. Scuffing and scoring are caused by malfunctioning of the lubrication system or cooling system, incorrect timing, pre-combustion, lugging or overloading, improperly fitting parts and improper break-in procedure. Remove piston assemblies and inspect.

7. Piston Ring Installation Faulty or Broken Rings

At times, piston rings are installed wrong, upside down, wrong size, overlapping of expanders, or expanders are cut on three piece oil rings. Be sure to carefully read the instructions before installing piston rings. Damaged rings can cause scoring of the piston sleeves and cause the engine to use oil.

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com