

Shop Manual

WHEEL LOADER

WA430-6E0

SERIAL NUMBERS H60266 and up

ecot3

WHEEL LOADER

WA430-6E0

Machine model	Serial number
WA430-6E0	H60266 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00823-13
00 Index and foreword	SEN00824-13
Index	SEN00832-13
Foreword and general information	SEN00833-04
01 Specification	SEN00825-02
Specification and technical data	SEN00834-02
10 Structure, function and maintenance standard	SEN00826-03
Engine and cooling system	SEN01363-01
Power train	SEN01364-03
Steering system	SEN01365-02
Brake system	SEN01366-02
Undercarriage and frame	SEN01367-02
Hydraulic system, Part 1	SEN01368-03
Hydraulic system, Part 2	SEN01369-01
Work equipment	SEN01370-01
Cab and its attachments	SEN01371-02
Electrical system, Part 1	SEN01372-02
Electrical system, Part 2	SEN01373-02
Electrical system, Part 3	SEN01374-03
Central lubrication system (CLS)	CLS10-01
20 Standard value table	SEN01599-03
Standard service value table	SEN01599-03
30 Testing and adjusting	SEN00828-06
Testing and adjusting, Part 1	SEN01600-04
Testing and adjusting, Part 2	SEN01601-05
Testing and adjusting, Part 3	SEN01602-06
40 Troubleshooting	SEN00829-05
Failure code table and fuse locations	SEN01736-05
General information on troubleshooting	SEN01737-03
Troubleshooting by failure code (Display of code), Part 1	SEN01738-04
Troubleshooting by failure code (Display of code), Part 2	SEN01739-04

Troubleshooting by failure code (Display of code), Part 3	SEN01740-05
Troubleshooting by failure code (Display of code), Part 4	SEN01741-02
Troubleshooting by failure code (Display of code), Part 5	SEN01742-03
Troubleshooting by failure code (Display of code), Part 6	SEN01743-03
Troubleshooting by failure code (Display of code), Part 7	SEN01744-02
Troubleshooting by failure code (Display of code), Part 8	SEN01745-02
Troubleshooting by failure code (Display of code), Part 9	SEN01746-01
Troubleshooting by failure code (Display of code), Part 10	SEN01747-02
Troubleshooting of electrical system (E-mode)	SEN01748-04
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01749-04
Troubleshooting of engine (S-mode)	SEN01750-02
Troubleshooting of Central Lubrication System (CLS)	CLS40-01
50 Disassembly and assembly	SEN00830-03
General information on disassembly and assembly	SEN02191-02
Engine and cooling system	SEN02192-03
Power train, Part 1	SEN02193-03
Power train, Part 2	SEN02194-03
Steering system	SEN02195-01
Brake system	SEN02196-02
Undercarriage and frame	SEN02197-02
Hydraulic system	SEN02198-02
Work equipment	SEN02199-03
Cab and its attachments	SEN02200-02
Electrical system	SEN02201-01
90 Diagrams and drawings	SEN00831-04
Hydraulic diagrams and drawings	SEN00835-02
Electrical diagrams and drawings	SEN00836-03
Connector list	SEN00836-03

Table of contents

00 Index and foreword		
Index		SEN00832-13
Composition of shop manual	2	
Table of contents.....	4	
Foreword and general information		SEN00833-04
Safety notice	2	
How to read the shop manual.....	7	
Explanation of terms for maintenance standard	9	
Handling of electric equipment and hydraulic component	11	
Handling of connectors newly used for engines	20	
How to read electric wire code.....	23	
Precautions when carrying out operation	26	
Method of disassembling and connecting push-pull type coupler	29	
Standard tightening torque table.....	32	
Conversion table.....	36	
01 Specification		
Specification and technical data		SEN00834-02
Specification dimension drawing.....	3	
Specifications	4	
Weight table	8	
Table of fuel, coolant and lubricants	10	
10 Structure, function and maintenance standard		
Engine and cooling system		SEN01363-01
Engine mount and transmission mount	2	
Cooling system	3	
Cooling fan pump.....	4	
Cooling fan motor	12	
Power train		SEN01364-03
Power train.....	3	
Power train system diagram	4	
Drive shaft.....	6	
Power train piping diagram	7	
Torque converter.....	8	
Transmission.....	16	
Flow control valve	33	
Transmission control valve	36	
ECMV	40	
Main relief valve and torque converter relief valve	46	
Axle.....	48	
Differential.....	50	
Limited slip differential	56	
Final drive	62	
Steering system		SEN01365-02
Steering piping diagram	3	
Steering column.....	4	
Steering pump.....	5	
Steering valve	17	
Orbit-roll valve.....	32	
Stop valve	36	
Steering relief valve	37	
Steering cylinder	38	
Emergency steering motor.....	40	
Emergency steering pump.....	41	

Joystick steering lever linkage	42
Steering electric lever	43
Joystick EPC valve	44
Brake system	SEN01366-02
Brake piping diagram	2
Charge valve	3
Brake valve	10
Accumulator (for brake)	15
Brake	16
Parking brake control	21
Parking brake	22
Parking brake solenoid valve	24
Emergency parking brake release valve	26
Undercarriage and frame	SEN01367-02
Axle mount and center hinge pin	2
Tires	6
Hydraulic system, Part 1	SEN01368-03
Hydraulic piping diagram	2
Work equipment control lever linkage	5
Hydraulic tank	8
Power train pump	10
Work equipment pump	11
Work equipment control valve	22
CLSS	36
Each function and operation of each valve	40
Hydraulic system, Part 2	SEN01369-01
PPC valve	2
Stabilizer valve	10
Accumulator (for PPC circuit)	16
Accumulator (for ECSS)	17
Work equipment PPC cut-off solenoid valve	18
Work equipment	SEN01370-01
Work equipment linkage	2
Bucket	4
Bucket positioner and boom kick-out	5
Work equipment cylinder	11
Cab and its attachments	SEN01371-02
Cab	3
Air conditioner	4
Electrical system, Part 1	SEN01372-02
Machine monitor system	2
Machine monitor	6
Electrical system, Part 2	SEN01373-02
Electrical system (Transmission controller system)	2
Transmission controller	44
Electrical system (Work equipment controller system)	46
Work equipment controller	52
Electrical system, Part 3	SEN01374-03
Electric transmission control	2
Kickdown switch and hold switch	6
Multi-function knob	7
Joystick steering knob	8
KOMTRAX system	10
Engine starting circuit	12
Engine stopping circuit	14
Preheating circuit	15
Engine power mode selector circuit	16

Engine output derating function	17
Automatic warm-up function	17
Parking brake circuit	18
Sensor	20
20 Standard value table	
Standard service value table	SEN01599-03
Standard value table for engine	2
Standard value table for chassis	3
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN01600-04
Tools for testing, adjusting, and troubleshooting	3
Sketch of special tool	8
Testing exhaust gas color	11
Testing exhaust temperature	12
Adjusting valve clearance	14
Testing compression pressure	16
Testing blow-by pressure	20
Testing engine oil pressure	21
Testing intake air (boost) pressure	22
Handling fuel system equipment	23
Releasing residual pressure in fuel system	23
Testing fuel pressure	24
Testing fuel return and leak amount	30
Bleeding air from fuel circuit	32
Testing leakage in fuel system	33
Handling reduced cylinder mode operation	34
Handling no-injection cranking operation	34
Handling controller voltage circuit	35
Check of muffler and muffler stack for looseness and damage	36
Check of muffler function	36
Check of installed condition of cylinder head and manifolds	37
Check of engine piping for damage and looseness	37
Testing and adjusting air conditioner compressor belt tension	38
Replacing alternator belt	39
Adjusting transmission speed sensor	40
Adjusting directional lever length	41
Adjusting gear shift lever length	41
Testing directional lever	42
Testing and adjusting power train oil pressure	43
Procedure for flushing torque converter and transmission hydraulic circuit	57
Method of moving machine when transmission valve is broken	58
Checking axle final drive for oil leakage	60
Checking drive shafts for looseness, play and damage	60
Testing and adjusting steering stop valve	61
Testing and adjusting steering wheel	63
Testing and adjusting steering oil pressure	65
Bleeding air from steering circuit	68
Testing and adjusting, Part 2	SEN01601-05
Testing hydraulic drive fan	3
Bleeding air from hydraulic drive fan circuit	5
Testing brake pedal	7
Testing and adjusting brake pedal linkage	8
Testing brake performance	9
Testing and adjusting accumulator charge pressure	10
Testing wheel brake oil pressure	11

Testing wear of wheel brake disc.....	13
Bleeding air from wheel brake circuit.....	14
Releasing residual pressure in brake accumulator circuit	15
Testing parking brake performance	16
Testing parking brake oil pressure	17
Testing wear of parking brake disc	19
Method of releasing parking brake manually	20
Testing and adjusting work equipment control lever.....	21
Testing and adjusting work equipment PPC oil pressure	22
Testing and adjusting work equipment oil pressure.....	25
Bleeding air from work equipment circuit.....	29
Releasing residual pressure in work equipment circuit	30
Procedure for testing of nitrogen gas pressure and charging of nitrogen gas of ECSS (Electronically Controlled Suspension System) accumulator.....	31
Testing and adjusting bucket positioner.....	37
Testing and adjusting boom kick-out	39
Checking proximity switch operation pilot lamp	40
Procedure for testing diodes.....	41
Preparation work for troubleshooting for electrical system.....	42
Starting KOMTRAX terminal operations	47
Indicator lamps of KOMTRAX terminal.....	52
Testing and adjusting, Part 3	SEN01602-06
Adjusting replaced, reassembled or added sensor, controller, etc. with machine monitor	2
Special functions of machine monitor (EMMS).....	5
Pm-clinic inspection table	73
 40 Troubleshooting	
Failure code table and fuse locations	SEN01736-05
Failure code table	2
Fuse locations	13
General information on troubleshooting	SEN01737-03
Points to remember when troubleshooting	2
Sequence of events in troubleshooting	3
Testing before troubleshooting	4
Classification and procedures of troubleshooting.....	5
Information contained in troubleshooting table	8
Connection table for connector pin numbers.....	10
T- branch box and T- branch adapter table	46
Troubleshooting by failure code (Display of code), Part 1	SEN01738-04
Failure code [1500L0] (TORQFLOW transmission: Double meshing).....	3
Failure code [15SAL1] (ECMV F clutch: When command current is OFF, fill signal is ON)	4
Failure code [15SALH] (ECMV F clutch: When command current is ON, fill signal is OFF)	6
Failure code [15SBL1] (ECMV R clutch: When command current is OFF, fill signal is ON).....	8
Failure code [15SBLH] (ECMV R clutch: When command current is ON, fill signal is OFF)....	10
Failure code [15SEL1] (ECMV 1st clutch: When command current is OFF, fill signal is ON)...	12
Failure code [15SELH] (ECMV 1st clutch: When command current is ON, fill signal is OFF)..	14
Failure code [15SFL1] (ECMV 2nd clutch: When command current is OFF, fill signal is ON)..	16
Failure code [15SFLH] (ECMV 2nd clutch: When command current is ON, fill signal is OFF)..	18
Failure code [15SGL1] (ECMV 3rd clutch: When command current is OFF, fill signal is ON)..	20
Failure code [15SGLH] (ECMV 3rd clutch: When command current is ON, fill signal is OFF)..	22
Failure code [15SHL1] (ECMV 4th clutch: When command current is OFF, fill signal is ON) ..	24
Failure code [15SHLH] (ECMV 4th clutch: When command current is ON, fill signal is OFF) .	26
Failure code [2F00MA] (Parking brake: Malfunction).....	28
Failure code [2G43ZG] (Accumulator: Low oil pressure).....	30
Failure code [44K0L4] (Bucket positioner: ON/OFF signals disagree)	32
Troubleshooting by failure code (Display of code), Part 2	SEN01739-04
Failure code [AA1ANX] (Air cleaner: Clogging).....	4

Failure code [AB00L6] (Alternator: Signal disagrees with operating state of engine).....	6
Failure code [AB00MA] (Alternator: Malfunction)	8
Failure code [B@BAZG] (Rotation derating by low engine oil pressure).....	10
Failure code [B@BAZK] (Engine oil: Low level)	11
Failure code [B@BCNS] (Coolant: Overheating).....	12
Failure code [B@BCZK] (Coolant: Low level).....	14
Failure code [B@BEBF] (Water in fuel error)	16
Failure code [B@C7NS] (Brake oil: Overheating)	18
Failure code [b@CENS] (Torque converter oil: Overheating).....	20
Failure code [B@CENS] (Torque converter oil: Overheating)	22
Failure code [B@HANS] (Hydraulic oil: Overheating)	24
Failure code [CA111] (Abnormality in engine controller).....	26
Failure code [CA115] (Engine Ne or Bkup speed sensor error)	27
Failure code [CA122] (Charge pressure sensor high error).....	28
Failure code [CA123] (Charge pressure sensor low error)	30
Failure code [CA131] (Throttle sensor high error)	32
Failure code [CA132] (Throttle sensor low error).....	34
Failure code [CA144] (Coolant sensor high error)	36
Failure code [CA145] (Coolant sensor low error)	38
Failure code [CA153] (Charge temperature sensor high error)	40
Failure code [CA154] (Charge temperature sensor low error).....	42
Failure code [CA155] (Derating of speed by abnormally high charge temperature).....	44
Failure code [CA187] (Sensor power supply 2 low error)	46
Failure code [CA221] (Atmospheric pressure sensor high error)	48
Failure code [CA222] (Atmospheric sensor low error).....	50
Failure code [CA227] (Sensor power supply 2 high error).....	52
Failure code [CA234] (Engine overspeed).....	53
Failure code [CA238] (Ne speed sensor power supply error).....	54
Troubleshooting by failure code (Display of code), Part 3	SEN01740-05
Failure code [CA271] (IMV/PCV1 Short circuit).....	3
Failure code [CA272] (IMV/PCV1 Disconnection)	4
Failure code [CA281] High pressure pump error	6
Failure code [CA322] (Injector #1 open/short error)	8
Failure code [CA323] (Injector #5 open/short error)	10
Failure code [CA324] (Injector #3 open/short error)	12
Failure code [CA325] (Injector #6 open/short error)	14
Failure code [CA331] (Injector #2 open/short error)	16
Failure code [CA332] (Injector #4 open/short error)	18
Failure code [CA342] (Calibration code inconsistency)	20
Failure code [CA351] (Injectors drive circuit error)	22
Failure code [CA352] (Sensor power supply 1 low error)	24
Failure code [CA386] (Sensor power supply 1 high error).....	26
Failure code [CA428] (Abnormally high level in water sensor).....	27
Failure code [CA429] (Abnormally low level in water sensor)	28
Failure code [CA431] (Idle validation switch error)	30
Failure code [CA432] (Idle validation action error)	32
Failure code [CA435] (Engine oil pressure switch error)	34
Failure code [CA441] (Battery voltage low error).....	35
Failure code [CA442] (Battery voltage high error)	38
Failure code [CA449] Common rail pressure high error 2	40
Failure code [CA451] (Common rail pressure sensor high error)	44
Failure code [CA452] (Common rail pressure sensor low error)	46
Failure code [CA488] (Derating of torque by abnormally high charge temperature)	48
Failure code [CA553] (Common rail pressure high error 1).....	49
Failure code [CA559] (Supply pump pressure very low error).....	50
Failure code [CA689] (Engine Ne speed sensor error).....	52
Failure code [CA731] (Engine Bkup speed sensor phase error)	54
Failure code [CA757] (All continuous data lost error)	55

Failure code [CA778] (Engine Bkup speed sensor error).....	58
Failure code [CA1633] (KOMNET datalink timeout error)	60
Failure code [CA2185] (Throttle sensor power supply voltage high error)	62
Failure code [CA2186] (Throttle sensor power supply voltage low error).....	63
Troubleshooting by failure code (Display of code), Part 4	SEN01741-02
Failure code [CA2249] (Supply pump pressure very low error 2).....	3
Failure code [CA2265] (Abnormally high level in electric lift pump)	4
Failure code [CA2266] (Abnormally low level in electric lift pump).....	6
Failure code [CA2311] (Abnormality in IMV solenoid)	8
Failure code [CA2555] (Intake heater relay disconnection error)	10
Failure code [CA2556] (Intake heater relay short circuit error).....	12
Failure code [D150KA] (Emergency steering relay: Disconnection).....	14
Failure code [D150KB] (Emergency steering relay: Short circuit)	16
Failure code [D150KY] (Emergency steering relay: Short circuit with power supply line)	18
Failure code [D160KA] (Backup lamp relay: Disconnection).....	20
Failure code [D160KB] (Backup lamp relay: Short circuit)	22
Failure code [D160KZ] (Backup lamp relay: Disconnection or short circuit)	24
Failure code [D191KA] (Joystick steering neutral safety relay: Disconnection)	26
Failure code [D191KB] (Joystick steering neutral safety relay: Short circuit)	28
Failure code [D191KY] (Joystick steering neutral safety relay: Short circuit with power supply line).....	30
Failure code [D192KA] (ECSS solenoid: Disconnection)	32
Failure code [D192KB] (ECSS solenoid: Short circuit).....	33
Failure code [D192KY] (ECSS solenoid: Short circuit with power supply line).....	34
Failure code [D193KA] (Joystick steering solenoid cut relay: Disconnection).....	36
Failure code [D193KB] (Joystick steering solenoid cut relay: Short circuit)	38
Failure code [D193KY] (Joystick steering solenoid cut relay: Short circuit with power supply line).....	40
Failure code [D5ZHKA] (Terminal C signal: Disconnection)	43
Failure code [D5ZHKB] (Terminal C signal: Short circuit).....	47
Failure code [D5ZHKZ] (Terminal C signal: Disconnection or short circuit).....	50
Failure code [D5ZHL6] (Terminal C signal: Signal does not match engine running or stopped state).....	55
Failure code [DA80L4] (Auto grease controller: ON/OFF signals disagree).....	58
Failure code [DAF3KK] (Machine monitor: Low source voltage (input)	60
Failure code [DAF5KP] (Machine monitor: Low output voltage).....	62
Failure code [DAFRKR] (CAN communication with machine monitor: Defective communication (Abnormality in target component system)	66
Troubleshooting by failure code (Display of code), Part 5	SEN01742-03
Failure code [DAQ0KK] (Transmission controller: Low source voltage).....	4
Failure code [DAQ0KT] (Transmission controller: Abnormality in controller)	6
Failure code [DAQ1KA] (Terminal ACC input: Disconnection)	7
Failure code [DAQ2KK] (Transmission controller load power supply line: Low source voltage (input)	10
Failure code [DAQ9KQ] (Transmission controller model selection: Disagreement of model selection signals)	12
Failure code [DAQRKR] (CAN communication with transmission controller: Defective communication (Abnormality in target component system)	13
Failure code [DAQRMA] (Transmission controller option setting: Disagreement of option selection)	16
Failure code [DB2RKR] (CAN communication with engine controller: Defective communication (Abnormality in target component system)	18
Failure code [DB90KK] Work equipment controller: Low source voltage (input)	20
Failure code [DB90KT] Work equipment controller: Abnormality in controller.....	22
Failure code [DB92KK] Work equipment controller load power supply line: Low source voltage (input)	24
Failure code [DB95KX] Work equipment controller power supply output: Out of input signal range.....	26

Failure code [DB99KQ] (Work equipment controller model selection: Disagreement in model selection signals).....	29
Failure code [DB9RKR] CAN communication with work equipment controller: Defective communication (Abnormality in target component system)	30
Failure code [DB9RMA] (Work equipment controller option setting: Malfunction).....	32
Failure code [DB9RMC] (CAN communication with transmission controller, engine controller and machine monitor: Defective operation).....	33
Failure code [DD15LD] ■ switch (Panel switch 1): Switch is kept pressed for long time	36
Failure code [DD16LD] ◇ switch (Panel switch 2): Switch is kept pressed for long time	38
Failure code [DD17LD] < switch (Panel switch 3): Switch is kept pressed for long time	40
Failure code [DD18LD] > switch (Panel switch 4): Switch is kept pressed for long time	42
Failure code [DD1ALD] Remote positioner raise/lower set switch (raise): Switch is kept pressed for long time.....	44
Failure code [DD1BLD] Remote positioner raise/lower set switch (lower): Switch is kept pressed for long time.....	46
Failure code [DD1CLD] Load meter subtotal switch: Switch is kept pressed for long time	48
Failure code [DD1FLD] Load meter mode selector switch (A/B): Switch is kept pressed for long time.....	50
Failure code [DD1GLD] Load meter mode selector switch (+/-): Switch is kept pressed for long time.....	52
Failure code [DD1HLD] (Load meter display selector switch: Switch is kept pressed for long time)	54
Failure code [DD1NLD] (Fan reverse switch: Switch is kept pressed for long time)	56
Failure code [DD1NL4] (Fan automatic reverse switch: Switch is kept pressed for long time)	58
Failure code [DDB6L4] (Parking brake switch (Neutralizer): ON/OFF signals disagree)	60
Failure code [DDD1LD] (Remote positioner bucket angle set switch: Switch is kept pressed for long time)	64
Troubleshooting by failure code (Display of code), Part 6	SEN01743-03
Failure code [DDE5MA] (Emergency steering drive switch: Malfunction)	4
Failure code [DDK3KA] (Right FNR switch: Disconnection)	6
Failure code [DDK4KA] (Joystick steering FNR switch: Disconnection).....	9
Failure code [DDK5L4] (Joystick steering shift-up/down switch: ON/OFF signals disagree)	12
Failure code [DDK6KA] (FNR lever switch: Disconnection)	14
Failure code [DDK6KB] (FNR lever switch: Short circuit)	18
Failure code [DDS5KA] (Steering pressure switch: Disconnected)	20
Failure code [DDS5KB] (Steering pressure switch: Short-circuit).....	22
Failure code [DDS5L6] (Steering: Low oil pressure).....	24
Failure code [DDT0L4] (Shift mode selector switch: ON/OFF signals disagree).....	26
Failure code [DDT4LD] (Transmission cut-off set switch: Switch is kept pressed for long time)	28
Failure code [DDW9LD] (Kick-down switch: Switch is kept pressed for long time)	30
Failure code [DDWLLD] (Hold switch: Switch is kept pressed for long time)	32
Failure code [DDY0LD] (Load meter cancel switch: Switch is kept pressed for long time)	34
Failure code [DF10KA] (Transmission shift lever switch: Disconnected).....	36
Failure code [DF10KB] (Transmission shift lever switch: Short circuit)	40
Failure code [DGF1KA] (Transmission oil temperature sensor: Disconnected)	42
Failure code [DGF1KB] (Transmission oil temperature sensor: Short circuit)	44
Failure code [DGH2KX] (Hydraulic oil temperature sensor: Out of input signal range)	46
Failure code [DGR2KA] (Rear brake oil temperature sensor: Disconnected)	48
Failure code [DGR2KX] (Rear brake oil temperature sensor: Out of input signal range)	50
Failure code [DGT1KX] (Torque converter oil temperature sensor: Out of input signal range).....	52
Troubleshooting by failure code (Display of code), Part 7	SEN01744-02
Failure code [DH21KA] (Loader pump pressure sensor: Disconnection)	4
Failure code [DH21KB] (Loader pump pressure sensor: Power supply line short)	6

Failure code [DHPCKX] (Lift arm cylinder bottom pressure sensor: Out of input signal range).....	8
Failure code [DHPDKX] (Lift arm cylinder head pressure sensor: Out of input signal range) .	10
Failure code [DHT1KX] (Transmission cut-off pressure sensor: Out of input signal range)	12
Failure code [DHT8KA] (Steering pump pressure sensor: Disconnection).....	14
Failure code [DHT8KB] (Steering pump pressure sensor: Short circuit)	16
Failure code [DK59KA] (Lift arm EPC lever potentiometer (Main): Disconnection).....	18
Failure code [DK59KY] (Lift arm EPC lever potentiometer (Main): Short circuit with power supply line).....	21
Failure code [DK59L8] (Lift arm EPC lever potentiometer (Main): Analog signals disagree) ..	24
Failure code [DK5AKA] (Lift arm EPC lever potentiometer (Sub): Disconnection).....	27
Failure code [DK5AKY] (Lift arm EPC lever potentiometer (Sub): Short circuit with power supply line).....	30
Failure code [DK5BKA] (Bucket EPC lever potentiometer (Main): Disconnection)	33
Failure code [DK5BKY] (Bucket EPC lever potentiometer (Main): Short circuit with power supply line).....	36
Failure code [DK5BL8] (Bucket EPC lever potentiometer (Main): Analog signals disagree) ..	39
Failure code [DK5CKA] (Bucket EPC lever potentiometer (Sub): Disconnection)	42
Failure code [DK5CKY] (Bucket EPC lever potentiometer (Sub): Short circuit with power supply line)	45
Troubleshooting by failure code (Display of code), Part 8	SEN01745-02
Failure code [DK5FKA] (Joystick steering EPC lever potentiometer (Main): Disconnection)	3
Failure code [DK5FKY] (Joystick steering EPC lever potentiometer (Main): Short circuit with power supply line).....	6
Failure code [DK5GKA] (Joystick steering EPC lever potentiometer (Sub): Disconnection)...	8
Failure code [DK5GKY] (Joystick steering EPC lever potentiometer (Sub): Short circuit with power supply line).....	12
Failure code [DK5FL8] (Joystick steering EPC lever potentiometer (Main): Analog signals disagree).....	14
Failure code [DKA0KA] (Lift arm angle sensor: Disconnection)	18
Failure code [DKA0KY] (Lift arm angle sensor: Short circuit with power supply line).....	20
Failure code [DKA0L0] (Lift arm angle sensor: Double meshing)	22
Failure code [DLT3KA] (Transmission output shaft speed sensor: Disconnection)	24
Failure code [DLT3LC] (Transmission output shaft speed sensor: Out of input signal range).....	26
Failure code [DT20KB] (Transmission cut-off indicator lamp: Short circuit)	28
Failure code [DUM1KB] (Remote positioner raise set indicator lamp: Short circuit)	30
Failure code [DUM2KB] (Remote positioner lower set indicator lamp: Short circuit)	32
Failure code [DV00KB] (Alarm buzzer: Short circuit)	34
Failure code [DW4PKA] (Lift arm raise EPC solenoid: Disconnection)	36
Failure code [DW4PKB] (Lift arm raise EPC solenoid: Short circuit).....	38
Failure code [DW4PKY] (Lift arm raise EPC solenoid: Short circuit with power supply line)...	40
Failure code [DW4QKA] (Lift arm lower EPC solenoid: Disconnection)	42
Failure code [DW4QKB] (Lift arm lower EPC solenoid: Short circuit).....	43
Failure code [DW4QKY] (Lift arm lower EPC solenoid: Short circuit with power supply line).....	44
Failure code [DW4RKA] (Bucket tilt EPC solenoid: Disconnection)	46
Failure code [DW4RKB] (Bucket tilt EPC solenoid: Short circuit).....	47
Failure code [DW4RKY] (Bucket tilt EPC solenoid: Short circuit with power supply line)	48
Troubleshooting by failure code (Display of code), Part 9	SEN01746-01
Failure code [DW4SKA] (Bucket dump EPC solenoid: Disconnection).....	3
Failure code [DW4SKB] (Bucket dump EPC solenoid: Short circuit)	4
Failure code [DW4SKY] (Bucket dump EPC solenoid: Short circuit with power supply line).....	6
Failure code [DW7BKA] (Fan reverse solenoid: Disconnection)	8
Failure code [DW7BKB] (Fan reverse solenoid: Short circuit).....	9
Failure code [DW7BKY] (Fan reverse solenoid: Short circuit with power supply line)	10

Failure code [DW7DKA] (Hydraulic drive fan neutral solenoid: Disconnection)	11
Failure code [DW7DKB] (Hydraulic drive fan neutral solenoid: Short circuit)	12
Failure code [DW7DKY] (Hydraulic drive fan neutral solenoid: Short circuit with power supply line)	13
Failure code [DWM1KA] (Work equipment neutral lock solenoid: Disconnection)	14
Failure code [DWM1KB] (Work equipment neutral lock solenoid: Short circuit)	16
Failure code [DWM1KY] (Work equipment neutral lock solenoid: Short circuit with power supply line)	18
Failure code [DWN6KA] (Lift arm raise magnet detent solenoid: Disconnection)	20
Failure code [DWN6KB] (Lift arm raise magnet detent solenoid: Short circuit)	22
Failure code [DWN6KY] (Lift arm raise magnet detent solenoid: Short circuit with power supply line)	24
Failure code [DWN7KA] (Lift arm float magnet detent solenoid: Disconnection)	26
Failure code [DWN7KB] (Lift arm float magnet detent solenoid: Short circuit)	28
Failure code [DWN7KY] (Lift arm float magnet detent solenoid: Short circuit with power supply line)	30
Failure code [DWN8KA] (Bucket tilt magnet detent solenoid: Disconnection)	32
Failure code [DWN8KB] (Bucket tilt magnet detent solenoid: Short circuit)	34
Failure code [DWN8KY] (Bucket tilt magnet detent solenoid: Shorted with the power source)	36
Failure code [DX16KA] (Fan pump EPC solenoid: Disconnection)	38
Failure code [DX16KB] (Fan pump EPC solenoid: Short circuit)	39
Failure code [DX16KY] (Fan pump EPC solenoid: Short circuit with power supply line)	40
Failure code [DXH1KA] (Lockup ECMV solenoid: Disconnection)	42
Failure code [DXH1KB] (Lockup ECMV solenoid: Short circuit)	44
Failure code [DXH1KY] (Lockup ECMV solenoid: Short circuit with power supply line)	46
Failure code [DXH4KA] (1st clutch ECMV solenoid: Disconnection)	48
Failure code [DXH4KB] (1st clutch ECMV solenoid: Short circuit)	50
Failure code [DXH4KY] (1st clutch ECMV solenoid: Short circuit with power supply line)	52
Troubleshooting by failure code (Display of code), Part 10	SEN01747-02
Failure code [DXH5KA] (2nd clutch ECMV solenoid: Disconnection)	4
Failure code [DXH5KB] (2nd clutch ECMV solenoid: Short circuit)	6
Failure code [DXH5KY] (2nd clutch ECMV solenoid: Short circuit with power supply line)	8
Failure code [DXH6KA] (3rd clutch ECMV solenoid: Disconnection)	10
Failure code [DXH6KB] (3rd clutch ECMV solenoid: Short circuit)	12
Failure code [DXH6KY] (3rd clutch ECMV solenoid: Short circuit with power supply line)	14
Failure code [DXH7KA] (R clutch ECMV solenoid: Disconnection)	16
Failure code [DXH7KB] (R clutch ECMV solenoid: Short circuit)	18
Failure code [DXH7KY] (R clutch ECMV solenoid: Short circuit with power supply line)	20
Failure code [DXH8KA] (F clutch ECMV solenoid: Disconnection)	22
Failure code [DXH8KB] (F clutch ECMV solenoid: Short circuit)	24
Failure code [DXH8KY] (F clutch ECMV solenoid: Short circuit with power supply line)	26
Failure code [DXHHKA] (4th clutch ECMV solenoid: Disconnection)	28
Failure code [DXHHKB] (4th clutch ECMV solenoid: Short circuit)	30
Failure code [DXHHKY] (4th clutch ECMV solenoid: Short circuit with power supply line)	32
Failure code [DXHLKA] (Joystick steering right EPC solenoid: Disconnection)	34
Failure code [DXHLKB] (Joystick steering right EPC solenoid: Short circuit)	36
Failure code [DXHLKY] (Joystick steering right EPC solenoid: Short circuit with power supply line)	38
Failure code [DXHMKA] (Joystick steering left EPC solenoid: Disconnection)	40
Failure code [DXHMKB] (Joystick steering left EPC solenoid: Short circuit)	42
Failure code [DXHMKY] (Joystick steering left EPC solenoid: Short circuit with power supply line)	44
Failure code [DY30MA] Motor-driven emergency steering pump failure (During operation of machine)	46
Failure code [DY30MC] Motor-driven emergency steering pump failure (Malfunction in manual mode)	49
Failure code [DY30ME] Emergency steering: Operating for more than 1 minute	52

Troubleshooting of electrical system (E-mode)	SEN01748-04
Installing positions of fuses.....	3
Information in troubleshooting table	6
E-1 Engine does not start	8
E-2 Wiper does not operate.....	14
E-3 Windshield washer does not operate.....	18
E-4 Headlamp, clearance lamp, tail lamp, and license lamp do not light up or go off	21
E-5 Working lamp does not light up or go off.....	29
E-6 Turn signal lamp and hazard lamp do not light up or go off	34
E-7 Brake lamp does not light or it keeps lighting up	40
E-8 Backup lamp does not light or it keeps lighting up	42
E-9 Backup buzzer does not sound or it keeps sounding	44
E-10 Horn does not sound or it keeps sounding	46
E-11 Alarm buzzer does not sound or it keeps sounding	48
E-12 Air conditioner does not operate or stop	50
E-13 The KOMTRAX system does not work properly	53
E-14 When kick-down switch is turned ON, kick-down operation does not start.....	56
E-15 When hold switch is pressed, holding operation does not start	58
E-16 Transmission is kept in neutral, or brake drags when directional lever is operated while parking brake is applied.....	60
E-17 Transmission cut-off mode cannot be set or reset	62
E-18 Transmission cut-off set cannot be reset	64
E-19 FNR switch mode cannot be set or reset.....	66
E-20 Fan reverse function cannot be used or reset	68
E-21 Discharge from loader pump does not rise from minimum level.....	70
E-22 ECSS function cannot be used or reset.....	72
E-23 When parking brake is turned ON, parking brake indicator lamp does not light up	74
E-24 When emergency brake operates, brake oil pressure caution lamp does not operate...	78
E-25 Air cleaner clogging indicator lamp does not light up.....	80
E-26 Radiator coolant level caution lamp does not light up.....	82
E-27 Hydraulic oil temperature gauge does not rise and hydraulic oil temperature caution lamp does not light up	83
E-28 Torque converter oil temperature gauge does not rise and torque converter oil temperature caution lamp does not light up	84
E-29 Steering oil pressure caution lamp does not light up	86
E-30 Abnormality in ■ switch (panel switch 1) input	88
E-31 Abnormality in ◇ switch (panel switch 2) input	90
E-32 Abnormality in < switch (panel switch 3) input	92
E-33 Abnormality in > switch (panel switch 4) input	94
E-34 Air conditioner does not operate	96
E-35 Air is not cooled	100
E-36 No air comes out or air flow is abnormal.....	104
E-37 Temperature cannot be controlled	110
E-38 Spurting out mode cannot be switched	114
E-39 Recirc/Fresh cannot be changed over	118
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN01749-04
Method of using troubleshooting chart	3
Table of failure modes and causes	6
H-1 The machine does not start	10
H-2 Torque converter lockup is not switched off (engine stalls) [Machine with lockup clutch (if equipped)].....	12
H-3 Torque converter lockup is not switched on [Machine with lockup clutch (if equipped)] ...	13
H-4 The travel speed is slow, the thrusting force is weak, the uphill traveling power is weak, and the gear is not shifted	14
H-5 Shocks are large at the times of starting and shifting gear	16
H-6 Time lag is large at the times of starting and shifting gear.....	18
H-7 The torque converter oil temperature is high	20
H-8 Steering does not turn.....	21

H-9 Steering does not turn [Machine with joystick steering (if equipped)]	22
H-10 Steering response is low	23
H-11 Turning, response of steering is poor [machine with joystick steering (if equipped)]	24
H-12 Steering is heavy.....	25
H-13 When machine turns, it shakes or makes large shocks.....	26
H-14 When machine turns, it shakes or makes large shocks [machine with joystick steering (if equipped)]	27
H-15 The wheel brake does not work or does not work well	28
H-16 The wheel brake is not released or it drags	29
H-17 The parking brake does not work or does not work well.....	30
H-18 The parking brake is not released or it drags (including emergency release system)	31
H-19 Lift arm does not rise	32
H-20 Lift arm speed is low or rising force of lift arm is insufficient	33
H-21 When rising, the lift arm comes to move slowly at specific height	34
H-22 The lift arm cylinder cannot hold down the bucket (Bucket floats).....	34
H-23 Hydraulic drifts of the lift arm is large	34
H-24 The lift arm wobbles during operation	34
H-25 Bucket does not tilt back	35
H-26 Bucket speed is low or tilting back force is insufficient	36
H-27 The bucket comes to operate slowly in the midst of tilting-back	37
H-28 The bucket cylinder cannot hold down the bucket	37
H-29 Hydraulic drifts of the bucket is large	37
H-30 The bucket wobbles during travel with cargo (The work equipment valve is set to "HOLD").....	37
H-31 Lift arm and bucket control levers do not move smoothly and are heavy	38
H-32 During operation of the machine, engine speed lowers remarkably or engine stalls	39
H-33 Large shock is made when work equipment starts and stops.....	39
H-34 When work equipment circuit is relieved singly, other work equipment moves	39
H-35 ECSS does not operate, and pitching, bouncing occur	40
Troubleshooting of engine (S-mode)	SEN01750-02
Method of using troubleshooting charts	3
S-1 Engine does not start easily.	6
S-2 Engine does not start	7
S-3 Engine does not pick up smoothly	10
S-4 Engine stops during operations.....	11
S-5 Engine does not rotate smoothly.....	12
S-6 Engine lacks output (or lacks power)	13
S-7 Exhaust smoke is black (Incomplete combustion)	14
S-8 Oil consumption is excessive (or exhaust smoke is blue)	15
S-9 Engine oil becomes contaminated quickly	16
S-10 Fuel consumption is excessive	17
S-11 Coolant contains oil (blows back or reduces)	18
S-12 Oil pressure drops.....	19
S-13 Oil level rises (Water, fuel in oil).....	20
S-14 Coolant temperature rises too high (Overheating)	21
S-15 Abnormal noise is made.....	22
S-16 Vibration is excessive.....	23
50 Disassembly and assembly	
General information on disassembly and assembly	SEN02191-02
How to read this manual	2
Coating materials list	4
Special tools list	7
Sketches of special tools	10
Engine and cooling system	SEN02192-03
Removal and installation of fuel supply pump assembly	2
Removal and installation of fuel injector assembly	5

Removal and installation of cylinder head assembly	14
Removal and installation of engine hood and radiator guard assembly	27
Removal and installation of radiator assembly	29
Removal and installation of air aftercooler assembly	31
Removal and installation of hydraulic oil cooler assembly	33
Removal and installation of engine assembly	34
Removal and installation of front seal assembly	39
Removal and installation of rear oil seal assembly.....	41
Removal and installation of cooling fan and fan motor assembly.....	46
Removal and installation of fuel tank assembly.....	49
Power train, Part 1	SEN02193-03
Removal and installation of torque converter and transmission assembly	2
Disassembly and assembly of torque converter assembly (Standard specification)	7
Disassembly and assembly of torque converter assembly (Lock-up specification).....	11
Disassembly and assembly of transmission assembly.....	18
Disassembly and assembly of transmission clutch pack assembly.....	33
Disassembly and assembly of parking brake assembly	49
Power train, Part 2	SEN02194-03
Removal and installation of front axle assembly	2
Removal and installation of rear axle assembly	4
Disassembly and assembly of axle housing.....	8
Disassembly and assembly of differential assembly	18
Steering system	SEN02195-01
Removal and installation of steering demand valve assembly	2
Brake system	SEN02196-02
Removal and installation of parking brake disc and plate.....	2
Undercarriage and frame	SEN02197-02
Removal and installation of center hinge pin	2
Removal and installation of counterweight	10
Hydraulic system	SEN02198-02
Removal and installation of work equipment control valve assembly.....	2
Removal and installation of power train pump and work equipment pump assembly	5
Removal and installation of steering pump and cooling fan pump assembly	6
Removal and installation of hydraulic tank assembly	7
Work equipment	SEN02199-03
Removal and installation of work equipment assembly	2
Disassembly and assembly of hydraulic cylinder assembly	7
Cab and its attachments	SEN02200-02
Removal and installation of operator's cab and floor frame assembly	2
Removal and installation of operator's cab glass (stuck glass)	6
Disassembly and assembly of operator's seat assembly (Standard specification).....	14
Disassembly and assembly of operator's seat assembly (Manufactured by GRAMMER)	23
Removal and installation of air conditioner unit assembly.....	56
Electrical system	SEN02201-01
Removal and installation of engine controller assembly.....	2
Removal and installation of KOMTRAX terminal assembly.....	3
90 Diagrams and drawings	
Hydraulic diagrams and drawings	SEN00835-02
Power train hydraulic circuit diagram.....	2
Automatic greasing circuit diagram	6
Hydraulic circuit diagram	9
Electrical diagrams and drawings	SEN00836-03
Electrical diagrams and drawings.....	1
Work equipment controller system electrical circuit diagram.....	31
Connector list.....	2

WHEEL LOADER

WA430-6E0

Machine model	Serial number
WA430-6E0	H60266 and up

00 Index and foreword

Foreword and general information


Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table	32
Conversion table	36

Safety notice


(Rev. 2008/08)

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, forklift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

Safety points

1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) Before starting work, remove the leads from the battery. Always remove the lead from the negative (-) terminal first.
- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.

- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.
- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.

- Do not stand under the load.
- Do not step on the load.


- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slings with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

7) Limit the hanging angle to 60°, as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120°. If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150°, each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

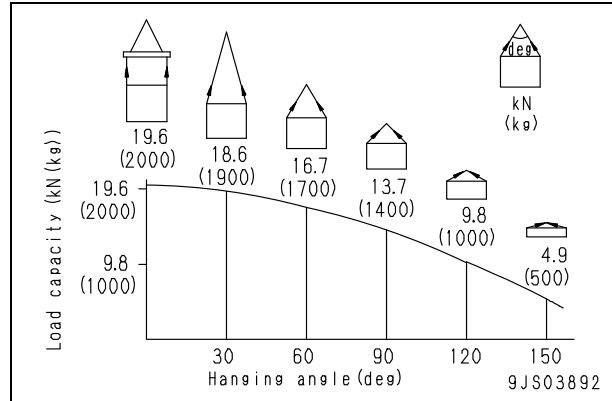

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
- Slings near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

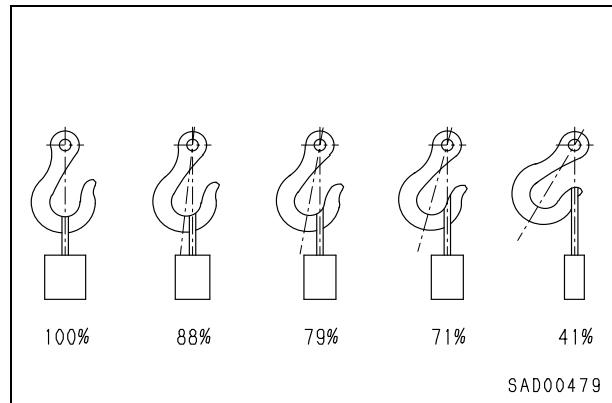


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
- Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.

- If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
- When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.

- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope mm	Allowable load	
	kN	ton
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

1) Disconnection

⚠ For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.

★ Ask professional traders for collecting and filling operation of refrigerant (R134a).

★ Never release the refrigerant (R134a) to the atmosphere.

⚠ If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.

2) Connection


1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.

2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.

3] Check that each O-ring is not damaged or deteriorated.

4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)**) to its O-rings.

★ Example of O-ring (Fitted to every joint of hoses and tubes)

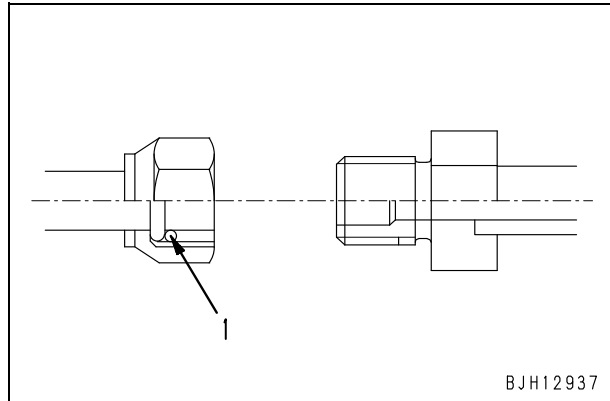

★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume
This section explains the method of reproducing, repairing, and replacing parts.

2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**








When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

Explanation of terms for maintenance standard

The maintenance standard chapter explains the criteria for replacing or reusing products and parts in the machine maintenance work. The following terms are used to explain the criteria.

1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the “standard size” and the range of difference from the standard size is called the “tolerance”.
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.


Example:

Standard size	Tolerance
120	-0.022 -0.126

- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].
Example) 120 (-0.022/-0.126)
- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

Standard size	Tolerance	
	Shaft	Hole
60	-0.030 -0.076	+0.046 0

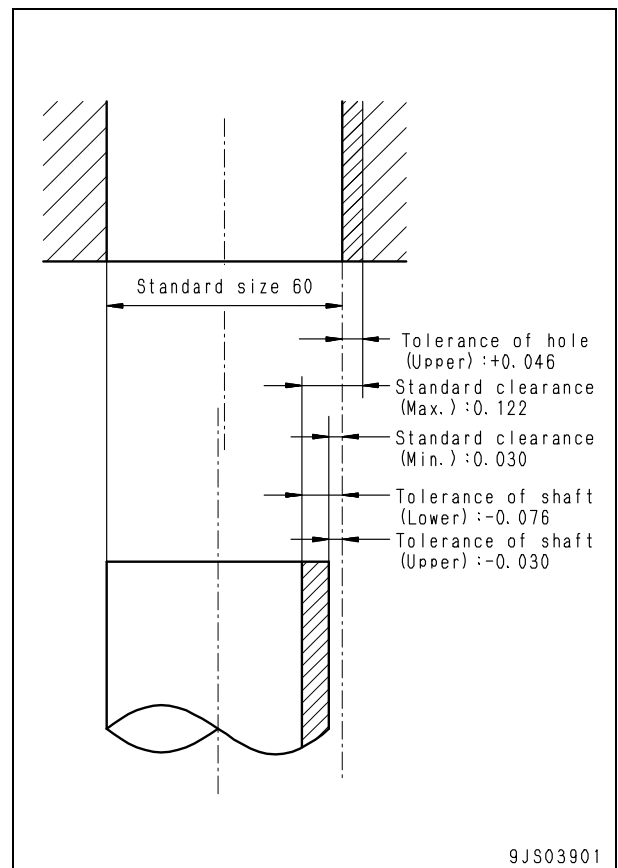

2. Standard clearance and standard value

- The clearance made when new parts are assembled is called the “standard clearance”, which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- A value of performance and function of new products or equivalent is called the “standard value”, which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

3. Standard interference

- When the diameter of a hole of a part shown in the given standard size and tolerance table is smaller than that of the mating shaft, the difference between those diameters is called the “interference”.
- The range (A – B) from the difference (A) between the minimum size of the shaft and the maximum size of the hole to the difference (B) between the maximum size of the shaft and the minimum size of the hole is the “standard interference”.
- After repairing or replacing some parts, measure the size of their hole and shaft and check that the interference is in the standard range.

4. Repair limit and allowable value or allowable dimension

- The size of a part changes because of wear and deformation while it is used. The limit of changed size is called the “repair limit”.
- If a part is worn to the repair limit, it must be replaced or repaired.
- The performance and function of a product lowers while it is used. A value which the product can be used without causing a problem is called the “allowable value” or “allowable dimension”.
- If a product is worn to the allowable value, it must be checked or repaired. Since the permissible value is estimated from various tests or experiences in most cases, however, it must be judged after considering the operating condition and customer's requirement.

5. Clearance limit

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the “clearance limit”.
- If the clearance between the parts exceeds the clearance limit, they must be replaced or repaired.

6. Interference limit

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the “interference limit”.
- The interference limit shows the repair limit of the part of smaller tolerance.
- If the interference between the parts exceeds the interference limit, they must be replaced or repaired.

Handling of electric equipment and hydraulic component


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct “operation“, “maintenance and inspection“, “troubleshooting“, and “repairs” must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on “Handling electric equipment” and “Handling hydraulic equipment” (particularly gear oil and hydraulic oil).

Points to remember when handling electric equipment

1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.

Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

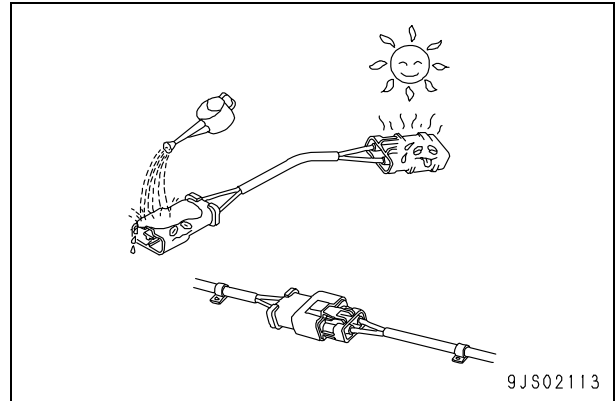


9JS02113

2. Main failures occurring in wiring harness

1) Defective contact of connectors (defective contact between male and female)


Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces. The corroded or oxidized contact surfaces may become shiny again (and contact may become normal) by connecting and disconnecting the connector about 10 times.

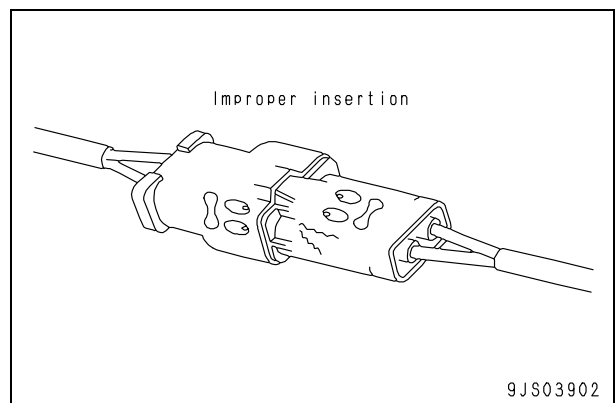

9JS03902

2) Defective crimping or soldering of connectors


The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

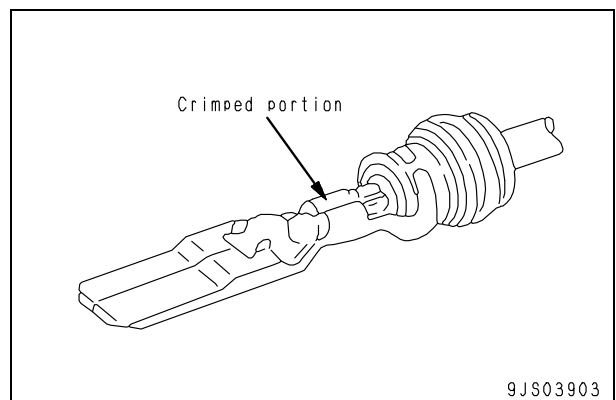


9JS03903

3) Disconnections in wiring

If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the crimping of the connector may separate, or the soldering may be damaged, or the wiring may be broken.

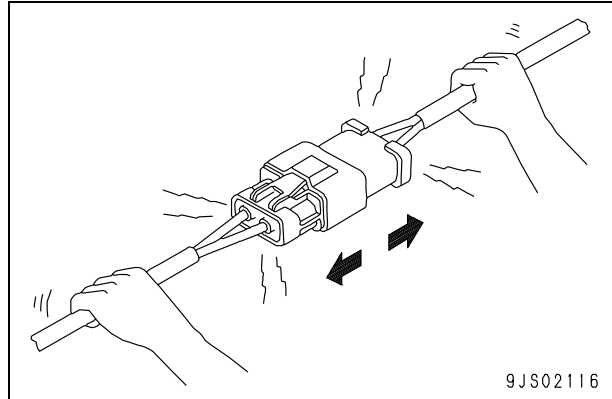


- 4) High-pressure water entering connector
The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not to splash water over the connector. The connector is designed to prevent water from entering, but at the same time, if water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

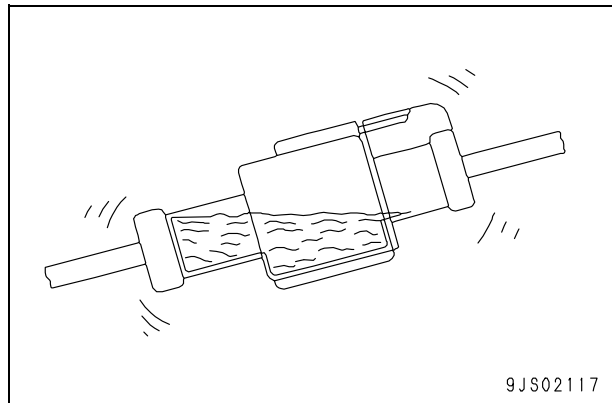

5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact. If there is oil or grease stuck to the connector, wipe it off with a dry cloth or blow it dry with compressed air and spray it with a contact restorer.

- ★ When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- ★ If there is oil or water in the compressed air, the contacts will become even dirtier, so remove the oil and water from the compressed air completely before cleaning with compressed air.

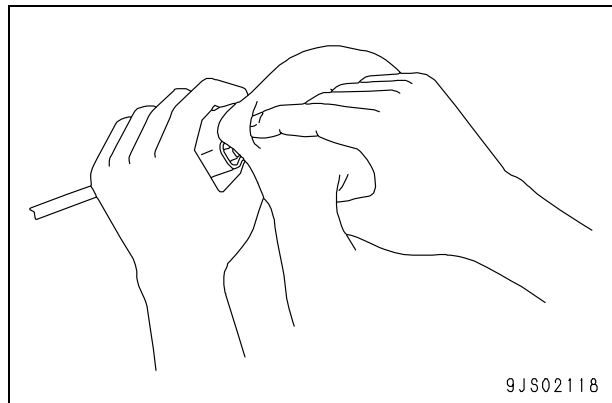

3. Removing, installing, and drying connectors and wiring harnesses

1) Disconnecting connectors

- 1] Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors. For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

★ Never pull with one hand.

- 2] When removing from clips

- Both of the connector and clip have stoppers, which are engaged with each other when the connector is installed.





- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.

★ If the connector is twisted up and down or to the left or right, the housing may break.

- 3] Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

★ If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

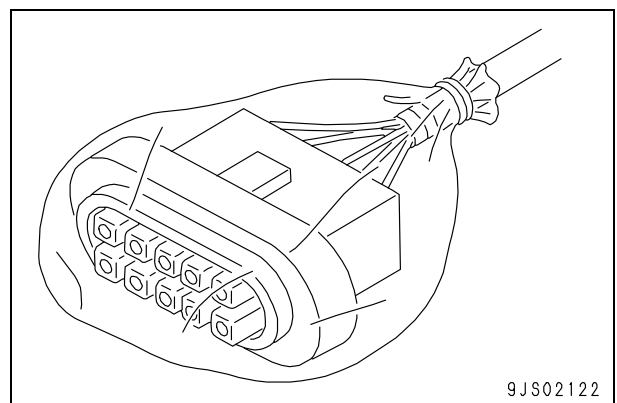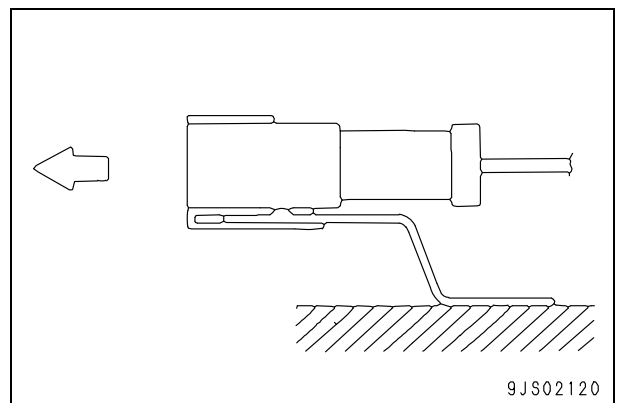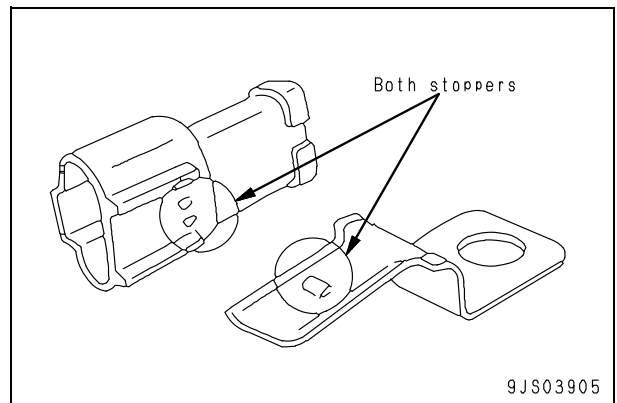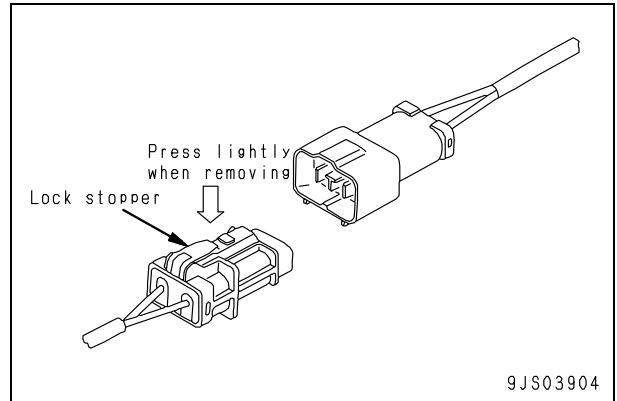

2) Connecting connectors




- 1] Check the connector visually.
 Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).
 Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.
 Check that there is no damage or breakage to the outside of the connector.

- ★ If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.
- ★ If there is any damage or breakage, replace the connector.

- 2] Fix the connector securely.
 Align the position of the connector correctly, and then insert it securely. For connectors with the lock stopper, push in the connector until the stopper clicks into position.

- 3] Correct any protrusion of the boot and any misalignment of the wiring harness.

- For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.
- ★ If the connector cannot be corrected easily, remove the clamp and adjust the position.
 - If the connector clamp has been removed, be sure to return it to its original position. Check also that there are no loose clamps.

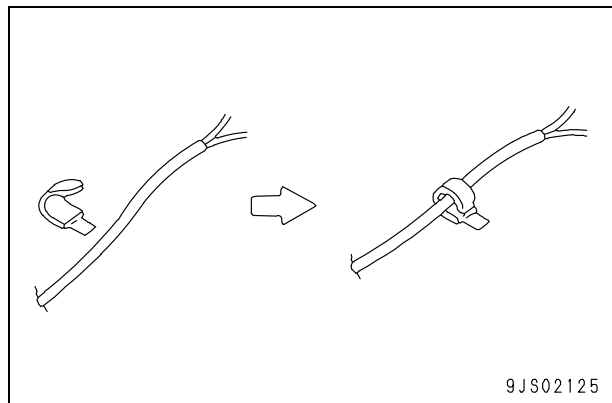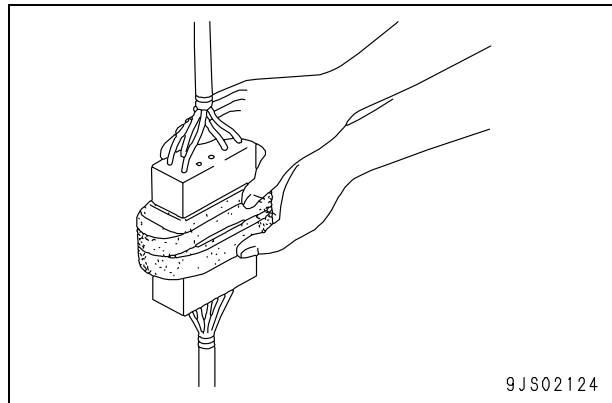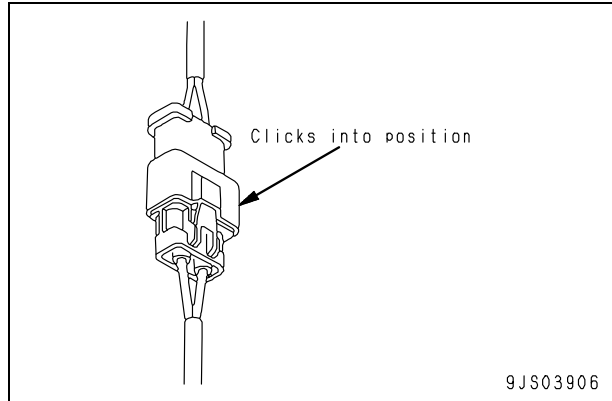

- 3) Heavy duty wire connector (DT 8-pole, 12-pole)

Disconnection (Left of figure)

While pressing both sides of locks (a) and (b), pull out female connector (2).

Connection (Right of figure)

- 1] Push in female connector (2) horizontally until the lock clicks.

Arrow: 1)

- 2] Since locks (a) and (b) may not be set completely, push in female connector (2) while moving it up and down until the locks are set normally.

Arrow: 1), 2), 3)

- ★ Right of figure: Lock (a) is pulled down (not set completely) and lock (b) is set completely.


(1): Male connector

(2): Female connector

(a), (b): Locks

- Disconnection

- Connection (Example of incomplete setting of (a))

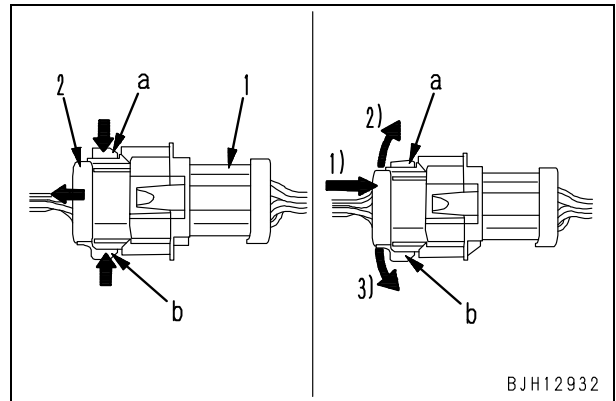

4) Drying wiring harness

If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing it in water or using steam. If the connector must be washed in water, do not use high-pressure water or steam directly on the wiring harness. If water gets directly on the connector, do as follows.

1] Disconnect the connector and wipe off the water with a dry cloth.

- ★ If the connector is blown dry with compressed air, there is the risk that oil in the air may cause defective contact, so remove all oil and water from the compressed air before blowing with air.

2] Dry the inside of the connector with a dryer.


If water gets inside the connector, use a dryer to dry the connector.

- ★ Hot air from the dryer can be used, but regulate the time that the hot air is used in order not to make the connector or related parts too hot, as this will cause deformation or damage to the connector.


3] Carry out a continuity test on the connector.

After drying, leave the wiring harness disconnected and carry out a continuity test to check for any short circuits between pins caused by water.


- ★ After completely drying the connector, blow it with contact restorer and reassemble.

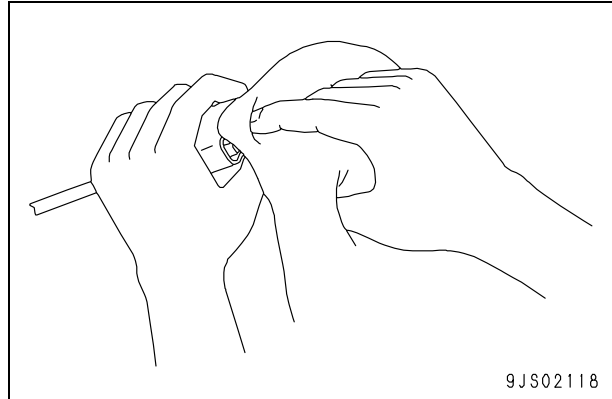

9JS02118

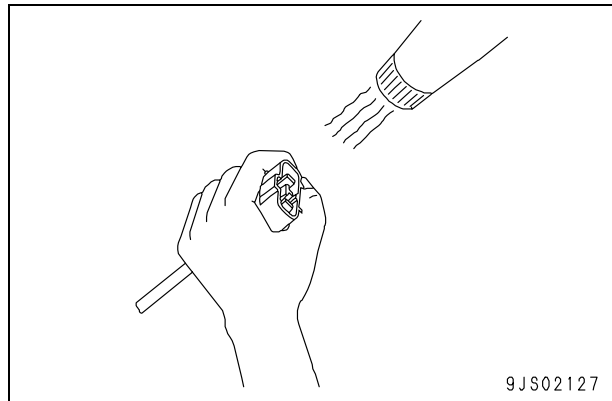



9JS02127

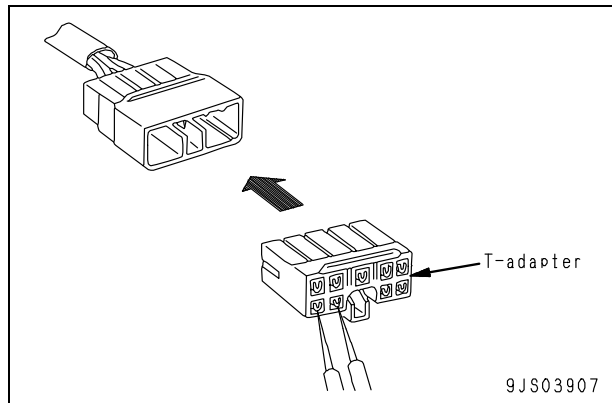

9JS03907

4. Handling controller

- 1) The controller contains a microcomputer and electronic control circuits. These control all of the electronic circuits on the machine, so be extremely careful when handling the controller.
- 2) Do not place objects on top of the controller.
- 3) Cover the control connectors with tape or a vinyl bag. Never touch the connector contacts with your hand.
- 4) During rainy weather, do not leave the controller in a place where it is exposed to rain.
- 5) Do not place the controller on oil, water, or soil, or in any hot place, even for a short time. (Place it on a suitable dry stand).
- 6) Precautions when carrying out arc welding
When carrying out arc welding on the body, disconnect all wiring harness connectors connected to the controller. Fit an arc welding ground close to the welding point.

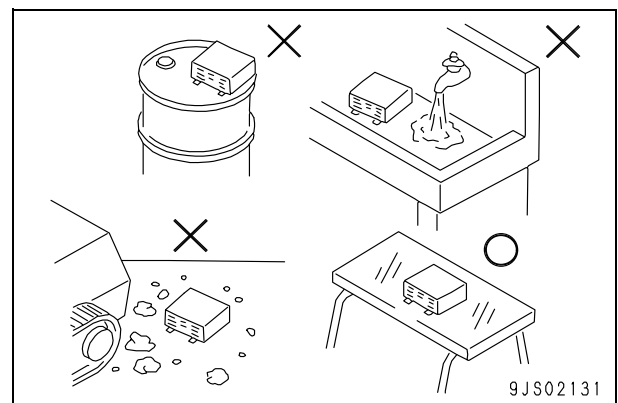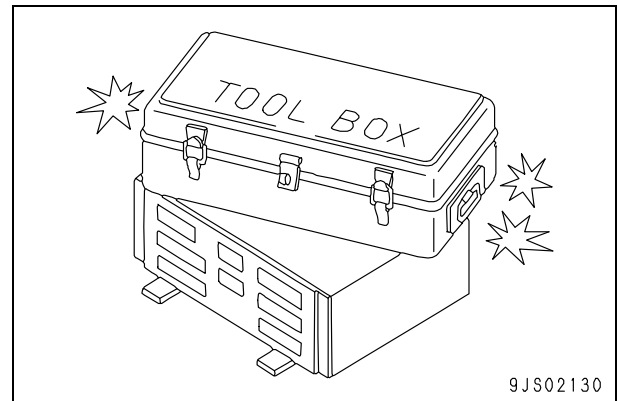

5. Points to remember when troubleshooting electric circuits

- 1) Always turn the power OFF before disconnecting or connecting connectors.
- 2) Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 - ★ Disconnect and connect the related connectors several times to check.
- 3) Always connect any disconnected connectors before going on to the next step.
 - ★ If the power is turned ON with the connectors still disconnected, unnecessary abnormality displays will be generated.
- 4) When carrying out troubleshooting of circuits (measuring the voltage, resistance, continuity, or current), move the related wiring and connectors several times and check that there is no change in the reading of the tester.
 - ★ If there is any change, there is probably defective contact in that circuit.

Points to remember when handling hydraulic equipment

With the increase in pressure and precision of hydraulic equipment, the most common cause of failure is dirt (foreign material) in the hydraulic circuit. When adding hydraulic oil, or when disassembling or assembling hydraulic equipment, it is necessary to be particularly careful.

1. Be careful of the operating environment.

Avoid adding hydraulic oil, replacing filters, or repairing the machine in rain or high winds, or places where there is a lot of dust.

2. Disassembly and maintenance work in the field




If disassembly or maintenance work is carried out on hydraulic equipment in the field, there is danger of dust entering the equipment. It is also difficult to check the performance after repairs, so it is desirable to use unit exchange. Disassembly and maintenance of hydraulic equipment should be carried out in a specially prepared dustproof workshop, and the performance should be checked with special test equipment.

3. Sealing openings

After any piping or equipment is removed, the openings should be sealed with caps, tapes, or vinyl bags to prevent any dirt or dust from entering. If the opening is left open or is blocked with a rag, there is danger of dirt entering or of the surrounding area being made dirty by leaking oil so never do this. Do not simply drain oil out onto the ground, but collect it and ask the customer to dispose of it, or take it back with you for disposal.

4. Do not let any dirt or dust get in during refilling operations

Be careful not to let any dirt or dust get in when refilling with hydraulic oil. Always keep the oil filler and the area around it clean, and also use clean pumps and oil containers. If an oil cleaning device is used, it is possible to filter out the dirt that has collected during storage, so this is an even more effective method.

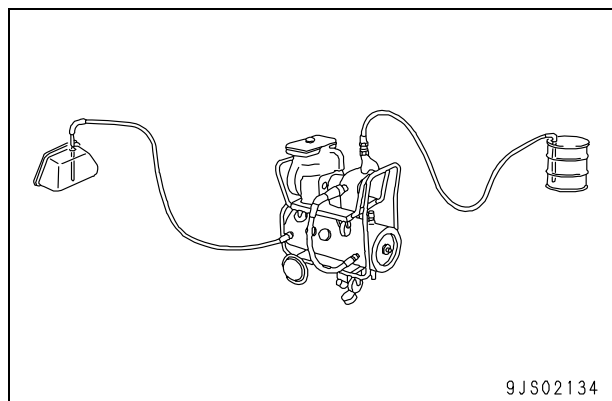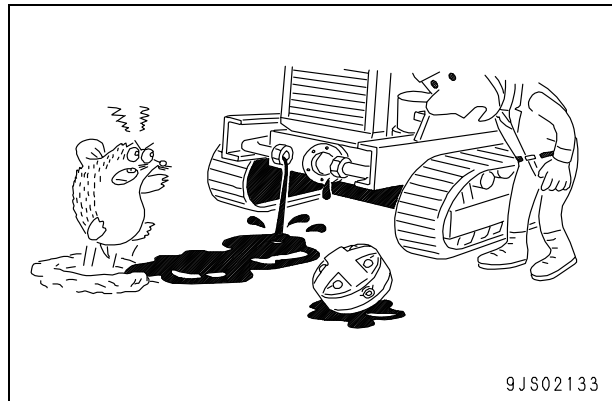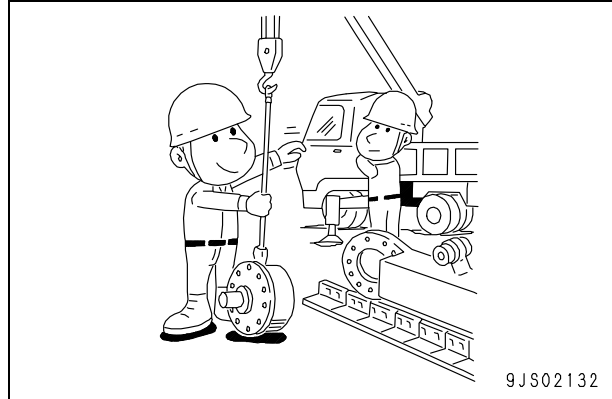


5. Change hydraulic oil when the temperature is high

When hydraulic oil or other oil is warm, it flows easily. In addition, the sludge can also be drained out easily from the circuit together with the oil, so it is best to change the oil when it is still warm. When changing the oil, as much as possible of the old hydraulic oil must be drained out. (Drain the oil from the hydraulic tank; also drain the oil from the filter and from the drain plug in the circuit.) If any old oil is left, the contaminants and sludge in it will mix with the new oil and will shorten the life of the hydraulic oil.


6. Flushing operations

After disassembling and assembling the equipment, or changing the oil, use flushing oil to remove the contaminants, sludge, and old oil from the hydraulic circuit. Normally, flushing is carried out twice: primary flushing is carried out with flushing oil, and secondary flushing is carried out with the specified hydraulic oil.

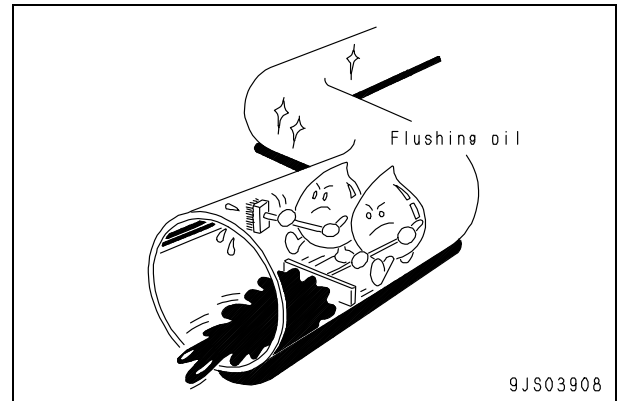

7. Cleaning operations

After repairing the hydraulic equipment (pump, control valve, etc.) or when running the machine, carry out oil cleaning to remove the sludge or contaminants in the hydraulic oil circuit. The oil cleaning equipment is used to remove the ultra fine (about 3 μ) particles that the filter built in the hydraulic equipment cannot remove, so it is an extremely effective device.

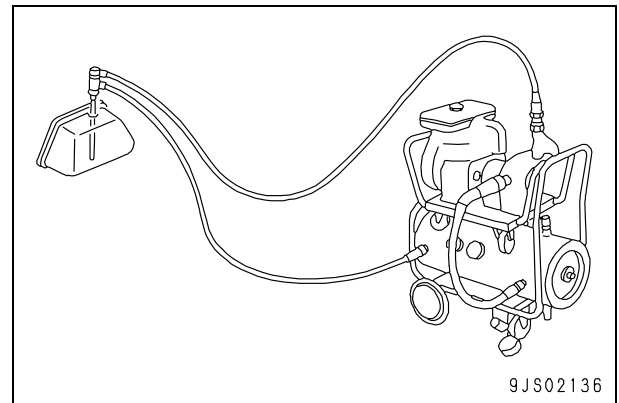

Handling of connectors newly used for engines

★ Mainly, following engines are object for following connectors.

- 95E-5
- 107E-1
- 114E-3
- 125E-5
- 140E-5
- 170E-5
- 12V140E-3

1. Slide lock type (FRAMATOME-3, FRAMATOME-2)

- 95 – 170, 12V140 engines
 - Various pressure sensors and NE speed sensor

Examples)

Intake air pressure sensor in intake manifold: PIM
(125, 170, 12V140 engines)

Oil pressure sensor: POIL
(125, 170, 12V140 engines)

Oil pressure switch
(95, 107, 114 engines)


Ne speed sensor of flywheel housing: NE
(95 – 170, 12V140 engines)

Ambient pressure sensor: PAMB
(125, 170, 12V140 engines)

Disconnect connector (1) according to the following procedure.

- 1) Slide lock (L1) to the right.
- 2) While pressing lock (L2), pull out connector (1) toward you.

★ Even if lock (L2) is pressed, connector (1) cannot be pulled out toward you, if part A does not float. In this case, float part A with a small screwdriver while press lock (L2), and then pull out connector (1) toward you.

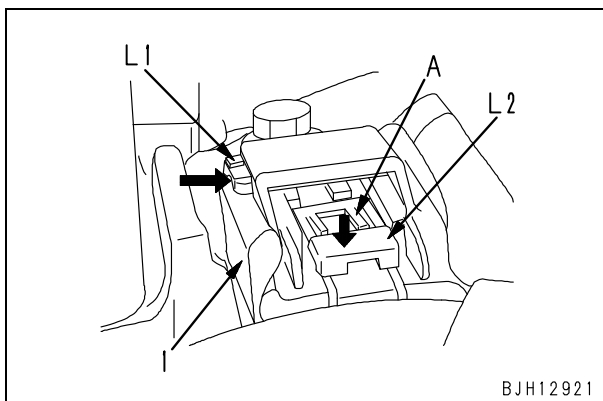

2. Pull lock type (PACKARD-2)

- 95 – 170, 12V140 engines
 - Various temperature sensors

Example)


Intake air temperature sensor in intake manifold: TIM

Fuel temperature sensor: TFUEL

Oil temperature sensor: TOIL

Coolant temperature sensor: TWTR, etc.

Disconnect the connector by pulling lock (B) (on the wiring harness side) of connector (2) outward.

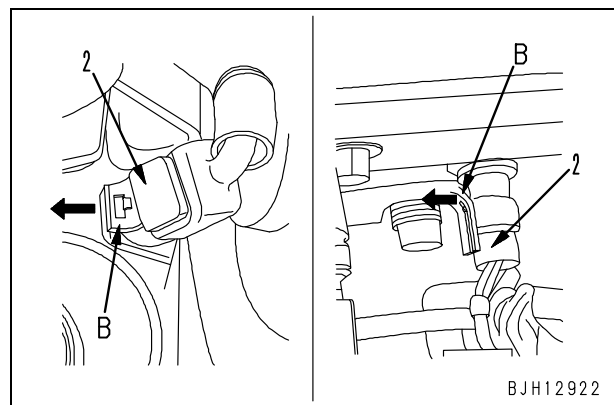


3. Push lock type

- 95, 107, 114 engines
Example)
Fuel pressure sensor in common rail
(BOSCH-03)



Disconnect connector (3) according to the following procedure.

- 1) While pressing lock (C), pull out connector (3) in the direction of the arrow.

- 114 engine

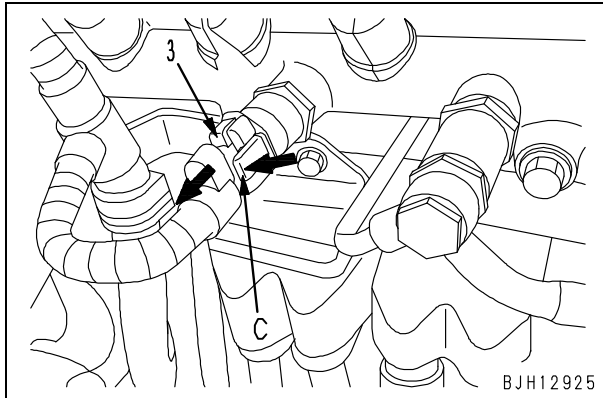


- 107 engine

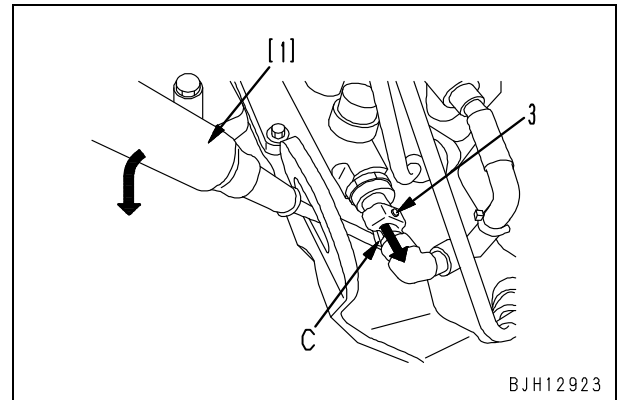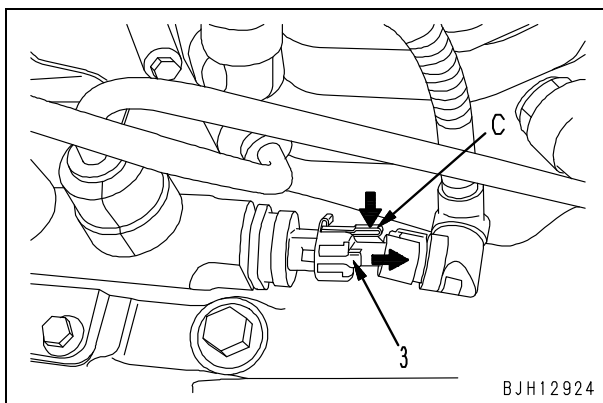

- 107, 114 engines
Example)
Intake air pressure/temperature sensor in
intake manifold
(SUMITOMO-04)

- 3) While pressing lock (D), pull out connector (4) in the direction of the arrow.

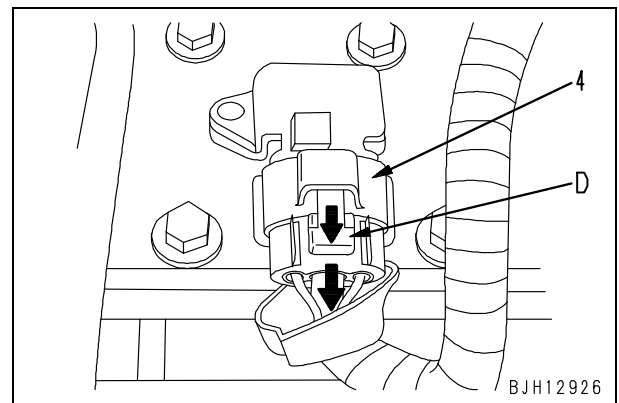


★ If the lock is on the underside, use flat-head screwdriver [1] since you cannot insert your fingers.


- 2) While pressing up lock (C) of the connector with flat-head screwdriver [1], pull out connector (3) in the direction of the arrow.

- 95, 125 – 170, 12V140 engines
- 4) While pressing lock (E) of the connector, pull out connector (5) in the direction of the arrow.


Example)
 Fuel pressure sensor in common rail:
 PFUEL etc. **(AMP-3)**

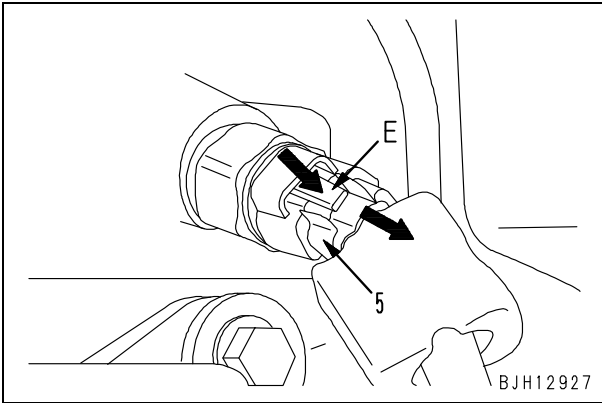

Example)
 Injection pressure control valve of fuel
 supply pump: PCV **(SUMITOMO-2)**

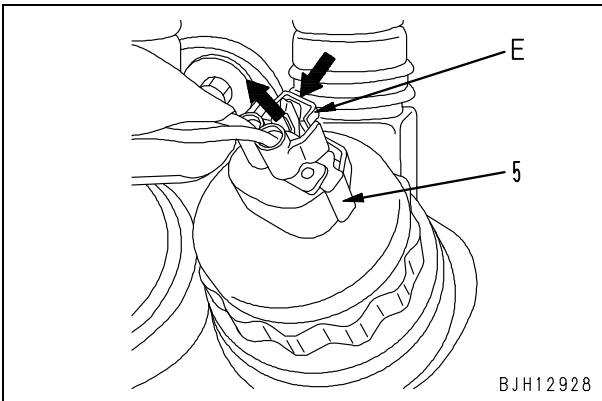


Example)
 Speed sensor of fuel supply pump:
 G **(SUMITOMO-3)**
 ★ Pull the connector straight up.

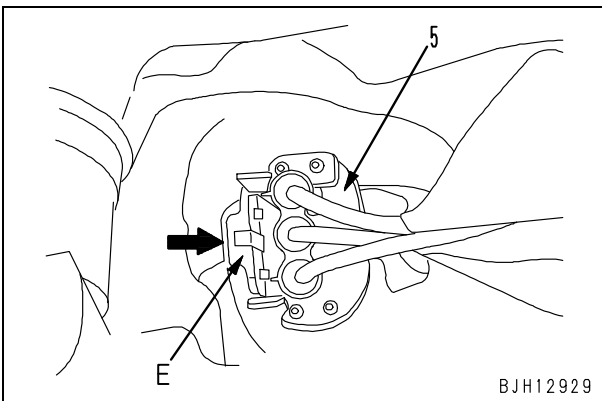


4. Turn-housing type (Round green connector)

- 140 engine
 Example)
 Intake air pressure sensor in intake mani-
 fold (CANNON-04): PIM etc.

- 1) Disconnect connector (6) according to the following procedure.
 - 1] Turn housing (H1) in the direction of the arrow.
 ★ When connector is unlocked, housing (H1) becomes heavy to turn.
 - 2] Pull out housing (H1) in the direction of the arrow.
 ★ Housing (H1) is left on the wiring harness side.

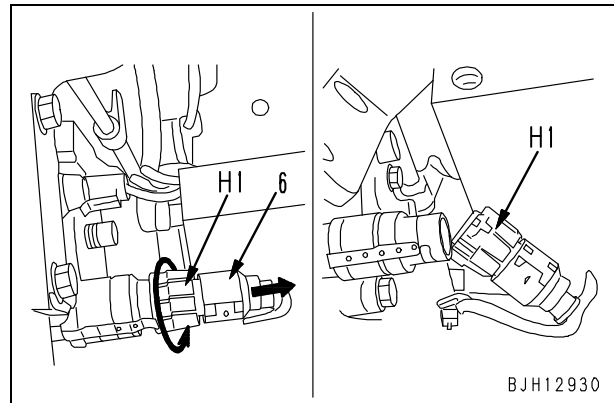


- 2) Connect the connector according to the following procedure.
 - 1] Insert the connector to the end, while setting its groove.
 - 2] Turn housing (H1) in the direction of the arrow until it "clicks".

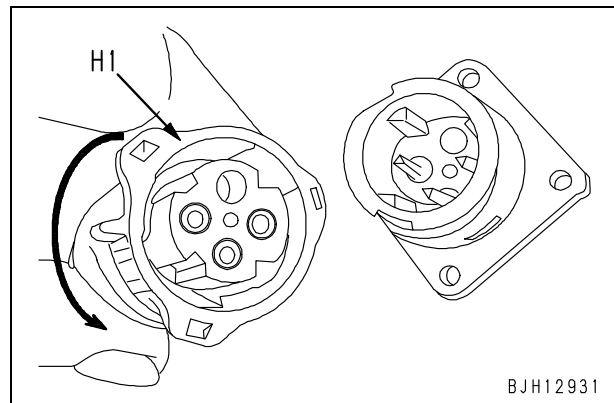

How to read electric wire code

- ★ The information about the wires unique to each machine model is described in Troubleshooting section, Relational information of troubleshooting.

In the electric circuit diagram, the material, thickness, and color of each electric wire are indicated by symbols. The electric wire code is helpful in understanding the electric circuit diagram.

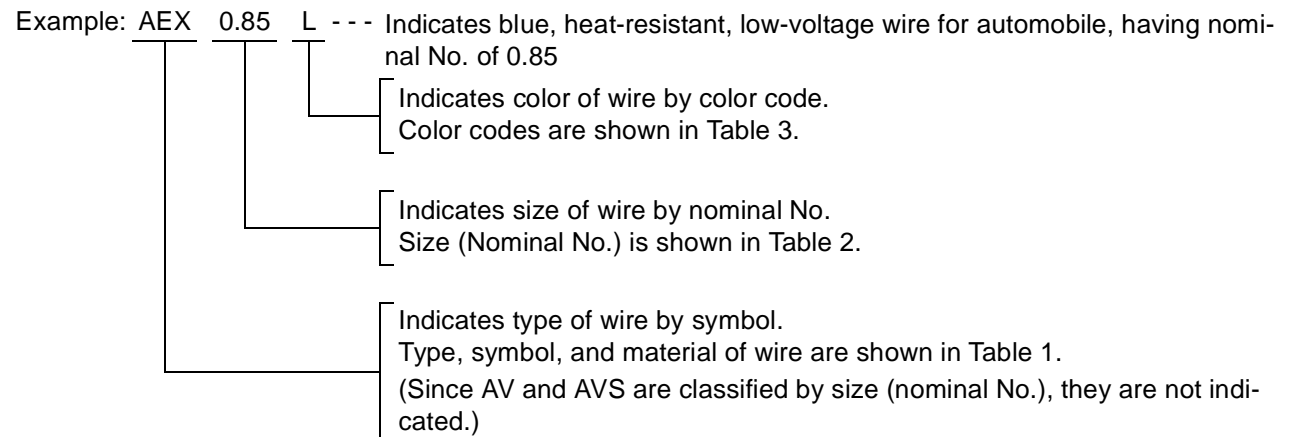

1. Type, symbol, and material

AV and AVS are different in only thickness and outside diameter of the cover. AEX is similar to AV in thickness and outside diameter of AEX and different from AV and AVS in material of the cover.

(Table 1)

Type	Sym- bol	Material		Using temperature range (°C)	Example of use
Low-voltage wire for automobile	AV	Conduc- tor	Annealed copper for elec- tric appliance	-30 to +60	General wiring (Nominal No. 5 and above)
		Insulator	Soft polyvinyl chloride		
Thin-cover low-voltage wire for automobile	AVS	Conduc- tor	Annealed copper for elec- tric appliance		
		Insulator	Soft polyvinyl chloride		
Heat-resis- tant low-volt- age wire for automobile	AEX	Conduc- tor	Annealed copper for elec- tric appliance	-50 to +110	General wiring in extremely cold district, wiring at high-tem- perature place
		Insulator	Heat-resistant crosslinked polyethylene		


2. Dimensions

(Table 2)

Nominal No.		0.5f	(0.5)	0.75f	(0.85)	1.25f	(1.25)	2f	2	3f	3	5
Conductor	Number of strands/Diameter of strand	20/0.18	7/0.32	30/0.18	11/0.32	50/0.18	16/0.32	37/0.26	26/0.32	58/0.26	41/0.32	65/0.32
	Sectional area (mm ²)	0.51	0.56	0.76	0.88	1.27	1.29	1.96	2.09	3.08	3.30	5.23
	d (approx.)	1.0		1.2		1.5		1.9	1.9	2.3	2.4	3.0
Cover D	AVS Standard	2.0		2.2		2.5		2.9	2.9	3.5	3.6	–
	AV Standard	–		–		–		–	–	–	–	4.6
	AEX Standard	2.0		2.2		2.7		3.0	3.1	–	3.8	4.6

Nominal No.		8	15	20	30	40	50	60	85	100
Conductor	Number of strands/Diameter of strand	50/0.45	84/0.45	41/0.80	70/0.80	85/0.80	108/0.80	127/0.80	169/0.80	217/0.80
	Sectional area (mm ²)	7.95	13.36	20.61	35.19	42.73	54.29	63.84	84.96	109.1
	d (approx.)	3.7	4.8	6.0	8.0	8.6	9.8	10.4	12.0	13.6
Cover D	AVS Standard	–	–	–	–	–	–	–	–	–
	AV Standard	5.5	7.0	8.2	10.8	11.4	13.0	13.6	16.0	17.6
	AEX Standard	5.3	7.0	8.2	10.8	11.4	13.0	13.6	16.0	17.6

“f” of nominal No. denotes flexible”.

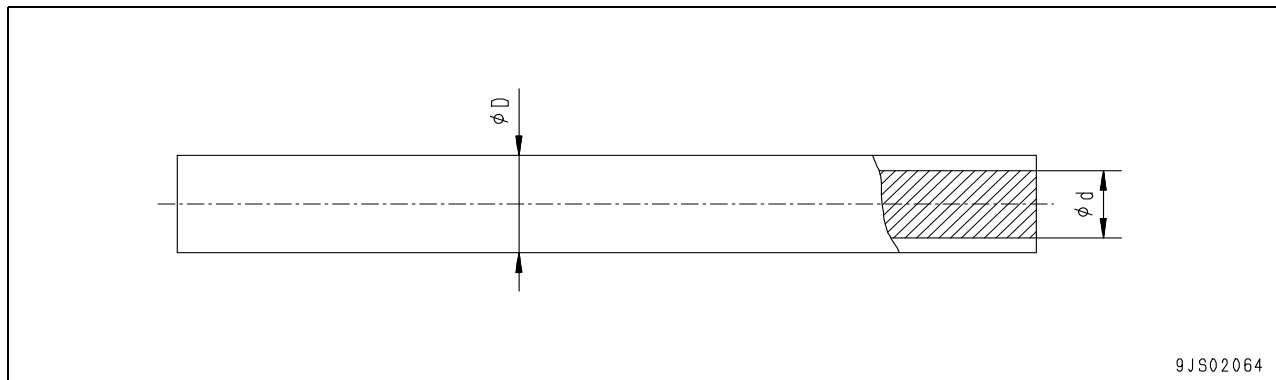

9JS02064

3. Color codes table

(Table 3)

Color Code	Color of wire	Color Code	Color of wire
B	Black	LgW	Light green & White
Br	Brown	LgY	Light green & Yellow
BrB	Brown & Black	LR	Blue & Red
BrR	Brown & Red	LW	Blue & White
BrW	Brown & White	LY	Blue & Yellow
BrY	Brown & Yellow	O	Orange
Ch	Charcoal	P	Pink
Dg	Dark green	R	Red
G	Green	RB	Red & Black
GB	Green & Black	RG	Red & Green
GL	Green & Blue	RL	Red & Blue
Gr	Gray	RW	Red & White
GR	Green & Red	RY	Red & Yellow
GW	Green & White	Sb	Sky Blue
GY	Green & Yellow	Y	Yellow
L	Blue	YB	Yellow & Black
LB	Blue & Black	YG	Yellow & Green
Lg	Light green	YL	Yellow & Blue
LgB	Light green & Black	YR	Yellow & Red
LgR	Light green & Red	YW	Yellow & White

Remarks: In a color code consisting of 2 colors, the first color is the color of the background and the second color is the color of the marking.

Example: "GW" means that the background is Green and marking is White.

4. Types of circuits and color codes

(Table 4)

Type of wire	AVS or AV						AEX		
Type of circuit	Charge	R	WG	-	-	-	-	R	-
	Ground	B	-	-	-	-	-	B	-
	Start	R	-	-	-	-	-	R	-
	Light	RW	RB	RY	RG	RL	-	D	-
	Instrument	Y	YR	YB	YG	YL	YW	Y	Gr
	Signal	G	GW	GR	GY	GB	GL	G	Br
	Others	L	LW	LR	LY	LB	-	L	-
		Br	BrW	BrR	BrY	BrB	-	-	-
		Lg	LgR	LgY	LgB	LgW	-	-	-
		O	-	-	-	-	-	-	-
		Gr	-	-	-	-	-	-	-
		P	-	-	-	-	-	-	-
		Sb	-	-	-	-	-	-	-
	Dg	-	-	-	-	-	-	-	-
Ch	-	-	-	-	-	-	-	-	

Precautions when carrying out operation

[When carrying out removal or installation (disassembly or assembly) of units, be sure to follow the general precautions given below when carrying out the operation.]

1. Precautions when carrying out removal work

- If the coolant contains antifreeze, dispose of it correctly.
- After disconnecting hoses or tubes, cover them or fit plugs to prevent dirt or dust from entering.
- When draining oil, prepare a container of adequate size to catch the oil.
- Confirm the match marks showing the installation position, and make match marks in the necessary places before removal to prevent any mistake when assembling.
- To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors. Do not pull the wires.
- Fit wires and hoses with tags to show their installation position to prevent any mistake when installing.
- Check the number and thickness of the shims, and keep in a safe place.
- When raising components, be sure to use lifting equipment of ample strength.
- When using forcing screws to remove any components, tighten the forcing screws uniformly in turn.
- Before removing any unit, clean the surrounding area and fit a cover to prevent any dust or dirt from entering after removal.

★ Precautions when handling piping during disassembly

Fit the following plugs into the piping after disconnecting it during disassembly operations.

1) Face seal type hoses and tubes


Nominal number	Plug (nut end)	Sleeve nut (elbow end)
02	07376-70210	02789-20210
03	07376-70315	02789-20315
04	07376-70422	02789-20422
05	07376-70522	02789-20522
06	07376-70628	02789-20628
10	07376-71034	07221-21034
12	07376-71234	07221-21234

2) Split flange type hoses and tubes

Nominal number	Flange (hose end)	Sleeve head (tube end)	Split flange
04	07379-00400	07378-10400	07371-30400
05	07379-00500	07378-10500	07371-30500

3) If the part is not under hydraulic pressure, the following corks can be used.

Nominal number	Part Number	Dimensions		
		D	d	L
06	07049-00608	6	5	8
08	07049-00811	8	6.5	11
10	07049-01012	10	8.5	12
12	07049-01215	12	10	15
14	07049-01418	14	11.5	18
16	07049-01620	16	13.5	20
18	07049-01822	18	15	22
20	07049-02025	20	17	25
22	07049-02228	22	18.5	28
24	07049-02430	24	20	30
27	07049-02734	27	22.5	34

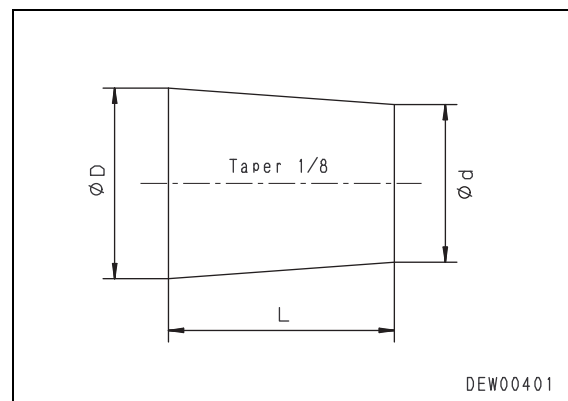

2. Precautions when carrying out installation work

- Tighten all bolts and nuts (sleeve nuts) to the specified (KES) torque.
 - Install the hoses without twisting or interference and fix them with intermediate clamps, if there are any.
 - Replace all gaskets, O-rings, cotter pins, and lock plates with new parts.
 - Bend the cotter pins and lock plates securely.
 - When coating with adhesive, clean the part and remove all oil and grease, then coat the threaded portion with 2 – 3 drops of adhesive.
 - When coating with gasket sealant, clean the surface and remove all oil and grease, check that there is no dirt or damage, then coat uniformly with gasket sealant.
 - Clean all parts, and correct any damage, dents, burrs, or rust.
 - Coat rotating parts and sliding parts with engine oil.
 - When press fitting parts, coat the surface with anti-friction compound (LM-P).
 - After fitting snap rings, check that the snap ring is fitted securely in the ring groove.
 - When connecting wiring connectors, clean the connector to remove all oil, dirt, or water, then connect securely.
 - When using eyebolts, check that there is no deformation or deterioration, screw them in fully, and align the direction of the hook.
 - When tightening split flanges, tighten uniformly in turn to prevent excessive tightening on one side.
- ★ When operating the hydraulic cylinders for the first time after reassembling cylinders, pumps and other hydraulic equipment removed for repair, always bleed the air as follows:
- 1) Start the engine and run at low idle.
 - 2) Operate the work equipment control lever to operate the hydraulic cylinder 4 – 5 times, stopping the cylinder 100 mm from the end of its stroke.
 - 3) Next, operate the hydraulic cylinder 3 – 4 times to the end of its stroke.
 - 4) After doing this, run the engine at normal speed.
- ★ When using the machine for the first time after repair or long storage, follow the same procedure.

3. Precautions when completing the operation

- 1) Refilling with coolant, oil and grease
 - If the coolant has been drained, tighten the drain valve, and add coolant to the specified level. Run the engine to circulate the coolant through the system. Then check the coolant level again.
 - If the hydraulic equipment has been removed and installed again, add engine oil to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
 - If the piping or hydraulic equipment have been removed, always bleed the air from the system after reassembling the parts.
 - ★ For details, see Testing and adjusting, “Bleeding air”.
 - Add the specified amount of grease (molybdenum disulphide grease) to the work equipment parts.
- 2) Checking cylinder head and manifolds for looseness

Check the cylinder head and intake and exhaust manifold for looseness.
If any part is loosened, retighten it.

 - For the tightening torque, see “Disassembly and assembly”.
- 3) Checking engine piping for damage and looseness

Intake and exhaust system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for air suction and exhaust gas leakage.
If any part is loosened or damaged, retighten or repair it.

Cooling system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for coolant leakage.
If any part is loosened or damaged, retighten or repair it.

Fuel system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for fuel leakage.
If any part is loosened or damaged, retighten or repair it.

- 4) Checking muffler and exhaust pipe for damage and looseness
 - 1] Visually check the muffler, exhaust pipe and their mounting parts for a crack and damage.
If any part is damaged, replace it.
 - 2] Check the mounting bolts and nuts of the muffler, exhaust pipe and their mounting parts for looseness.
If any bolt or nut is loosened, retighten it.
- 5) Checking muffler function
Check the muffler for abnormal sound and sound different from that of a new muffler.
If any abnormal sound is heard, repair the muffler, referring to "Troubleshooting" and "Disassembly and assembly".


Method of disassembling and connecting push-pull type coupler

- ⚠ Before carrying out the following work, loosen the oil filler cap of the hydraulic tank gradually to release the residual pressure from the hydraulic tank.
- ⚠ Even if the residual pressure is released from the hydraulic tank, some hydraulic oil flows out when the hose is disconnected. Accordingly, prepare an oil receiving container.

Type 1


1. Disconnection

- 1) Hold adapter (1) and push hose joint (2) into mating adapter (3). (Fig. 1)
 - ★ The adapter can be pushed in about 3.5 mm.
 - ★ Do not hold rubber cap portion (4).
- 2) After hose joint (2) is pushed into adapter (3), press rubber cap portion (4) against adapter (3) until it clicks. (Fig. 2)
- 3) Hold hose adapter (1) or hose (5) and pull it out. (Fig. 3)
 - ★ Since some hydraulic oil flows out, prepare an oil receiving container.

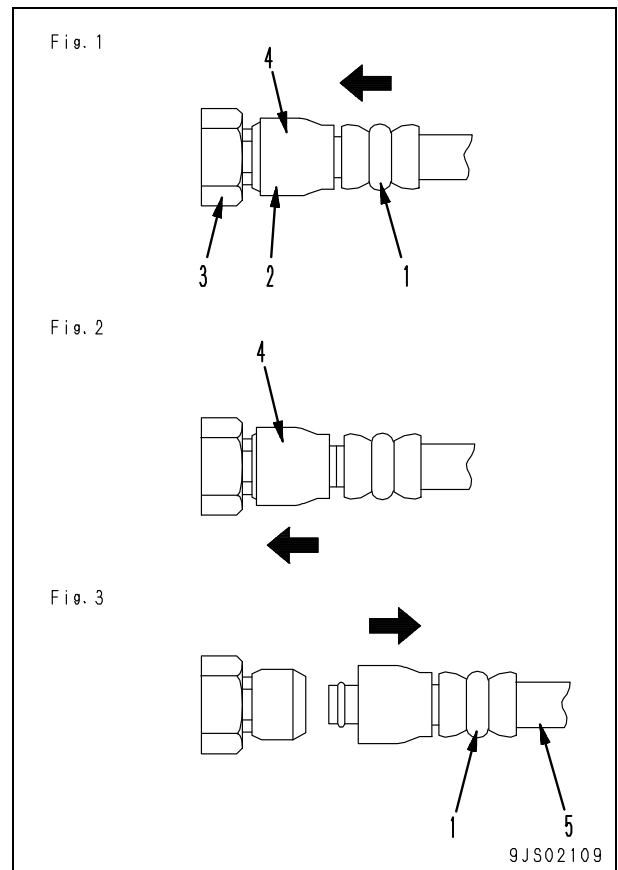

2. Connection


- 1) Hold hose adapter (1) or hose (5) and insert it in mating adapter (3), aligning them with each other. (Fig. 4)
 - ★ Do not hold rubber cap portion (4).
- 2) After inserting the hose in the mating adapter perfectly, pull it back to check its connecting condition. (Fig. 5)
 - ★ When the hose is pulled back, the rubber cap portion moves toward the hose about 3.5 mm. This does not indicate abnormality, however.

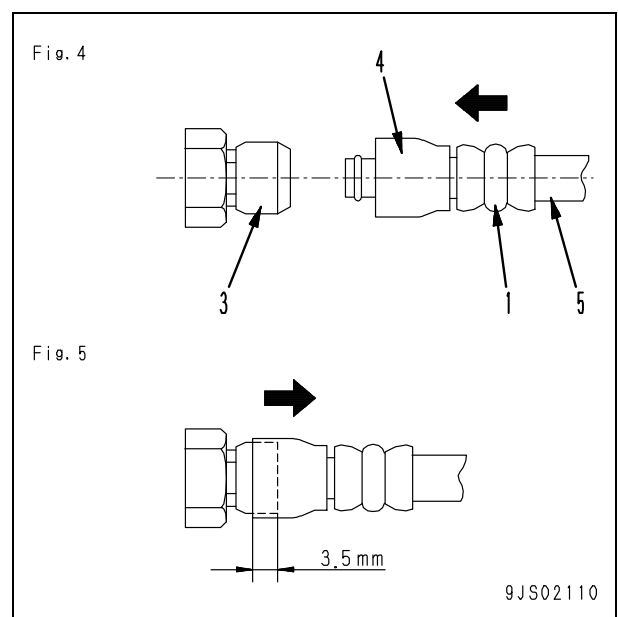

Type 2


1. Disconnection

- 1) Hold the tightening portion and push body (7) straight until sliding prevention ring (6) contacts contact surface (a) of the hexagonal portion at the male end. (Fig. 6)
- 2) While holding the condition of Step 1, turn lever (8) to the right (clockwise). (Fig. 7)
- 3) While holding the condition of Steps 1) and 2), pull out whole body (7) to disconnect it. (Fig. 8)

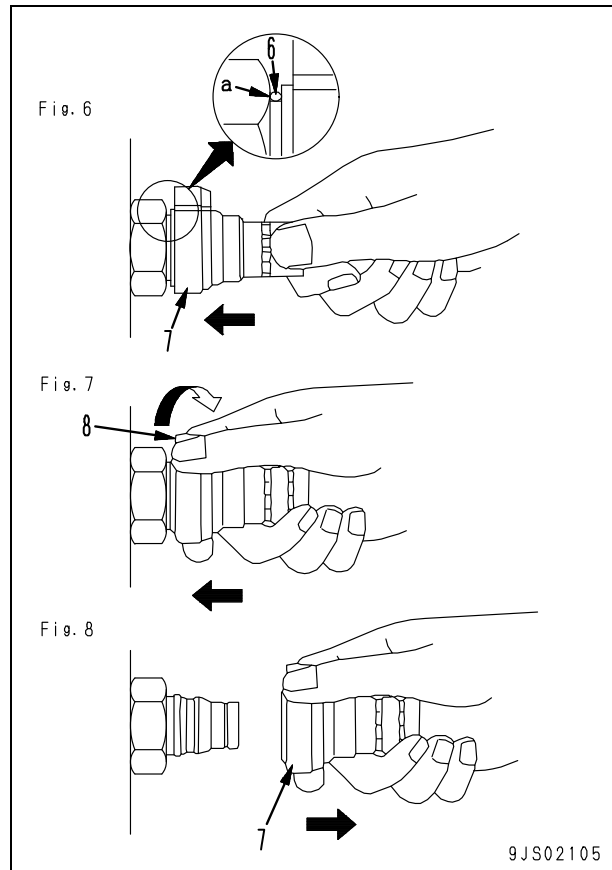

2. Connection

- Hold the tightening portion and push body (7) straight until sliding prevention ring (6) contacts contact surface (a) of the hexagonal portion at the male end. (Fig. 9)

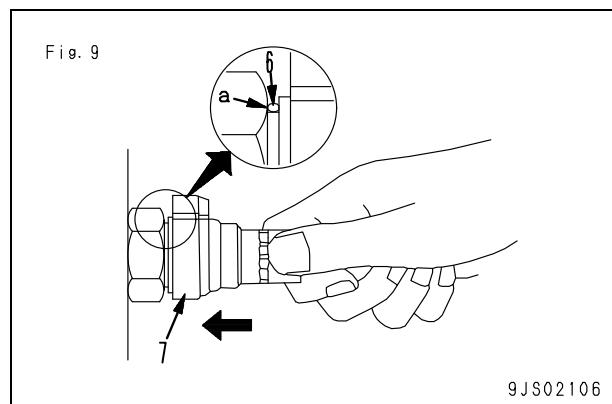

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com