

Shop Manual

WHEEL LOADER

WA600-6

SERIAL NUMBERS 60001 and up

ecot3

KOMATSU

WHEEL LOADER

WA600-6

Machine model Serial number

WA600-6

60001 and up

00 Index and foreword

Index

Composition of shop manual	2
Table of contents	4

Composition of shop manual

The contents of this shop manual are shown together with Form No. in a list.

Note 1: Always keep the latest version of this manual in accordance with this list and utilize accordingly.

The marks shown to the right of Form No. denote the following:

○: New issue (to be filed additionally) ●: Revision (to be replaced for each Form No.)

Note 2: This shop manual can be supplied for each Form No.

Note 3: To file this shop manual in the special binder for management, handle it as follows:

- Place a divider on the top of each section in the file after matching the Tub No. with No. indicated next to each Section Name shown in the table below:
- File overview and other materials in sections in the order shown below and utilize them accordingly.

Section Title	Form Number
Shop Manual, contents binder, binder label and tabs	SEN00235-18
00 Index and foreword	SEN00397-18
Index	SEN00398-18 ●
Foreword and general information	SEN00415-04
01 Specification	SEN00399-03
Specification and technical data	SEN00400-03
10 Structure, function and maintenance standard	SEN00401-08
Engine and cooling system	SEN00402-01
Power train, Part 1	SEN00403-02
Power train, Part 2	SEN02455-01
Steering system	SEN00404-03
Brake system	SEN00405-02
Undercarriage and frame	SEN00406-00
Hydraulic system, Part 1	SEN00407-01
Hydraulic system, Part 2	SEN02456-01
Work equipment	SEN00408-03
Cab and its attachments	SEN00409-01
Electrical system, Part 1	SEN01009-02
Electrical system, Part 2	SEN00410-02
Electrical system, Part 3	SEN00411-03
20 Standard value table	SEN00566-05
Standard service value table	SEN00552-05 ●
30 Testing and adjusting	SEN00567-08
Testing and adjusting, Part 1	SEN00553-05
Testing and adjusting, Part 2	SEN00554-06 ●
Testing and adjusting, Part 3	SEN00555-06
Testing and adjusting, Part 4	SEN00556-05
40 Troubleshooting	SEN00568-04
Failure code table and fuse locations	SEN03364-02 ●
General information on troubleshooting	SEN00557-02 ●

Troubleshooting by failure code (Display of code), Part 1	SEN00558-03 ●
Troubleshooting by failure code (Display of code), Part 2	SEN00559-04 ●
Troubleshooting by failure code (Display of code), Part 3	SEN00560-03 ●
Troubleshooting by failure code (Display of code), Part 4	SEN00561-04 ●
Troubleshooting by failure code (Display of code), Part 5	SEN00562-04 ●
Troubleshooting by failure code (Display of code), Part 6	SEN00569-04 ●
Troubleshooting by failure code (Display of code), Part 7	SEN00570-04 ●
Troubleshooting by failure code (Display of code), Part 8	SEN00571-04 ●
Troubleshooting by failure code (Display of code), Part 9	SEN00572-04 ●
Troubleshooting by failure code (Display of code), Part 10	SEN00573-04 ●
Troubleshooting by failure code (Display of code), Part 11	SEN00574-04 ●
Troubleshooting of electrical system (E-mode)	SEN00563-04 ●
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00564-02
Troubleshooting of engine (S-mode)	SEN00565-02
50 Disassembly and assembly	SEN00583-07
General information on disassembly and assembly	SEN01156-03
Engine and cooling system, Part 1	SEN01157-03 ●
Engine and cooling system, Part 2	SEN01158-03
Power train, Part 1	SEN01160-03 ●
Power train, Part 2	SEN01162-03 ●
Power train, Part 3	SEN01164-04 ●
Power train, Part 4	SEN01165-02
Brake system	SEN01167-02
Undercarriage and frame	SEN01169-03 ●
Hydraulic system	SEN01171-03 ●
Work equipment	SEN01174-02
Cab and its attachments	SEN01175-03 ●
Electrical system	SEN01177-03
90 Diagrams and drawings	SEN00414-07
Hydraulic diagrams and drawings	SEN00412-04
Electrical diagrams and drawings	SEN00413-04

Table of contents

00 Index and foreword	
Index	SEN00398-18
Composition of shop manual	2
Table of contents.....	4
Foreword and general information	SEN00415-04
Safety notice	2
How to read the shop manual.....	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code.....	23
Precautions when carrying out operation	26
Method of disassembling and connecting push-pull type coupler	29
Standard tightening torque table.....	32
Conversion table.....	36
01 Specification	
Specification and technical data	SEN00400-03
Specification and technical data	2
Specification dimension drawing.....	2
Specifications	3
Weight table	10
Table of fuel, coolant and lubricants	12
10 Structure, function and maintenance standard	
Engine and cooling system	SEN00402-01
Engine and cooling system	2
Engine mount and transmission mount	2
Cooling system	6
Cooling fan pump.....	10
Cooling fan motor	18
Power train, Part 1	SEN00403-02
Power train, Part 1.....	2
Power train.....	2
Power train system diagram	3
Torque converter and transmission piping diagram	4
Torque converter.....	6
Modulation clutch.....	15
Torque converter regulator valve	16
Transmission.....	18
Transfer.....	38
Transmission control valve	40
ECMV	43
Main relief valve and torque converter relief valve	50
Lubrication relief valve	52
Power train, Part 2	SEN02455-01
Power train, Part 2.....	2
Torque converter oil cooler	2
Torque converter oil filter	3
Drive shaft.....	5
Center support.....	8
Axle.....	10
Differential.....	14
Limited slip differential	23

Final drive	28
Steering system	SEN00404-03
Steering system	4
Steering piping diagram	4
Steering column	6
Joystick steering lever linkage	7
Joystick EPC valve	8
Lock valve	9
Steering valve	10
Rotary valve	13
Steering control valve	16
Two-way restrictor valve	32
Stop valve	33
Steering pump	34
Steering cylinder	48
Emergency steering piping diagram	50
Diverter valve	51
Emergency steering pump	59
Brake system	SEN00405-02
Brake system	2
Brake piping diagram	2
Brake	4
Brake valve	8
Accumulator charge valve	16
EPC relief valve	22
Accumulator (for brake)	24
Slack adjuster	26
Parking brake	30
Parking brake solenoid valve	32
Emergency parking brake release valve	34
Brake cooling pump	35
Undercarriage and frame	SEN00406-00
Undercarriage and frame	2
Axle mount	2
Center hinge pin	7
Hydraulic system, Part 1	SEN00407-01
Hydraulic system, Part 1	2
Hydraulic piping diagram	2
Work equipment control lever linkage	4
Hydraulic tank	6
Work equipment hydraulic pump	8
Hydraulic system, Part 2	SEN02456-01
Hydraulic system, Part 2	2
Control valve	2
CLSS	16
Each function and operation of each valve	21
Accumulator (for PPC circuit)	38
Accumulator (for ECSS)	39
Triple pump	40
Work equipment	SEN00408-03
Work equipment	2
Work equipment linkage	2
Bucket	6
Bucket positioner and boom kick-out	11
Work equipment lubrication	12
Work equipment cylinder	14

Cab and its attachments	SEN00409-01
Cab and its attachments.....	2
ROPS cab.....	2
Air conditioner.....	4
Electrical system, Part 1	SEN01009-02
Electrical system, Part 1.....	2
Machine monitor system.....	2
Machine monitor.....	8
Electrical system, Part 2	SEN00410-02
Electrical system, Part 2.....	2
Work equipment control system.....	2
Transmission controller system.....	38
Electrical system, Part 3	SEN00411-03
Electrical system, Part 3.....	2
Electric transmission control.....	2
Engine starting/stopping circuit.....	4
Parking brake circuit.....	7
Sensor.....	11
VHMS controller related.....	33
Work equipment electric lever.....	37
20 Standard value table	
Standard service value table	SEN00552-05
Standard service value table for engine.....	2
Standard service value table for chassis.....	3
30 Testing and adjusting	
Testing and adjusting, Part 1	SEN00553-05
Tools for testing, adjusting, and troubleshooting.....	3
Sketches of special tools.....	9
Measuring engine speed.....	10
Measuring exhaust gas color.....	12
Measuring exhaust temperature.....	13
Adjusting valve clearance.....	15
Testing compression pressures.....	17
Measuring blow-by pressure.....	20
Measuring engine oil pressure.....	21
Testing EGR valve and bypass valve drive oil pressure.....	22
Measuring intake air (boost) pressure.....	24
Handling fuel system equipment.....	25
Releasing residual pressure in fuel system.....	25
Testing fuel pressures.....	26
Testing return rate and leakage.....	27
Bleeding air from fuel circuit.....	30
Testing leakage in fuel system.....	32
Handling reduced cylinder mode operation.....	33
Handling no-injection cranking operation.....	33
Handling controller voltage circuit.....	34
Replacing and adjusting alternator and air conditioner compressor belt tension.....	35
Adjusting modulation clutch speed sensor and speed sensor.....	36
Measuring directional lever and gear shift lever (Steering wheel specification).....	38
Testing and adjusting power train oil pressure.....	39
Flushing procedure for torque converter and transmission hydraulic circuit.....	53
Method of moving machine when transmission valve is broken.....	55
Adjusting steering stop valve.....	57

Testing and adjusting, Part 2	SEN00554-06
Measuring operating effort of AJSS lever (AJSS specification).....	3
Testing and adjusting AJSS lever angle sensor and frame angle sensor (AJSS specification)	4
Testing and adjusting steering stopper bolt (AJSS specification)	6
Testing and adjusting steering wheel (Steering wheel specification).....	8
Testing steering oil pressure.....	10
Bleeding air from steering cylinder circuit.....	14
Testing hydraulic drive fan	15
Bleeding air from hydraulic drive fan circuit.....	18
Measuring brake pedal	20
Measuring brake performance.....	21
Testing and adjusting accumulator charge pressure	22
Testing wheel brake oil pressure	24
Measuring wear of wheel brake disc	26
Bleeding air from wheel brake circuit.....	27
Releasing residual pressure in brake accumulator circuit	28
Testing parking brake performance	29
Measuring parking brake oil pressure	30
Testing wear of parking brake disc	33
Method of releasing parking brake manually	34
Measuring and adjusting work equipment control lever	35
Measuring work equipment oil pressure.....	36
Bleeding air from work equipment circuit.....	41
Releasing residual pressure in work equipment circuit	42
Testing of accumulator nitrogen gas pressure and procedure for charging ECSS accumulator with nitrogen gas.....	44
Testing of accumulator nitrogen gas pressure and procedure for charging brake accumulator with nitrogen gas.....	50
Moving machine for removing operator cab	55
Testing and adjusting bucket positioner.....	57
Testing and adjusting lift arm position detecting lever	59
Checking proximity switch operation indication lamp	60
Preparations for work on troubleshooting of electric system	61
Procedure for testing diodes.....	65
Testing and adjusting, Part 3	SEN00555-06
Machine monitor-based adjustment at replacement, disassembly and assembly, and additional installation for each sensor and controller	2
Special functions of machine monitor (EMMS).....	5
Testing and adjusting, Part 4	SEN00556-05
VHMS controller initial setting procedure	2
Precautions for replacing VHMS controller.....	22
Pm-clinic inspection table	28
40 Troubleshooting	
Failure code table and fuse locations	SEN03364-02
Failure codes list.....	2
Fuse locations	15
General information on troubleshooting	SEN00557-02
Points to remember when performing troubleshooting.....	2
How to proceed in troubleshooting	4
Testing before troubleshooting	6
Classification and procedures of troubleshooting.....	8
Information in troubleshooting table	12
Troubleshooting method for disconnecting wiring harness of pressure sensor system	14
Phenomena looking like troubles and troubleshooting Nos.....	17
Connection table for connector pin numbers.....	19

T- branch box and T- branch adapter table.....	54
Troubleshooting by failure code (Display of code), Part 1	SEN00558-03
Failure code [1500L0] TORQFLOW transmission: Double meshing	3
Failure code [15B0NX] Transmission Oil Filter Clogging.....	4
Failure code [15SAL1] ECMV F clutch: When command current is OFF, fill signal is ON.....	6
Failure code [15SALH] ECMV F clutch: When command current is ON, fill signal is OFF	8
Failure code [15SBL1] ECMV R clutch: When command current is OFF, fill signal is ON	10
Failure code [15SBLH] ECMV R clutch: When command current is ON, fill signal is OFF	12
Failure code [15SEL1] ECMV (1): When command current is OFF, fill signal is ON	14
Failure code [15SELH] ECMV (1): When command current is ON, fill signal is OFF	16
Failure code [15SFL1] ECMV (2): When command current is OFF, fill signal is ON	18
Failure code [15SFLH] ECMV (2): When command current is ON, fill signal is OFF	20
Failure code [15SGL1] ECMV (3): When command current is OFF, fill signal is ON	22
Failure code [15SGLH] ECMV (3): When command current is ON, fill signal is OFF	24
Failure code [15SHL1] ECMV (4): When command current is OFF, fill signal is ON.....	26
Failure code [15SHLH] ECMV (4): When command current is ON, fill signal is OFF.....	28
Failure code [15W0NT] Transmission modulation clutch: Overheating	30
Failure code [2F00MA] Parking brake: Malfunction	31
Failure code [2G42ZG] Front Accumulator Oil Pressure Low	34
Troubleshooting by failure code (Display of code), Part 2	SEN00559-04
Failure code [2G43ZG] Rear Accumulator Oil Pressure Low	4
Failure code [44K0L4] (Bucket positioner: ON/OFF signals disagree)	6
Failure code [A000N1] (or VHMS_LED display: "n2" → "01") Engine: Overrun	9
Failure code [AA1ANX] Air Cleaner Clogging.....	10
Failure code [AB00L6] Alternator: Signal disagrees with run and stop of engine.....	12
Failure code [AB00MA] Alternator: Malfunction.....	14
Failure code [B@BAZG] Engine oil pressure: Low error	16
Failure code [B@BAZK] Eng Oil Level Low.....	17
Failure code [B@BCNS] Engine coolant temperature: Overheating	18
Failure code [B@BCZK] Engine coolant level low.....	20
Failure code [B@C7NS] Brake oil overheating.....	22
Failure code [b@CENS] Torque converter oil overheating	23
Failure code [B@CENS] Torque converter oil overheating.....	24
Failure code [B@GAZK] Low Battery Fluid Level.....	25
Failure code [B@HANS] Hyd Oil Overheat	27
Failure code [CA111] Abnormality in engine controller	28
Failure code [CA115] Engine Ne or Bkup speed sensor error.....	31
Failure code [CA122] Charge (boost) pressure sensor high error.....	32
Failure code [CA123] Charge (boost) pressure sensor low error	34
Failure code [CA131] Throttle sensor high error.....	36
Failure code [CA132] Throttle sensor low error	39
Failure code [CA135] Engine oil pressure sensor high error	42
Failure code [CA141] Engine oil pressure sensor low error	44
Failure code [CA144] Coolant temperature sensor high error	46
Failure code [CA145] Coolant temperature sensor low error	48
Failure code [CA153] Charge (boost) temperature sensor high error	50
Failure code [CA154] Charge (boost) temperature sensor low error.....	52
Failure code [CA187] Sensor power supply 2 low error	54
Failure code [CA212] Engine oil temperature sensor high error.....	56
Failure code [CA213] Engine oil temperature sensor low error.....	58
Failure code [CA221] Atmospheric pressure sensor high error.....	60
Failure code [CA222] Atmospheric pressure sensor low error	62
Failure code [CA227] Sensor power supply 2 high error	64
Troubleshooting by failure code (Display of code), Part 3	SEN00560-03
Failure code [CA234] Engine overspeed	3
Failure code [CA238] Ne speed sensor power supply error	4
Failure code [CA263] Fuel Temp Sensor High Error	6
Failure code [CA265] Fuel Temp Sensor Low Error	8

Failure code [CA271] PCV1 Short circuit	10
Failure code [CA272] PCV1 Disconnection.....	11
Failure code [CA273] PCV2 Short circuit	12
Failure code [CA274] PCV2 Disconnection.....	13
Failure code [CA322] Injector #1 open/short error	14
Failure code [CA323] Injector #5 open/short error	16
Failure code [CA324] Injector #3 open/short error	18
Failure code [CA325] Injector #6 open/short error	20
Failure code [CA331] Injector #2 open/short error	22
Failure code [CA332] Injector #4 open/short error	24
Failure code [CA342] Calibration code inconsistency	26
Failure code [CA351] Injectors drive circuit error	27
Failure code [CA352] Sens Supply 1 Volt Low Error	28
Failure code [CA386] Sensor power supply 1 high error.....	30
Failure code [CA431] Idle validation switch error	31
Failure code [CA432] Idle validation action error.....	34
Failure code [CA441] Battery voltage low error.....	37
Failure code [CA442] Battery voltage high error	38
Failure code [CA449] Common rail pressure high error 2	39
Failure code [CA451] Rail Press Sensor High Error.....	40
Failure code [CA452] Rail Press Sensor Low Error	42
Failure code [CA553] Common rail pressure high error 1	44
Failure code [CA554] Common rail pressure sensor in range error.....	45
Failure code [CA559] Supply pump pressure very low error 1	46
Failure code [CA689] Engine Ne speed sensor error.....	50
Failure code [CA731] Engine Bkup speed sensor phase error	52
Failure code [CA757] All continuous data lost error	53
Failure code [CA778] Engine Bkup speed sensor error	54
Failure code [CA1228] EGR valve servo error 1	56
Failure code [CA1625] EGR valve servo error 2	57
Failure code [CA1626] Bypass valve solenoid current high error.....	58
Failure code [CA1627] Bypass valve solenoid current low error	60
Failure code [CA1628] Bypass Valve Servo Error 1	62
Failure code [CA1629] Bypass Valve Servo Error 2.....	63
Failure code [CA1631] Bypass valve lift sensor high error	64
Failure code [CA1632] Bypass valve lift sensor low error	66
Failure code [CA1633] KOMNET datalink timeout error.....	68
Troubleshooting by failure code (Display of code), Part 4	SEN00561-04
Failure code [CA2185] Throttle sensor supply voltage high error	4
Failure code [CA2186] Throttle sensor power supply low error.....	6
Failure code [CA2249] Supply pump pressure very low error 2	8
Failure code [CA2271] EGR valve lift sensor high error	10
Failure code [CA2272] EGR valve lift sensor low error	12
Failure code [CA2351] EGR valve solenoid operation short circuit.....	14
Failure code [CA2352] EGR valve solenoid operation disconnect	16
Failure code [CA2555] Intake air heater relay open circuit error	18
Failure code [CA2556] Intake air heater relay short circuit error	20
Failure code [D191KA] AJSS neutral safety relay open circuit.....	22
Failure code [D191KB] AJSS neutral safety relay short circuit.....	24
Failure code [D192KA] ECSS solenoid: Disconnection.....	26
Failure code [D192KB] ECSS solenoid: Short circuit	27
Failure code [D192KY] ECSS solenoid: Short circuit with power supply line	28
Failure code [D198KA] Transmission oil pressure bypass solenoid: Disconnection	29
Failure code [D198KB] Transmission oil pressure bypass solenoid: Short circuit.....	30
Failure code [D198KY] Transmission oil pressure bypass solenoid: Short circuit with power supply line	31
Failure code [D5ZHKA] Terminal C signal open circuit.....	32
Failure code [D5ZHKB] Terminal C signal short circuit.....	34

Failure code [D5ZHKZ] Terminal C signal open or short circuit.....	36
Failure code [D5ZHL6] Terminal C signal: Signal does not match engine running or stopped state	38
Failure code [DA80L4] Auto-greasing controller disagrees with ON/OFF signal.....	40
Failure code [DAF3KK] Machine monitor: Source voltage low (input).....	42
Failure code [DAF5KP] Machine monitor: Output voltage low.....	44
Failure code [DAFRKR] CAN communication with machine monitor: Defective communication (Abnormality in target component system).....	46
Failure code [DAQ0KK] Transmission controller: Source voltage low	47
Failure code [DAQ0KT] Transmission controller: Defect in controller.....	50
Failure code [DAQ2KK] Transmission controller load power supply line: Low source voltage (input)	51
Failure code [DAQ9KQ] Transmission controller model selection: Disagreement of model selection signals	54
Failure code [DAQRKR] CAN communication with transmission controller: Defective communication (Abnormality in target component system).....	55
Failure code [DAQRMA] Transmission controller (Option setting): Malfunction	60
Troubleshooting by failure code (Display of code), Part 5	SEN00562-04
Failure code [DB2RKR] CAN communication from engine controller: Defective communication (Abnormality in target component system).....	4
Failure code [DB90KK] Work equipment controller: Source voltage low (input).....	7
Failure code [DB90KT] Work equipment controller: Defect in controller	10
Failure code [DB92KK] Work equipment controller load power supply line: Low source voltage (input)	11
Failure code [DB95KX] (Work equipment controller power supply output: Out of input signal range)	14
Failure code [DB99KQ] (Work equipment controller model selection: Disagreement of model selection signals).....	16
Failure code [DB9RKR] CAN communication with work equipment controller: Defective communication (Abnormality in target component system).....	17
Failure code [DB9RMA] Work equipment controller (Option setting): Malfunction	18
Failure code [DB9RMC] (CAN communication with transmission controller: Defective operation)	19
Failure code [DBB0KK] (or VHMS_LED display: "n9" → "01") VHMS controller: Low source voltage (input)	20
Failure code [DBB0KQ] (or VHMS_LED display: "nF" → "11") VHMS controller: (Disagreement of model selection signals).....	22
Failure code [DBB3KK] (or VHMS_LED display: "n9" → "05") VHMS controller battery power supply: Low source voltage (input)	24
Failure code [DBB5KP] (or VHMS_LED display: "n9" → "04") (VHMS controller 5 V power supply output: Low output voltage).....	26
Failure code [DBB6KP] (or VHMS_LED display: "n9" → "02") (VHMS controller 24 V power supply output: Low output voltage).....	28
Failure code [DBB7KP] (or VHMS_LED display: "n9" → "03") (VHMS controller 12 V power supply output: Low output voltage).....	30
Failure code [DBBQKR] (or VHMS_LED display: "n8" → "02") VHMS controller CAN communication: Defective communication (Abnormality in target component system)....	32
Failure code [DD15LD] ■ switch (Panel switch 1): Switch is kept pressed for long time	34
Failure code [DD16LD] ◇ switch (Panel switch 2): Switch is kept pressed for long time	36
Failure code [DD17LD] < switch (Panel switch 3): Switch is kept pressed for long time	38
Failure code [DD18LD] > switch (Panel switch 4): Switch is kept pressed for long time	40
Failure code [DD1ALD] (Remote positioner raise/lower set switch (raise): Switch is kept pressed for long time).....	42
Failure code [DD1BLD] (Remote positioner raise/lower set switch (lower): Switch is kept pressed for long time).....	44
Failure code [DD1CLD] Load meter subtotal switch: Switch is kept pressed for long time	46
Failure code [DD1FLD] (Load meter mode selector switch (A/B): Switch is kept pressed for long time).....	48

Failure code [DD1GLD] (Load meter mode selector switch (+/-): Switch is kept pressed for long time).....	50
Troubleshooting by failure code (Display of code), Part 6	SEN00569-04
Failure code [DD1HLD] (Load meter display selector switch: Switch is kept pressed for long time)	4
Failure code [DDA7L4] RPM set ON/OFF switch: ON-OFF signals disagree	6
Failure code [DDA8KB] RPM set idle-up/down selector switch (idle-up): Short circuit	8
Failure code [DDA9KB] RPM set idle-up/down selector switch (idle-down): Short circuit.....	11
Failure code [DDB6L4] Parking brake switch (Neutralizer): ON/OFF signals disagree.....	14
Failure code [DDD1LD] (Remote positioner bucket angle set switch: Switch is kept pressed for long time).....	18
Failure code [DDDBKA] Traction adjustment dial: Disconnection	22
Failure code [DDDBKB] Traction adjustment dial: Short circuit.....	24
Failure code [DDE5MA] Emergency steering drive switch: Malfunction.....	26
Failure code [DDK4KA] AJSS FNR switch: Disconnection	28
Failure code [DDK4KB] AJSS FNR switch: Short circuit	30
Failure code [DDK5L4] AJSS shift-up/down switch: ON/OFF signals disagree	32
Failure code [DDK6KA] FNR lever switch: Disconnection.....	35
Failure code [DDK6KB] FNR lever switch: Short circuit	38
Failure code [DDP5KA] Lock detection pressure switch of steering lock lever: Disconnection	40
Failure code [DDT0L4] Shift mode selector switch: ON/OFF signals disagree	42
Failure code [DDW9LD] Kick-down switch: Switch is kept pressed for long time	44
Failure code [DDWLLD] Hold switch: Switch is kept pressed for long time.....	46
Failure code [DDY0LD] Load meter cancel switch: Switch is kept pressed for long time	48
Failure code [DF10KA] Transmission shift lever switch: Disconnection	50
Failure code [DF10KB] Transmission shift lever switch: Short circuit.....	54
Failure code [DGE5KX] (or VHMS_LED display: "n4" → "01") (Atmospheric temperature sensor: Out of input signal range)	56
Failure code [DGF1KA] Transmission oil temperature sensor: Disconnection.....	58
Failure code [DGF1KB] Transmission oil temperature sensor: Short circuit	60
Troubleshooting by failure code (Display of code), Part 7	SEN00570-04
Failure code [DGH2KX] Hydraulic oil temperature sensor: Out of input signal range	4
Failure code [DGR2KA] Rear brake oil temperature sensor: Disconnection.....	6
Failure code [DGR2KX] Rear brake oil temperature sensor: Out of input signal range	8
Failure code [DGT1KA] (Torque converter oil temperature sensor: Disconnection).....	10
Failure code [DGT1KB] (Torque converter oil temperature sensor: Short circuit)	11
Failure code [DGT1KX] (Torque converter oil temperature sensor: Out of input signal range)	12
Failure code [DGT4KA] (or VHMS_LED display: "n3" → "12") (Exhaust gas temperature sensor (F): Disconnection)	14
Failure code [DGT4KB] (or VHMS_LED display: "n3" → "11") (Exhaust gas temperature sensor (F): Short circuit).....	17
Failure code [DGT5KA] (or VHMS_LED display: "n3" → "22") (Exhaust gas temperature sensor (R): Disconnection).....	20
Failure code [DGT5KB] (or VHMS_LED display: "n3" → "21") (Exhaust gas temperature sensor (R): Short circuit)	23
Failure code [DH21KA] Work equipment pump oil pressure sensor: Disconnection.....	26
Failure code [DH21KB] Work equipment pump oil pressure sensor: Short circuit	28
Failure code [DHE5KB] (or VHMS_LED display: "n3" → "32") (Blow-by pressure sensor: Short circuit)	30
Failure code [DHE5KY] (or VHMS_LED display: "n3" → "31") (Blow-by pressure sensor: Short circuit with power supply line)	32
Failure code [DHPCKX] (Lift arm cylinder bottom pressure sensor: Out of input signal range)	34
Failure code [DHPDKX] (Lift arm cylinder head pressure sensor: Out of input signal range)	37
Failure code [DHT2L6] (Transmission filter clogging sensor: Signal disagrees with operating state of engine).....	40

Failure code [DHT8KX] (or VHMS_LED display: "n5" → "33") (Steering oil pressure sensor: Out of input signal range)	42
Failure code [DHTBKA] Modulation clutch oil pressure sensor: Disconnection	46
Failure code [DHTBKB] Modulation clutch oil pressure sensor: Short circuit	48
Failure code [DHU2KX] (or VHMS_LED display: "n7" → "11") (Front brake oil pressure sensor (F): Out of input signal range)	50
Failure code [DHU3KX] (or VHMS_LED display: "n7" → "12") (Rear brake oil pressure sensor (R): Out of input signal range)	52
Failure code [DK30KA] AJSS lever angle sensor: Disconnection	54
Failure code [DK30KY] AJSS lever angle sensor: Short circuit with power supply line	56
Troubleshooting by failure code (Display of code), Part 8	SEN00571-04
Failure code [DK59KA] Lift arm EPC lever potentiometer (Main): Disconnection	3
Failure code [DK59KY] Lift arm EPC lever potentiometer (Main): Short circuit with power supply line	6
Failure code [DK59L8] Lift arm EPC lever potentiometer (Main): Analog signals disagree	8
Failure code [DK5AKA] Lift arm EPC lever potentiometer (Sub): Disconnection	12
Failure code [DK5AKY] Lift arm EPC lever potentiometer (Sub): Short circuit with power supply line	15
Failure code [DK5BKA] Bucket EPC lever potentiometer (Main): Disconnection	18
Failure code [DK5BKY] Bucket EPC lever potentiometer (Main): Short circuit with power supply line	21
Failure code [DK5BL8] Bucket EPC lever potentiometer (Main): Analog signals disagree	23
Failure code [DK5CKA] Bucket EPC lever potentiometer (Sub): Disconnection	27
Failure code [DK5CKY] Bucket EPC lever potentiometer (Sub): Short circuit with power supply line	30
Failure code [DK5DKA] 3-spool valve (attachment) EPC lever potentiometer (Main): Disconnection	33
Failure code [DK5DKY] 3-spool valve (attachment) EPC lever potentiometer (Main): Short circuit with power supply line	36
Failure code [DK5DL8] 3-spool valve (attachment) EPC lever potentiometer (Main): Analog signals disagree	38
Failure code [DK5EKA] 3-spool valve (attachment) EPC lever potentiometer (Sub): Disconnection	41
Failure code [DK5EKY] 3-spool valve EPC lever potentiometer (Sub): Short circuit with power supply line	44
Failure code [DKA0KA] Lift arm angle sensor: Disconnection	46
Failure code [DKA0KX] Lift arm angle sensor: Out of input signal range	49
Failure code [DKA0KY] Lift arm angle sensor: Short circuit with power supply line	50
Failure code [DKA0L0] Lift arm angle sensor: Improper position	52
Troubleshooting by failure code (Display of code), Part 9	SEN00572-04
Failure code [DKD0KA] Frame angle sensor: Disconnection	4
Failure code [DKD0KY] Frame angle sensor: Short circuit with power supply line	6
Failure code [DKD0KZ] AJSS lever and frame angle sensor: Disconnection or short circuit ...	8
Failure code [DLFAKA] Modulation clutch output shaft speed sensor: Disconnection	12
Failure code [DLFALC] Modulation clutch output shaft speed sensor: Speed signals disagree	14
Failure code [DLT3KA] Transmission output shaft speed sensor (2): Disconnection	16
Failure code [DLT3LC] Transmission output shaft speed sensor (2): Speed signals disagree ..	18
Failure code [DLT4KB] Transmission output shaft speed sensor (1): Short circuit	20
Failure code [DLT4KX] Transmission output shaft speed sensor (1): Out of input signal range	22
Failure code [DUM1KB] Remote positioner raise indicator lamp: Short circuit	24
Failure code [DUM2KB] Remote positioner lower indicator lamp: Short circuit	26
Failure code [DV00KB] Alarm buzzer: Short circuit	28
Failure code [DW4PKA] Lift arm raise EPC solenoid: Disconnection	30
Failure code [DW4PKB] Lift arm raise EPC solenoid: Short circuit	32
Failure code [DW4PKY] Lift arm raise EPC solenoid: Short circuit with power supply line	33
Failure code [DW4QKA] Lift arm lower EPC solenoid: Disconnection	34

Failure code [DW4QKB] Lift arm lower EPC solenoid: Short circuit	35
Failure code [DW4QKY] Lift arm lower EPC solenoid: Short circuit with power supply line	36
Failure code [DW4RKA] Bucket tilt EPC solenoid: Disconnection	37
Failure code [DW4RKB] Bucket tilt EPC solenoid: Short circuit.....	38
Failure code [DW4RKY] Bucket tilt EPC solenoid: Short circuit with power supply line	39
Failure code [DW4SKA] Bucket dump EPC solenoid: Disconnection.....	40
Failure code [DW4SKB] Bucket dump EPC solenoid: Short circuit	41
Failure code [DW4SKY] Bucket dump EPC solenoid: Short circuit with power supply line	42
Failure code [DW7BKA] Fan reverse solenoid: Disconnection	44
Failure code [DW7BKB] Fan reverse solenoid: Short circuit.....	46
Failure code [DW7BKY] Fan reverse solenoid: Short circuit with power supply line	48
Failure code [DW7DKA] Hydraulic drive fan neutral solenoid: Disconnection	49
Failure code [DW7DKB] Hydraulic drive fan neutral solenoid: Short circuit.....	50
Failure code [DW7DKY] (Hydraulic drive fan neutral solenoid: Short circuit with power supply line)	51
Troubleshooting by failure code (Display of code), Part 10	SEN00573-04
Failure code [DWM1KA] Work equipment neutral lock solenoid: Disconnection.....	4
Failure code [DWM1KB] Work equipment neutral lock solenoid: Short circuit	6
Failure code [DWM1KY] (Work equipment neutral lock EPC solenoid: Short circuit with power supply line)	8
Failure code [DWN6KA] Lift arm raise magnet detent solenoid: Disconnection.....	10
Failure code [DWN6KB] Lift arm raise magnet detent solenoid: Short circuit	12
Failure code [DWN6KY] (Lift arm raise magnet detent solenoid: Short circuit with power supply line)	14
Failure code [DWN7KA] Lift arm float magnet detent solenoid: Disconnection.....	16
Failure code [DWN7KB] Lift arm float magnet detent solenoid: Short circuit	18
Failure code [DWN7KY] (Lift arm float magnet detent solenoid: Short circuit with power supply line)	20
Failure code [DWN8KA] Bucket tilt magnet detent solenoid: Disconnection.....	22
Failure code [DWN8KB] Bucket tilt magnet detent solenoid: Short circuit	24
Failure code [DWN8KY] Bucket tilt magnet detent solenoid: Shorted with the power source.	26
Failure code [DWNFKA] Modulation clutch cut-off release solenoid: Disconnection.....	28
Failure code [DWNFKB] Modulation clutch cut-off release solenoid: Short circuit	30
Failure code [DWNFKY] (Modulation clutch cut-off release solenoid: Short circuit with power source line).....	32
Failure code [DX16KA] Fan pump EPC solenoid: Disconnection	34
Failure code [DX16KB] Fan pump EPC solenoid: Short circuit	35
Failure code [DX16KY] Fan pump EPC solenoid: Short circuit with power supply line	36
Failure code [DXA1KA] Pump PC-EPC solenoid: Disconnection.....	37
Failure code [DXA1KB] Pump PC-EPC solenoid: Short circuit	38
Failure code [DXF0KA] AJSS EPC solenoid: Disconnection	39
Failure code [DXF0KB] AJSS EPC solenoid: Short circuit.....	40
Failure code [DXH1KA] Lockup ECMV solenoid: Disconnection	42
Failure code [DXH1KB] Lockup ECMV solenoid: Short circuit	44
Failure code [DXH1KY] Lockup ECMV solenoid: Short circuit with power supply line.....	46
Failure code [DXH4KA] 1st clutch ECMV solenoid: Disconnection	48
Failure code [DXH4KB] 1st clutch ECMV solenoid: Short circuit	50
Failure code [DXH4KY] 1st clutch ECMV solenoid: Short circuit with power supply line	52
Troubleshooting by failure code (Display of code), Part 11	SEN00574-04
Failure code [DXH5KA] 2nd clutch ECMV solenoid: Disconnection.....	4
Failure code [DXH5KB] 2nd clutch ECMV solenoid: Short circuit	6
Failure code [DXH5KY] 2nd clutch ECMV solenoid: Short circuit with power supply line	8
Failure code [DXH6KA] 3rd clutch ECMV solenoid: Disconnection	10
Failure code [DXH6KB] 3rd clutch ECMV solenoid: Short circuit	12
Failure code [DXH6KY] 3rd clutch ECMV solenoid: Short circuit with power supply line	14
Failure code [DXH7KA] R clutch ECMV solenoid: Disconnection	16
Failure code [DXH7KB] R clutch ECMV solenoid: Short circuit.....	18
Failure code [DXH7KY] R clutch ECMV solenoid: Short circuit with power supply line	20

Failure code [DXH8KA] F clutch ECMV solenoid: Disconnection.....	22
Failure code [DXH8KB] F clutch ECMV solenoid: Short circuit	24
Failure code [DXH8KY] F clutch ECMV solenoid: Short circuit with power supply line	26
Failure code [DXHHKA] 4th clutch ECMV solenoid: Disconnection	28
Failure code [DXHHKB] 4th clutch ECMV solenoid: Short circuit.....	30
Failure code [DXHHKY] 4th clutch ECMV solenoid: Short circuit with power supply line.....	32
Failure code [DXHJKA] 3-spool valve extract EPC solenoid: Disconnection	34
Failure code [DXHJKB] 3-spool valve extract EPC solenoid: Short circuit.....	36
Failure code [DXHJKY] (3-spool valve extract EPC solenoid: Short circuit with power supply line)	37
Failure code [DXHKKA] 3-spool valve retract EPC solenoid: Disconnection	38
Failure code [DXHKKB] 3-spool valve retract EPC solenoid: Short circuit.....	40
Failure code [DXHKKY] (3-spool valve retract EPC solenoid: Short circuit with power supply line)	41
Failure code [DXHPKA] Modulation clutch solenoid: Disconnection	42
Failure code [DXHPKB] Modulation clutch solenoid: Short circuit.....	44
Failure code [DXHPKY] Modulation clutch solenoid: Short circuit with power source line	46
Failure code [DXHPMA] Modulation clutch solenoid: Malfunction.....	48
Failure code [F@BBZL] (or VHMS_LED display: “n3” → “38”) Blow-by pressure: High error .	50
Failure code [F@BYNR] (or VHMS_LED display: “n3” → “62”) (Exhaust gas temperature (F): Abnormal heat).....	52
Failure code [F@BYNS] (or VHMS_LED display: “n3” → “61”) (Exhaust gas temperature (F): Overheat).....	54
Failure code [F@BZNR] (or VHMS_LED display: “n3” → “72”) (Exhaust gas temperature (R): abnormal heat).....	56
Failure code [F@BZNS] (or VHMS_LED display “n3” → “71”) (Exhaust gas temperature (R): Overheat).....	58
Troubleshooting of electrical system (E-mode)	SEN00563-04
Before carrying out troubleshooting of electrical system	3
Information in troubleshooting table.....	6
E-1 Engine does not start.	7
E-2 Wiper does not operate.....	17
E-3 Windshield washer does not operate	25
E-4 Headlamp, clearance lamp, tail lamp, and license lamp do not light up or go off	31
E-5 Working lamp does not light up or go off.....	47
E-6 Step lamp does not light up or go off.....	54
E-7 Turn signal lamp and hazard lamp do not light up or go off	57
E-8 Brake lamp does not light or it keeps lighting up.....	67
E-9 Backup lamp does not light or it keeps lighting up.	70
E-10 Backup buzzer does not sound or it keeps sounding.....	74
E-11 Horn does not sound or it keeps sounding.	78
E-12 Alarm buzzer does not sound or it keeps sounding	82
E-13 Air conditioner does not operate or stop	84
E-14 Electric priming pump does not operate or does not stop automatically.....	86
E-15 When starting switch is turned to ON position, machine monitor displays nothing	88
Troubleshooting of hydraulic and mechanical system (H-mode)	SEN00564-02
Method of using troubleshooting chart.....	4
Table of failure modes and causes	6
H-1 Machine does not start.....	10
H-2 Torque converter lockup is not switched (engine stalls).....	12
H-3 Torque converter lockup is not turned on.....	13
H-4 Travel speed is slow, thrusting force is weak, uphill traveling power is weak, and gear is not shifted	14
H-5 Shocks are large at the times of starting and shifting gear	16
H-6 Time lag is large at the times of starting and shifting gear	18
H-7 Torque converter oil temperature is high.....	20
H-8 Steering does not turn [machine with steering wheel].....	21
H-9 Steering does not turn [machine with AJSS].....	22

H-10 Turning, response of steering is poor [machine with steering wheel]	23
H-11 Turning, response of AJSS is poor [machine with AJSS]	24
H-12 Steering is heavy [machine with steering wheel]	25
H-13 When machine turns, it shakes or makes large shocks [machine with steering wheel] .	26
H-14 When machine turns, it shakes or makes large shocks [machine with AJSS].....	27
H-15 Wheel brake does not work or does not work well	28
H-16 Wheel brake is not released or it drags	29
H-17 Parking brake does not work or does not work well	30
H-18 Parking brake is not released or it drags (including emergency release system).....	31
H-19 Lift arm does not rise	32
H-20 Lift arm speed is low or rising force of lift arm is insufficient	33
H-21 When rising, lift arm comes to move slowly at specific height	34
H-22 Lift arm cylinder cannot hold down bucket (Bucket floats).....	34
H-23 Hydraulic drifts of lift arm occur often.....	34
H-24 Lift arm wobbles during operation.....	34
H-25 Bucket does not tilt back.....	35
H-26 Bucket speed is low or tilting back force is insufficient	36
H-27 Bucket comes to operate slowly in the midst of tilting-back.....	37
H-28 Bucket cylinder cannot hold down bucket.....	37
H-29 Hydraulic drifts of bucket occur often.....	37
H-30 Bucket wobbles during travel with cargo (Work equipment valve is set to "HOLD").....	37
H-31 During operation of machine, engine speed lowers remarkably or engine stalls.....	38
H-32 Large shocks are made when work equipment starts and stops	38
H-33 When work equipment circuit is relieved singly, other work equipment moves	38
H-34 ECSS does not operate, and pitching bouncing occurs	39
H-35 Fan speed is abnormal (Fan sound and vibration are abnormally large or engine overheats)	40
Troubleshooting of engine (S-mode)	SEN00565-02
Method of using troubleshooting chart	3
S-1 Engine does not start easily	6
S-2 Engine does not start	8
S-3 Engine does not pick up smoothly	12
S-4 Engine stops during operation	13
S-5 Engine does not rotate smoothly (Hunting occurs)	14
S-6 Engine lacks output (or lacks power)	15
S-7 Exhaust smoke is black (Incomplete combustion)	16
S-8 Oil is consumed much (or exhaust gas color is blue)	18
S-9 Engine oil becomes contaminated quickly	19
S-10 Fuel consumption is excessive	20
S-11 Coolant contains oil (blows back or reduces).....	21
S-12 Oil pressure drops.....	22
S-13 Oil level rises (Water, fuel in oil).....	24
S-14 Coolant temperature rises too high (Overheating).....	26
S-15 Abnormal noise is made	27
S-16 Vibration is excessive	28
S-17 Air cannot be bled from fuel circuit.....	30
50 Disassembly and assembly	
General information on disassembly and assembly	SEN01156-03
How to read this manual	2
Coating materials list	4
Special tools list	7
Sketches of special tools	11
Engine and cooling system, Part 1	SEN01157-03
Removal and installation of engine assembly	2
Removal and installation of radiator assembly	6
Removal and installation of air aftercooler.....	11

Removal and installation of cooling fan and fan motor assembly	12
Removal and installation of damper assembly	14
Disassembly and assembly of damper assembly	16
Removal and installation of fuel tank assembly	20
Removal and installation of engine hood assembly	22
Removal and installation of bulkhead assembly	24
Engine and cooling system, Part 2	SEN01158-03
Removal and installation of fuel supply pump assembly	2
Removal and installation of cylinder head assembly	8
Removal and installation of fuel injector assembly	24
Removal and installation of engine front seal	28
Removal and installation of engine rear seal	31
Power train, Part 1	SEN01160-03
Removal and installation of parking brake assembly	2
Removal and installation of torque converter and transmission assembly	4
Power train, Part 2	SEN01162-03
Disassembly and assembly of torque converter assembly	2
Disassembly and assembly of transmission assembly	29
Disassembly and assembly of transfer assembly	56
Disassembly and assembly of parking brake assembly	71
Power train, Part 3	SEN01164-04
Removal and installation of front axle assembly	2
Removal and installation of rear axle assembly	4
Removal and installation of center support assembly	6
Disassembly and assembly of center support assembly	8
Disassembly and assembly of differential assembly	12
Power train, Part 4	SEN01165-02
Removal and installation of final drive carrier assembly	2
Disassembly and assembly of final drive carrier assembly	4
Removal and installation of front final drive brake assembly	5
Disassembly and assembly of final drive assembly	7
Brake system	SEN01167-02
Disassembly and assembly of brake assembly	2
Removal and installation of brake valve assembly	10
Disassembly and assembly of accumulator and charge valve assembly	11
Disassembly and assembly of slack adjuster assembly	14
Undercarriage and frame	SEN01169-03
Removal and installation of center hinge pin	2
Removal and installation of counterweight assembly	9
Hydraulic system	SEN01171-03
Removal and installation of hydraulic tank assembly	2
Removal and installation of hydraulic pump assembly	4
Removal and installation of control valve assembly	8
Disassembly and assembly of control valve assembly	10
Removal and installation of steering valve assembly	15
Removal and installation of ECSS accumulator assembly	16
Disassembly and assembly of hydraulic cylinder assembly	17
Work equipment	SEN01174-02
Removal and installation of work equipment assembly	2
Cab and its attachments	SEN01175-03
Removal and installation of operator's cab assembly	2
Removal and installation of operator's cab glass (stuck glass)	6
Removal and installation of floor frame assembly	14
Disassembly and assembly of operator's seat assembly	17
Removal and installation of air conditioner unit assembly	49
Removal and installation of AJSS lever switch assembly	53

Electrical system	SEN01177-03	
Removal and installation of engine controller assembly		2
Removal and installation of transmission controller assembly		4
Removal and installation of loader controller assembly		5
Removal and installation of VHMS controller assembly		6
Removal and installation of monitor assembly		7
90 Diagrams and drawings		
Hydraulic diagrams and drawings	SEN00412-04	
Power train hydraulic circuit diagram.....		2
Brake hydraulic circuit diagram		3
Work equipment hydraulic circuit diagram		
Steering wheel specification		5
Steering wheel specification with ECSS.....		7
AJSS (Advanced Joystick Steering System) specification		9
AJSS (Advanced Joystick Steering System) specification with ECSS		11
Electrical diagrams and drawings	SEN00413-04	
Air conditioner electrical circuit diagram		3
Steering wheel specification		
Electrical circuit diagram (1/10)		5
Electrical circuit diagram (2/10)		7
Electrical circuit diagram (3/10)		9
Electrical circuit diagram (4/10)		11
Electrical circuit diagram (5/10)		13
Electrical circuit diagram (6/10)		15
Electrical circuit diagram (7/10)		17
Electrical circuit diagram (8/10)		19
Electrical circuit diagram (9/10)		21
Electrical circuit diagram (10/10)		23
AJSS (Advanced Joystick Steering System) specification		
Electrical circuit diagram (1/10)		25
Electrical circuit diagram (2/10)		27
Electrical circuit diagram (3/10)		29
Electrical circuit diagram (4/10)		31
Electrical circuit diagram (5/10)		33
Electrical circuit diagram (6/10)		35
Electrical circuit diagram (7/10)		37
Electrical circuit diagram (8/10)		39
Electrical circuit diagram (9/10)		41
Electrical circuit diagram (10/10)		43
Connector arrangement diagram.....		45

WA600-6 Wheel loader

Form No. SEN00398-18

© 2017 KOMATSU
All Rights Reserved
Printed in Japan 03-17 (01)

WHEEL LOADER

WA600-6

Machine model Serial number

WA600-6 60001 and up

00 Index and foreword


Foreword and general information

Safety notice	2
How to read the shop manual	7
Explanation of terms for maintenance standard	9
Handling of electric equipment and hydraulic component	11
Handling of connectors newly used for engines	20
How to read electric wire code	23
Precautions when carrying out operation.....	26
Method of disassembling and connecting push-pull type coupler.....	29
Standard tightening torque table	32
Conversion table	36


Safety notice

Important safety notice

Proper service and repair are extremely important for safe machine operation. The service and repair techniques recommended by Komatsu and described in this manual are both effective and safe. Some of these techniques require the use of tools specially designed by Komatsu for the specific purpose.

To prevent injury to workers, the symbol  is used to mark safety precautions in this manual. The cautions accompanying these symbols should always be followed carefully. If any dangerous situation arises or may possibly arise, first consider safety, and take the necessary actions to deal with the situation.

1. General precautions

 **Mistakes in operation are extremely dangerous. Read the Operation and Maintenance Manual carefully before operating the machine. In addition, read this manual and understand its contents before starting the work.**

- 1) Before carrying out any greasing or repairs, read all the safety labels stuck to the machine. For the locations of the safety labels and detailed explanation of precautions, see the Operation and Maintenance Manual.
- 2) Decide a place in the repair workshop to keep tools and removed parts. Always keep the tools and parts in their correct places. Always keep the work area clean and make sure that there is no dirt, water, or oil on the floor. Smoke only in the areas provided for smoking. Never smoke while working.
- 3) When carrying out any operation, always wear safety shoes and helmet. Do not wear loose work clothes, or clothes with buttons missing.
 - Always wear safety glasses when hitting parts with a hammer.
 - Always wear safety glasses when grinding parts with a grinder, etc.
- 4) When carrying out any operation with 2 or more workers, always agree on the operating procedure before starting. Always inform your fellow workers before starting any step of the operation. Before starting work, hang UNDER REPAIR warning signs in the operator's compartment.
- 5) Only qualified workers must carry out work and operation which require license or qualification.
- 6) Keep all tools in good condition, learn the correct way to use them, and use the proper ones of them. Before starting work, thoroughly check the tools, machine, fork-lift, service car, etc.
- 7) If welding repairs are needed, always have a trained and experienced welder carry out the work. When carrying out welding work, always wear welding gloves, apron, shielding goggles, cap and other clothes suited for welding work.
- 8) Before starting work, warm up your body thoroughly to start work under good condition.
- 9) Avoid continuing work for long hours and take rests at proper intervals to keep your body in good condition. Take rests in specified safe places.

Safety points


1	Good arrangement
2	Correct work clothes
3	Following work standard
4	Making and checking signs
5	Prohibition of operation and handling by unlicensed workers
6	Safety check before starting work
7	Wearing protective goggles (for cleaning or grinding work)
8	Wearing shielding goggles and protectors (for welding work)
9	Good physical condition and preparation
10	Precautions against work which you are not used to or you are used to too much

2. Preparations for work

- 1) Before adding oil or making any repairs, park the machine on a hard and level ground, and apply the parking brake and block the wheels or tracks to prevent the machine from moving.
- 2) Before starting work, lower the work equipment (blade, ripper, bucket, etc.) to the ground. If this is not possible, insert the lock pin or use blocks to prevent the work equipment from falling. In addition, be sure to lock all the control levers and hang warning signs on them.
- 3) When disassembling or assembling, support the machine with blocks, jacks, or stands before starting work.
- 4) Remove all mud and oil from the steps or other places used to get on and off the machine. Always use the handrails, ladders or steps when getting on or off the machine. Never jump on or off the machine. If it is impossible to use the handrails, ladders or steps, use a stand to provide safe footing.

3. Precautions during work

- 1) Before disconnecting or removing components of the oil, water, or air circuits, first release the pressure completely from the circuit. When removing the oil filler cap, a drain plug, or an oil pressure pickup plug, loosen it slowly to prevent the oil from spurting out.
- 2) The coolant and oil in the circuits are hot when the engine is stopped, so be careful not to get scalded. Wait for the oil and coolant to cool before carrying out any work on the oil or water circuits.
- 3) Before starting work, stop the engine. When working on or around a rotating part, in particular, stop the engine. When checking the machine without stopping the engine (measuring oil pressure, revolving speed, temperature, etc.), take extreme care not to get rolled or caught in rotating parts or moving parts.
- 4) **For the machine equipped with a battery disconnect switch, turn the battery disconnect switch to the OFF (O) position, before starting the work.** For machines without a battery disconnect switch, remove the cable from the battery, before starting the work. Always remove the cable from the negative (-) terminal first.

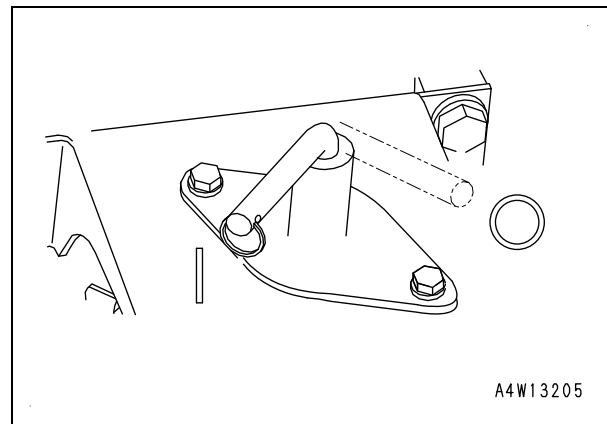

- 5) When raising a heavy component (heavier than 25 kg), use a hoist or crane. Before starting work, check that the slings (wire ropes, chains, and hooks) are free from damage. Always use slings which have ample capacity and install them to proper places. Operate the hoist or crane slowly to prevent the component from hitting any other part. Do not work with any part still raised by the hoist or crane.
- 6) When removing a cover which is under internal pressure or under pressure from a spring, always leave 2 bolts in diagonal positions. Loosen those bolts gradually and alternately to release the pressure, and then remove the cover.
- 7) When removing components, be careful not to break or damage the electrical wiring. Damaged wiring may cause electrical fires.
- 8) When removing piping, stop the fuel or oil from spilling out. If any fuel or oil drips onto the floor, wipe it up immediately. Fuel or oil on the floor can cause you to slip and can even start fires.
- 9) As a general rule, do not use gasoline to wash parts. Do not use it to clean electrical parts, in particular.
- 10) Be sure to assemble all parts again in their original places. Replace any damaged parts and parts which must not be reused with new parts. When installing hoses and wires, be sure that they will not be damaged by contact with other parts when the machine is operated.
- 11) When installing high pressure hoses, make sure that they are not twisted. Damaged tubes are dangerous, so be extremely careful when installing tubes for high pressure circuits. In addition, check that connecting parts are correctly installed.


- 12) When assembling or installing parts, always tighten them to the specified torques. When installing protective parts such as guards, or parts which vibrate violently or rotate at high speed, be particularly careful to check that they are installed correctly.
- 13) When aligning 2 holes, never insert your fingers or hand. Be careful not to get your fingers caught in a hole.
- 14) When measuring hydraulic pressure, check that the measuring tools are correctly assembled.
- 15) Take care when removing or installing the tracks of track-type machines. When removing the track, the track separates suddenly, so never let anyone stand at either end of the track.
- 16) If the engine is operated for a long time in a place which is not ventilated well, you may suffer from gas poisoning. Accordingly, open the windows and doors to ventilate well.

4. Precautions for sling work and making signs


- 1) Only one appointed worker must make signs and co-workers must communicate with each other frequently. The appointed sign maker must make specified signs clearly at a place where he is well seen from the operator's seat and where he can see the working condition easily. The sign maker must always stand in front of the load and guide the operator safely.
 - Do not stand under the load.
 - Do not step on the load.
- 2) Check the slings before starting sling work.
- 3) Keep putting on gloves during sling work. (Put on leather gloves, if available.)
- 4) Measure the weight of the load by the eye and check its center of gravity.
- 5) Use proper sling according to the weight of the load and method of slinging. If too thick wire ropes are used to sling a light load, the load may slip and fall.
- 6) Do not sling a load with 1 wire rope alone. If it is slung so, it may rotate and may slip out of the rope. Install 2 or more wire ropes symmetrically.

⚠ Slinging with 1 rope may cause turning of the load during hoisting, untwisting of the rope, or slipping of the rope from its original winding position on the load, which can result in a dangerous accident.

- 7) Limit the hanging angle to 60° , as a rule. Do not sling a heavy load with ropes forming a wide hanging angle from the hook. When hoisting a load with 2 or more ropes, the force subjected to each rope will increase with the hanging angle. The table below shows the variation of allowable load in kN {kg} when hoisting is made with 2 ropes, each of which is allowed to sling up to 9.8 kN {1,000 kg} vertically, at various hanging angles. When the 2 ropes sling a load vertically, up to 19.6 kN {2,000 kg} of total weight can be suspended. This weight is reduced to 9.8 kN {1,000 kg} when the 2 ropes make a hanging angle of 120° . If the 2 ropes sling a 19.6 kN {2,000 kg} load at a lifting angle of 150° , each of them is subjected to a force as large as 39.2 kN {4,000 kg}.

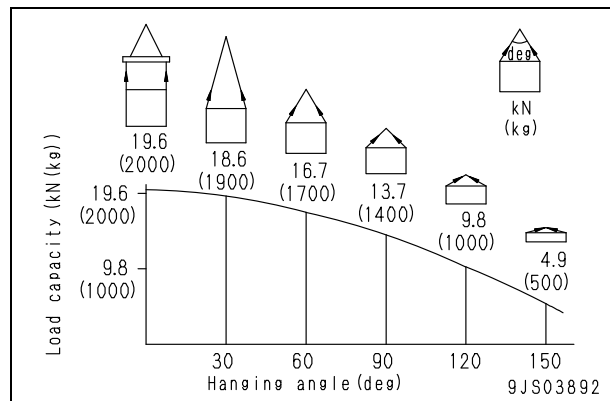

- 8) When installing wire ropes to an angular load, apply pads to protect the wire ropes. If the load is slippery, apply proper material to prevent the wire rope from slipping.
- 9) Use the specified eyebolts and fix wire ropes, chains, etc. to them with shackles, etc.
- 10) Apply wire ropes to the middle portion of the hook.
 - Slinging near the tip of the hook may cause the rope to slip off the hook during hoisting. The hook has the maximum strength at the middle portion.

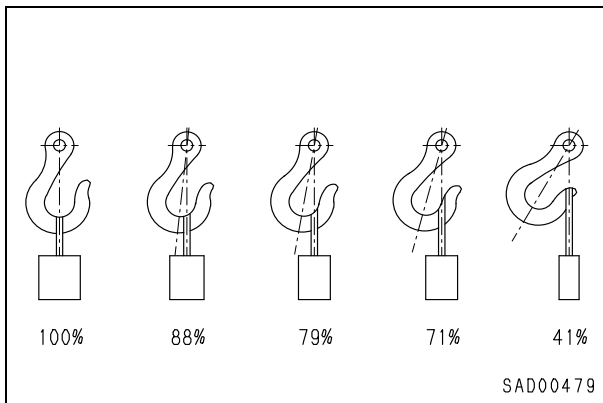


- 11) Do not use twisted or kinked wire ropes.
- 12) When lifting up a load, observe the following.
 - Wind in the crane slowly until wire ropes are stretched. When settling the wire ropes with the hand, do not grasp them but press them from above. If you grasp them, your fingers may be caught.
 - After the wire ropes are stretched, stop the crane and check the condition of the slung load, wire ropes, and pads.
 - If the load is unstable or the wire rope or chains are twisted, lower the load and lift it up again.
 - Do not lift up the load slantingly.
- 13) When lifting down a load, observe the following.
 - When lifting down a load, stop it temporarily at 30 cm above the floor, and then lower it slowly.
 - Check that the load is stable, and then remove the sling.
 - Remove kinks and dirt from the wire ropes and chains used for the sling work, and put them in the specified place.

5. Precautions for using mobile crane

- ★ Read the Operation and Maintenance Manual of the crane carefully in advance and operate the crane safely.

6. Precautions for using overhead hoist crane

▲ When raising a heavy part (heavier than 25 kg), use a hoist, etc. In Disassembly and assembly, the weight of a part heavier than 25 kg is indicated after the mark of .

- 1) Before starting work, inspect the wire ropes, brake, clutch, controller, rails, over wind stop device, electric shock prevention earth leakage breaker, crane collision prevention device, and power application warning lamp, and check safety.
- 2) Observe the signs for sling work.
- 3) Operate the hoist at a safe place.
- 4) Check the direction indicator plates (east, west, south, and north) and the directions of the control buttons without fail.
- 5) Do not sling a load slantingly. Do not move the crane while the slung load is swinging.
- 6) Do not raise or lower a load while the crane is moving longitudinally or laterally.
- 7) Do not drag a sling.
- 8) When lifting up a load, stop it just after it leaves the ground and check safety, and then lift it up.
- 9) Consider the travel route in advance and lift up a load to a safe height.
- 10) Place the control switch on a position where it will not be an obstacle to work and passage.
- 11) After operating the hoist, do not swing the control switch.
- 12) Remember the position of the main switch so that you can turn off the power immediately in an emergency.
- 13) If the hoist stops because of a power failure, turn the power switch OFF. When turning on a switch which was turned OFF by the electric shock prevention earth leakage breaker, check that the devices related to that switch are not in operation state.
- 14) If you find an obstacle around the hoist, stop the operation.
- 15) After finishing the work, stop the hoist at the specified position and raise the hook to at least 2 m above the floor. Do not leave the sling installed to the hook.

7. Selecting wire ropes

- 1) Select adequate ropes depending on the weight of parts to be hoisted, referring to the table below.

Wire ropes
(Standard "Z" twist ropes without galvanizing)
(JIS G3525, No. 6, Type 6X37-A)

Nominal diameter of rope	Allowable load	
	mm	kN
10	8.8	0.9
12	12.7	1.3
14	17.3	1.7
16	22.6	2.3
18	28.6	2.9
20	35.3	3.6
25	55.3	5.6
30	79.6	8.1
40	141.6	14.4
50	221.6	22.6
60	318.3	32.4

- ★ The allowable load is one-sixth of the breaking strength of the rope used (Safety coefficient: 6).

8. Precautions for disconnecting and connecting hoses and tubes in air conditioner circuit

1) Disconnection

- ⚠ **For the environment, the air conditioner of this machine uses the refrigerant (air conditioner gas: R134a) which has fewer factors of the depletion of the ozone layer. However, it does not mean that you may discharge the refrigerant into the atmosphere as it is. Be sure to recover the refrigerant when disconnecting the refrigerant gas circuit and then reuse it.**


- ★ Ask professional traders for collecting and filling operation of refrigerant (R134a).
- ★ Never release the refrigerant (R134a) to the atmosphere.

- ⚠ **If the refrigerant gas gets in your eyes or contacts your skin, you may lose your sight and your skin may be frozen. Accordingly, put on safety glasses, safety gloves and safety clothes when recovering or adding the refrigerant. Refrigerant gas must be recovered and added by a qualified person.**

2) Connection

- 1] When installing the air conditioner circuit hoses and tubes, take care that dirt, dust, water, etc. will not enter them.
- 2] When connecting the air conditioner hoses and tubes, check that O-rings (1) are fitted to their joints.
- 3] Check that each O-ring is not damaged or deteriorated.
- 4] When connecting the refrigerant piping, apply compressor oil for refrigerant (R134a) (**DENSO: ND-OIL8, VALEO THERMAL SYSTEMS: ZXL100PG (equivalent to PAG46)**) to its O-rings.

- ★ Example of O-ring (Fitted to every joint of hoses and tubes)

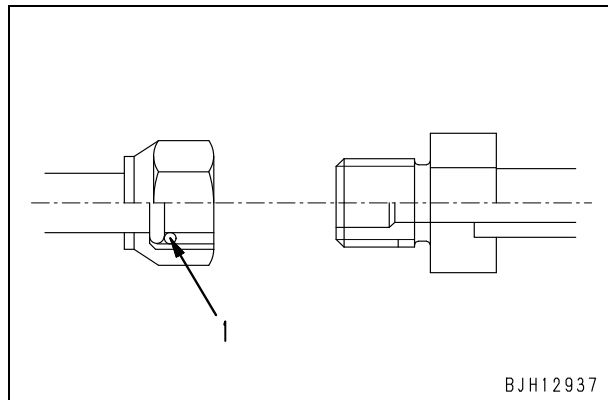

- ★ For tightening torque, see the precautions for installation in each section of "Disassembly and assembly".

How to read the shop manual

- Some attachments and optional parts in this shop manual may not be delivered to certain areas. If one of them is required, consult KOMATSU distributors.
- Materials and specifications are subject to change without notice.
- Shop manuals are divided into the “Chassis volume” and “Engine volume”. For the engine unit, see the engine volume of the engine model mounted on the machine.

1. Composition of shop manual

This shop manual contains the necessary technical information for services performed in a workshop. For ease of understanding, the manual is divided into the following sections.

00. Index and foreword

This section explains the shop manuals list, table of contents, safety, and basic information.

01. Specification

This section explains the specifications of the machine.

10. Structure, function and maintenance standard

This section explains the structure, function, and maintenance standard values of each component. The structure and function sub-section explains the structure and function of each component. It serves not only to give an understanding of the structure, but also serves as reference material for troubleshooting. The maintenance standard sub-section explains the criteria and remedies for disassembly and service.

20. Standard value table

This section explains the standard values for new machine and judgement criteria for testing, adjusting, and troubleshooting. This standard value table is used to check the standard values in testing and adjusting and to judge parts in troubleshooting.

30. Testing and adjusting

This section explains measuring instruments and measuring methods for testing and adjusting, and method of adjusting each part. The standard values and judgement criteria for testing and adjusting are explained in Testing and adjusting.

40. Troubleshooting

This section explains how to find out failed parts and how to repair them. The troubleshooting is divided by failure modes. The “S mode” of the troubleshooting related to the engine may be also explained in the Chassis volume and Engine volume. In this case, see the Chassis volume.

50. Disassembly and assembly

This section explains the special tools and procedures for removing, installing, disassembling, and assembling each component, as well as precautions for them. In addition, tightening torque and quantity and weight of coating material, oil, grease, and coolant necessary for the work are also explained.

90. Diagrams and drawings (chassis volume)/Repair and replacement of parts (engine volume)

- Chassis volume
This section gives hydraulic circuit diagrams and electrical circuit diagrams.
- Engine volume
This section explains the method of reproducing, repairing, and replacing parts.

2. Revision and distribution

Any additions, revisions, or other change of notices will be sent to KOMATSU distributors. Get the most up-to-date information before you start any work.

3. Filing method

File by the brochures in the correct order of the form number printed in the shop manual composition table.

- **Revised edition mark**








When a manual is revised, the ones and tens digits of the form number of each brochure is increased by 1. (Example: 00, 01, 02 ...)

- **Revisions**

Revised brochures are shown in the shop manual composition table.

4. Symbols

Important safety and quality portions are marked with the following symbols so that the shop manual will be used practically.

Symbol	Item	Remarks
	Safety	Special safety precautions are necessary when performing work.
	Caution	Special technical precautions or other precautions for preserving standards are necessary when performing work.
	Weight	Weight of parts of component or parts. Caution necessary when selecting hoisting wire, or when working posture is important, etc.
	Tightening torque	Places that require special attention for tightening torque during assembly.
	Coat	Places to be coated with adhesives, etc. during assembly.
	Oil, coolant	Places where oil, etc. must be added, and capacity.
	Drain	Places where oil, etc. must be drained, and quantity to be drained.

5. Units

In this shop manual, the units are indicated with International System of units (SI). For reference, conventionally used Gravitational System of units is indicated in parentheses { }.

Explanation of terms for maintenance standard

The maintenance standard chapter explains the criteria for replacing or reusing products and parts in the machine maintenance work. The following terms are used to explain the criteria.

1. Standard size and tolerance

- To be accurate, the finishing size of parts is a little different from one to another.
- To specify a finishing size of a part, a temporary standard size is set and an allowable difference from that size is indicated.
- The above size set temporarily is called the “standard size” and the range of difference from the standard size is called the “tolerance”.
- The tolerance with the symbols of + or – is indicated on the right side of the standard size.


Example:

Standard size	Tolerance
120	-0.022 -0.126

- ★ The tolerance may be indicated in the text and a table as [standard size (upper limit of tolerance/lower limit of tolerance)].
Example) 120 (-0.022/-0.126)
- Usually, the size of a hole and the size of the shaft to be fitted to that hole are indicated by the same standard size and different tolerances of the hole and shaft. The tightness of fit is decided by the tolerance.
- Indication of size of rotating shaft and hole and relationship drawing of them

Example:

Standard size	Tolerance	
	Shaft	Hole
60	-0.030 -0.076	+0.046 0

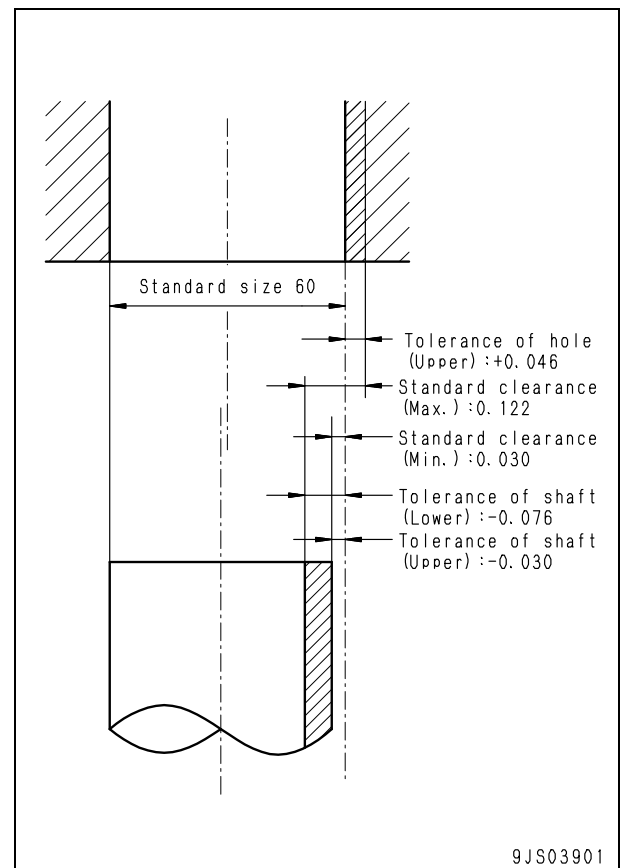

2. Standard clearance and standard value

- The clearance made when new parts are assembled is called the “standard clearance”, which is indicated by the range from the minimum clearance to the maximum clearance.
- When some parts are repaired, the clearance is generally adjusted to the standard clearance.
- A value of performance and function of new products or equivalent is called the “standard value”, which is indicated by a range or a target value.
- When some parts are repaired, the value of performance/function is set to the standard value.

3. Standard interference

- When the diameter of a hole of a part shown in the given standard size and tolerance table is smaller than that of the mating shaft, the difference between those diameters is called the “interference”.
- The range (A – B) from the difference (A) between the minimum size of the shaft and the maximum size of the hole to the difference (B) between the maximum size of the shaft and the minimum size of the hole is the “standard interference”.
- After repairing or replacing some parts, measure the size of their hole and shaft and check that the interference is in the standard range.

4. Repair limit and allowable value or allowable dimension

- The size of a part changes because of wear and deformation while it is used. The limit of changed size is called the “repair limit”.
- If a part is worn to the repair limit, it must be replaced or repaired.
- The performance and function of a product lowers while it is used. A value which the product can be used without causing a problem is called the “allowable value” or “allowable dimension”.
- If a product is worn to the allowable value, it must be checked or repaired. Since the permissible value is estimated from various tests or experiences in most cases, however, it must be judged after considering the operating condition and customer's requirement.

5. Clearance limit

- Parts can be used until the clearance between them is increased to a certain limit. The limit at which those parts cannot be used is called the “clearance limit”.
- If the clearance between the parts exceeds the clearance limit, they must be replaced or repaired.

6. Interference limit

- The allowable maximum interference between the hole of a part and the shaft of another part to be assembled is called the “interference limit”.
- The interference limit shows the repair limit of the part of smaller tolerance.
- If the interference between the parts exceeds the interference limit, they must be replaced or repaired.

Handling of electric equipment and hydraulic component


To maintain the performance of the machine over a long period, and to prevent failures or other troubles before they occur, correct “operation“, “maintenance and inspection“, “troubleshooting“, and “repairs” must be carried out. This section deals particularly with correct repair procedures for mechatronics and is aimed at improving the quality of repairs. For this purpose, it gives sections on “Handling electric equipment” and “Handling hydraulic equipment” (particularly gear oil and hydraulic oil).

Points to remember when handling electric equipment

1. Handling wiring harnesses and connectors

Wiring harnesses consist of wiring connecting one component to another component, connectors used for connecting and disconnecting one wire from another wire, and protectors or tubes used for protecting the wiring.


Compared with other electrical components fitted in boxes or cases, wiring harnesses are more likely to be affected by the direct effects of rain, water, heat, or vibration. Furthermore, during inspection and repair operations, they are frequently removed and installed again, so they are likely to suffer deformation or damage. For this reason, it is necessary to be extremely careful when handling wiring harnesses.

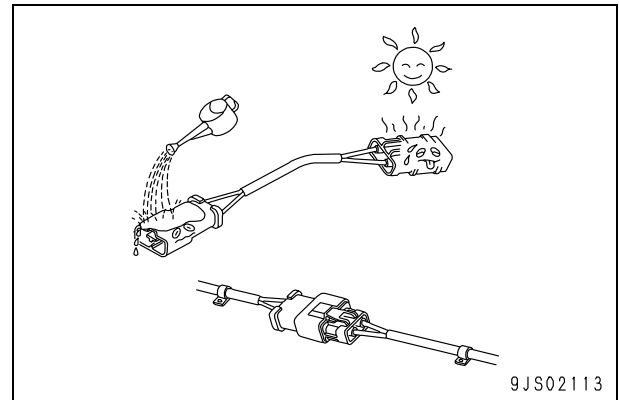

2. Main failures occurring in wiring harness


1) Defective contact of connectors (defective contact between male and female)

Problems with defective contact are likely to occur because the male connector is not properly inserted into the female connector, or because one or both of the connectors is deformed or the position is not correctly aligned, or because there is corrosion or oxidization of the contact surfaces. The corroded or oxidized contact surfaces may become shiny again (and contact may become normal) by connecting and disconnecting the connector about 10 times.

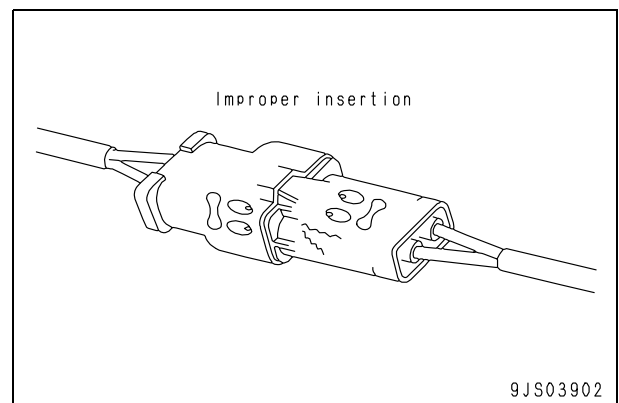


2) Defective crimping or soldering of connectors

The pins of the male and female connectors are in contact at the crimped terminal or soldered portion, but if there is excessive force brought to bear on the wiring, the plating at the joint will peel and cause improper connection or breakage.

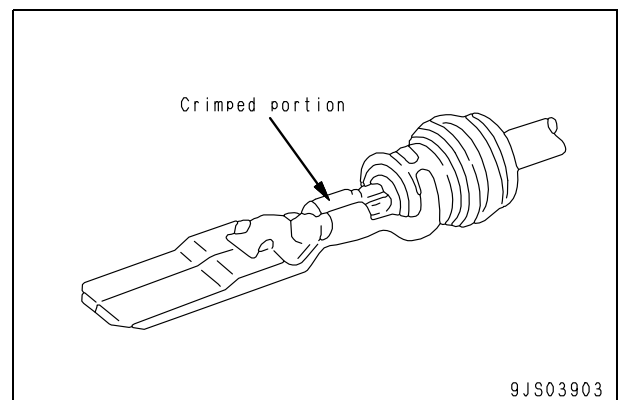

3) Disconnections in wiring


If the wiring is held and the connectors are pulled apart, or components are lifted with a crane with the wiring still connected, or a heavy object hits the wiring, the crimping of the connector may separate, or the soldering may be damaged, or the wiring may be broken.

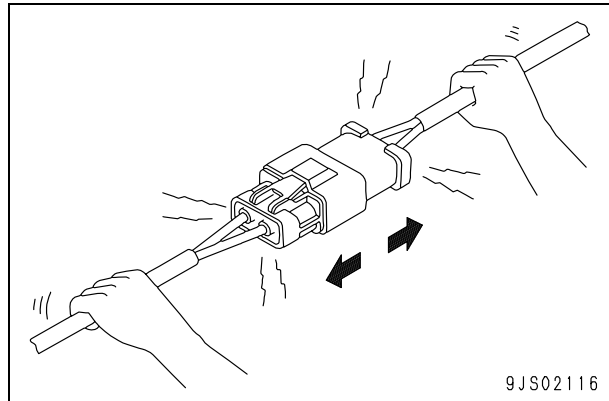

9JS02116

4) High-pressure water entering connector

The connector is designed to make it difficult for water to enter (drip-proof structure), but if high-pressure water is sprayed directly on the connector, water may enter the connector, depending on the direction of the water jet. Accordingly, take care not to splash water over the connector. The connector is designed to prevent water from entering, but at the same time, if water does enter, it is difficult for it to be drained. Therefore, if water should get into the connector, the pins will be short-circuited by the water, so if any water gets in, immediately dry the connector or take other appropriate action before passing electricity through it.

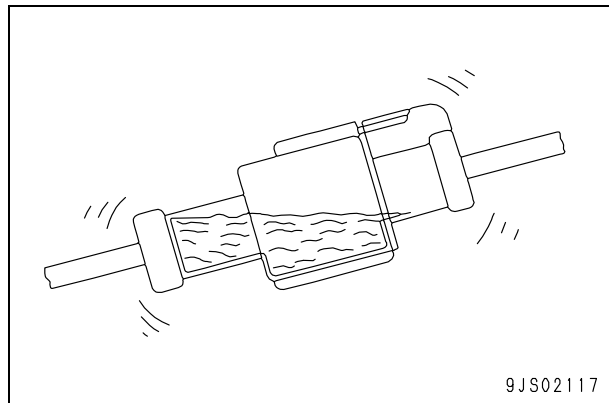


9JS02117

5) Oil or dirt stuck to connector

If oil or grease are stuck to the connector and an oil film is formed on the mating surface between the male and female pins, the oil will not let the electricity pass, so there will be defective contact. If there is oil or grease stuck to the connector, wipe it off with a dry cloth or blow it dry with compressed air and spray it with a contact restorer.

- ★ When wiping the mating portion of the connector, be careful not to use excessive force or deform the pins.
- ★ If there is oil or water in the compressed air, the contacts will become even dirtier, so remove the oil and water from the compressed air completely before cleaning with compressed air.

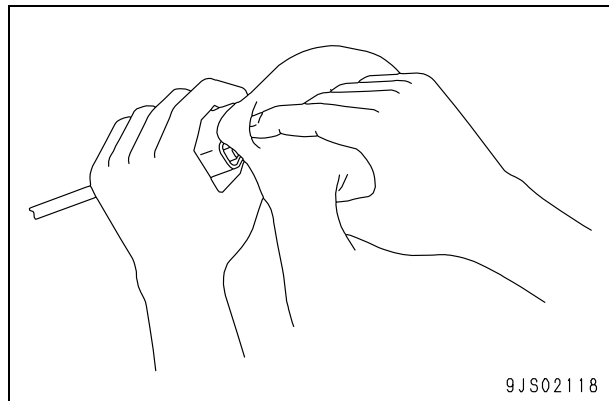

9JS02118

3. Removing, installing, and drying connectors and wiring harnesses

1) Disconnecting connectors

- 1] Hold the connectors when disconnecting.

When disconnecting the connectors, hold the connectors. For connectors held by a screw, loosen the screw fully, then hold the male and female connectors in each hand and pull apart. For connectors which have a lock stopper, press down the stopper with your thumb and pull the connectors apart.

- ★ Never pull with one hand.

- 2] When removing from clips

- Both of the connector and clip have stoppers, which are engaged with each other when the connector is installed.





- When removing a connector from a clip, pull the connector in a parallel direction to the clip for removing stoppers.

- ★ If the connector is twisted up and down or to the left or right, the housing may break.

- 3] Action to take after removing connectors

After removing any connector, cover it with a vinyl bag to prevent any dust, dirt, oil, or water from getting in the connector portion.

- ★ If the machine is left disassembled for a long time, it is particularly easy for improper contact to occur, so always cover the connector.

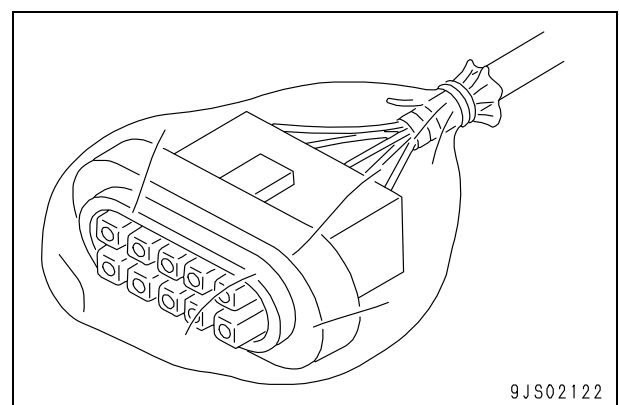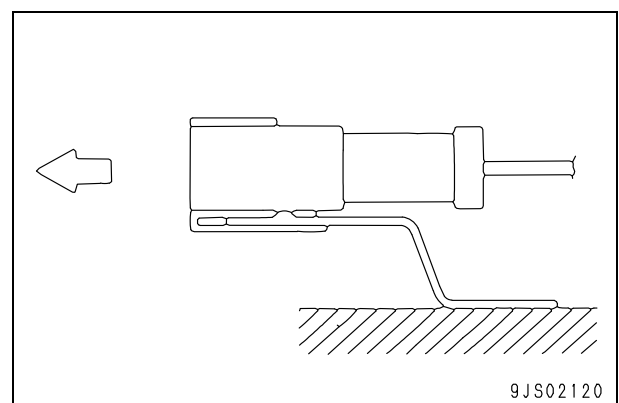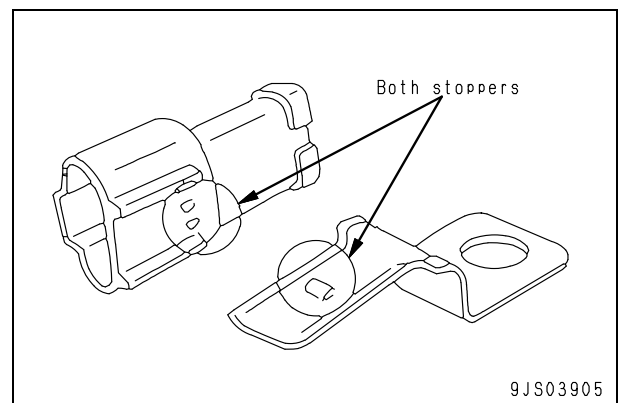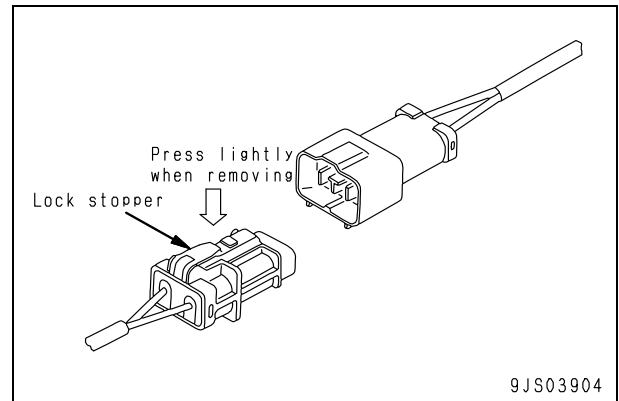

2) Connecting connectors

1] Check the connector visually.

Check that there is no oil, dirt, or water stuck to the connector pins (mating portion).

Check that there is no deformation, defective contact, corrosion, or damage to the connector pins.

Check that there is no damage or breakage to the outside of the connector.

★ If there is any oil, water, or dirt stuck to the connector, wipe it off with a dry cloth. If any water has got inside the connector, warm the inside of the wiring with a dryer, but be careful not to make it too hot as this will cause short circuits.

★ If there is any damage or breakage, replace the connector.

2] Fix the connector securely.




Align the position of the connector correctly, and then insert it securely. For connectors with the lock stopper, push in the connector until the stopper clicks into position.

3] Correct any protrusion of the boot and any misalignment of the wiring harness.

For connectors fitted with boots, correct any protrusion of the boot. In addition, if the wiring harness is misaligned, or the clamp is out of position, adjust it to its correct position.

★ If the connector cannot be corrected easily, remove the clamp and adjust the position.

● If the connector clamp has been removed, be sure to return it to its original position. Check also that there are no loose clamps.

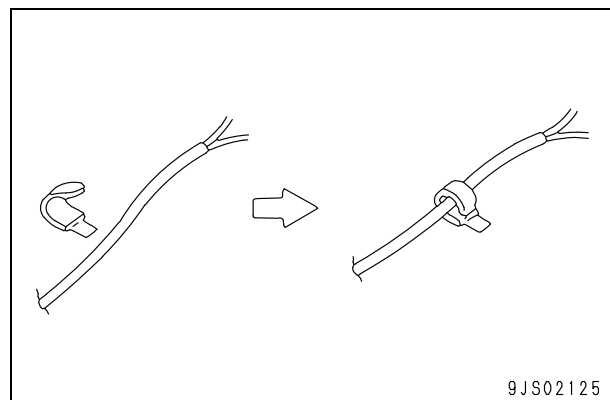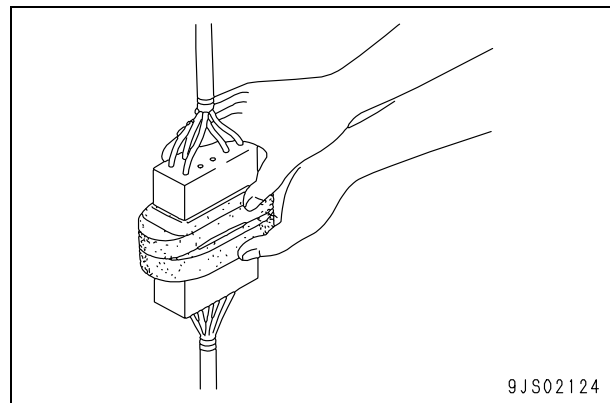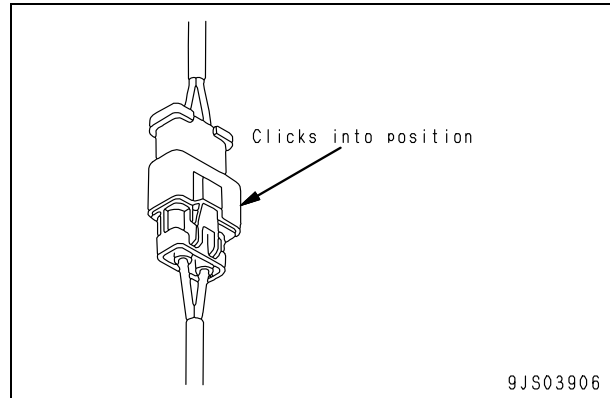

- 3) Heavy duty wire connector (DT 8-pole, 12-pole)

Disconnection (Left of figure)

While pressing both sides of locks (a) and (b), pull out female connector (2).

Connection (Right of figure)

- 1] Push in female connector (2) horizontally until the lock clicks.

Arrow: 1)

- 2] Since locks (a) and (b) may not be set completely, push in female connector (2) while moving it up and down until the locks are set normally.


Arrow: 1), 2), 3)

- ★ Right of figure: Lock (a) is pulled down (not set completely) and lock (b) is set completely.

- (1): Male connector
 (2): Female connector
 (a), (b): Locks

- Disconnection

- Connection (Example of incomplete setting of (a))

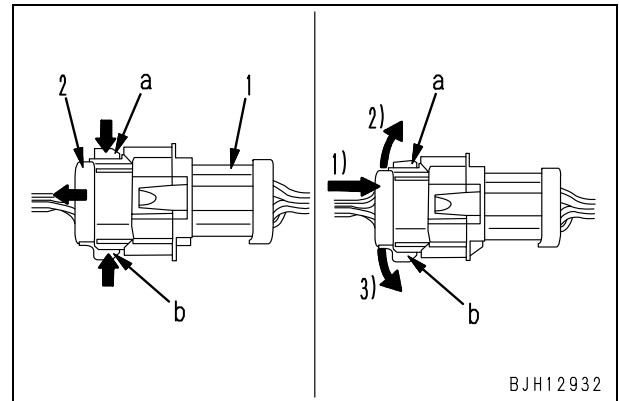

4) Drying wiring harness

If there is any oil or dirt on the wiring harness, wipe it off with a dry cloth. Avoid washing it in water or using steam. If the connector must be washed in water, do not use high-pressure water or steam directly on the wiring harness. If water gets directly on the connector, do as follows.

- 1] Disconnect the connector and wipe off the water with a dry cloth.

- ★ If the connector is blown dry with compressed air, there is the risk that oil in the air may cause defective contact, so remove all oil and water from the compressed air before blowing with air.

- 2] Dry the inside of the connector with a dryer.




If water gets inside the connector, use a dryer to dry the connector.

- ★ Hot air from the dryer can be used, but regulate the time that the hot air is used in order not to make the connector or related parts too hot, as this will cause deformation or damage to the connector.

- 3] Carry out a continuity test on the connector.



After drying, leave the wiring harness disconnected and carry out a continuity test to check for any short circuits between pins caused by water.

- ★ After completely drying the connector, blow it with contact restorer and reassemble.

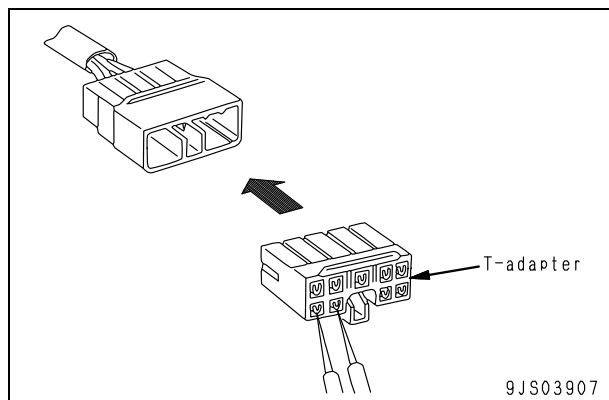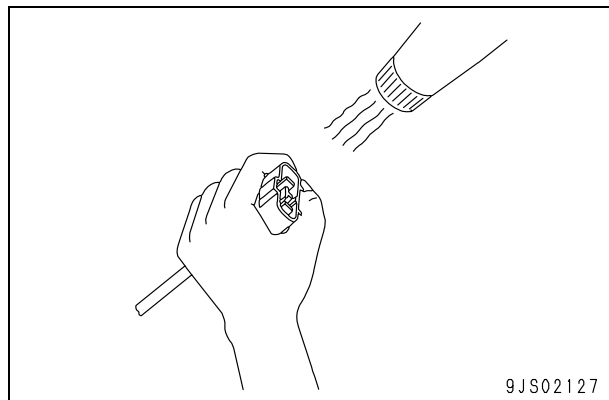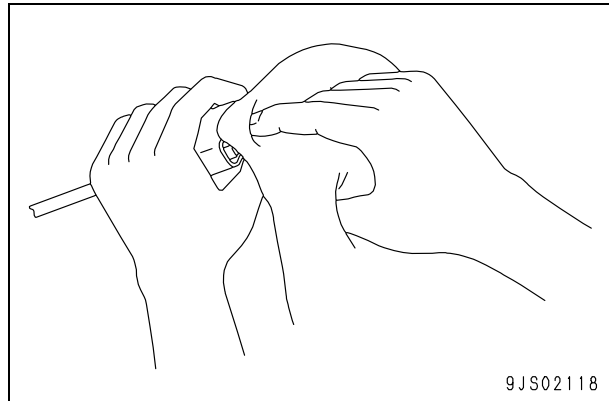

4. Handling controller

- 1) The controller contains a microcomputer and electronic control circuits. These control all of the electronic circuits on the machine, so be extremely careful when handling the controller.
- 2) Do not place objects on top of the controller.
- 3) Cover the control connectors with tape or a vinyl bag. Never touch the connector contacts with your hand.
- 4) During rainy weather, do not leave the controller in a place where it is exposed to rain.
- 5) Do not place the controller on oil, water, or soil, or in any hot place, even for a short time. (Place it on a suitable dry stand).
- 6) Precautions when carrying out arc welding
When carrying out arc welding on the body, disconnect all wiring harness connectors connected to the controller. Fit an arc welding ground close to the welding point.

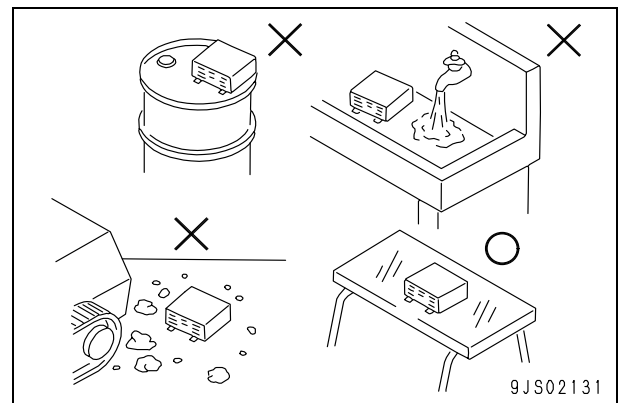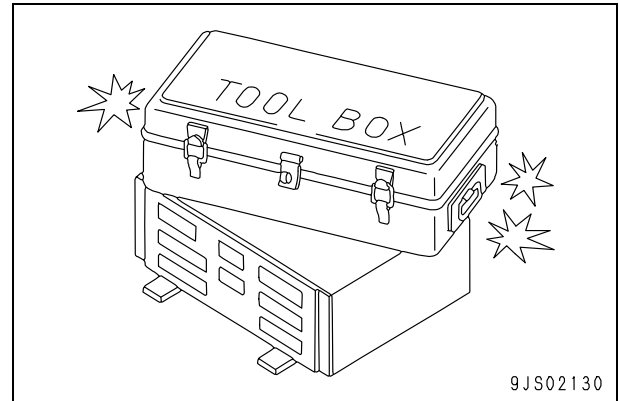

5. Points to remember when troubleshooting electric circuits

- 1) Always turn the power OFF before disconnecting or connecting connectors.
- 2) Before carrying out troubleshooting, check that all the related connectors are properly inserted.
 - ★ Disconnect and connect the related connectors several times to check.
- 3) Always connect any disconnected connectors before going on to the next step.
 - ★ If the power is turned ON with the connectors still disconnected, unnecessary abnormality displays will be generated.
- 4) When carrying out troubleshooting of circuits (measuring the voltage, resistance, continuity, or current), move the related wiring and connectors several times and check that there is no change in the reading of the tester.
 - ★ If there is any change, there is probably defective contact in that circuit.

Points to remember when handling hydraulic equipment

With the increase in pressure and precision of hydraulic equipment, the most common cause of failure is dirt (foreign material) in the hydraulic circuit. When adding hydraulic oil, or when disassembling or assembling hydraulic equipment, it is necessary to be particularly careful.

1. Be careful of the operating environment.

Avoid adding hydraulic oil, replacing filters, or repairing the machine in rain or high winds, or places where there is a lot of dust.

2. Disassembly and maintenance work in the field




If disassembly or maintenance work is carried out on hydraulic equipment in the field, there is danger of dust entering the equipment. It is also difficult to check the performance after repairs, so it is desirable to use unit exchange. Disassembly and maintenance of hydraulic equipment should be carried out in a specially prepared dustproof workshop, and the performance should be checked with special test equipment.

3. Sealing openings

After any piping or equipment is removed, the openings should be sealed with caps, tapes, or vinyl bags to prevent any dirt or dust from entering. If the opening is left open or is blocked with a rag, there is danger of dirt entering or of the surrounding area being made dirty by leaking oil so never do this. Do not simply drain oil out onto the ground, but collect it and ask the customer to dispose of it, or take it back with you for disposal.

4. Do not let any dirt or dust get in during refilling operations

Be careful not to let any dirt or dust get in when refilling with hydraulic oil. Always keep the oil filler and the area around it clean, and also use clean pumps and oil containers. If an oil cleaning device is used, it is possible to filter out the dirt that has collected during storage, so this is an even more effective method.

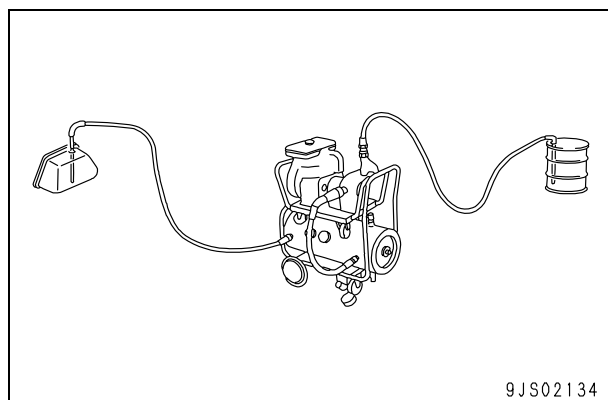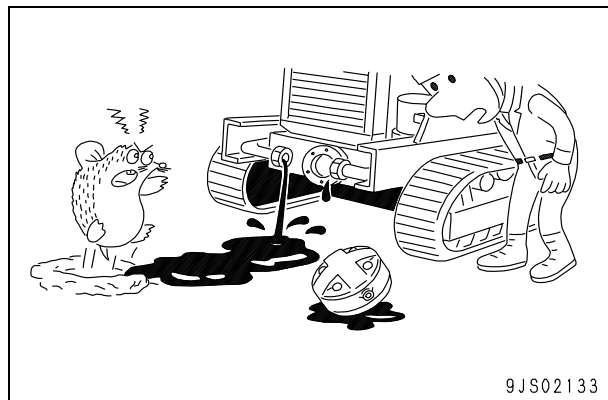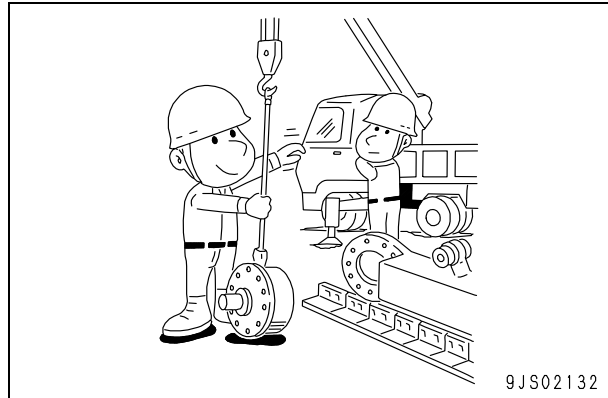


5. Change hydraulic oil when the temperature is high

When hydraulic oil or other oil is warm, it flows easily. In addition, the sludge can also be drained out easily from the circuit together with the oil, so it is best to change the oil when it is still warm. When changing the oil, as much as possible of the old hydraulic oil must be drained out. (Drain the oil from the hydraulic tank; also drain the oil from the filter and from the drain plug in the circuit.) If any old oil is left, the contaminants and sludge in it will mix with the new oil and will shorten the life of the hydraulic oil.


6. Flushing operations

After disassembling and assembling the equipment, or changing the oil, use flushing oil to remove the contaminants, sludge, and old oil from the hydraulic circuit. Normally, flushing is carried out twice: primary flushing is carried out with flushing oil, and secondary flushing is carried out with the specified hydraulic oil.

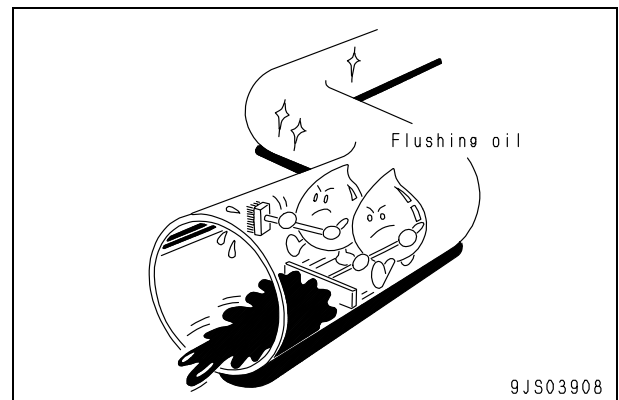

7. Cleaning operations

After repairing the hydraulic equipment (pump, control valve, etc.) or when running the machine, carry out oil cleaning to remove the sludge or contaminants in the hydraulic oil circuit. The oil cleaning equipment is used to remove the ultra fine (about 3 μ) particles that the filter built in the hydraulic equipment cannot remove, so it is an extremely effective device.

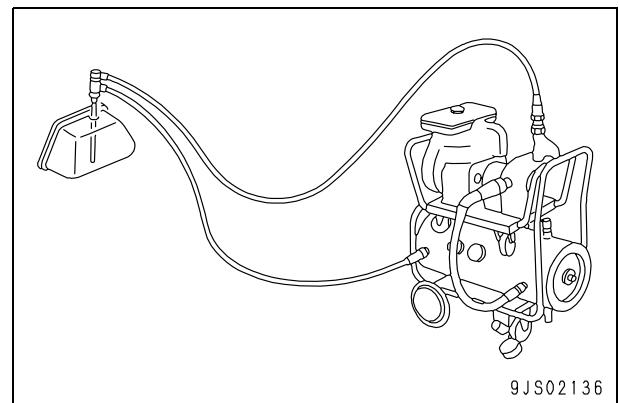

Handling of connectors newly used for engines

★ Mainly, following engines are object for following connectors.

- 95E-5
- 107E-1
- 114E-3
- 125E-5
- 140E-5
- 170E-5
- 12V140E-3

1. Slide lock type (FRAMATOME-3, FRAMATOME-2)

- 95 – 170, 12V140 engines
 - Various pressure sensors and NE speed sensor

Examples)

Intake air pressure sensor in intake manifold: PIM
(125, 170, 12V140 engines)

Oil pressure sensor: POIL
(125, 170, 12V140 engines)

Oil pressure switch
(95, 107, 114 engines)


Ne speed sensor of flywheel housing: NE
(95 – 170, 12V140 engines)

Ambient pressure sensor: PAMB
(125, 170, 12V140 engines)

Disconnect connector (1) according to the following procedure.

- 1) Slide lock (L1) to the right.
- 2) While pressing lock (L2), pull out connector (1) toward you.

★ Even if lock (L2) is pressed, connector (1) cannot be pulled out toward you, if part A does not float. In this case, float part A with a small screwdriver while press lock (L2), and then pull out connector (1) toward you.

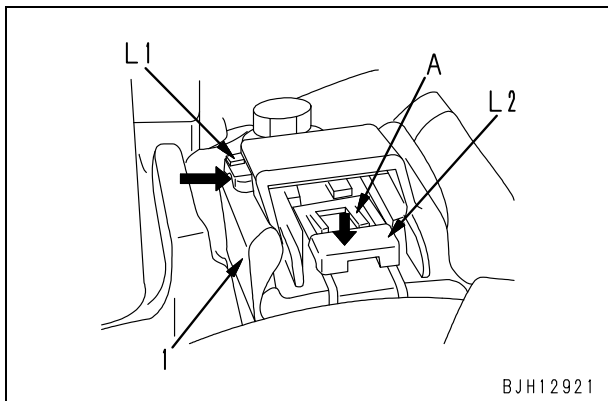

2. Pull lock type (PACKARD-2)

- 95 – 170, 12V140 engines
 - Various temperature sensors

Example)


Intake air temperature sensor in intake manifold: TIM

Fuel temperature sensor: TFUEL

Oil temperature sensor: TOIL

Coolant temperature sensor: TWTR, etc.

Disconnect the connector by pulling lock (B) (on the wiring harness side) of connector (2) outward.

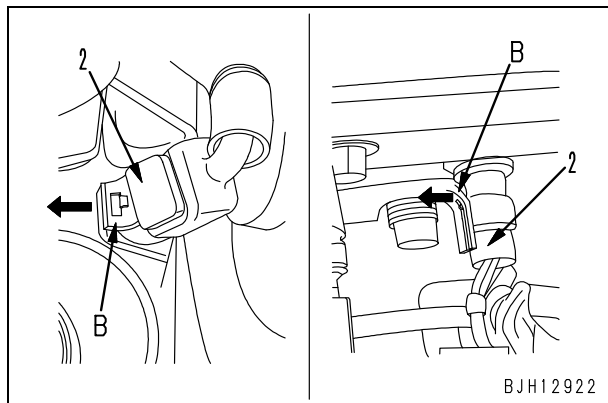


3. Push lock type

- 95, 107, 114 engines
Example)
Fuel pressure sensor in common rail
(**BOSCH-03**)



Disconnect connector (3) according to the following procedure.

- 1) While pressing lock (C), pull out connector (3) in the direction of the arrow.

- 114 engine

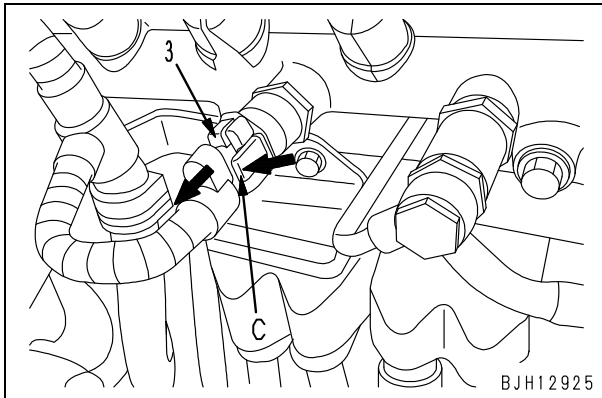


- 107 engine

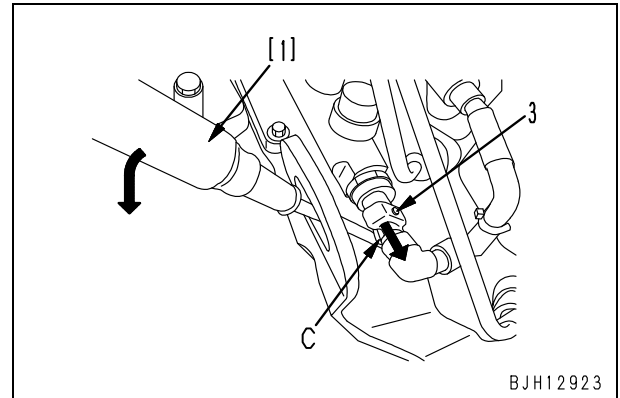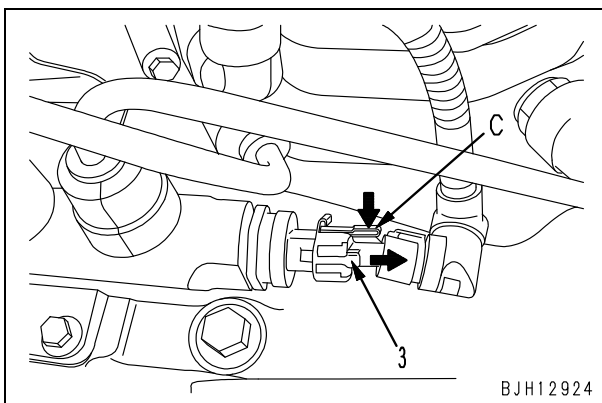

- 107, 114 engines
Example)
Intake air pressure/temperature sensor in intake manifold
(**SUMITOMO-04**)


- 3) While pressing lock (D), pull out connector (4) in the direction of the arrow.

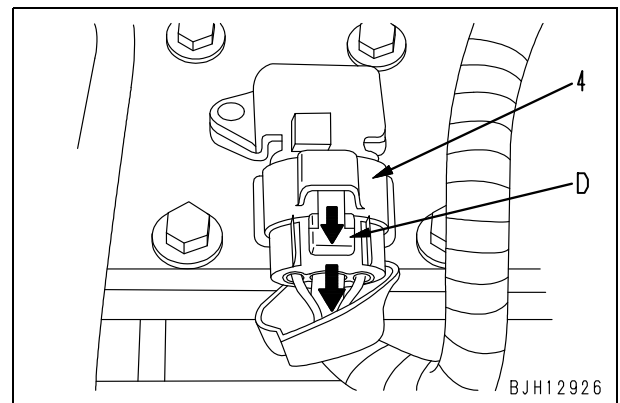


- ★ If the lock is on the underside, use flat-head screwdriver [1] since you cannot insert your fingers.
- 2) While pressing up lock (C) of the connector with flat-head screwdriver [1], pull out connector (3) in the direction of the arrow.

- 95, 125 – 170, 12V140 engines
- 4) While pressing lock (E) of the connector, pull out connector (5) in the direction of the arrow.


Example)
 Fuel pressure sensor in common rail:
 PFUEL etc. **(AMP-3)**

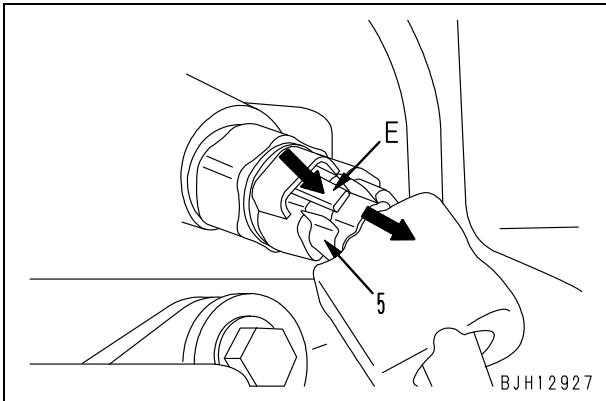

Example)
 Injection pressure control valve of fuel
 supply pump: PCV **(SUMITOMO-2)**

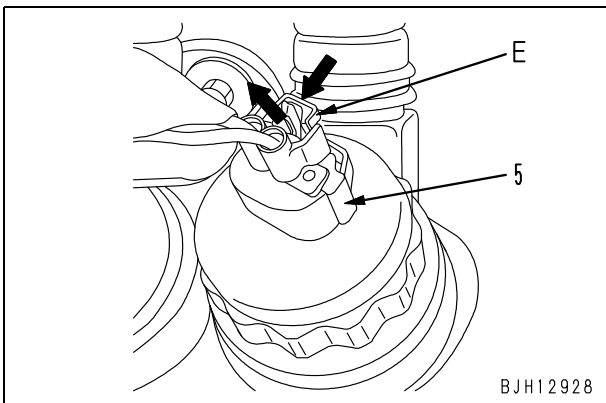


Example)
 Speed sensor of fuel supply pump:
 G **(SUMITOMO-3)**
 ★ Pull the connector straight up.

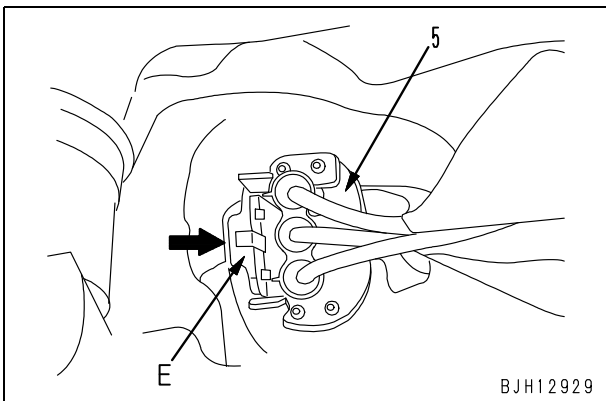


4. Turn-housing type (Round green connector)

- 140 engine
 Example)
 Intake air pressure sensor in intake mani-
 fold (CANNON-04): PIM etc.

- 1) Disconnect connector (6) according to the following procedure.
 - 1] Turn housing (H1) in the direction of the arrow.
 - ★ When connector is unlocked, housing (H1) becomes heavy to turn.
 - 2] Pull out housing (H1) in the direction of the arrow.
 - ★ Housing (H1) is left on the wiring harness side.

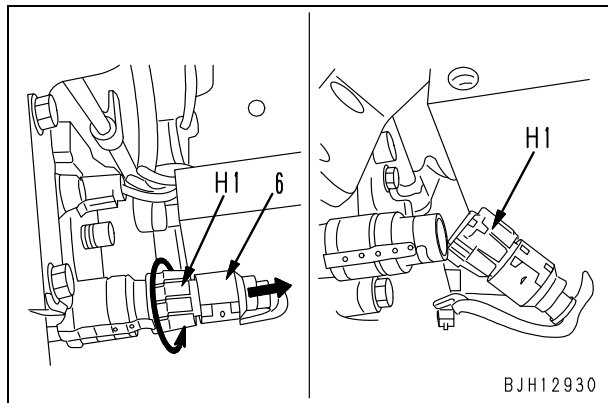


- 2) Connect the connector according to the following procedure.
 - 1] Insert the connector to the end, while setting its groove.
 - 2] Turn housing (H1) in the direction of the arrow until it "clicks".

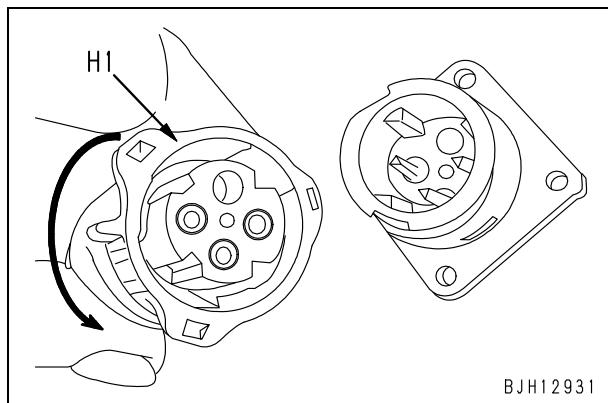

How to read electric wire code

- ★ The information about the wires unique to each machine model is described in Troubleshooting section, Relational information of troubleshooting.

In the electric circuit diagram, the material, thickness, and color of each electric wire are indicated by symbols. The electric wire code is helpful in understanding the electric circuit diagram.

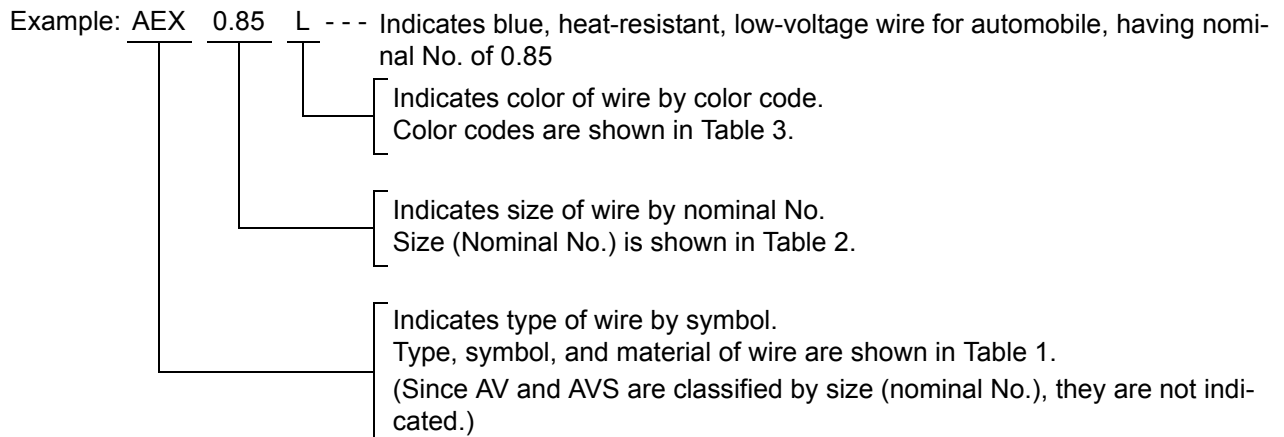

1. Type, symbol, and material

AV and AVS are different in only thickness and outside diameter of the cover. AEX is similar to AV in thickness and outside diameter of AEX and different from AV and AVS in material of the cover.

(Table 1)

Type	Sym- bol	Material		Using temperature range (°C)	Example of use
Low-voltage wire for automobile	AV	Conduc- tor	Annealed copper for elec- tric appliance	-30 to +60	General wiring (Nominal No. 5 and above)
		Insulator	Soft polyvinyl chloride		
Thin-cover low-voltage wire for automobile	AVS	Conduc- tor	Annealed copper for elec- tric appliance		
		Insulator	Soft polyvinyl chloride		
Heat-resis- tant low-volt- age wire for automobile	AEX	Conduc- tor	Annealed copper for elec- tric appliance	-50 to +110	General wiring in extremely cold district, wiring at high-tem- perature place
		Insulator	Heat-resistant crosslinked polyethylene		


2. Dimensions

(Table 2)

Nominal No.		0.5f	(0.5)	0.75f	(0.85)	1.25f	(1.25)	2f	2	3f	3	5
Conductor	Number of strands/Diameter of strand	20/0.18	7/0.32	30/0.18	11/0.32	50/0.18	16/0.32	37/0.26	26/0.32	58/0.26	41/0.32	65/0.32
	Sectional area (mm ²)	0.51	0.56	0.76	0.88	1.27	1.29	1.96	2.09	3.08	3.30	5.23
	d (approx.)	1.0		1.2		1.5		1.9	1.9	2.3	2.4	3.0
Cover D	AVS Standard	2.0		2.2		2.5		2.9	2.9	3.5	3.6	–
	AV Standard	–		–		–		–	–	–	–	4.6
	AEX Standard	2.0		2.2		2.7		3.0	3.1	–	3.8	4.6

Nominal No.		8	15	20	30	40	50	60	85	100
Conductor	Number of strands/Diameter of strand	50/0.45	84/0.45	41/0.80	70/0.80	85/0.80	108/0.80	127/0.80	169/0.80	217/0.80
	Sectional area (mm ²)	7.95	13.36	20.61	35.19	42.73	54.29	63.84	84.96	109.1
	d (approx.)	3.7	4.8	6.0	8.0	8.6	9.8	10.4	12.0	13.6
Cover D	AVS Standard	–	–	–	–	–	–	–	–	–
	AV Standard	5.5	7.0	8.2	10.8	11.4	13.0	13.6	16.0	17.6
	AEX Standard	5.3	7.0	8.2	10.8	11.4	13.0	13.6	16.0	17.6

“f” of nominal No. denotes flexible”.

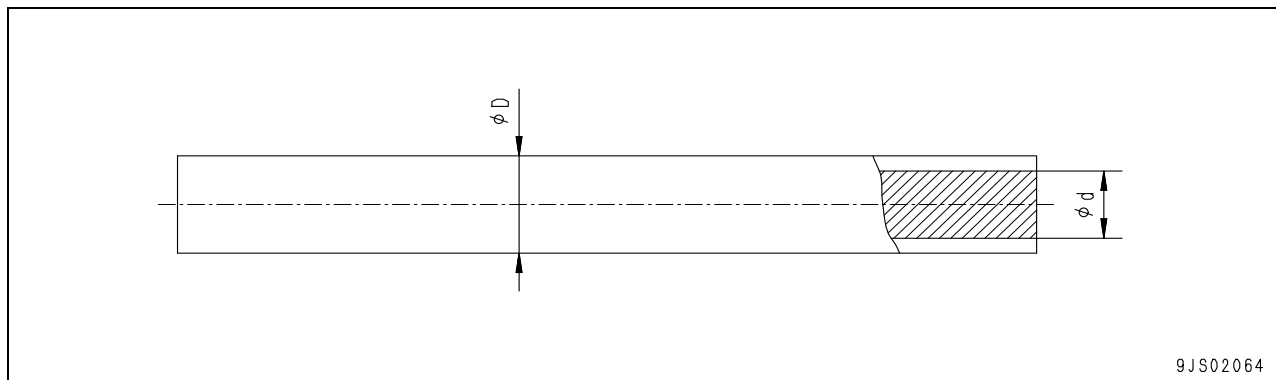

9JS02064

3. Color codes table

(Table 3)

Color Code	Color of wire	Color Code	Color of wire
B	Black	LgW	Light green & White
Br	Brown	LgY	Light green & Yellow
BrB	Brown & Black	LR	Blue & Red
BrR	Brown & Red	LW	Blue & White
BrW	Brown & White	LY	Blue & Yellow
BrY	Brown & Yellow	O	Orange
Ch	Charcoal	P	Pink
Dg	Dark green	R	Red
G	Green	RB	Red & Black
GB	Green & Black	RG	Red & Green
GL	Green & Blue	RL	Red & Blue
Gr	Gray	RW	Red & White
GR	Green & Red	RY	Red & Yellow
GW	Green & White	Sb	Sky Blue
GY	Green & Yellow	Y	Yellow
L	Blue	YB	Yellow & Black
LB	Blue & Black	YG	Yellow & Green
Lg	Light green	YL	Yellow & Blue
LgB	Light green & Black	YR	Yellow & Red
LgR	Light green & Red	YW	Yellow & White

Remarks: In a color code consisting of 2 colors, the first color is the color of the background and the second color is the color of the marking.

Example: "GW" means that the background is Green and marking is White.

4. Types of circuits and color codes

(Table 4)

Type of wire	AVS or AV						AEX		
Type of circuit	Charge	R	WG	-	-	-	-	R	-
	Ground	B	-	-	-	-	-	B	-
	Start	R	-	-	-	-	-	R	-
	Light	RW	RB	RY	RG	RL	-	D	-
	Instrument	Y	YR	YB	YG	YL	YW	Y	Gr
	Signal	G	GW	GR	GY	GB	GL	G	Br
	Others	L	LW	LR	LY	LB	-	L	-
		Br	BrW	BrR	BrY	BrB	-	-	-
		Lg	LgR	LgY	LgB	LgW	-	-	-
		O	-	-	-	-	-	-	-
		Gr	-	-	-	-	-	-	-
		P	-	-	-	-	-	-	-
		Sb	-	-	-	-	-	-	-
Dg	-	-	-	-	-	-	-		
Ch	-	-	-	-	-	-	-		

Precautions when carrying out operation

[When carrying out removal or installation (disassembly or assembly) of units, be sure to follow the general precautions given below when carrying out the operation.]

1. Precautions when carrying out removal work

- If the coolant contains antifreeze, dispose of it correctly.
- After disconnecting hoses or tubes, cover them or fit plugs to prevent dirt or dust from entering.
- When draining oil, prepare a container of adequate size to catch the oil.
- Confirm the match marks showing the installation position, and make match marks in the necessary places before removal to prevent any mistake when assembling.
- To prevent any excessive force from being applied to the wiring, always hold the connectors when disconnecting the connectors. Do not pull the wires.
- Fit wires and hoses with tags to show their installation position to prevent any mistake when installing.
- Check the number and thickness of the shims, and keep in a safe place.
- When raising components, be sure to use lifting equipment of ample strength.
- When using forcing screws to remove any components, tighten the forcing screws uniformly in turn.
- Before removing any unit, clean the surrounding area and fit a cover to prevent any dust or dirt from entering after removal.

★ Precautions when handling piping during disassembly

Fit the following plugs into the piping after disconnecting it during disassembly operations.

1) Face seal type hoses and tubes


Nominal number	Plug (nut end)	Sleeve nut (elbow end)
02	07376-70210	02789-20210
03	07376-70315	02789-20315
04	07376-70422	02789-20422
05	07376-70522	02789-20522
06	07376-70628	02789-20628
10	07376-71034	07221-21034
12	07376-71234	07221-21234

2) Split flange type hoses and tubes

Nominal number	Flange (hose end)	Sleeve head (tube end)	Split flange
04	07379-00400	07378-10400	07371-30400
05	07379-00500	07378-10500	07371-30500

3) If the part is not under hydraulic pressure, the following corks can be used.

Nominal number	Part Number	Dimensions		
		D	d	L
06	07049-00608	6	5	8
08	07049-00811	8	6.5	11
10	07049-01012	10	8.5	12
12	07049-01215	12	10	15
14	07049-01418	14	11.5	18
16	07049-01620	16	13.5	20
18	07049-01822	18	15	22
20	07049-02025	20	17	25
22	07049-02228	22	18.5	28
24	07049-02430	24	20	30
27	07049-02734	27	22.5	34

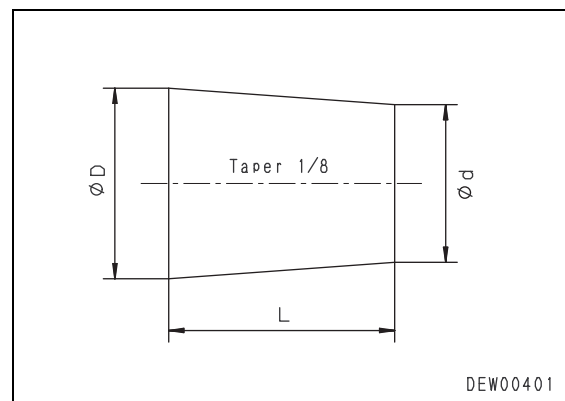

2. Precautions when carrying out installation work

- Tighten all bolts and nuts (sleeve nuts) to the specified (KES) torque.
 - Install the hoses without twisting or interference and fix them with intermediate clamps, if there are any.
 - Replace all gaskets, O-rings, cotter pins, and lock plates with new parts.
 - Bend the cotter pins and lock plates securely.
 - When coating with adhesive, clean the part and remove all oil and grease, then coat the threaded portion with 2 – 3 drops of adhesive.
 - When coating with gasket sealant, clean the surface and remove all oil and grease, check that there is no dirt or damage, then coat uniformly with gasket sealant.
 - Clean all parts, and correct any damage, dents, burrs, or rust.
 - Coat rotating parts and sliding parts with engine oil.
 - When press fitting parts, coat the surface with anti-friction compound (LM-P).
 - After fitting snap rings, check that the snap ring is fitted securely in the ring groove.
 - When connecting wiring connectors, clean the connector to remove all oil, dirt, or water, then connect securely.
 - When using eyebolts, check that there is no deformation or deterioration, screw them in fully, and align the direction of the hook.
 - When tightening split flanges, tighten uniformly in turn to prevent excessive tightening on one side.
- ★ When operating the hydraulic cylinders for the first time after reassembling cylinders, pumps and other hydraulic equipment removed for repair, always bleed the air as follows:
- 1) Start the engine and run at low idle.
 - 2) Operate the work equipment control lever to operate the hydraulic cylinder 4 – 5 times, stopping the cylinder 100 mm from the end of its stroke.
 - 3) Next, operate the hydraulic cylinder 3 – 4 times to the end of its stroke.
 - 4) After doing this, run the engine at normal speed.
- ★ When using the machine for the first time after repair or long storage, follow the same procedure.

3. Precautions when completing the operation

- 1) Refilling with coolant, oil and grease
 - If the coolant has been drained, tighten the drain valve, and add coolant to the specified level. Run the engine to circulate the coolant through the system. Then check the coolant level again.
 - If the hydraulic equipment has been removed and installed again, add engine oil to the specified level. Run the engine to circulate the oil through the system. Then check the oil level again.
 - If the piping or hydraulic equipment have been removed, always bleed the air from the system after reassembling the parts.
 - ★ For details, see Testing and adjusting, “Bleeding air”.
 - Add the specified amount of grease (molybdenum disulphide grease) to the work equipment parts.
- 2) Checking cylinder head and manifolds for looseness

Check the cylinder head and intake and exhaust manifold for looseness.
If any part is loosened, retighten it.

 - For the tightening torque, see “Disassembly and assembly”.
- 3) Checking engine piping for damage and looseness

Intake and exhaust system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for air suction and exhaust gas leakage.
If any part is loosened or damaged, retighten or repair it.

Cooling system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for coolant leakage.
If any part is loosened or damaged, retighten or repair it.

Fuel system

Check the piping for damage, the mounting bolts and nuts for looseness, and the joints for fuel leakage.
If any part is loosened or damaged, retighten or repair it.

- 4) Checking muffler and exhaust pipe for damage and looseness
 - 1] Visually check the muffler, exhaust pipe and their mounting parts for a crack and damage.
If any part is damaged, replace it.
 - 2] Check the mounting bolts and nuts of the muffler, exhaust pipe and their mounting parts for looseness.
If any bolt or nut is loosened, retighten it.
- 5) Checking muffler function
Check the muffler for abnormal sound and sound different from that of a new muffler.
If any abnormal sound is heard, repair the muffler, referring to "Troubleshooting" and "Disassembly and assembly".


Method of disassembling and connecting push-pull type coupler

- ⚠ Before carrying out the following work, loosen the oil filler cap of the hydraulic tank gradually to release the residual pressure from the hydraulic tank.
- ⚠ Even if the residual pressure is released from the hydraulic tank, some hydraulic oil flows out when the hose is disconnected. Accordingly, prepare an oil receiving container.

Type 1


1. Disconnection

- 1) Hold adapter (1) and push hose joint (2) into mating adapter (3). (Fig. 1)
 - ★ The adapter can be pushed in about 3.5 mm.
 - ★ Do not hold rubber cap portion (4).
- 2) After hose joint (2) is pushed into adapter (3), press rubber cap portion (4) against adapter (3) until it clicks. (Fig. 2)
- 3) Hold hose adapter (1) or hose (5) and pull it out. (Fig. 3)
 - ★ Since some hydraulic oil flows out, prepare an oil receiving container.

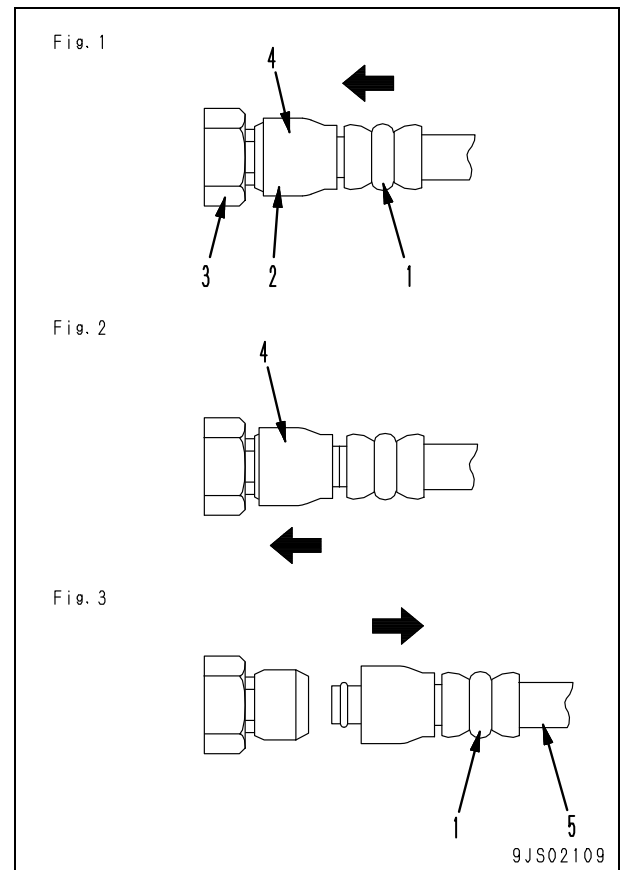

2. Connection


- 1) Hold hose adapter (1) or hose (5) and insert it in mating adapter (3), aligning them with each other. (Fig. 4)
 - ★ Do not hold rubber cap portion (4).
- 2) After inserting the hose in the mating adapter perfectly, pull it back to check its connecting condition. (Fig. 5)
 - ★ When the hose is pulled back, the rubber cap portion moves toward the hose about 3.5 mm. This does not indicate abnormality, however.

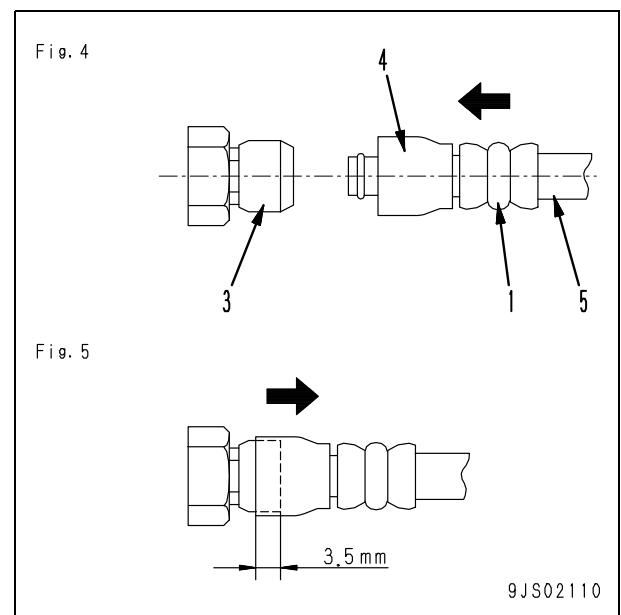

Type 2


1. Disconnection

- 1) Hold the tightening portion and push body (7) straight until sliding prevention ring (6) contacts contact surface (a) of the hexagonal portion at the male end. (Fig. 6)
- 2) While holding the condition of Step 1), turn lever (8) to the right (clockwise). (Fig. 7)
- 3) While holding the condition of Steps 1) and 2), pull out whole body (7) to disconnect it. (Fig. 8)

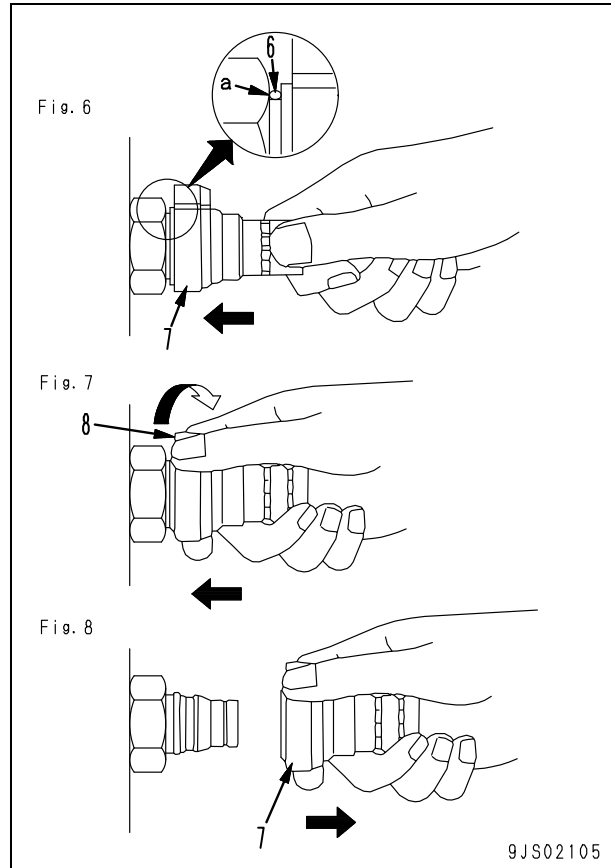

2. Connection


- Hold the tightening portion and push body (7) straight until sliding prevention ring (6) contacts contact surface (a) of the hexagonal portion at the male end. (Fig. 9)

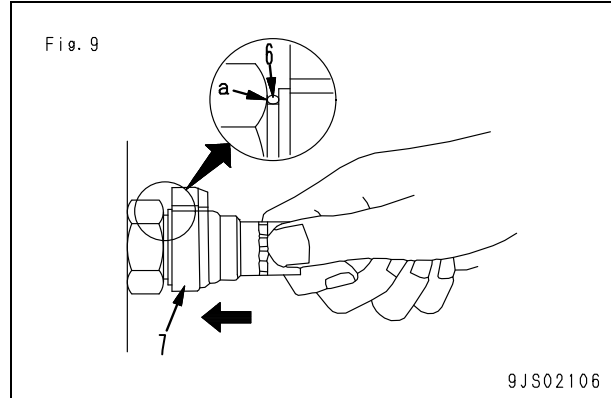

Type 3


1. Disconnection

- 1) Hold the tightening portion and push body (9) straight until sliding prevention ring (8) contacts contact surface (b) of the hexagonal portion at the male end. (Fig. 10)
- 2) While holding the condition of Step 1, push cover (10) straight until it contacts contact surface (b) of the hexagonal portion at the male end. (Fig. 11)
- 3) While holding the condition of Steps 1) and 2), pull out whole body (9) to disconnect it. (Fig. 12)

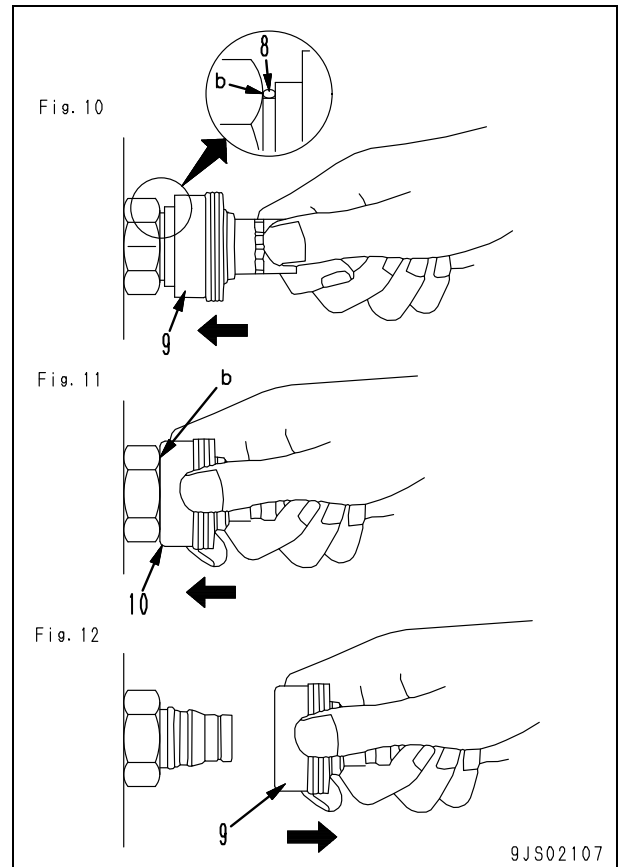

2. Connection

- Hold the tightening portion and push body (9) straight until the sliding prevention ring contacts contact surface (b) of the hexagonal portion at the male end. (Fig. 13)

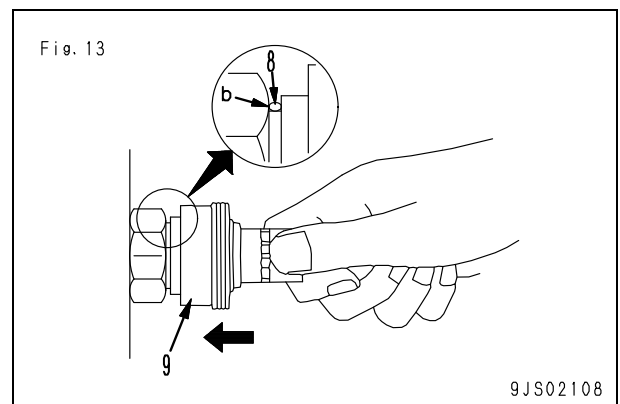

Standard tightening torque table

1. Table of tightening torques for bolts and nuts

★ Unless there are special instructions, tighten metric nuts and bolts to the torque below.


★ The following table applies to the bolts in Fig. A.

Thread diameter of bolt mm	Width across flats mm	Tightening torque	
		Nm	kgm
6	10	11.8 – 14.7	1.2 – 1.5
8	13	27 – 34	2.8 – 3.5
10	17	59 – 74	6.0 – 7.5
12	19	98 – 123	10.0 – 12.5
14	22	157 – 196	16 – 20
16	24	245 – 309	25 – 31.5
18	27	343 – 427	35 – 43.5
20	30	490 – 608	50 – 62
22	32	662 – 829	67.5 – 84.5
24	36	824 – 1,030	84 – 105
27	41	1,180 – 1,470	120 – 150
30	46	1,520 – 1,910	155 – 195
33	50	1,960 – 2,450	200 – 250
36	55	2,450 – 3,040	250 – 310
39	60	2,890 – 3,630	295 – 370


★ The following table applies to the bolts in Fig. B.

Thread diameter of bolt mm	Width across flats mm	Tightening torque	
		Nm	kgm
6	10	5.9 – 9.8	0.6 – 1.0
8	12	13.7 – 23.5	1.4 – 2.4
10	14	34.3 – 46.1	3.5 – 4.7
12	17	74.5 – 90.2	7.6 – 9.2

★ Fig. A

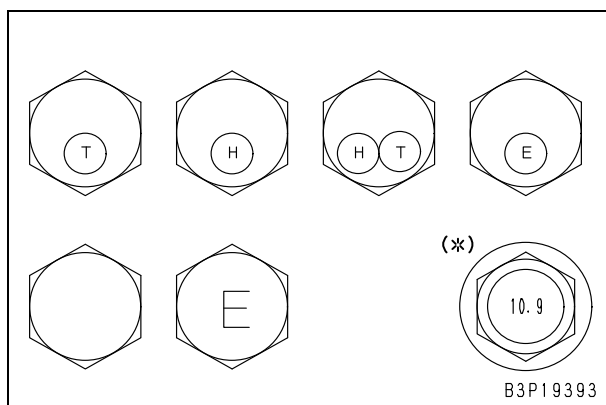

★ Fig. B

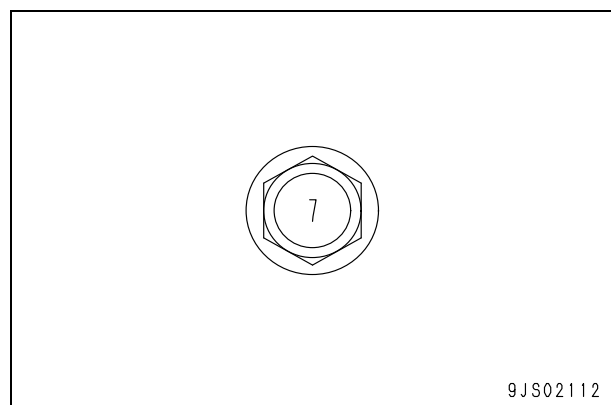

Remarks: The widths across flats against the thread diameters of flanged bolts (marks with "**") in Fig. A are the ones indicated in the table for bolts shown in Fig. B.
(Values of tightening torques shown in the table for Fig. A are applied.)

2. Table of tightening torques for split flange bolts

★ Unless there are special instructions, tighten split flange bolts to the torque below.

Thread diameter of bolt	Width across flats	Tightening torque	
		Nm	kgm
mm	mm		
10	14	59 – 74	6.0 – 7.5
12	17	98 – 123	10.0 – 12.5
16	22	235 – 285	23.5 – 29.5

3. Table of tightening torques for O-ring boss piping joints

★ Unless there are special instructions, tighten O-ring boss piping joints to the torque below.

Nominal No.	Thread diameter	Width across flats	Tightening torque Nm {kgm}	
	mm		mm	Range
02	14	Varies depending on type of connector.	35 – 63 { 3.5 – 6.5 }	44 { 4.5 }
03,04	20		84 – 132 { 8.5 – 13.5 }	103 { 10.5 }
05,06	24		128 – 186 { 13.0 – 19.0 }	157 { 16.0 }
10,12	33		363 – 480 { 37.0 – 49.0 }	422 { 43.0 }
14	42		746 – 1,010 { 76.0 – 103 }	883 { 90.0 }

4. Table of tightening torques for O-ring boss plugs

★ Unless there are special instructions, tighten O-ring boss plugs to the torque below.

Nominal No.	Thread diameter	Width across flats	Tightening torque Nm {kgm}	
	mm		mm	Range
08	8	14	5.88 – 8.82 { 0.6 – 0.9 }	7.35 { 0.75 }
10	10	17	9.81 – 12.74 { 1.0 – 1.3 }	11.27 { 1.15 }
12	12	19	14.7 – 19.6 { 1.5 – 2.0 }	17.64 { 1.8 }
14	14	22	19.6 – 24.5 { 2.0 – 2.5 }	22.54 { 2.3 }
16	16	24	24.5 – 34.3 { 2.5 – 3.5 }	29.4 { 3.0 }
18	18	27	34.3 – 44.1 { 3.5 – 4.5 }	39.2 { 4.0 }
20	20	30	44.1 – 53.9 { 4.5 – 5.5 }	49.0 { 5.0 }
24	24	32	58.8 – 78.4 { 6.0 – 8.0 }	68.6 { 7.0 }
30	30	32	93.1 – 122.5 { 9.5 – 12.5 }	107.8 { 11.0 }
33	33	–	107.8 – 147.0 { 11.0 – 15.0 }	127.4 { 13.0 }
36	36	36	127.4 – 176.4 { 13.0 – 18.0 }	151.9 { 15.5 }
42	42	–	181.3 – 240.1 { 18.5 – 24.5 }	210.7 { 21.5 }
52	52	–	274.4 – 367.5 { 28.0 – 37.5 }	323.4 { 33.0 }

5. Table of tightening torques for hoses (taper seal type and face seal type)

- ★ Unless there are special instructions, tighten the hoses (taper seal type and face seal type) to the torque below.
- ★ Apply the following torque when the threads are coated (wet) with engine oil.

Nominal No. of hose	Width across flats	Tightening torque Nm {kgm}		Taper seal Thread size (mm)	Face seal	
		Range	Target		Nominal No. – Number of threads, type of thread	Thread diameter (mm) (Reference)
02	19	34 – 54 { 3.5 – 5.5}	44 { 4.5}	–	9/16-18UN	14.3
		34 – 63 { 3.5 – 6.5}		14	–	–
03	22	54 – 93 { 5.5 – 9.5}	74 { 7.5}	–	11/16-16UN	17.5
	24	59 – 98 { 6.0 – 10.0}	78 { 8.0}	18	–	–
04	27	84 – 132 { 8.5 – 13.5}	103 {10.5}	22	13/16-16UN	20.6
05	32	128 – 186 {13.0 – 19.0}	157 {16.0}	24	1-14UNS	25.4
06	36	177 – 245 {18.0 – 25.0}	216 {22.0}	30	1-3/16-12UN	30.2
(10)	41	177 – 245 {18.0 – 25.0}	216 {22.0}	33	–	–
(12)	46	197 – 294 {20.0 – 30.0}	245 {25.0}	36	–	–
(14)	55	246 – 343 {25.0 – 35.0}	294 {30.0}	42	–	–

6. Table of tightening torques for face seal joints

- ★ Tighten the face seal joints (sleeve nut type) made of plated steel pipes for low pressure service to be used for engines etc. to the torque shown in the following table.
- ★ Apply the following torque to the face seal joint while their threaded parts are coated with engine oil (wetted).

Outer diameter of pipe (mm)	Width across flats (mm)	Tightening torque Nm {kgm}		Face seal	
		Range	Target	Nominal No. – Number of threads, type of thread	Thread diameter (mm) (Reference)
8	19	14 – 16 {1.4 – 1.6}	15 {1.5}	9/16-18UN	14.3
10	22	24 – 27 {2.4 – 2.7}	25.5 {2.6}	11/16-16UN	17.5
12	24 (27)	43 – 47 {4.4 – 4.8}	45 {4.6}	13/16-16UN	20.6
15 (16)	30 (32)	60 – 68 {6.1 – 6.8}	64 {6.5}	1-14UN	25.4
22 (20)	36	90 – 95 {9.2 – 9.7}	92.5 {9.4}	1-3/16-12UN	30.2

Reference: The face seal joints of the dimensions in () are also used, depending on the specification.

7. Table of tightening torques for 102, 107 and 114 engine series (Bolts and nuts)

- ★ Unless there are special instructions, tighten the metric bolts and nuts of the 102, 107 and 114 engine series to the torque below.

Thread size	Tightening torque	
	Bolts and nuts	
mm	Nm	kgm
6	10 ± 2	1.02 ± 0.20
8	24 ± 4	2.45 ± 0.41
10	43 ± 6	4.38 ± 0.61
12	77 ± 12	7.85 ± 1.22
14	—	—

8. Table of tightening torques for 102, 107 and 114 engine series (Eye joints)

- ★ Unless there are special instructions, tighten the metric eye joints of the 102, 107 and 114 engine series to the torque below.

Thread size	Tightening torque	
	Nm	kgm
6	8 ± 2	0.81 ± 0.20
8	10 ± 2	1.02 ± 0.20
10	12 ± 2	1.22 ± 0.20
12	24 ± 4	2.45 ± 0.41
14	36 ± 5	3.67 ± 0.51

9. Table of tightening torques for 102, 107 and 114 engine series (Taper screws)

- ★ Unless there are special instructions, tighten the taper screws (unit: inch) of the 102, 107 and 114 engine series to the torque below.

Material	Tightening torque			
	In cast iron or steel		In aluminum	
	Nm	kgm	Nm	kgm
1/16	15 ± 2	1.53 ± 0.20	5 ± 1	0.51 ± 0.10
1/8	20 ± 2	2.04 ± 0.20	15 ± 2	1.53 ± 0.20
1/4	25 ± 3	2.55 ± 0.31	20 ± 2	2.04 ± 0.20
3/8	35 ± 4	3.57 ± 0.41	25 ± 3	2.55 ± 0.31
1/2	55 ± 6	5.61 ± 0.61	35 ± 4	3.57 ± 0.41
3/4	75 ± 8	7.65 ± 0.82	45 ± 5	4.59 ± 0.51

Conversion table

Method of using the conversion table

The conversion table in this section is provided to enable simple conversion of figures. For details of the method of using the conversion table, see the example given below.

Example: Method of using the conversion table to convert from millimeters to inches

1. Convert 55 mm into inches.

- 1) Locate the number 50 in the vertical column at the left side, take this as (A), and then draw a horizontal line from (A).
- 2) Locate the number 5 in the row across the top, take this as (B), then draw a perpendicular line down from (B).
- 3) Take the point where the 2 lines cross as (C). This point (C) gives the value when converting from millimeters to inches. Therefore, 55 mm = 2.165 inches.

2. Convert 550 mm into inches.

- 1) The number 550 does not appear in the table, so divide it by 10 (move the decimal point one place to the left) to convert it to 55 mm.
- 2) Carry out the same procedure as above to convert 55 mm to 2.165 inches.
- 3) The original value (550 mm) was divided by 10, so multiply 2.165 inches by 10 (move the decimal point one place to the right) to return to the original value. This gives 550 mm = 21.65 inches.

Millimeters to inches

(B)

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
(A) 50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Millimeters to inches

1 mm = 0.03937 in

	0	1	2	3	4	5	6	7	8	9
0	0	0.039	0.079	0.118	0.157	0.197	0.236	0.276	0.315	0.354
10	0.394	0.433	0.472	0.512	0.551	0.591	0.630	0.669	0.709	0.748
20	0.787	0.827	0.866	0.906	0.945	0.984	1.024	1.063	1.102	1.142
30	1.181	1.220	1.260	1.299	1.339	1.378	1.417	1.457	1.496	1.536
40	1.575	1.614	1.654	1.693	1.732	1.772	1.811	1.850	1.890	1.929
50	1.969	2.008	2.047	2.087	2.126	2.165	2.205	2.244	2.283	2.323
60	2.362	2.402	2.441	2.480	2.520	2.559	2.598	2.638	2.677	2.717
70	2.756	2.795	2.835	2.874	2.913	2.953	2.992	3.032	3.071	3.110
80	3.150	3.189	3.228	3.268	3.307	3.346	3.386	3.425	3.465	3.504
90	3.543	3.583	3.622	3.661	3.701	3.740	3.780	3.819	3.858	3.898

Kilogram to pound

1 kg = 2.2046 lb

	0	1	2	3	4	5	6	7	8	9
0	0	2.20	4.41	6.61	8.82	11.02	13.23	15.43	17.64	19.84
10	22.05	24.25	26.46	28.66	30.86	33.07	35.27	37.48	39.68	41.89
20	44.09	46.30	48.50	50.71	51.91	55.12	57.32	59.53	61.73	63.93
30	66.14	68.34	70.55	72.75	74.96	77.16	79.37	81.57	83.78	85.98
40	88.18	90.39	92.59	94.80	97.00	99.21	101.41	103.62	105.82	108.03
50	110.23	112.44	114.64	116.85	119.05	121.25	123.46	125.66	127.87	130.07
60	132.28	134.48	136.69	138.89	141.10	143.30	145.51	147.71	149.91	152.12
70	154.32	156.53	158.73	160.94	163.14	165.35	167.55	169.76	171.96	174.17
80	176.37	178.57	180.78	182.98	185.19	187.39	189.60	191.80	194.01	196.21
90	198.42	200.62	202.83	205.03	207.24	209.44	211.64	213.85	216.05	218.26

Liters to U.S. Gallons

1 l = 0.2642 U.S. Gal

	0	1	2	3	4	5	6	7	8	9
0	0	0.264	0.528	0.793	1.057	1.321	1.585	1.849	2.113	2.378
10	2.642	2.906	3.170	3.434	3.698	3.963	4.227	4.491	4.755	5.019
20	5.283	5.548	5.812	6.076	6.340	6.604	6.869	7.133	7.397	7.661
30	7.925	8.189	8.454	8.718	8.982	9.246	9.510	9.774	10.039	10.303
40	10.567	10.831	11.095	11.359	11.624	11.888	12.152	12.416	12.680	12.944
50	13.209	13.473	13.737	14.001	14.265	14.529	14.795	15.058	15.322	15.586
60	15.850	16.115	16.379	16.643	16.907	17.171	17.435	17.700	17.964	18.228
70	18.492	18.756	19.020	19.285	19.549	19.813	20.077	20.341	20.605	20.870
80	21.134	21.398	21.662	21.926	22.190	22.455	22.719	22.983	23.247	23.511
90	23.775	24.040	24.304	24.568	24.832	25.096	25.361	25.625	25.889	26.153

Liters to U.K. Gallons

1 ℓ = 0.21997 U.K.Gal

	0	1	2	3	4	5	6	7	8	9
0	0	0.220	0.440	0.660	0.880	1.100	1.320	1.540	1.760	1.980
10	2.200	2.420	2.640	2.860	3.080	3.300	3.520	3.740	3.950	4.179
20	4.399	4.619	4.839	5.059	5.279	5.499	5.719	5.939	6.159	6.379
30	6.599	6.819	7.039	7.259	7.479	7.699	7.919	8.139	8.359	8.579
40	8.799	9.019	9.239	9.459	9.679	9.899	10.119	10.339	10.559	10.778
50	10.998	11.281	11.438	11.658	11.878	12.098	12.318	12.528	12.758	12.978
60	13.198	13.418	13.638	13.858	14.078	14.298	14.518	14.738	14.958	15.178
70	15.398	15.618	15.838	16.058	16.278	16.498	16.718	16.938	17.158	17.378
80	17.598	17.818	18.037	18.257	18.477	18.697	18.917	19.137	19.357	19.577
90	19.797	20.017	20.237	20.457	20.677	20.897	21.117	21.337	21.557	21.777

kgm to ft.lb

1 kgm = 7.233 ft.lb

	0	1	2	3	4	5	6	7	8	9
0	0	7.2	14.5	21.7	28.9	36.2	43.4	50.6	57.9	65.1
10	72.3	79.6	86.8	94.0	101.3	108.5	115.7	123.0	130.2	137.4
20	144.7	151.9	159.1	166.4	173.6	180.8	188.1	195.3	202.5	209.8
30	217.0	224.2	231.5	238.7	245.9	253.2	260.4	267.6	274.9	282.1
40	289.3	296.6	303.8	311.0	318.3	325.5	332.7	340.0	347.2	354.4
50	361.7	368.9	376.1	383.4	390.6	397.8	405.1	412.3	419.5	426.8
60	434.0	441.2	448.5	455.7	462.9	470.2	477.4	484.6	491.8	499.1
70	506.3	513.5	520.8	528.0	535.2	542.5	549.7	556.9	564.2	571.4
80	578.6	585.9	593.1	600.3	607.6	614.8	622.0	629.3	636.5	643.7
90	651.0	658.2	665.4	672.7	679.9	687.1	694.4	701.6	708.8	716.1
100	723.3	730.5	737.8	745.0	752.2	759.5	766.7	773.9	781.2	788.4
110	795.6	802.9	810.1	817.3	824.6	831.8	839.0	846.3	853.5	860.7
120	868.0	875.2	882.4	889.7	896.9	904.1	911.4	918.6	925.8	933.1
130	940.3	947.5	954.8	962.0	969.2	976.5	983.7	990.9	998.2	1005.4
140	1012.6	1019.9	1027.1	1034.3	1041.5	1048.8	1056.0	1063.2	1070.5	1077.7
150	1084.9	1092.2	1099.4	1106.6	1113.9	1121.1	1128.3	1135.6	1142.8	1150.0
160	1157.3	1164.5	1171.7	1179.0	1186.2	1193.4	1200.7	1207.9	1215.1	1222.4
170	1129.6	1236.8	1244.1	1251.3	1258.5	1265.8	1273.0	1280.1	1287.5	1294.7
180	1301.9	1309.2	1316.4	1323.6	1330.9	1338.1	1345.3	1352.6	1359.8	1367.0
190	1374.3	1381.5	1388.7	1396.0	1403.2	1410.4	1417.7	1424.9	1432.1	1439.4

kg/cm² to lb/in²1 kg/cm² = 14.2233 lb/in²

	0	1	2	3	4	5	6	7	8	9
0	0	14.2	28.4	42.7	56.9	71.1	85.3	99.6	113.8	128.0
10	142.2	156.5	170.7	184.9	199.1	213.4	227.6	241.8	256.0	270.2
20	284.5	298.7	312.9	327.1	341.4	355.6	369.8	384.0	398.3	412.5
30	426.7	440.9	455.1	469.4	483.6	497.8	512.0	526.3	540.5	554.7
40	568.9	583.2	597.4	611.6	625.8	640.1	654.3	668.5	682.7	696.9
50	711.2	725.4	739.6	753.8	768.1	782.3	796.5	810.7	825.0	839.2
60	853.4	867.6	881.8	896.1	910.3	924.5	938.7	953.0	967.2	981.4
70	995.6	1,010	1,024	1,038	1,053	1,067	1,081	1,095	1,109	1,124
80	1,138	1,152	1,166	1,181	1,195	1,209	1,223	1,237	1,252	1,266
90	1,280	1,294	1,309	1,323	1,337	1,351	1,365	1,380	1,394	1,408
100	1,422	1,437	1,451	1,465	1,479	1,493	1,508	1,522	1,536	1,550
110	1,565	1,579	1,593	1,607	1,621	1,636	1,650	1,664	1,678	1,693
120	1,707	1,721	1,735	1,749	1,764	1,778	1,792	1,806	1,821	1,835
130	1,849	1,863	1,877	1,892	1,906	1,920	1,934	1,949	1,963	1,977
140	1,991	2,005	2,020	2,034	2,048	2,062	2,077	2,091	2,105	2,119
150	2,134	2,148	2,162	2,176	2,190	2,205	2,219	2,233	2,247	2,262
160	2,276	2,290	2,304	2,318	2,333	2,347	2,361	2,375	2,389	2,404
170	2,418	2,432	2,446	2,460	2,475	2,489	2,503	2,518	2,532	2,546
180	2,560	2,574	2,589	2,603	2,617	2,631	2,646	2,660	2,674	2,688
190	2,702	2,717	2,731	2,745	2,759	2,773	2,788	2,802	2,816	2,830
200	2,845	2,859	2,873	2,887	2,901	2,916	2,930	2,944	2,958	2,973
210	2,987	3,001	3,015	3,030	3,044	3,058	3,072	3,086	3,101	3,115
220	3,129	3,143	3,158	3,172	3,186	3,200	3,214	3,229	3,243	3,257
230	3,271	3,286	3,300	3,314	3,328	3,343	3,357	3,371	3,385	3,399
240	3,414	3,428	3,442	3,456	3,470	3,485	3,499	3,513	3,527	3,542

Temperature

Fahrenheit-Centigrade conversion: A simple way to convert a Fahrenheit temperature reading into a Centigrade temperature reading or vice versa is to enter the accompanying table in the center (boldface column) of figures. These figures refer to the temperature in either Fahrenheit or Centigrade degrees. When convert from Fahrenheit to Centigrade degrees, consider the center column to be a table of Fahrenheit temperatures and read the corresponding Centigrade temperature in the column at the left. When convert from Centigrade to Fahrenheit degrees, consider the center column to be a table of Centigrade values, and read the corresponding Fahrenheit temperature on the right.

1°C = 33.8°F

°C		°F	°C		°F	°C		°F	°C		°F
-40.4	-40	-40.0	-11.7	11	51.8	7.8	46	114.8	27.2	81	177.8
-37.2	-35	-31.0	-11.1	12	53.6	8.3	47	116.6	27.8	82	179.6
-34.4	-30	-22.0	-10.6	13	55.4	8.9	48	118.4	28.3	83	181.4
-31.7	-25	-13.0	-10.0	14	57.2	9.4	49	120.2	28.9	84	183.2
-28.9	-20	-4.0	-9.4	15	59.0	10.0	50	122.0	29.4	85	185.0
-28.3	-19	-2.2	-8.9	16	60.8	10.6	51	123.8	30.0	86	186.8
-27.8	-18	-0.4	-8.3	17	62.6	11.1	52	125.6	30.6	87	188.6
-27.2	-17	1.4	-7.8	18	64.4	11.7	53	127.4	31.1	88	190.4
-26.7	-16	3.2	-7.2	19	66.2	12.2	54	129.2	31.7	89	192.2
-26.1	-15	5.0	-6.7	20	68.0	12.8	55	131.0	32.2	90	194.0
-25.6	-14	6.8	-6.1	21	69.8	13.3	56	132.8	32.8	91	195.8
-25.0	-13	8.6	-5.6	22	71.6	13.9	57	134.6	33.3	92	197.6
-24.4	-12	10.4	-5.0	23	73.4	14.4	58	136.4	33.9	93	199.4
-23.9	-11	12.2	-4.4	24	75.2	15.0	59	138.2	34.4	94	201.2
-23.3	-10	14.0	-3.9	25	77.0	15.6	60	140.0	35.0	95	203.0
-22.8	-9	15.8	-3.3	26	78.8	16.1	61	141.8	35.6	96	204.8
-22.2	-8	17.6	-2.8	27	80.6	16.7	62	143.6	36.1	97	206.6
-21.7	-7	19.4	-2.2	28	82.4	17.2	63	145.4	36.7	98	208.4
-21.1	-6	21.2	-1.7	29	84.2	17.8	64	147.2	37.2	99	210.2
-20.6	-5	23.0	-1.1	30	86.0	18.3	65	149.0	37.8	100	212.0
-20.0	-4	24.8	-0.6	31	87.8	18.9	66	150.8	40.6	105	221.0
-19.4	-3	26.6	0	32	89.6	19.4	67	152.6	43.3	110	230.0
-18.9	-2	28.4	0.6	33	91.4	20.0	68	154.4	46.1	115	239.0
-18.3	-1	30.2	1.1	34	93.2	20.6	69	156.2	48.9	120	248.0
-17.8	0	32.0	1.7	35	95.0	21.1	70	158.0	51.7	125	257.0
-17.2	1	33.8	2.2	36	96.8	21.7	71	159.8	54.4	130	266.0
-16.7	2	35.6	2.8	37	98.6	22.2	72	161.6	57.2	135	275.0
-16.1	3	37.4	3.3	38	100.4	22.8	73	163.4	60.0	140	284.0
-15.6	4	39.2	3.9	39	102.2	23.3	74	165.2	62.7	145	293.0
-15.0	5	41.0	4.4	40	104.0	23.9	75	167.0	65.6	150	302.0
-14.4	6	42.8	5.0	41	105.8	24.4	76	168.8	68.3	155	311.0
-13.9	7	44.6	5.6	42	107.6	25.0	77	170.6	71.1	160	320.0
-13.3	8	46.4	6.1	43	109.4	25.6	78	172.4	73.9	165	329.0
-12.8	9	48.2	6.7	44	111.2	26.1	79	174.2	76.7	170	338.0
-12.2	10	50.0	7.2	45	113.0	26.7	80	176.0	79.4	175	347.0

This as a preview PDF file from best-manuals.com



Download full PDF manual at best-manuals.com